



3-Seat Sofa

(+ R19T-H6)

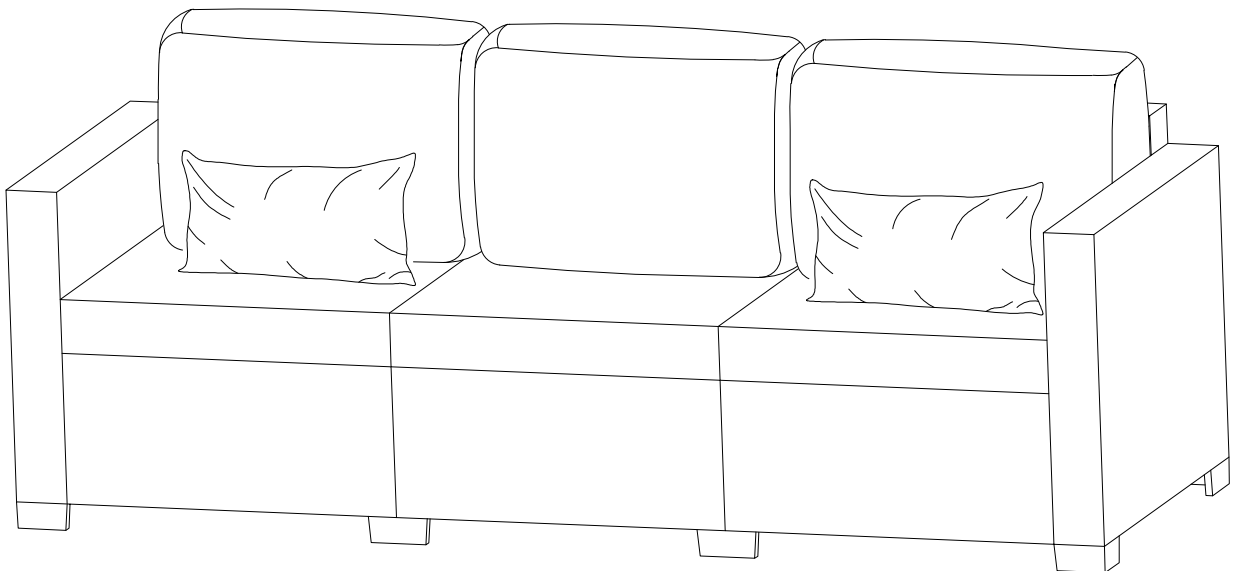


- a. WHEN YOU OPEN THE BOX AND FIND THIS INSTRUCTION, PLEASE CHECK FIRST IF THE BOXES YOU HAVE RECEIVED INCLUDE THE UNIVERSAL PARTS BOX CALLED R19T-H6, WHICH TOGETHER MAKE UP THE COMPLETE SET OF PARTS FOR THE ASSEMBLY OF THE 3-SEAT SOFA SHOWN ABOVE. ANY DEFECTS OR MISSING, PLEASE GET IN TOUCH WITH US IN TIME!
- b. Advisable to assemble on the mat to avoid wear and tear. Avoid all sharp objects touching the product surface. Do not allow the children to play around.
- c. Do not tighten all screws entirely until assembly is completed. Power tools are available, don't over-tighten for strip threads. Any problems assembling, first refer to the instruction or inform us with the photo asap! Also, assembly video is available.
- d. If the cushion covers crease, maybe you can try soaking with warm water or ironing!


THE PARTS WHOSE NAME IS IN THE BLOCK COME WHOLE OR PARTIAL FROM THE UNIVERSAL PARTS BOX NAMED R19T-H6. IF THE PARTIAL PARTS ARE FROM THE UNIVERSAL PARTS BOX, THE NUMBER OF PARTS PACKAGED IN THE UNIVERSAL PARTS BOX IS THE SECOND NUMBER IN BRACKETS.

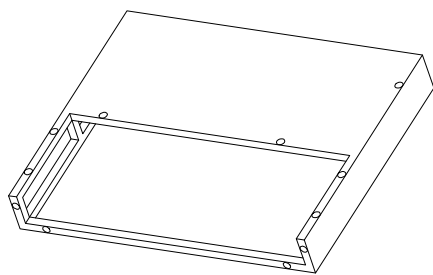


A: right sofa arm
1 pc

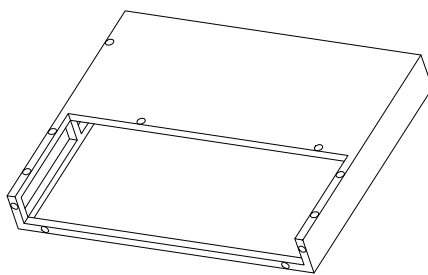


B: left sofa arm
1 pc

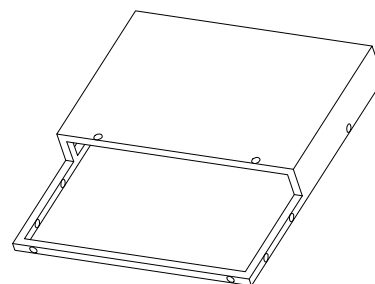


C: sofa back
3 pcs(1+2)

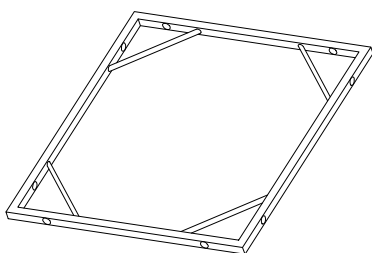


D: sofa seat board
3 pcs(1+2)

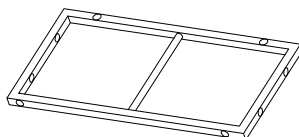


E: sofa front screen
3 pcs(1+2)

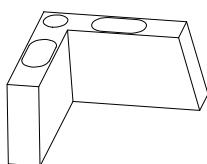

F: sofa foot
4 pcs



G: sofa foot
4 pcs



R: screw M6*35mm
6 pcs




S: shim $\varnothing 16 \times 6.4 \times 1$
74 pcs




T: nut M6
34 pcs



U: brace bar
2 pcs




V: screw M6*60mm
34 pcs




X: screw M6*45mm
16 pcs



Y: shim $\varnothing 11 \times 6.2 \times 1$
16 pcs




Z: adjustable screw
8 pcs

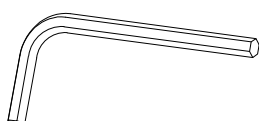


Inner hexagon spanner
1 pcs




open spanner
1 pcs

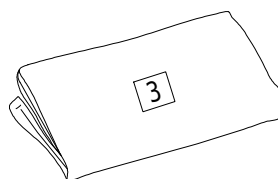



furniture cover
1 pcs

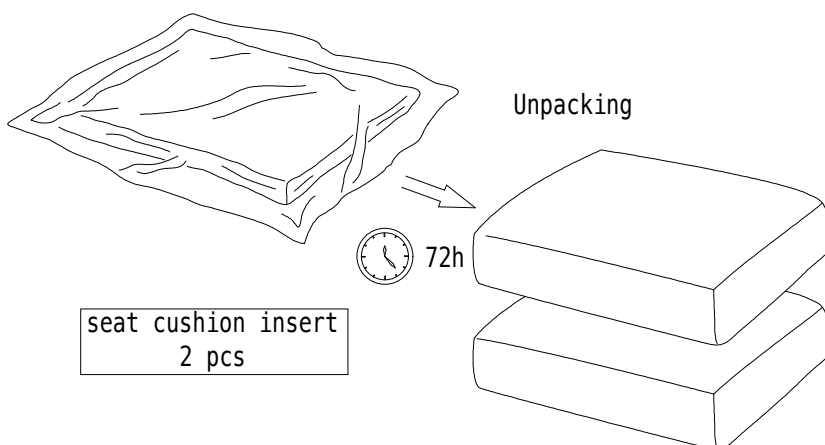

back cushion insert
3 pcs(1+2)

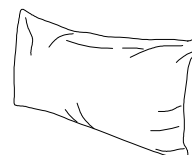

lumbar pillow
2 pcs

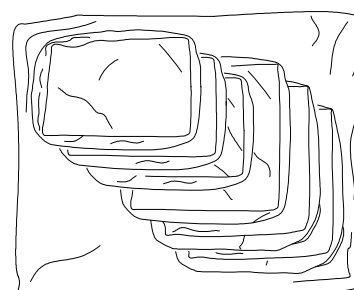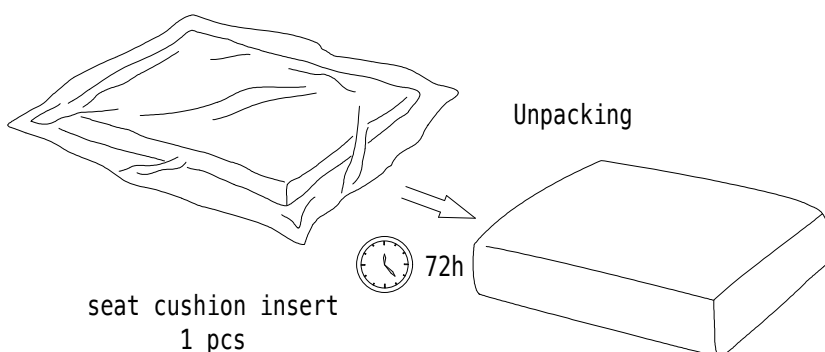

seat cushion cover
6 pcs(3+3)

Step 1-1



D x 3, E x 3





R: screw M6*35mm
6 pcs



S: shim
ø16*6.4*1 6 pcs

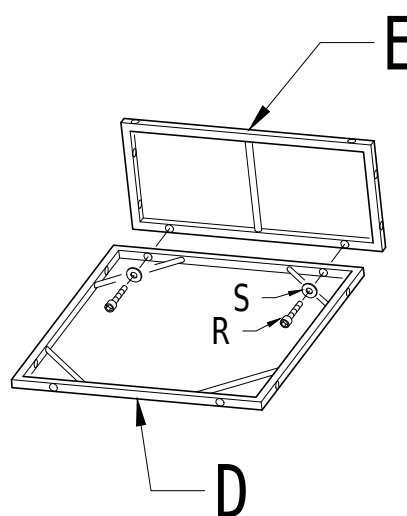
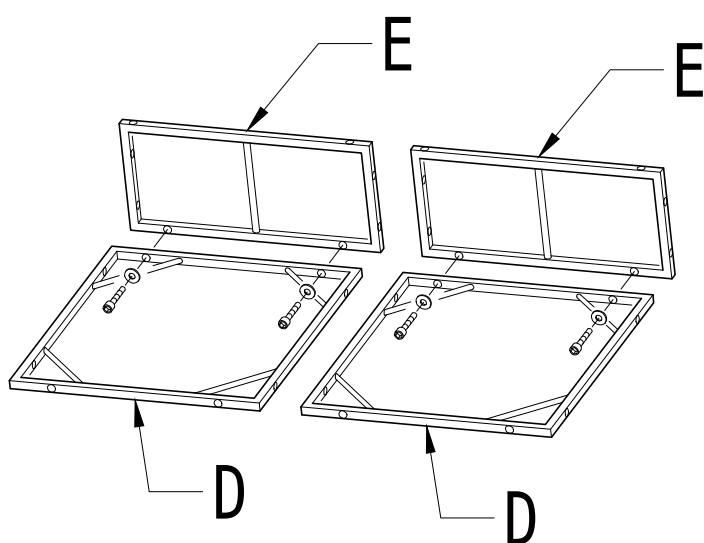


Step 1-2

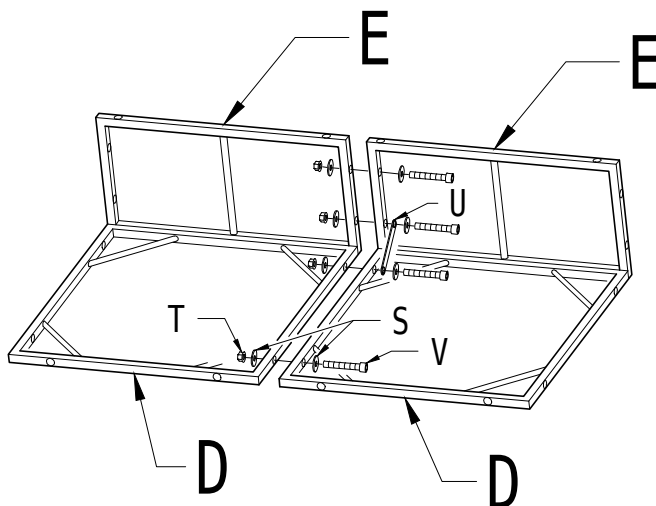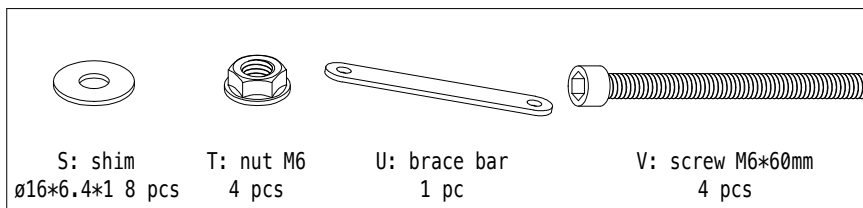

Step 2-1

C x 2

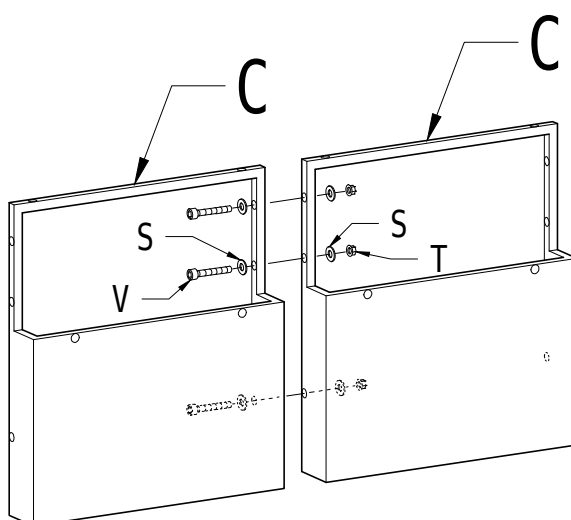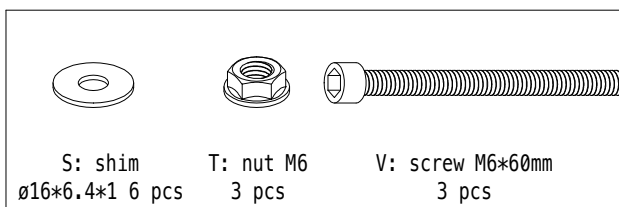

Step 2-2



C x 1



S: shim
ø16*6.4*1 12 pcs

T: nut M6
6 pcs

V: screw M6*60mm
6 pcs

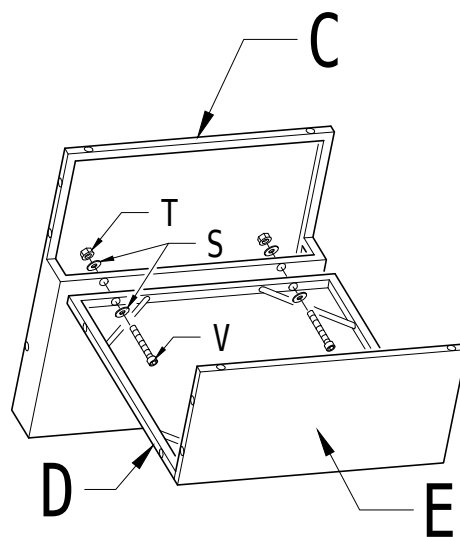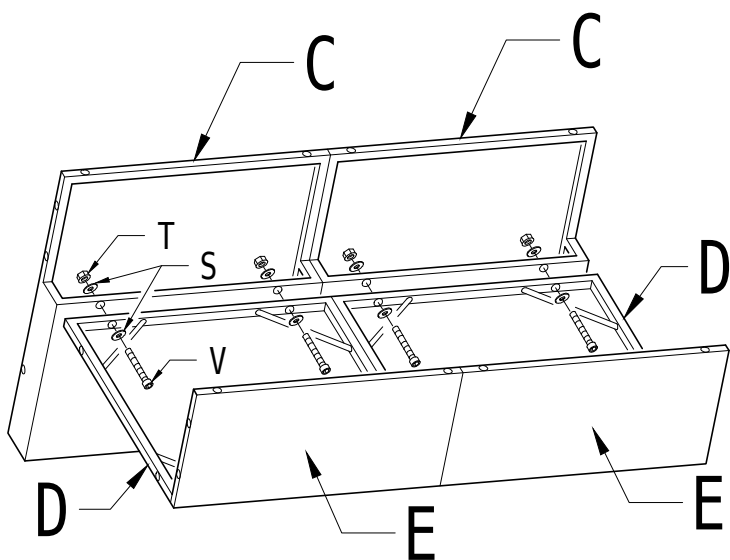

Step 3


A x 1



S: shim
ø16*6.4*1 14 pcs

T: nut M6
7 pcs

V: screw M6*60mm
7 pcs

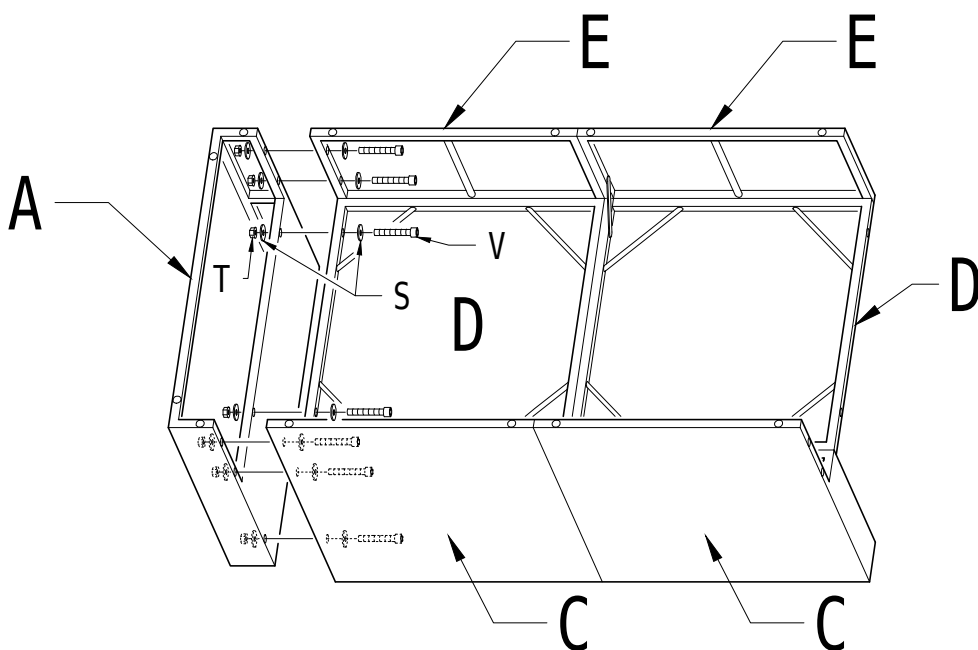

Step 4


B x 1



S: shim
ø16*6.4*1 14 pcs

T: nut M6
7 pcs

V: screw M6*60mm
7 pcs

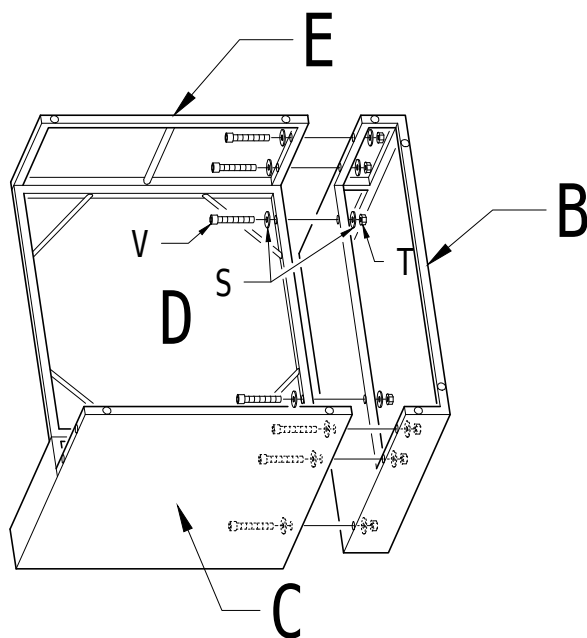

Step 5




S: shim
ø16*6.4*1 14 pcs


T: nut M6
7 pcs

U: brace bar
1 pc


V: screw M6*60mm
7 pcs

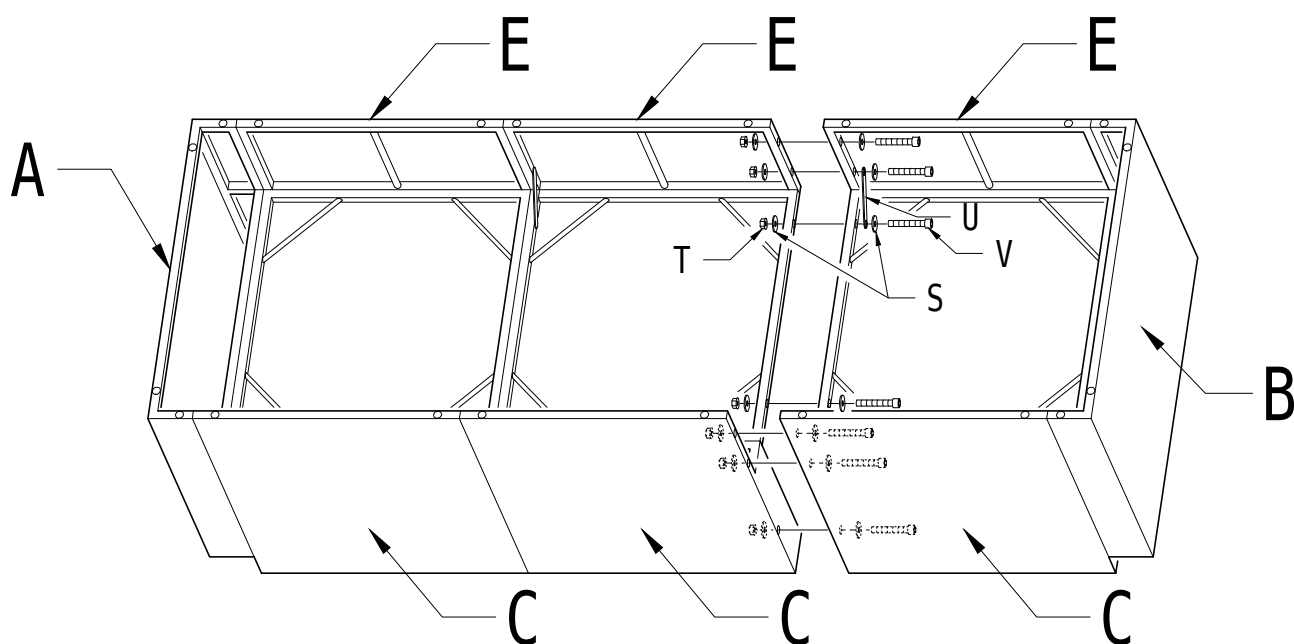

Step 6

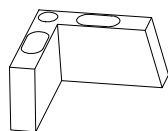

F: sofa foot
4 pcs




G: sofa foot
4 pcs







X: screw M6*45mm
16 pcs




Y: shim
ø11*6.2*1 16 pcs



Z: adjustable
screw 8 pcs

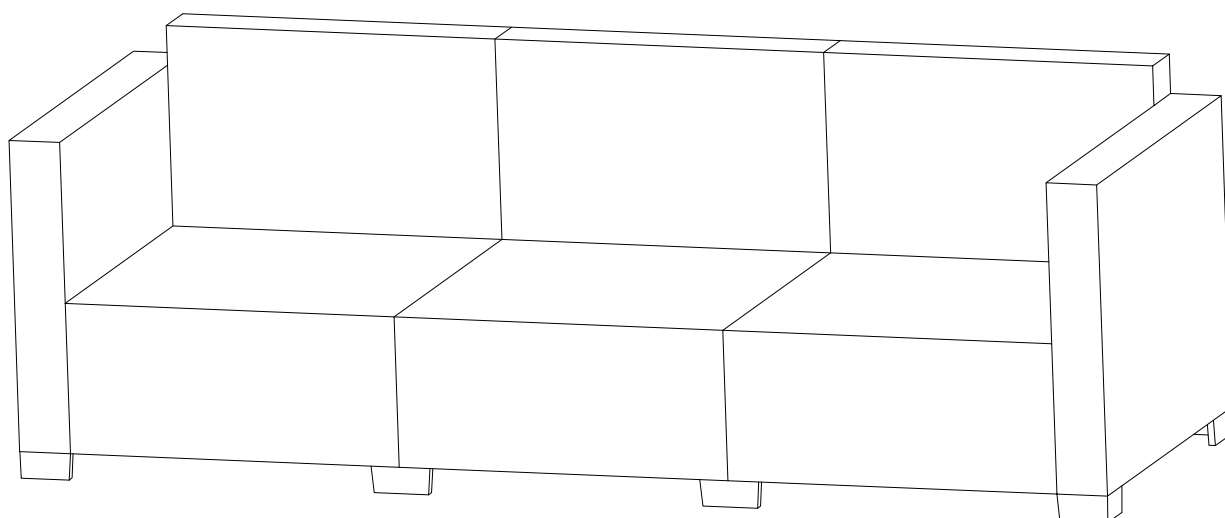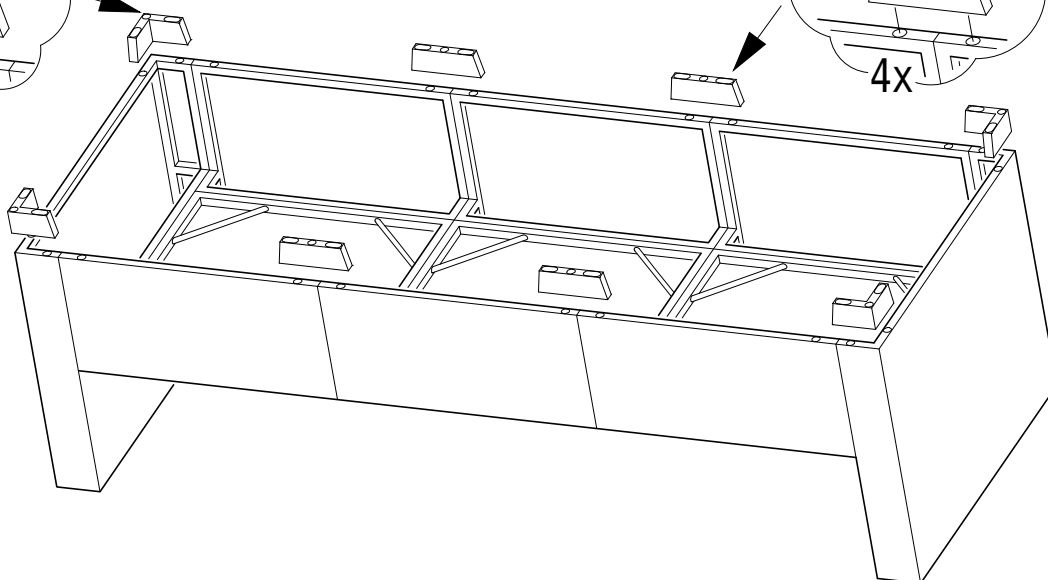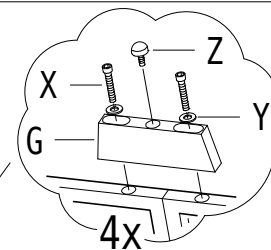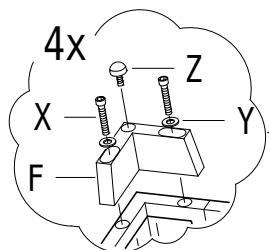









Guide for Cushion Installation

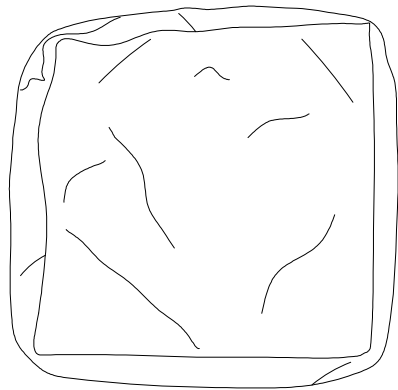

soak in water



or  if necessary

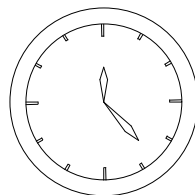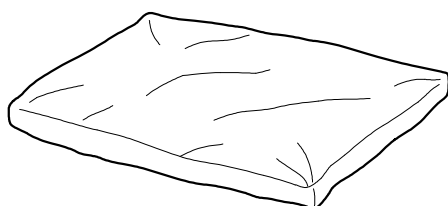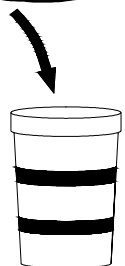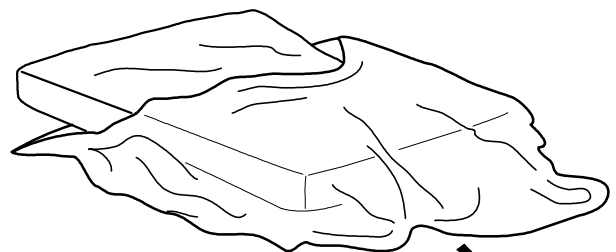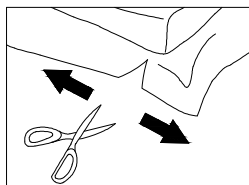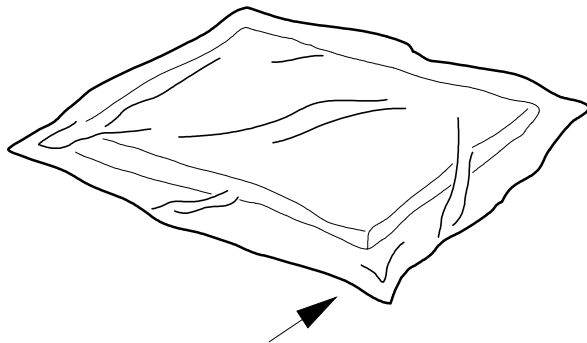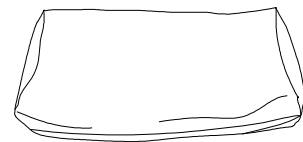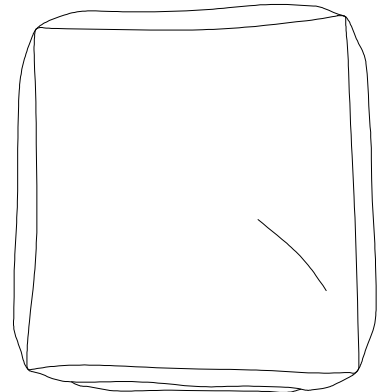

72h

