


Iron Back Woven Rattan Dining Chair

Assembly & Care instructions

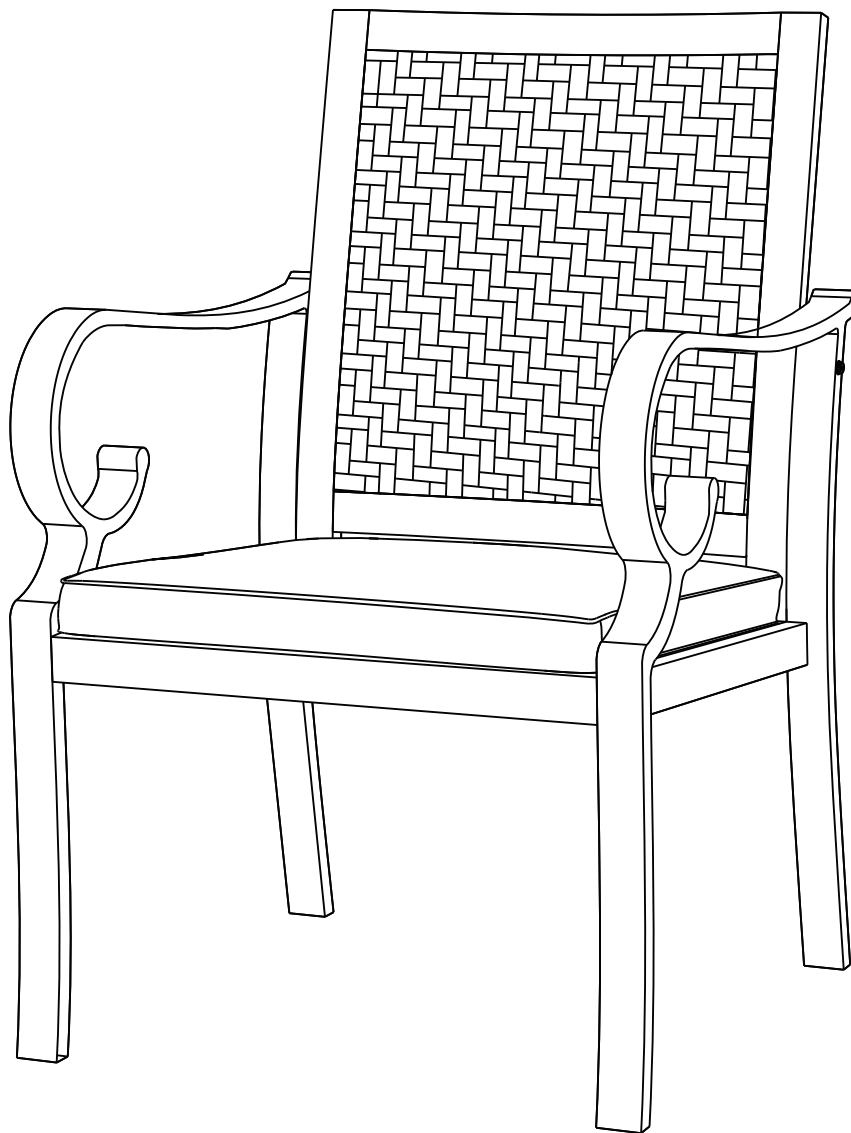

SKU: 02C68-24-BG

Please read & retain for future reference

CATALOGS

Care & Instructions	3
Parts List	4
Screw Set List	5
Extra	5
Specifications	6
Installation Instructions	7
Manuel d'instruction (français)	11

Care & Instructions


Thank you for ordering this outdoor dining furniture set. Here are some suggestions that may help you:

1. This set of outdoor iron back woven chairs comes in a box of two.
2. The mat is vacuum-packed. After opening the package, the mat will become thick enough after a period of time.
3. If any parts are damaged or lost, please read this instruction carefully (refer to the parts list on page. 4 and page 5), please feel free to contact us. We will send you a replacement immediately.
4. In order to prolong the service life of sofa cover, we suggest that you put all cushions indoors in rainy days.
5. We hope you can like our products, if you have any other questions, please contact us.

How to contact us:






Email:service@alaulm.com





Web:www.alaulm.com





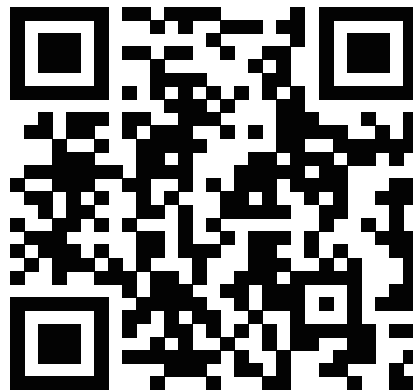


You can scan the QR code to explore more products.

PARTS LIST

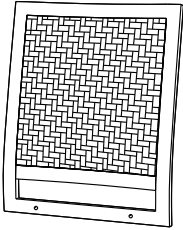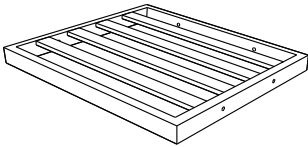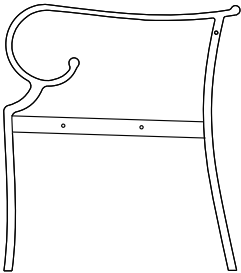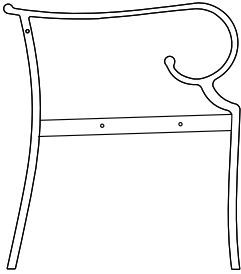
Part	Description	Part Name	Qty
A		Back Plate Part	2
B		Seat Plate Part	2
C		Right Armrest Part	2
D		Left Armrest Part	2
E		Seat Cushion	2

Screw Set List			
Part	Description	Part Name	Qty
H		Bolt M6 × 30	8PCS
I		Bolt M6 × 35	4PCS
J		Bolt M6 × 55	4PCS
K		M6 Gaskets	16PCS
L		Allen wrench M6	1PC
M		Bolt Cap	16PCS

Extra			
Part	Description	Part Name	Qty
H		Bolt M6 × 30	2PCS
I		Bolt M6 × 35	1PC
J		Bolt M6 × 55	1PC
K		M6 Gaskets	4PCS
M		Bolt Cap	4PCS

WARNING: Failure to locate parts in accordance with these diagrams, or failure to use special parts provided with this equipment, may result in property damage or personal injury.



SPECIFICATIONS

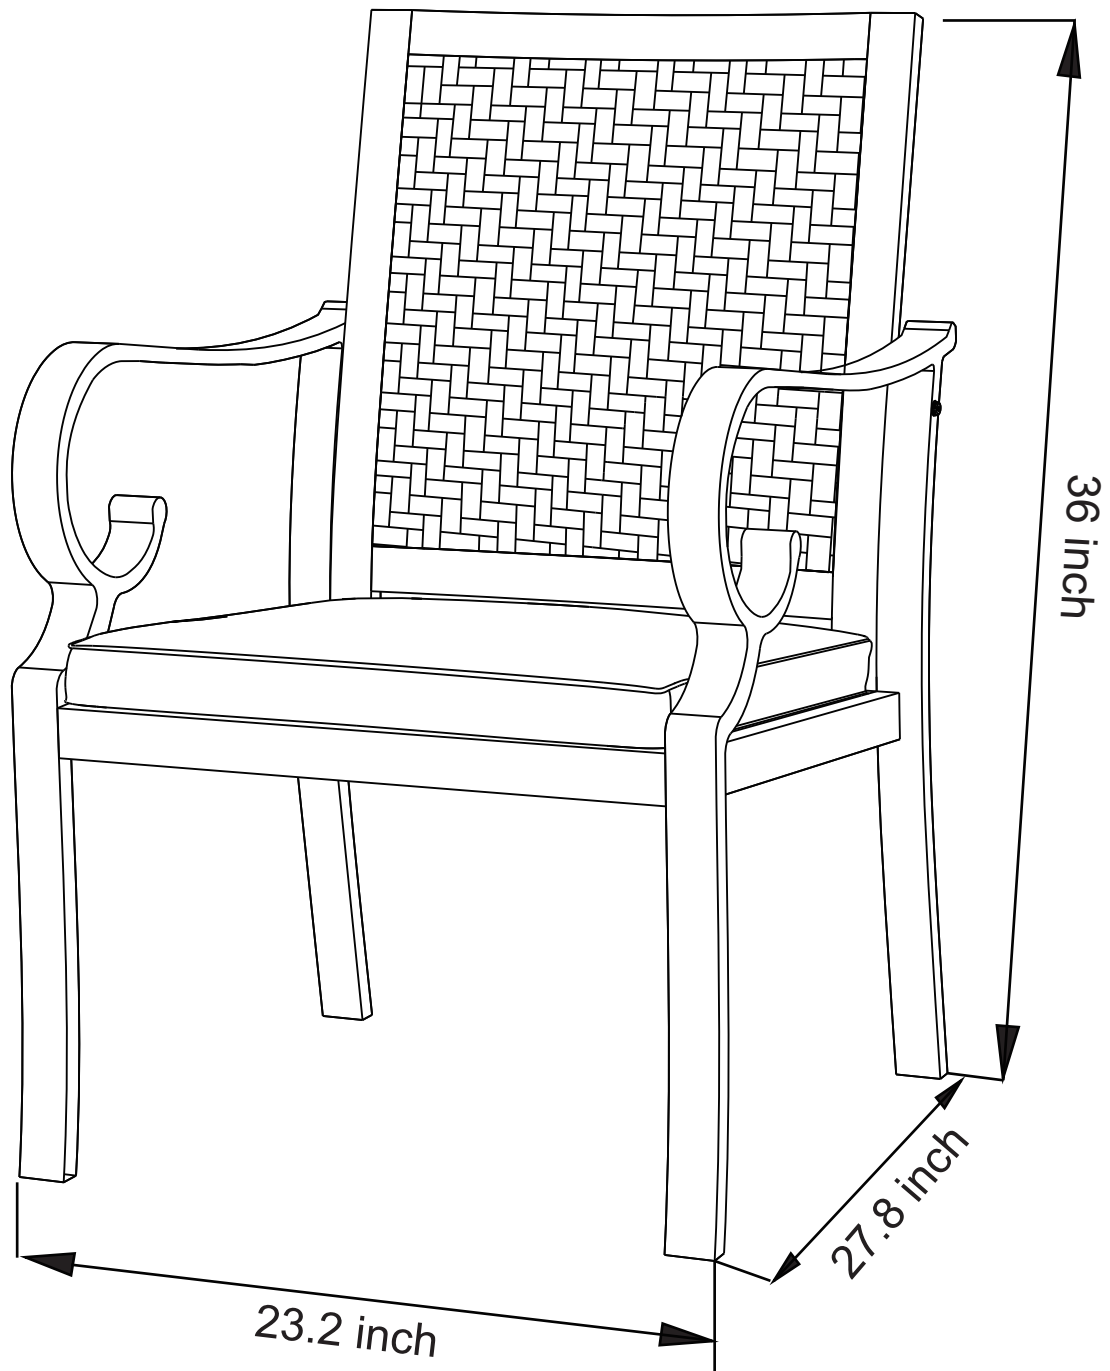


Step 1

Align the two holes on the rear side of the Seat Plate Part (B) with the Back Plate Part (A) and secure with Bolts (I) to the M6 Gaskets (K).


Note: Do not tighten the Bolt.

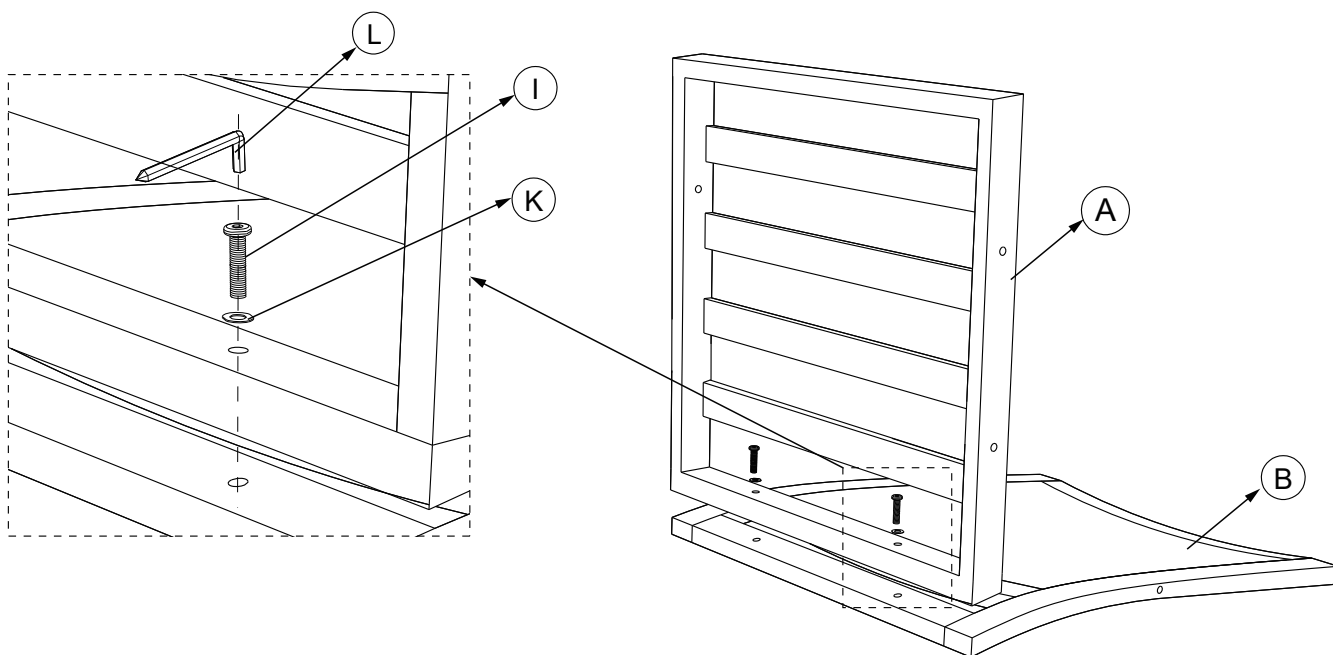

A×2




B×2



I×4



K×4





L×1


Step 2

Fit Right Armrest Part (C) to the right side of assembly (AB), with the two holes on the inside of (C) aligned with the holes on the right side of (AB) and secured with Bolts (I) and M6 Gaskets (K).

Note: Do not tighten bolts.

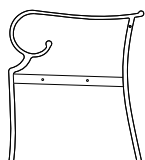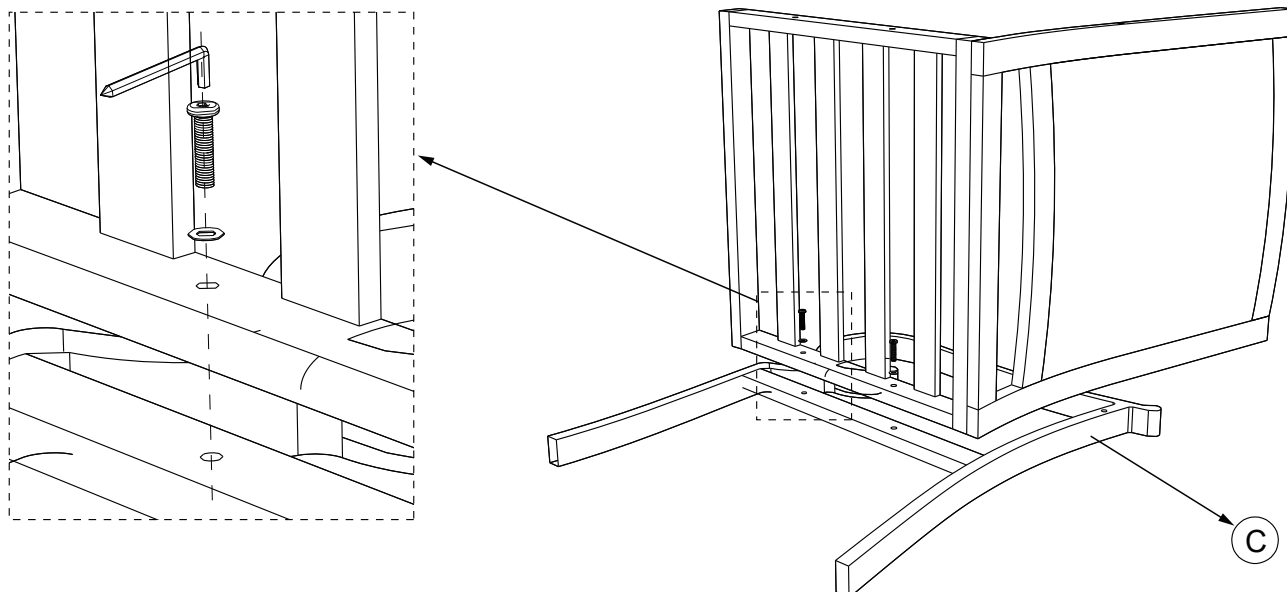


C×2



H×4




K×4




L×1

Step 3

The Left Armrest Part (D) is fitted in the same way as Step 2.
Note: Do not tighten the Bolt.

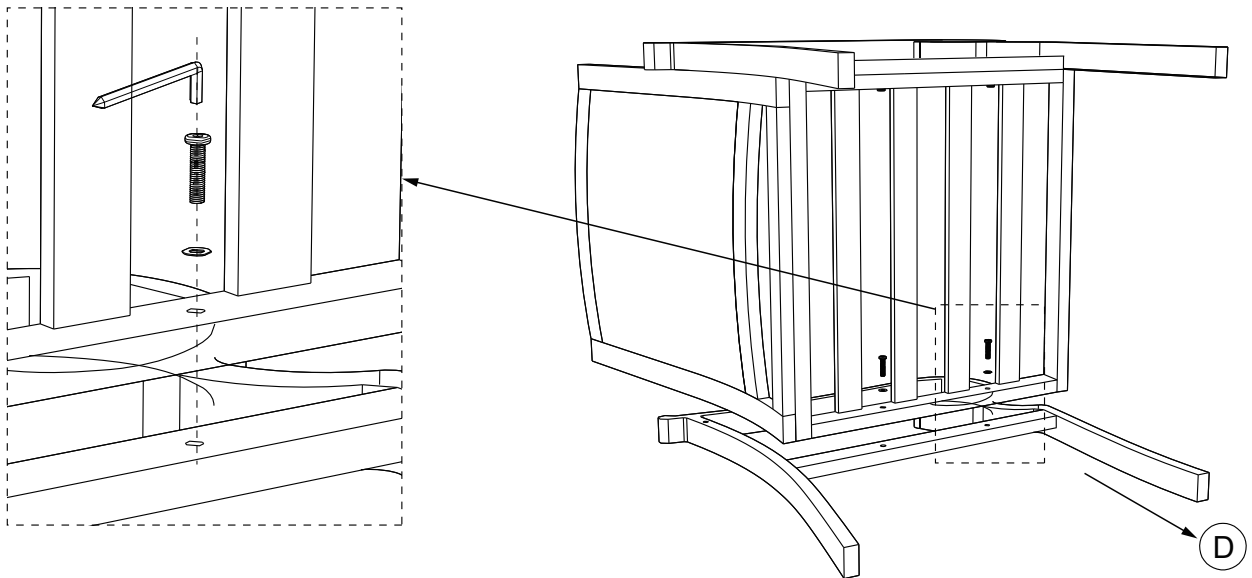


D×2



H×4





K×4



L×1

Step 4


Align the outer holes of the armrests on both sides with the outer holes of (B) and secure using Bolts (J) with M6 Gaskets (K).
Note: Tighten bolts at this time.

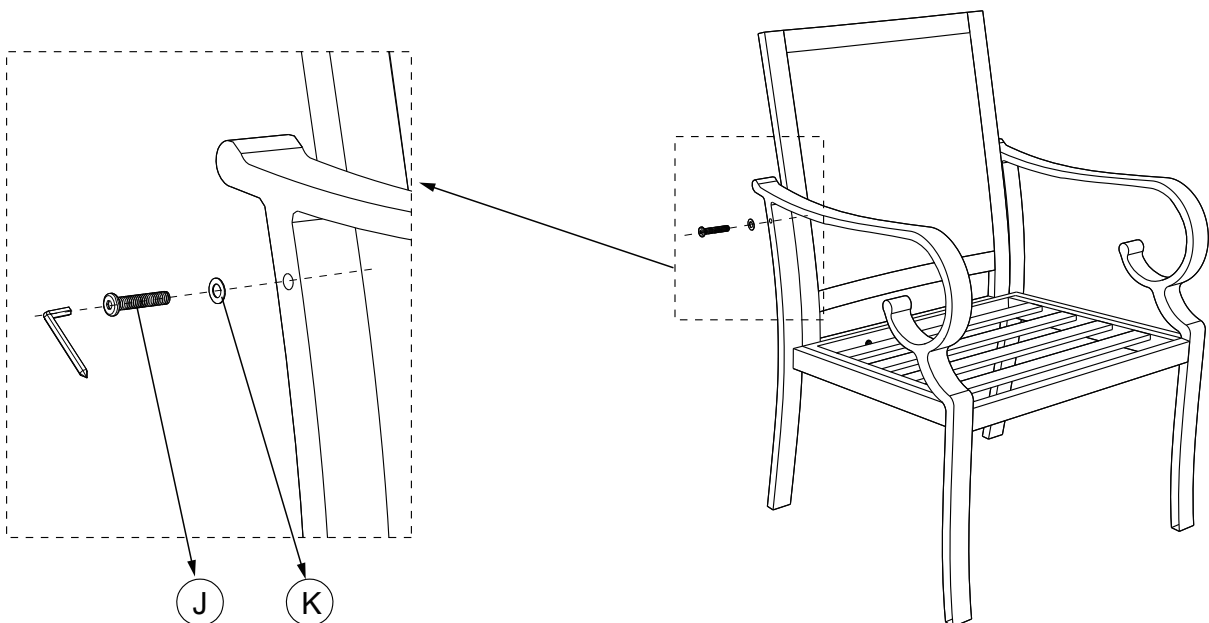

J×4





K×4



L×1

Step 5



Finally turn the cushion over, there will be four velcro straps, after placing the Cushion(E) on the seat plate, wrap the velcro around the slats as shown and finally tighten.

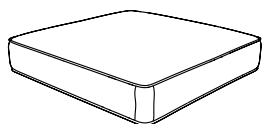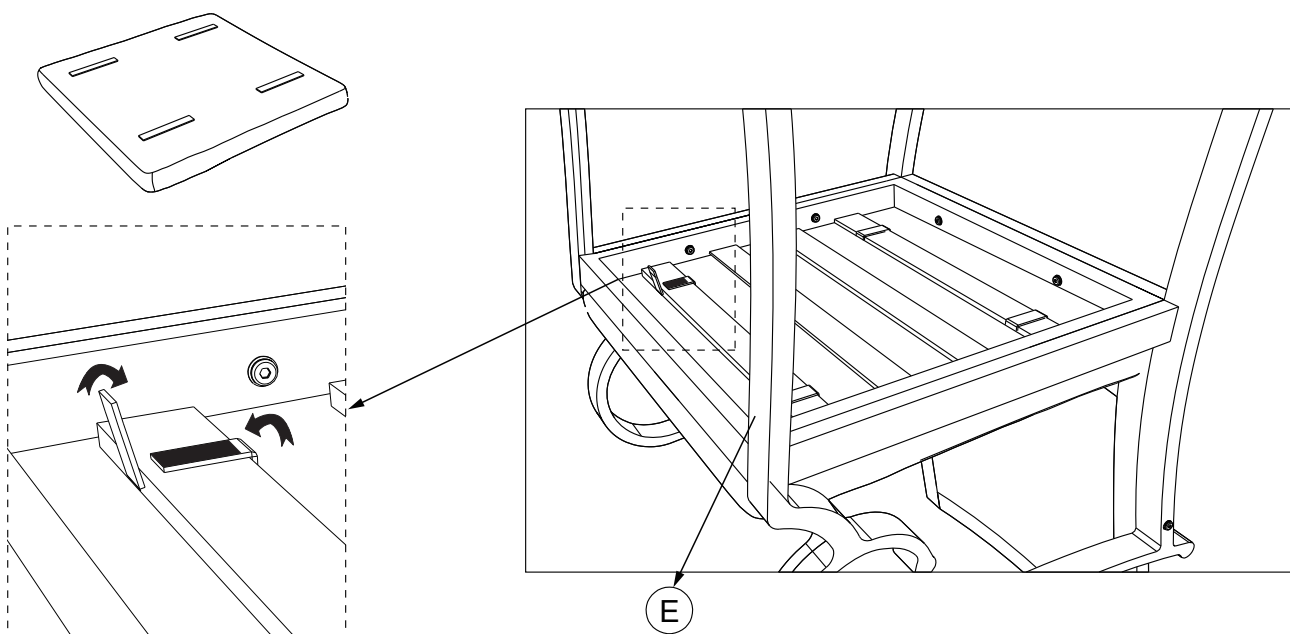

E×2

Step 6


Put all bolt caps(M) on the bolts.

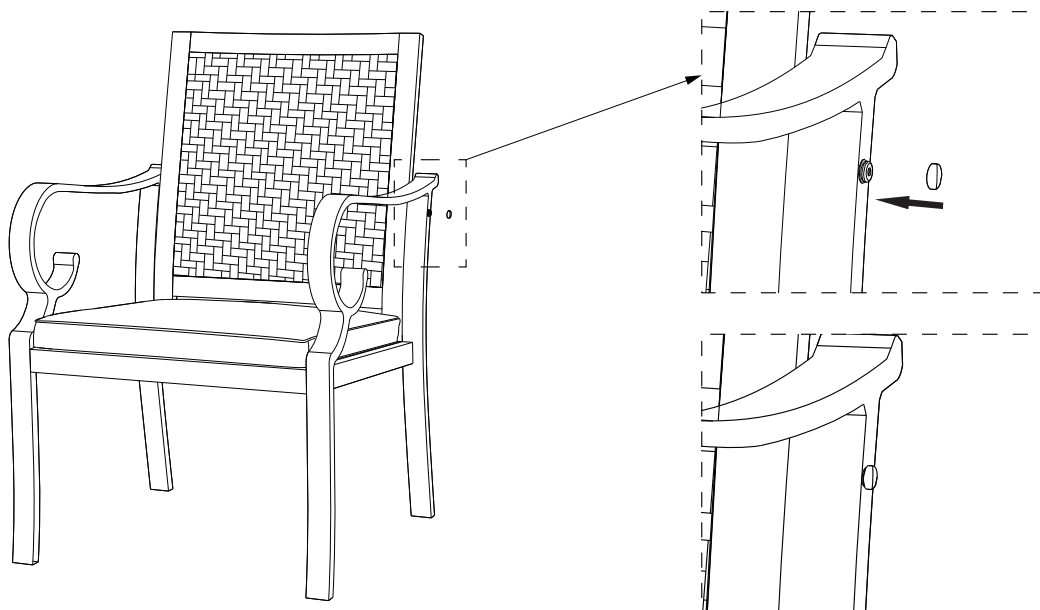

M×16


www.alaulm.com

Make Your Life Better.

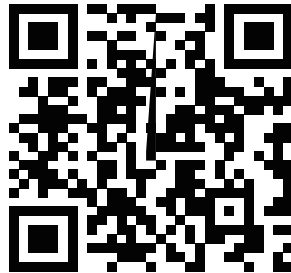

Chaise de salle à manger en rotin tressé avec dossier en fer

Instructions de montage et d'entretien

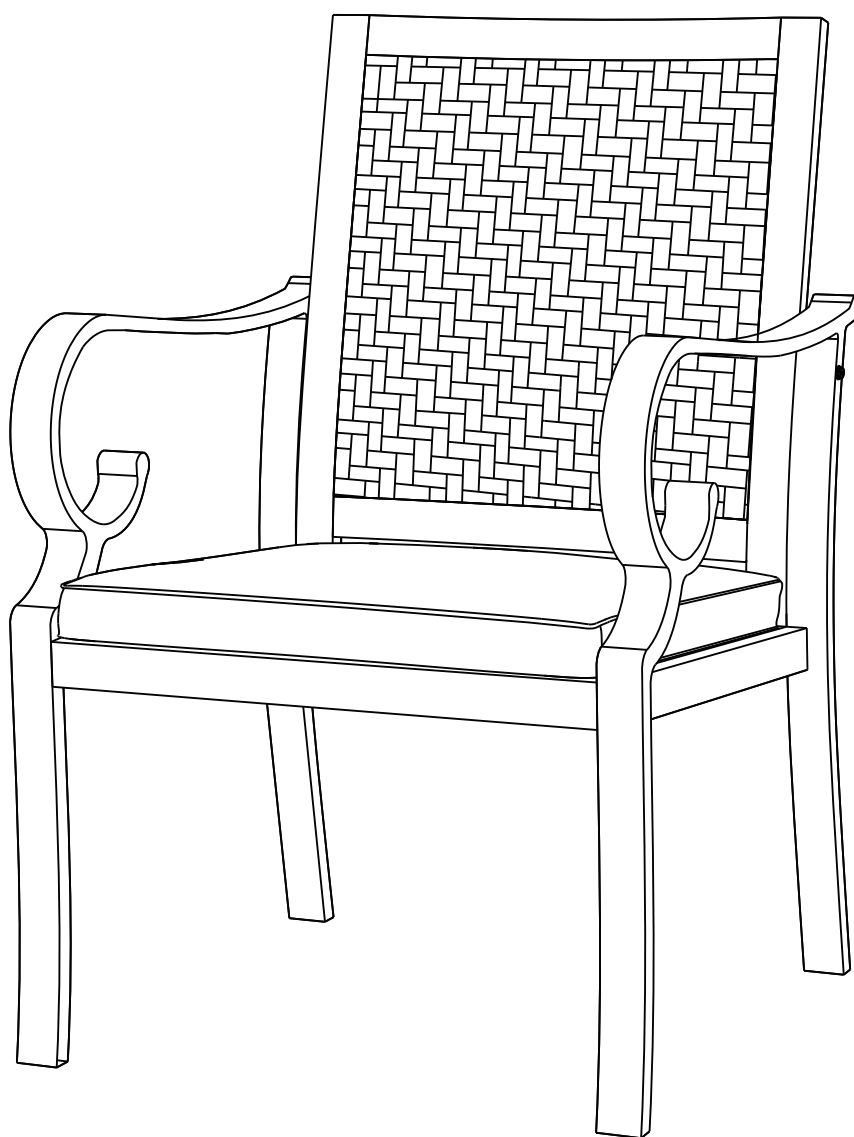

SKU: 02C68-24-BG

À lire et à conserver pour référence ultérieure

CATALOGUES

Soins et instructions	3
Liste des pièces	4
Liste des jeux de vis	5
Extra	5
Spécifications	6
Instructions d'installatio	7

Soins et instructions


ous vous remercions d'avoir commandé cet ensemble de meubles de salle à manger pour l'extérieur. Voici quelques suggestions qui pourraient vous aider :

1. Cet ensemble de fauteuils à bascule en fer tricoté pour l'extérieur est livré par deux dans une boîte.
2. Le tapis est emballé sous vide. Après ouverture de l'emballage, le tapis deviendra suffisamment épais au bout d'un certain temps.
3. Si des pièces sont endommagées ou perdues, veuillez lire attentivement ces instructions (voir la liste des pièces à la page 4 et à la page 5), n'hésitez pas à nous contacter. Nous vous enverrons immédiatement un produit de remplacement.
- 4) Afin de prolonger la durée de vie de la housse de canapé, nous vous conseillons de placer tous les coussins à l'intérieur les jours de pluie.
5. nous espérons que vous aimerez nos produits, si vous avez d'autres questions, n'hésitez pas à nous contacter.






Comment nous contacter :






Email:service@alaulm.com





Web:www.alaulm.com

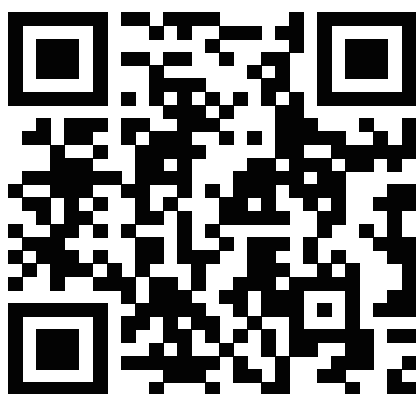

Vous pouvez scanner le code QR pour découvrir d'autres produits.

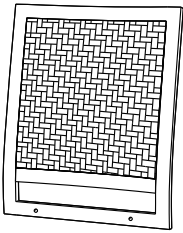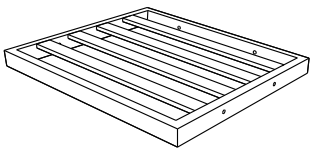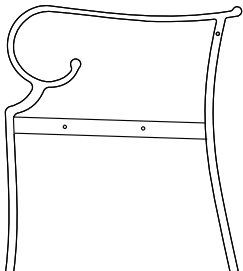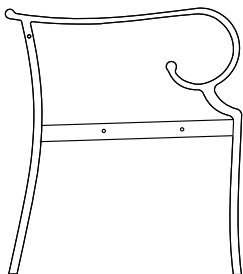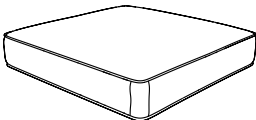
LISTE DES PIÈCES			
Partie	Description	Nom de la pièce	Qté
A		Plaque arrière Partie	2
B		Plaque de siège Pièce	2
C		Partie de l'accoudoir droit	2
D		Partie gauche de l'accoudoir	2
E		Coussin de siège	2

Liste des jeux de vis			
Partie	Description	Nom de la pièce	Qté
H		Boulon M6 × 30	8PCS
I		Boulon M6 × 35	4PCS
J		Boulon M6 × 55	4PCS
K		M6 Joints	16PCS
L		Clé Allen M6	1PC
M		Le parapluie	16PCS

Extra			
Partie	Description	Nom de la pièce	Qté
H		Boulon M6 × 30	2PCS
I		Boulon M6 × 35	1PC
J		Boulon M6 × 55	1PC
K		M6 Joints	4PCS
M		Le parapluie	4PCS



WARNING: Failure to locate parts in accordance with these diagrams, or failure to use special parts provided with this equipment, may result in property damage or personal injury.

CARACTÉRISTIQUES TECHNIQUES

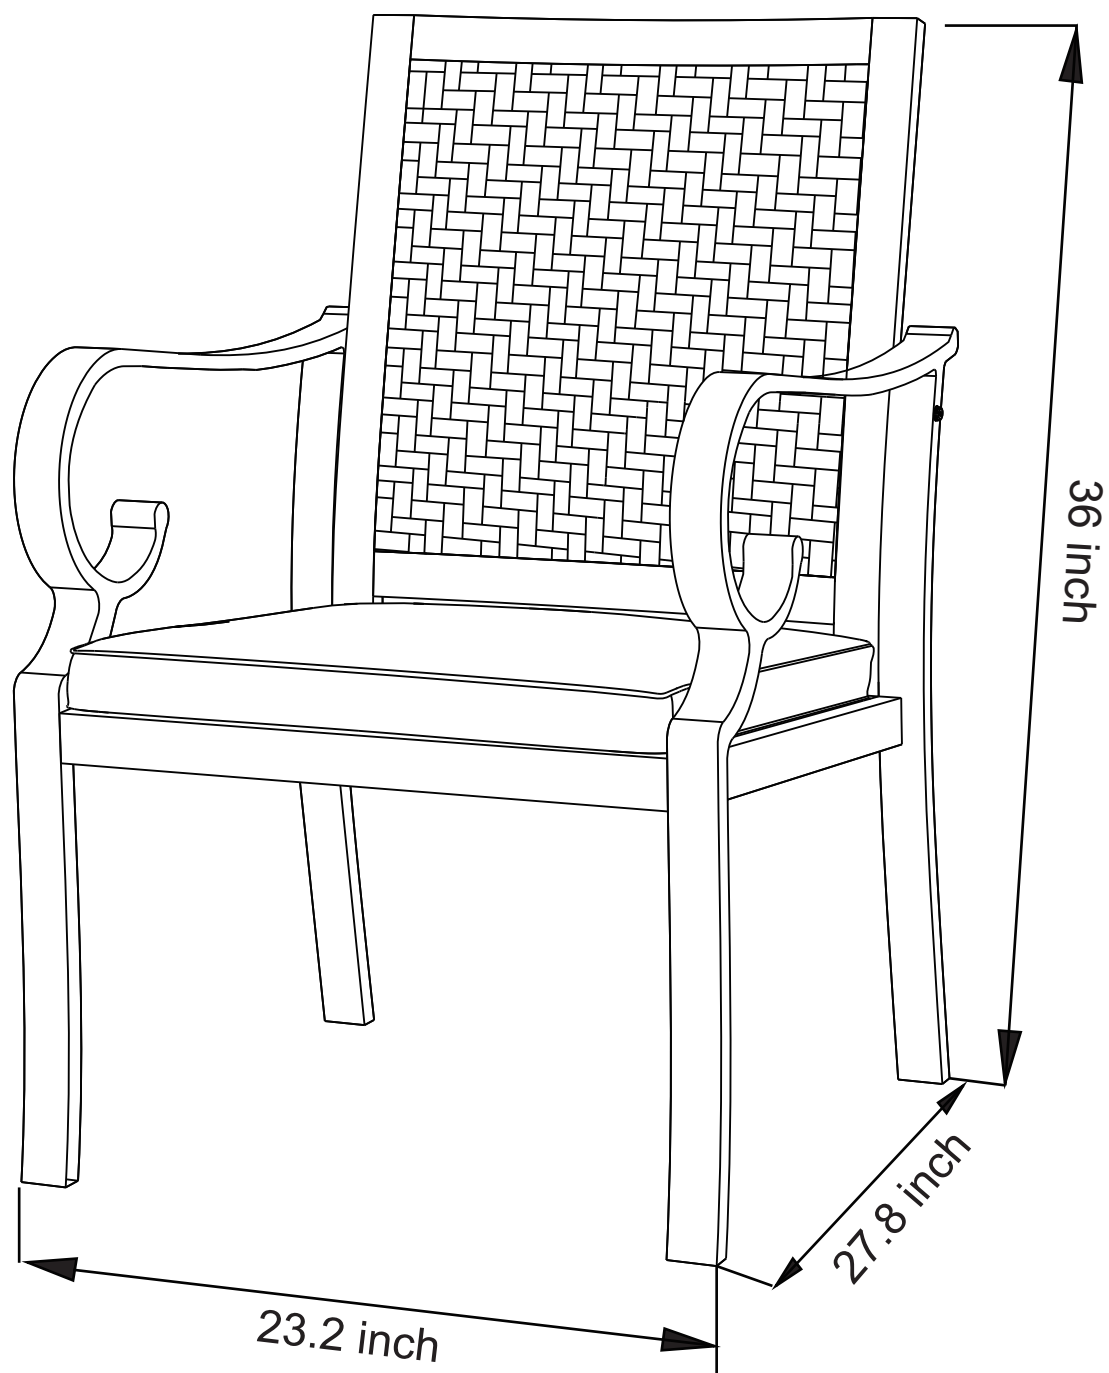


Step 1

Aligner les deux trous situés à l'arrière de la partie de la plaque d'assise (B) avec la partie de la plaque arrière (A) et fixer les boulons (I) aux joints M6 (K).
Note : Ne pas serrer les boulons.

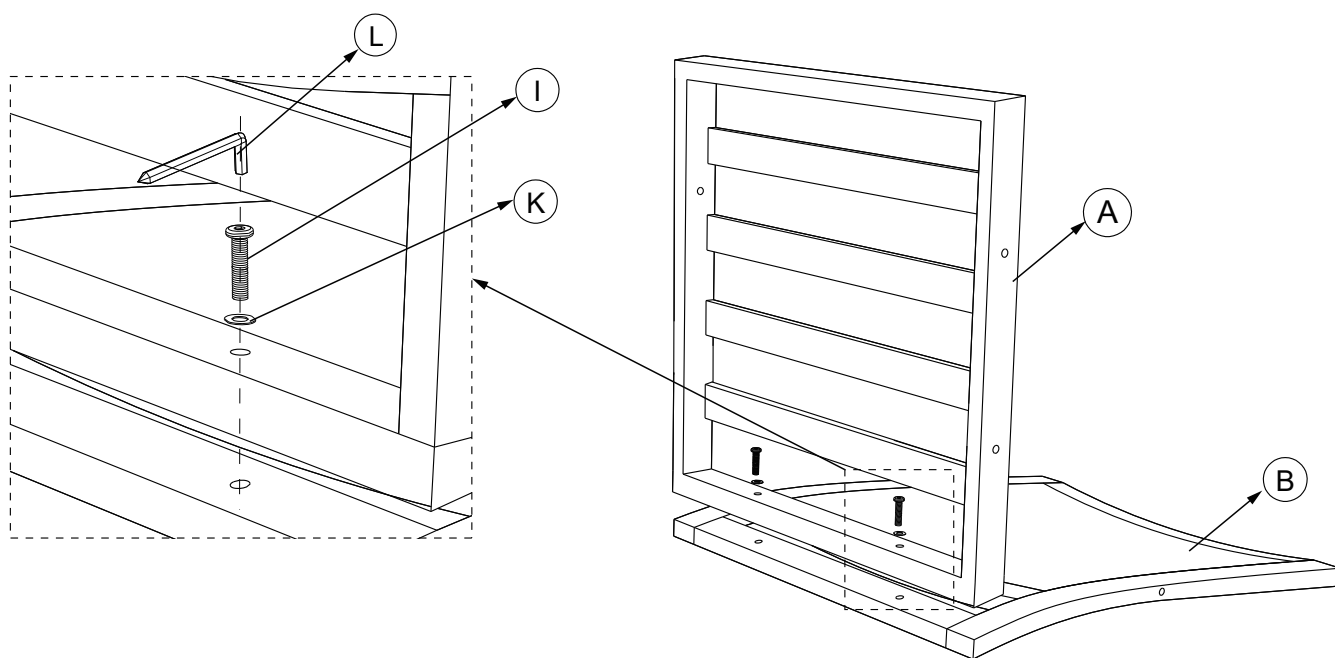

A×2




B×2



I×4





K×4




L×1

Step 2

Monter la partie de l'accoudoir droit (C) sur le côté droit de l'assemblage (AB), en alignant les deux trous à l'intérieur de (C) sur les trous du côté droit de (AB) et en la fixant avec des boulons (I) et des joints M6 (K).
Note : ne pas serrer les boulons.

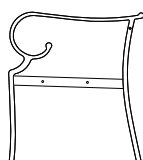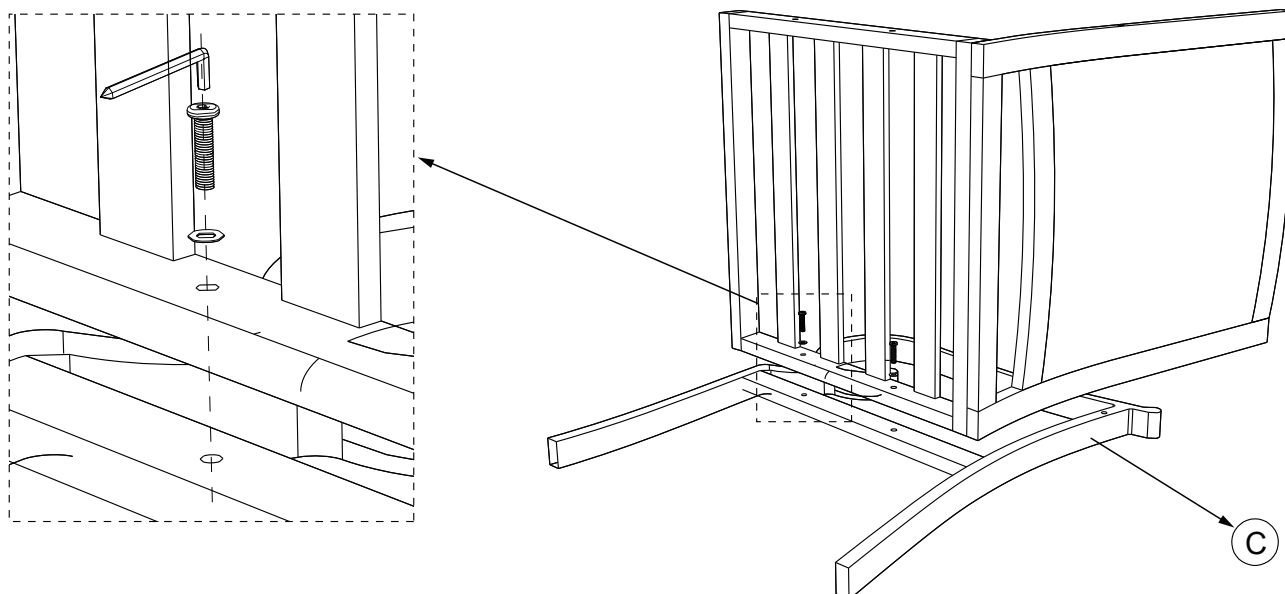


C×2



H×4



K×4





L×1


Step 3

La partie de l'accoudoir gauche (D) est montée de la même manière qu'à l'étape 2.

Note : ne pas serrer le boulon.

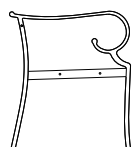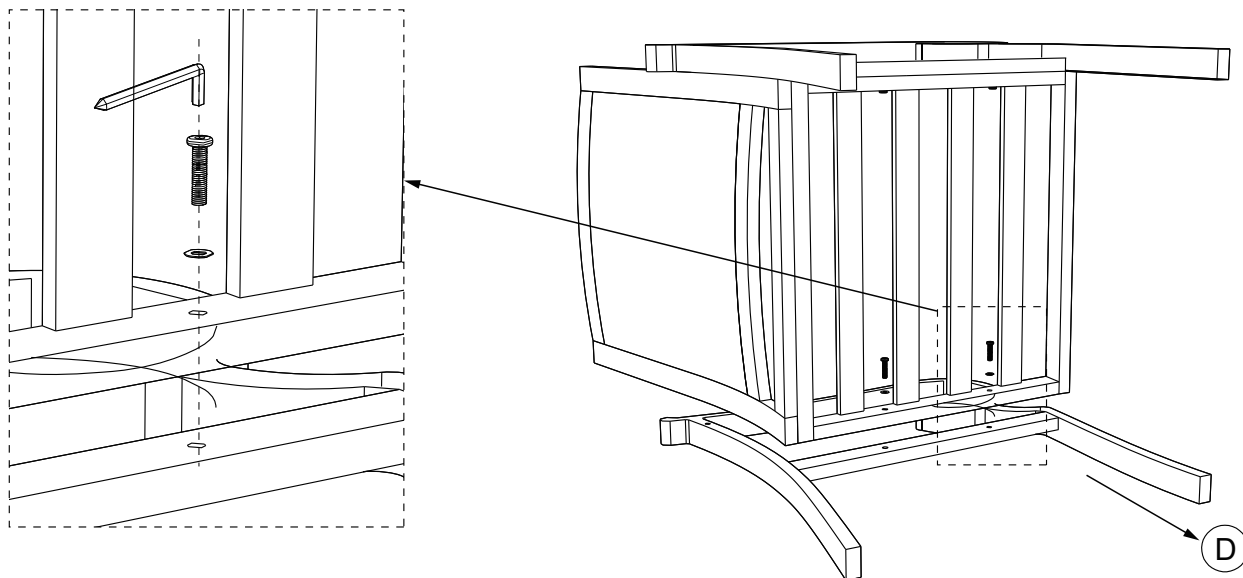


D×2



H×4



K×4






L×1

Step 4

Aligner les trous extérieurs des accoudoirs des deux côtés avec les trous extérieurs de (B) et fixer à l'aide de boulons (J) avec des joints M6 (K).


Note: Serrer les boulons à ce moment-là.

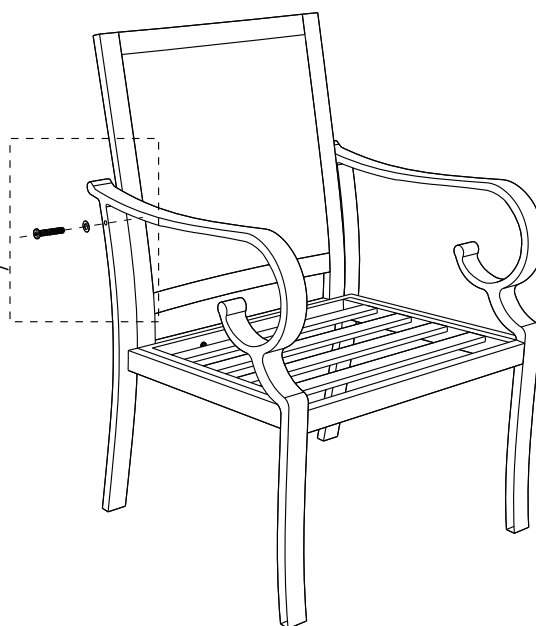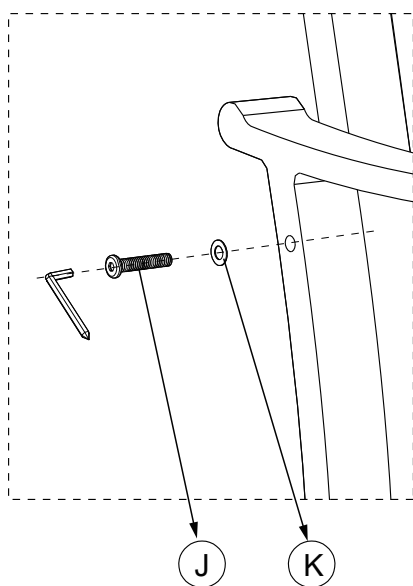

J×4





K×4



L×1

Step 5



Après avoir placé le coussin (E) sur la plaque d'assise, enroulez le velcro autour des lattes comme indiqué et serrez.

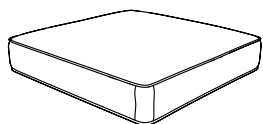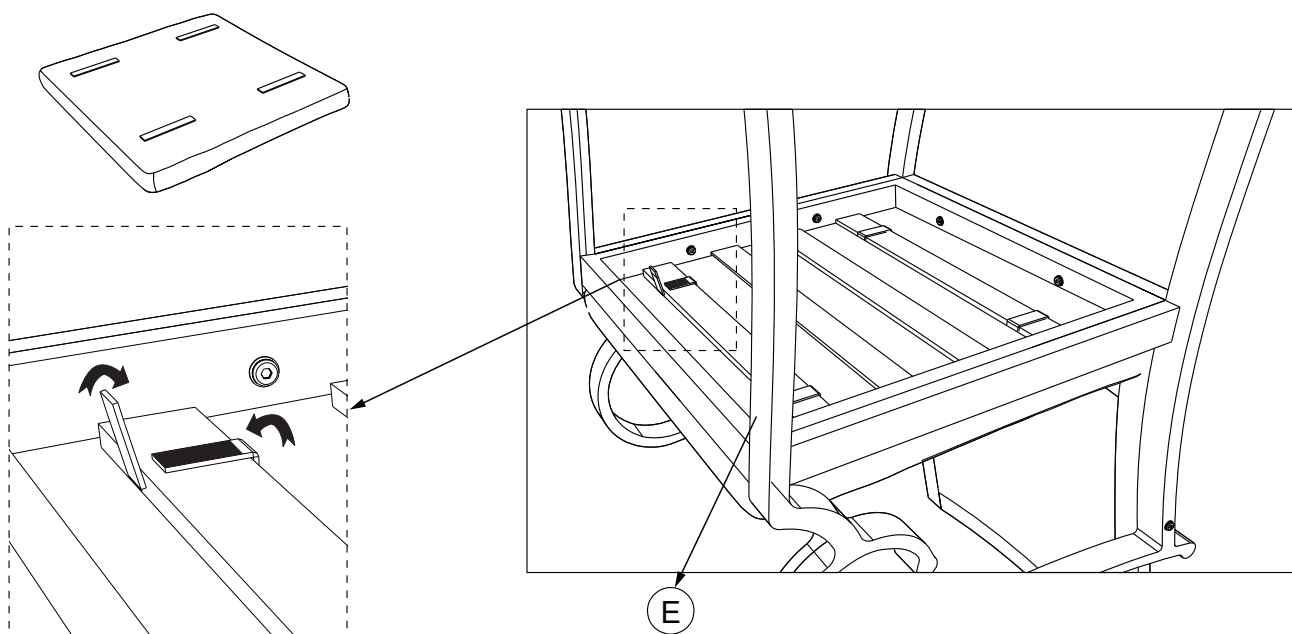

E×2

Step 6

Placez tous les boulons (M) sur les boulons.

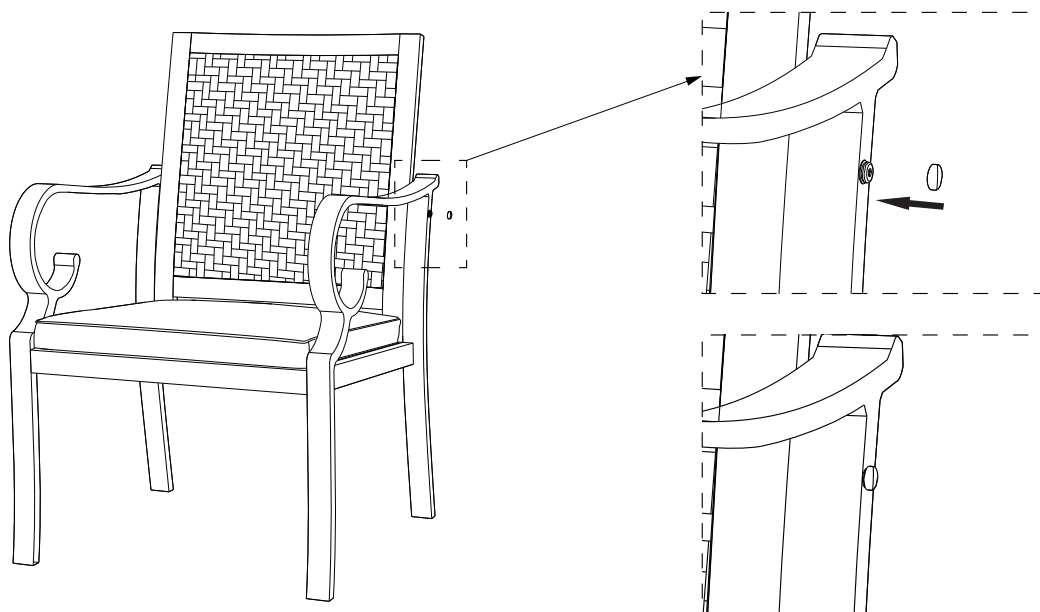

M×16

www.alaulm.com

Make Your Life Better.

