


## ■ HOW TO CHOOSE THE RIGHT SIZE?

Requires at least 14" wide, 18" deep cabinet opening

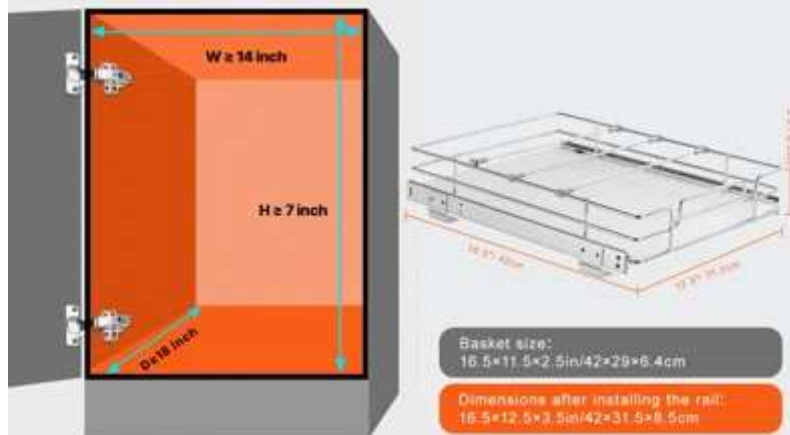

Note: Check for obstructions such as door hinges or pipes when measuring