


ASSEMBLY INSTRUCTIONS

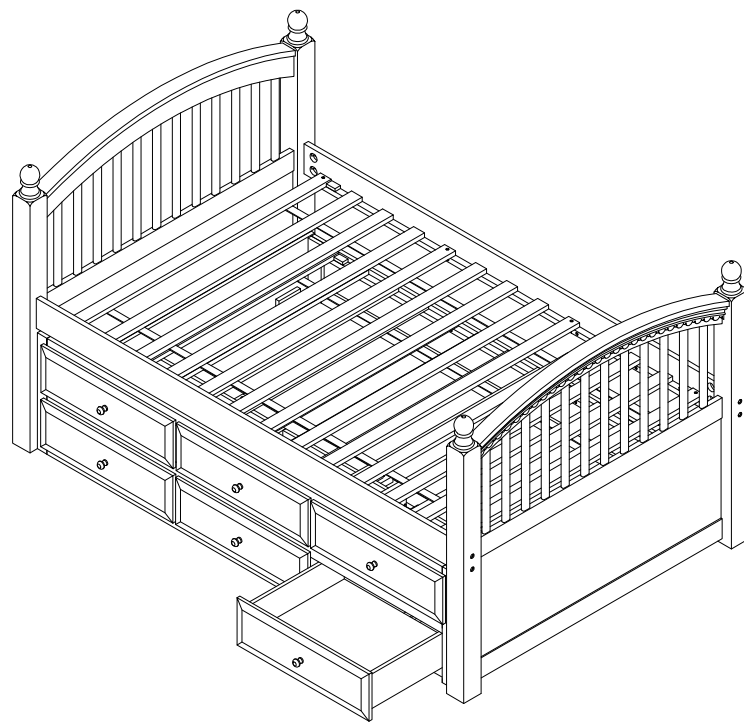

REVISION 0 : 08/21/2011
REVISION 1 : 10/26/2011
REVISION 2 : 02/18/2022

Twin Daybed

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

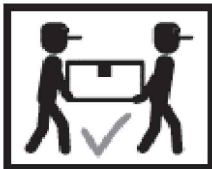

ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

P BED END




2PCS

Q FINIAL



4PCS

**M ROLL SLAT
(13PCS)**



2 SETS

B2 (BOX 2)

N FRONT BED RAIL



1PC


O BACK BED RAIL



1PC


B3 (BOX 3)

A DRAWER FRONT



3 PCS

**B DRAWER BACK
PANEL**



3 PCS

**C DRAWER LEFT
PANEL**




3 PCS

**D DRAWER RIGHT
PANEL**




3 PCS

**E DRAWER BOTTOM
PANEL**



3 PCS

**F FEMALE DRAWER
GLIDE**




3 PCS

**G MALE DRAWER
GLIDE**




3 PCS

**H TRUNDLE FRONT
PANEL**



1PC

**I TRUNDLE BACK
PANEL**



1PC

**J DRAWER SUPPORT
RAIL**



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

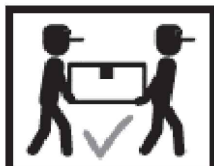

ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B3 (BOX 3)

**K TRUNDLE
LEFT PANEL**



1PC

**L TRUNDLE
RIGHT PANEL**



1PC

X KNOB WITH SCREW



6SETS

HARDWARE IDENTIFICATION

Z-B3 (BOX3) - HARDWARE PACK IS LOCATED IN 400381T (B3)

**1 ALLEN WRENCH
(4MM - BLK)**



1PC

**2 LONG BOLT
(1/4 x 100mm - BLK)**



8PCS

**3 SHORT BOLT
(1/4 x 35mm - BLK)**



12PCS

**4 HALF ROUND NUT
(1/4MM - BLK)**



12PCS

**5 FLAT HEAD SREW
(4 x 30mm - BLK)**



88PCS

**6 MEDIUM BOLT
(1/4 x 50mm - BLK)**



4PCS

**7 WOOD DOWEL
(10 x 40mm)**




4PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

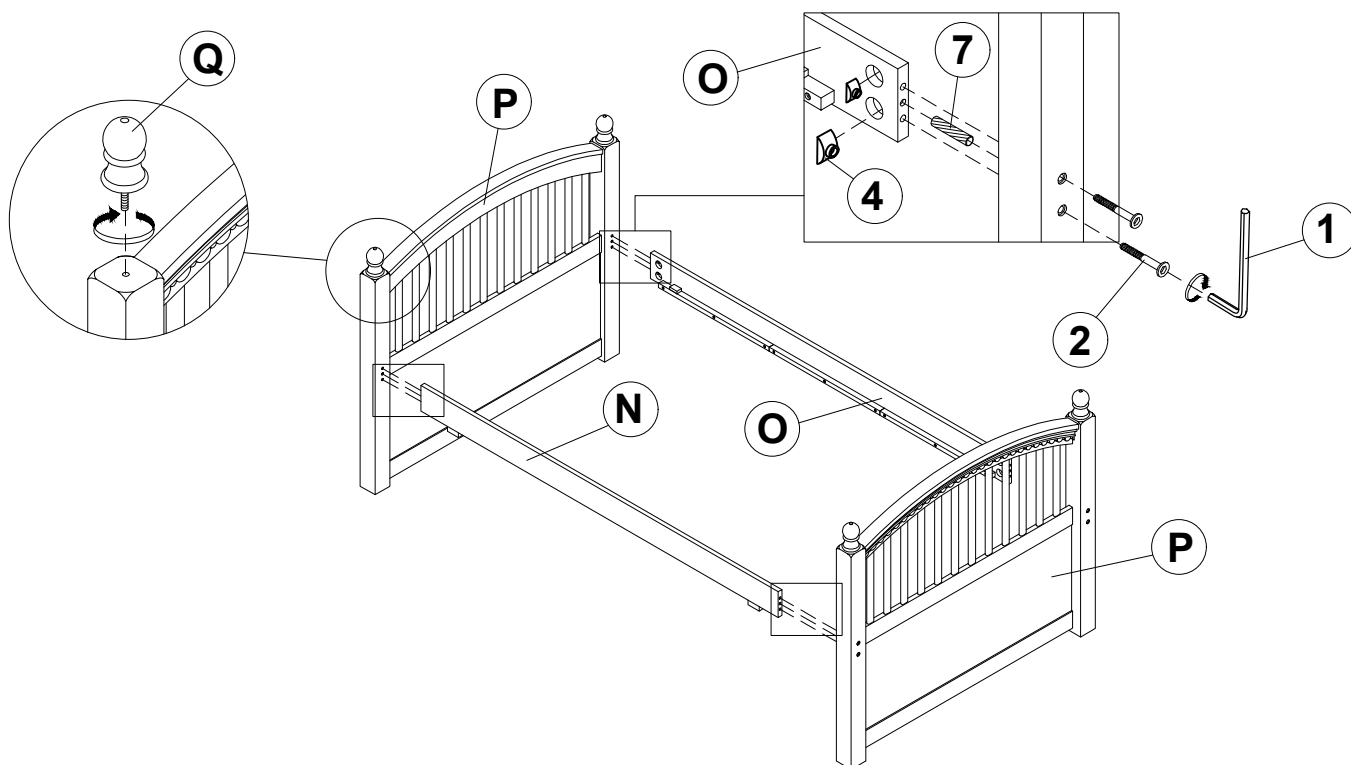


STEP 2

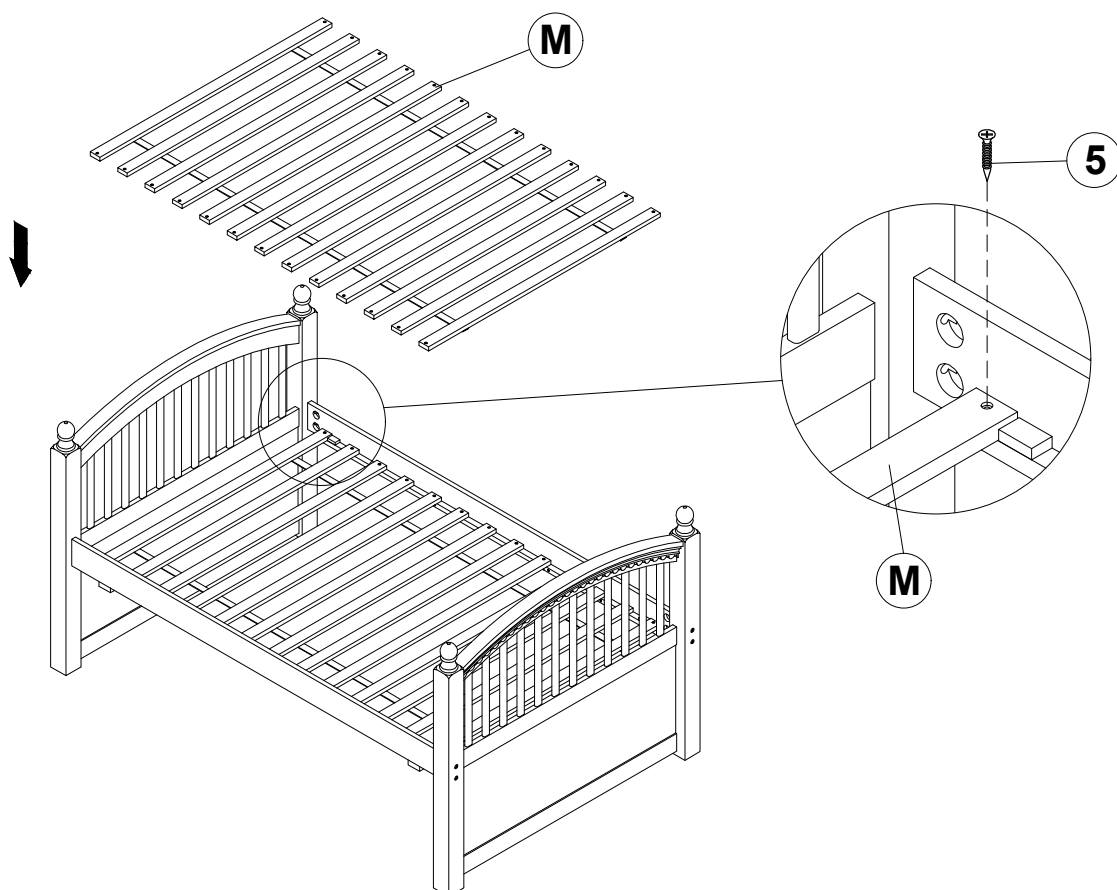


ASSEMBLY INSTRUCTIONS

STEP 3

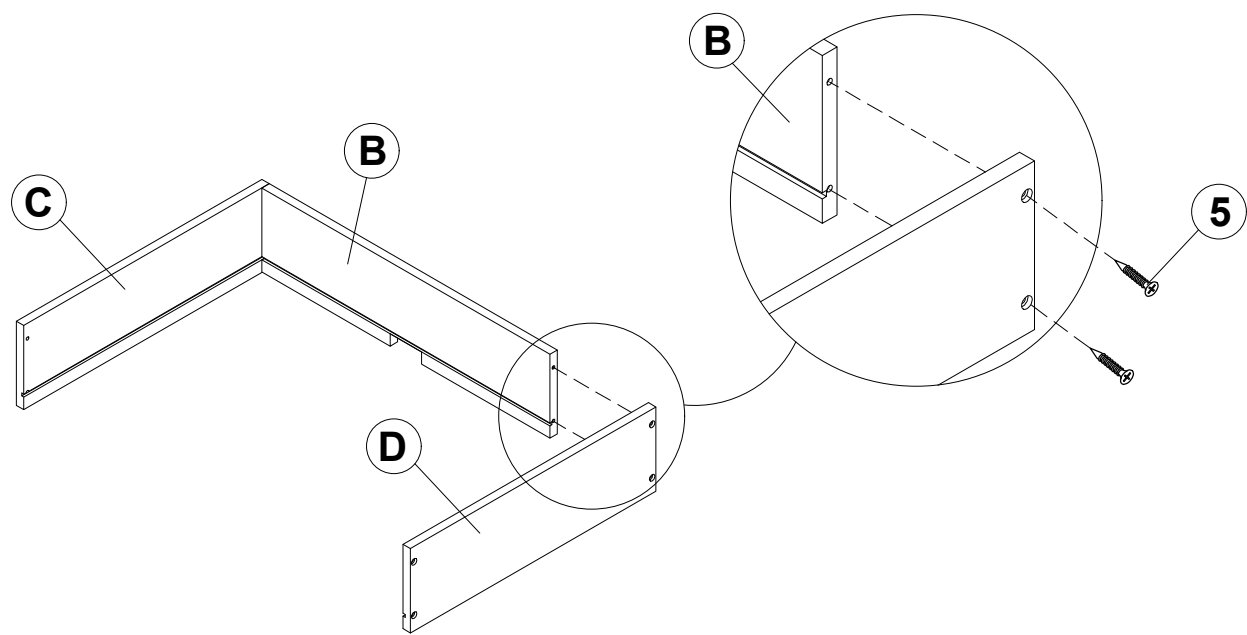


STEP 4

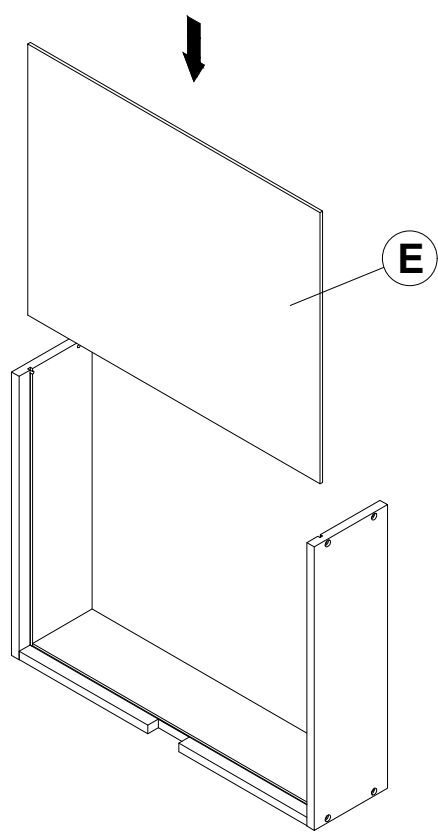


ASSEMBLY INSTRUCTIONS


STEP 5

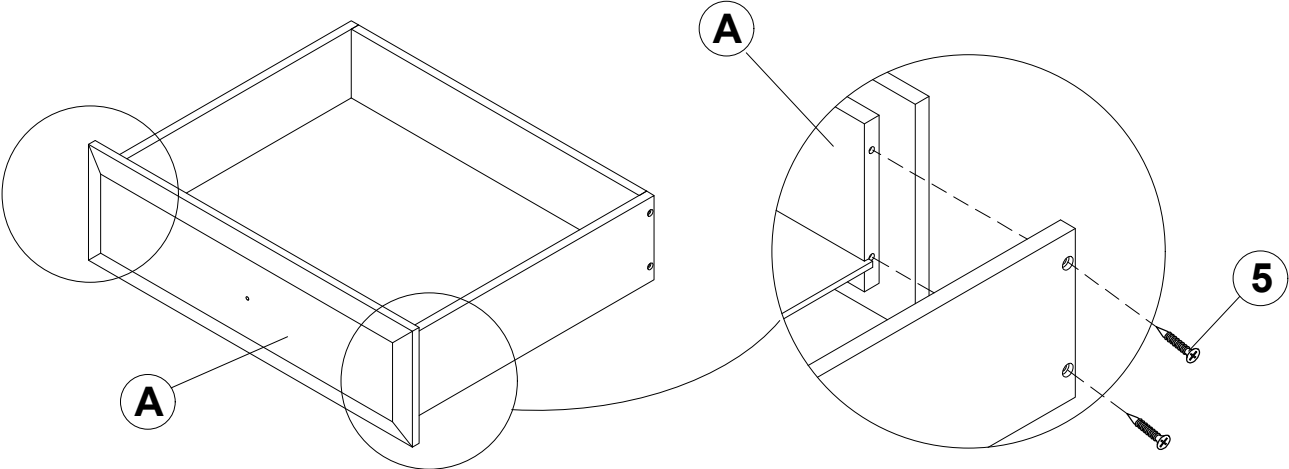

STEP 6

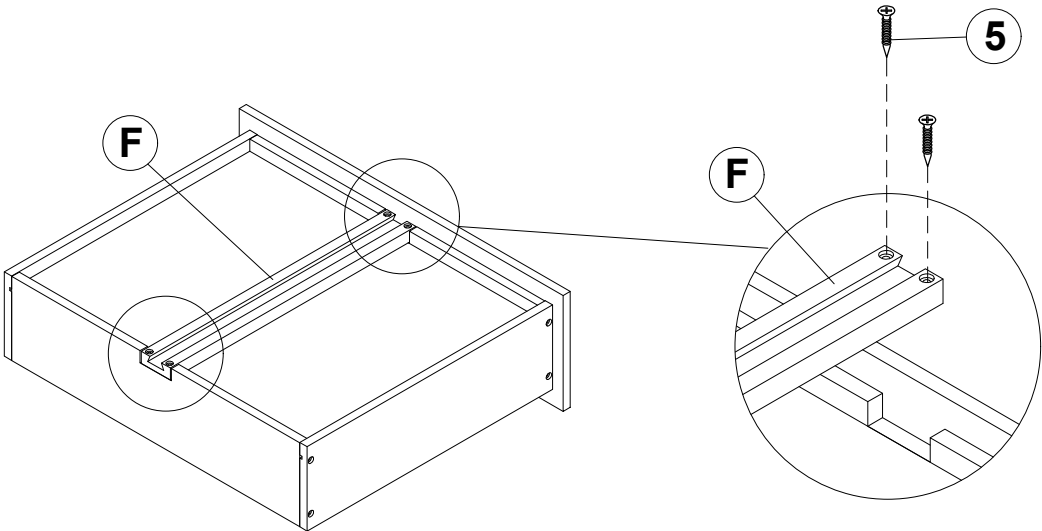


STEP 7

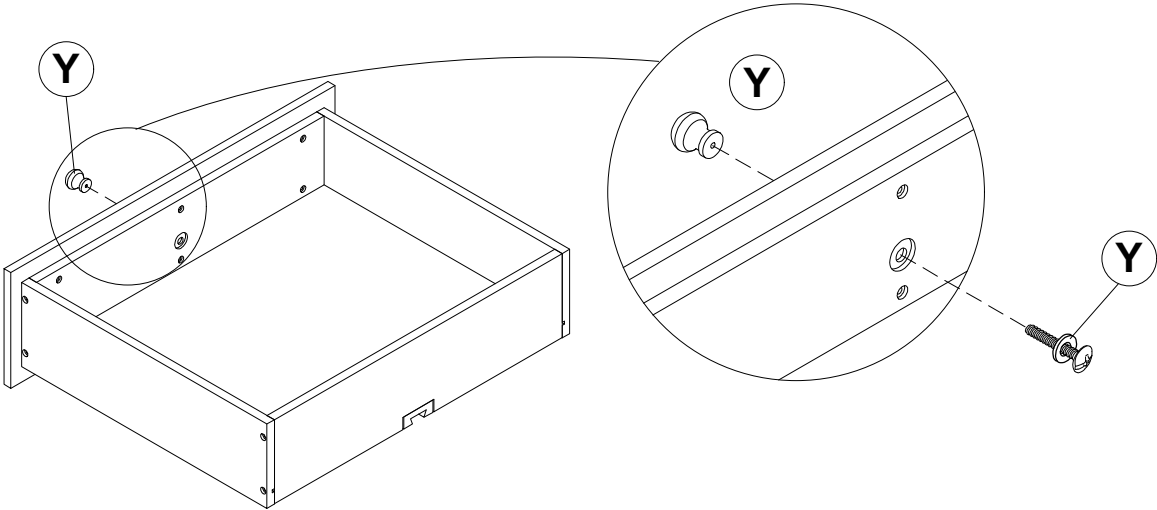


ASSEMBLY INSTRUCTIONS


STEP 8

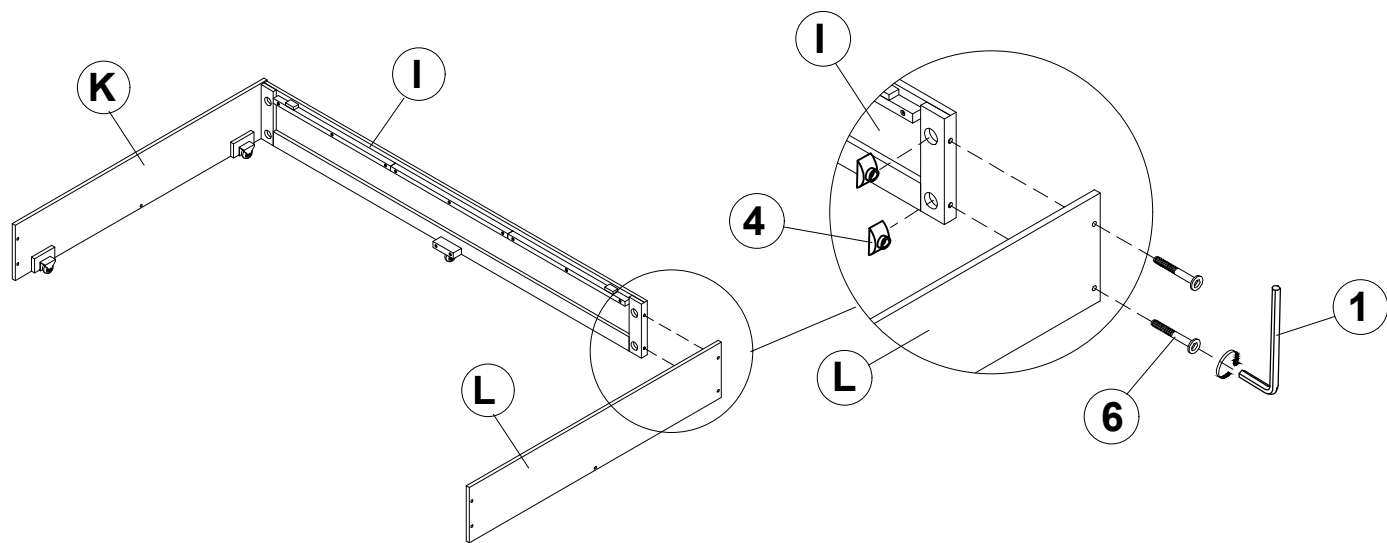

STEP 9

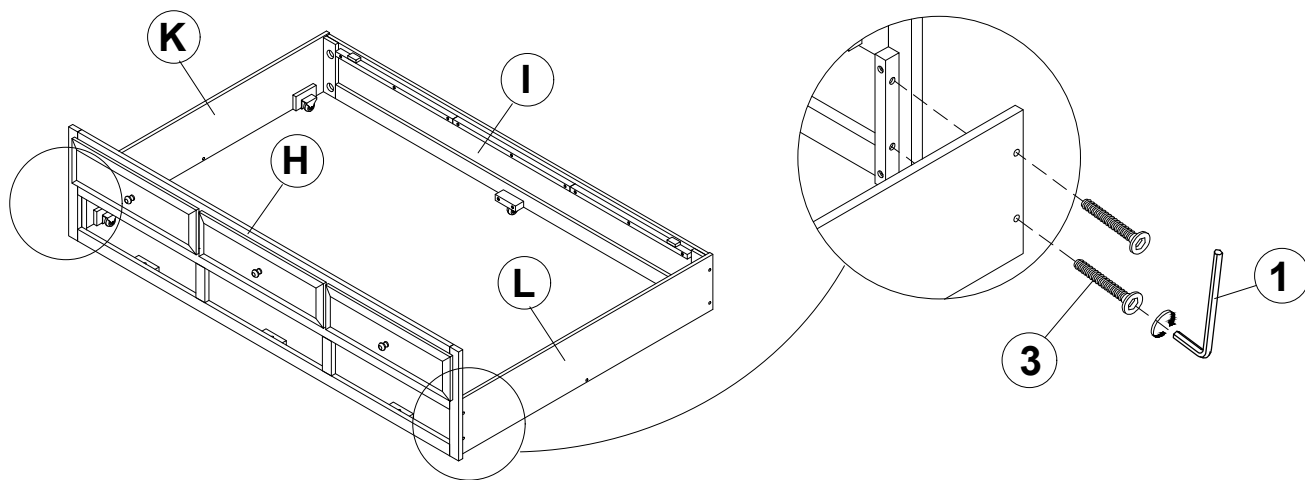


STEP 10

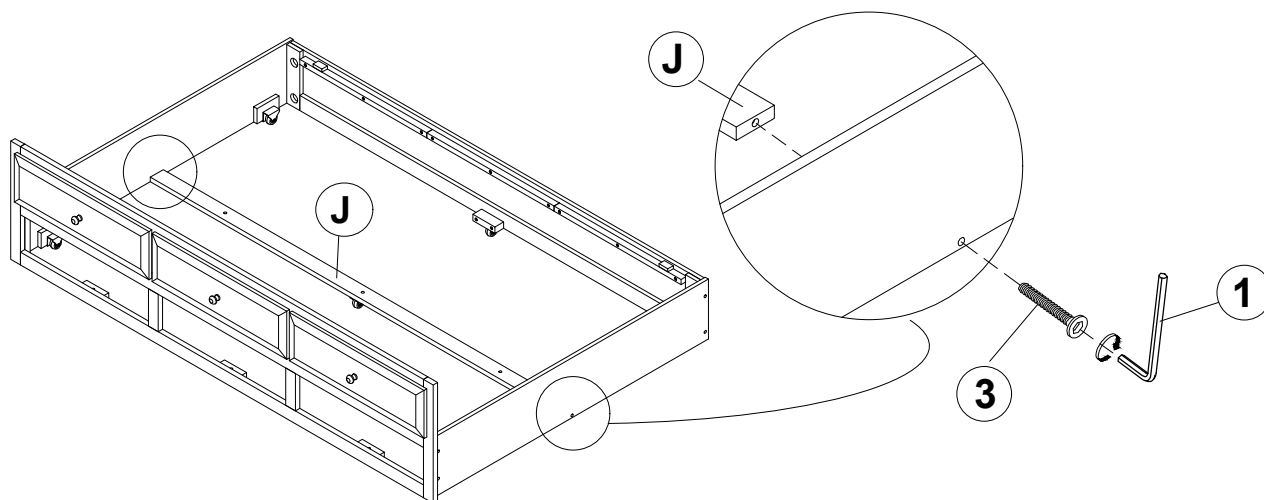


ASSEMBLY INSTRUCTIONS

STEP 11

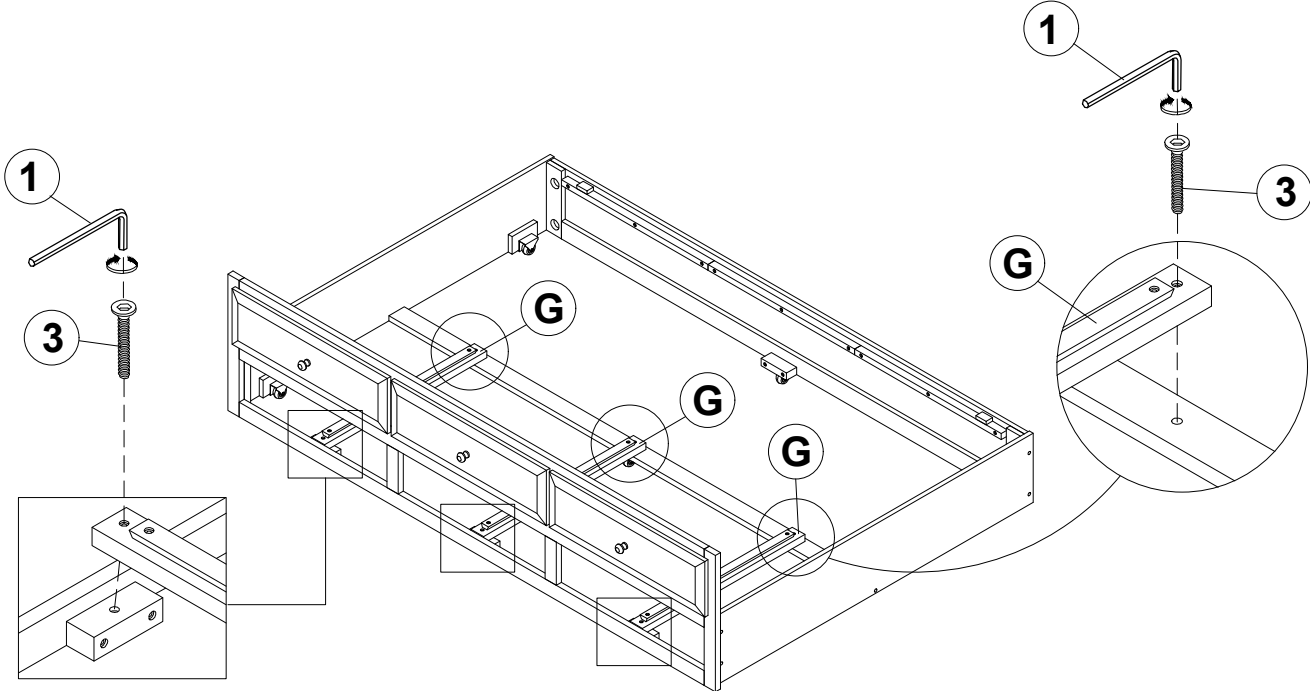


STEP 12

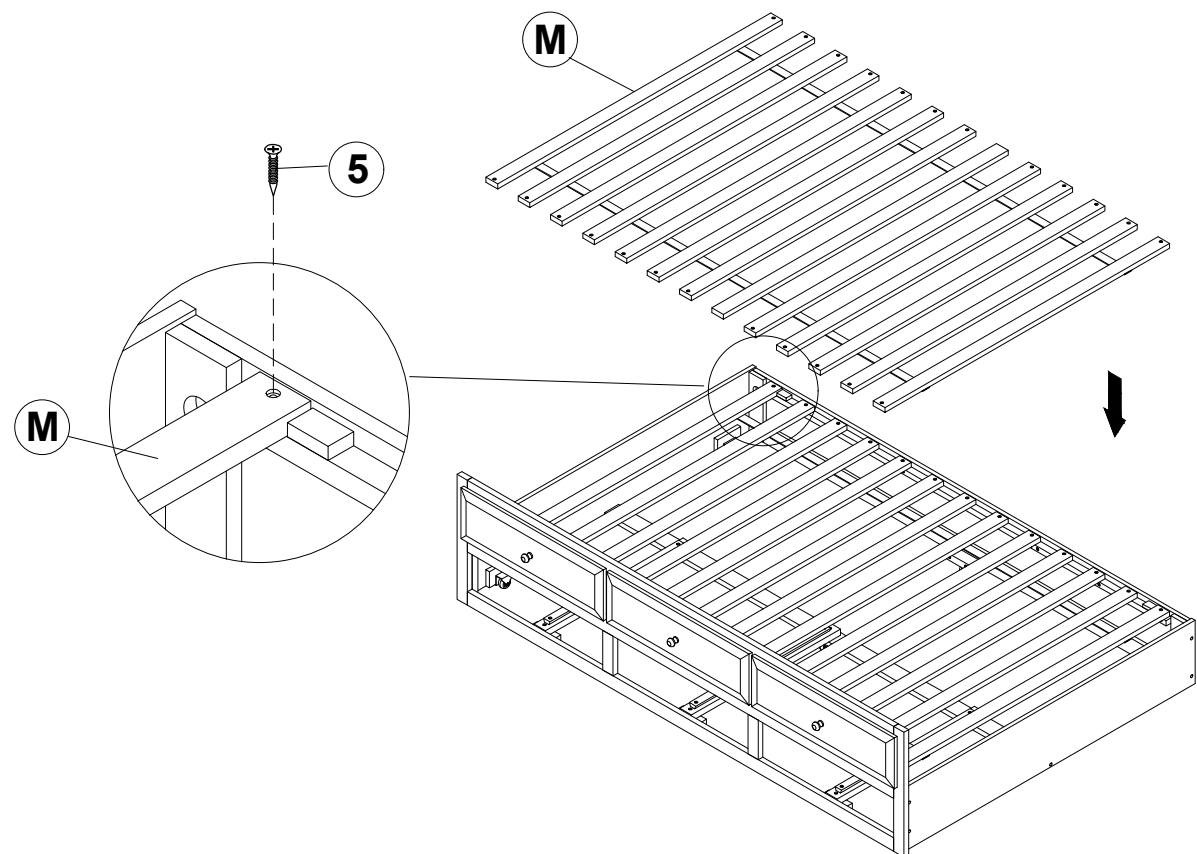


ASSEMBLY INSTRUCTIONS


STEP 13

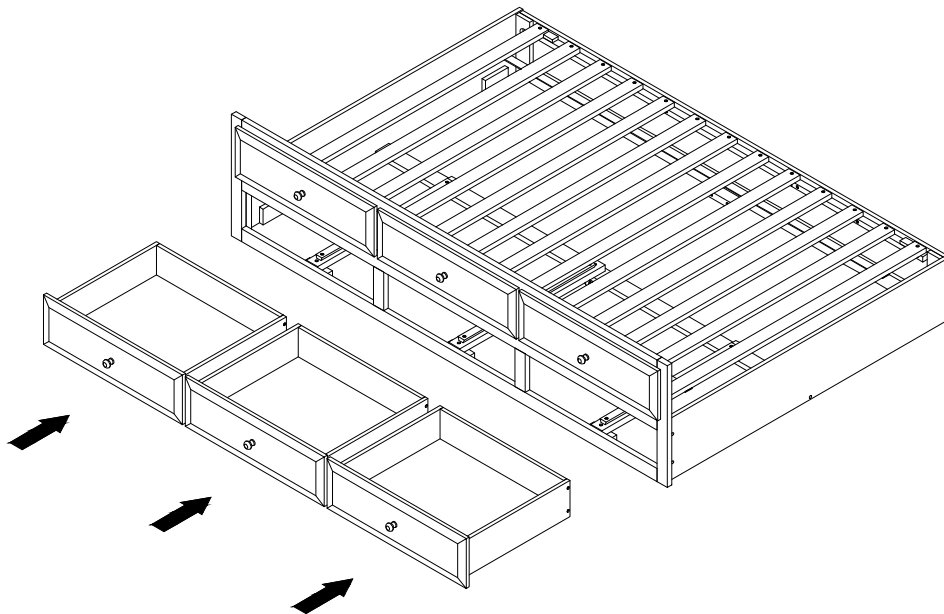

STEP 14 COMPLETE

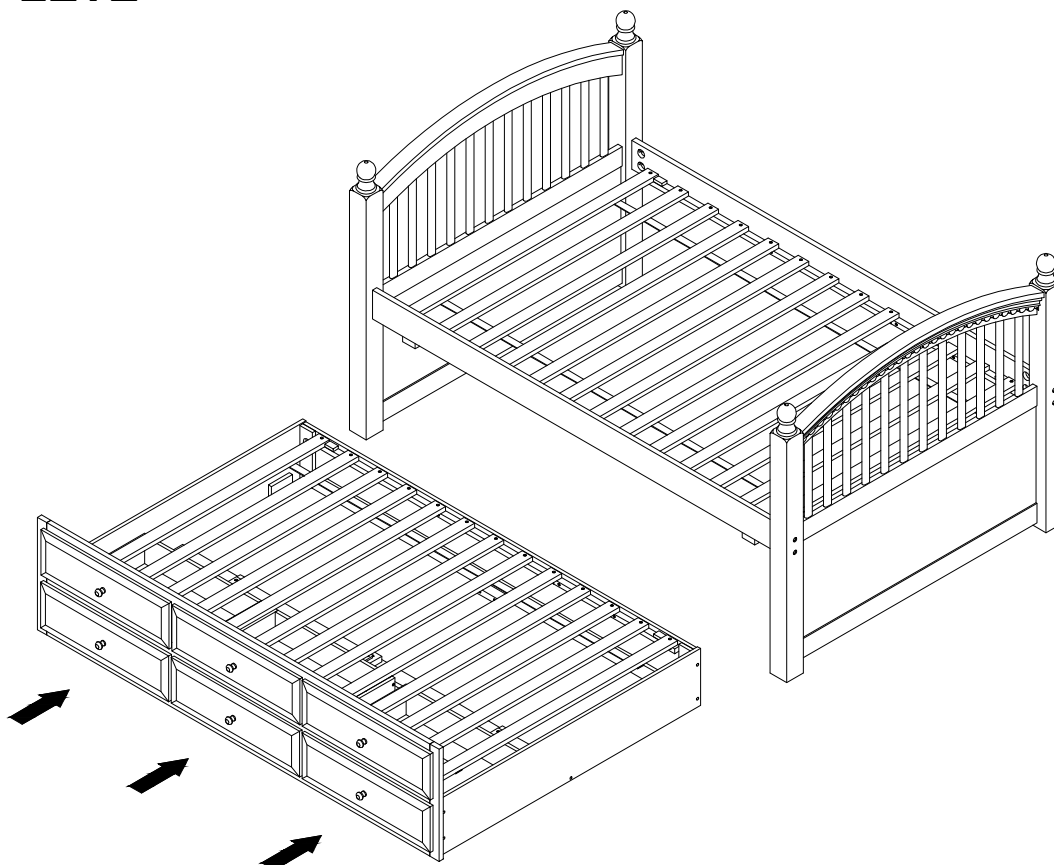

Inner Size: 76.75"W X 39.50"D
Trundle Inner Size: 75.50"W X 39.50"D

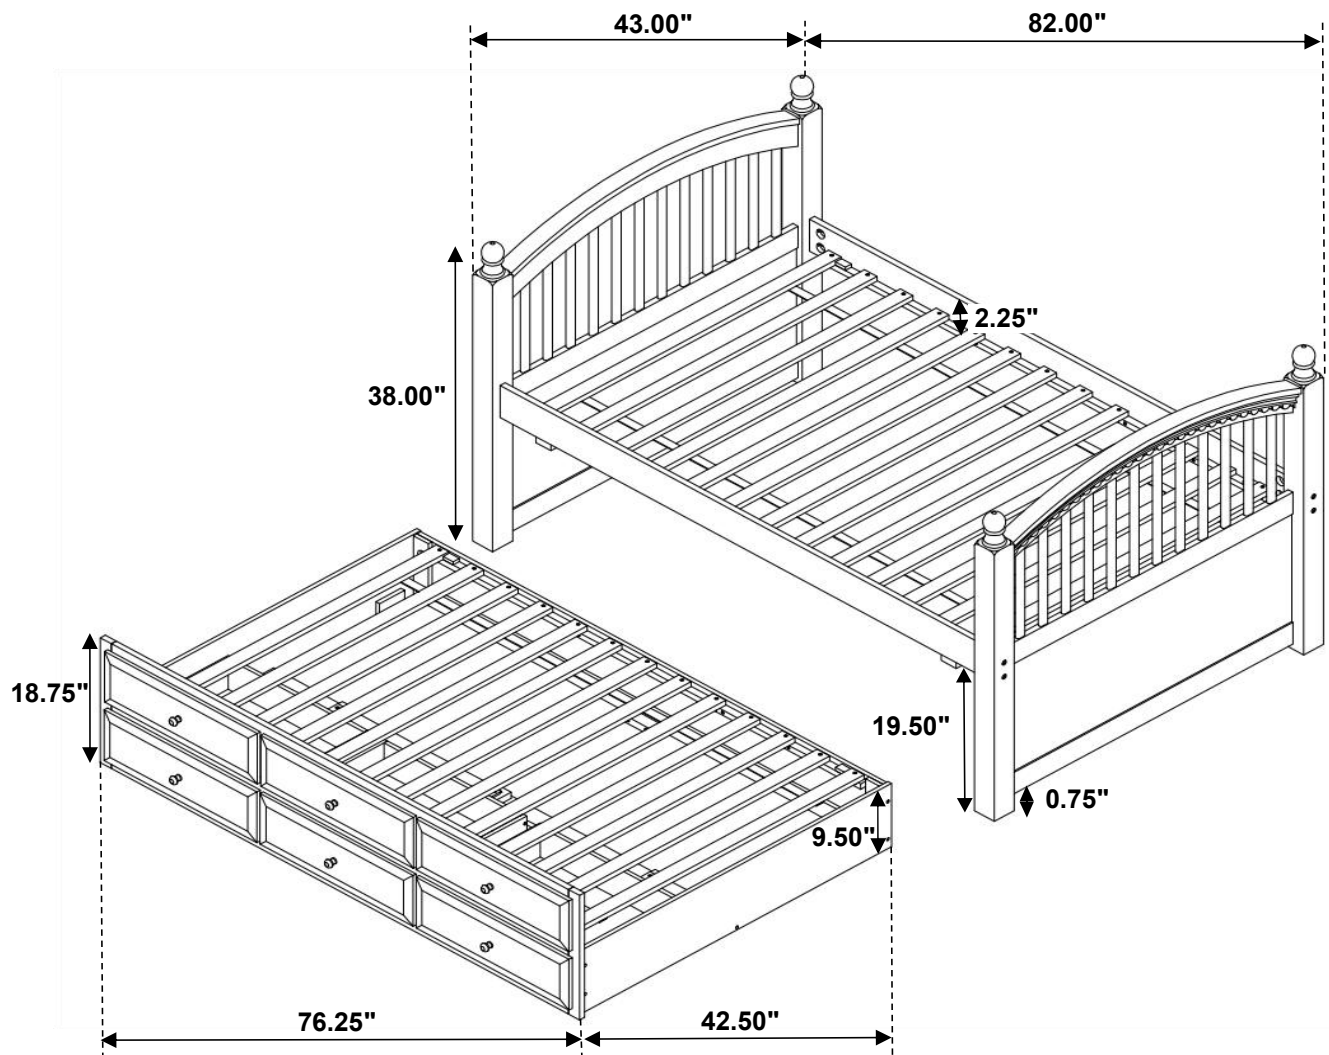

Note: Dimension tolerance $\pm 5\%$