



INSTALLATION INSTRUCTIONS

6781-10/60安裝說明


6781
SERIES:

PATENT NUMBER:
專利號碼:
ZL 2013 3 0218853.9
ZL 2013 3 0072360.9
ZL 2013 3 0248535.7
002210302-0001
D156299

1. Loosen the **Set Screws** in the **Main Body** with the provided **Hex Key** to disassemble the **Bracket**.
用隨附六角扳手鬆開本體下方埋頭螺絲,將固定基座取出。
2. Select a proper position for product and use the **Bracket** as a template to mark centers of mounting holes on wall horizontally as figures shown.
選取預定安裝的位置,以固定基座比對鑽孔的距離,並在牆壁畫上預定鑽孔記號,且確認鑽孔位置在同一水平線上。
3. Using a 6mm drill-bit, drill the holes in marked positions to a depth of 4cm. Insert the **Plastic Anchors** into the holes, and then fix **Bracket** to the wall with **Wall Screws**.
當安裝在水泥牆時,使用6mm鑽頭,鑽孔深度4公分,放入塑膠塞,並使之齊平於牆面,將固定基座以螺絲鎖緊於牆上。
4. Slide the **Main Body** over the **Bracket** and then tighten **Set Screws** for fixture.
使本體能順利套進固定基座後,用隨附六角扳手鎖緊本體下方的埋頭螺絲,完成安裝程序。

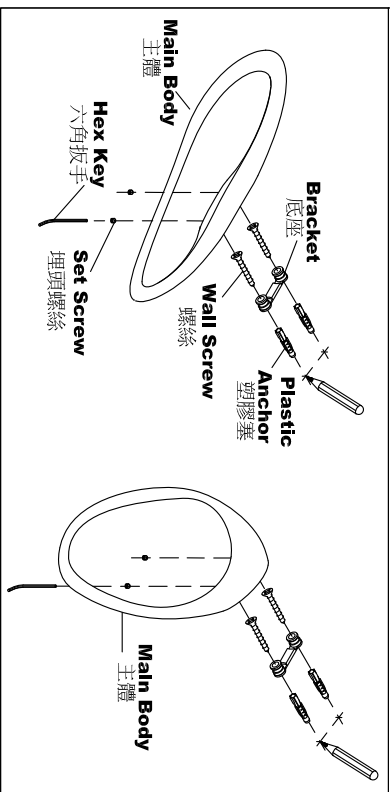

6781-10
Towel Bar



6781-70
Shelf



6781-50
Hook




6781-20
Soap Dish



6781-40
Toilet Tissue Holder



6781-24
Freestanding Soap Dish

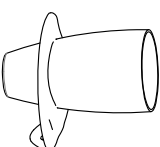

6781-30
Tumbler Holder



6781-60
Towel Ring

JUSTIME

巧時代

ST

SHENG TAI BRASSWARE CO., LTD.

www.justime.com

0001220214

PU67-81-ST10
MADE IN TAIWAN