

PLATFORM BED


FULL/QUEEN/E-KING SIZE

ASSEMBLY INSTRUCTIONS

PARTS AND FITTING PACKAGING DETAIL


BOX #1

A. HEADBOARD 1 PC
B. FOOTBOARD 1 PC

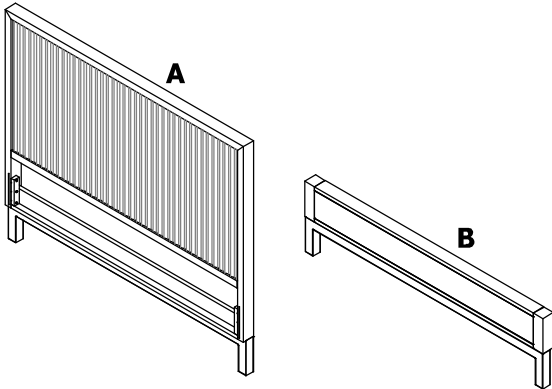


BOX #2

C. SIDERAIL 2 PCS
D. CENTER SLAT 1 PC
E. CENTER LEG 4 PCS
HARDWARE BOX

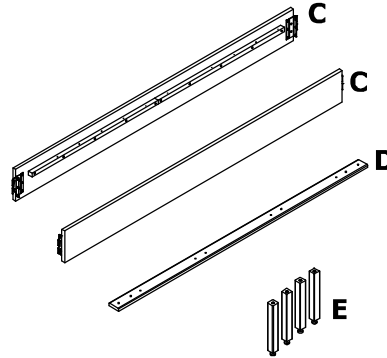


BOX #3





F. BED SLATS 12 PCS

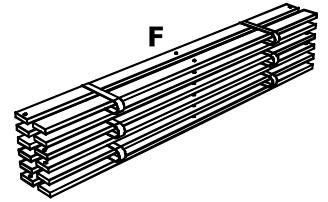


PLATFORM BED ASSEMBLED

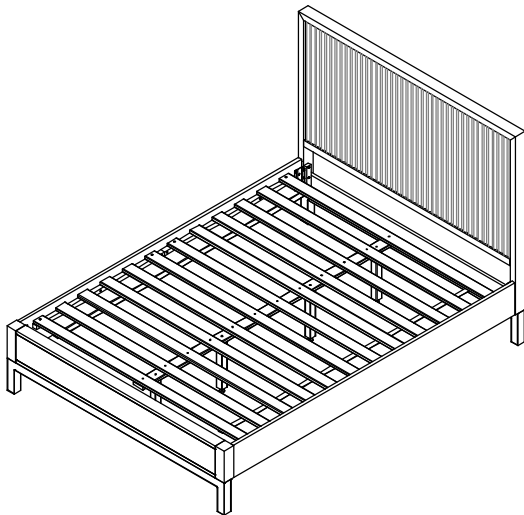

HARDWARE PACKED IN BOX #2


| | | | | | | | | |
|---|--------------------------|-----------|---|-----------------------|----------|--|--------------------|-----------|
| 1 | ROUND HEAD SCREW 15MM | 12 PCS | 2 | WOOD SCREW Ø8X30MM | 8 PCS | 3 | ALLEN BOLT 40MM | 10 PCS |
|  | | |  | | |  | | |
| 4 | ALLEN KEY | 1 PC | | | | | | |
|  | | | YOUR BOX MAY CONTAIN EXTRA HARDWARE | | | | | |

TOOL REQUIRED :
PHILLIPS HEAD SCREW
DRIVER (NOT PROVIDED)

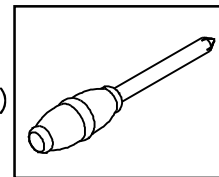


STEP 1 :

FIX ONE OF THE SIDERAILS (C) TO THE HEADBOARD (A) BY SLIDING IN THE HOOK INSTALLED AT THE END OF THE SIDERAIL (C) TO THE HEADBOARD (A), AND PUSH DOWN THE SIDERAIL (C) TO SECURE THE CONNECTION.

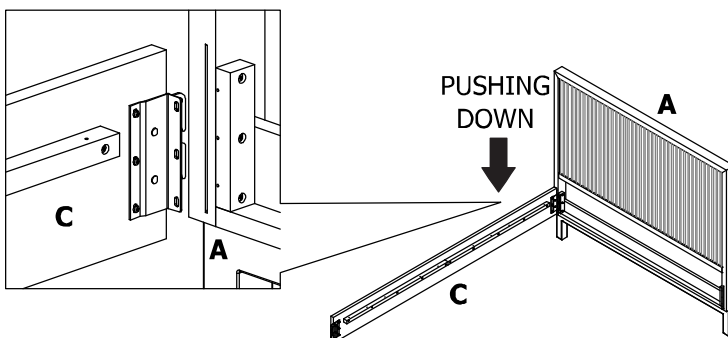


STEP 2 :

FIX THE OTHER END OF THE SIDERAIL (C) TO THE FOOTBOARD (B).

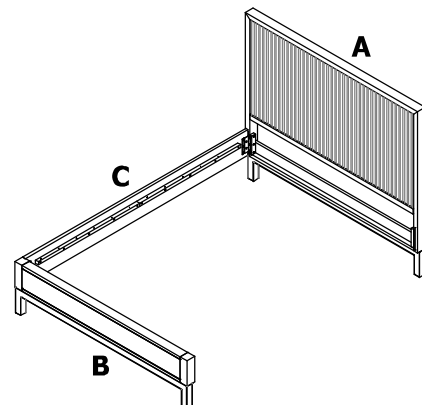


STEP 3 :


FIX THE OTHER SIDERAIL (C) TO THE HEADBOARD (A) AND FOOTBOARD (B).

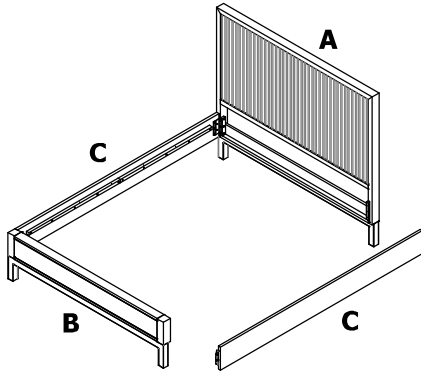**STEP 4 :**


SECURE BOTH SIDERAILS (C) TO THE HEADBOARD (A) AND FOOTBOARD (B) USING ROUND HEAD SCREWS (1) AS SHOWN IN THE ILLUSTRATION.

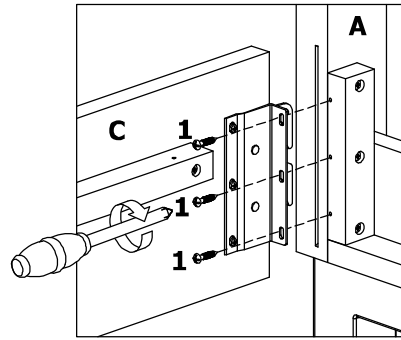**STEP 5 :**


ARRANGE CENTER SLAT (D) SO THAT T-NUT ARE FACING THE FLOOR. SLIDE ALLEN BOLTS (3) FROM TOP OF CENTER SLAT (D) INTO THE 2ND, 4TH, 7TH, AND 9TH PRE-DRILLED HOLES. FIX CENTER LEGS (E) TO CENTER SLAT (D) USING ALLEN BOLTS (3) AND ALLEN KEY (4).

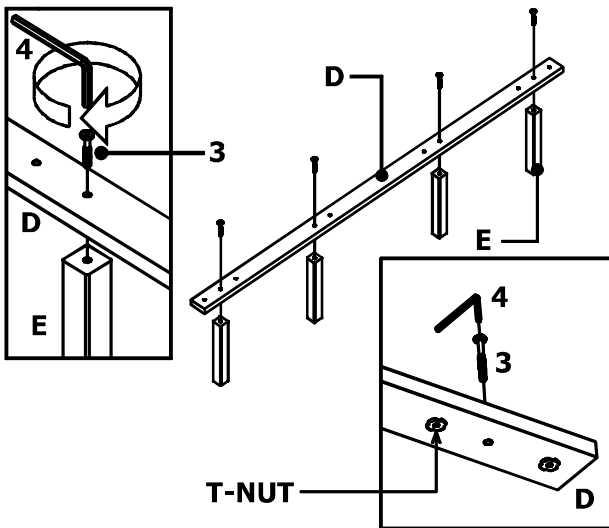**STEP 6 :**

SPREAD BED SLATS (F) ON BED FRAME. FIX 1ST, 6TH, 7TH AND 12TH BED SLATS TO BED FRAME USING WOOD SCREWS (2). USE PILOT HOLES ON SIDERAILS (C) AS REFERENCE FOR CORRECT PLACEMENT.

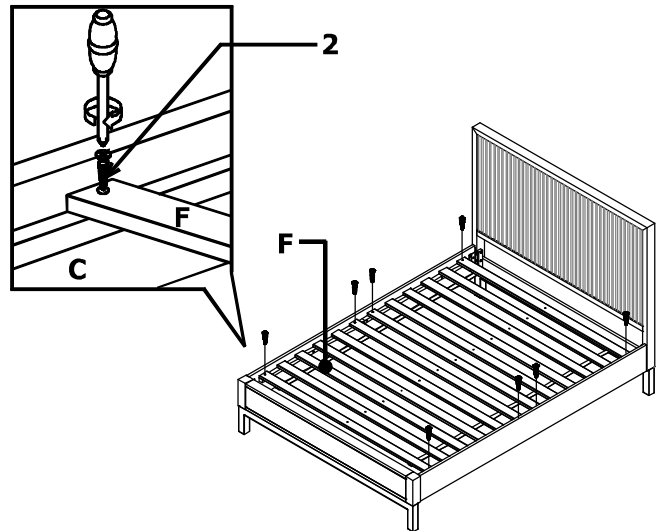**STEP 7 :**


SLIDE CENTER SLAT (D) UNDER BED SLATS (F). SLIDE ALLEN BOLTS (3) FROM TOP OF BED SLATS (F) THROUGH PRE-DRILLED HOLES ON 1ST, 2ND, 5TH, 8TH, 11TH AND 12TH BED SLATS. TIGHTEN ALLEN BOLTS (3) WITH ALLEN KEY (4) TO SECURE BED SLATS (F) TO CENTER SLAT (D).

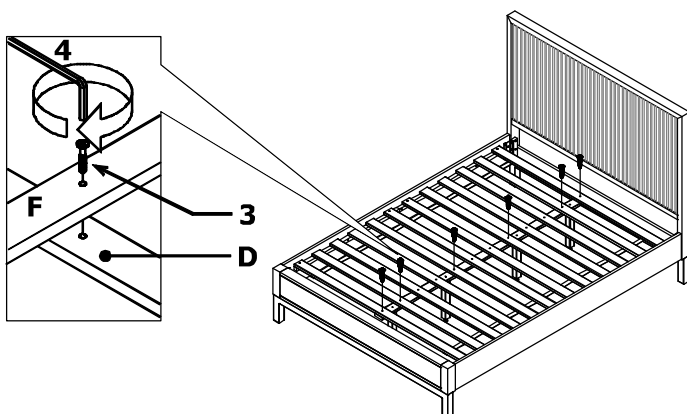**INSTRUCTIONS FOR ADJUSTING LEVELERS :**

POSITION THE BED IN YOUR ROOM
LOCATE LEVELERS UNDER EACH
CENTER LEG.

TURN COUNTER-CLOCKWISE TO
EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG
IS APPLYING EQUAL UPWARD
PRESSURE ON THE CENTER SLAT.

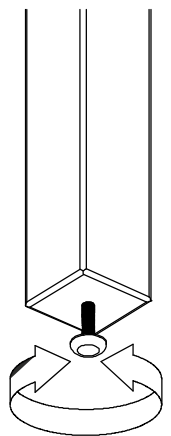**MAINTENANCE INSTRUCTIONS :**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.
DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.