

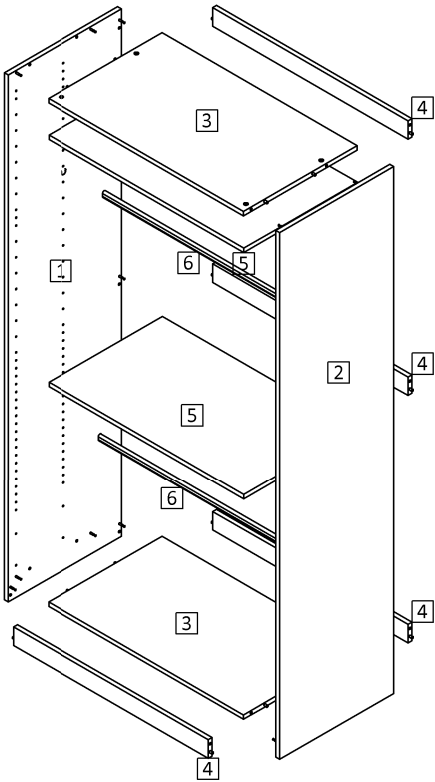





ASSEMBLY INSTRUCTIONS:
1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
4- DO NOT USE ABRASIVES SOLUTIONS;

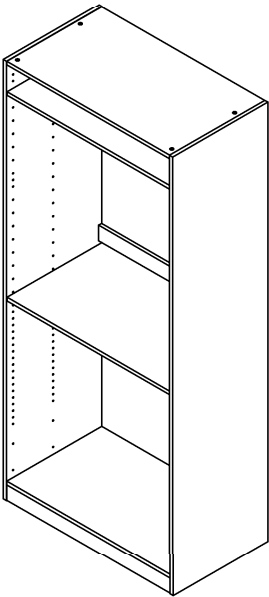

ASSEMBLY INSTRUCTIONS
BOX 01



PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	2	SHELVES
6	2	RODS






CABINET HARDWARES	16	16	16
	 CAM LOCK SCREWS	 CAM LOCK	 DOWEL 5/16 X 1 3/16

CABINET ASSEMBLY

STEP 01
PREPARATION OF THE SIDE PANELS

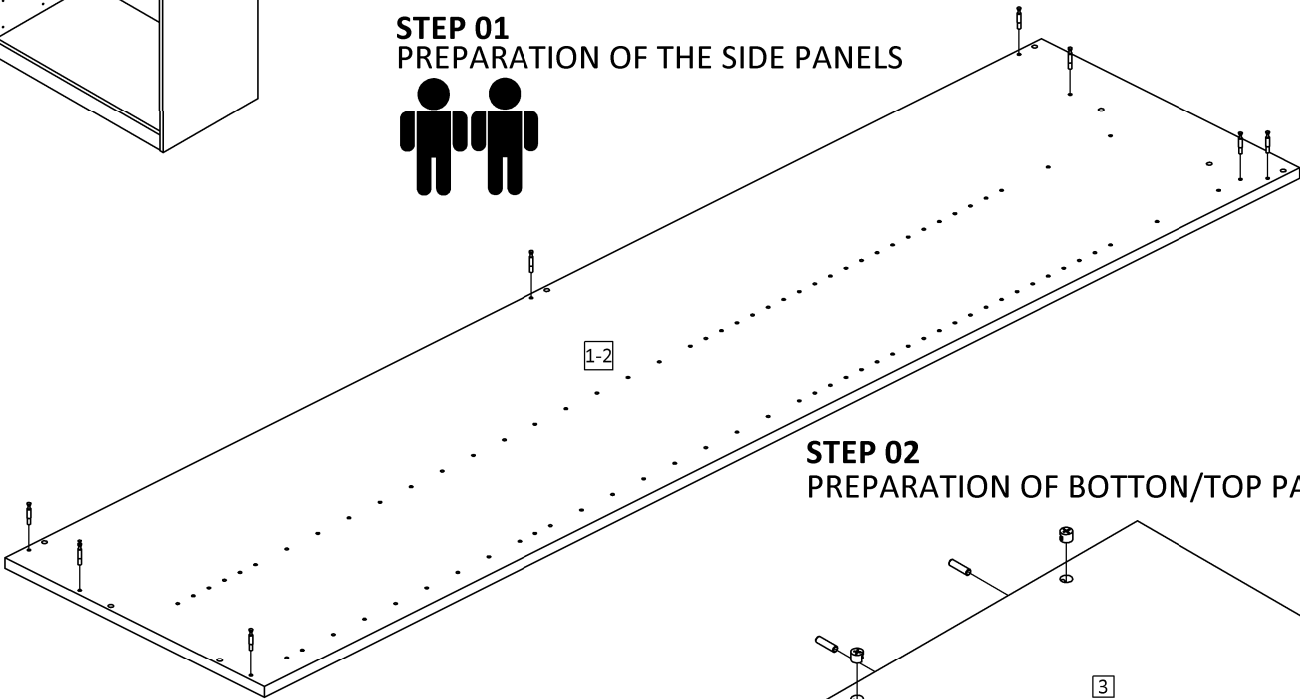
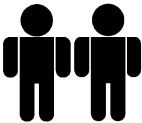


STEP 02
PREPARATION OF BOTTOM/TOP PANELS

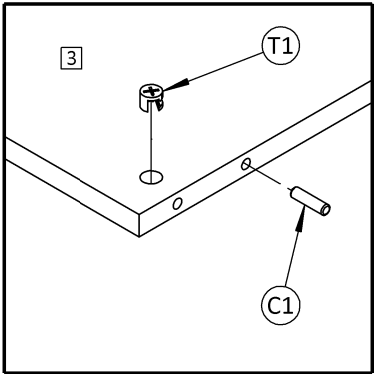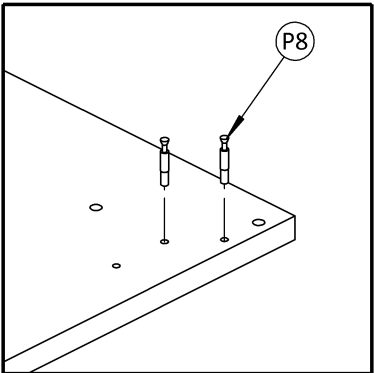
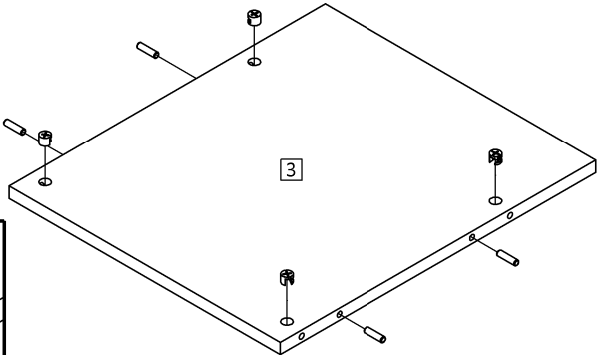


STEP 03
PREPARATION OF THE FRAMES

ASSEMBLY INSTRUCTIONS
BOX 01

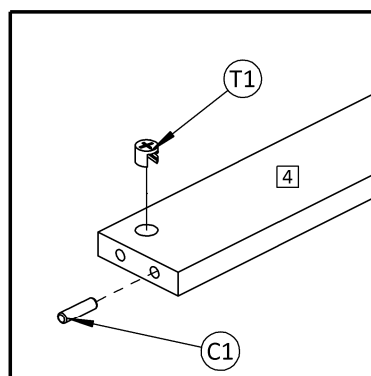
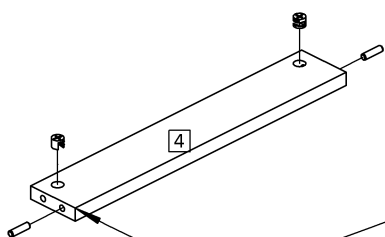


STEP 04
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

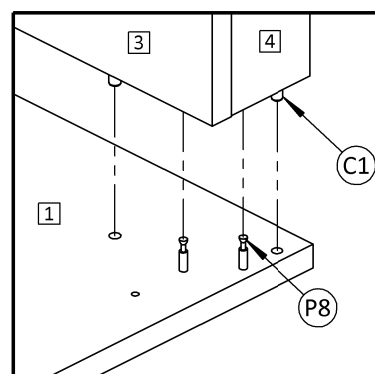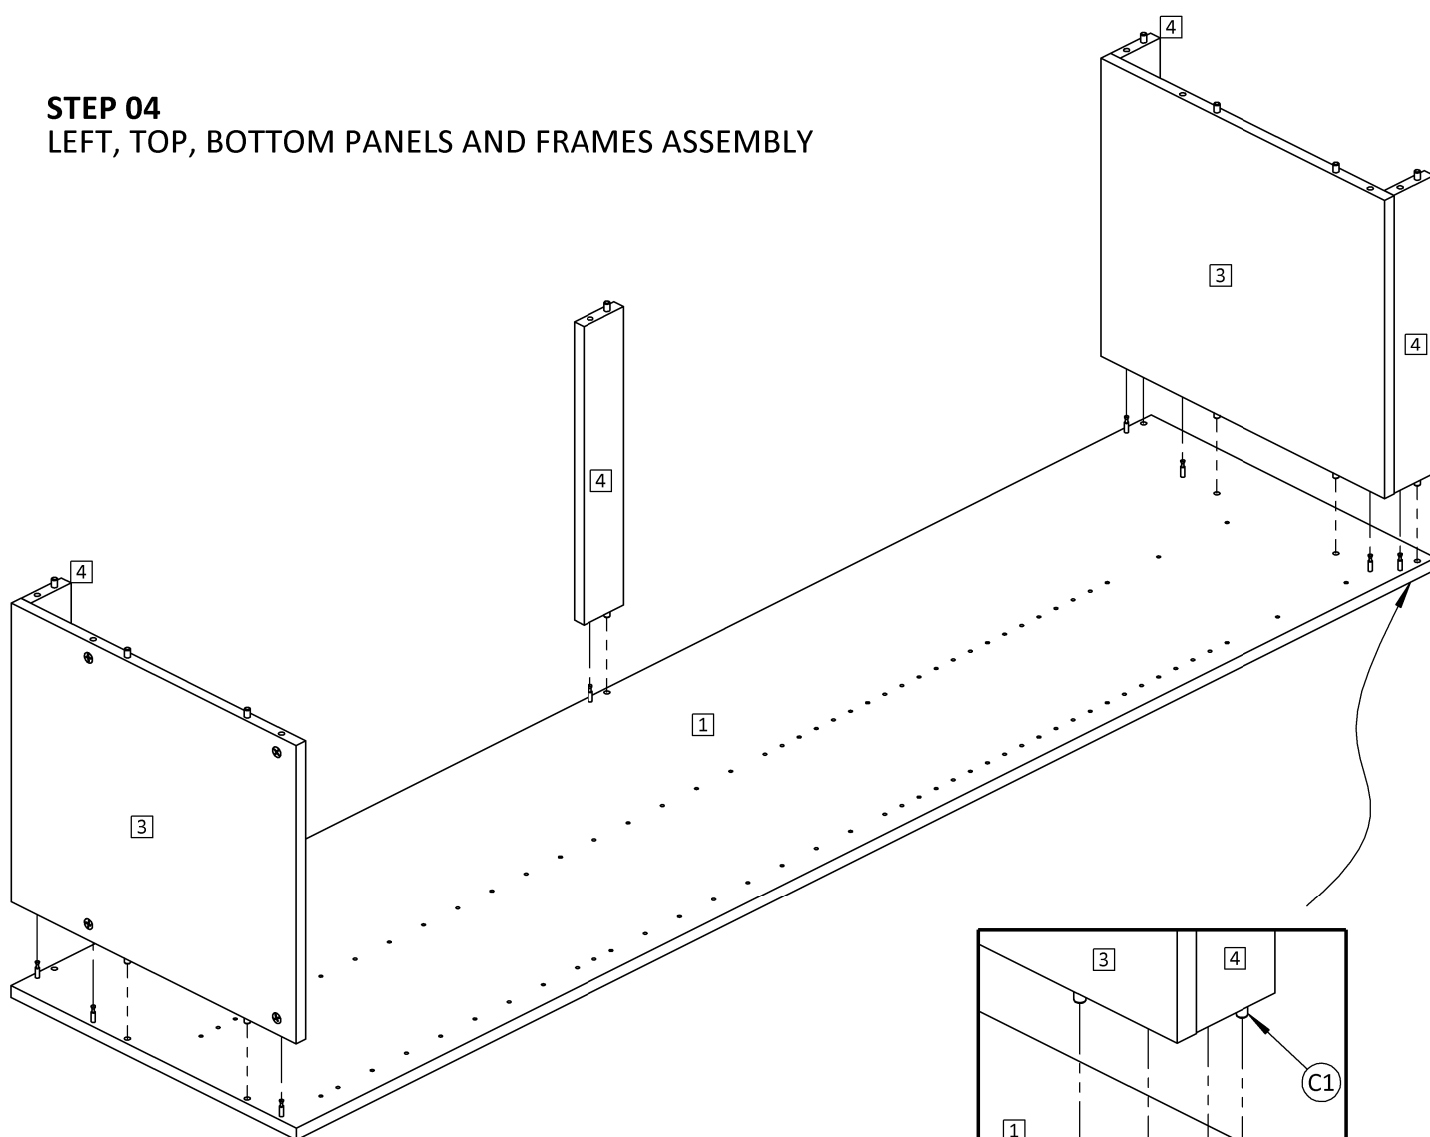

ASSEMBLY INSTRUCTIONS
BOX 01

STEP 05
RIGHT SIDE PANEL ASSEMBLY

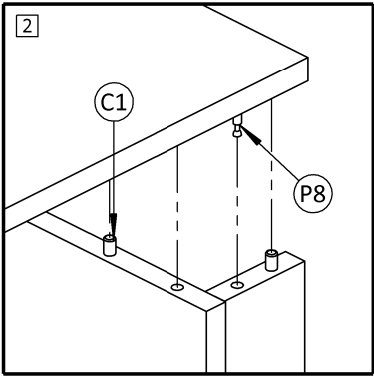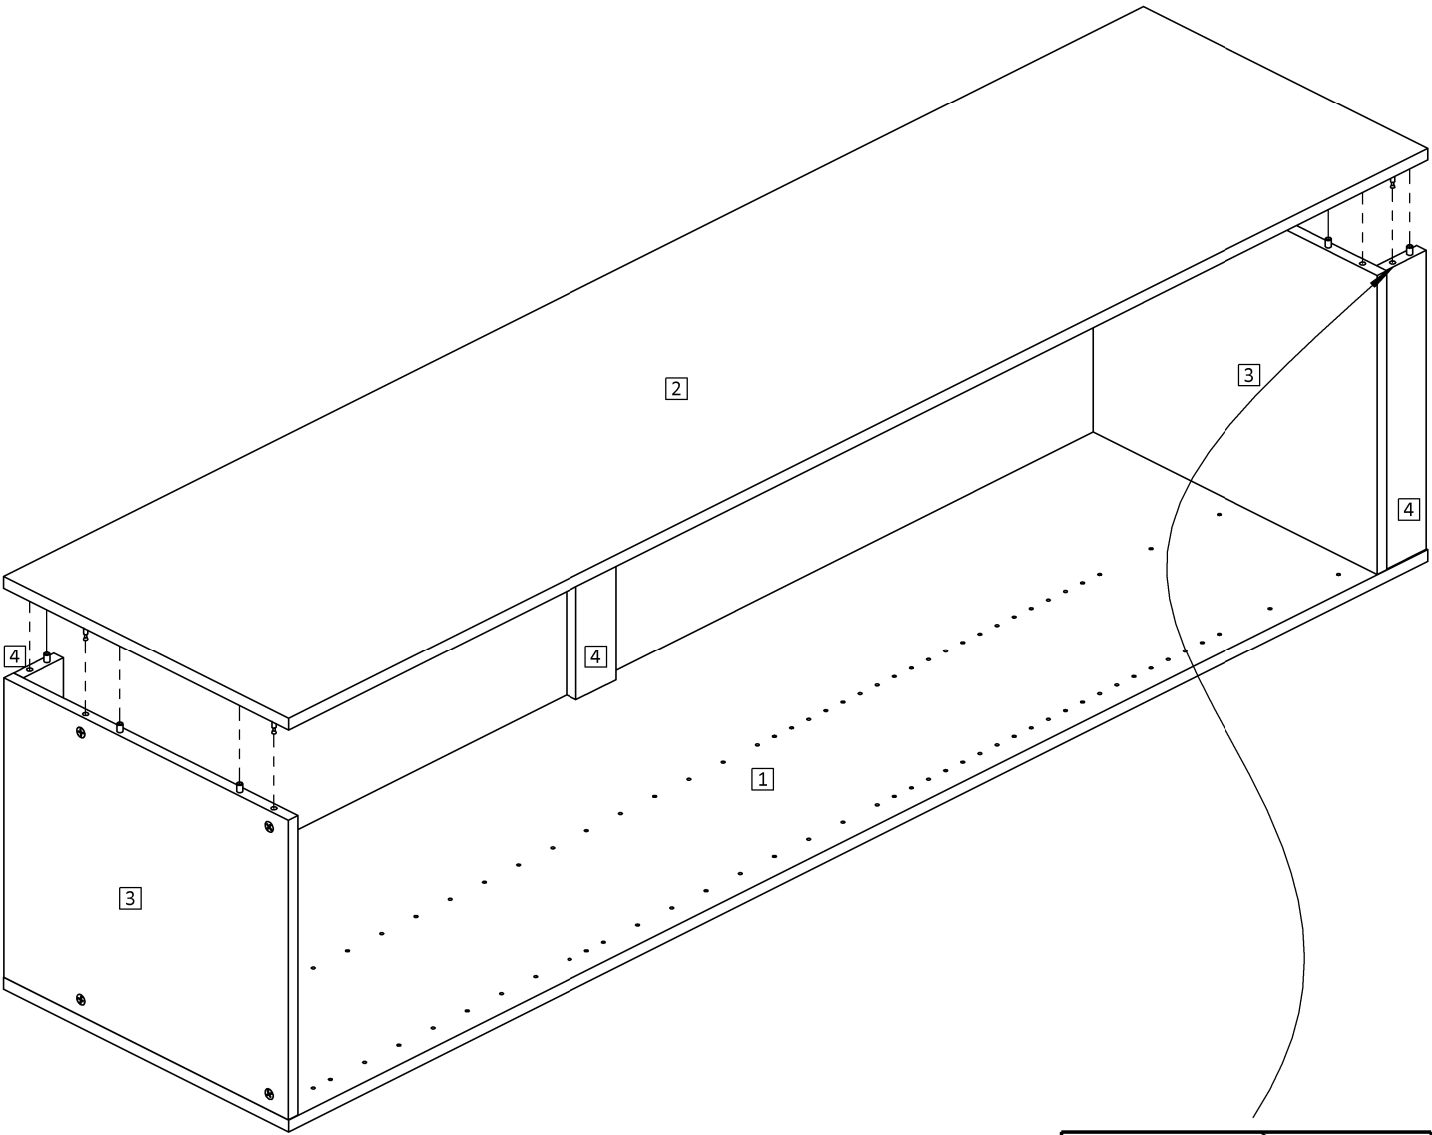

STEP 06 FIXING THE CABINET ON THE WALL




FIXING THE CABINET

DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG


ASSEMBLY INSTRUCTIONS BOX 01





IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!



FIXING HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

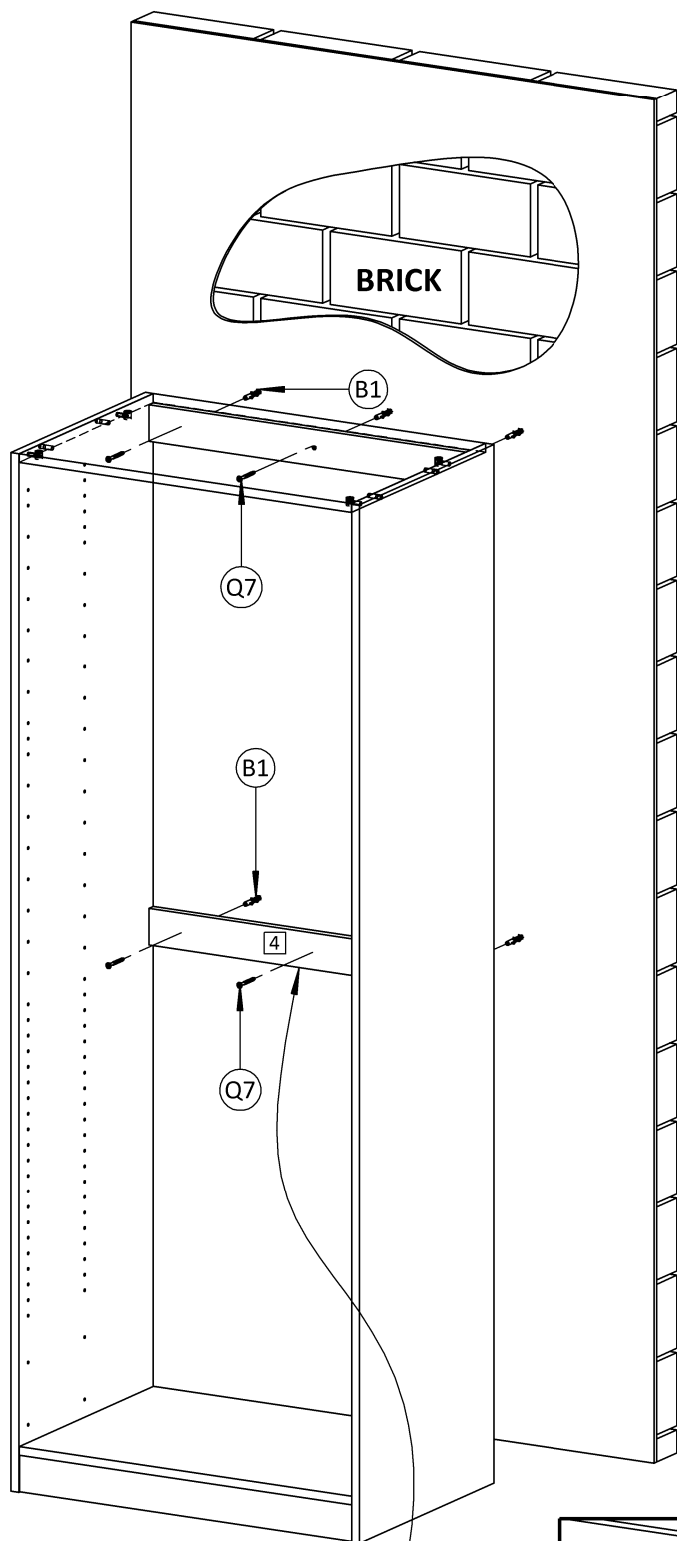



SCREW IN THE CENTER
OF THE FRAME

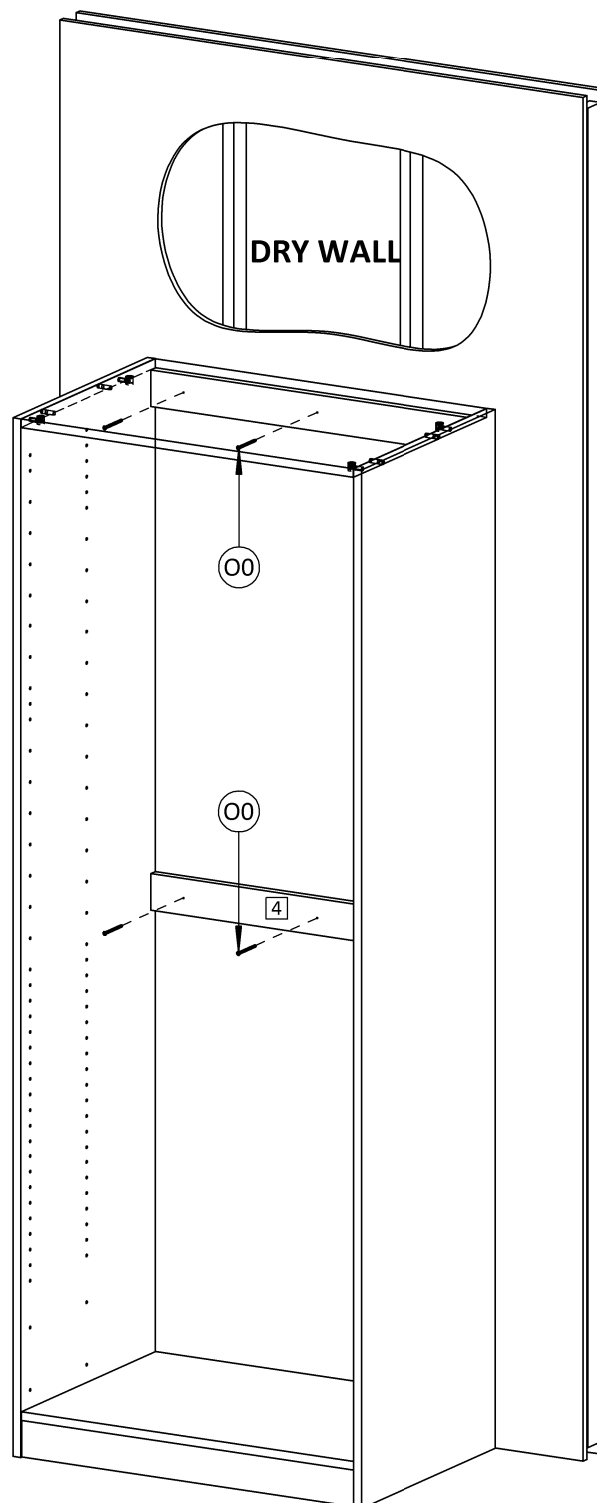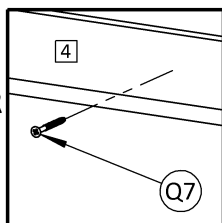

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND


STEP 07
JOINING THE CABINETS

ASSEMBLY INSTRUCTIONS
BOX 01

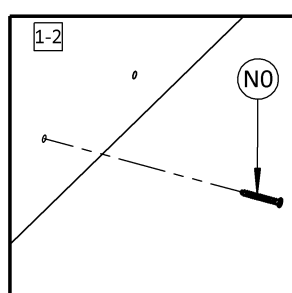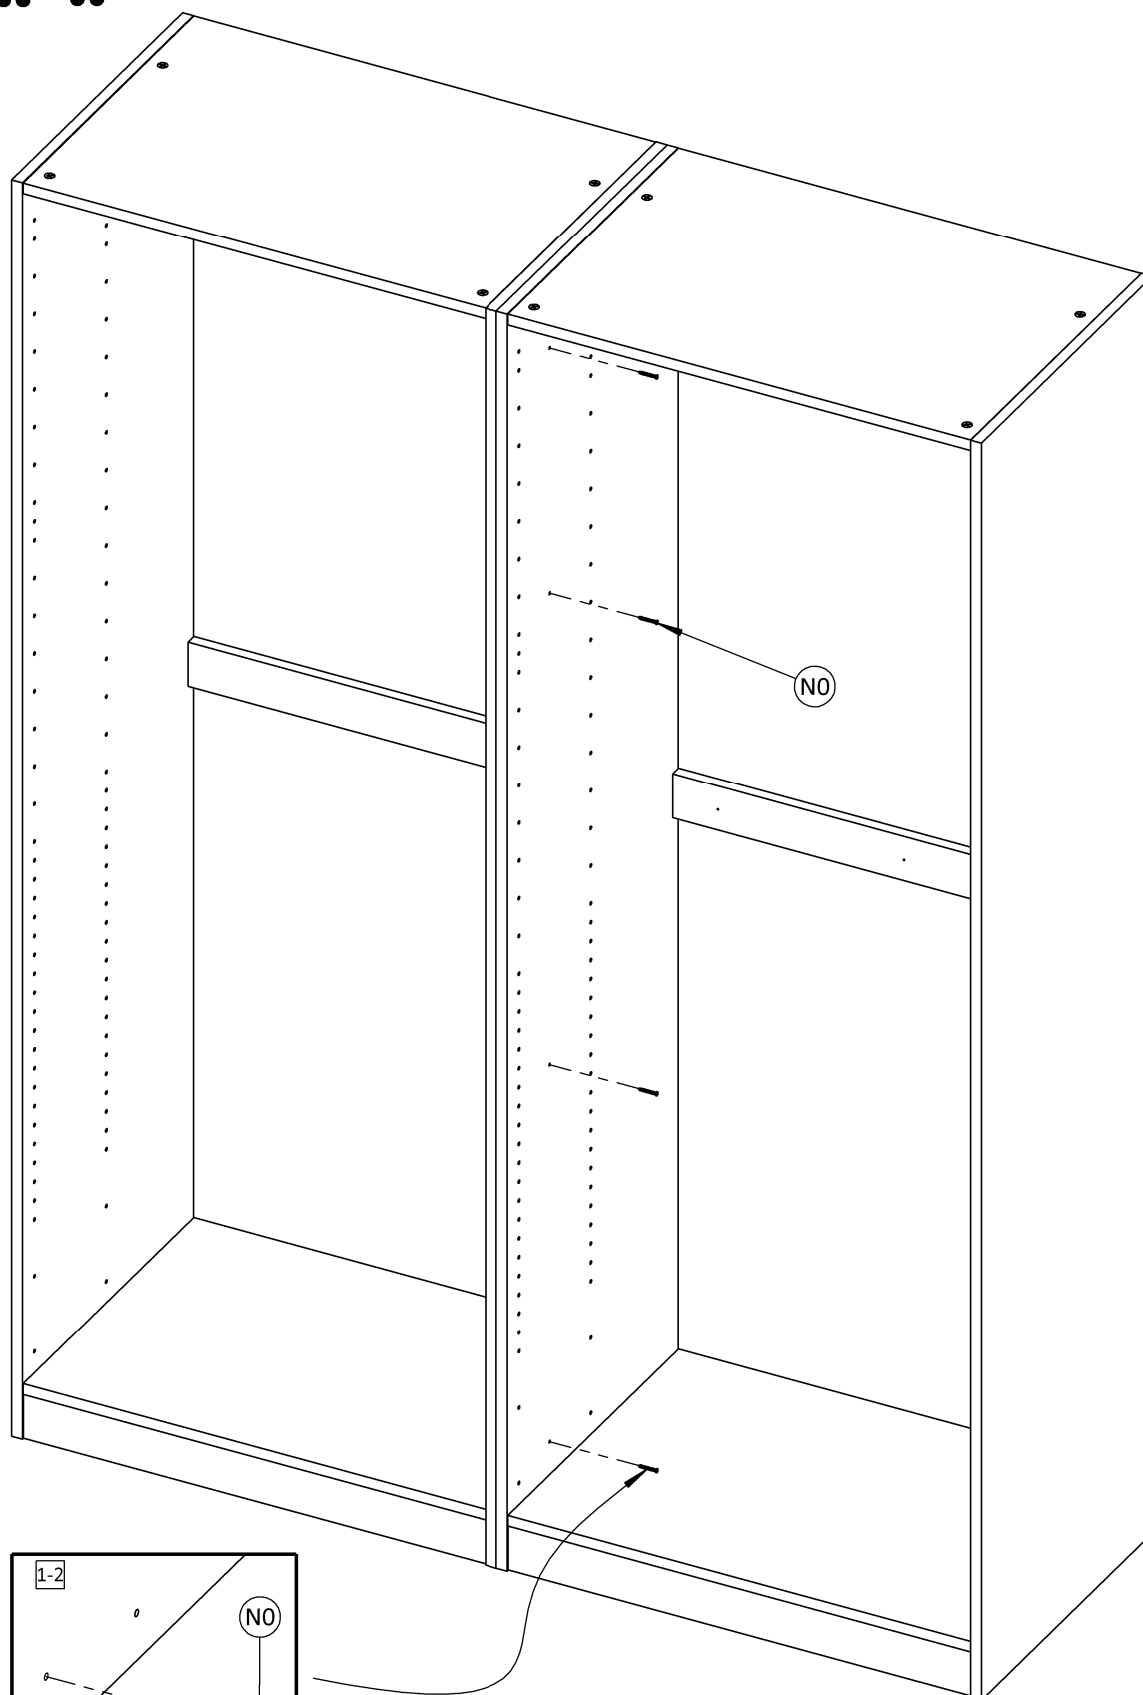


FIXING THE RODS INSIDE THE CABINET

PART NUMBER 6 - RODS


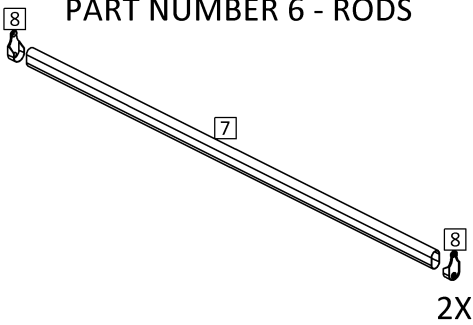


PART LIST		
PART NUMBER	QTY	DESCRIPTION
7	2	ROD
8	4	ROD SUPPORT


ASSEMBLY INSTRUCTIONS
BOX 01

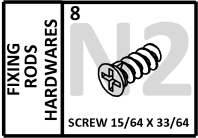




STEP 08
ROD SUPPORT FIXATION

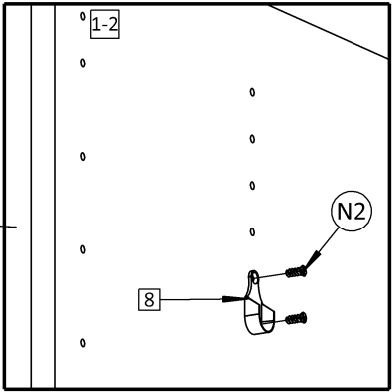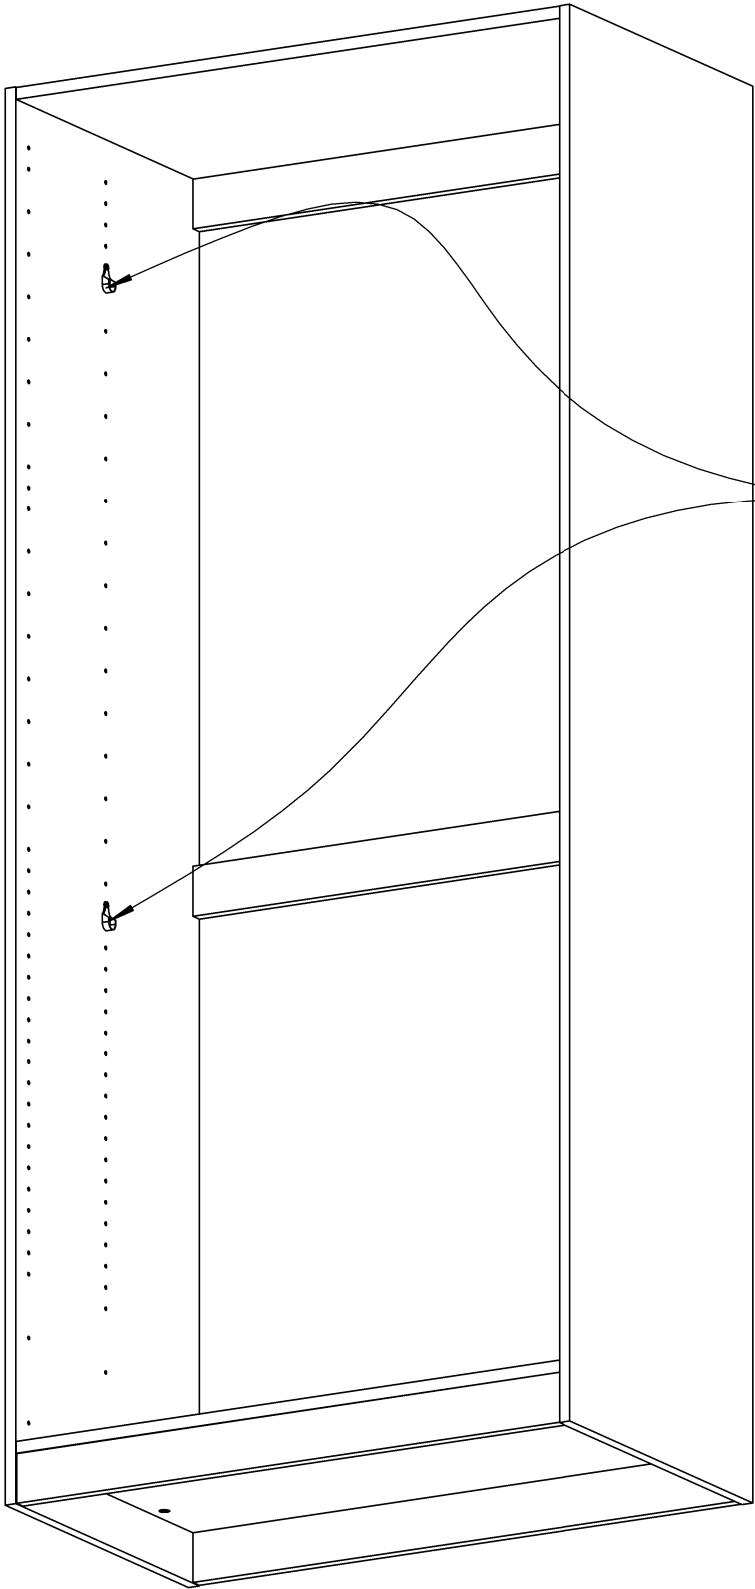

STEP 09
FIT ROD

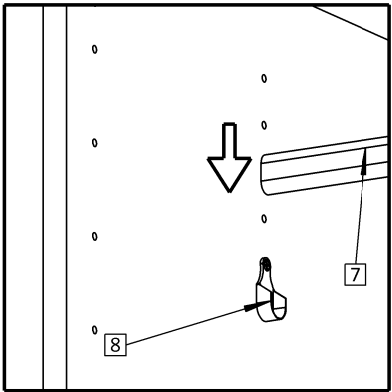

STEP 10
FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

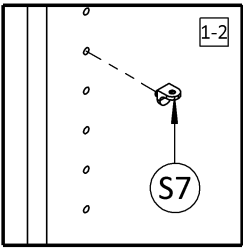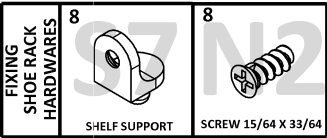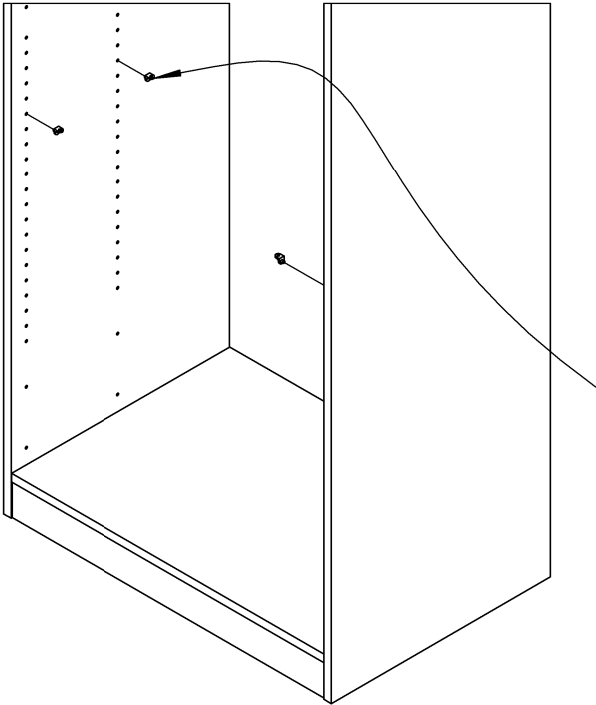

STEP 11
FIT THE SHELF ON THE CLOSET

SCREW THE SHELF
ON THE SUPPORT

