




INCEPT SECRETARY ASSEMBLY INSTRUCTIONS


OVERTURE 13608-48

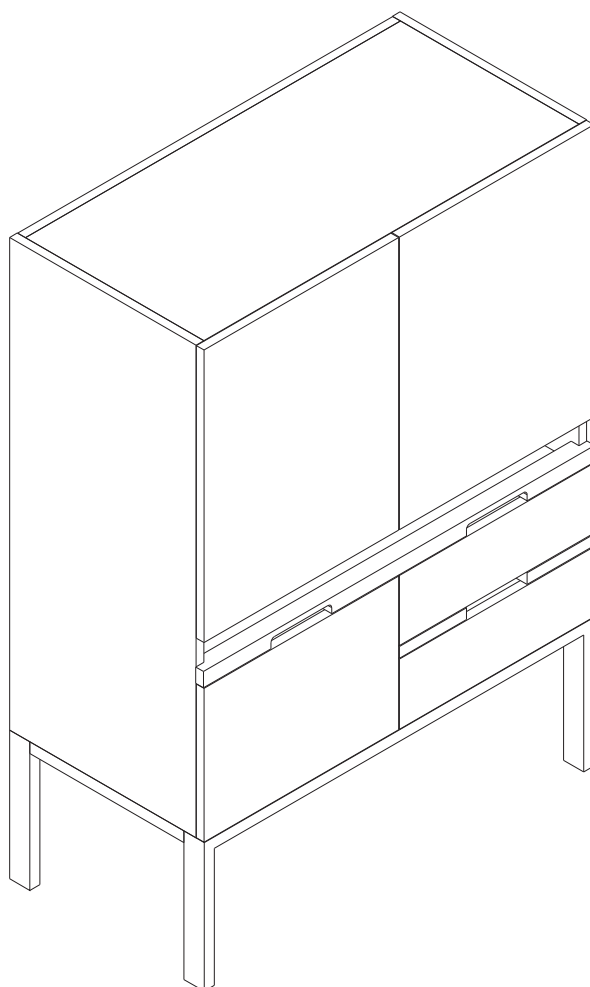

Congratulations on your purchase.

Rest assured only the finest materials, skilled artisans and modern engineering were used to carefully construct this exquisite piece.

Index

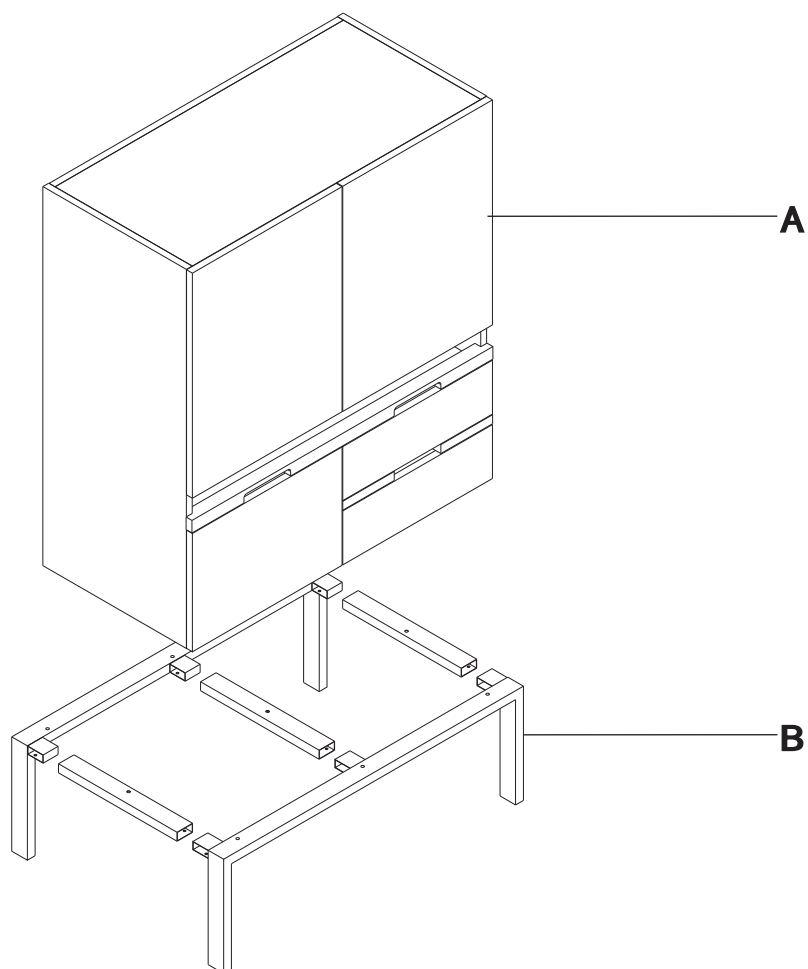


Incept Secretary Parts List

A	Secretary body	1
B	Steel frame	1

NOTE: Inspect all packing material for small parts, which may have come loose during shipment. Identify and compare all parts against the parts list.



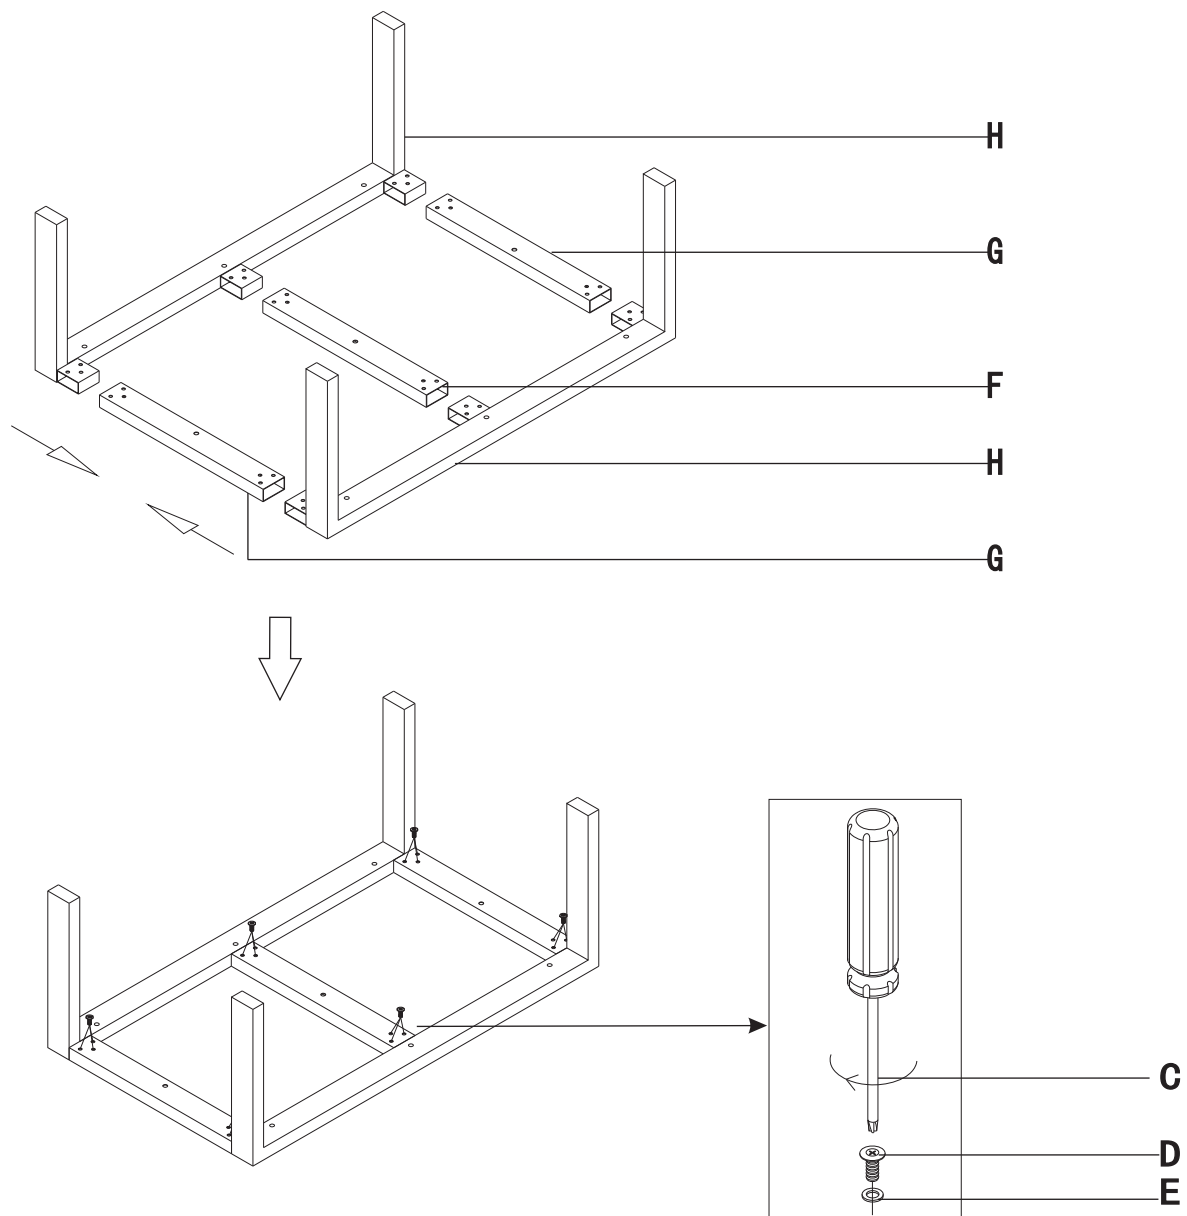



Step 1
Figure 1




Instructions:

Figure 1
1. Secure F(Crossband) and G(Crossband) to H(Support leg) by inserting E(Flat washer)+D(Bolt). The 2 outside G (Crossband) must be installed with the bolt hole closer to the center of the cabinet.

Assembly Hardware

C	Bolt Driver			1
D	Bolt		M6*12	18
E	Flat washer		6*10	27
F	Crossband		50*25*381	1
G	Crossband		50*25*381	2
H	Support leg		811*50*318	2

Step 2
Figure 1

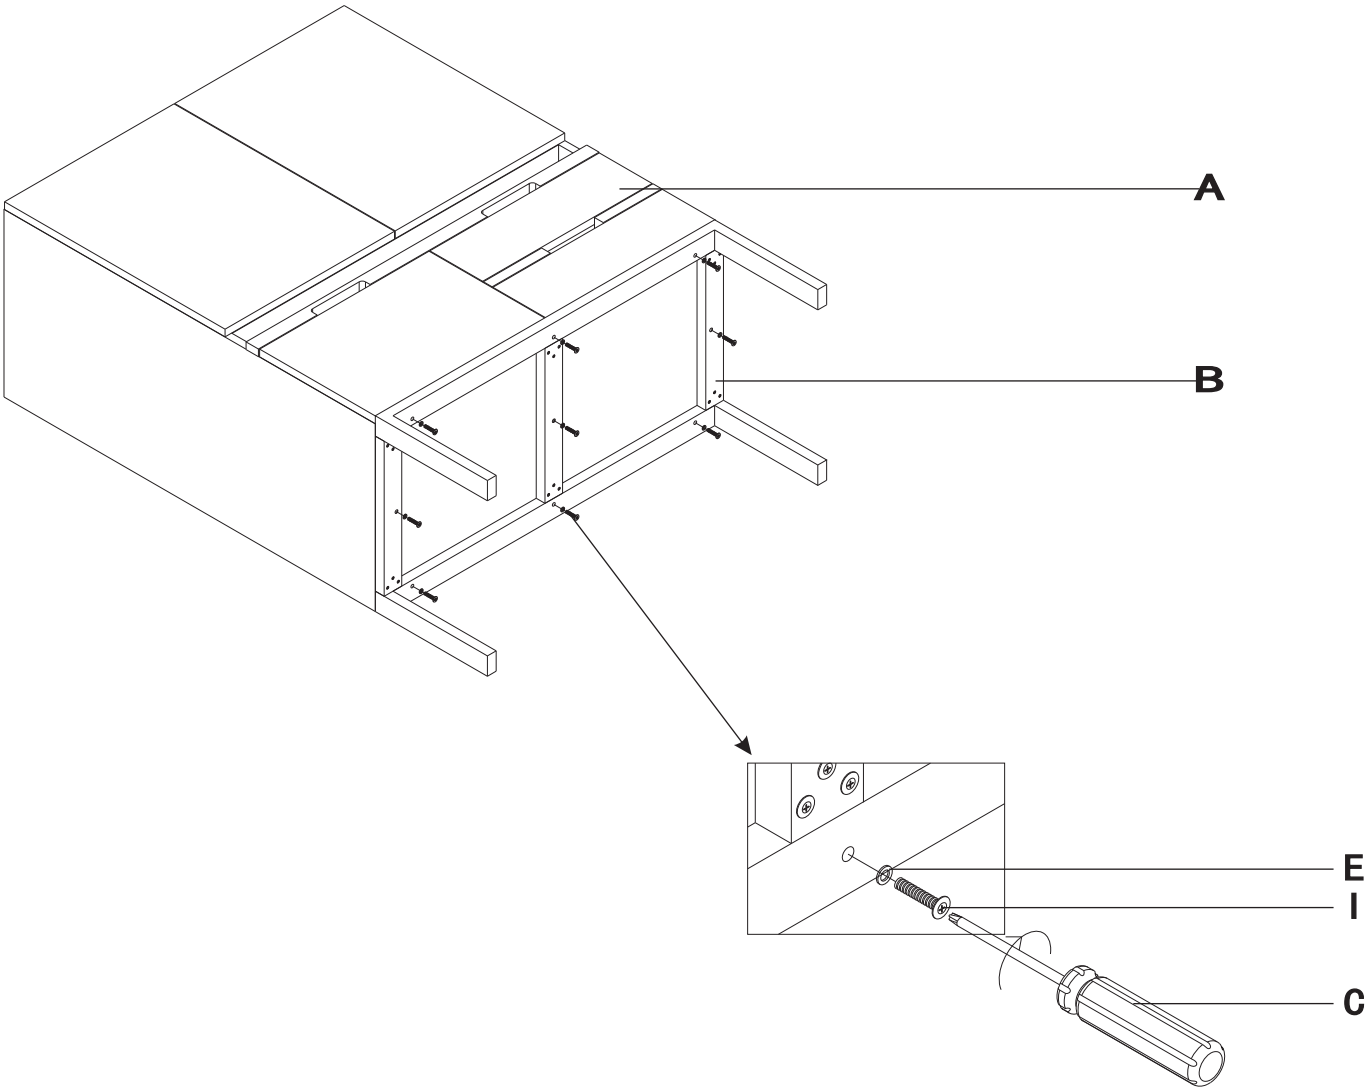

Instructions:

Figure 1
1. Secure A (Secretary body) to B (Steel frame)
by inserting E (Flat washer)+I (Bolt).

Assembly Hardware

I	Bolt		M6*35	9
---	------	---	-------	---