

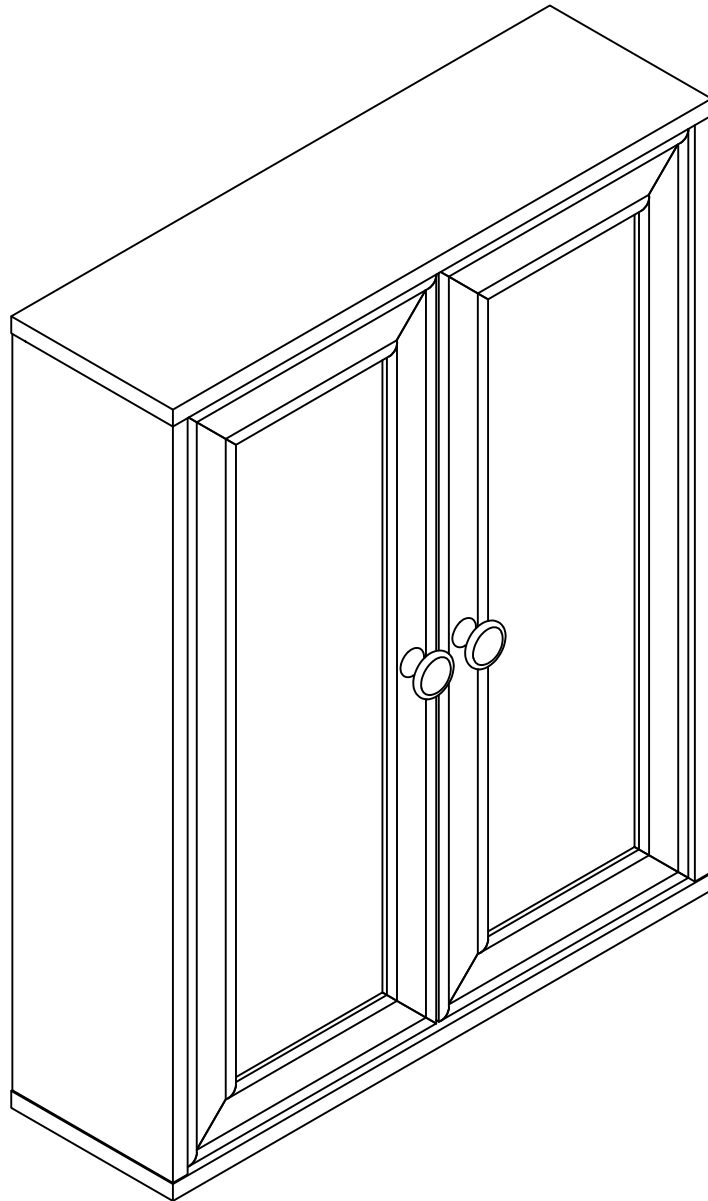


Assembly Instructions


Bathroom Cabinet

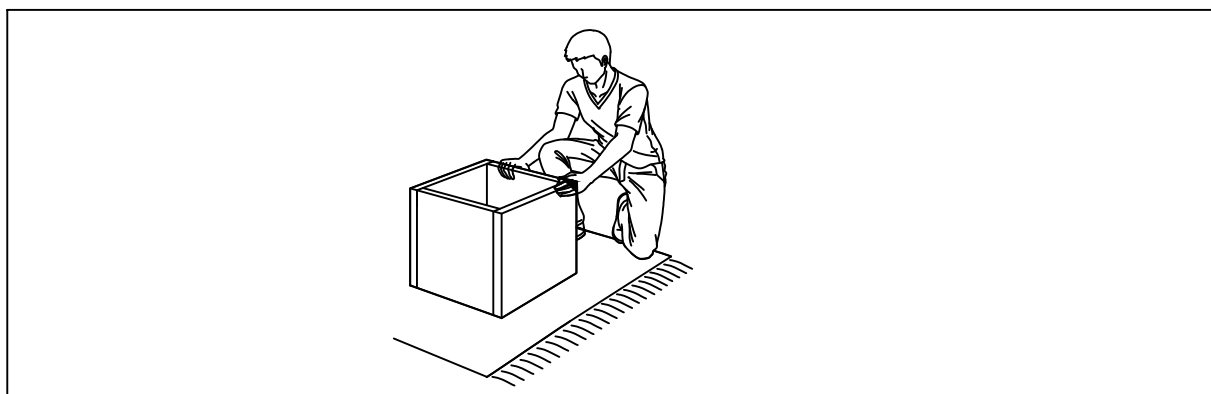

Thank you for your purchase. All components are included in a single package. Please follow the instructions step by step for a quicker and smoother installation process. If you encounter any issues, please contact our customer service team and we will be pleased to assist you.

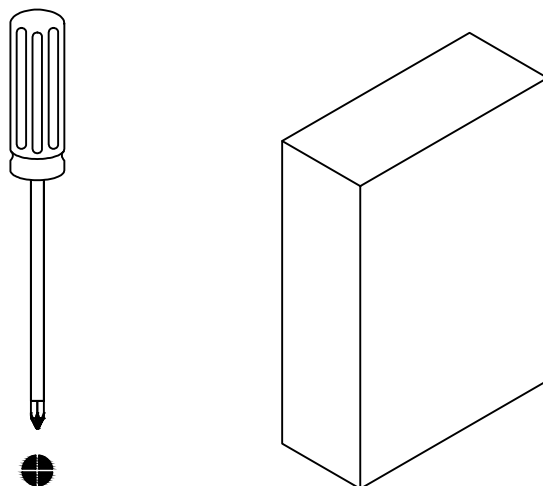

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

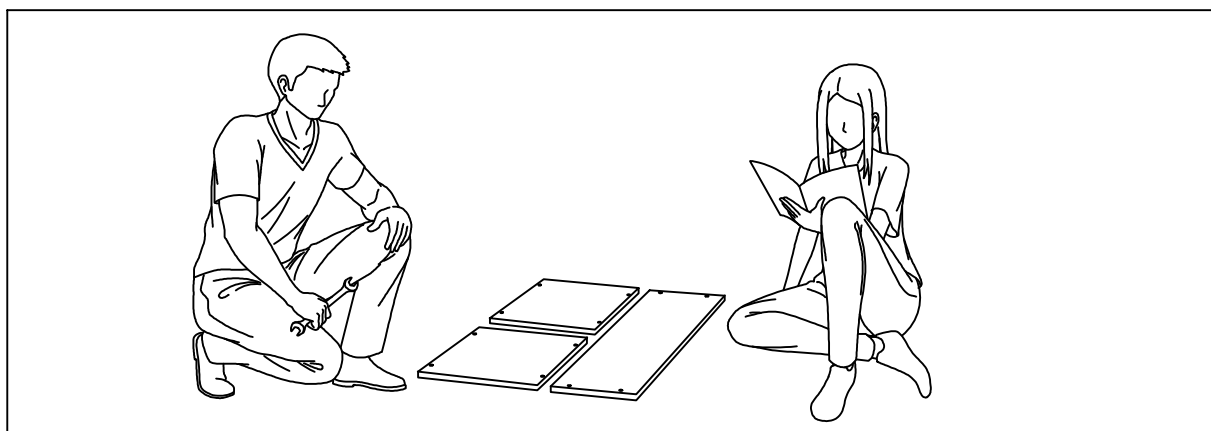

This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


✓ CHECK ALL PARTS

☐ Are you missing anything?


Double-check that all parts, hardware, and accessories listed on Pages 3-5 are accounted for. We can send any missing parts.

☐ Should we send any replacements?


If there are any flaws in the parts, we can send replacements!

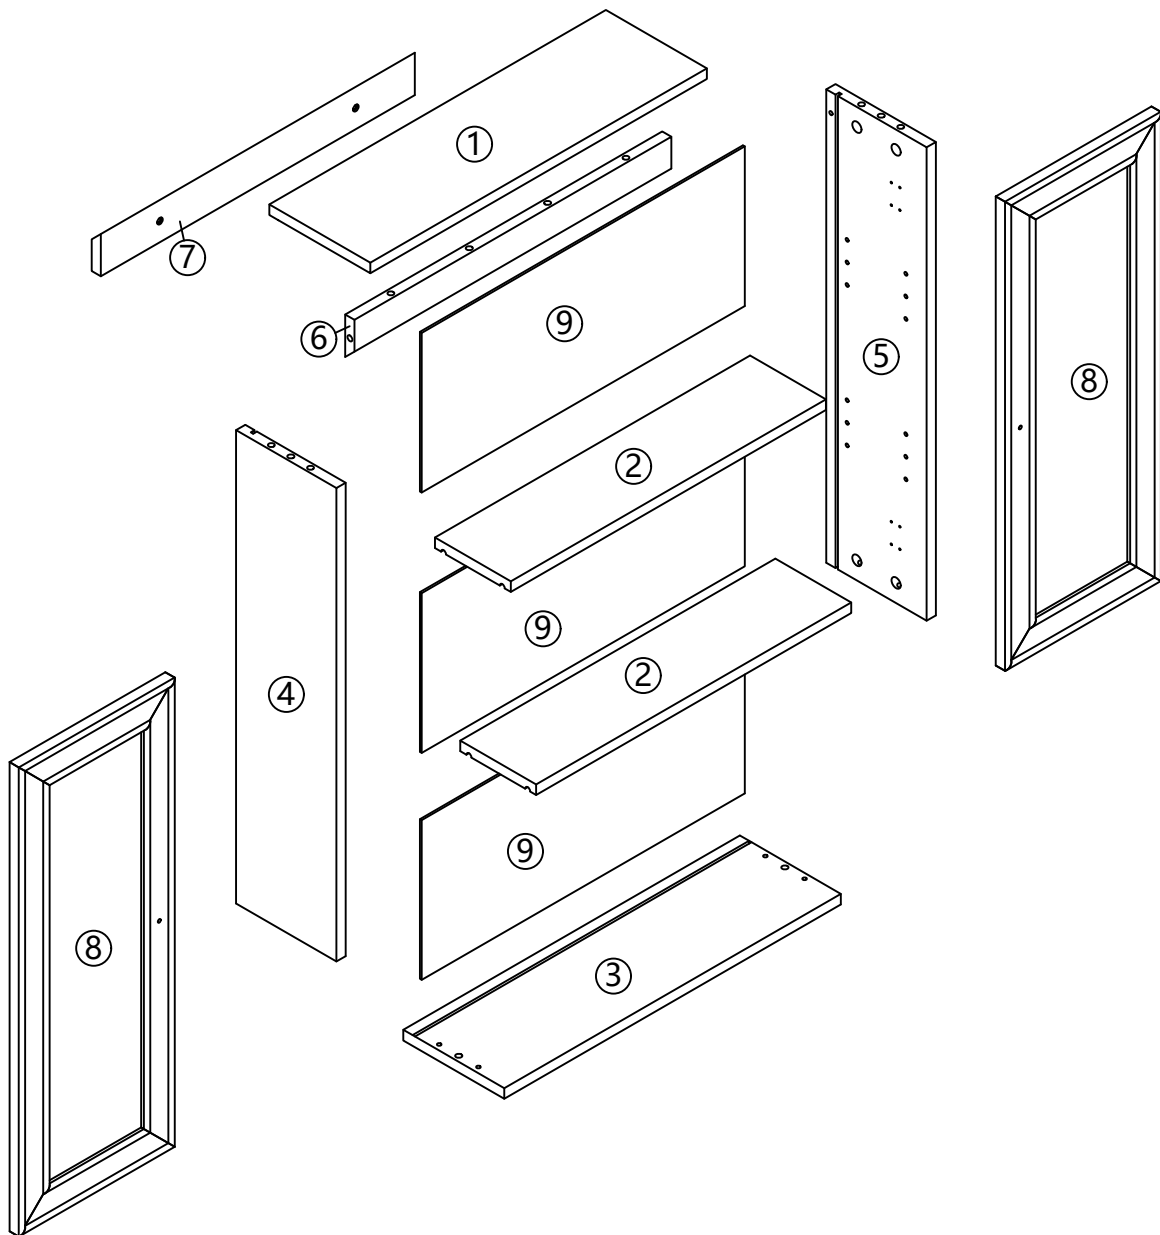


Not actual size

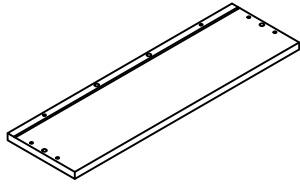


① X1

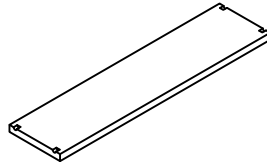


② X2

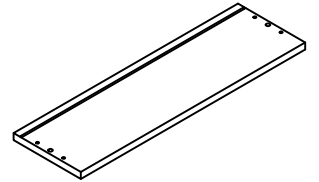


③ X1

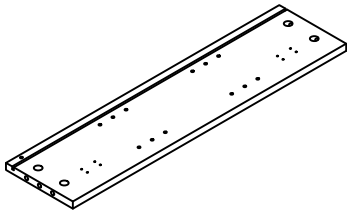


④ X1

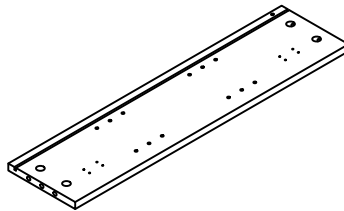


⑤ X1

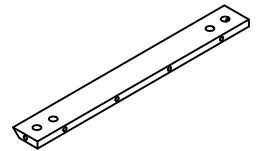


⑥ X1

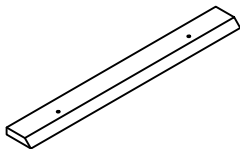

⑦ X1




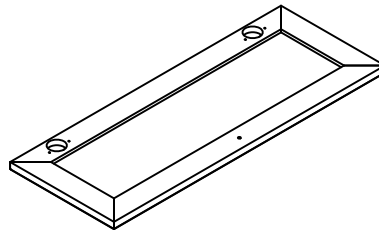


⑧ X2

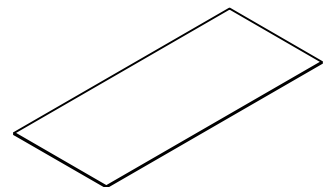


⑨ X3








Ⓐ X12+1  ø15*9.5	Ⓑ X12+1  ø6.5*35	Ⓒ X6+1  ø8*30	Ⓓ X24+2  ø3.5*14
Ⓔ X2+1  ø4*19	Ⓕ X2  ø37(ø22)*28	Ⓖ X4  ø35	Ⓗ X8  ø5*16
Ⓘ X8+1  ø3*14	Ⓙ X2 	Ⓚ X1  ø4*104	Ⓛ X1set 

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

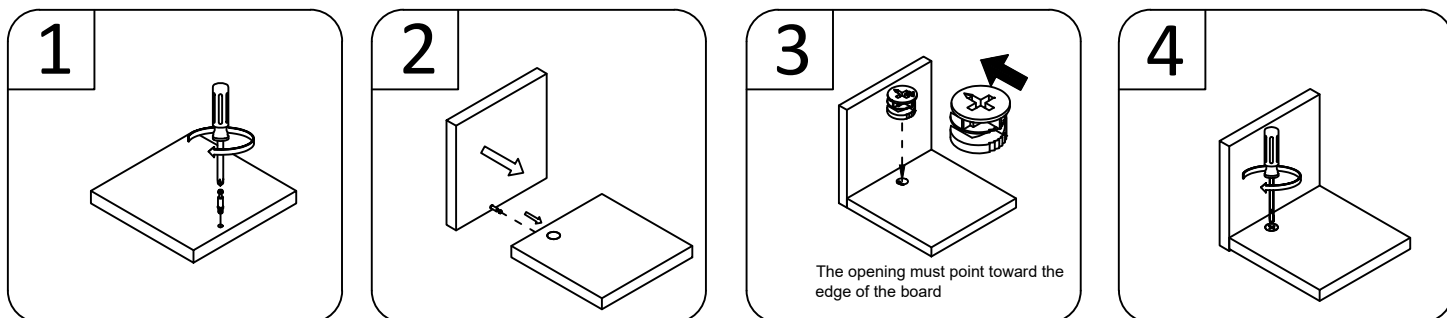

STEP 1


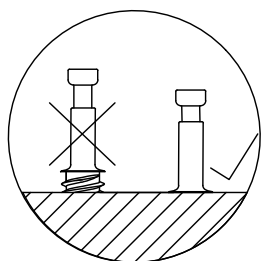
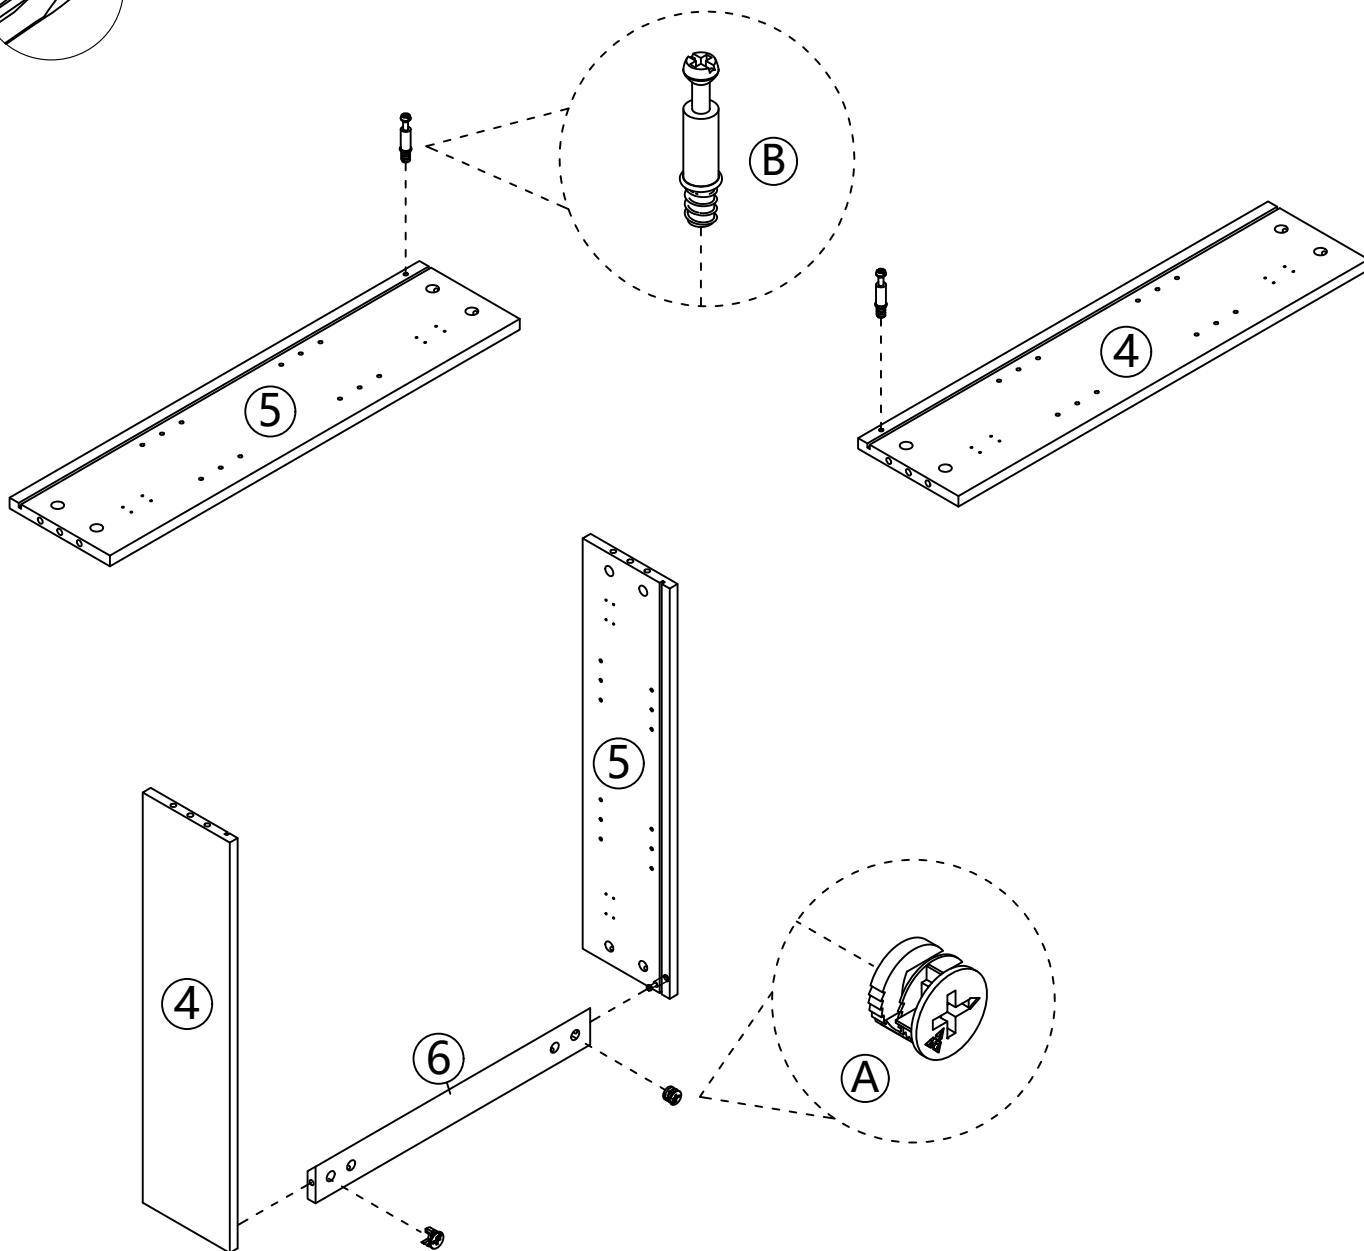
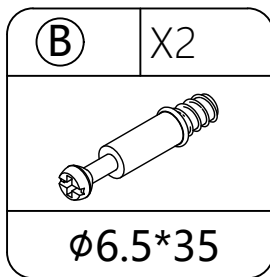
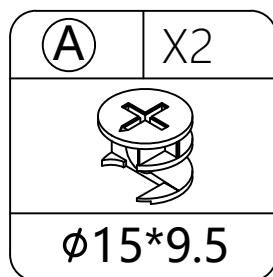
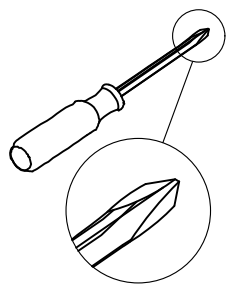


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

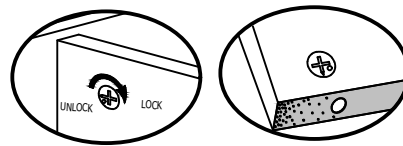


Proper orientation of CAM LOCK

STEP 2

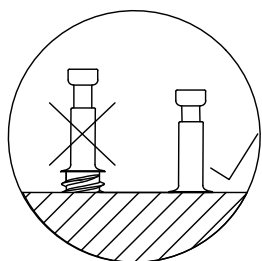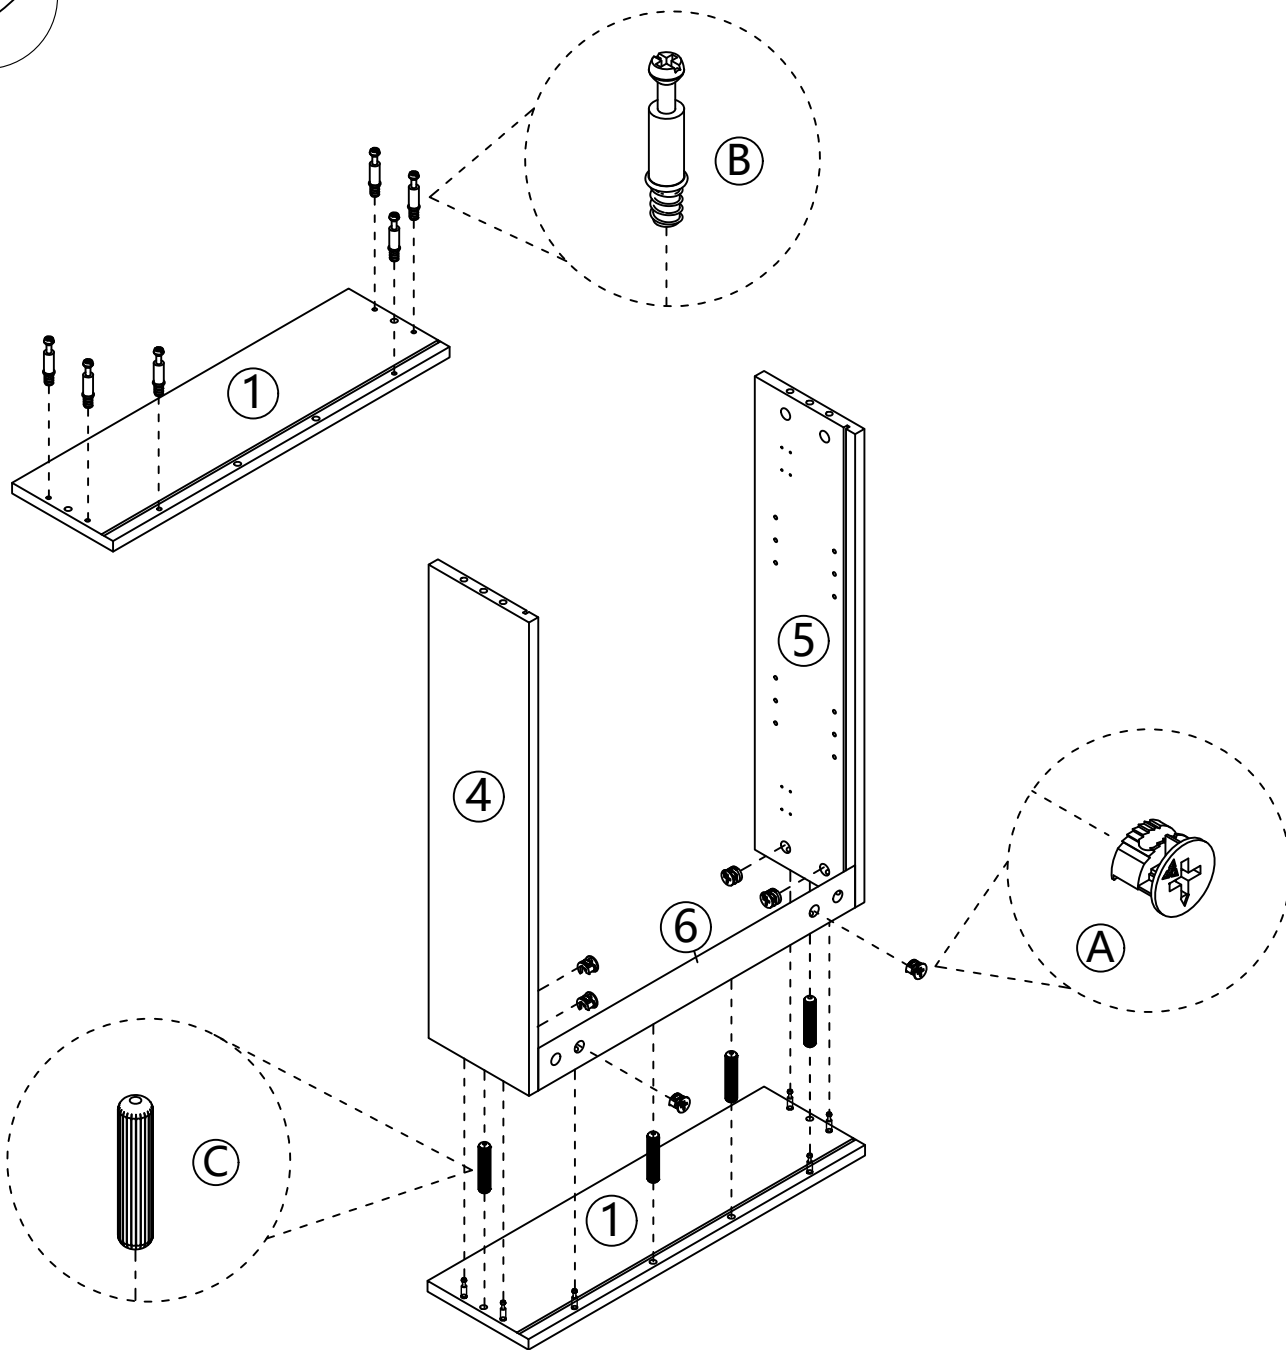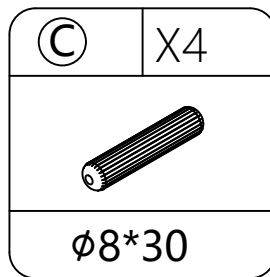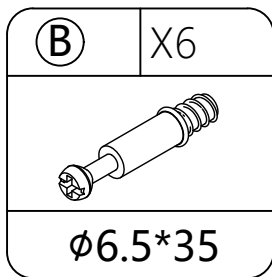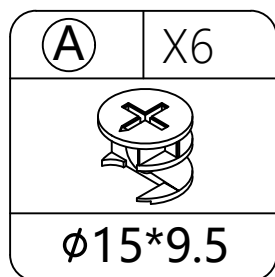
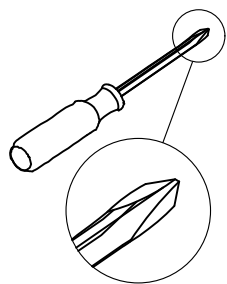


Insert the cam bolt into the hole first, then insert the cam lock and lock it.






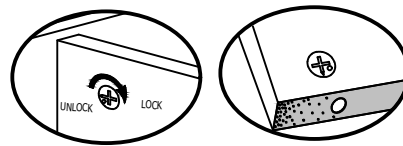


Proper orientation of CAM LOCK


STEP 3

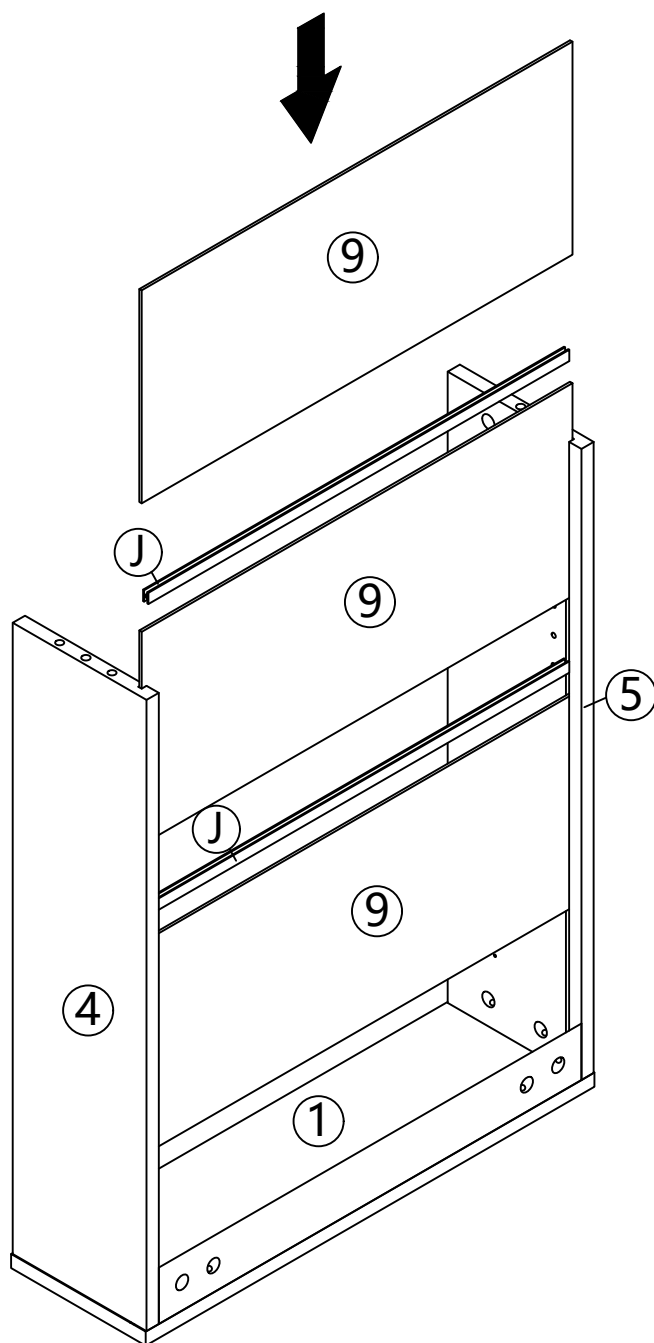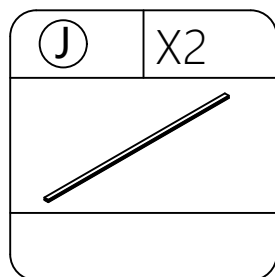

STEP 4

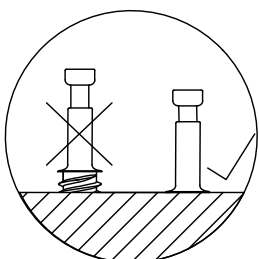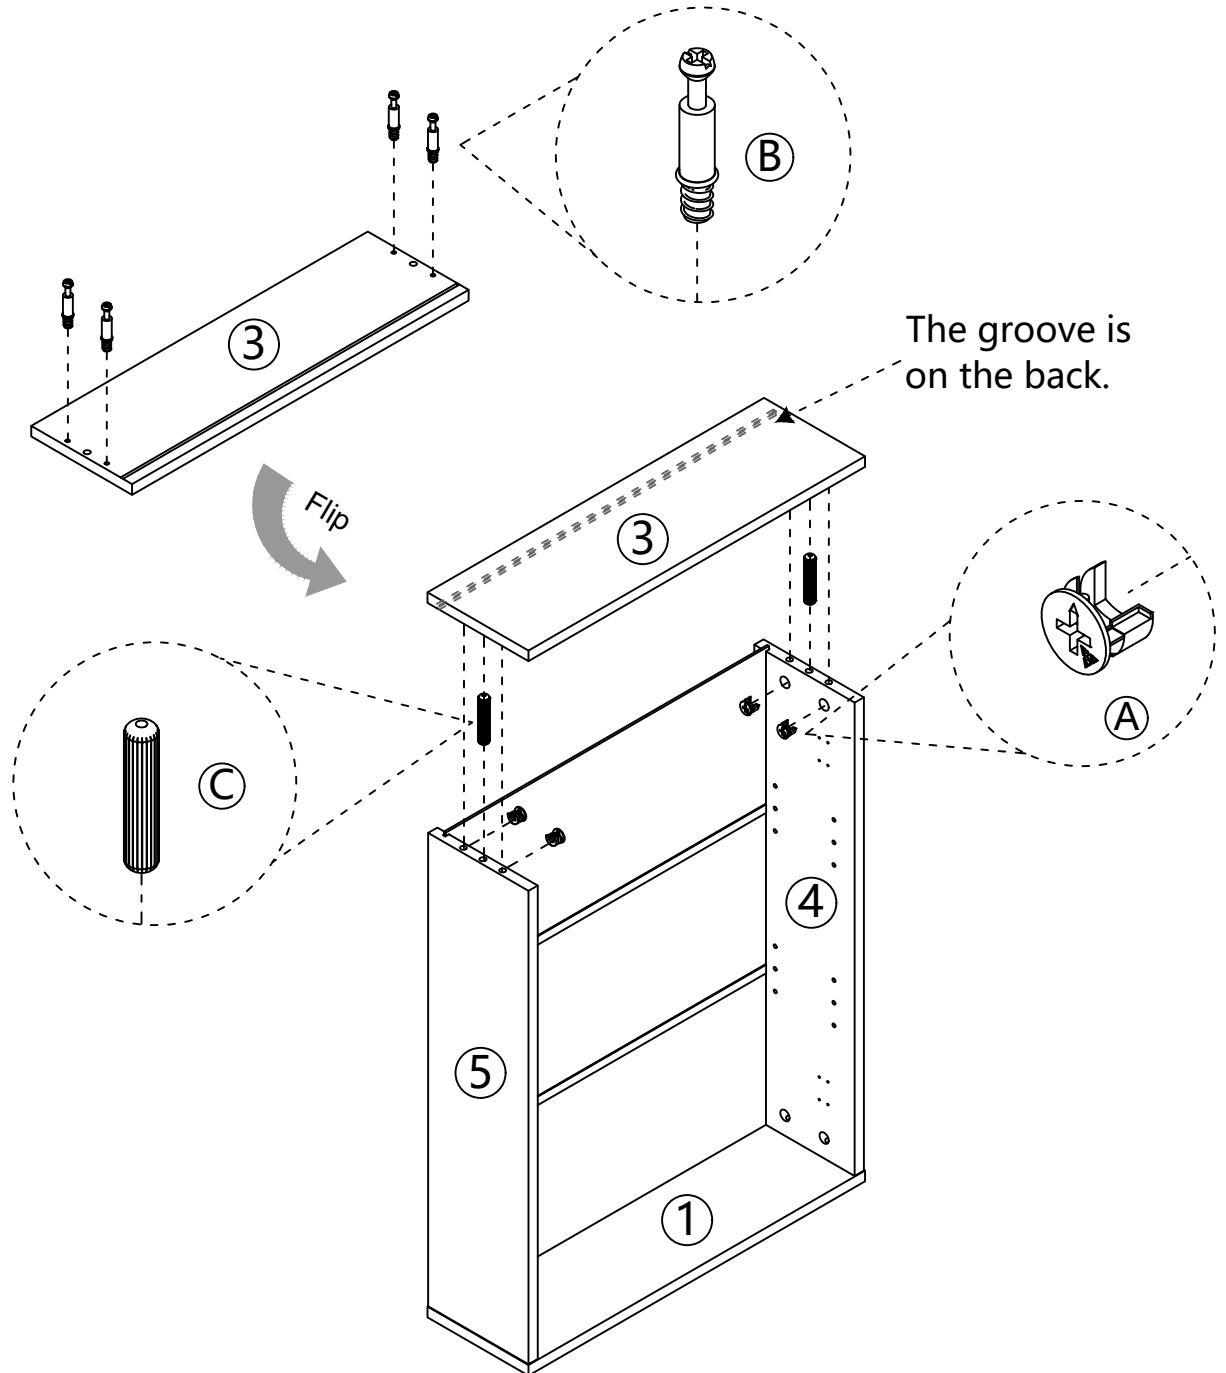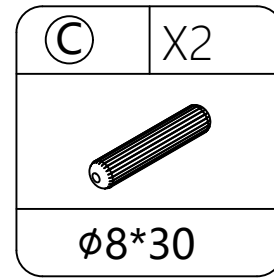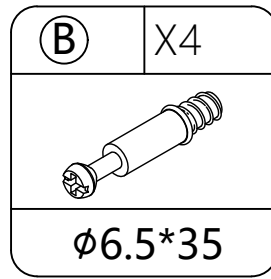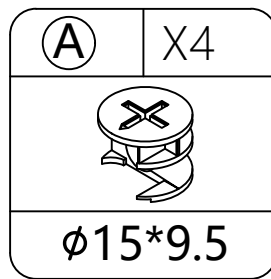
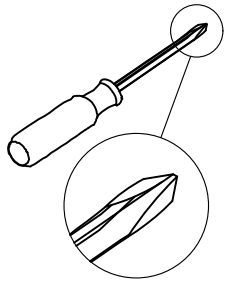


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

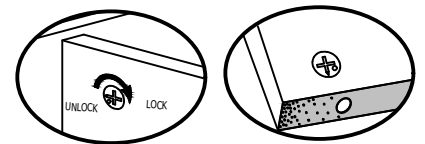


Proper orientation of CAM LOCK


STEP 5

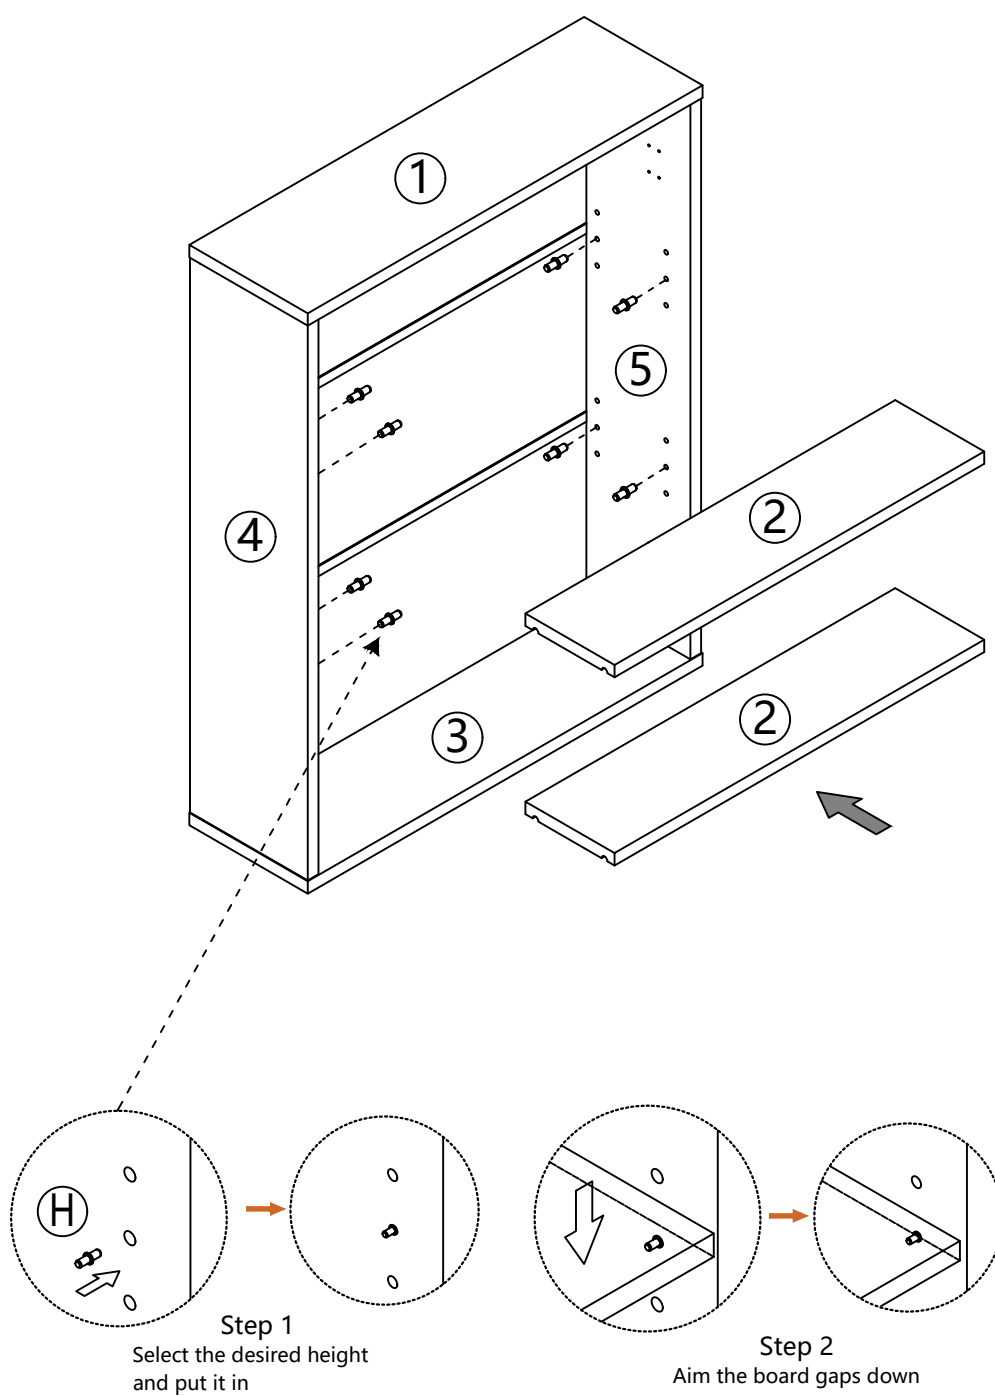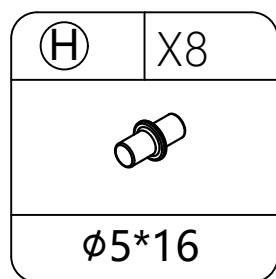

STEP 6

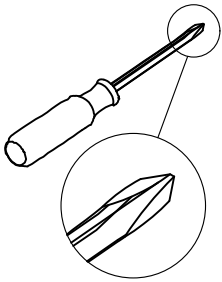


Ⓓ	X8	Ⓔ	X2	Ⓕ	X2	Ⓖ	X4
							
ø3.5*14		ø4*19		ø37*28		ø35	

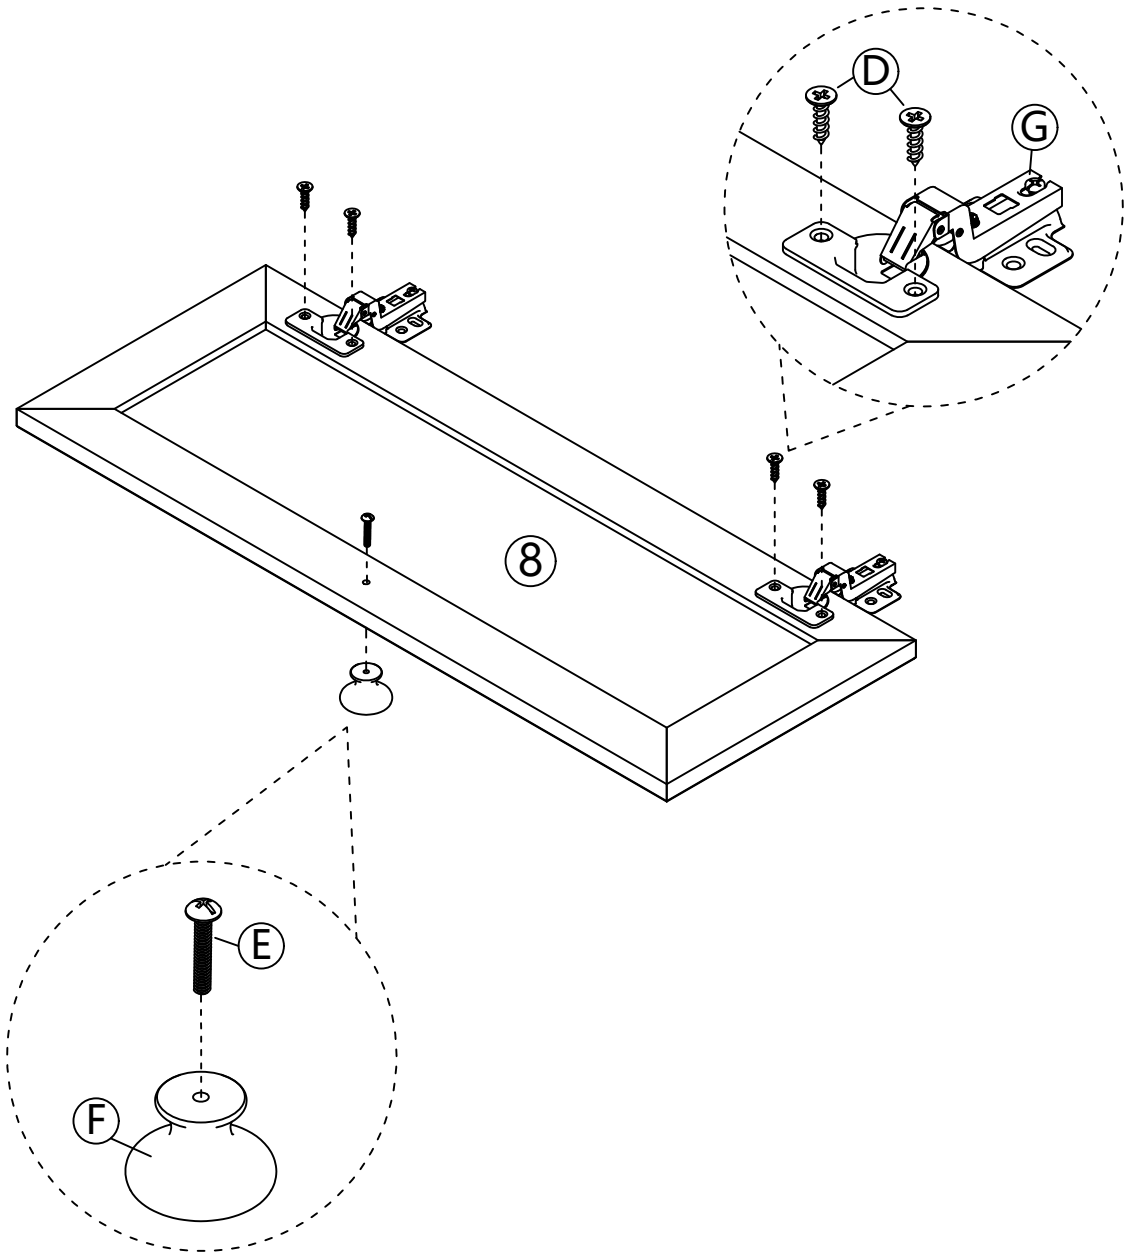


X2



STEP 7

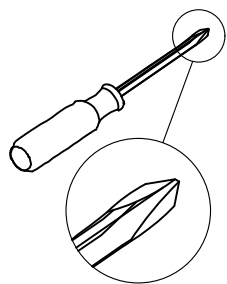

Ⓓ	X16
	
ø3.5*14	

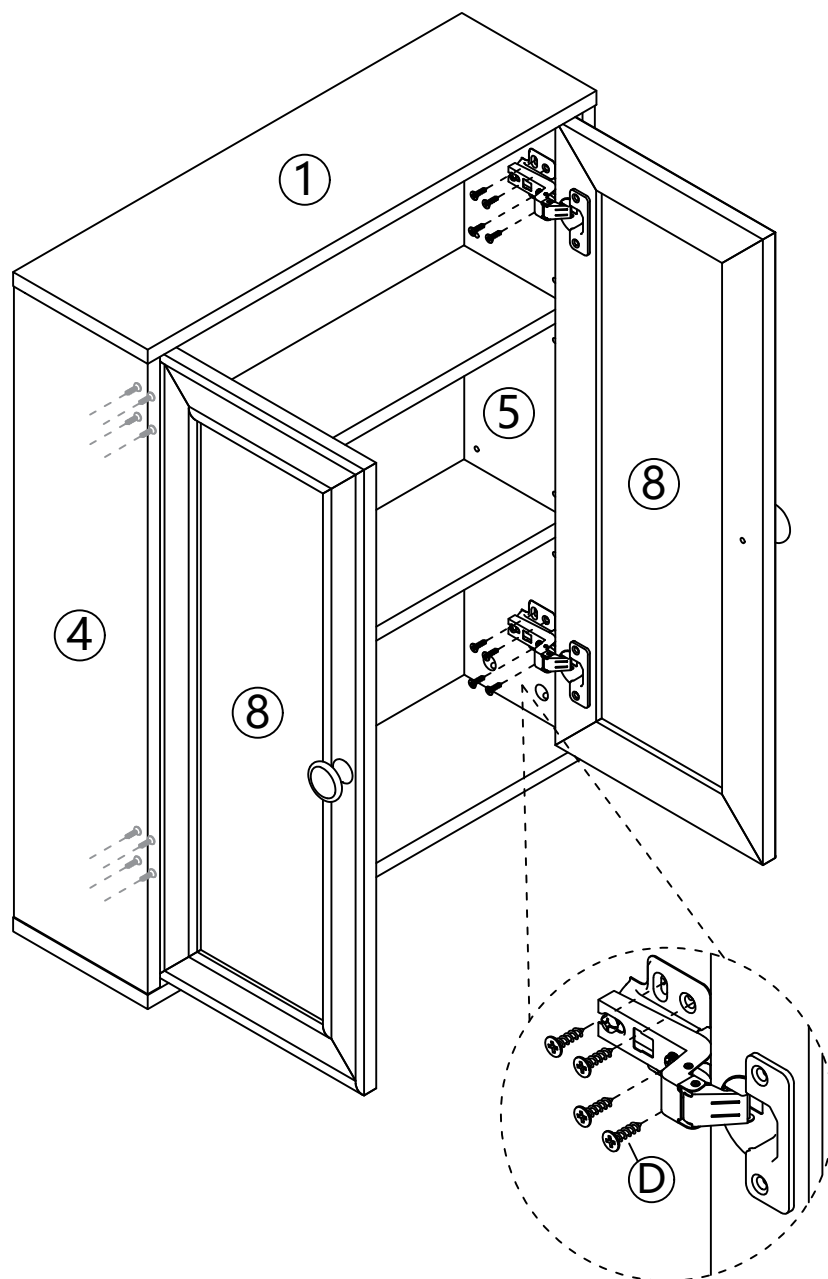


STEP 8

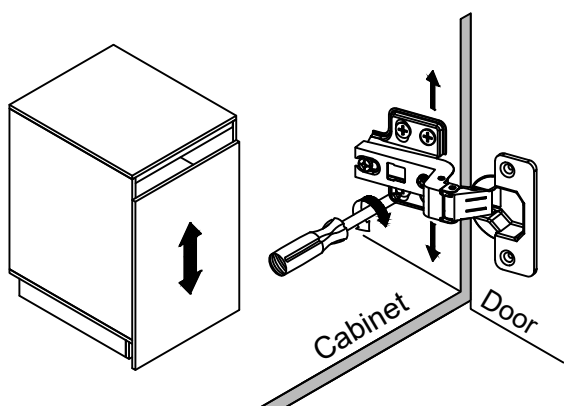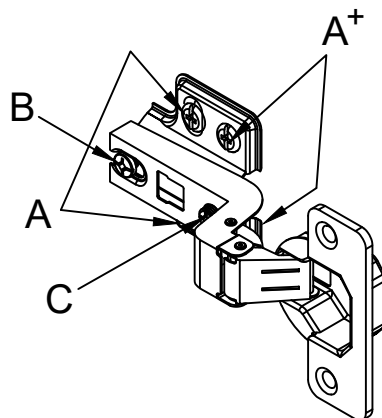


To adjust the vertical height.

Loosen the four screws "A" on both hinge. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

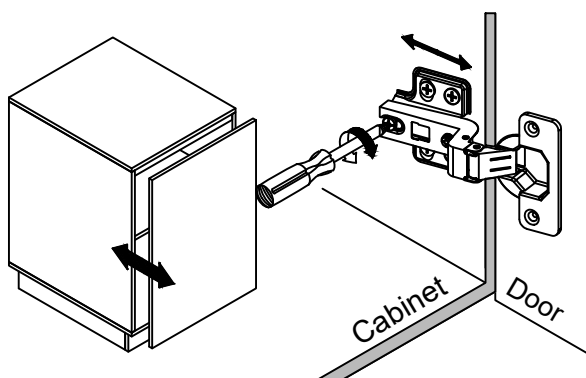

To adjust depth.




Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

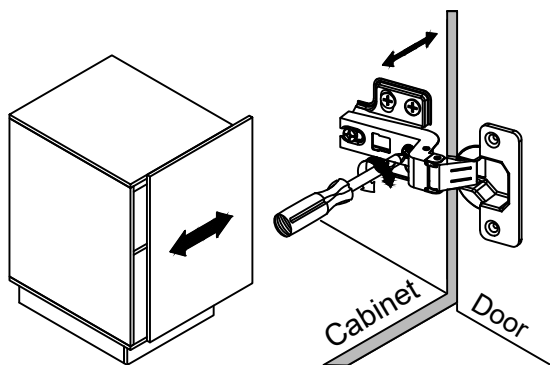

To adjust side ways.



Turning the screw "C" on BOTH hinges on each door.

STEP 9

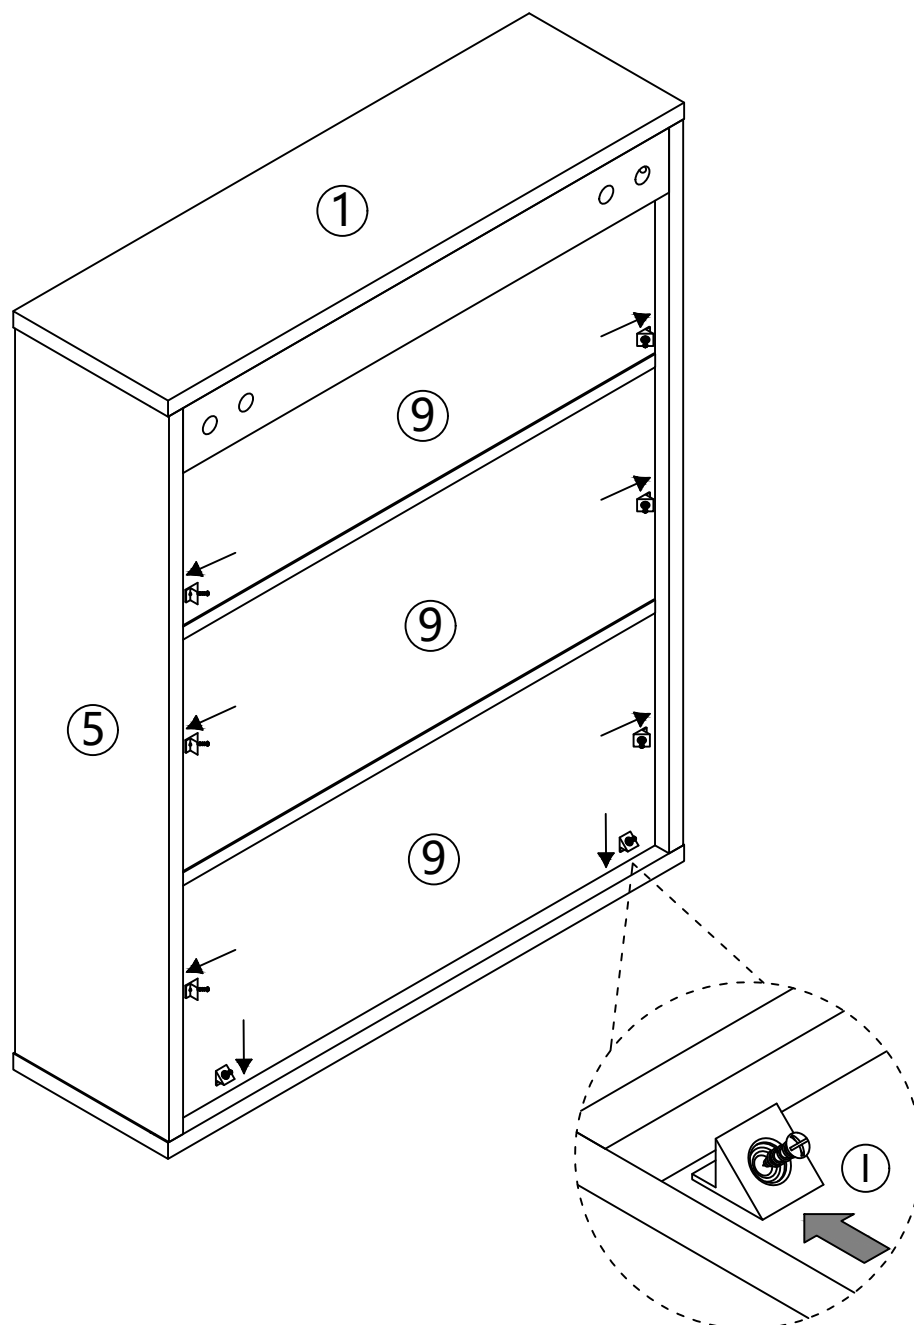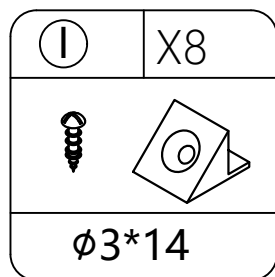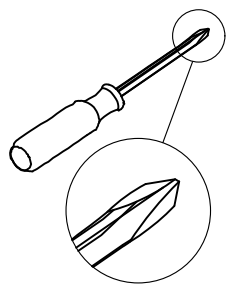


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP 10

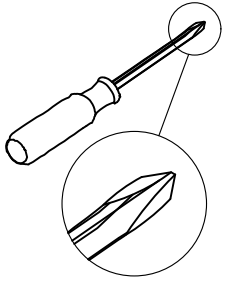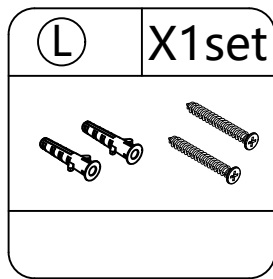


STEP1

Set the hole position near the wall

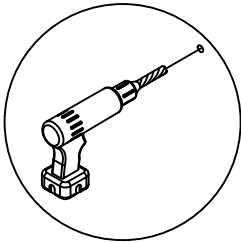


STEP2

Put the embedded part into the hole


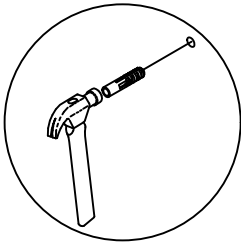


STEP3

Put the screw part into the hole

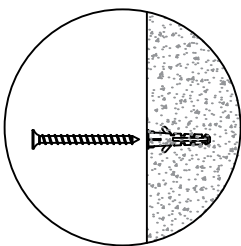

Note that the bevel is on the inside.

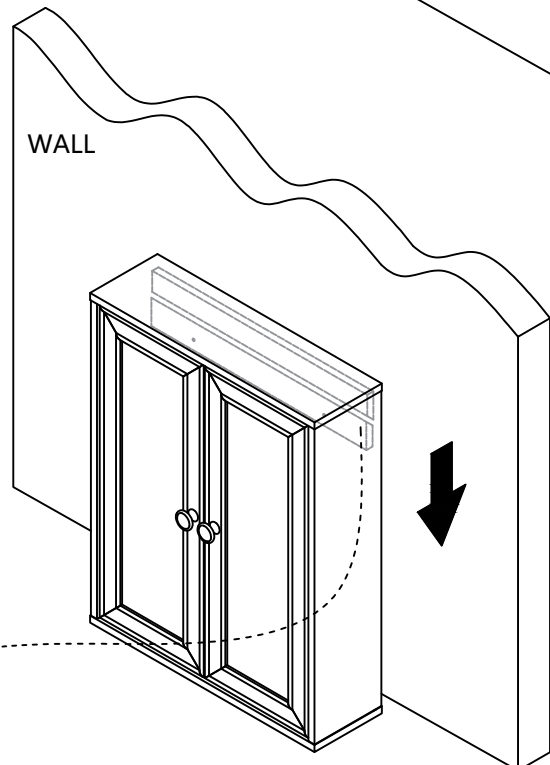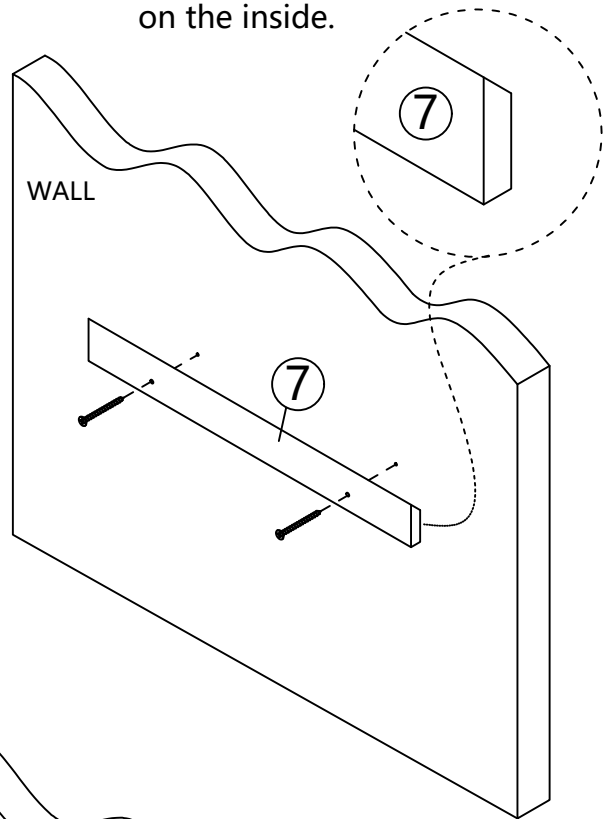

Cabinet body back alignment plate I inserted.