


# INSTALLATION INSTRUCTIONS

---

Model#03

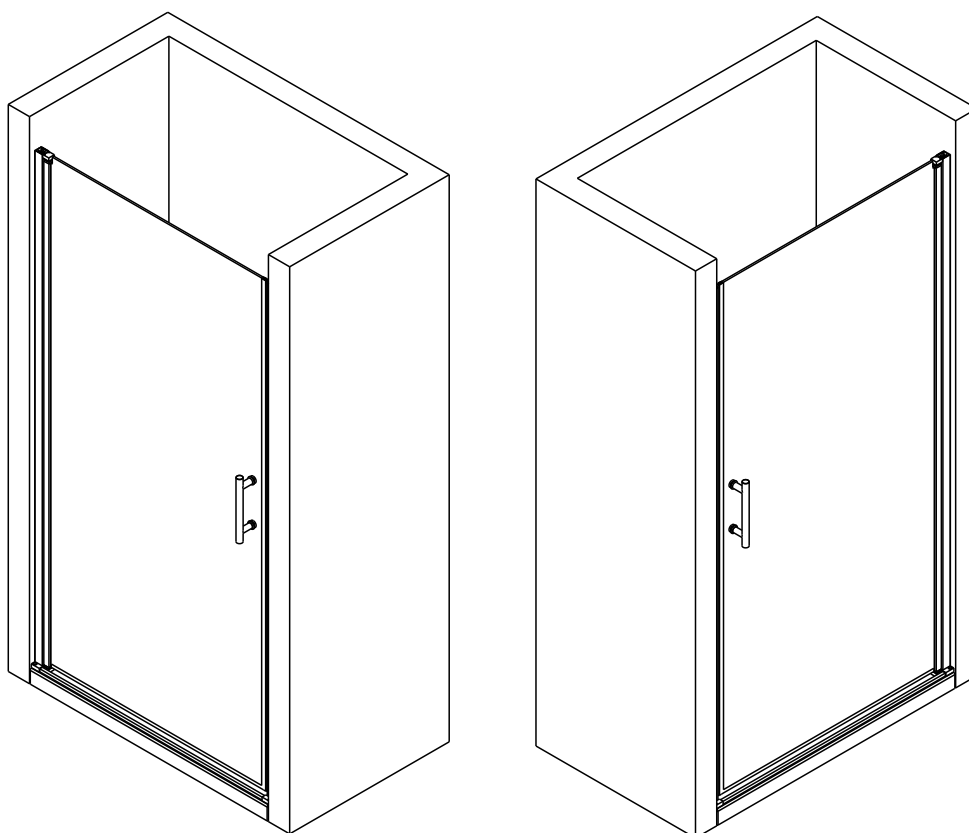

**THANK YOU FOR PURCHASING OUR PRODUCTS.  
FOR IMMEDIATE ASSISTANCE WITH ASSEMBLY  
OR PRODUCT INFORMATION ,PLEASE EMAIL US AT:**



**SUPPORT@CUSTOMERSERVICEYIBAI.COM**

Please include your order ID and the product model number in your email.

Our customer service team is available to assist you Monday to Friday  
8:00 AM to 5:00 PM (PST).

## ▲ Important Notice Before Installation:

Please prepare Silicone Sealant in advance (not included). It is crucial to use the Silicone Sealant in the final step to prevent the risk of water leakage. Refer to Page 16 for its application location.


### WARNING:

- Risk of serious injury.** Damage before installation can result in glass shattering. Inspect the glass and all parts for damage before installation.
- Risk of serious injury.** Improper installation can result in glass shattering Follow all installation instructions.
- Risk of serious injury.** Do not cut tempered glass. Tempered glass will shatter if cut.
- Risk of serious injury.** Shower door and side panels can shatter. Regularly inspect the glass and all parts for damage, missing, or loose parts.
- Risk of serious injury.** Always wear safety glasses while cutting and drilling.


### IMPORTANT

- This door is designed to accommodate walls that are less than 3/8" (10 mm) out of plumb. Verify that the area the door will be attached to is within 3/8" (10 mm) of plumb. The door may not function properly if the wall is more than 3/8" (10 mm) out of plumb.
- Leave this manual for the end user. Read all instructions before installing or using this product.
- Your new door can be installed with the door opening to either the right or left. Choose a pivot configuration before beginning.
- Identify all parts before installation. Inspect for damage.
- During the installation, protect the shower floor with a drop cloth to avoid damage. Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- Follow the instructions applying 100% silicone sealant for the door.  
Sealing areas other than those shown in the installation instructions may cause leaking.
- Two people should perform this installation.


### Tools Required

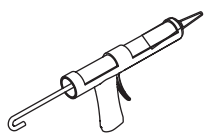


Silicone Sealant

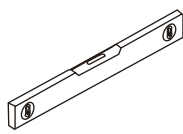


Level

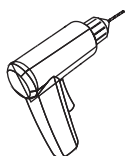


Drill



Ø 1/4"  
Drill Bit




Screwdriver  
(Phillips)




Hammer



Pencil

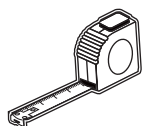

Tape Measurer



Sealant  
Finishing Tool




Painters  
Tape



Safety Glasses




Work Gloves



Knife


# PARTS LIST

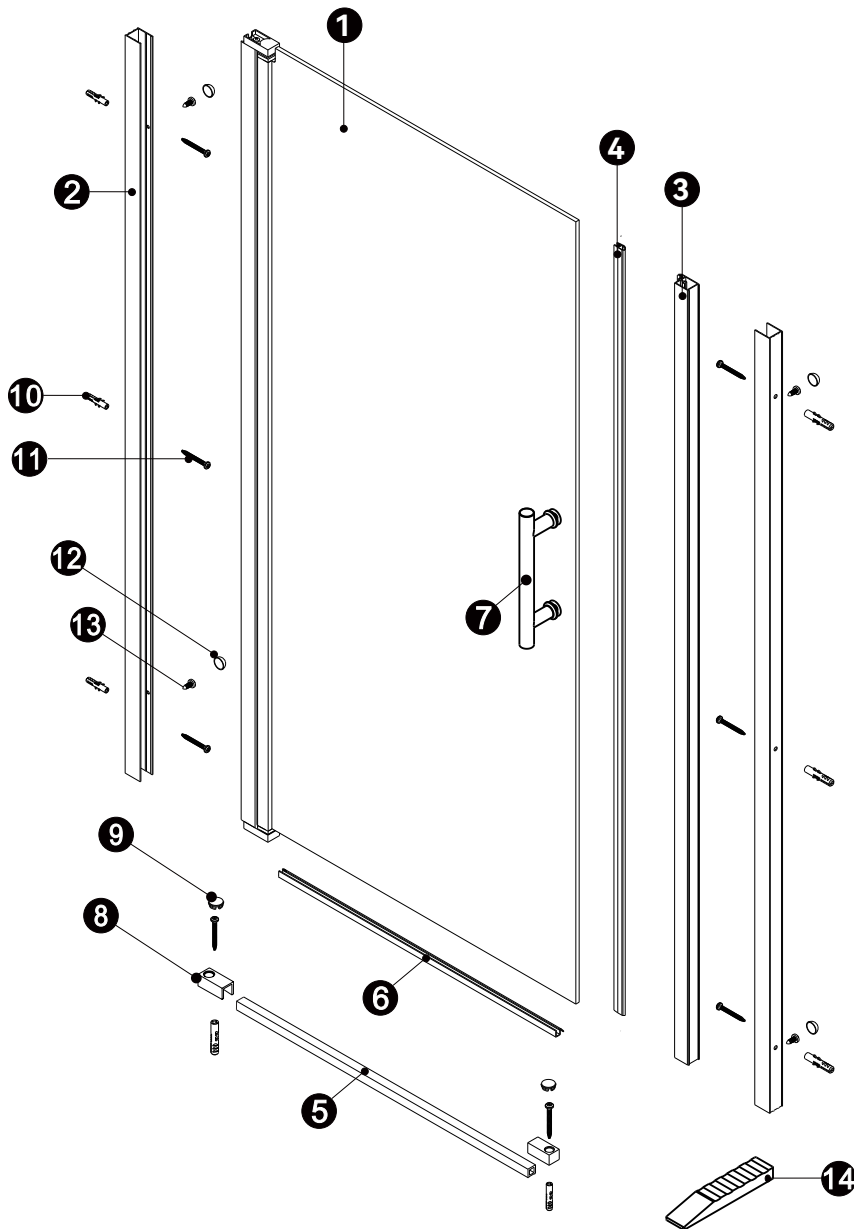

keep small parts away from children



## PACKING LIST

|                                               |                                               |                                                    |                                                   |                                                   |                                                |                                                        |
|-----------------------------------------------|-----------------------------------------------|----------------------------------------------------|---------------------------------------------------|---------------------------------------------------|------------------------------------------------|--------------------------------------------------------|
| <b>Wall Jamb</b><br><br><b>2</b> 2 PCS        | <b>Magnetic Post</b><br><br><b>3</b> 1 PC     | <b>Magnetic Plastic Strip</b><br><br><b>4</b> 1 PC | <b>Door Bottom Sweep</b><br><br><b>5</b> 1 PC     | <b>Bottom Seal</b><br><br><b>6</b> 1 PC           | <b>Shower Door Handle</b><br><br><b>7</b> 1 PC | <b>Shower Threshold Fastener</b><br><br><b>8</b> 2 PCS |
| <b>Bottom Screw Cap</b><br><br><b>9</b> 2 PCS | <b>M6 Wall Anchor</b><br><br><b>10</b> 10 PCS | <b>ST4x32 Self-Tapping</b><br><br><b>11</b> 10 PCS | <b>Wall Jamb Screw Cap</b><br><br><b>12</b> 8 PCS | <b>ST4x10 Self-Tapping</b><br><br><b>13</b> 8 PCS | <b>Support Panel</b><br><br><b>14</b> 1 PC     | <b>Twist Drill Ø 1/8"</b><br><br><b>15</b> 1 PC        |

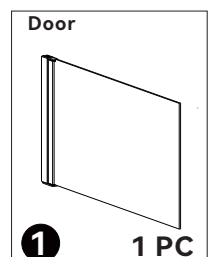

## Configuration Dimensions:

| A<br>Product Height | B<br>Installation Width | C<br>Opening Width |
|---------------------|-------------------------|--------------------|
| 72"                 | 30"~31"                 | 26"                |
|                     | 32"~33"                 | 28"                |
|                     | 34"~35"                 | 30"                |
|                     | 36"~37"                 | 32"                |

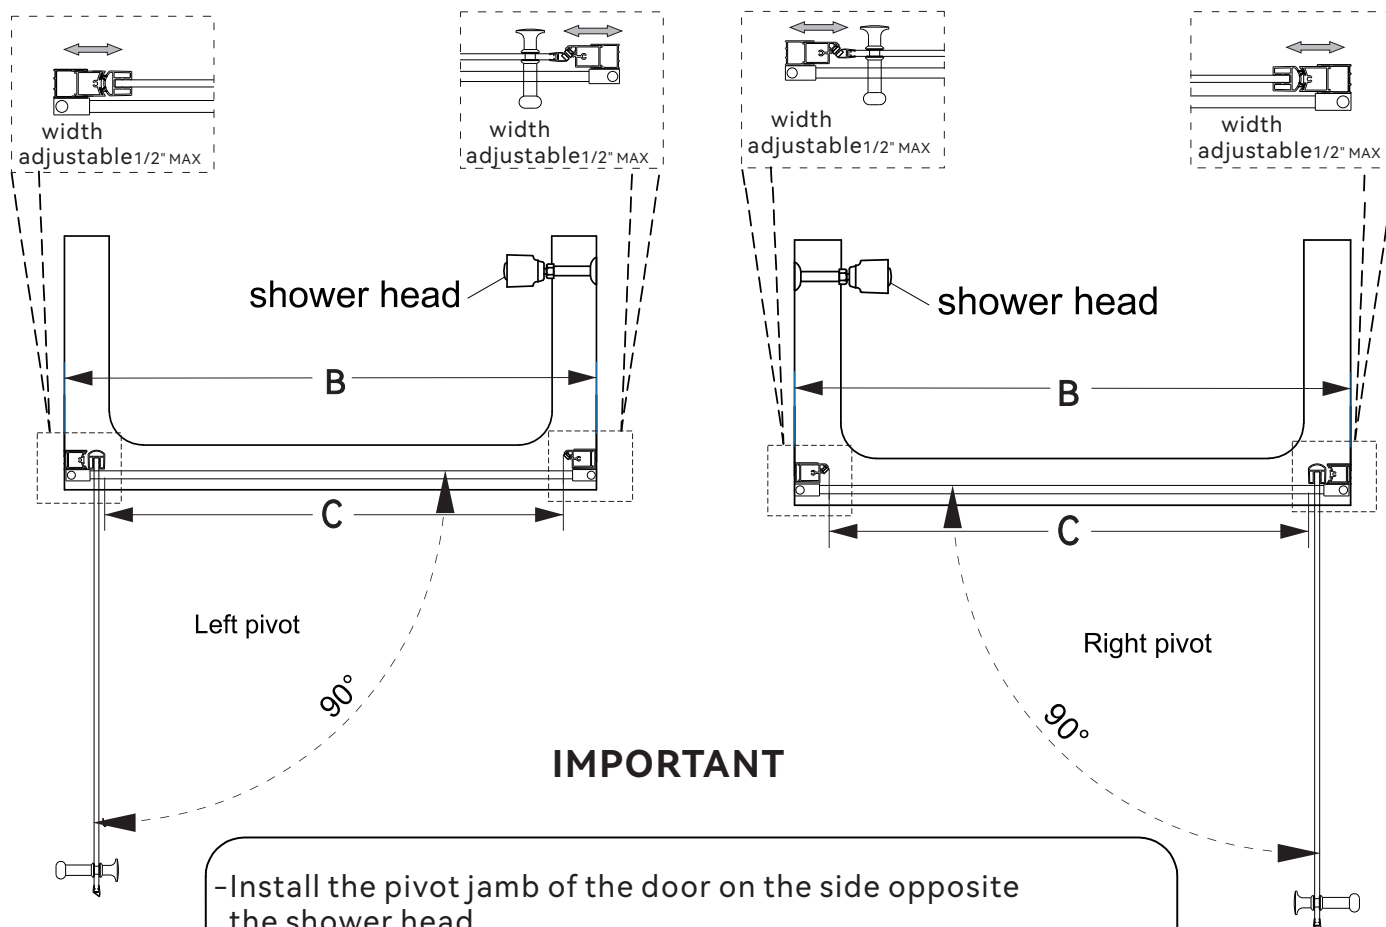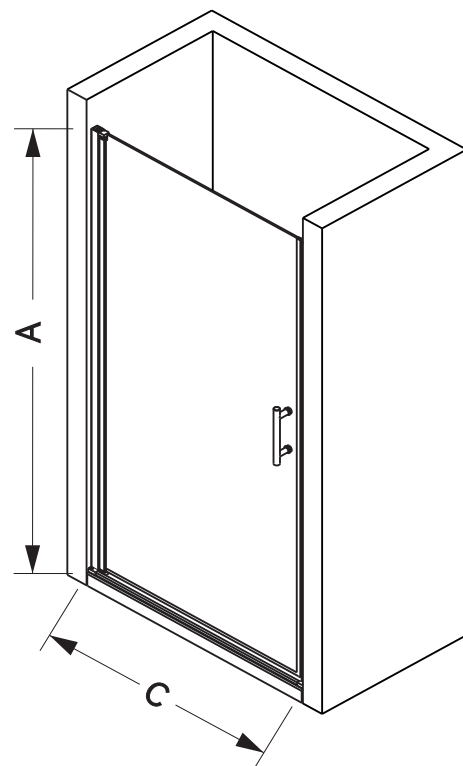

- IMPORTANT**
- Install the pivot jamb of the door on the side opposite the shower head.
  - This model is reversible for right- or left-hand door installation.
  - The left-hand door installation is shown throughout this manual.
  - For right-hand door installation, simply begin on the opposite wall and reverse the orientation of the installation steps.

# INSTALLATION STEPS

## STEP 1-Measure the Finished Opening

**IMPORTANT:** Incorrect measurement may prevent proper door closure. Double-check measurements.




**NOTE:** Before beginning installation, verify the door assembly will fit within the horizontal opening of the shower enclosure.

- For the 30" door, the opening must be between 30" - 31 3/8".
- For the 32" door, the opening must be between 32" - 33 3/8".
- For the 34" door, the opening must be between 34" - 35 3/8".
- For the 36" door, the opening must be between 36" - 37 3/8".



Measure distance "W1" of upper shower enclosure opening and distance "W2" of lower shower enclosure opening.

Both measurements should be within the dimensions listed above for required opening widths.

W1 = Upper Enclosure Width  
W2 = Lower Enclosure Width

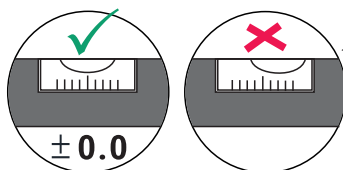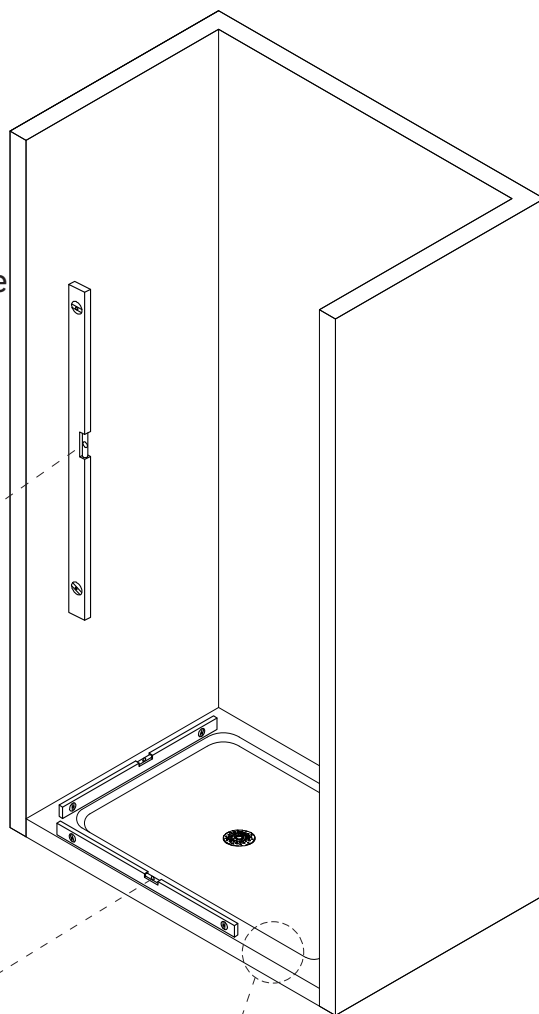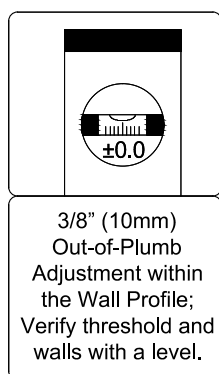

Threshold must be level



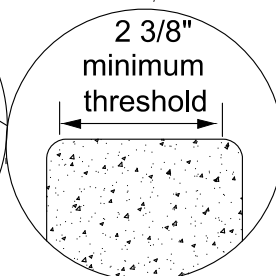
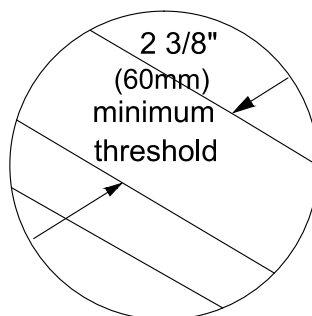


# INSTALLATION STEPS

## STEP 2-Wall Jamb Installation

### Parts Required:

| Part No.  | Description                 | Qty      |
|-----------|-----------------------------|----------|
| <b>2</b>  | <b>Wall Jamb</b>            | <b>1</b> |
| <b>10</b> | <b>M6 Wall Anchor</b>       | <b>3</b> |
| <b>11</b> | <b>ST4x32 Self -Tapping</b> | <b>3</b> |

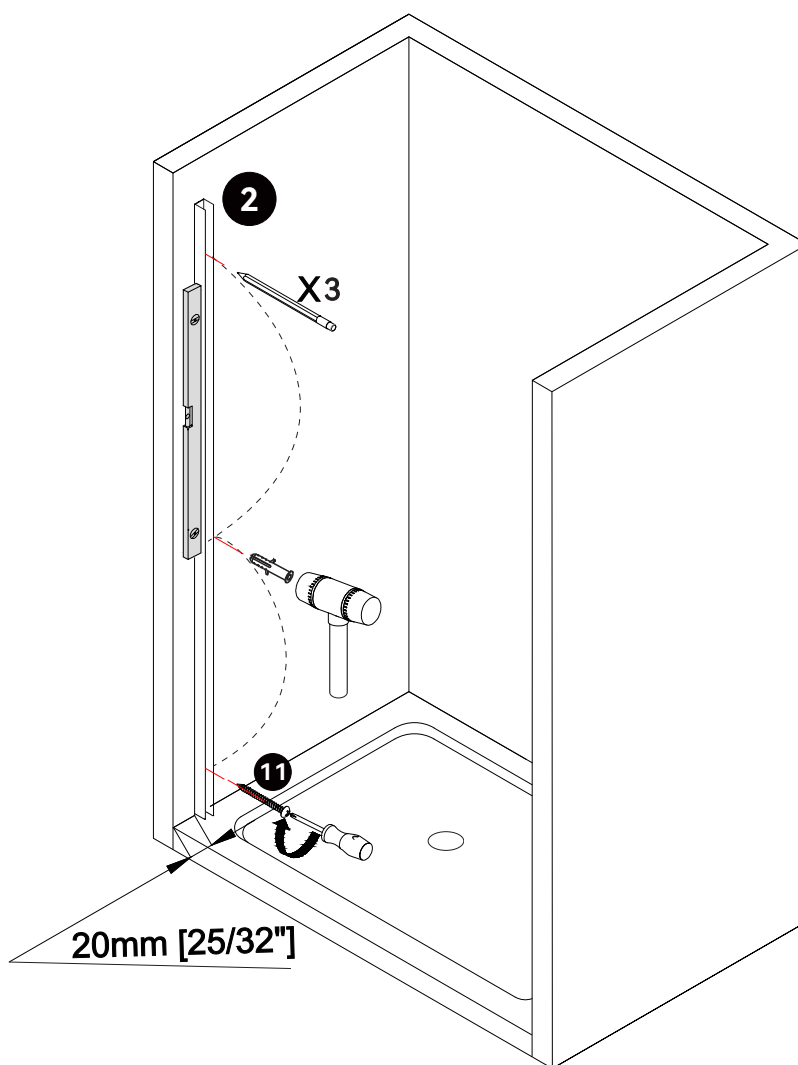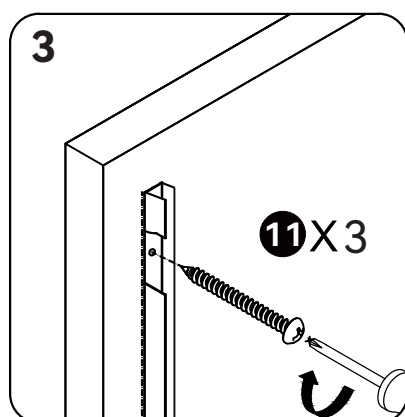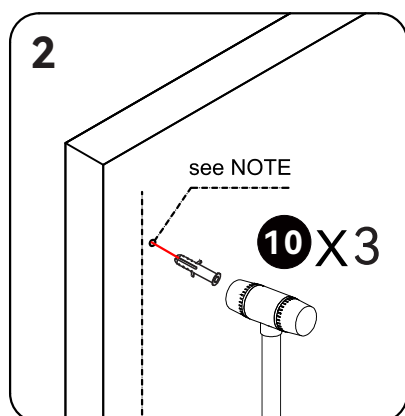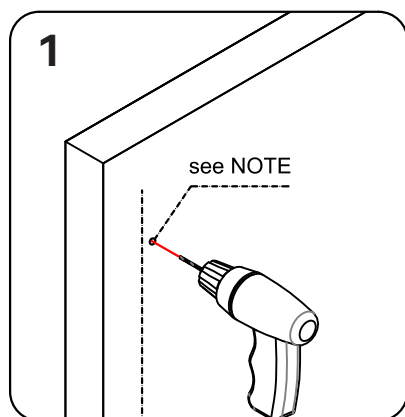





1. Use a level to ensure the wall jamb (#2) is perfectly plumb. Once plumb, mark the drilling points on the wall jamb (#2) with a pencil. Use a 1/4" drill bit to bore holes at the marked points.
2. Gently tap wall anchors (#10) into the holes with a hammer.
3. Use ST4×32 self-tapping screws (#11) and a Phillips screwdriver to tighten the wall jamb (#2) to the wall.

# INSTALLATION STEPS

## STEP 3-Door Panel Installation

### Parts Required:

| Part No. | Description            | Qty |
|----------|------------------------|-----|
| 1        | Door                   | 1   |
| 14       | Support Panel          | 1   |
| 4        | Magnetic Plastic Strip | 1   |

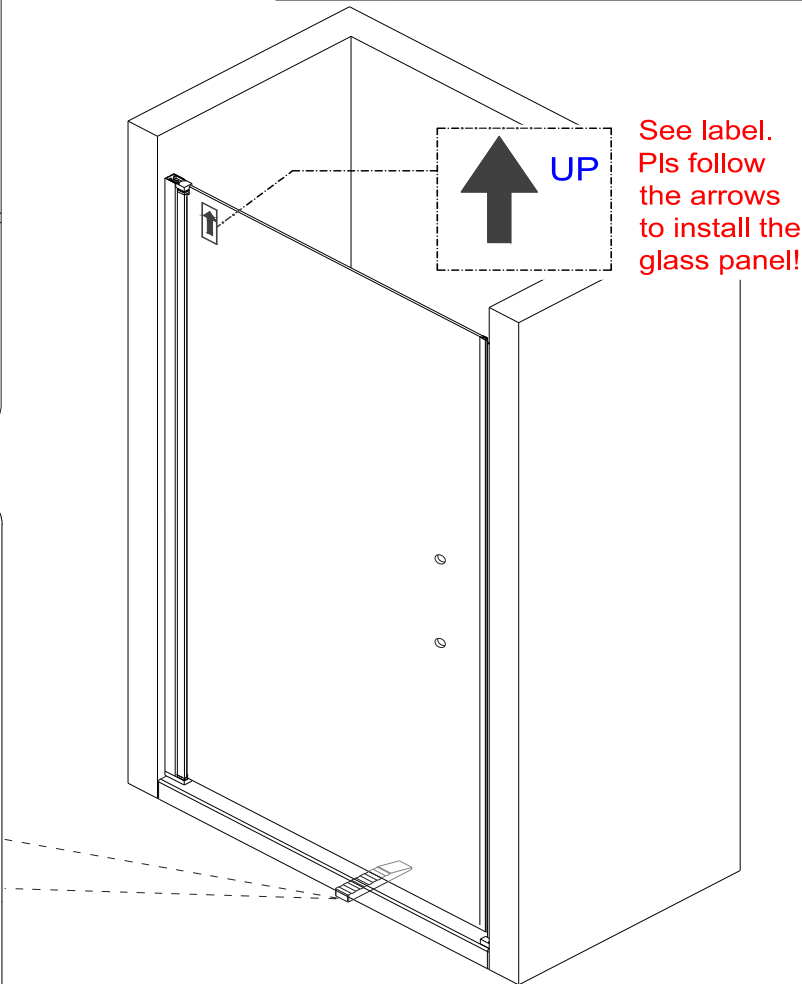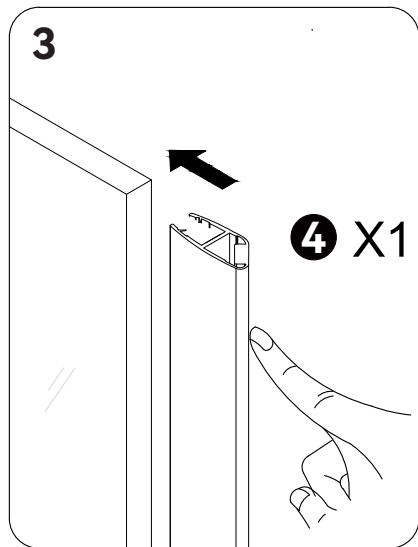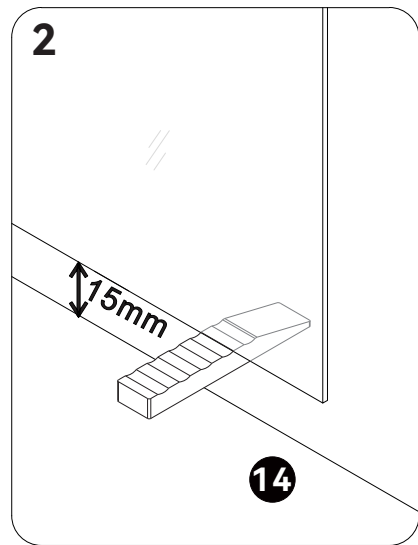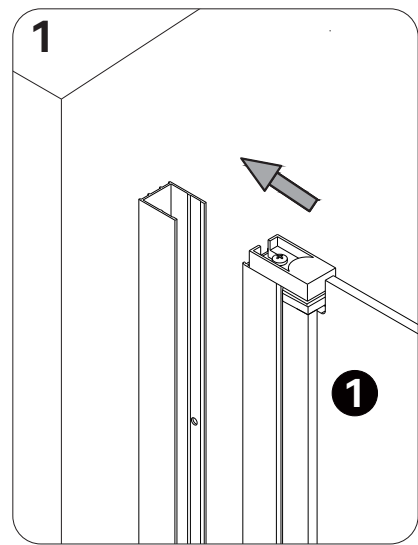


The door panel profiles can be adjusted up to 1/2" within the wall jamb for overall width or to correct out-of-plumb conditions within the model size. Screw them together after making final adjustments.

1. Position the door (#1) flush against the wall jamb (#2).
2. Place support panel (#14) on the threshold to provide proper spacing beneath the door glass. Make any final adjustments to the door so that it is level and plumb in the opening.
3. Insert the magnetic plastic strip (#4) into the opposite side of the door (#1).



# INSTALLATION STEPS

## STEP 4-Adjust Wall Spacing for Glass Door Installation

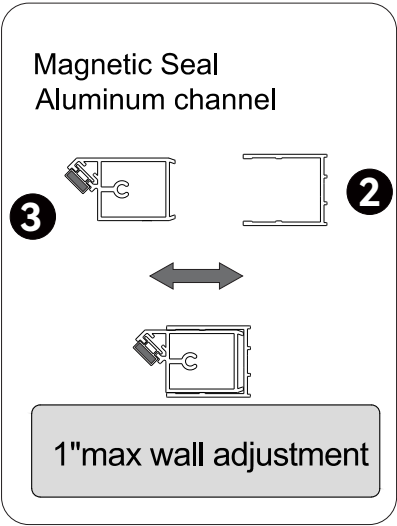

**Parts Required:**

| Part No. | Description   | Qty |
|----------|---------------|-----|
| 2        | Wall Jamb     | 1   |
| 3        | Magnetic Post | 1   |

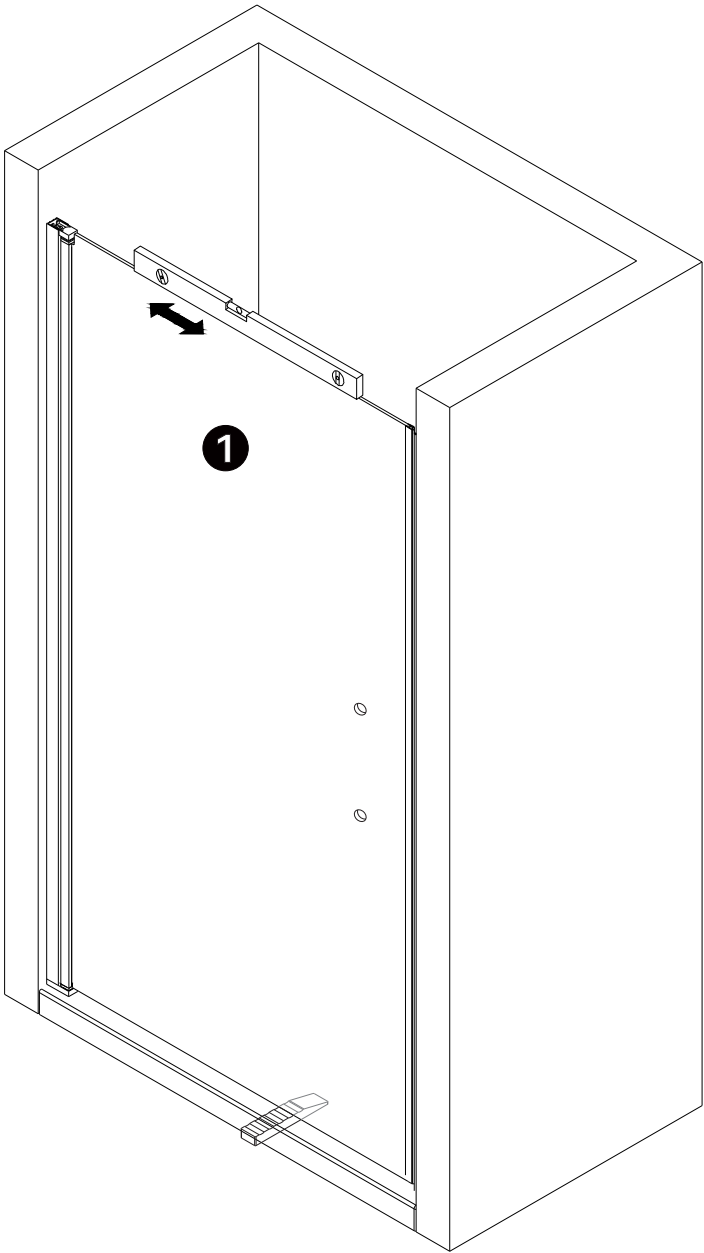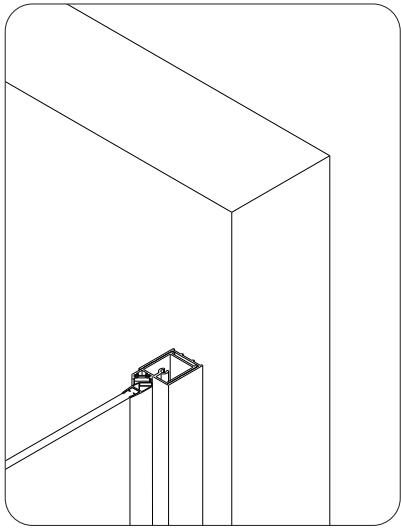






Before installing the glass door, place the level horizontally on the glass door to ensure both side walls are perfectly vertical.

# INSTALLATION STEPS

## STEP 5-Fasten the Door Panel

### Parts Required:


| Part No. | Description             | Qty |
|----------|-------------------------|-----|
| 13       | ST4x10-Self Tapping     | 3   |
| 12       | Wall Jamb Screw Cap     | 3   |
| 15       | Twist Drill $\phi 1/8"$ | 1   |

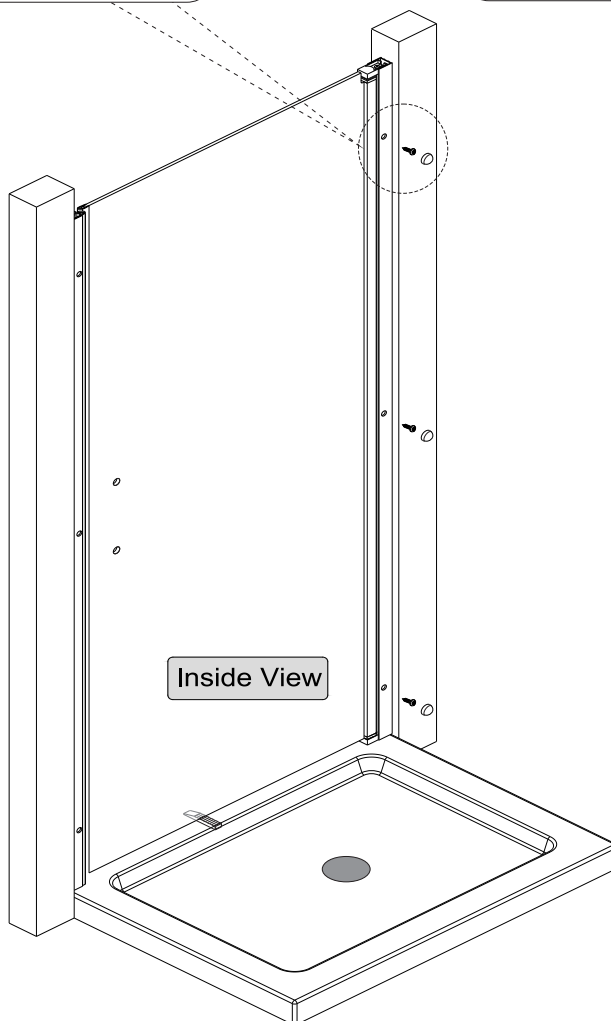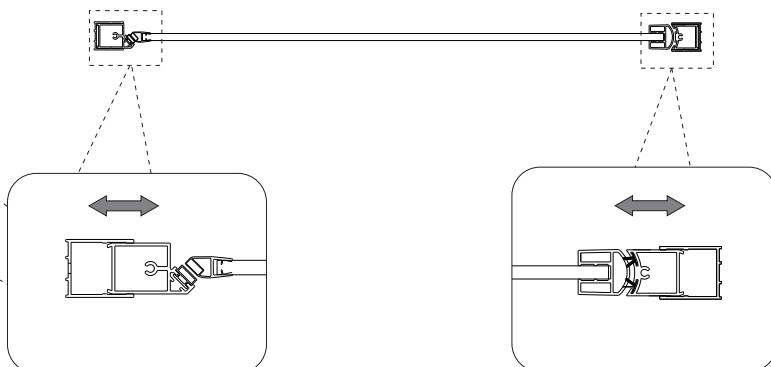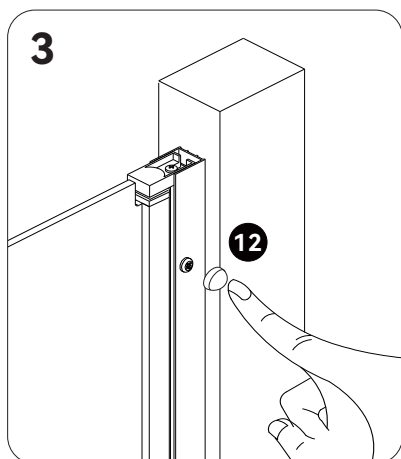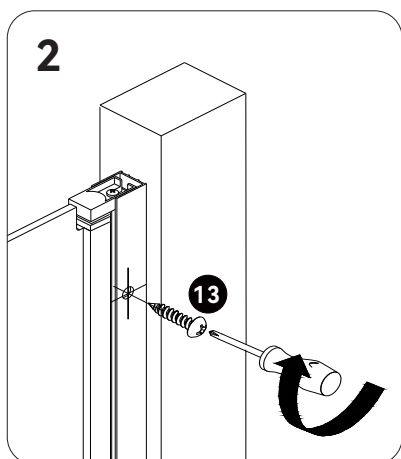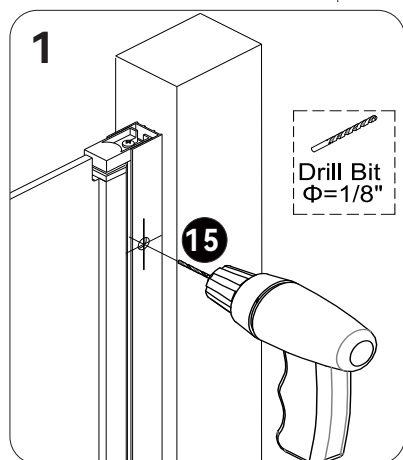

1. After final adjustment, use a 1/8" drill bit (#15) to drill pilot holes on the wall jamb (#2) .
2. Secure the ST4x10 self-tapping (#13) with a Phillips screwdriver.
3. Secure the wall jamb screw cap (#12) to the screw holes positions.

# INSTALLATION STEPS

## STEP 6-Determine the Door and Wall Jamb Position

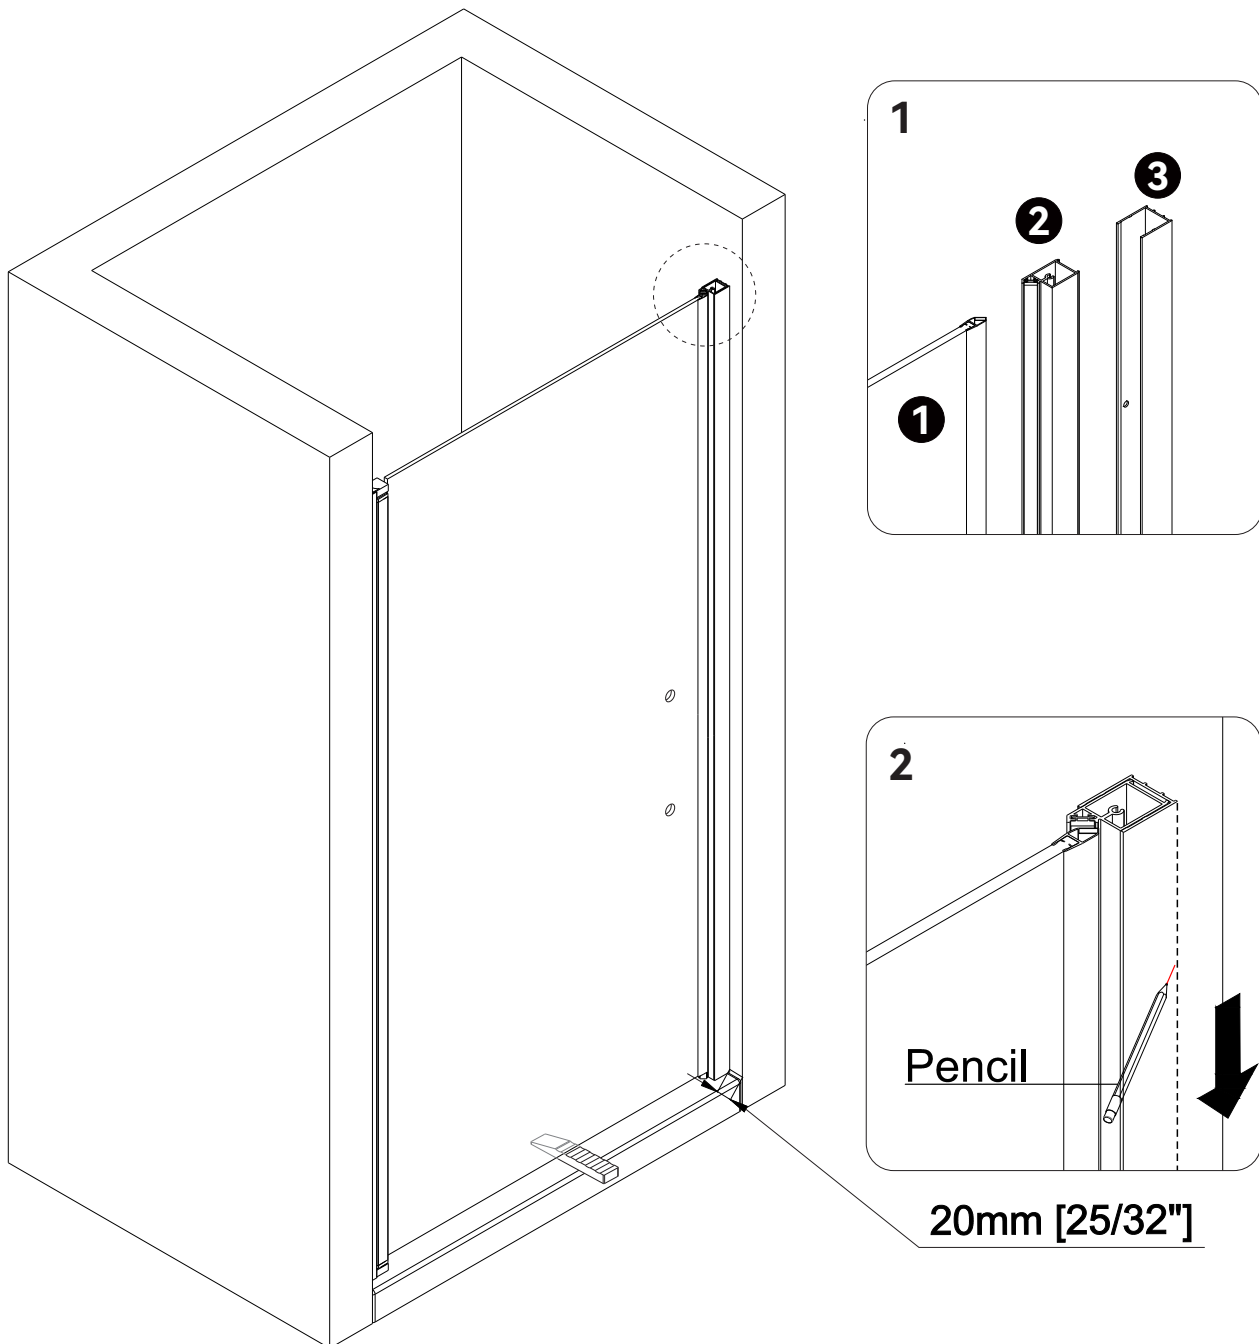


1.Put the door(#1),magnetic post (3)and wall jamb(2) must be aligned.

2.Align and mount the wall jamb(#2)and door(#1) centrally between the magnetic post (#3), mark the position on the wall.


# INSTALLATION STEPS

## STEP 7-Wall Jamb Installation

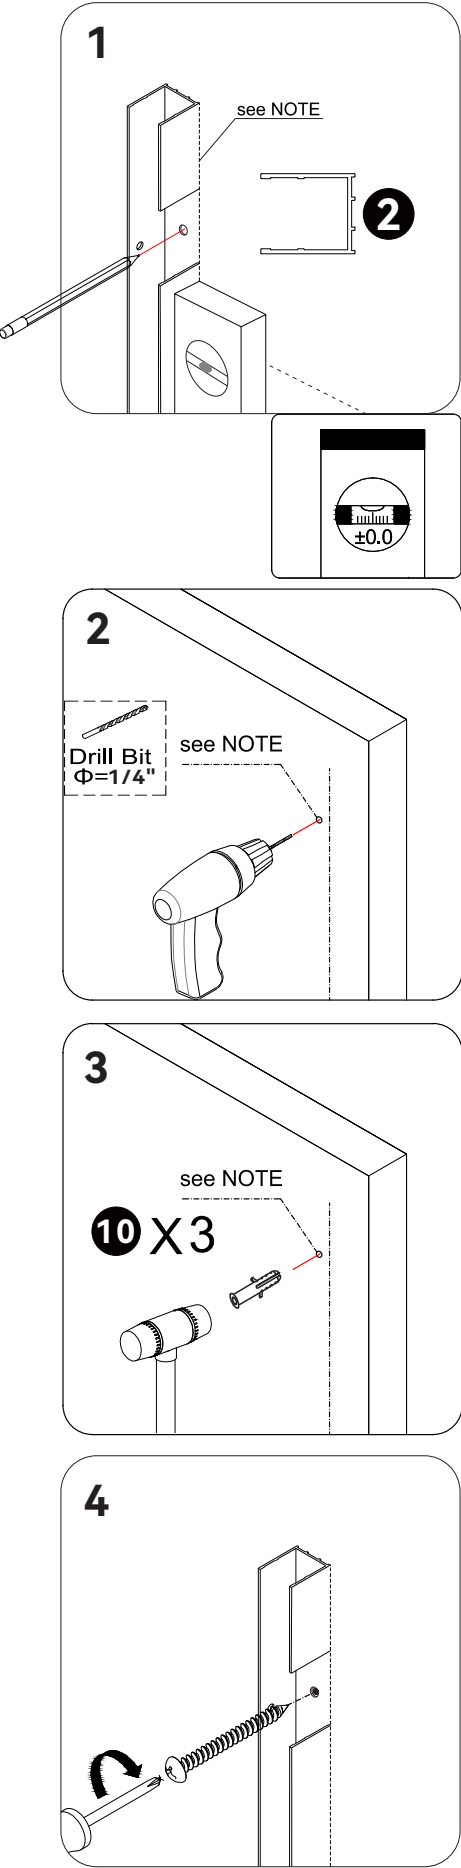

### Parts Required:

| Part No. | Description           | Qty |
|----------|-----------------------|-----|
| 10       | M6 Wall Anchor        | 3   |
| 11       | ST4 x32 Self -Tapping | 3   |

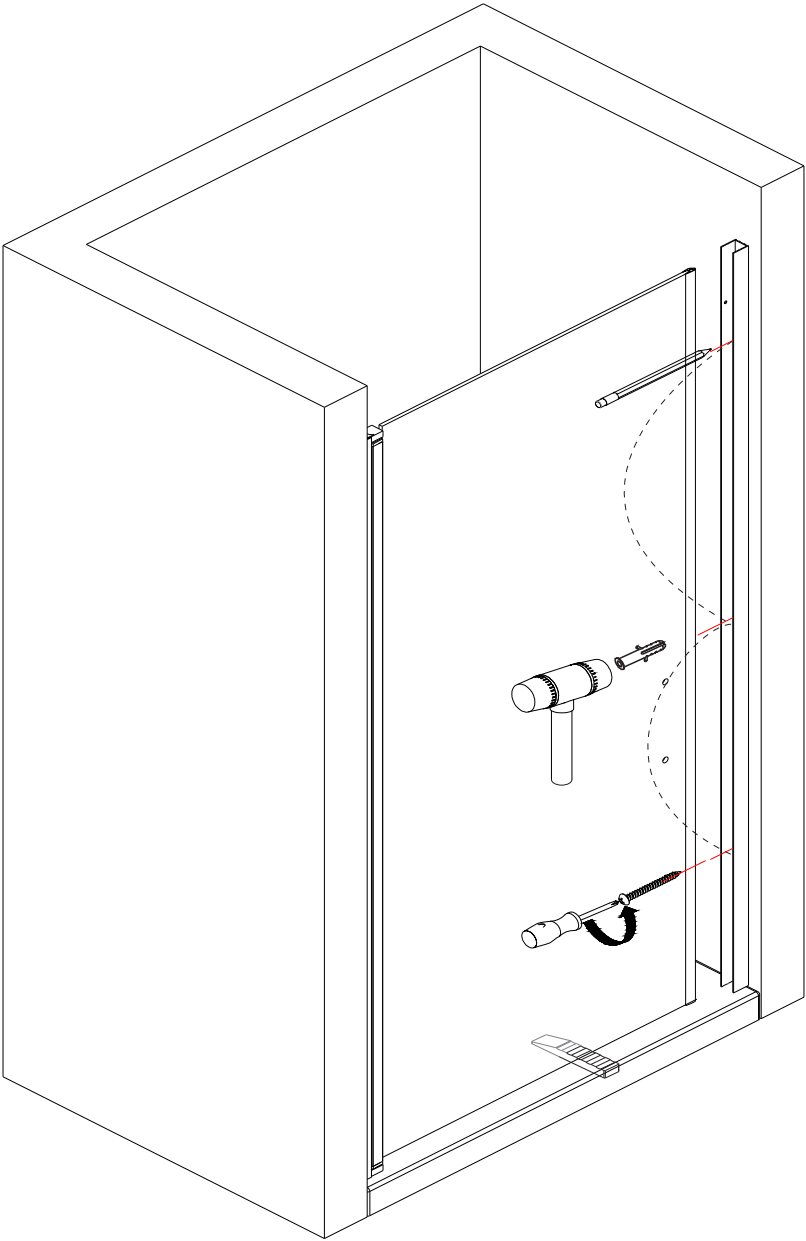







1. Mark the locations to the pre-drilled hole of the wall jamb (#2) .
2. Use 1/4"drill bit for drilling needed holes.
3. Use a hammer to knock the drywall anchor (#10) into the wall hole.
4. Secure the ST4 × 32 self-tapping screw (#11) with a Phillips screwdriver.

# INSTALLATION STEPS

## STEP 8-Magnetic Post Installation

### Parts Required:

| Part No. | Description                    | Qty |
|----------|--------------------------------|-----|
| 2        | Wall Jamb                      | 1   |
| 3        | Magnetic Post                  | 3   |
| 12       | Wall Jamb Screw Cap            | 3   |
| 13       | ST4x10 Self -Tapping           | 3   |
| 15       | Twist Drill $\varnothing$ 1/8" | 1   |

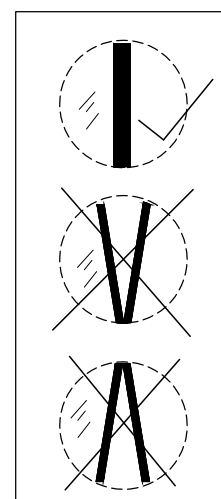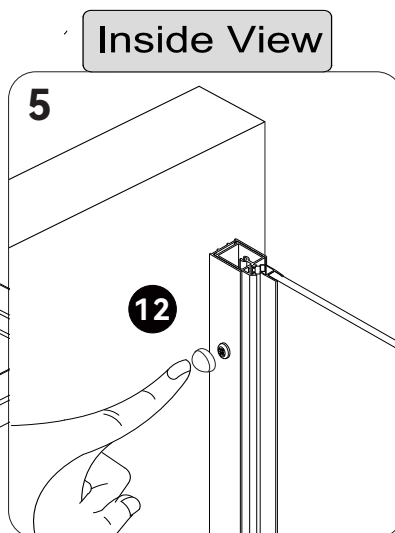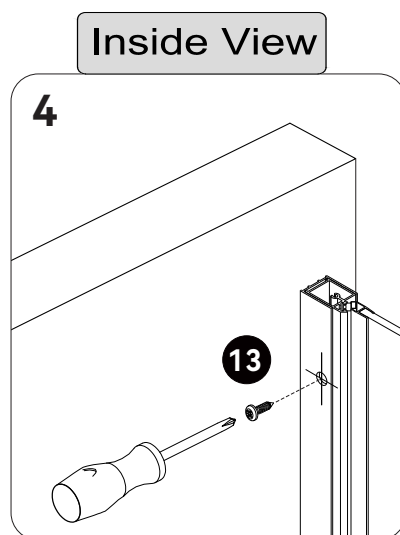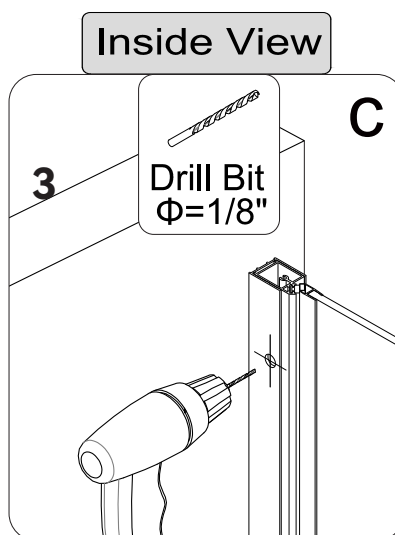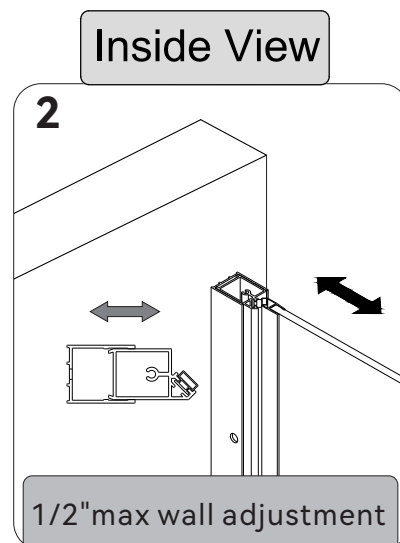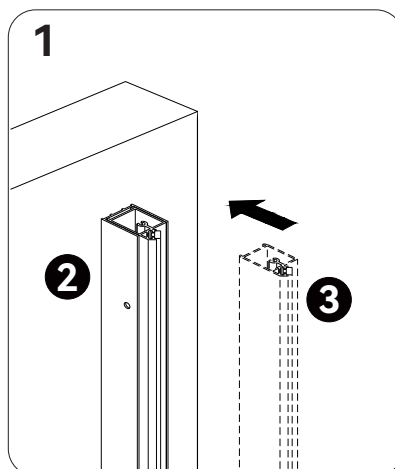

1. Align the magnetic post(#3) with the wall jamb(#2).
2. Adjust for wall spacing,slide the magnetic post(#3) horizontally.
3. Using a twist drill 1/8" (#15) drill bit, Drill through the magnetic post(#3) mounting holes.
4. Secure the ST4x10 Self-Tapping (#13) with a Phillips screwdriver.
5. Secure the wall Jamb Screw Cap (#12) to the screw holes positions.





**Make sure the magnetic seals close properly!!**

# INSTALLATION STEPS

## STEP 9-Door Bottom Threshold Installation

### Parts Required:

| Part No. | Description               | Qty |
|----------|---------------------------|-----|
| 8        | Shower Threshold Fastener | 2   |
| 5        | Door Bottom Sweep         | 1   |

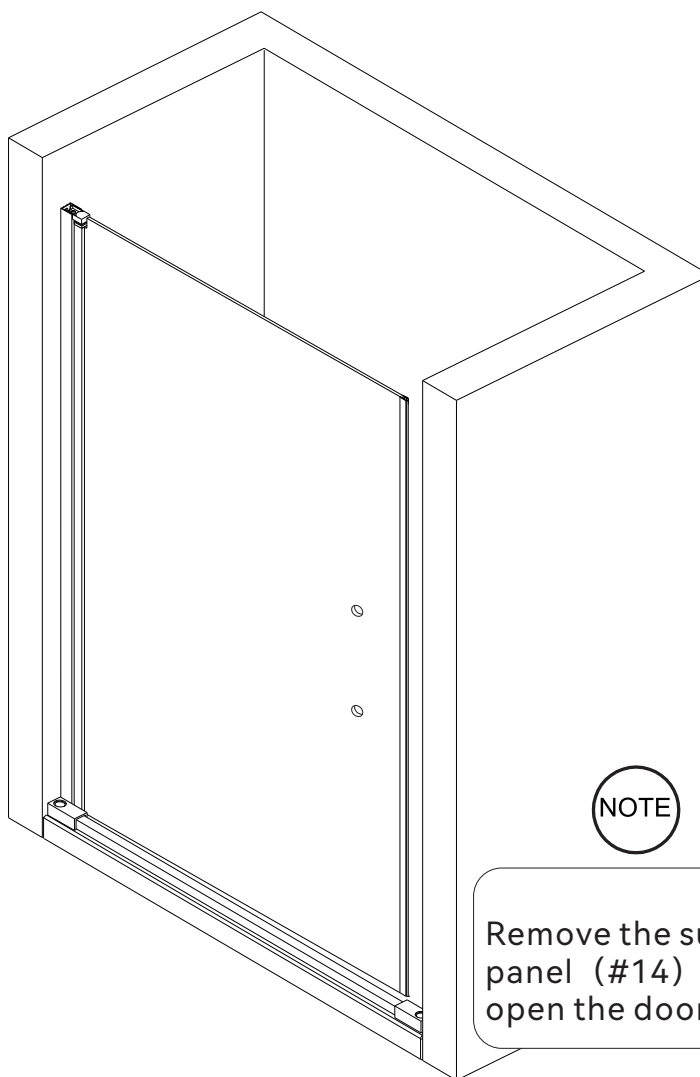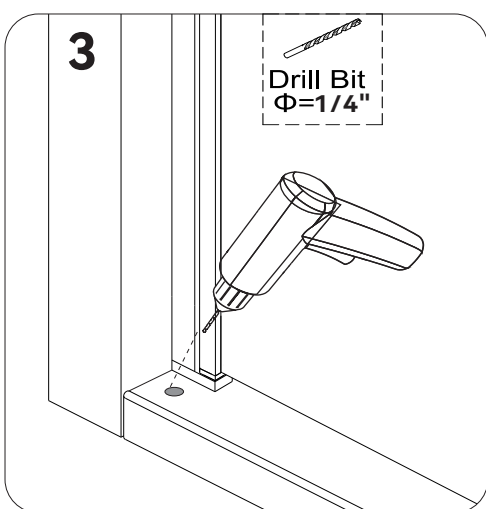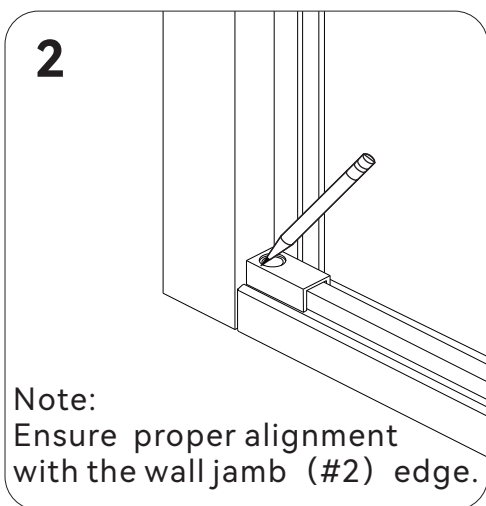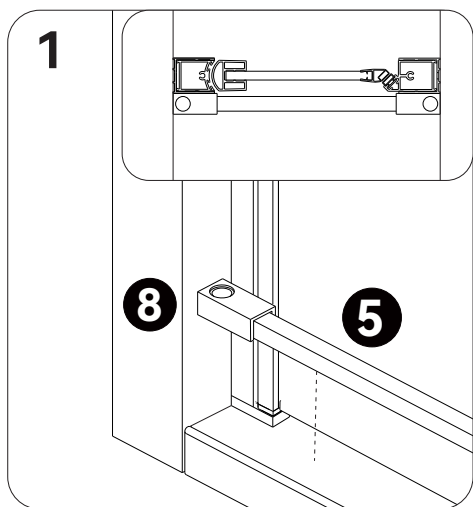

NOTE  
If it's difficult to drill screws  
into the corner, you can also  
use adhesive for fixation.






1. Place the shower threshold fastener (#8) on the door bottom sweep (#5) at the desired location.
2. Use a pencil to mark the screw holes through the fastener's pre-drilled openings.
3. With a 1/4" drill bit, drill holes at the marked positions.

# INSTALLATION STEPS

## STEP 10-Door Bottom Threshold Installation

### Parts Required:

| Part No. | Description               | Qty |
|----------|---------------------------|-----|
| 8        | Shower Threshold Fastener | 2   |
| 5        | Door Bottom Sweep         | 1   |
| 11       | ST4 x 32 Self -Tapping    | 2   |
| 9        | Bottom Screw Cap          | 2   |

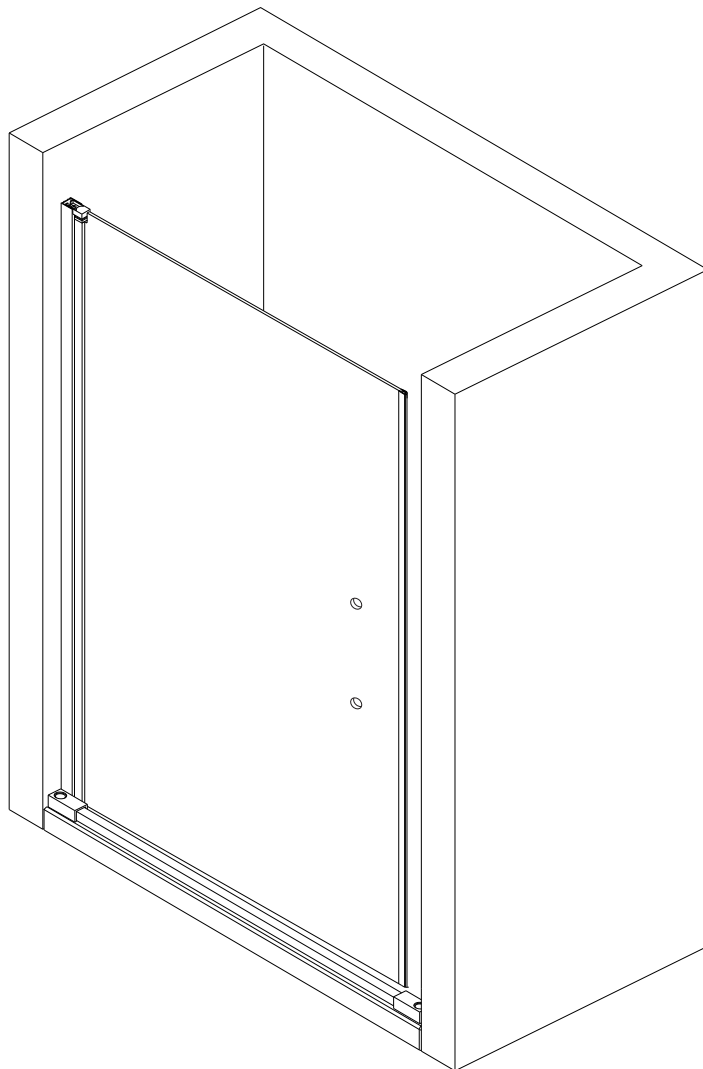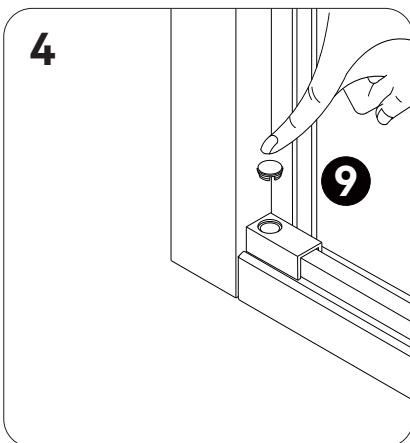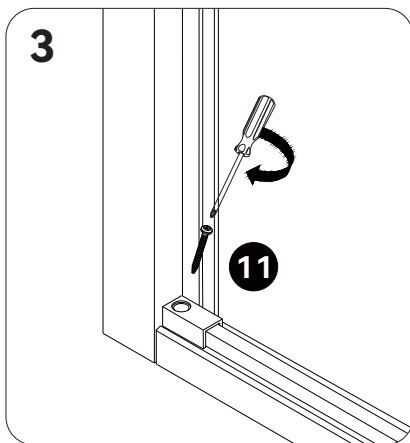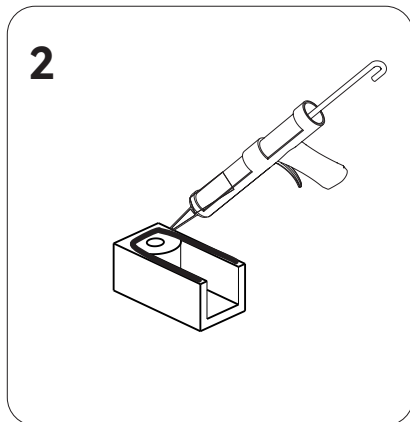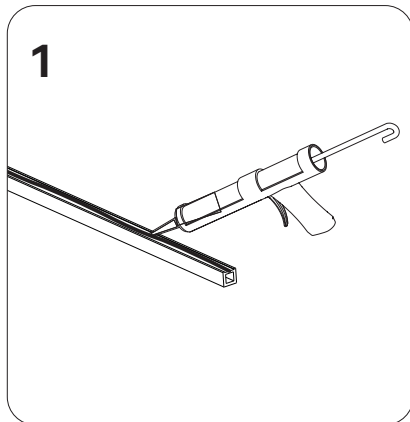



1. Apply a bead of silicone sealant to the bottom of the door bottom sweep (#5).
2. Apply a bead of silicone sealant to the bottom of the shower threshold fastener (#8).
3. Align the door bottom sweep (#5) over the fastener (#8), then tighten the ST4x32 mm self-tapping screw (Part #11) using a Phillips screwdriver.
4. Secure the bottom screw cap (#9) into the screw hole positions.

# INSTALLATION STEPS

## STEP 11-Shower Enclosure Handle Installation

Parts Required:

| Part No. | Description        | Qty |
|----------|--------------------|-----|
| 7        | Shower door handle | 1   |

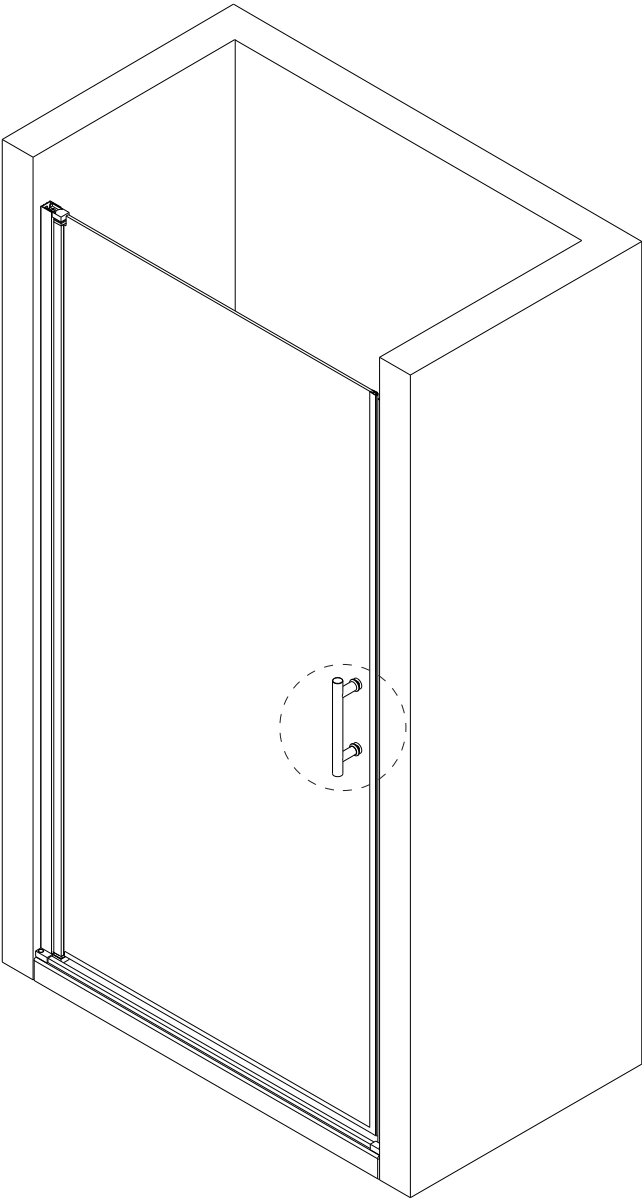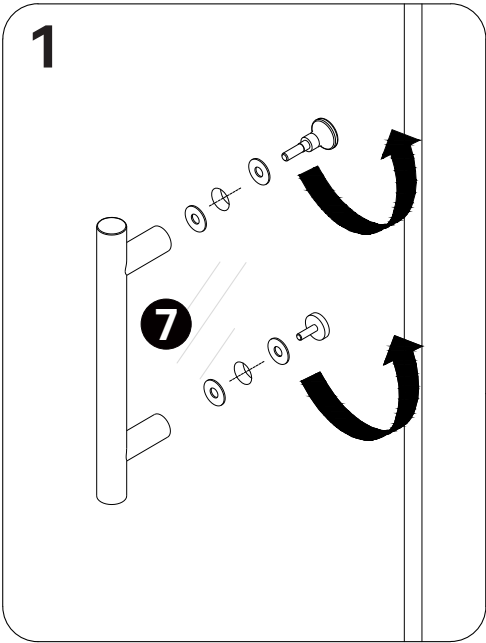



1. Install the shower door handle (# 7)on the door as shown.

# INSTALLATION STEPS


## STEP 12-Bottom Seal Installation

Parts Required:

| Part No. | Description | Qty |
|----------|-------------|-----|
| 6        | Bottom seal | 1   |

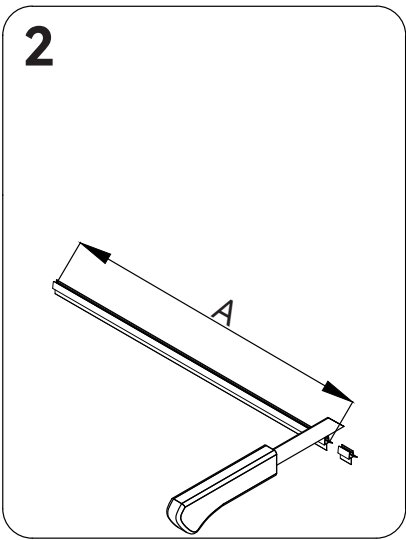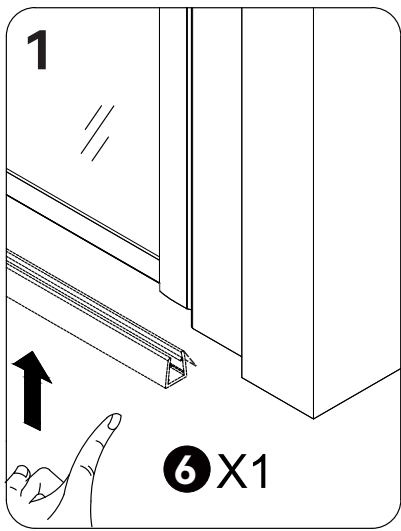

"A" is from pivot profile to magnetic seal on the door.

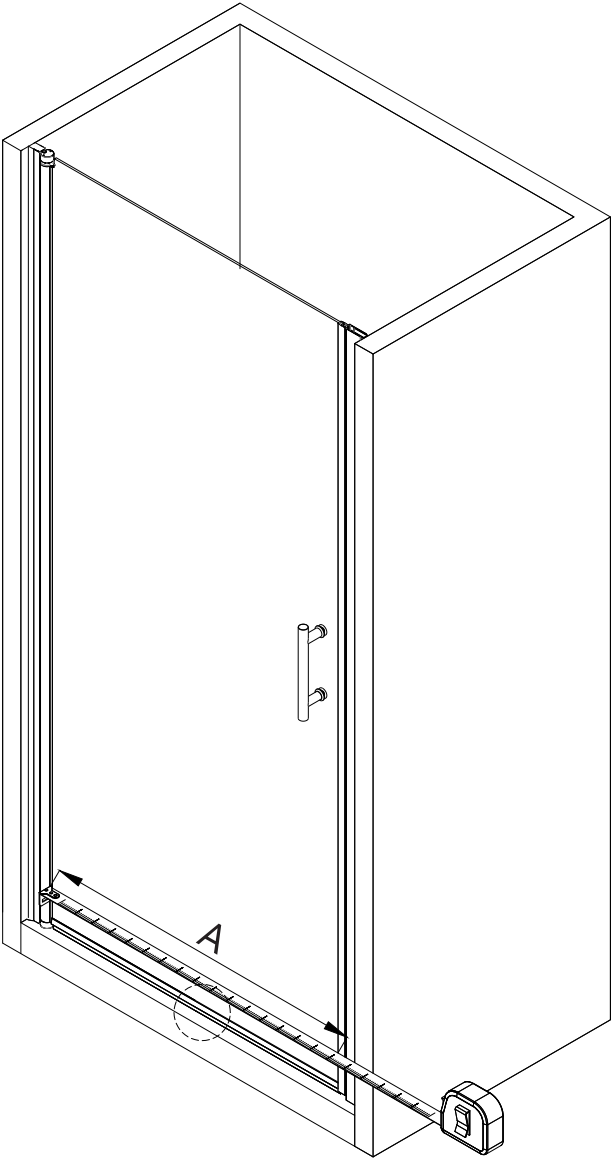

1. Measure "A" and cut the bottom seal(#6) same length as "A". Push the bottom seal(#6) into the base of the glass door.

# INSTALLATION STEPS

## STEP 13-Sealing

NOTE

The surfaces need to be clean and free of debris before applying silicone


NOTE

Ensure that the shower door closes tightly and opens smoothly. Apply a good quality silicone sealant along the wall jamb ,magnetic plasti cstrip(#2,#4)and bottom seal(#6).



Allow 24 hours for the silicone to cure before using the shower.

24 hour

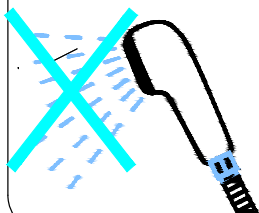

Apply Silicone Sealant,(not supplied).

