



ASSEMBLY INSTRUCTION - Please Keep For Future Reference

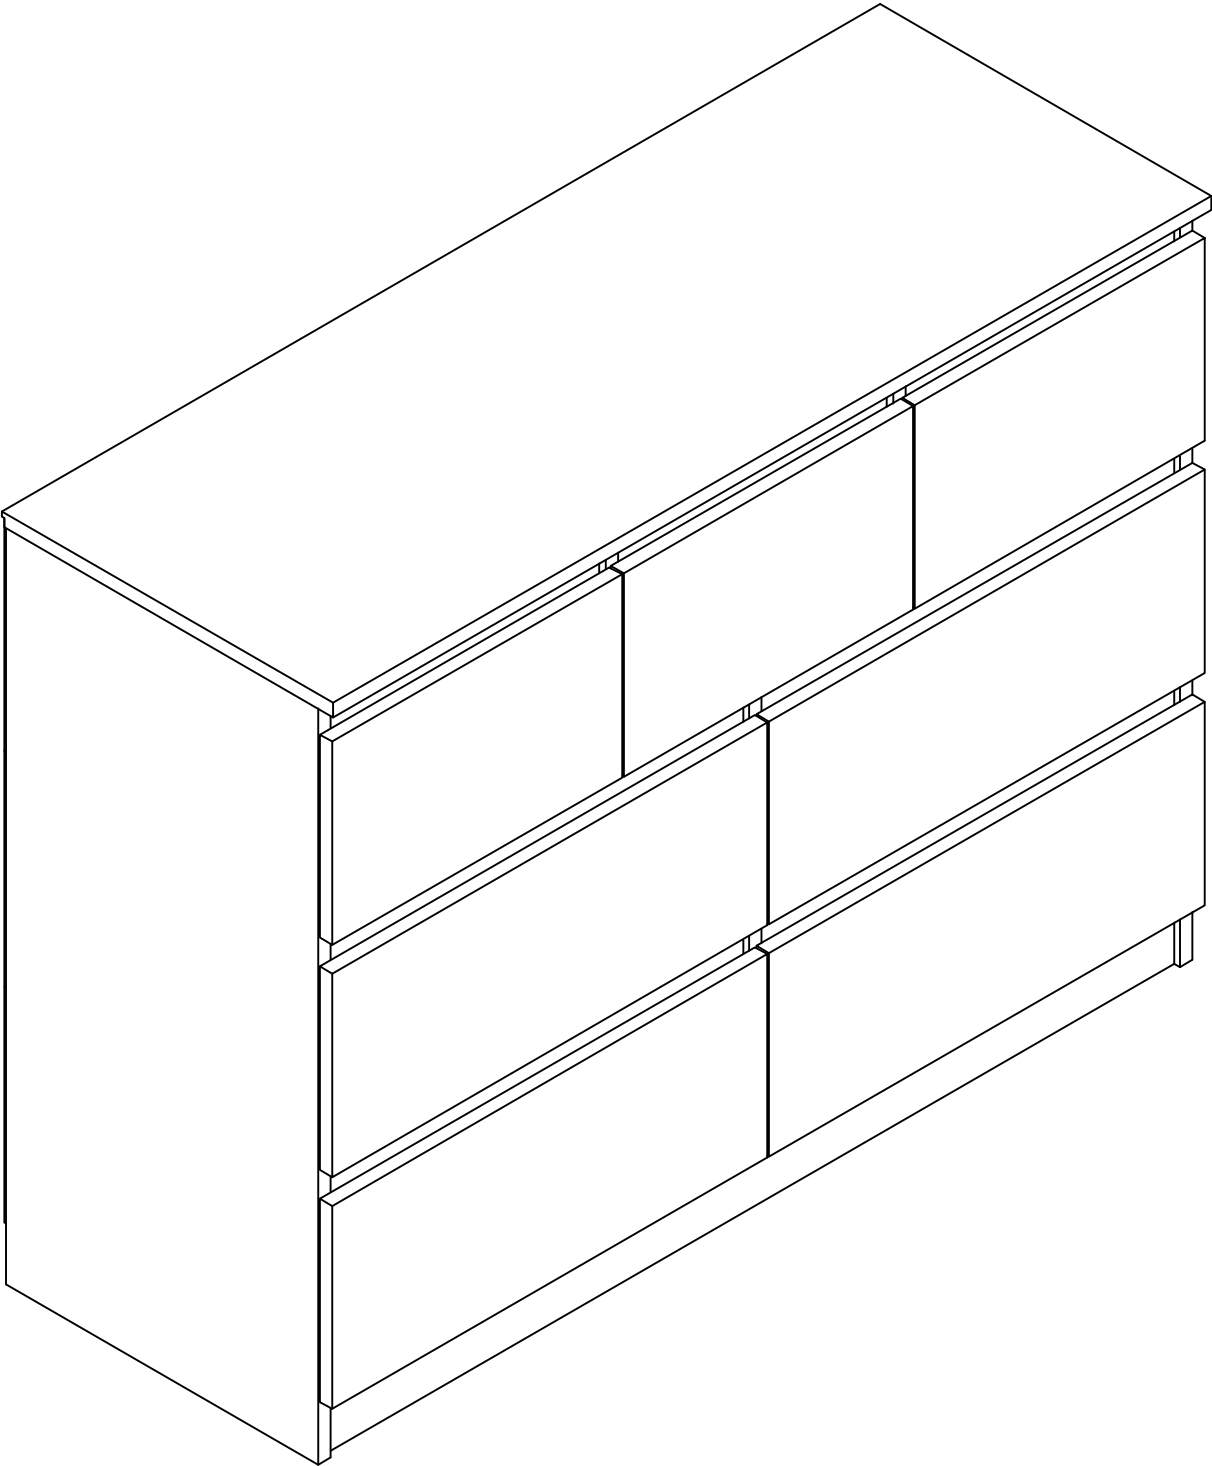

# Safety and Care Advice

**IMPORTANT - Please Read This Instruction Carefully Before Assembly.**






- Check you have all the components and tools listed on page 3.
- Do not stand or put weight on the product, this could cause damage.
- Do not use power drill/drivers for assembly, or the unit may be damaged.
- Remove all settings from the plastic bags and separate them into their groups.
- Assemble the item as close to it's intended position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit.
- Dispose of all packaging carefully and responsibly.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before assembly.
- Parts of the assembly will be easier with 2 people.

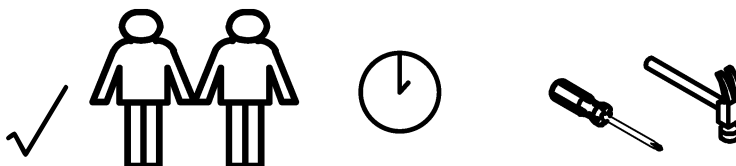

## CARE and MAINTENANCE

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.


## General Hints & Tips

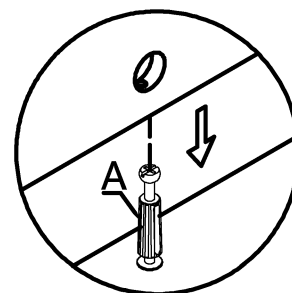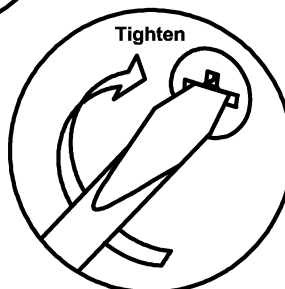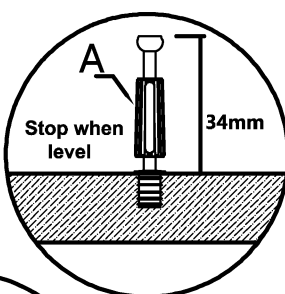
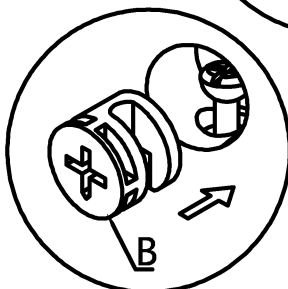
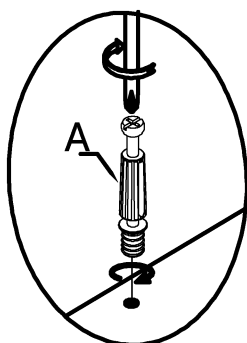








# Components and Tools

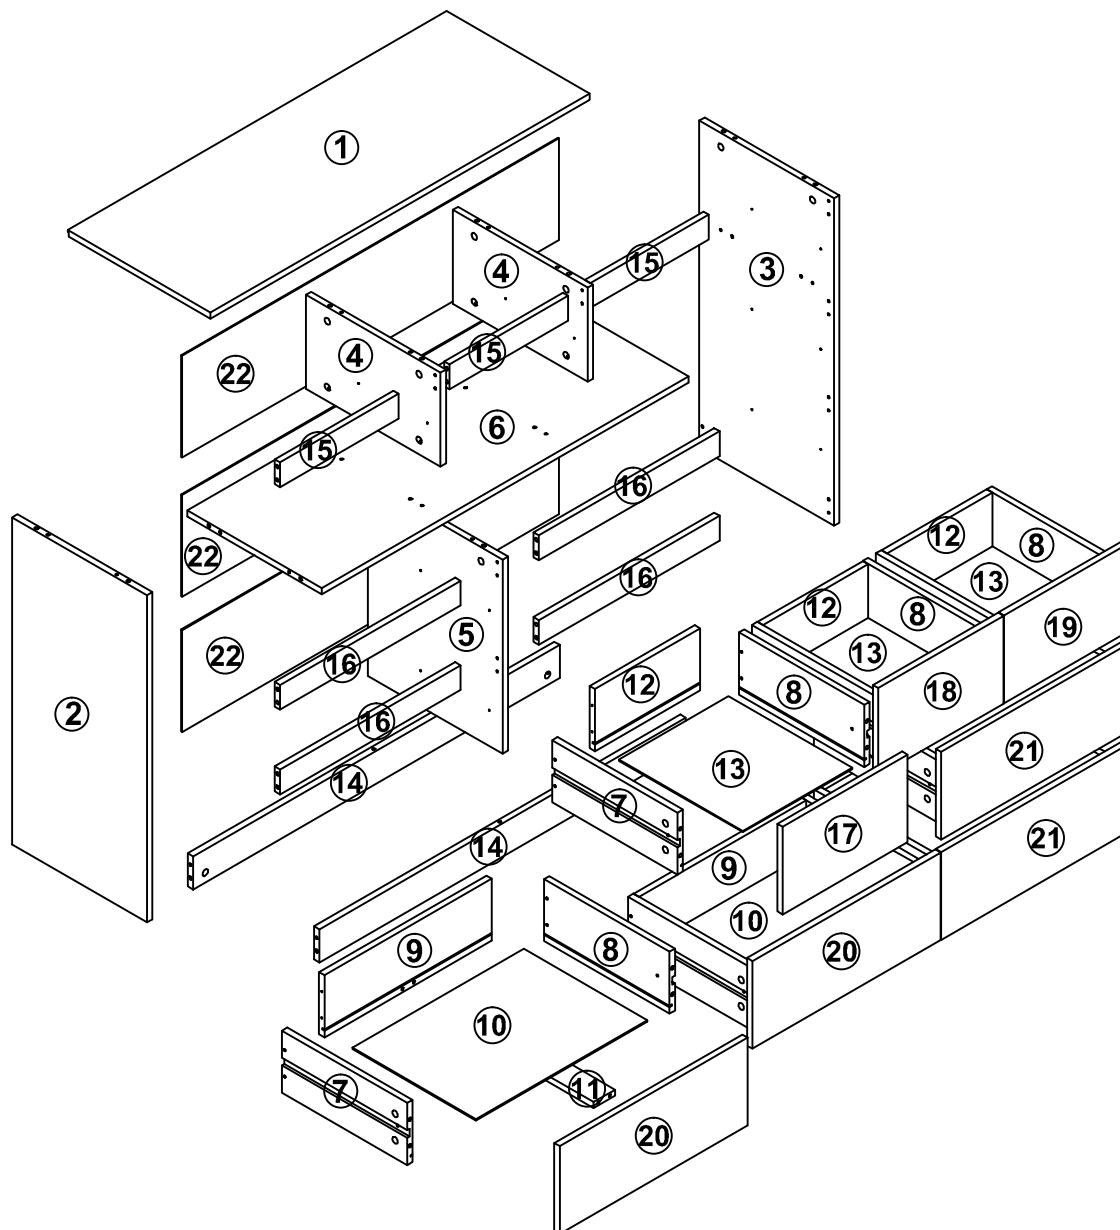**IMPORTANT - Please Check If You Have All The Components and Tools.**

**Note: The quantities below are the correct amount to complete the assembly. In some cases more pieces may be supplied than are required.**

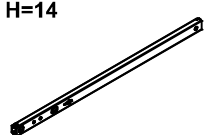


<b>A=78</b>  <b>Peg M6*34mm</b>	<b>B=78</b>  <b>Lock M15*12mm</b>	<b>C=40</b>  <b>Dowel M6*30mm</b>	<b>D=28</b>  <b>Screw M3.5*14mm</b>	<b>E=28</b>  <b>Screw M4*38</b>	<b>F=8</b>  <b>Plastic Feet</b>
<b>G=20</b>  <b>Pin</b>	<b>H=14</b>  <b>Drawer Runner</b>	<b>J=14</b>  <b>Screw M4*12mm</b>			

# Assembly Instruction

## Step 1




A=8

C=4



Peg


Dowel

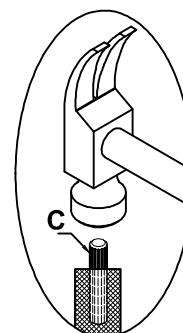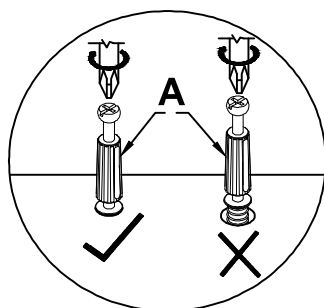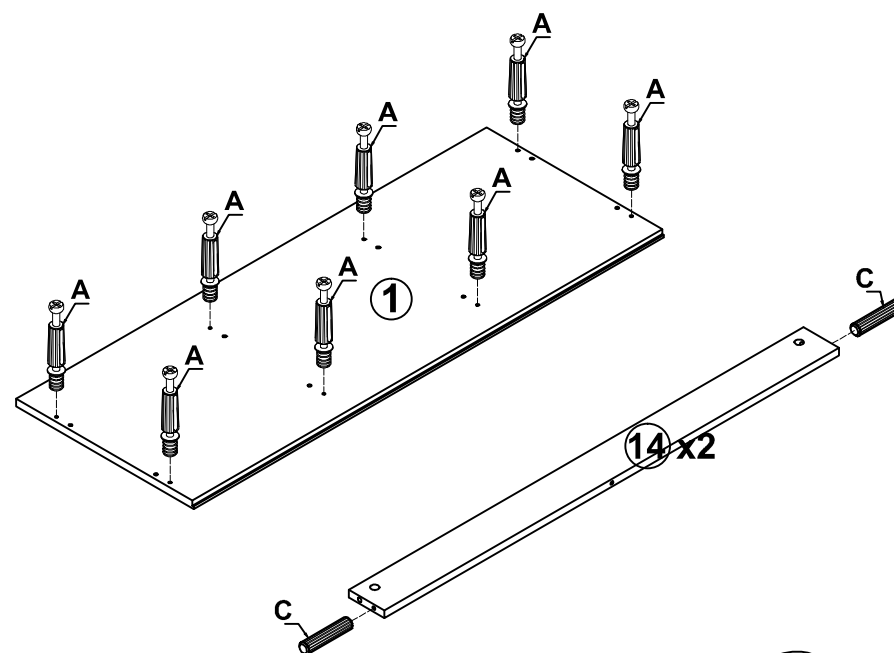

## Step 2


A=28

C=16



Peg

Dowel

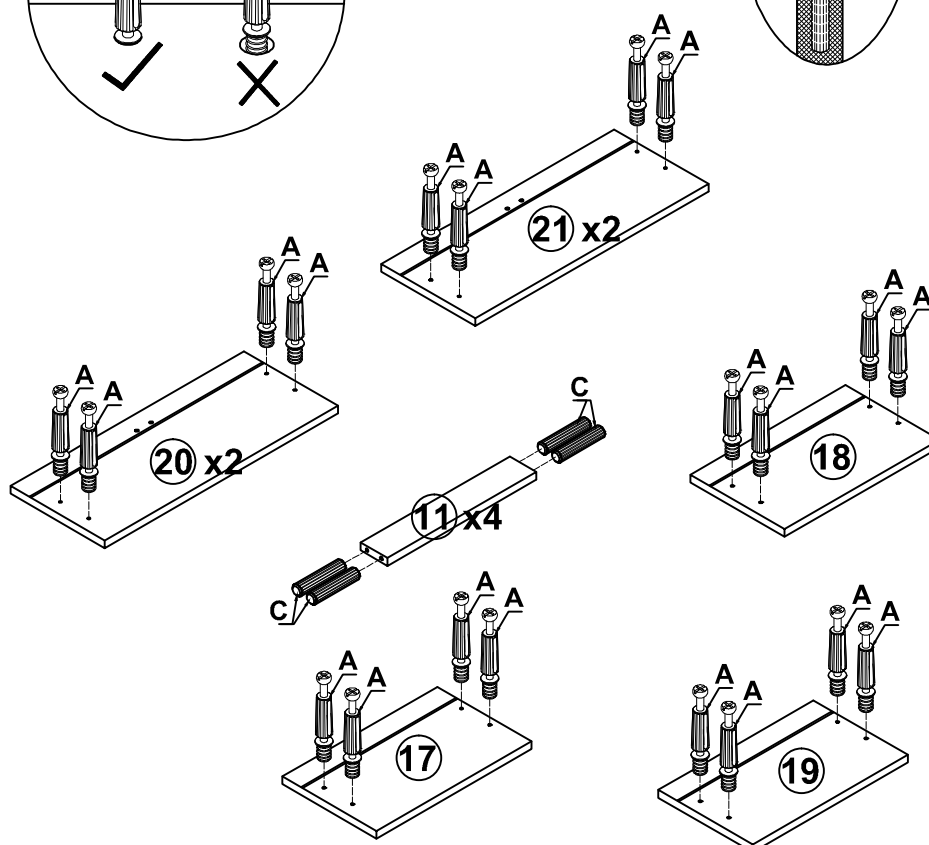


# Assembly Instruction

## Step 3


A=6

C=4



Peg


Dowel

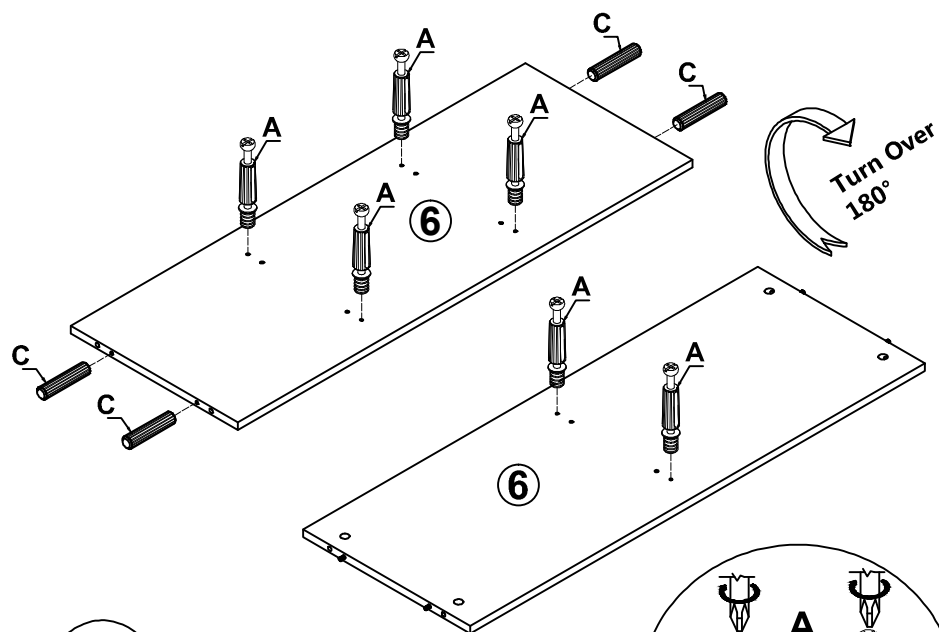

## Step 4

A=8

C=8




Peg

Dowel



Drawer Runner

Screw M3.5\*14mm

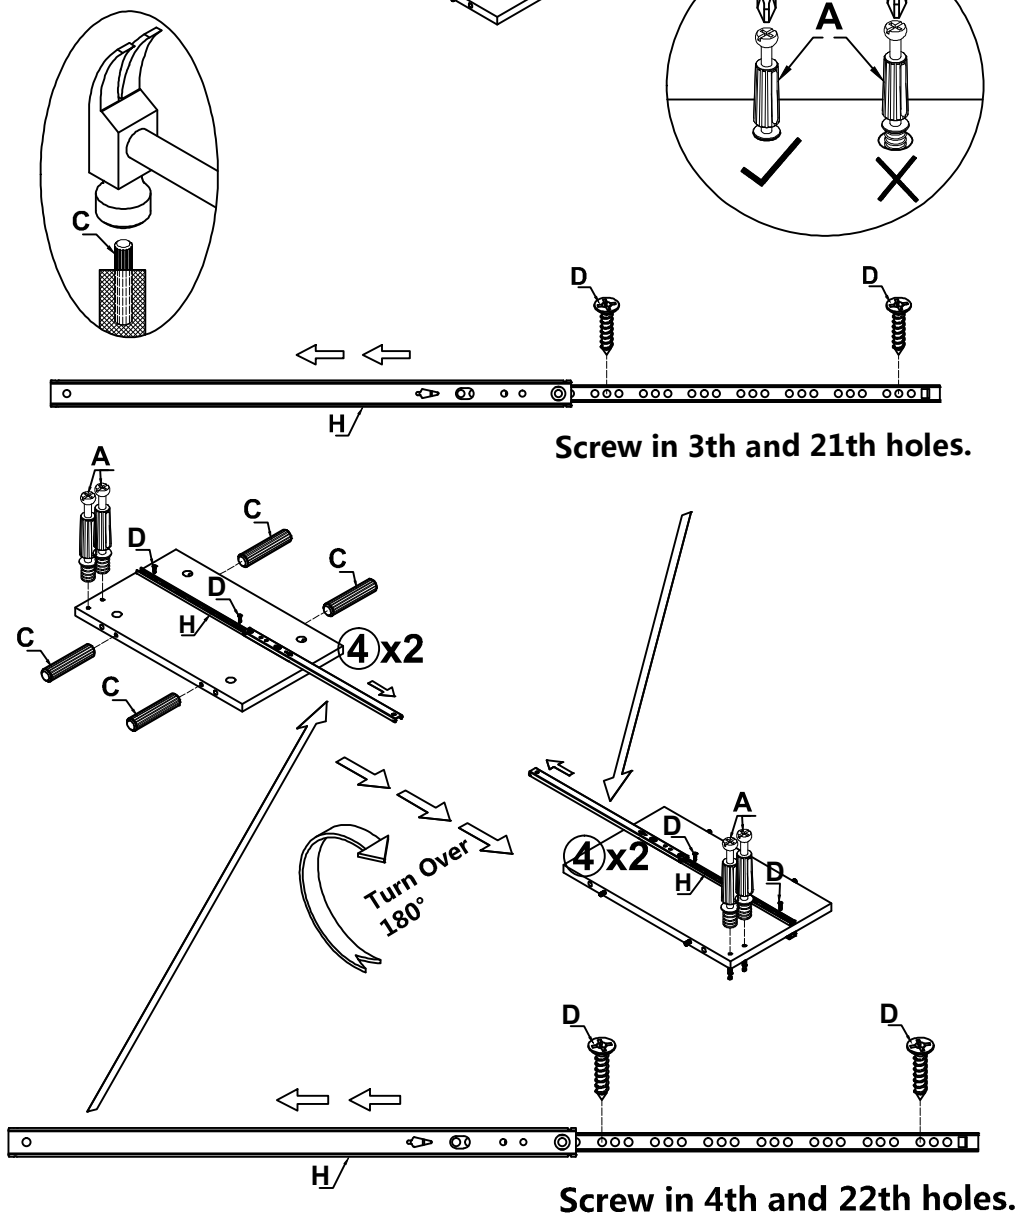

# Assembly Instruction

## Step 5

A=8

C=4



Peg

Dowel


H=4

D=8



Drawer  
Runner

Screw  
M3.5\*14mm

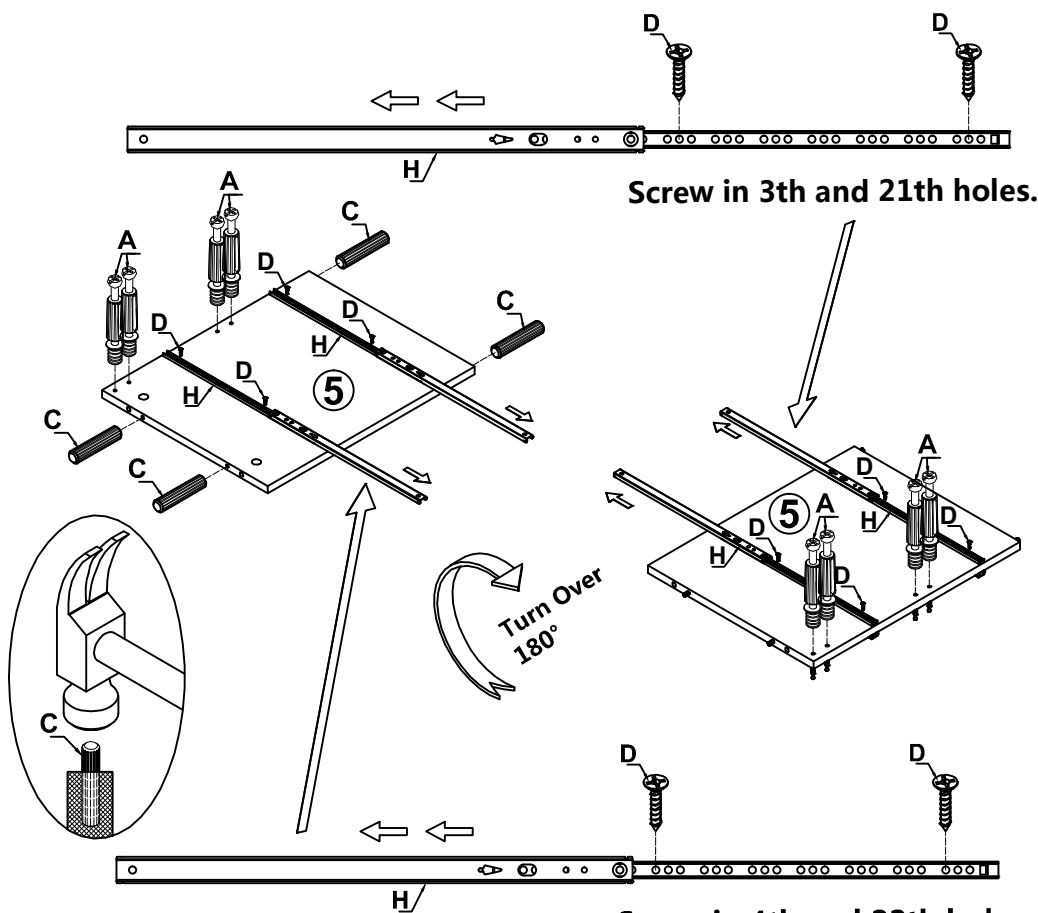

## Step 6

A=10

H=3



Peg

Drawer  
Runner



D=6

C=2



Screw  
M3.5\*14mm

Dowel

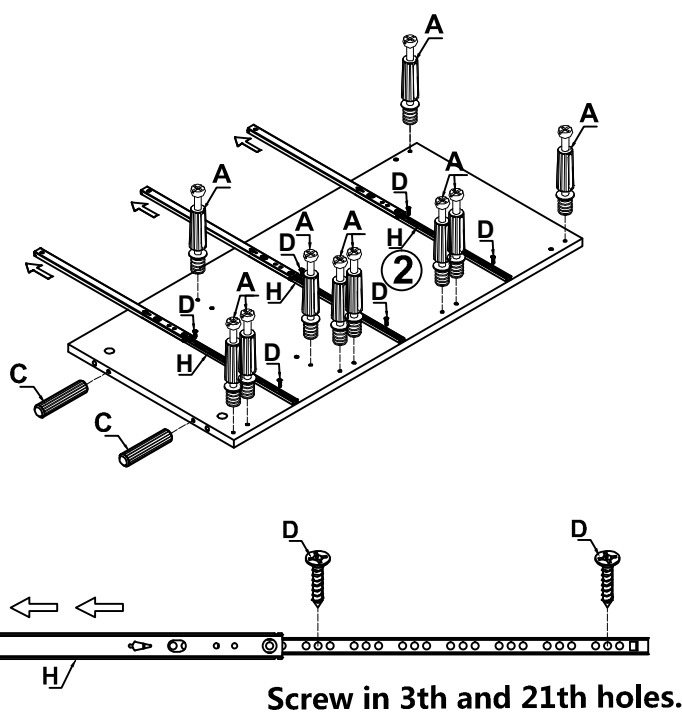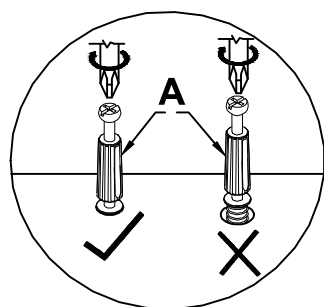

# Assembly Instruction

## Step 7

A=10

H=3



Peg

Drawer Runner





D=6

C=2



Screw  
M3.5\*14mm

Dowel

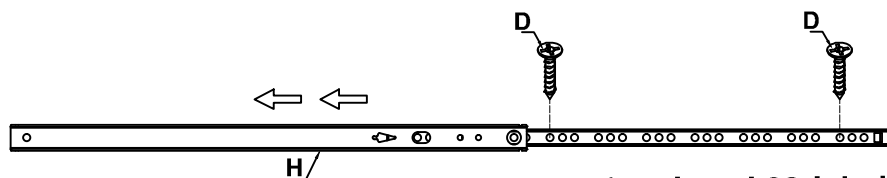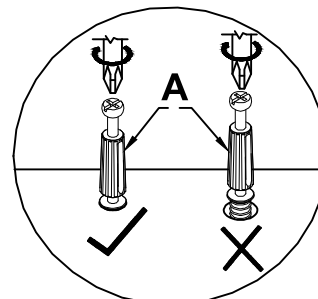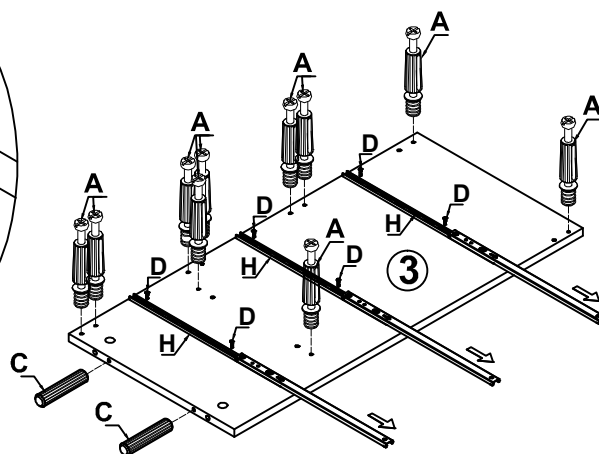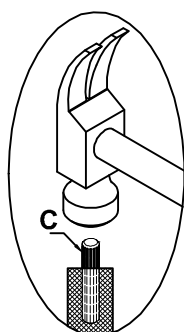



Screw in 4th and 22th holes.

## Step 8

B=4



Lock

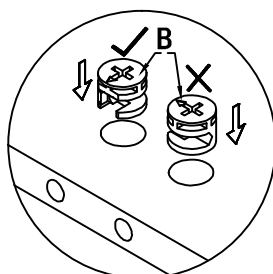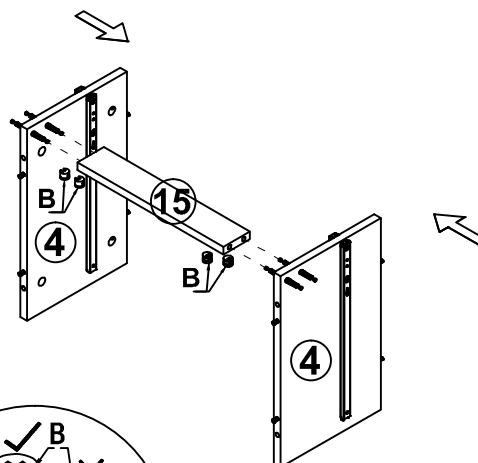



# Assembly Instruction

## Step 9

B=4



Lock

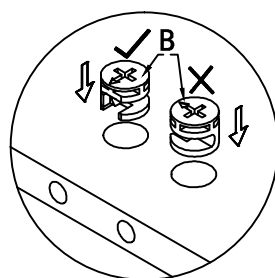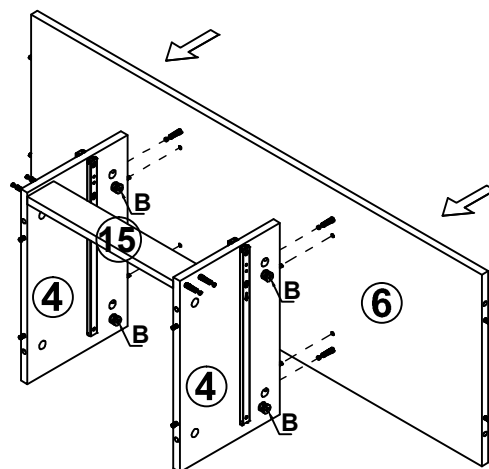


## Step 10

B=2



Lock

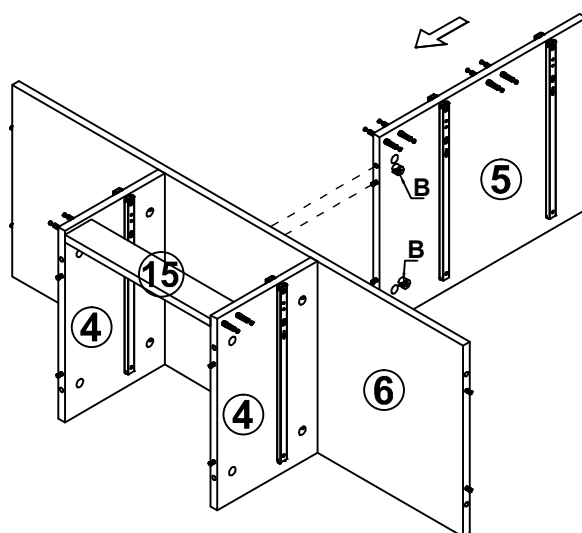





# Assembly Instruction

## Step 11

B=12



Lock

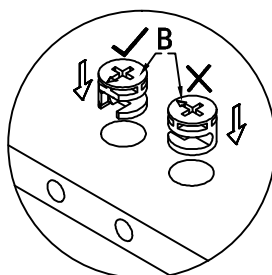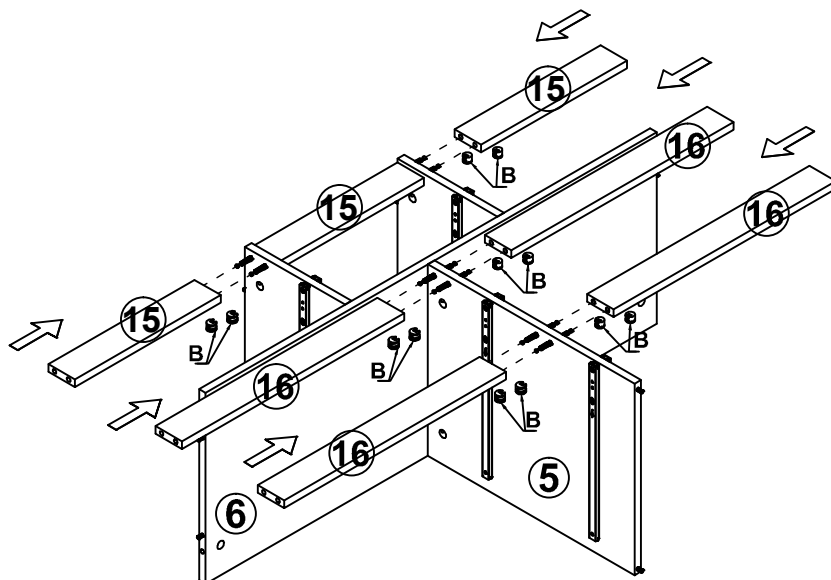


## Step 12

B=8



Lock

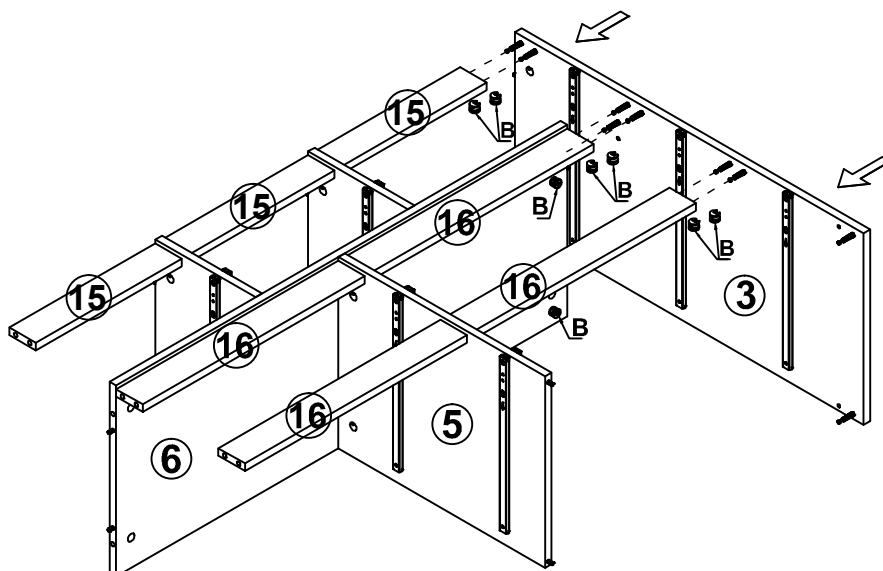


# Assembly Instruction

## Step 13

B=12



Lock

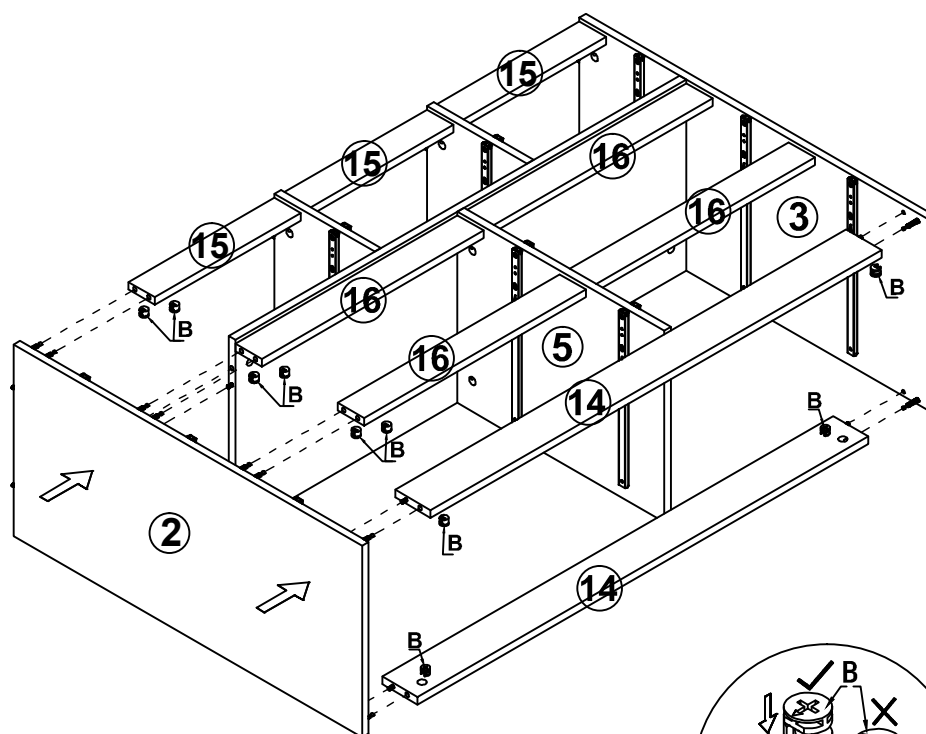


## Step 14

B=8



Lock

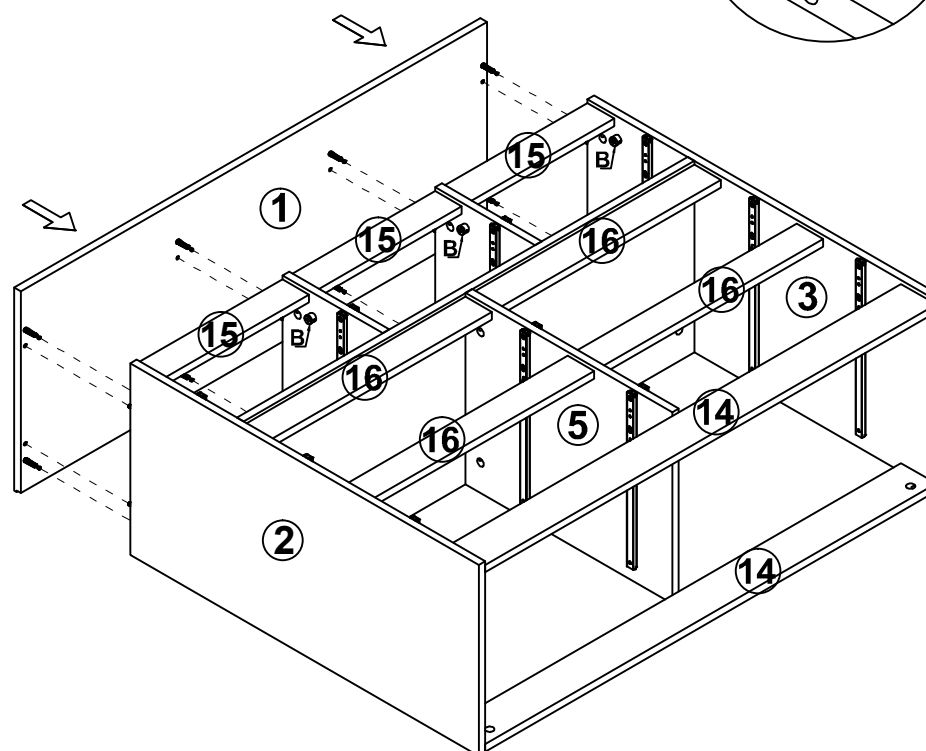

# Assembly Instruction

## Step 15


G=18

F=8



Pin

Plastic  
Foot

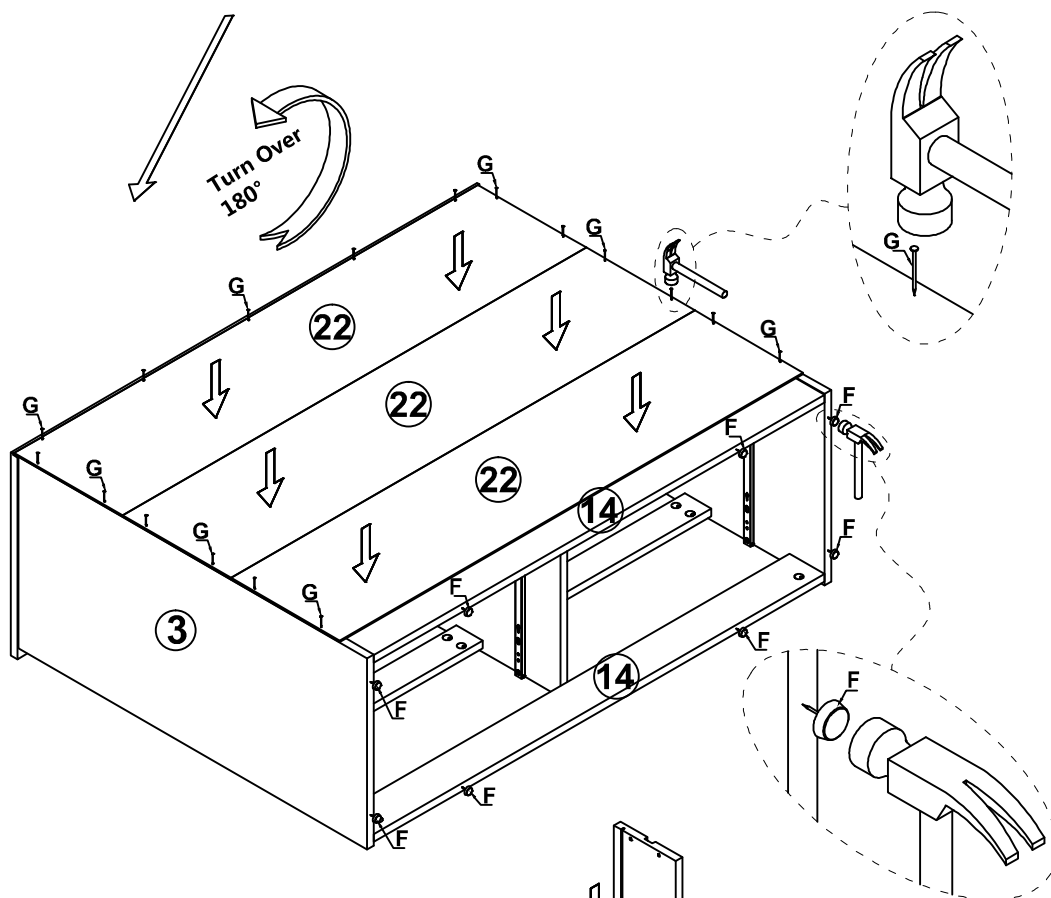

## Step 16


B=12

E=12



Lock

Screw  
M4\*38

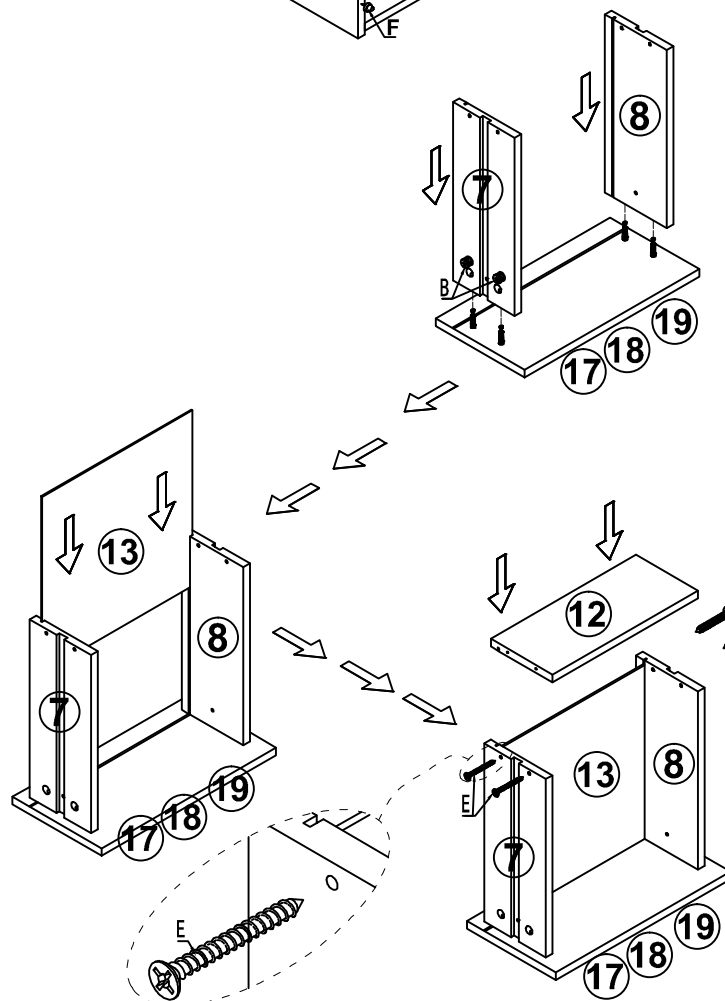


# Assembly Instruction

## Step 17

B=16



Lock

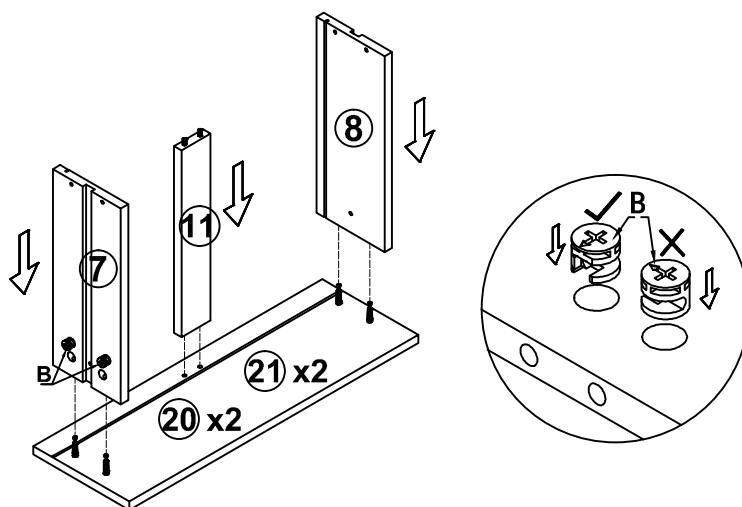


## Step 18

E=16




Screw  
M4\*38

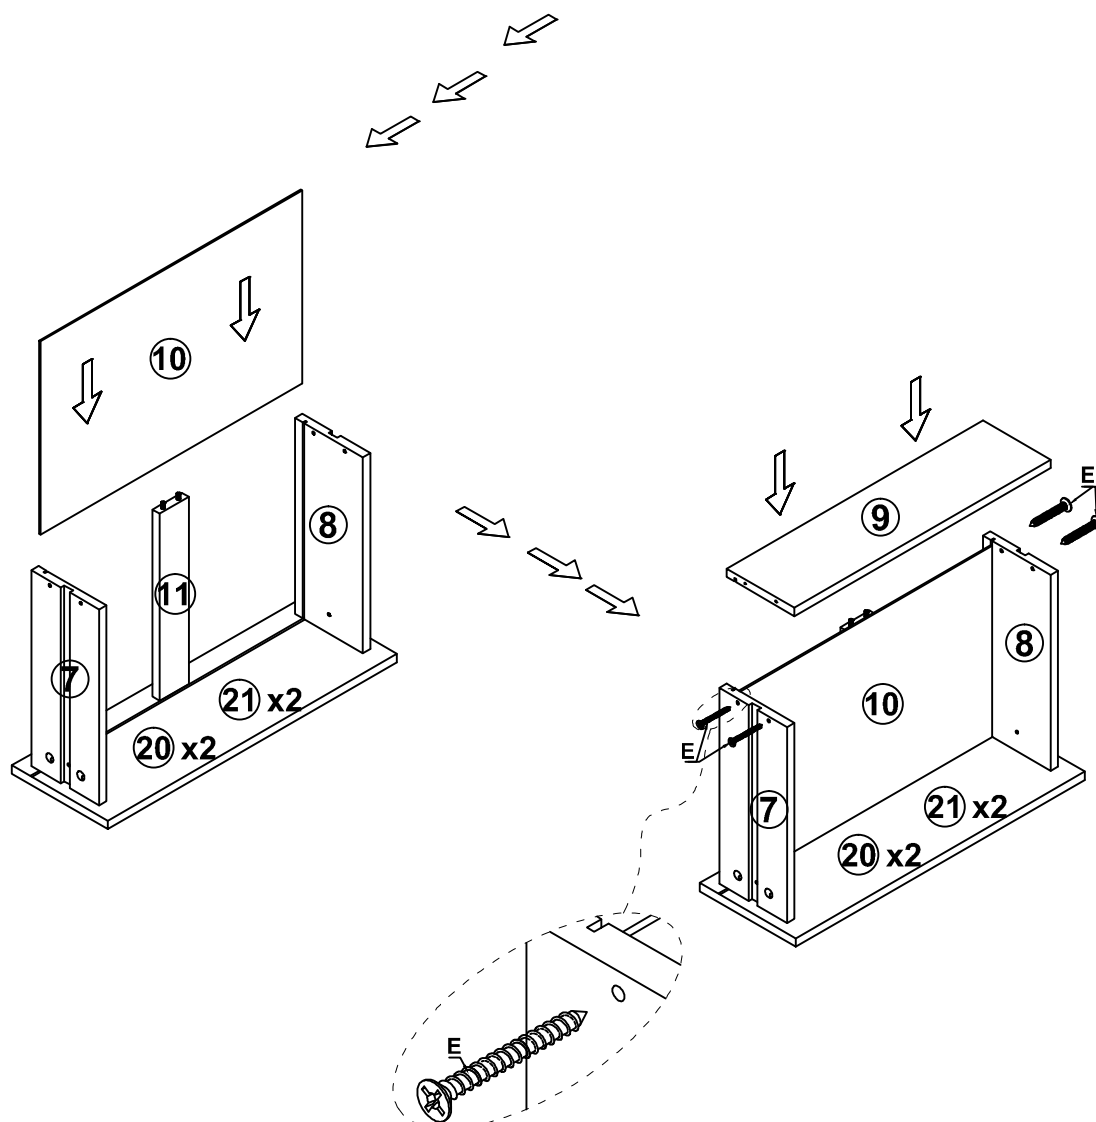


# Assembly Instruction

## Step 19

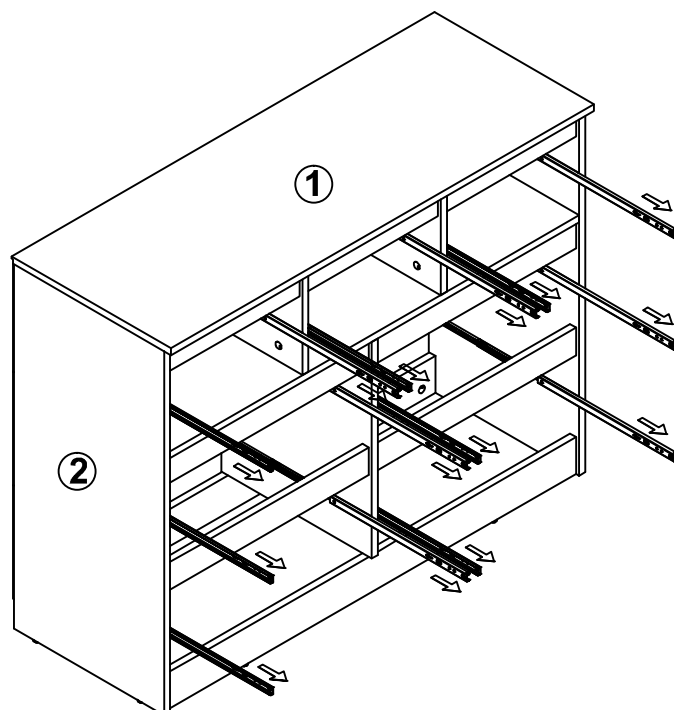

## Step 20

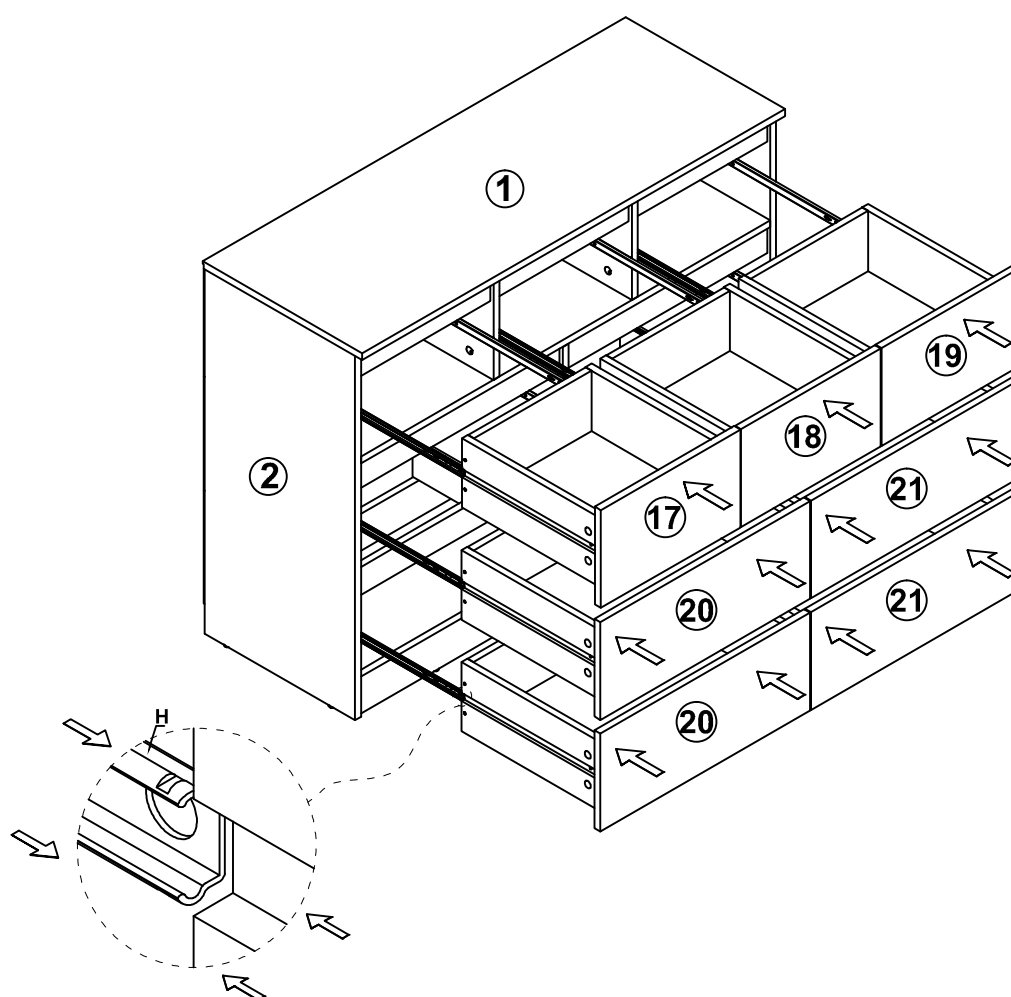


# Assembly Instruction

## Step 21


J=14



Screw  
M4\*12mm

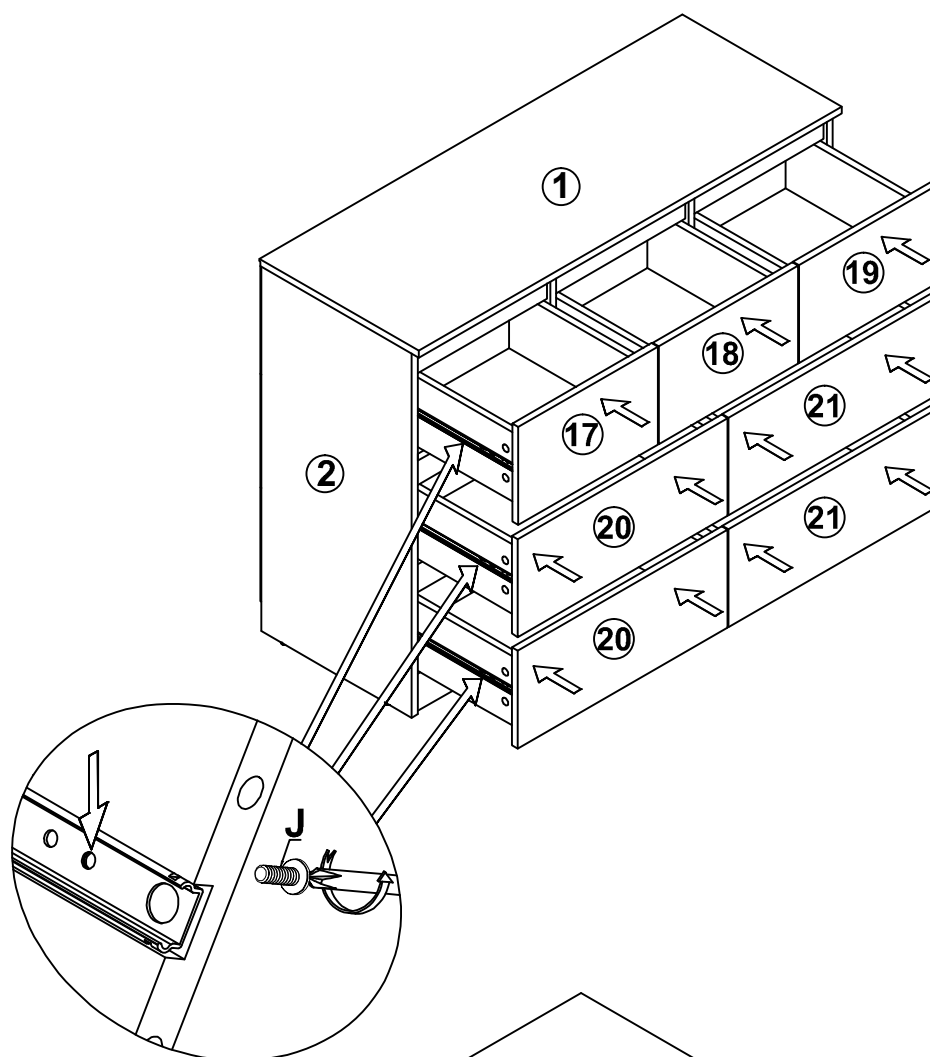

## Step 22

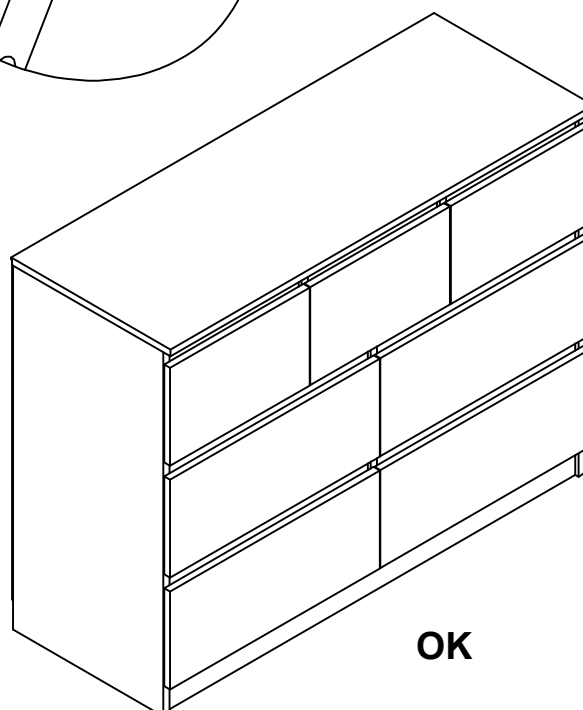

OK