


INSTALLATION GUIDE

EVIVA WALL MOUNT VANITY

CABINET INSTALLATION


1

Place cabinet (D) in designated location and mark the bracket position on the wall.

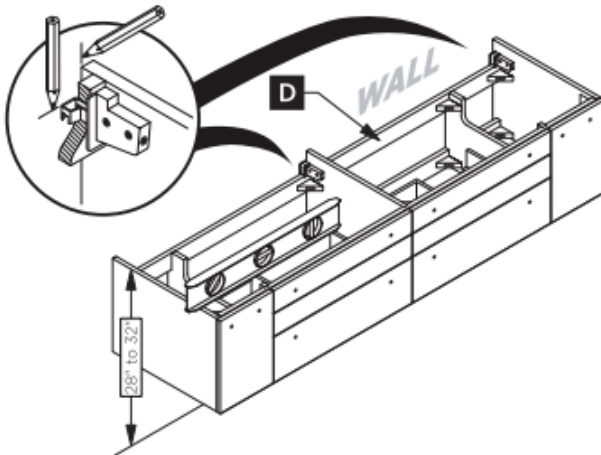

2


Attach wall brackets (E) to the wall with the screws (F).

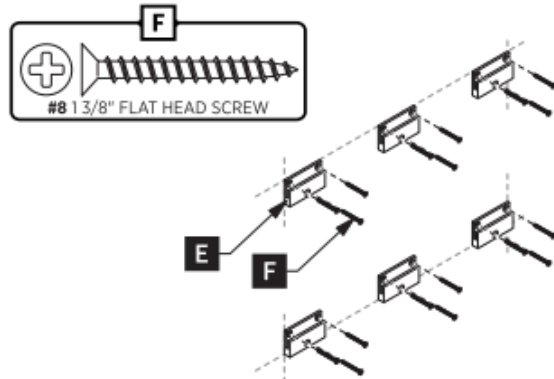

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.


3

Apply a bead of the silicone and hang a cabinet (D) on the brackets (E).

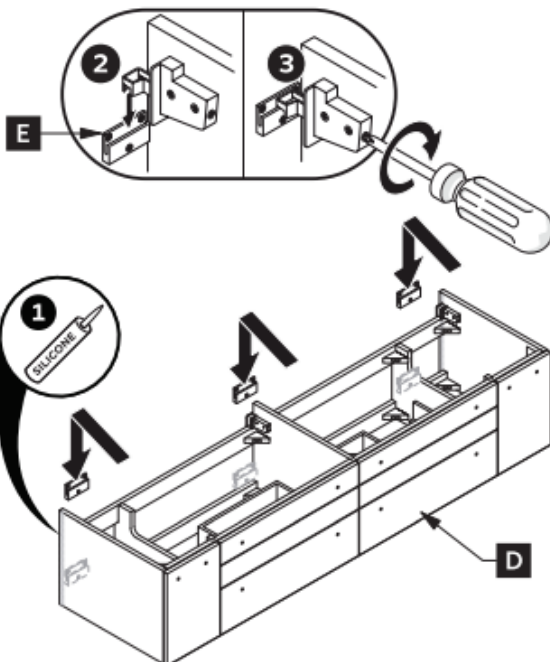

4


Attach the handles to the cabinet.

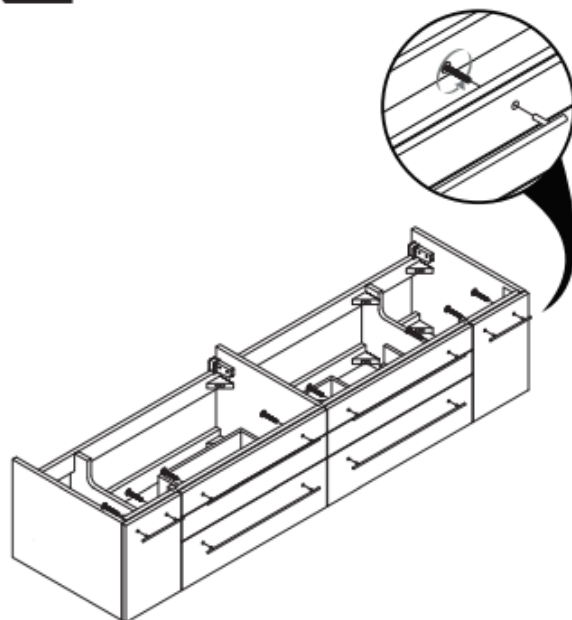

CABINET INSTALLATION


5

Flip the counter top upside down and attach the sinks to it using provided brackets & screws.

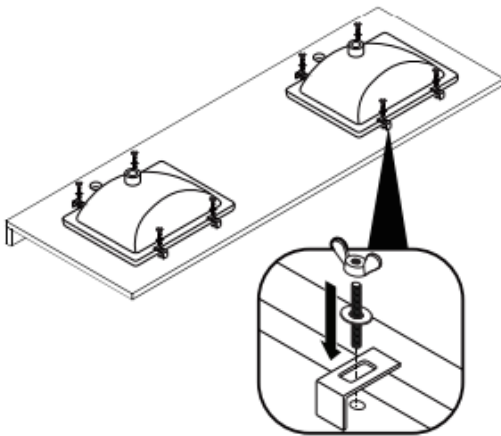


6

Put a bead of silicone on the top of the cabinet (D) then place counter top/ sinks (H) on the top of it.

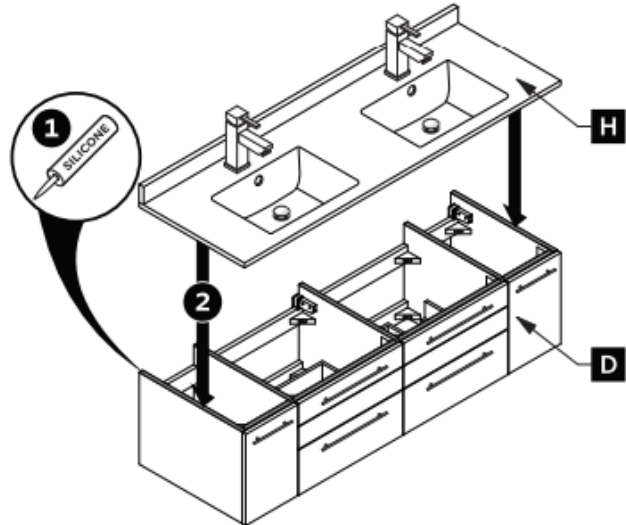

DRAWER REMOVAL & INSTALLATION

DRAWER REMOVAL

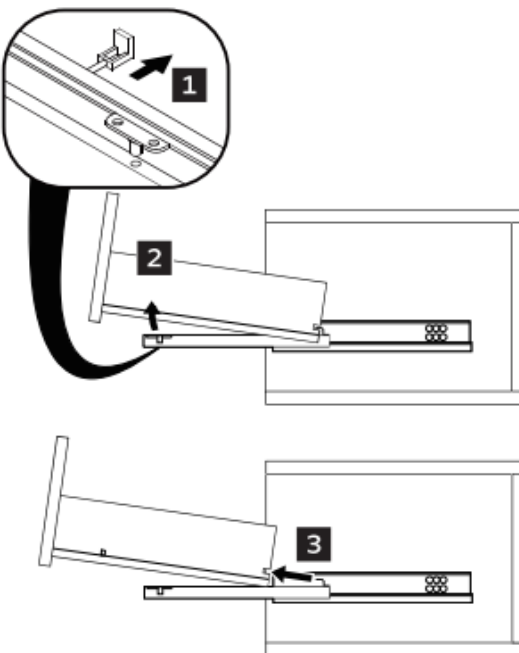

DRAWER INSTALLATION

