



ASSEMBLY INSTRUCTIONS












FULL FLOOR BED WITH BOOK SHELF (WITH DOOR)

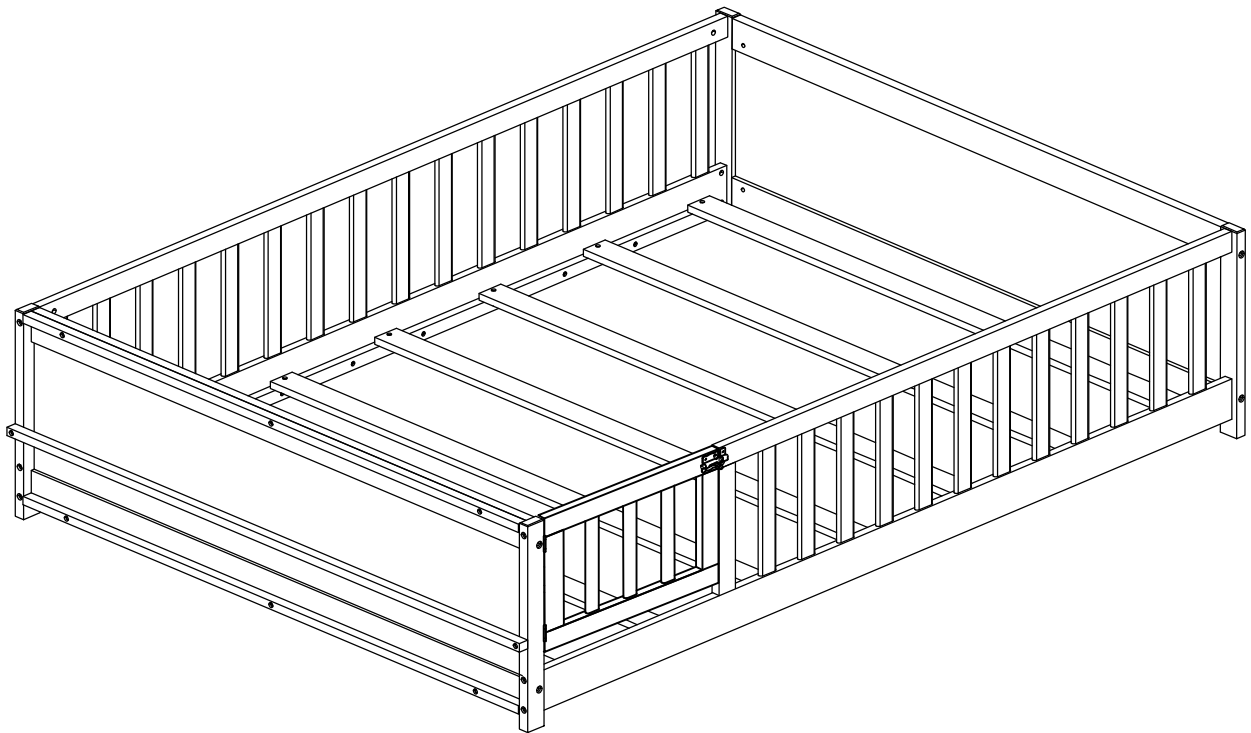










Detail View

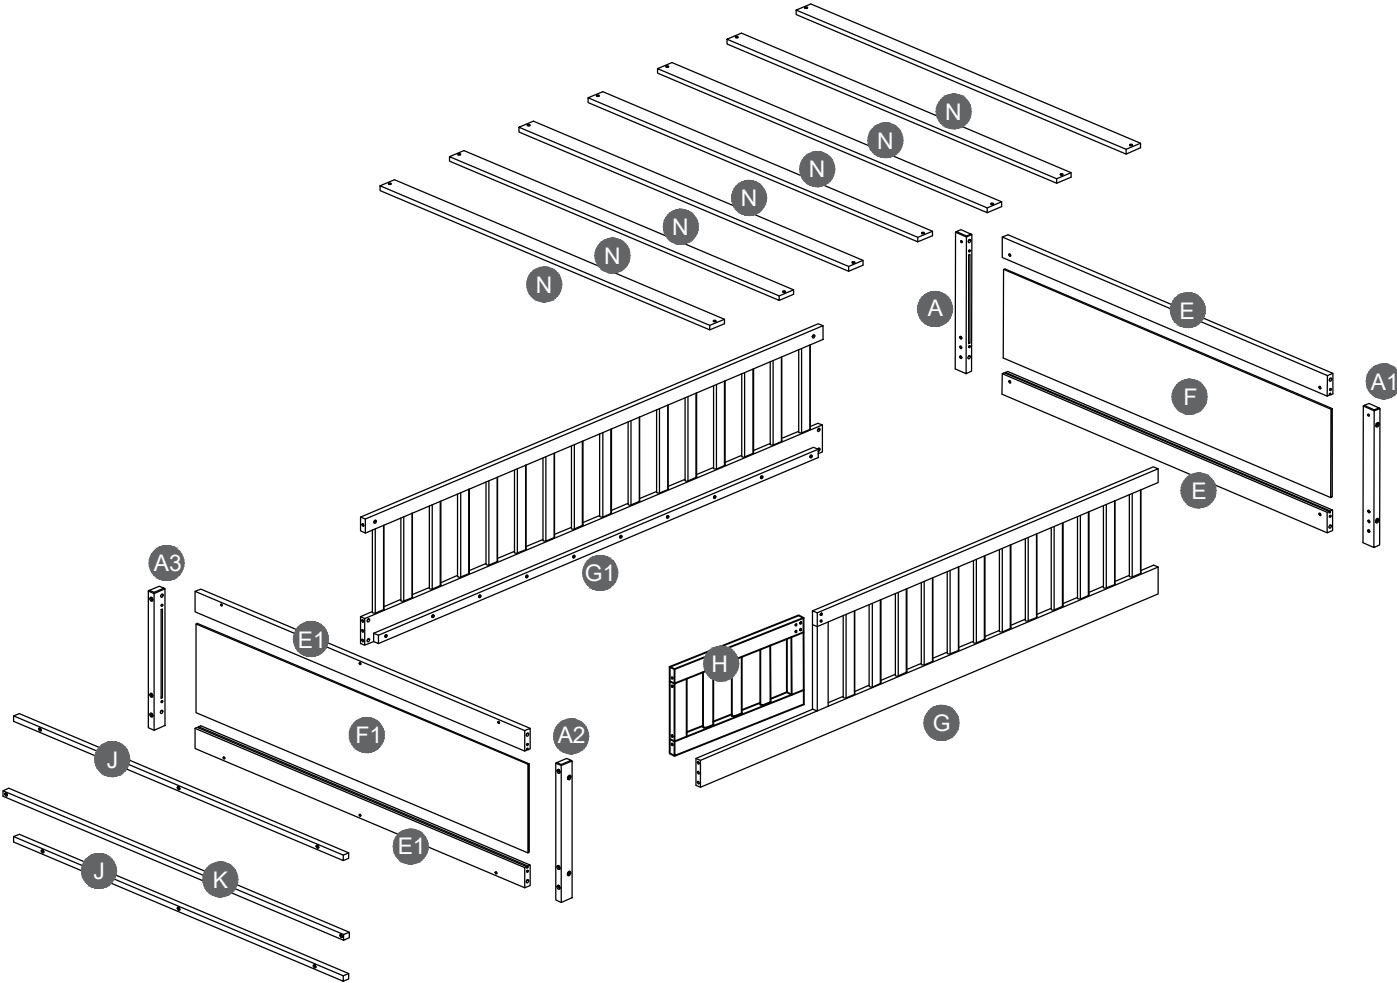



Part List

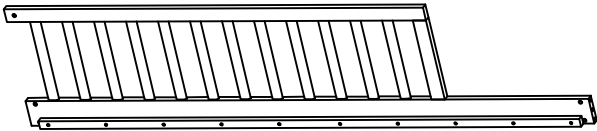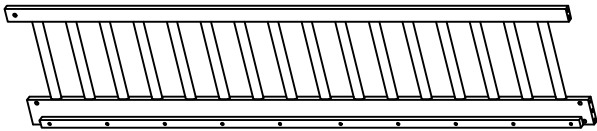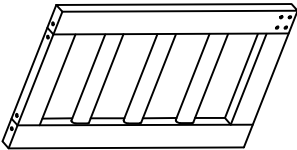A2  Leg - 1pc	A3  Leg - 1pc
A1  Leg - 1pc	A  Leg - 1pc
E1  Fb. Panel (Top & Bottom) - 2pcs	E  Hb. Panel (Top & Bottom) - 2pcs
F1  Fb. Mid. Panel (Long) - 1pc	F  Fb. Mid. Panel (Short) - 1pc
J  Fb. Support Bar (Top & Bottom) - 2pcs	K  Fb. Support Bar (Mid.) - 1pc
G  Side Rail Front - 1pc	G1  Side Rail Back - 1pc
H  Door - 1pc	N  Bed Slats - 7pcs

Hardware List


1	 M6 x 80mm JCBC (9pcs)	2	 M6 x 15mm Barrel Nut (19pcs)	3	 M10 x 40mm Wood Dowel (12pcs)
4	 Sticker Cap (2pcs)	5	 M6 x 65mm JCBC (10pcs)	6	 20 x 20 x 233mm Wood Block (1pc)
7	 M4 x 25mm CSK Screw (14pcs)	8	 M6 x 30mm JCBC-W (8pcs)	9	 6 x 24 x 55mm (135°) Hinges (2pcs)
10	 10 x 40 x 60mm Lock (1pc)	11	 M3.5 x 16mm CSK Screw (14pcs)	12	 M4 Allen Key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

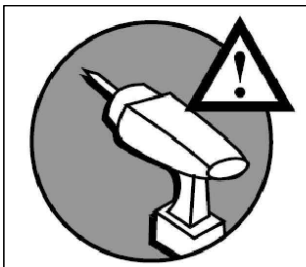


PLEASE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS

STEP 1:

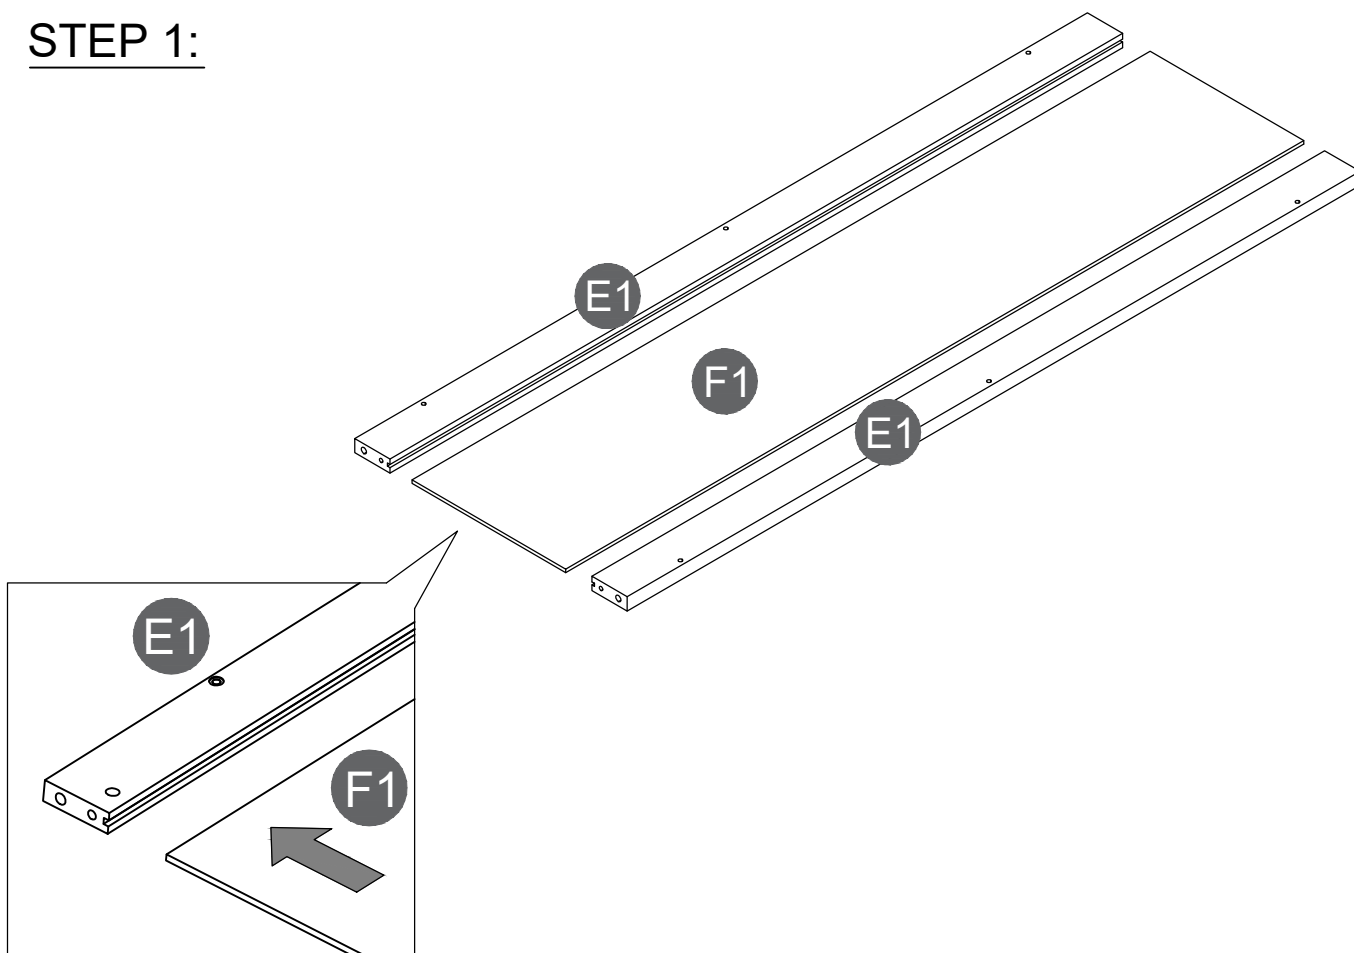


STEP 2:

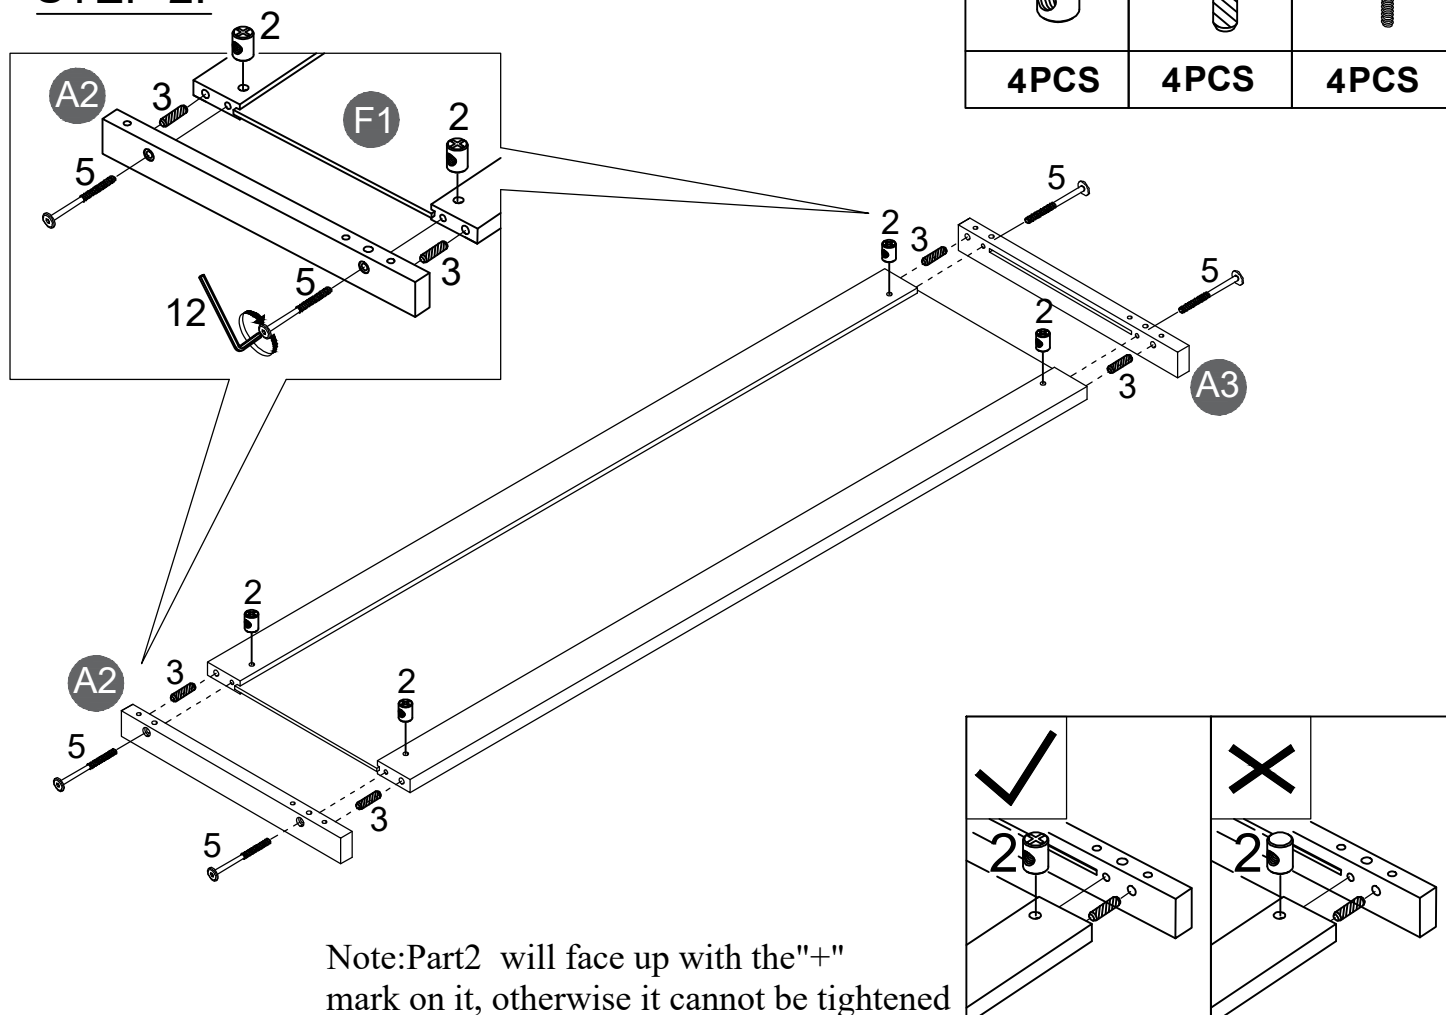


STEP 3:


8




8PCS

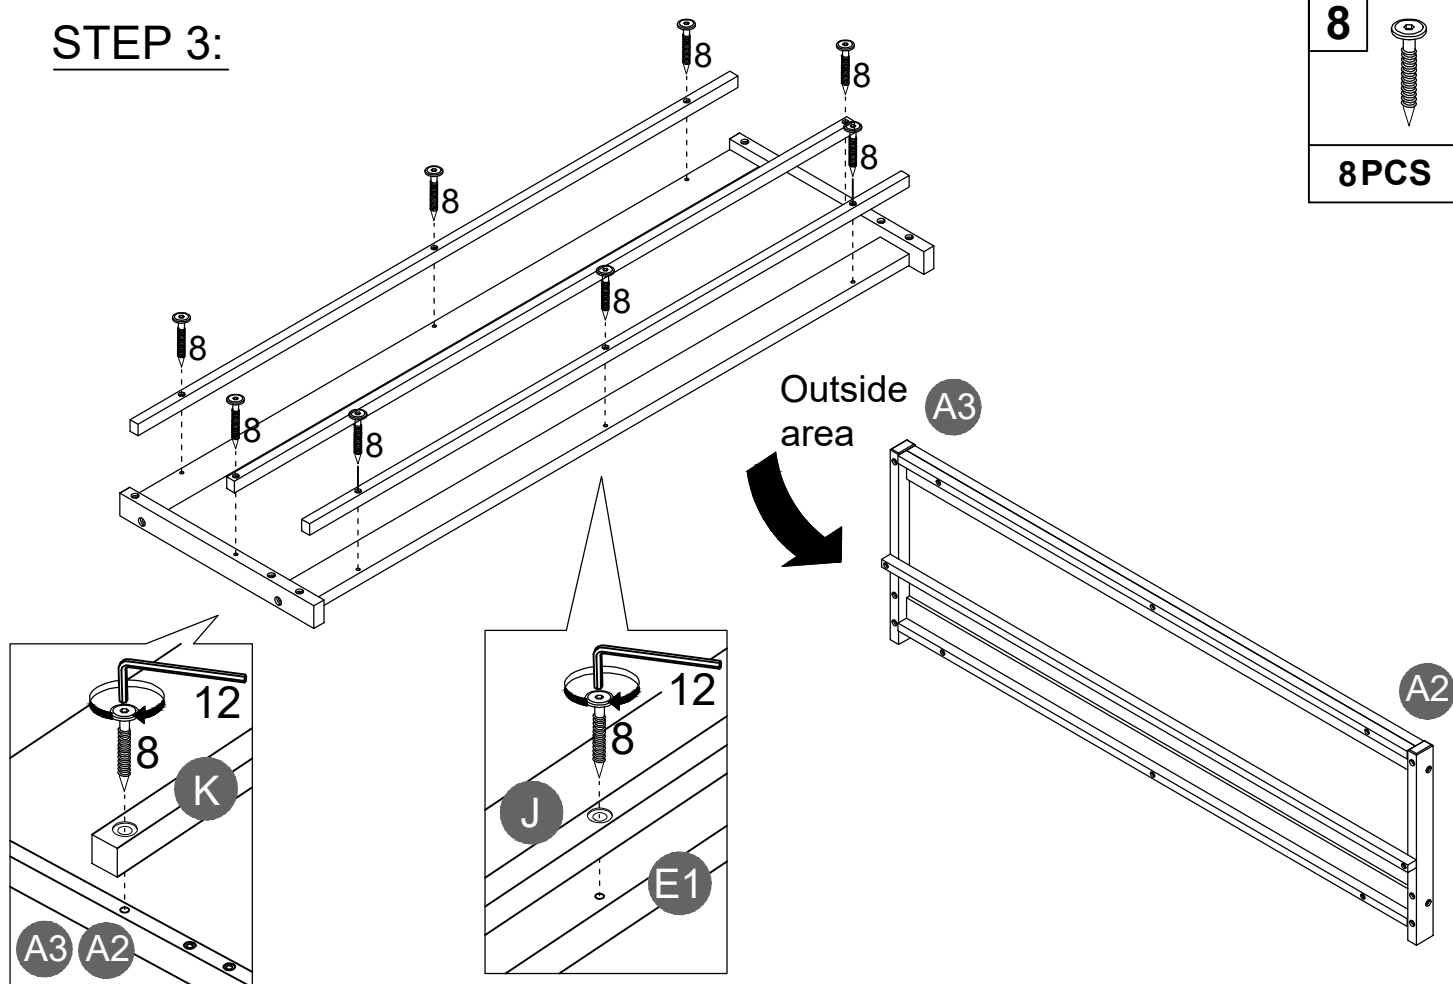


STEP 4:

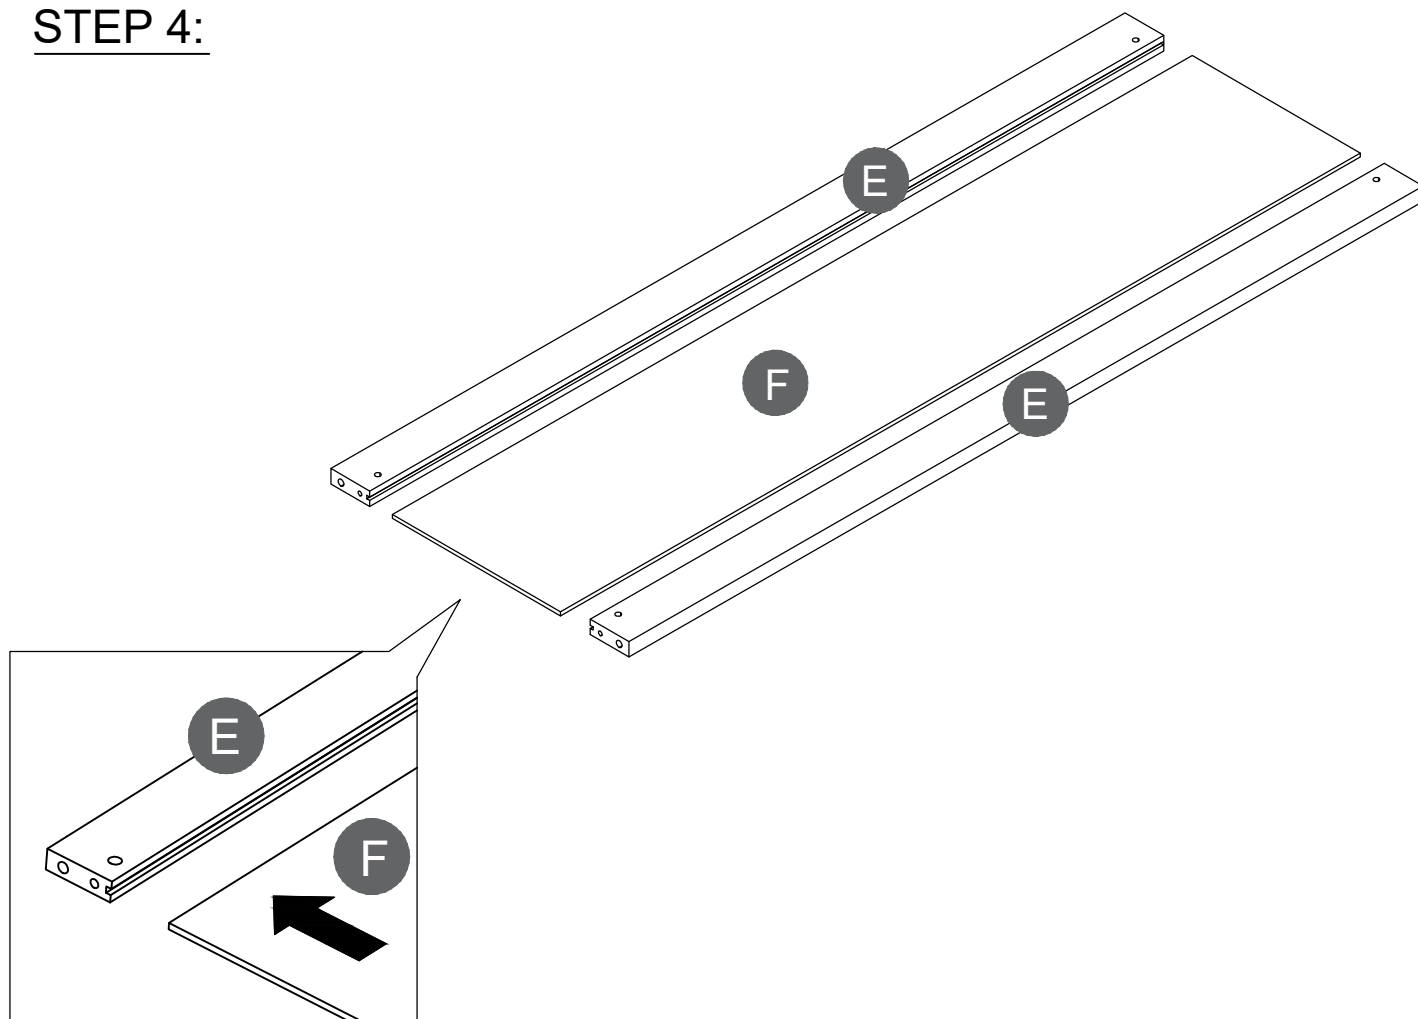


STEP 5:

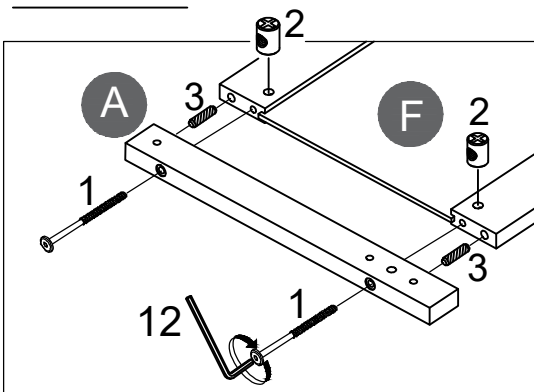

1	2	3
4PCS	4PCS	4PCS

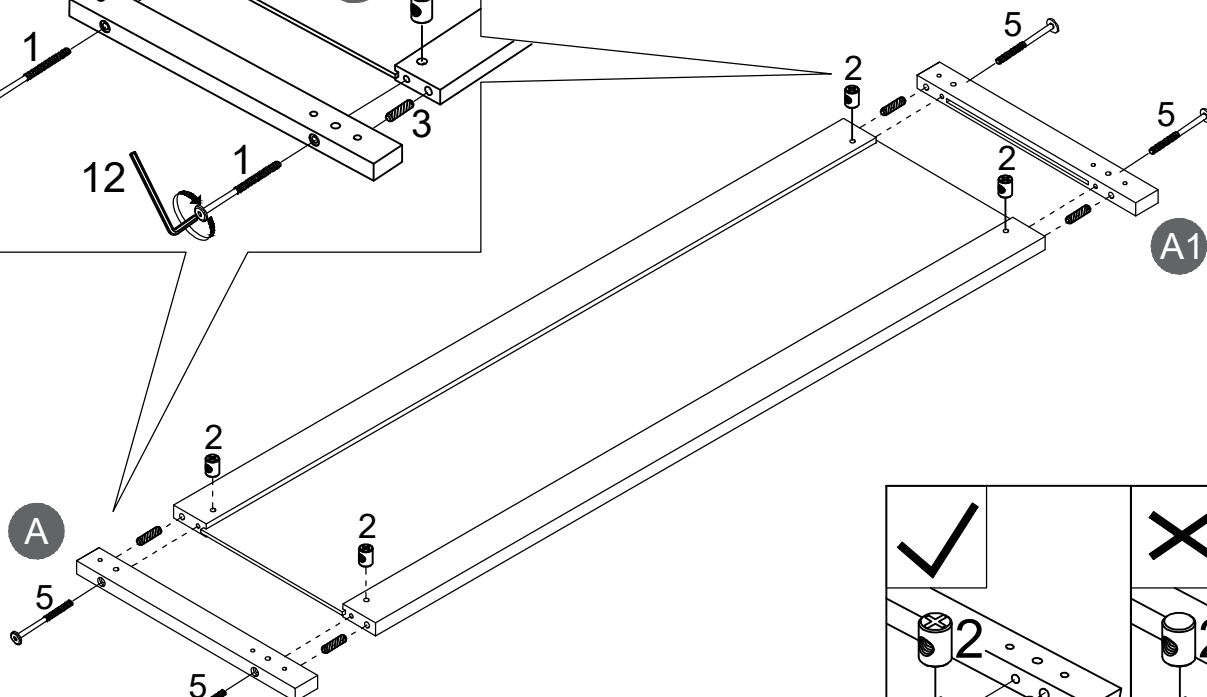


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

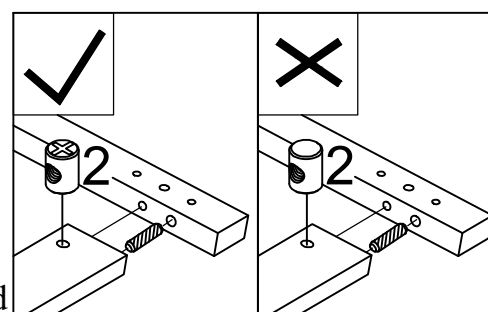


STEP 6:


1	2	3	4	5
5PCS	11PCS	4PCS	2PCS	6PCS

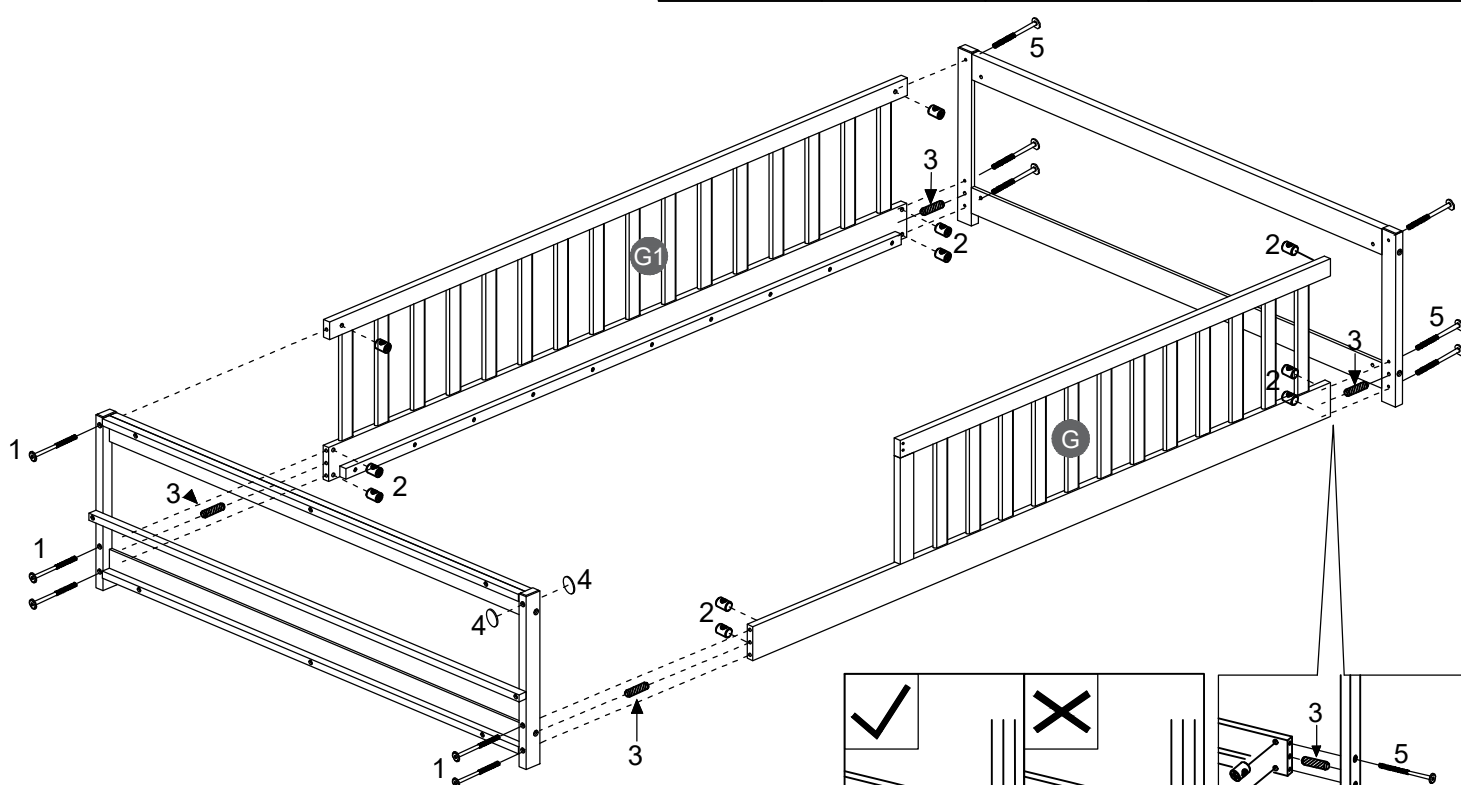

Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

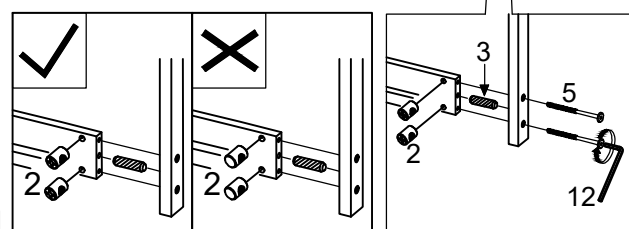


STEP 7:

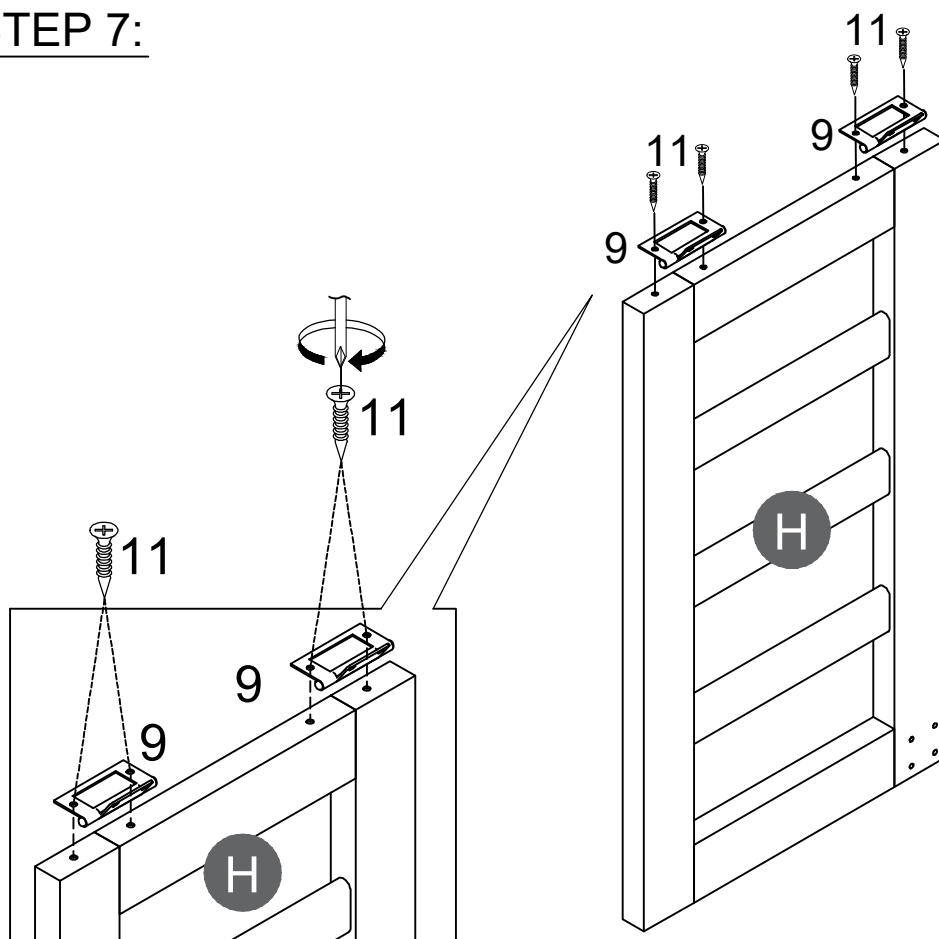


9	11
2 PCS	4 PCS


STEP 8:

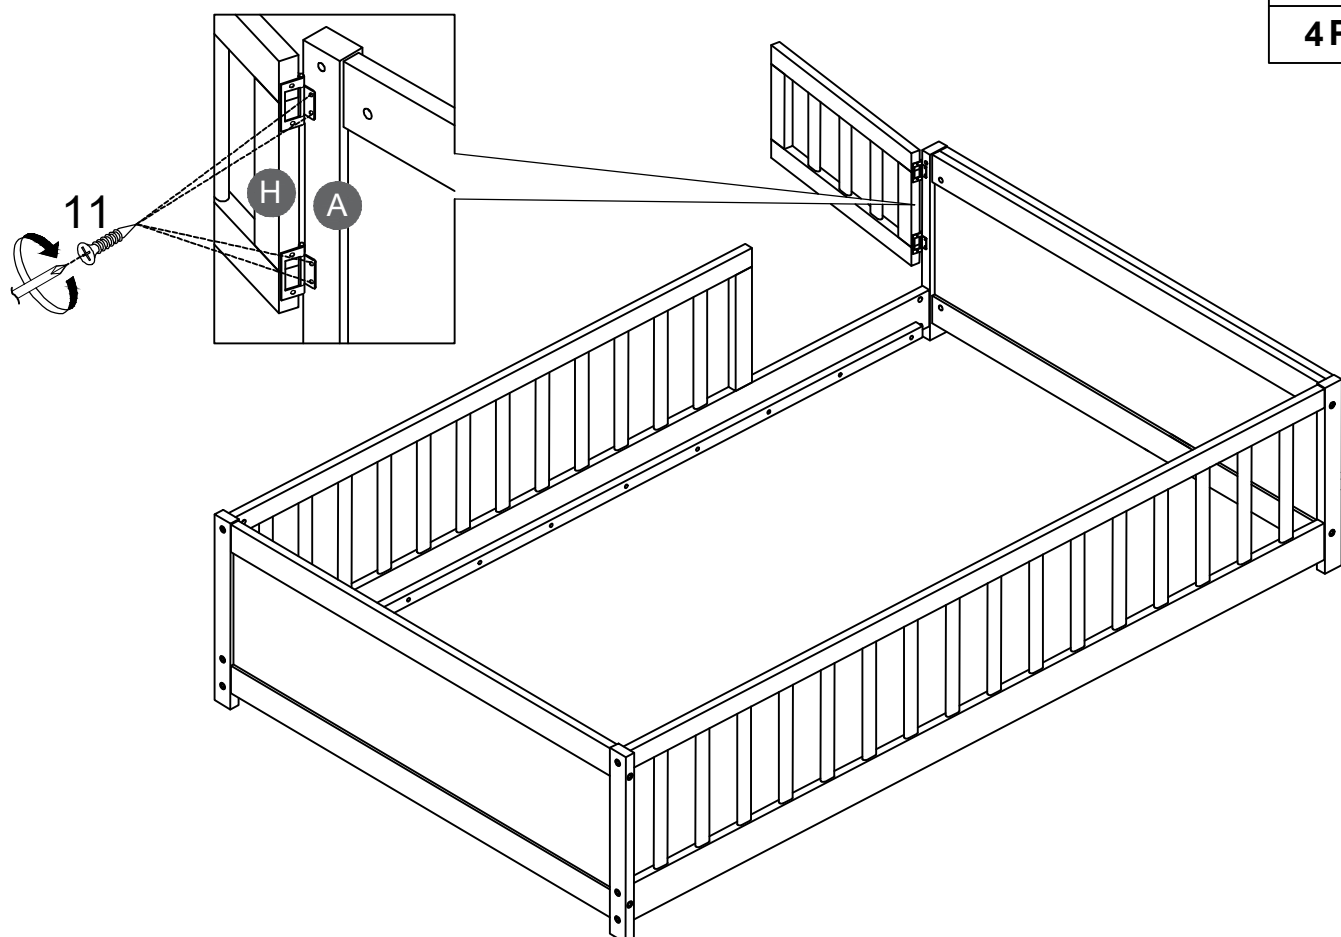


11
4 PCS


STEP 9:

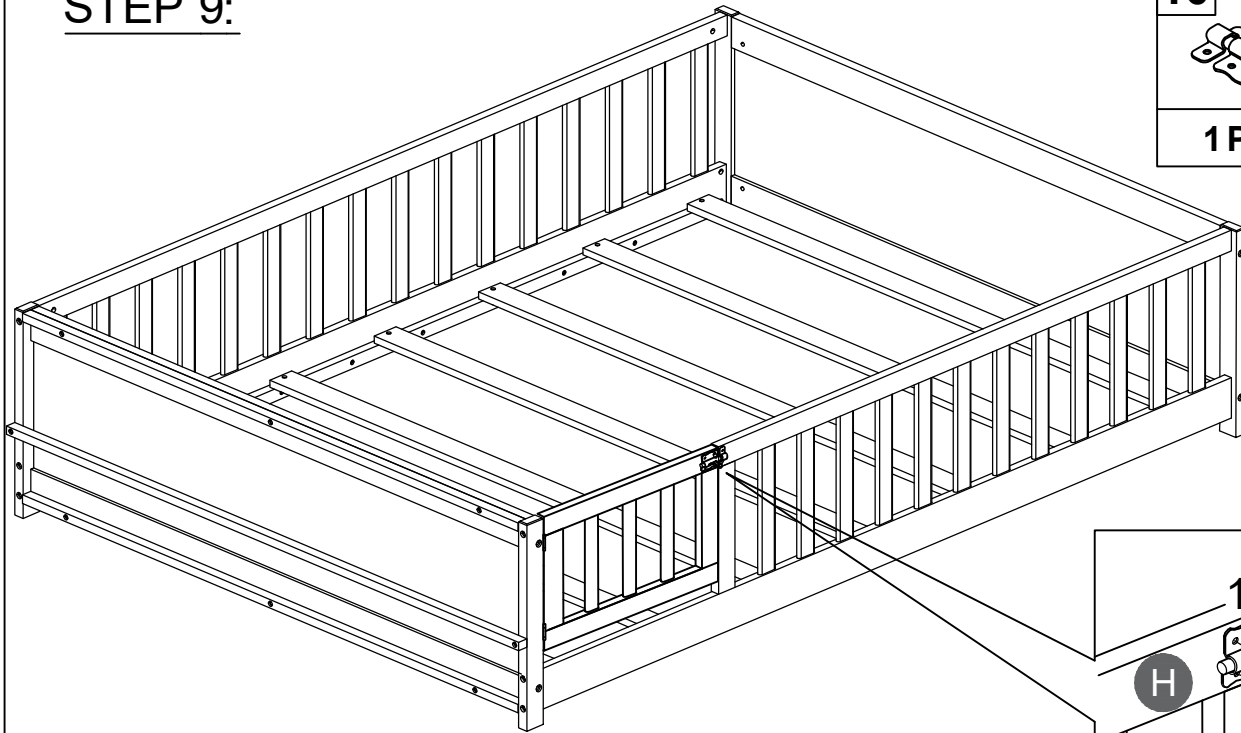


10	11
	
1 PC	6 PCS

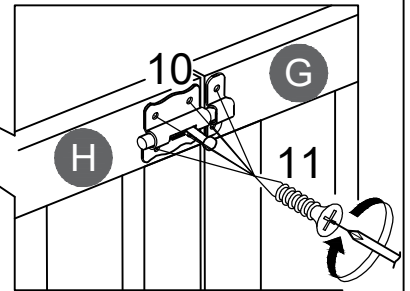




STEP 10:

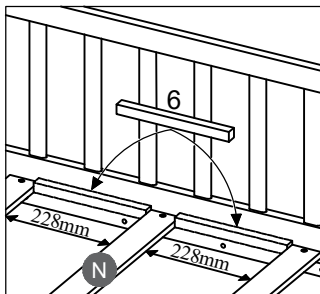

Note: Use Wood Block as a guidance distance between Bed Slats.

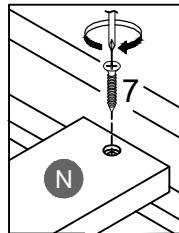

6	7
	
1 PCS	14 PCS

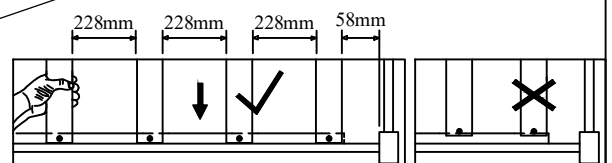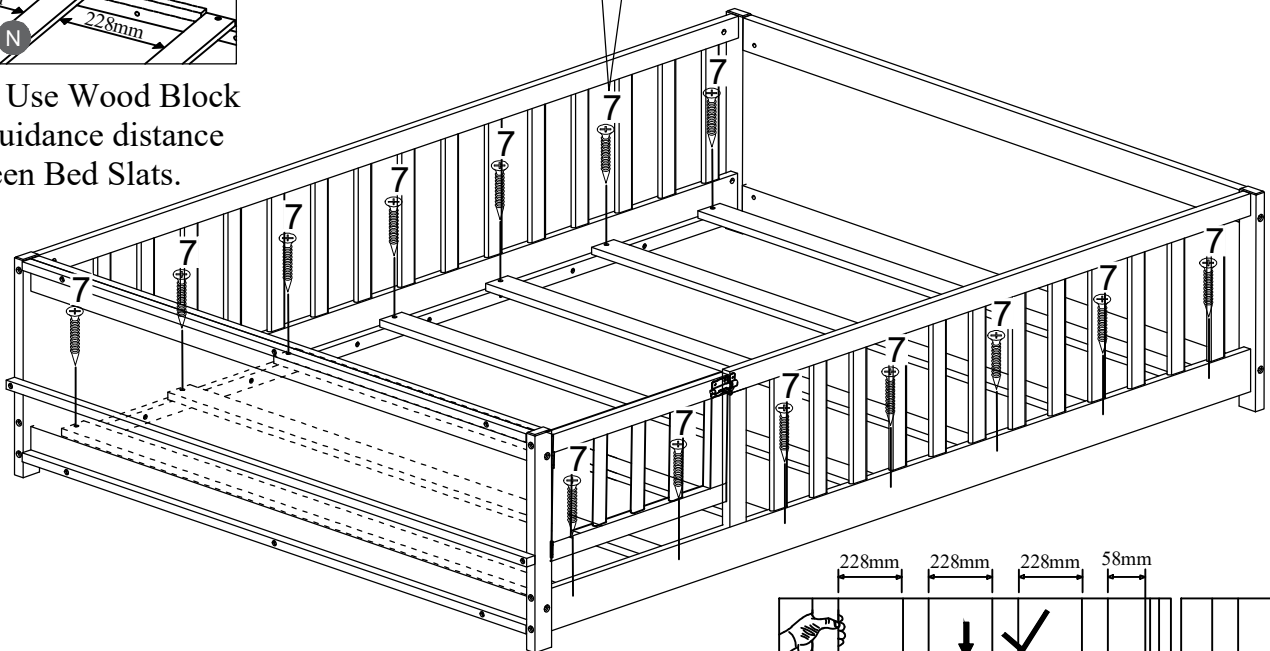

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.