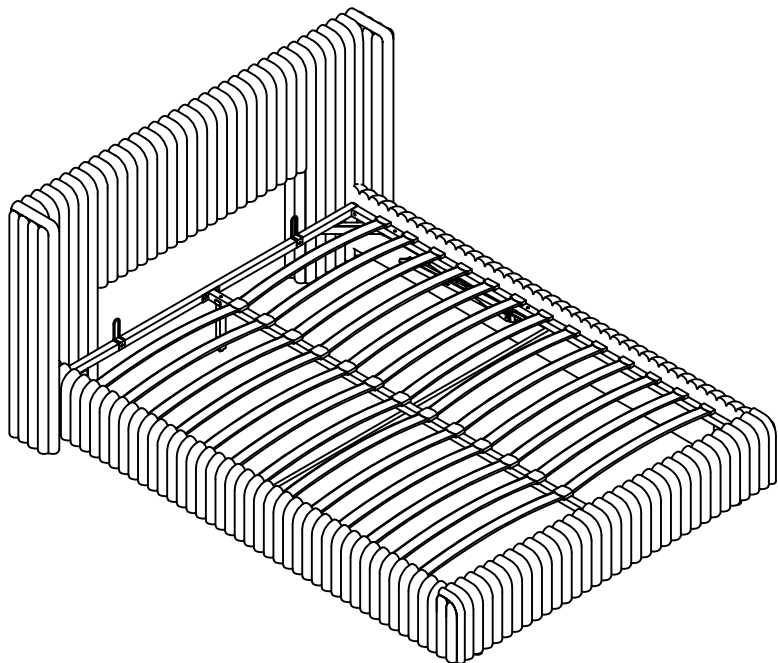
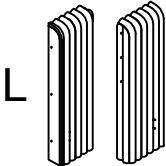
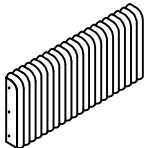
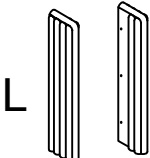



ASSEMBLY DIAGRAM







275 Q
















STEP: Packing Details Box 1

 A: 2PCS	 B: 1PC	 C: 2PCS	 D: 4PCS	 H: 2PCS
 Q: 26PCS	 R: 13PCS	 S: 26PCS	 T: 1PC	HARDWARE LIST

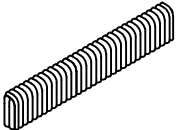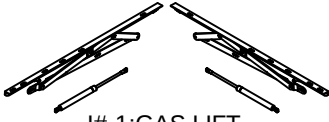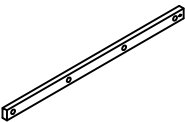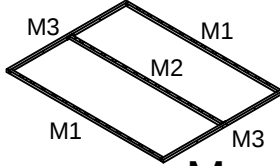Box 2

 E: 1PC	 F: 2PCS	 G: 4PCS	 I#-1: GAS LIFT I: 4PCS	 J: 2PCS
 K: 1PC	 L: 1PC	 M: 1SET	 N: 1PC	 O: 1PC
				 P: 2PCS

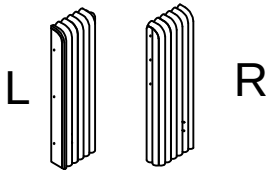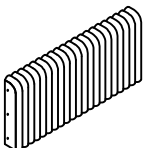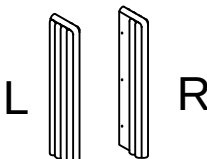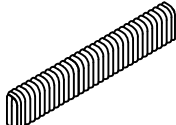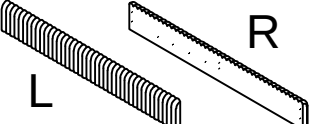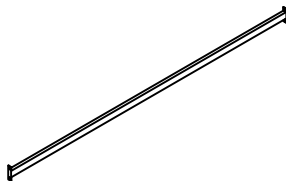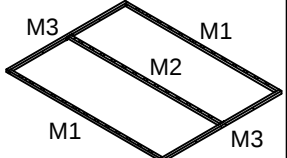
A:SIDE HEADBOARD 2PCS 	B:MIDDLE HEADBOARD 1PC 	C:HB LEG 2PCS 	D:ANGLE IRON 4PCS 
E:FOOTBOARD 1PC 	F:SIDE RAIL 2PCS LEFT AND RIGHT 	G:CORNER BRACKET 4PCS 	H:FEET 2PCS 
I:HINGES 2PCS LEFT AND RIGHT  I#-1:GAS LIFT	J:SIDBAR 2PCS 	K:CROSS BAR 1PC 	L:SUPPORT BLOCK 1PC 
M:FRAME KD 1SET 	N:SUPPORT LEG 1PC 	O:1PC 	P:ANGLE IRON 2PCS 
Q:SLAT CAP 26PCS 	R:DOUBLE PLASTIC CAP 13PCS 	S:SLAT 26PCS 	T:NON-WOVEN BED BASE 1PC 

Hardware List

1:BOLT 29PCS  M8X50MM	2:BOLT 16PCS  M8X30MM	3:BOLT 10PCS  M6X50MM	4:BOLT 20PCS  M6X25MM	5:NUT 14PCS  M8	6:FLAT WASHER 45PCS  M8
7:SPRING WASHER 45PCS  M8	8:ALLEN KEY 1PC  M8	9:SPANNER 1PC  M8	10:FLAT WASHER 30PCS  M6	11:ALLEN KEY 1PC  M6	12:Mat 5PCS 


STEP 1

1		6PCS
6		6PCS
7		6PCS
8		1PC

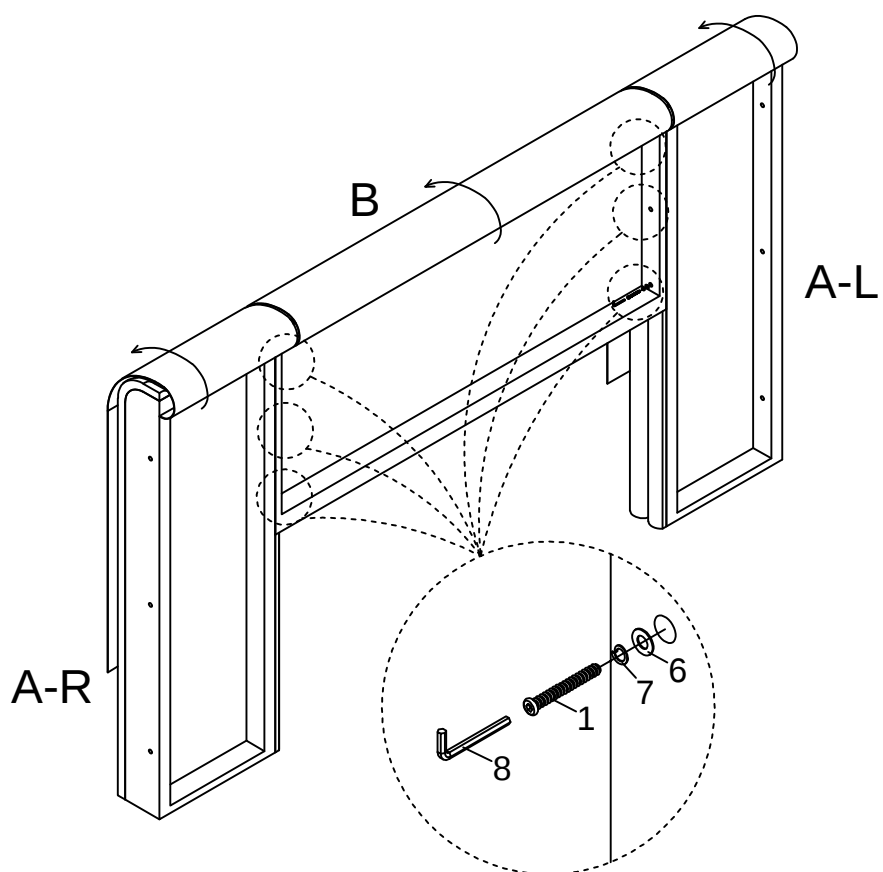


STEP 2

1		6PCS
6		6PCS
7		6PCS
8		1PC

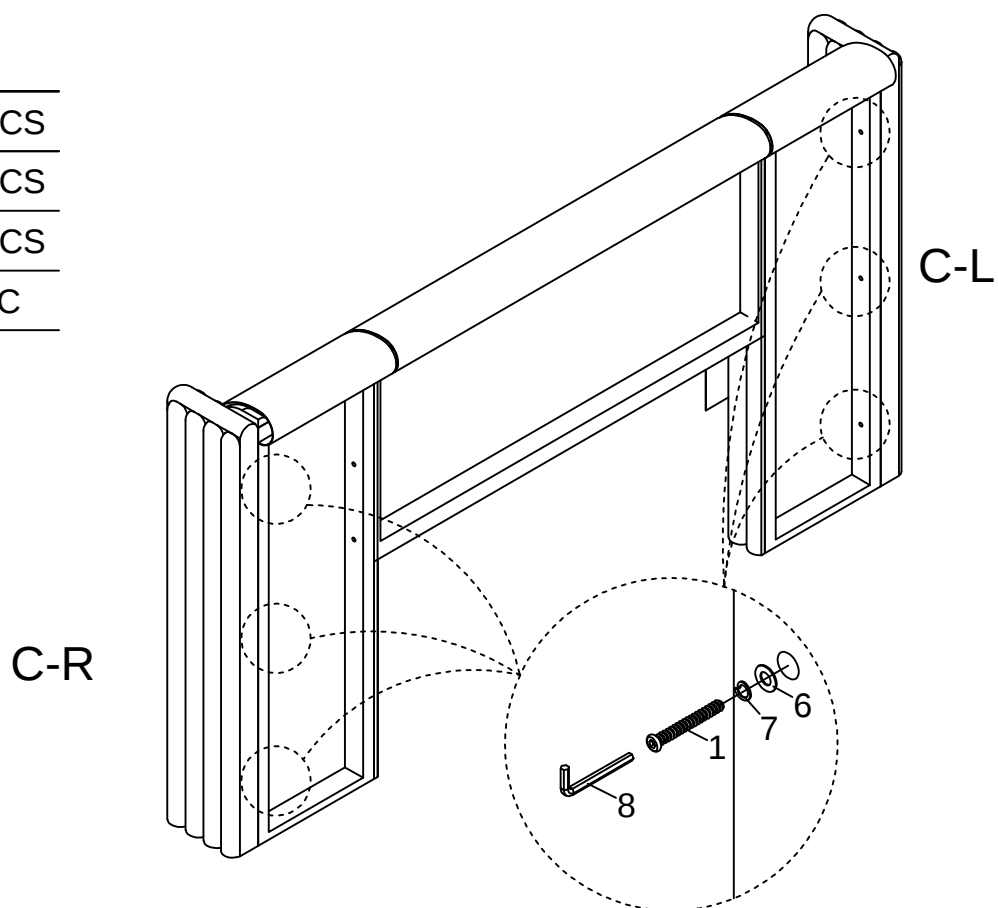


STEP 3

1		2PCS
6		2PCS
7		2PCS
8		1PC

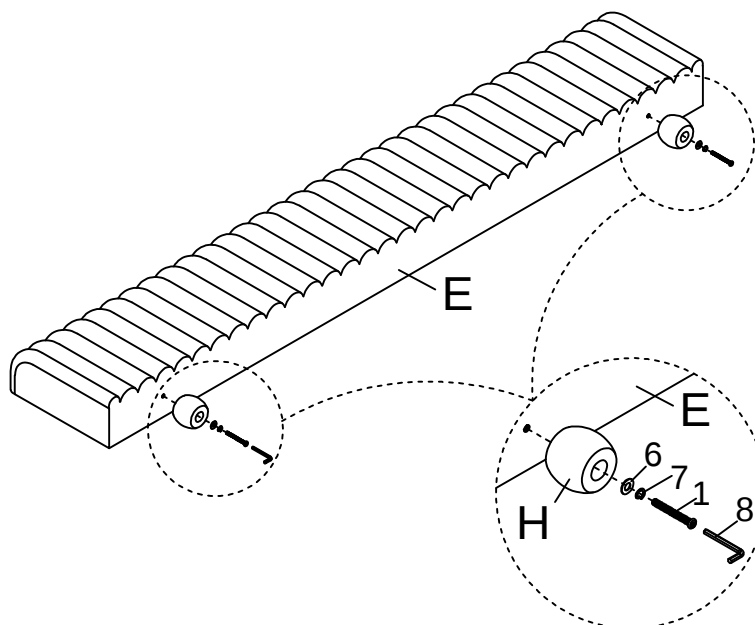


STEP 4

D		4PCS
L		1PC
2		16PCS
3		2PCS
6		16PCS
7		16PCS
8		1PC
10		2PCS
11		1PC

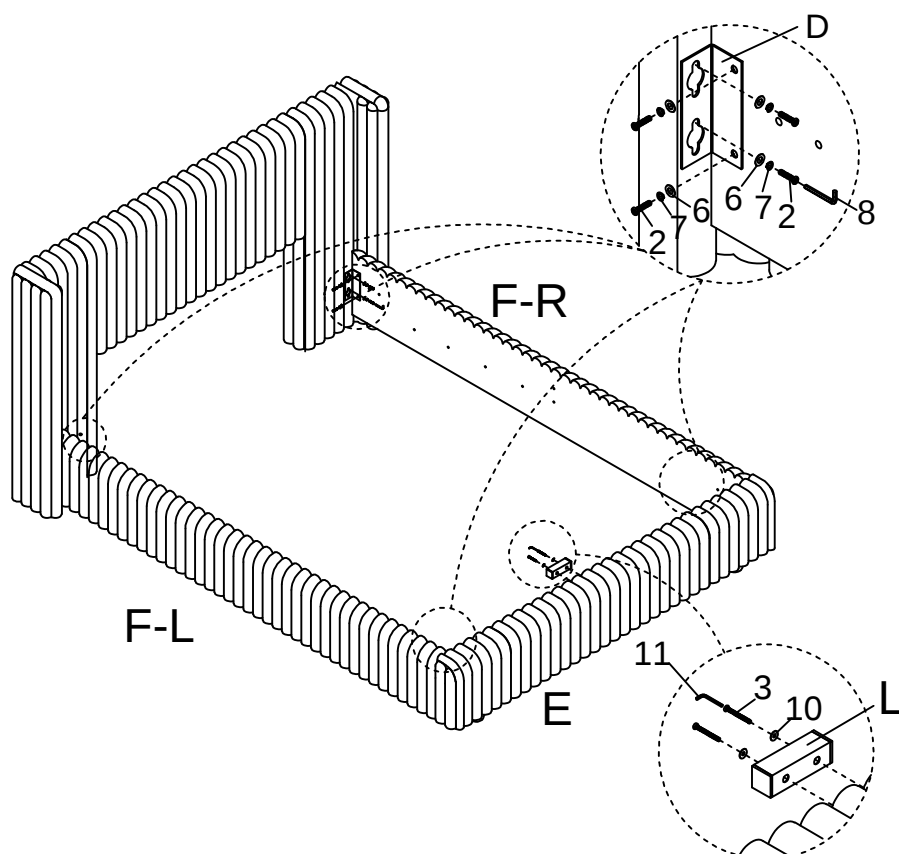


STEP 5

G		4PCS
3		8PCS
4		20PCS
10		28PCS
11		1PC

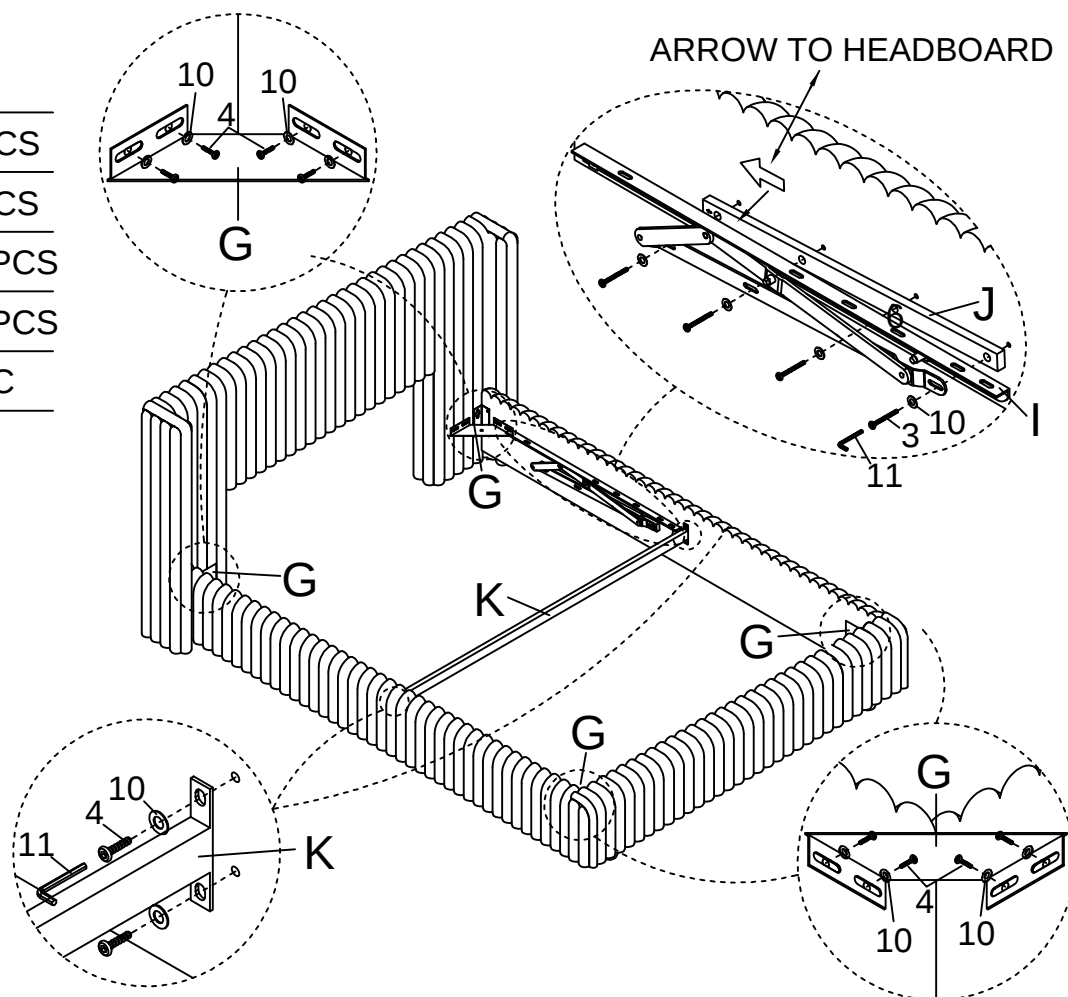



STEP 6

O		1PC
P		2PCS
1		10PCS
5		10PCS
6		10PCS
7		10PCS
8		1PC
9		1PC

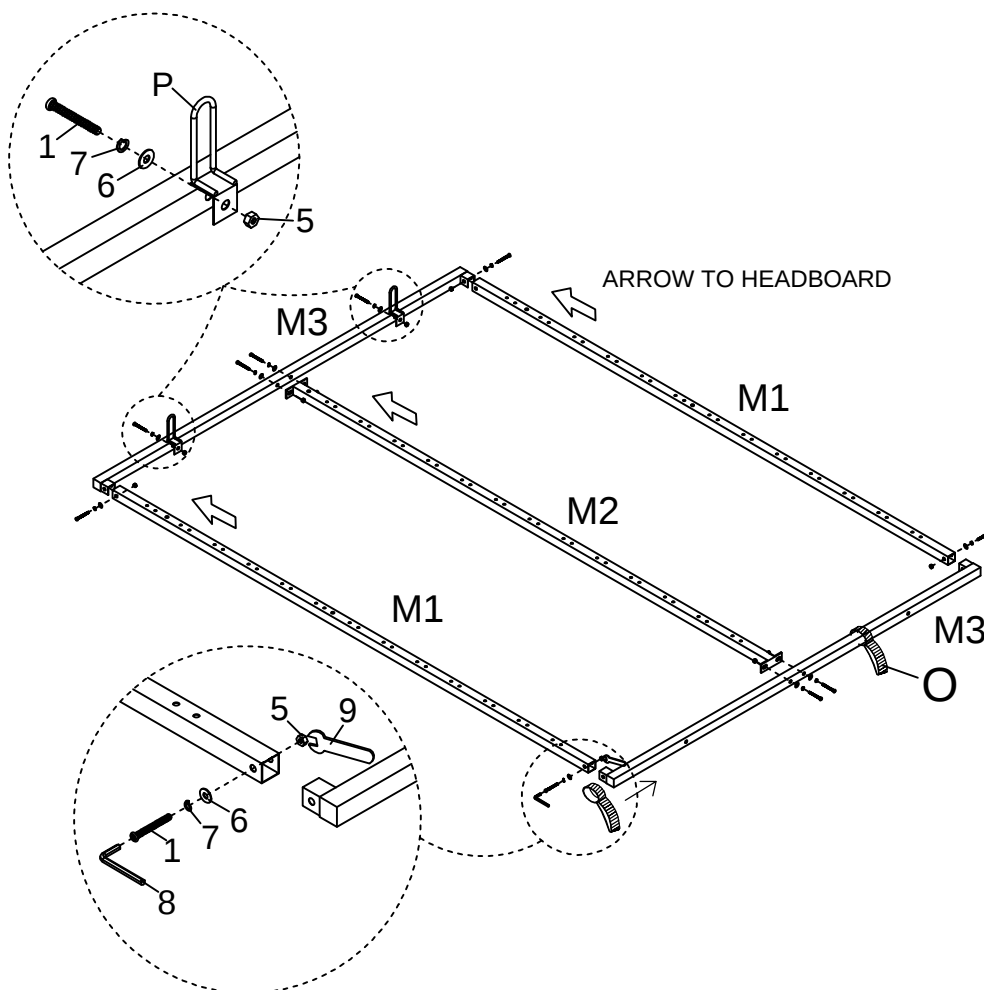


STEP 7

N		1PC
1		5PCS
5		4PCS
6		5PCS
7		5PCS
8		1PC
9		1PC

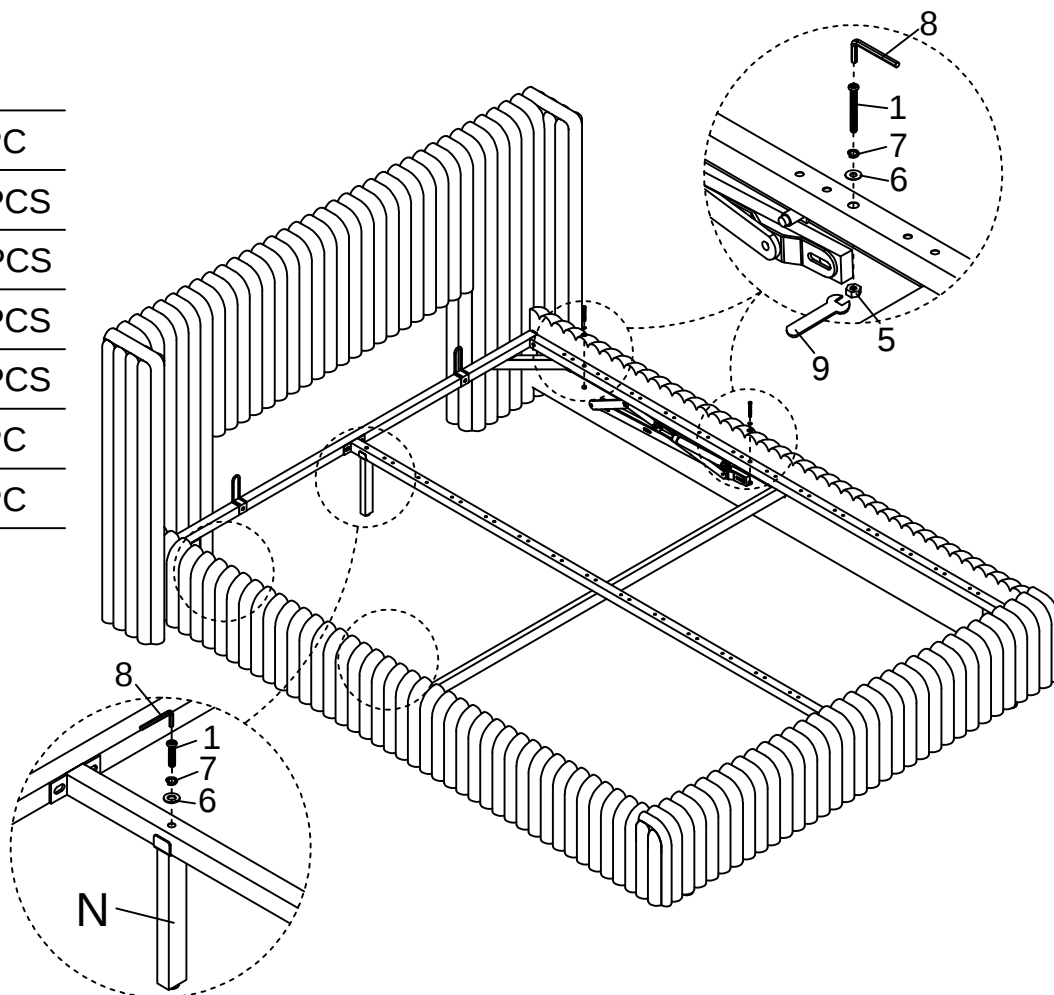

STEP 8


Q		26PCS
R		13PCS
S		26PCS

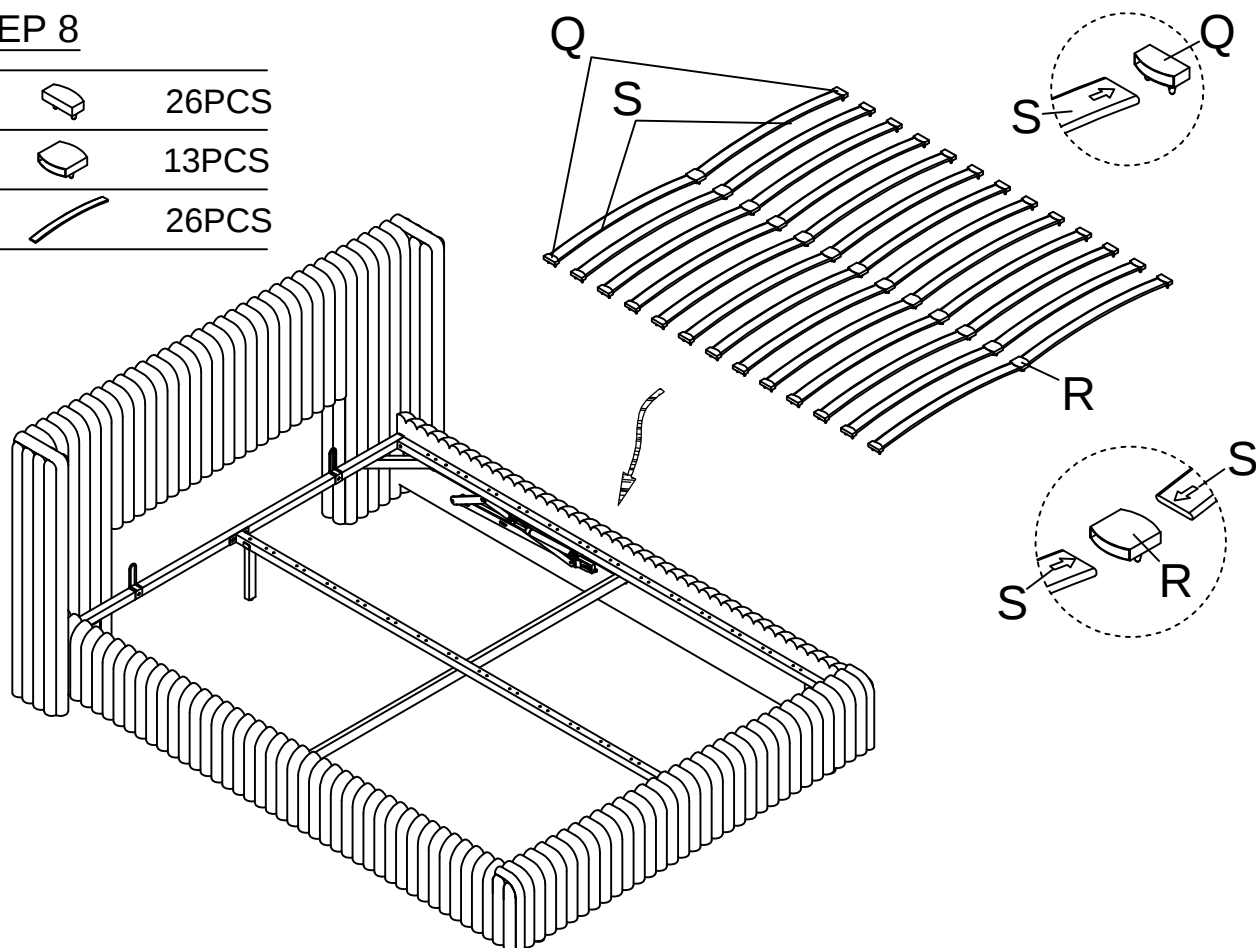

STEP 9

Assembly Instructions

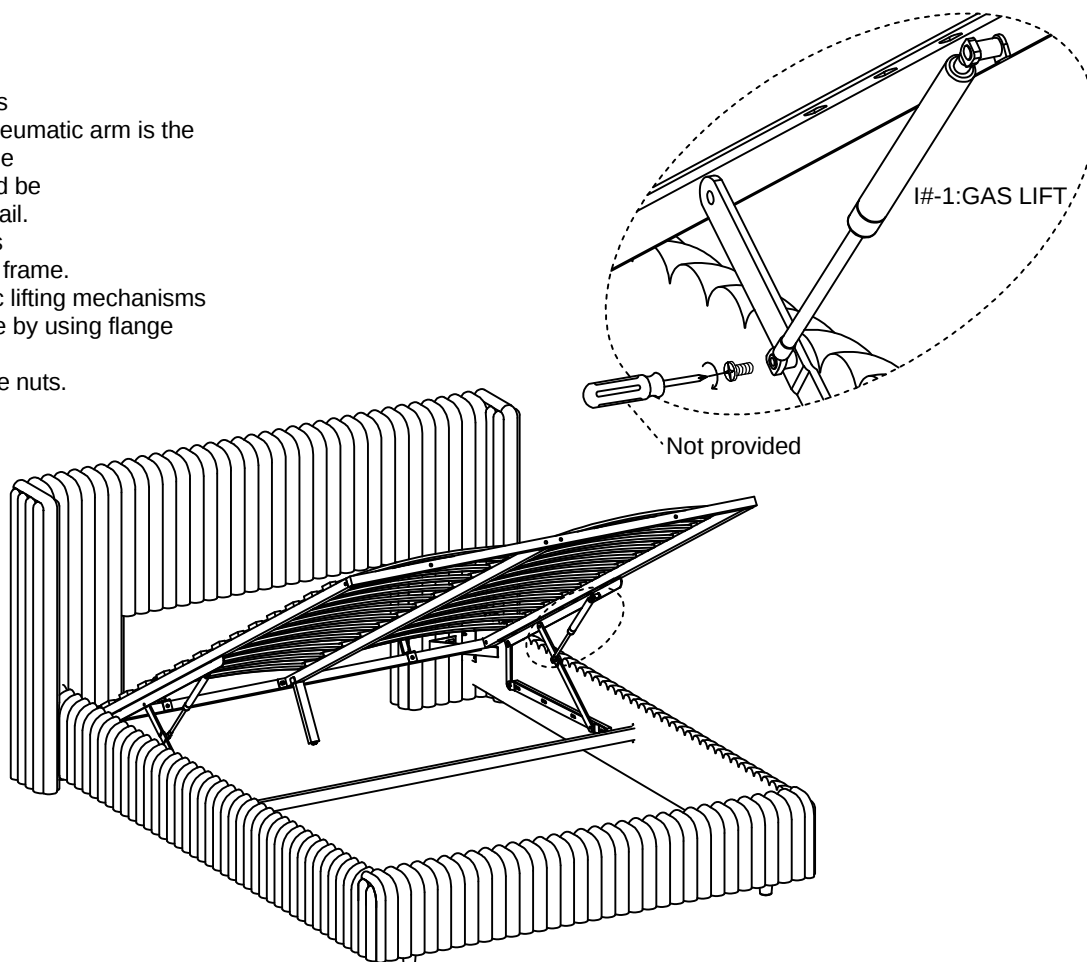Please ensure the pneumatic arm is the correct orientation. The thinner section should be attached to the side rail, and the thicker part is connected to the slat frame. secure the pneumatic lifting mechanisms on the side rails place by using flange nuts as shown. Do not overtighten the nuts.



STEP 10

T  1PC

Assembly Instructions

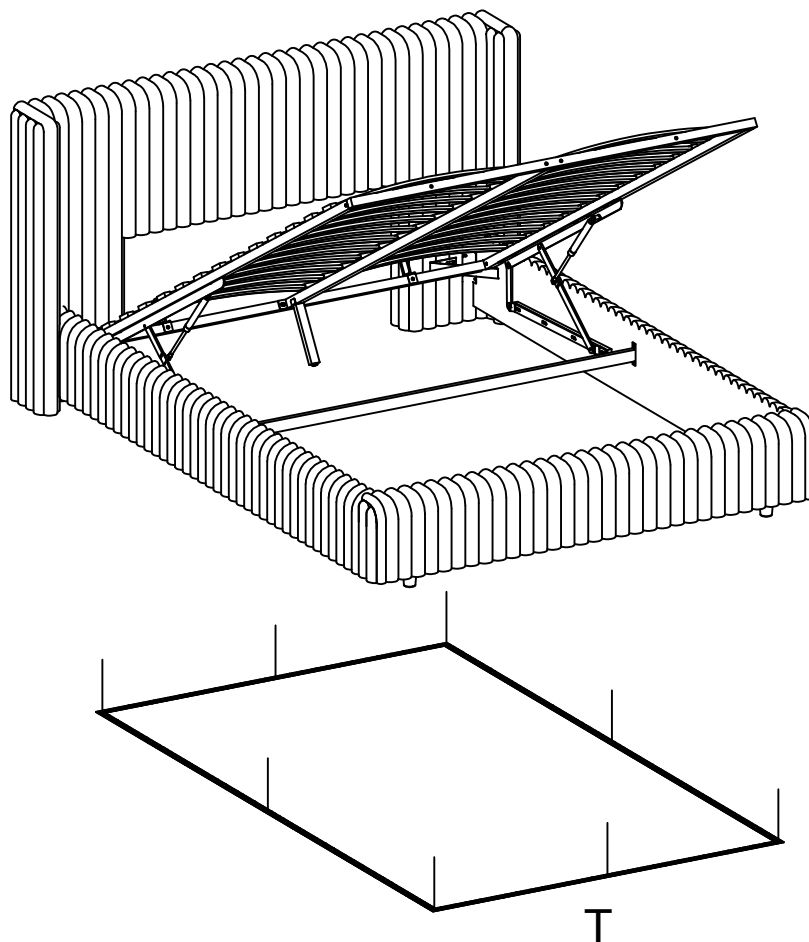
1: Attach woven fabric
Turn bed on its side and attach woven fabric (T) to base.

Please note: Before lowering the slat frame into position, place the mattress on the slat frame. The weight of the mattress will help with the lowering of the frame.

Mattress weight limit:

50kgs.

Assembly is completed.





STEP 11


12



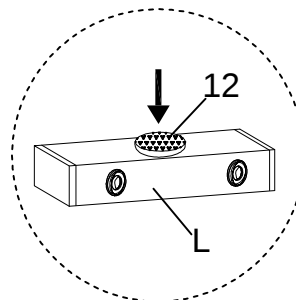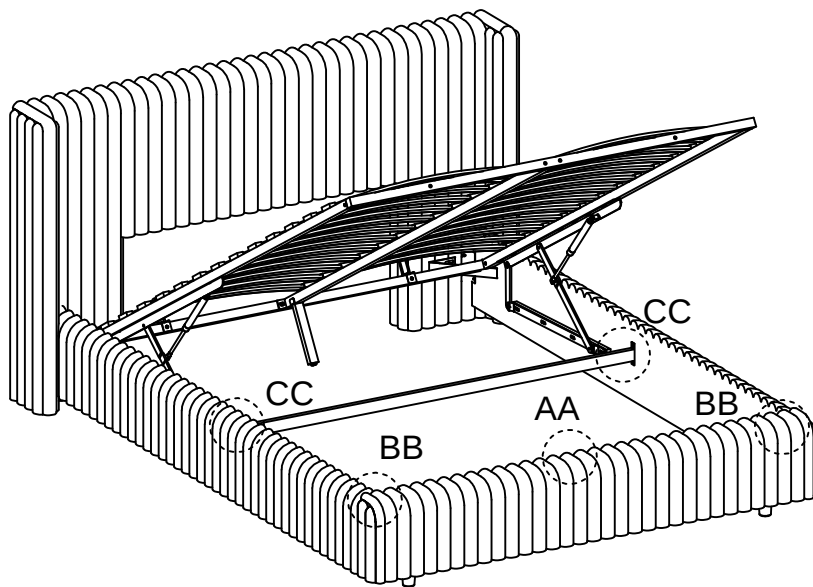
5PCS



AA

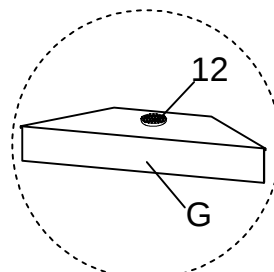

BB

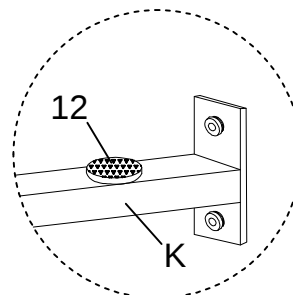

CC