


Assembly Instructions

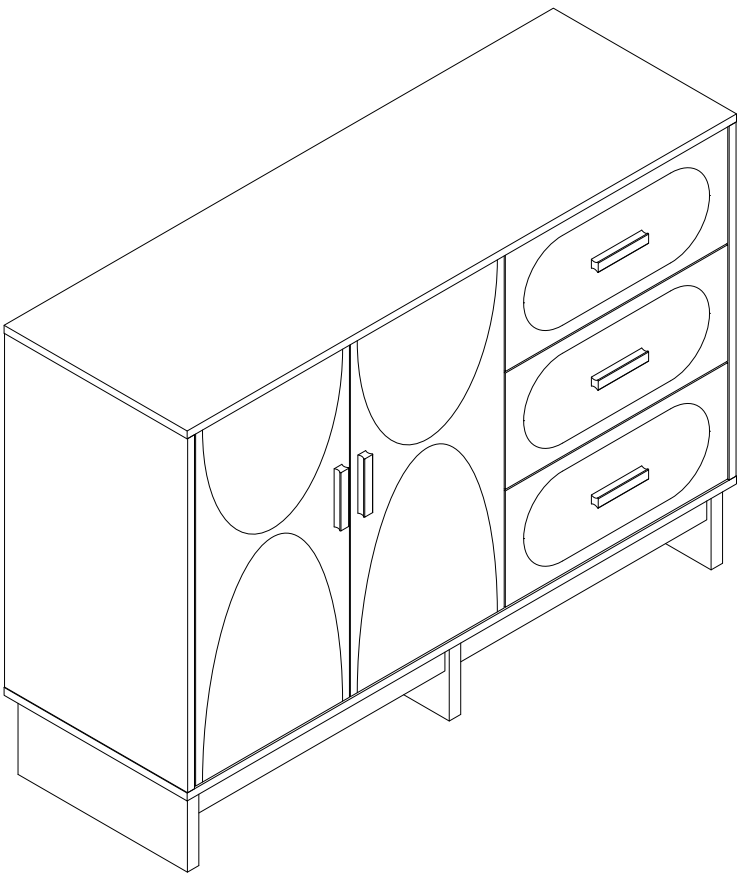


Sideboard 1.2

The beginning of installation may feel confusing and painful,but it will get better.

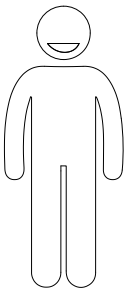


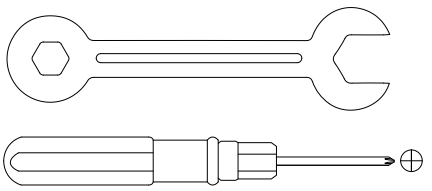


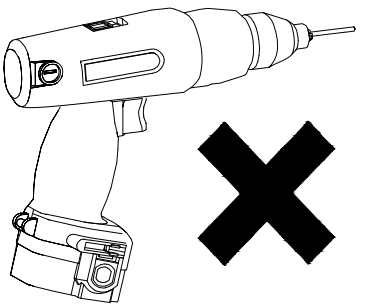

We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

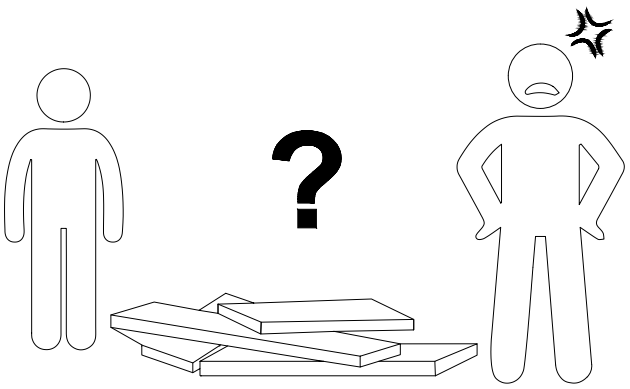


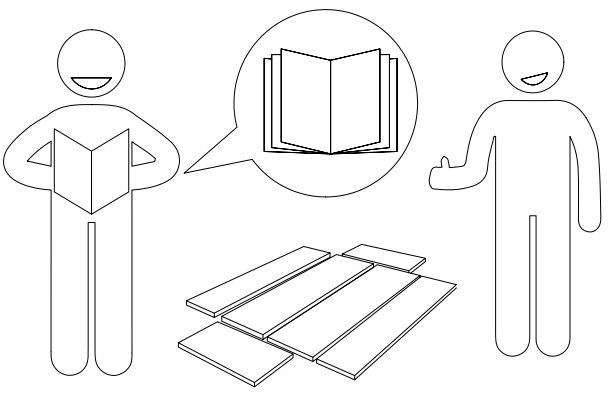


AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

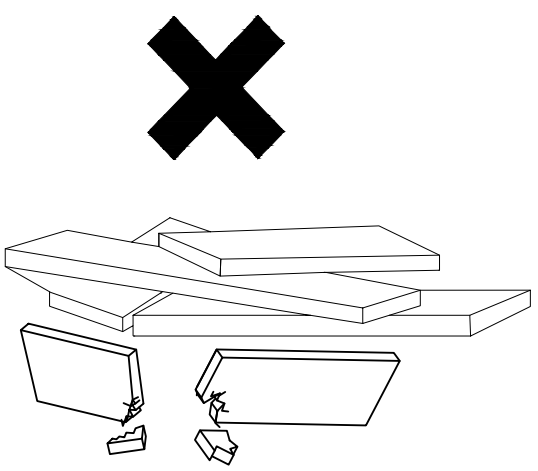




















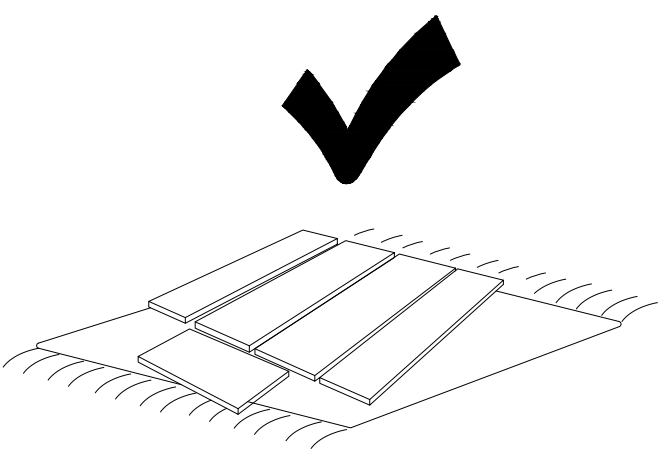


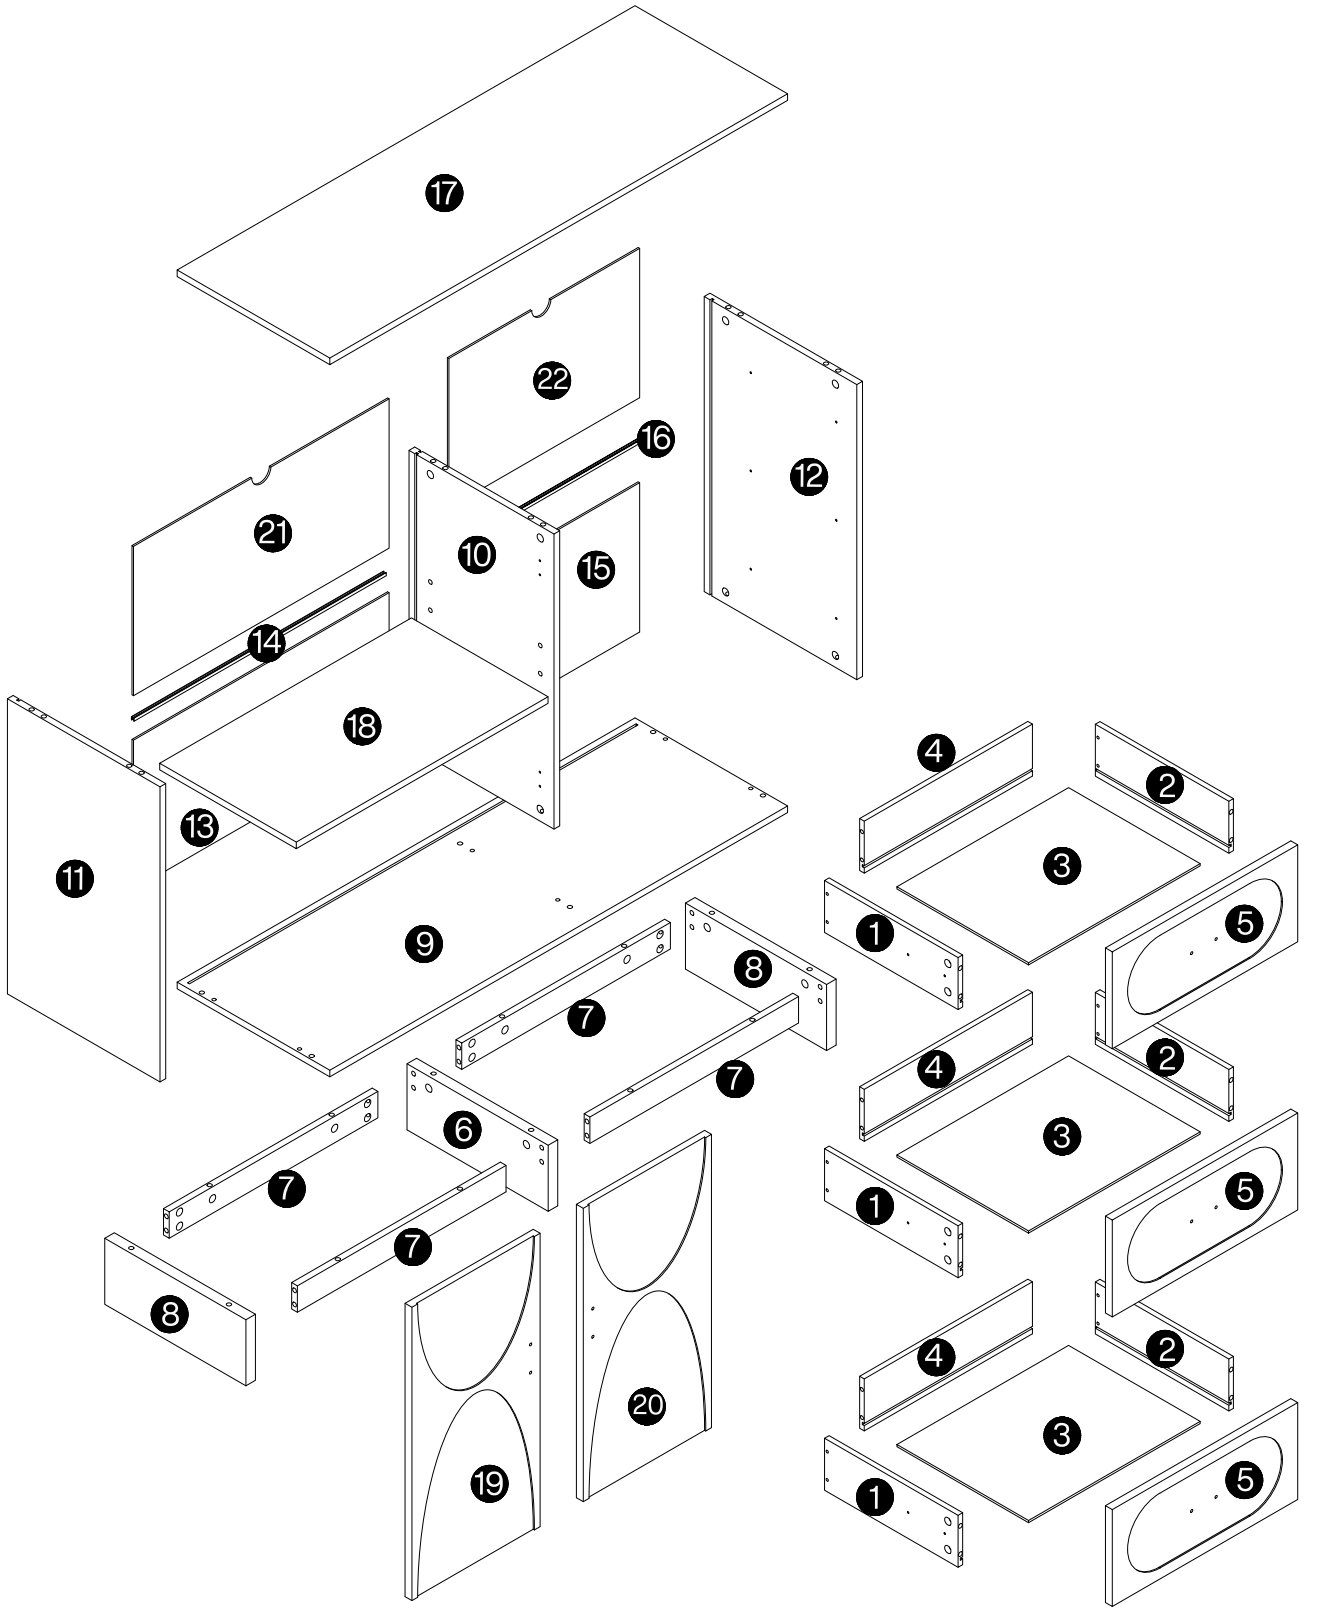





⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.




Parts List

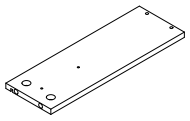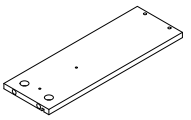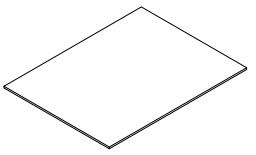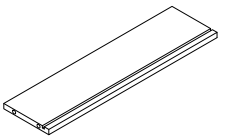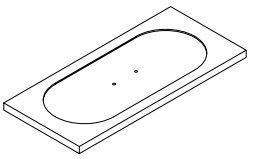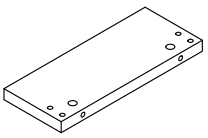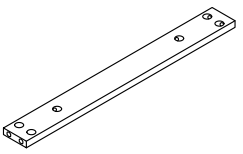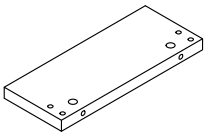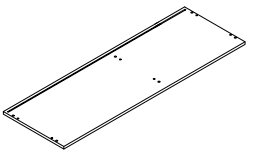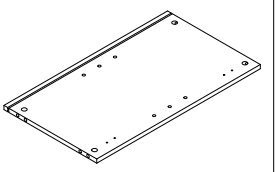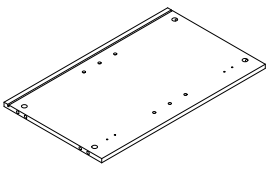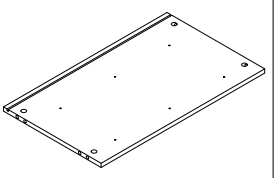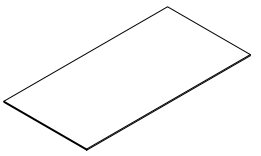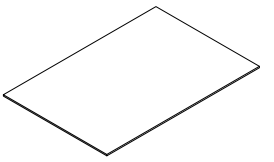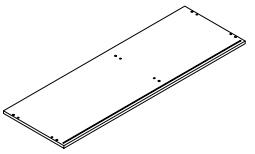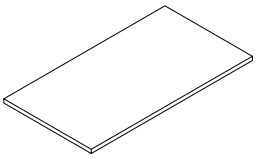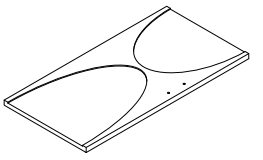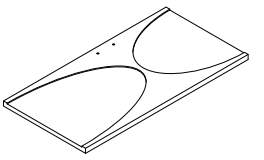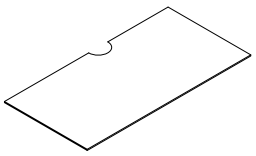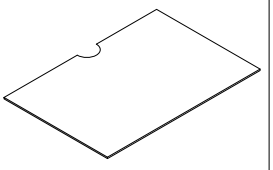❶  3pcs	❷  3pcs	❸  3pcs	❹  3pcs	❺  3pcs
❻  1 pc	❼  4pcs	❽  2pcs	❾  1 pc	❿  1 pc
⓫  1pc	⓬  1pc	⓭  1 pc	⓮  1 pc	⓯  1 pc
⓰  1pc	⓱  1pc	⓲  1pc	⓳  1 pc	⓴  1 pc
㉑  1 pc	㉒  1 pc			

Hardware List

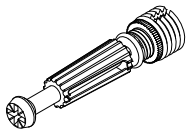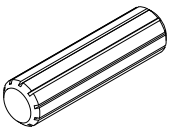
A	B	C	D	E	F
 M6x40mm	 Ø15x10mm	 Ø8x30mm	 300 mm	 Ø3.5x12mm	 Ø3.5X35 mm
54+2 pcs	54+2 pcs	12+2 pcs	3 sets	68+4 pcs	12+2 pcs

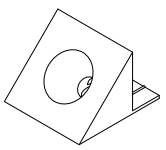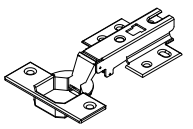G	H	I	J	K	L
 M5		 Dawan Hinge	 Straight Hinge	 M6X14 mm	
4+2 pcs	8+2 pcs	2 pcs	2 pcs	6pcs	2pcs


M	N	O			
 64#	 Ø4x22mm				
5 pcs	10+2 pcs	1 pc			

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

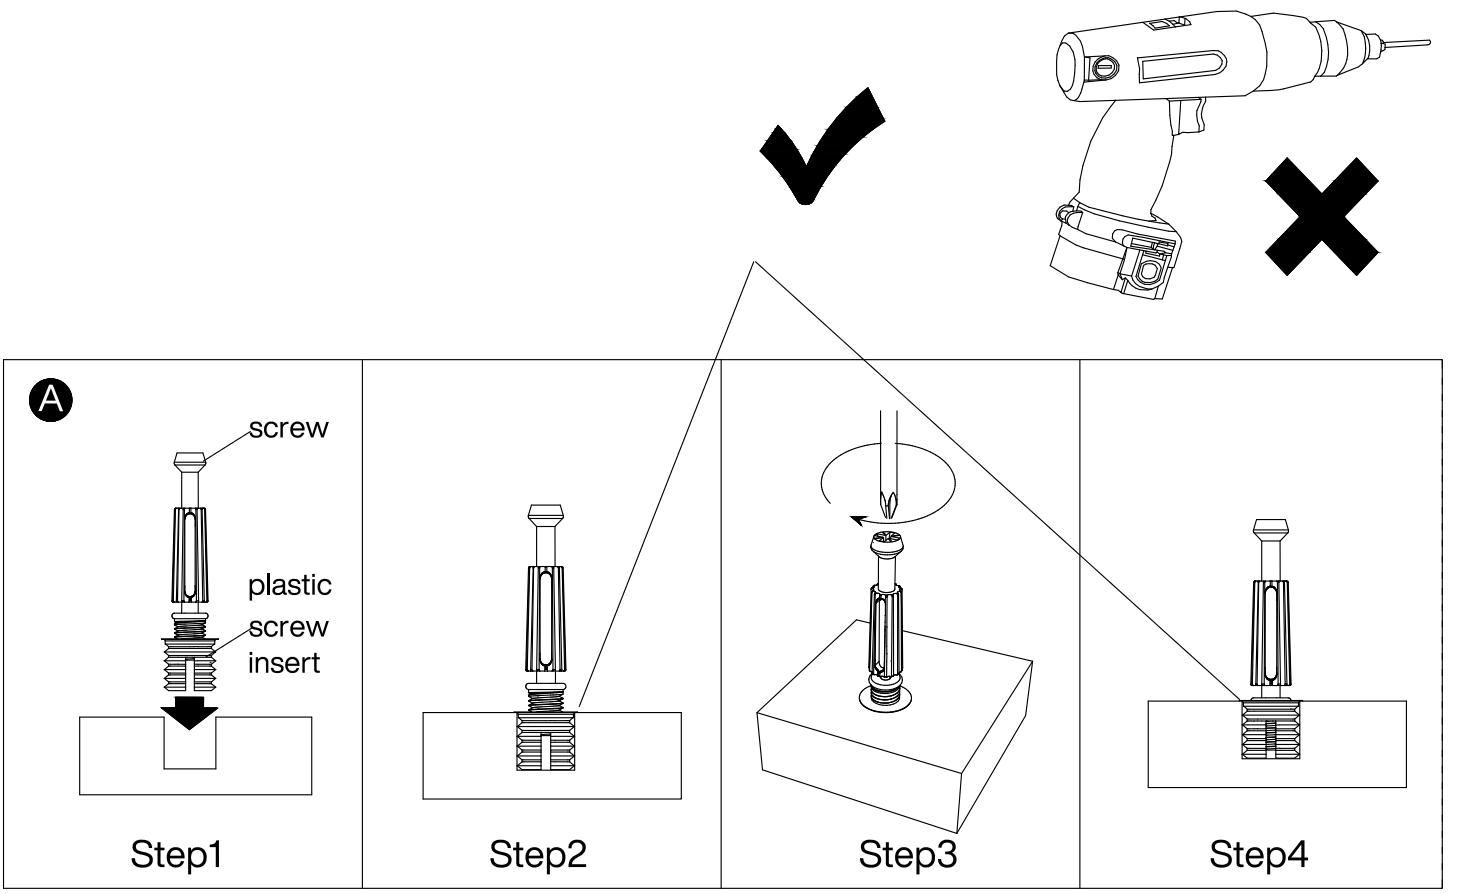


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

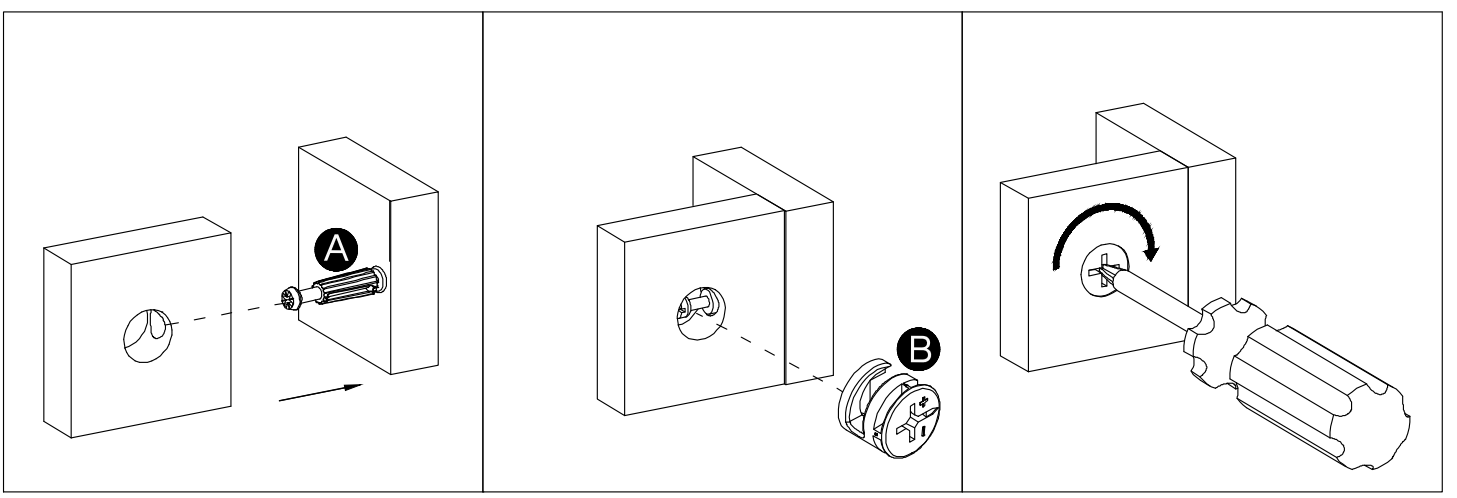

Please split component "D" into "D-1" and "D-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "D" to each side, and then gently push up the lever of component "D-2"

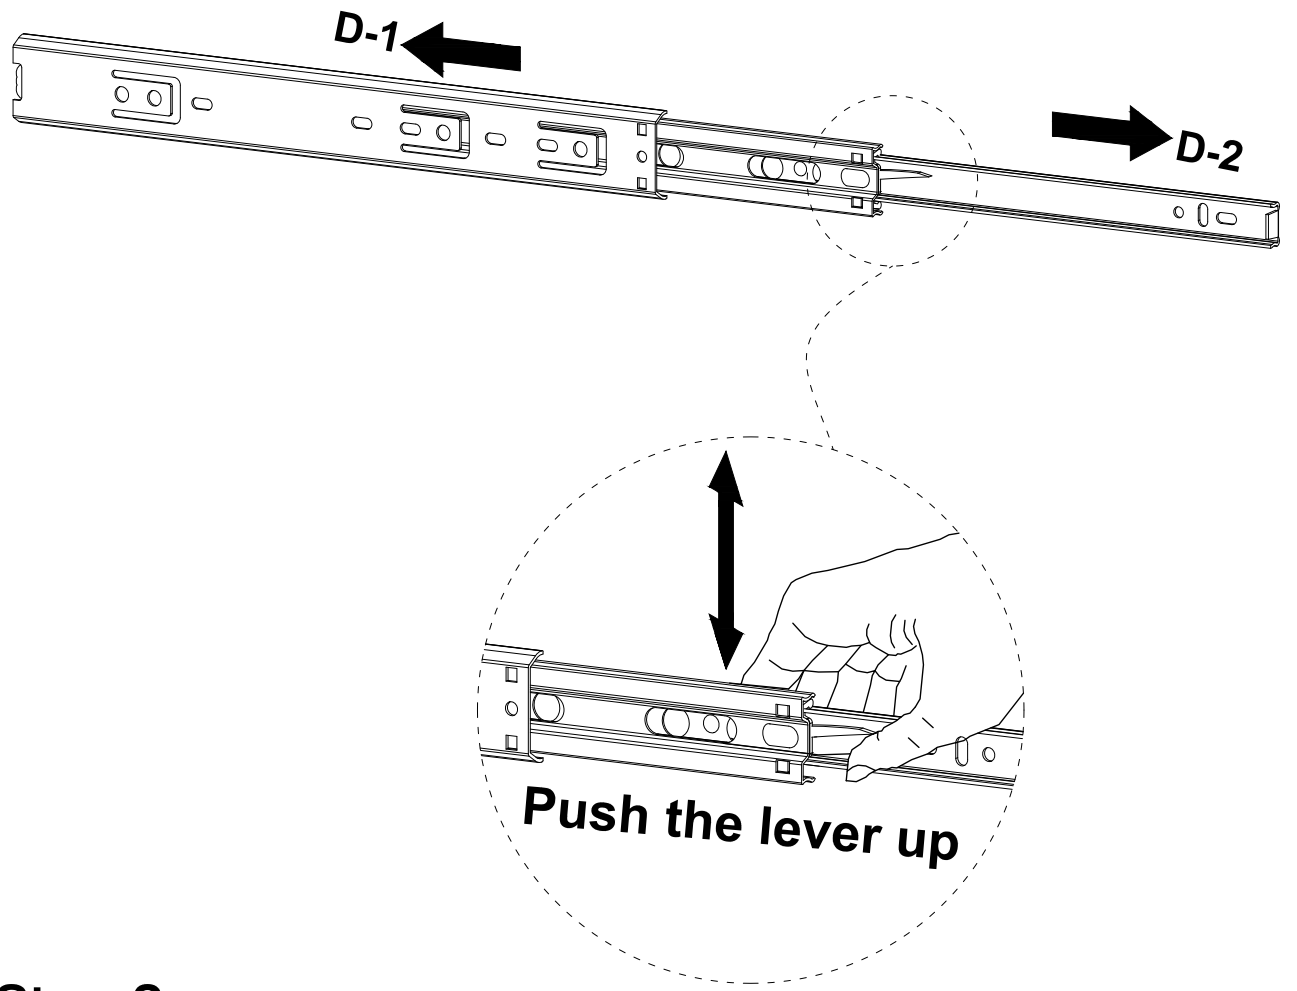

Step 2


Split component "D-1" and "D-2"

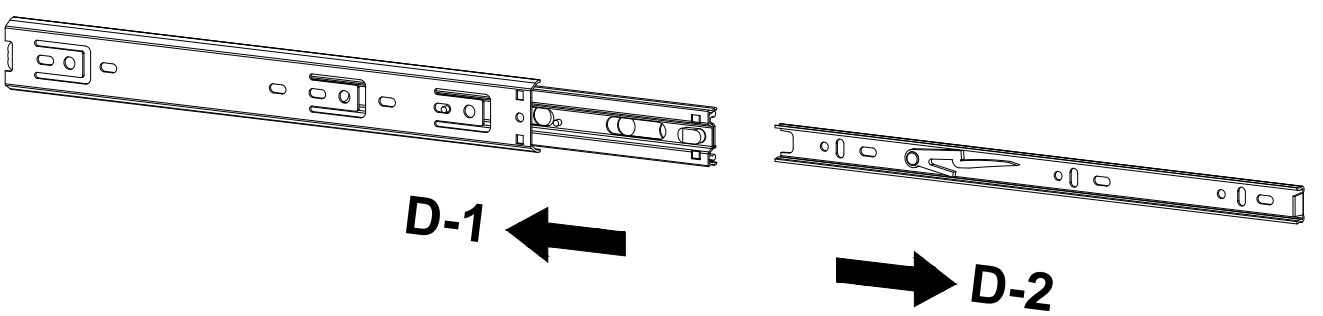


1


A


M6x40mm
12 pcs

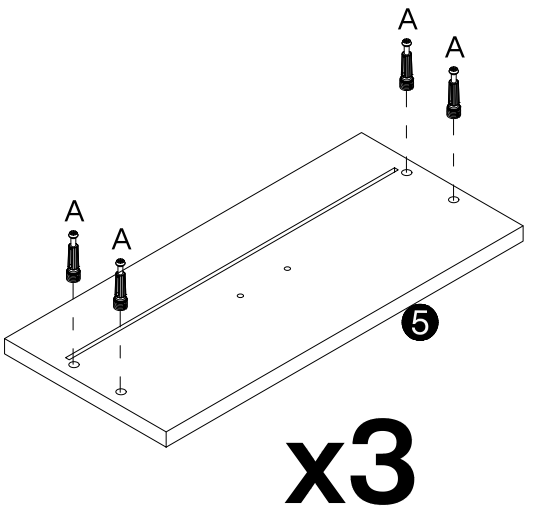


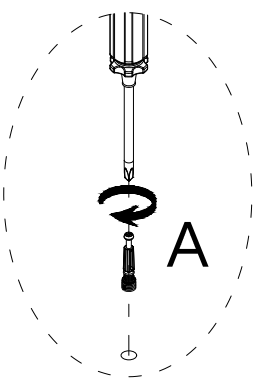



2

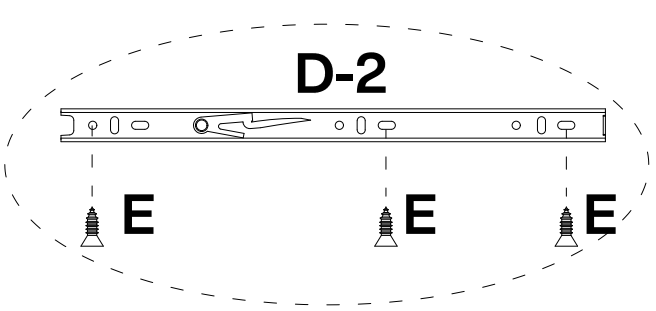

D-2	E
	
6 pcs	Ø3x12mm 24 pcs

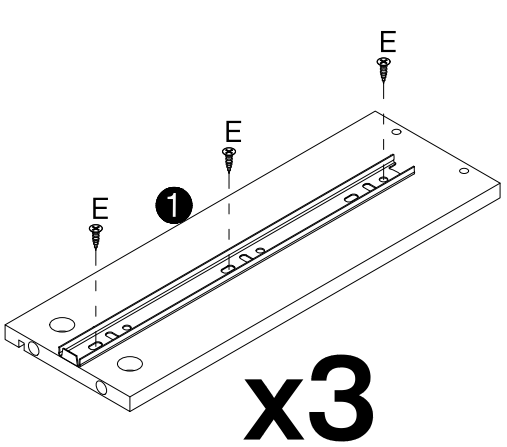

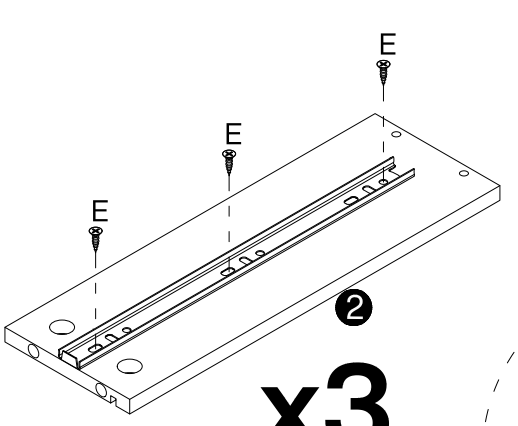


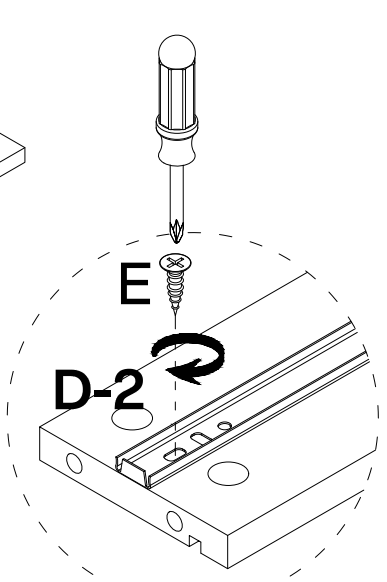


3

B


Ø15X12 mm
12 pcs

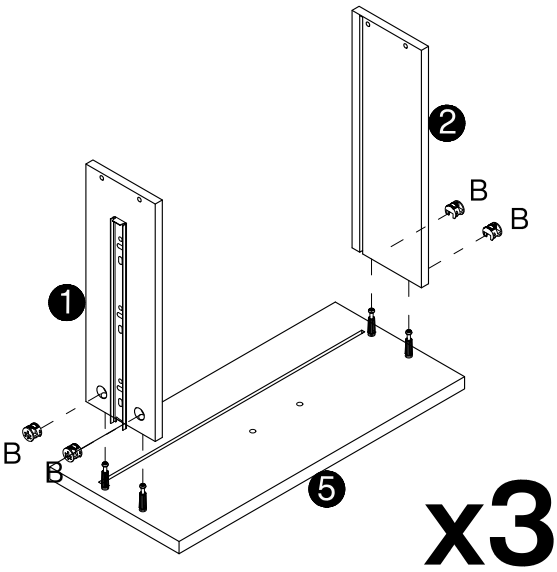

x3

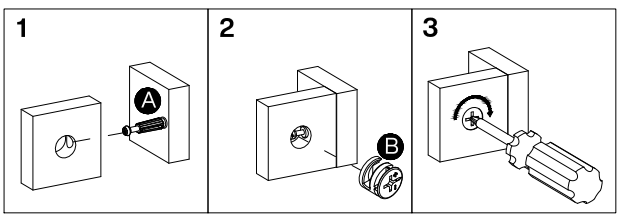

4

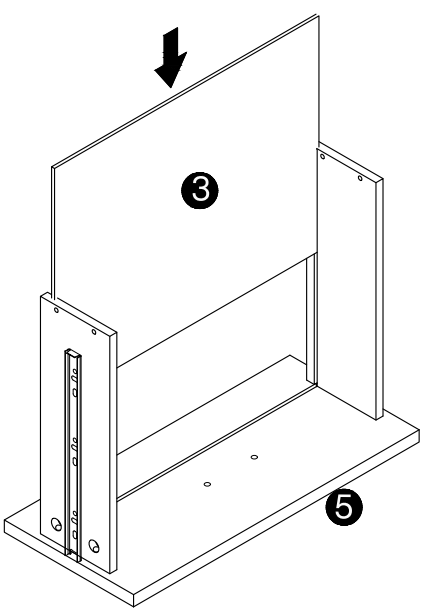


x3


5

F



Ø3.5x35mm
12 pcs

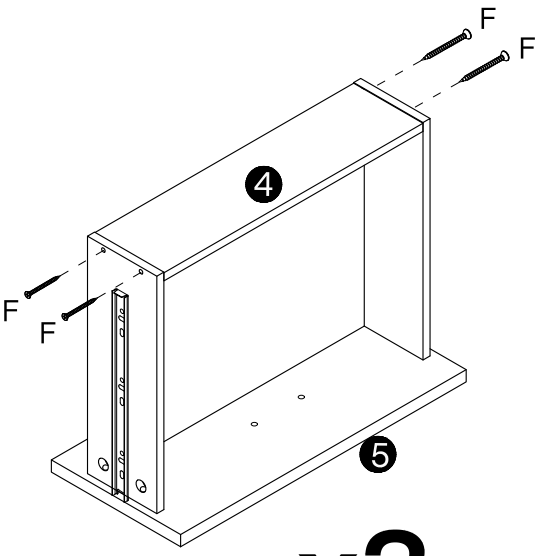


x3

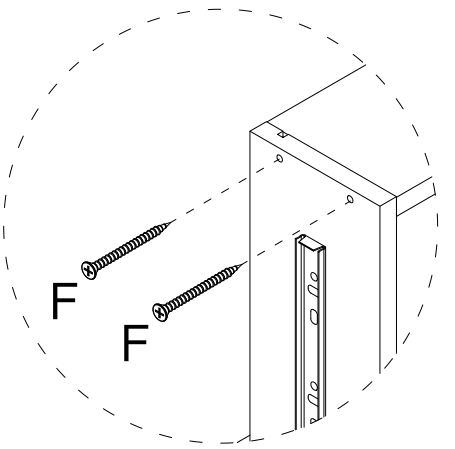

6

N	M
	
Ø4x22mm	64#
6 pcs	3 pcs

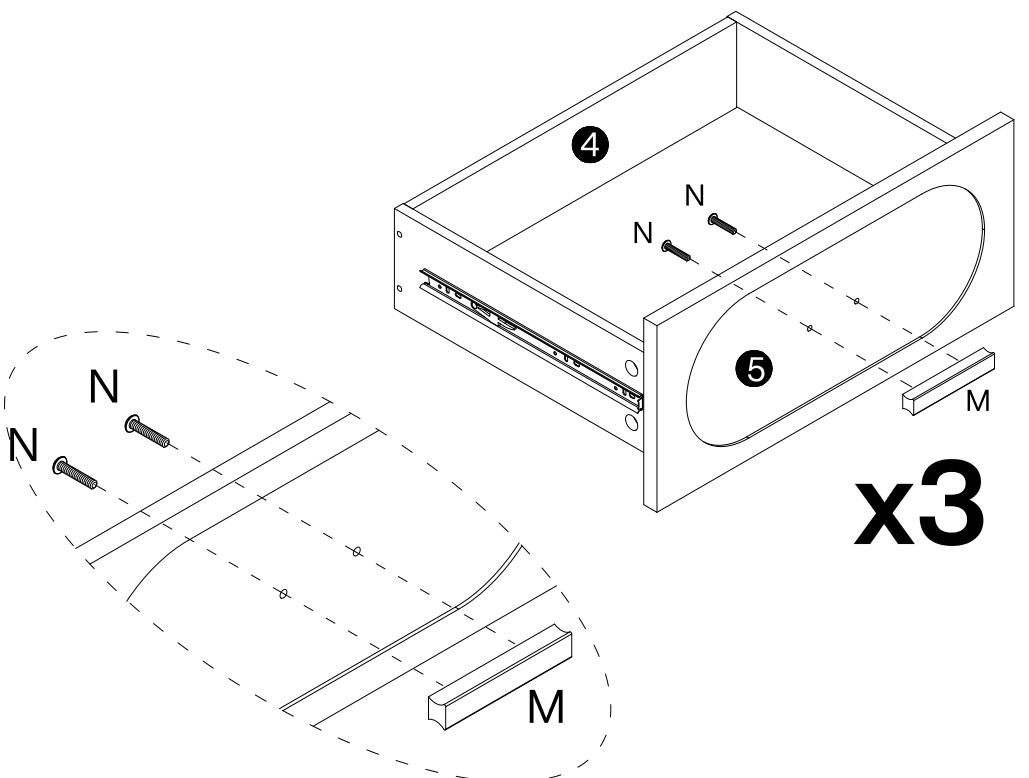


x3

7

A


M6x40mm
16 pcs

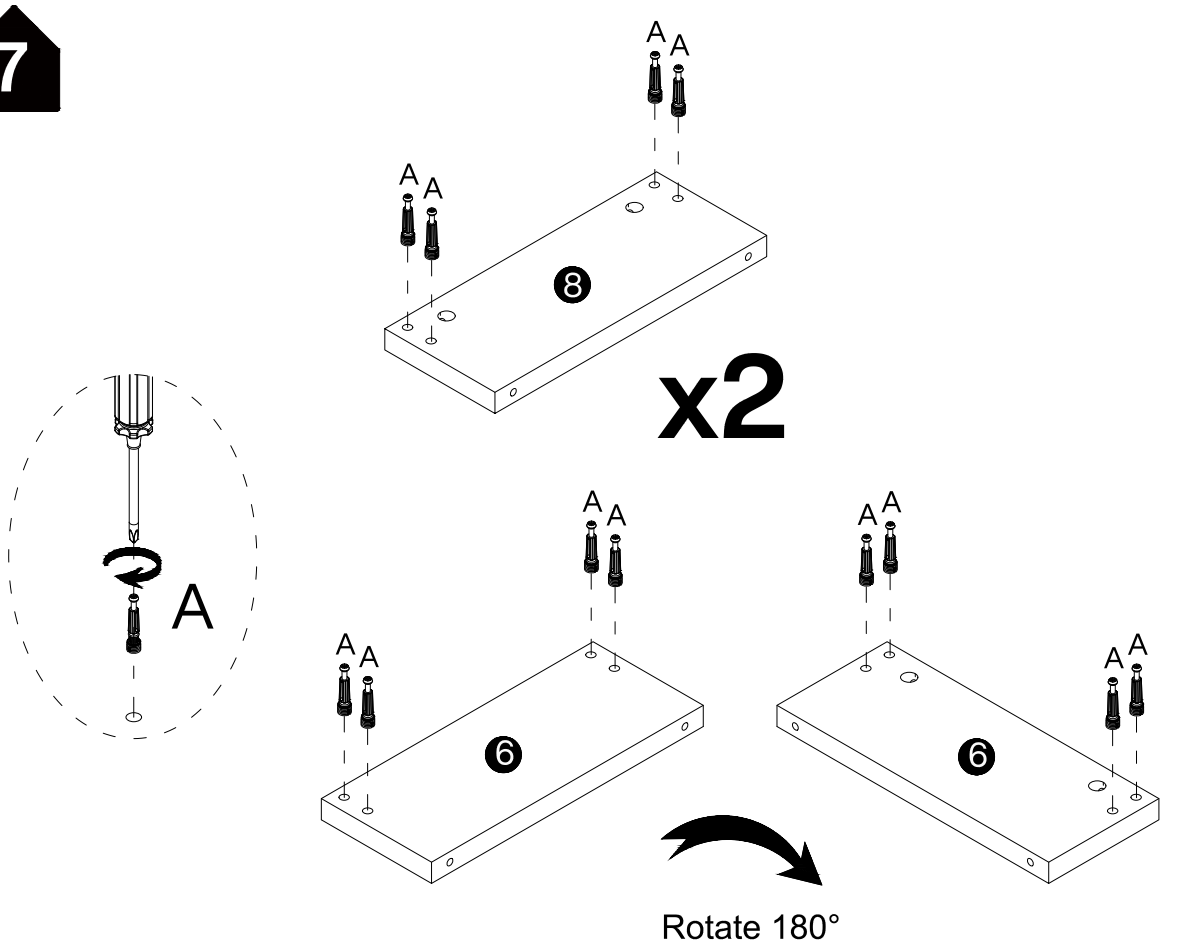


8

B

Ø15X12 mm
8 pcs

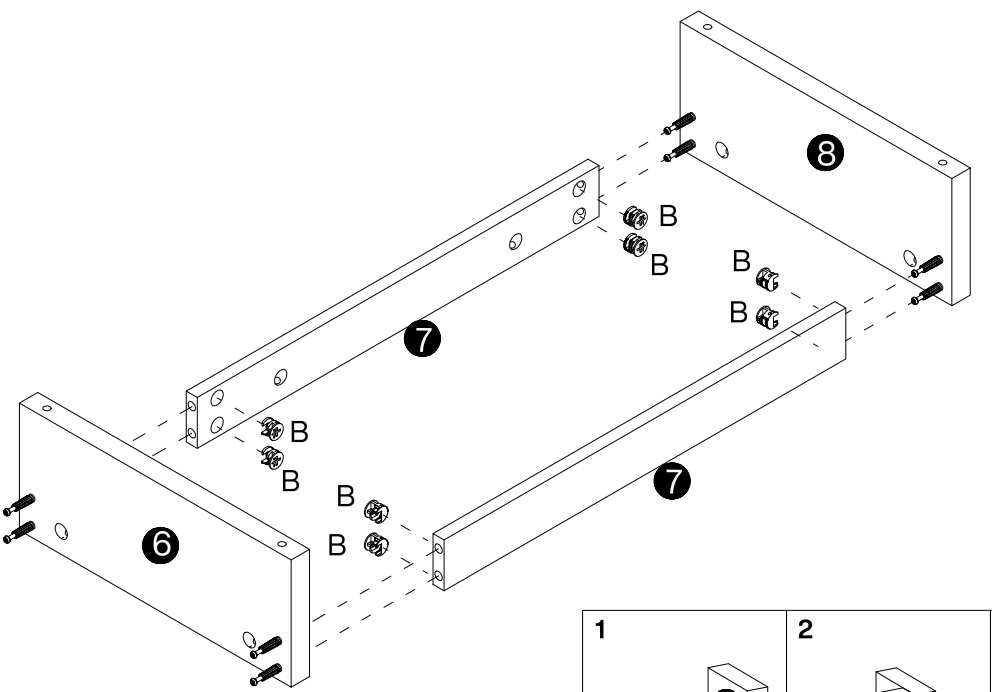


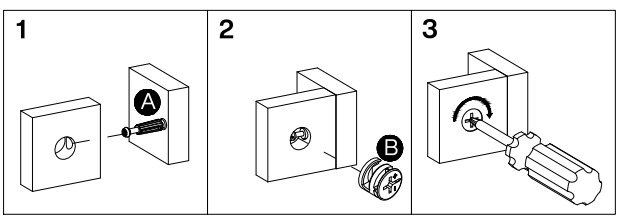


9

B

Ø15X12 mm
8 pcs

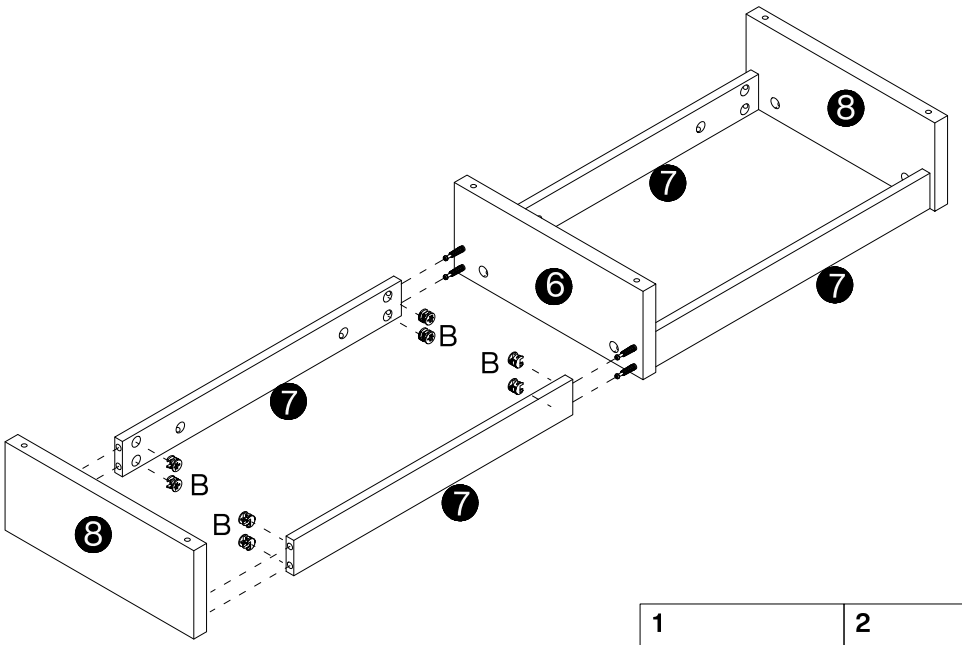


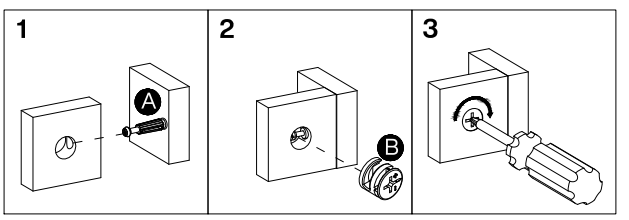


10

A

M6x40mm
14 pcs

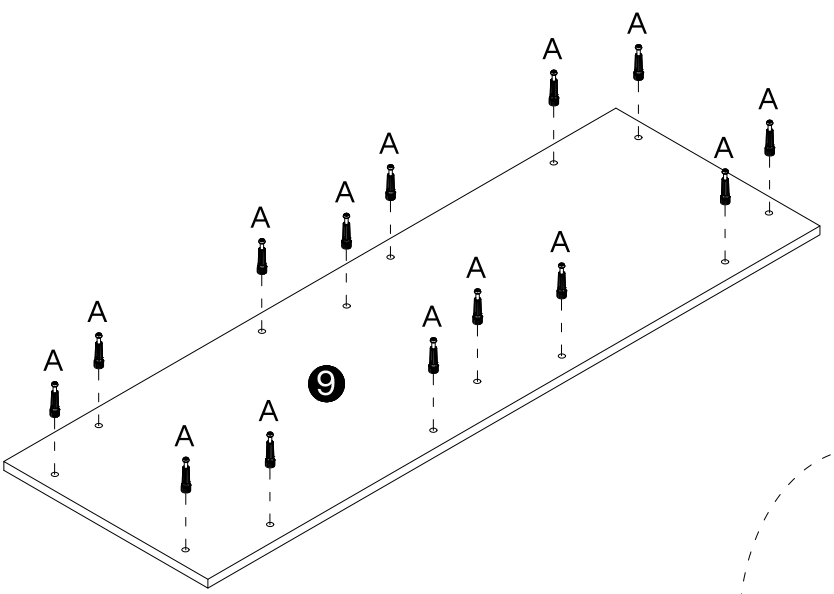


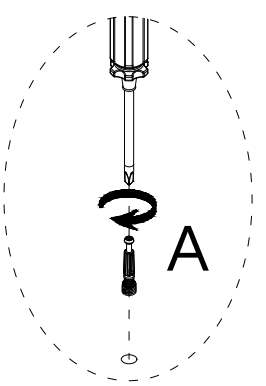


11

B

Ø15X12 mm
14 pcs

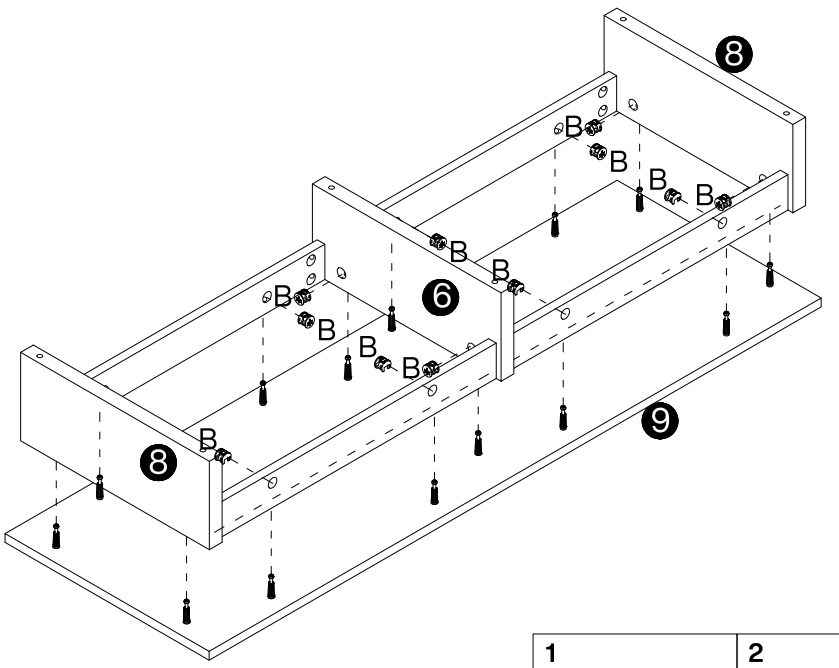


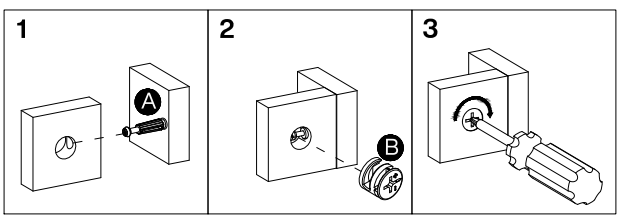


12

K


M6X14 mm
6 pcs

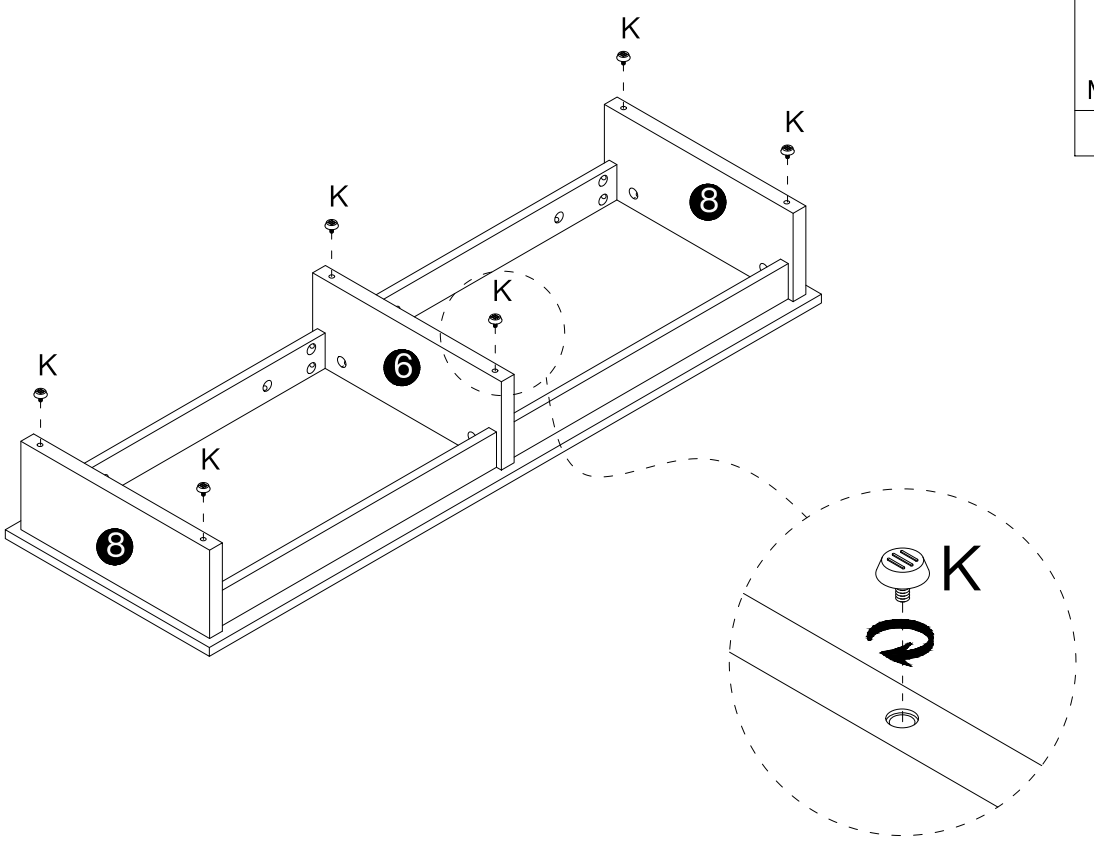

13

D-1	E
	 Ø3x12mm
3 pcs	6 pcs
	C
	 Ø8x30mm
	4 pcs


14

D-1	E
	 Ø3x12mm
3 pcs	6 pcs
	C
	 Ø8x30mm
	4 pcs

15

A


M6x40mm
6 pcs

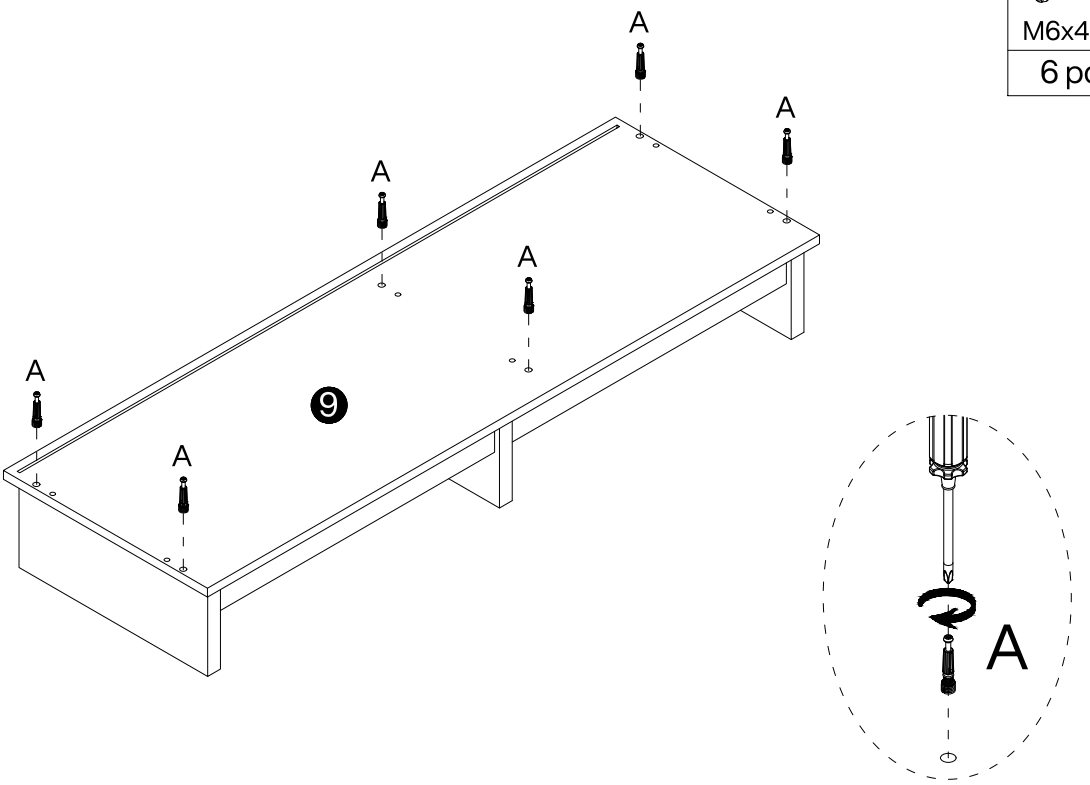


16

B

Ø15X12 mm
2 pcs

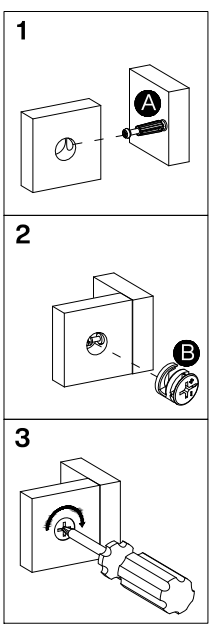


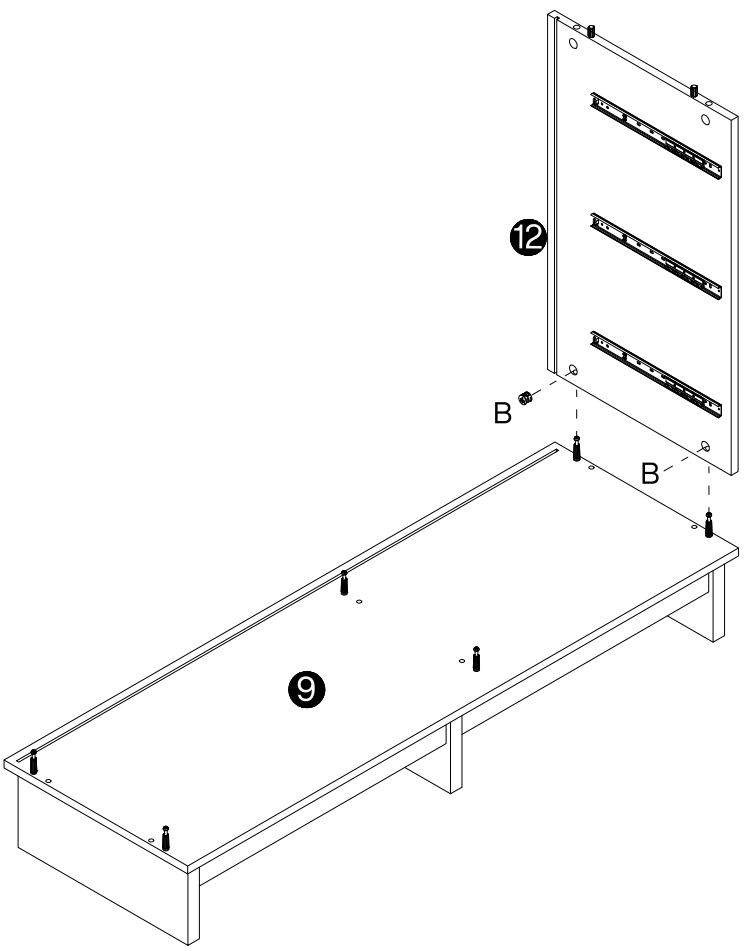


17


B

Ø15X12 mm
2 pcs

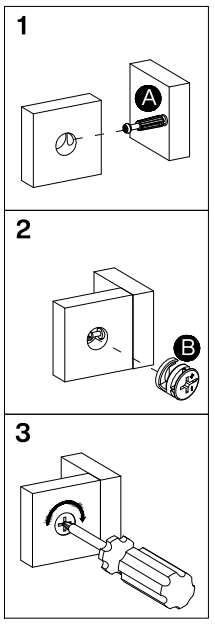


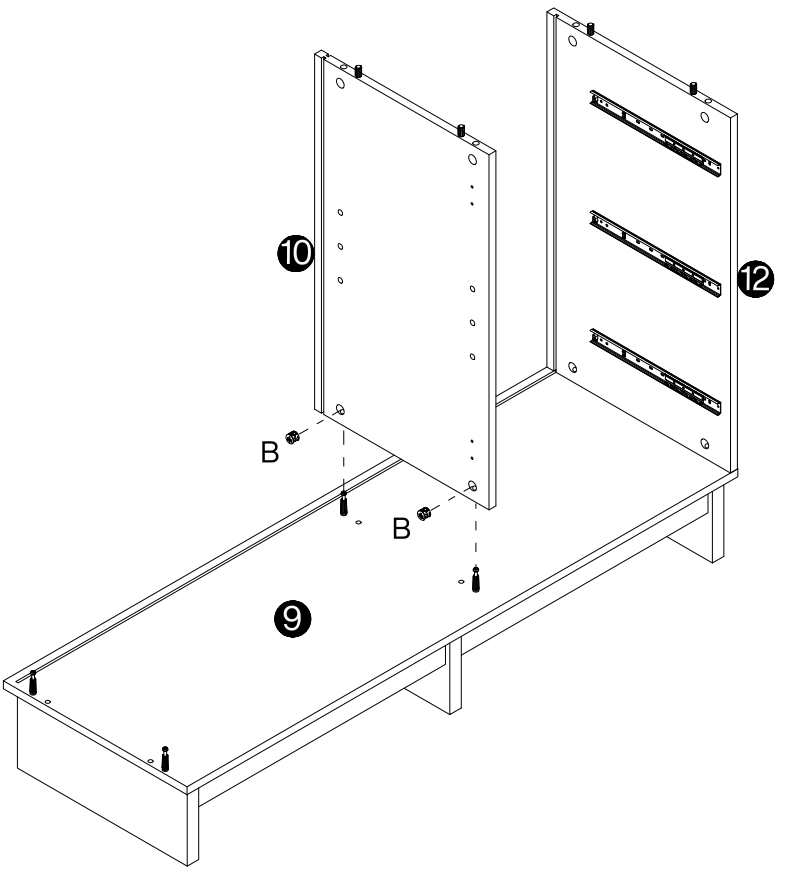


18

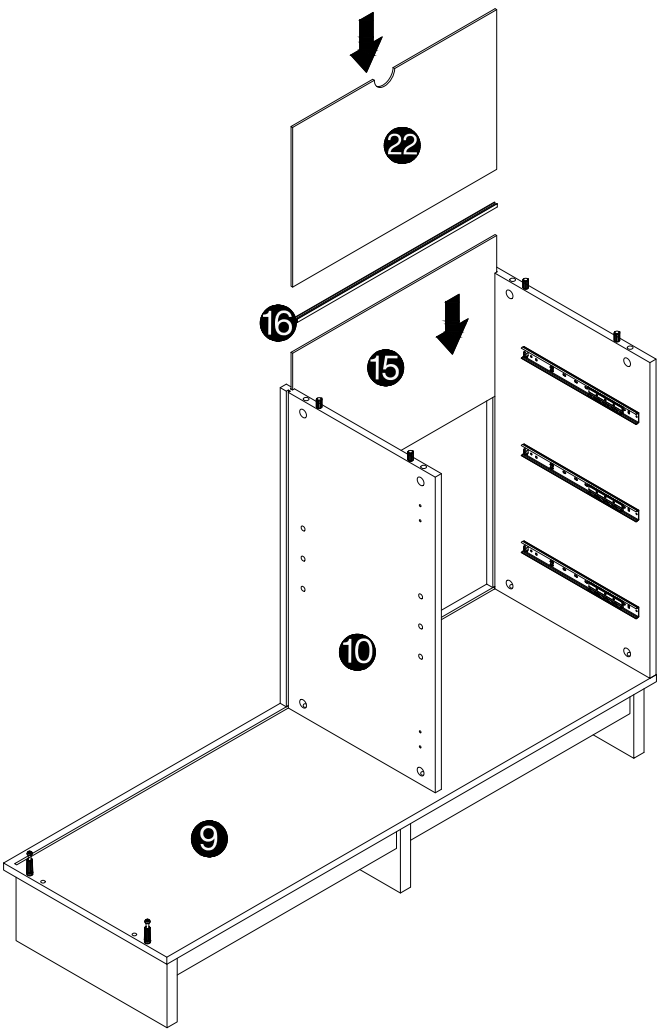


19

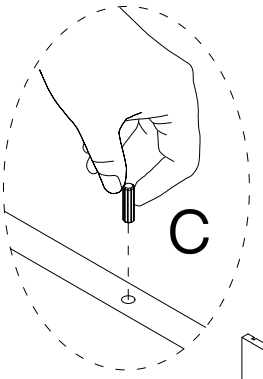


B

Ø15X12 mm
2 pcs
C

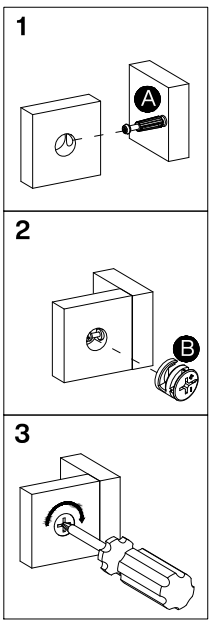Ø8x30mm
4 pcs

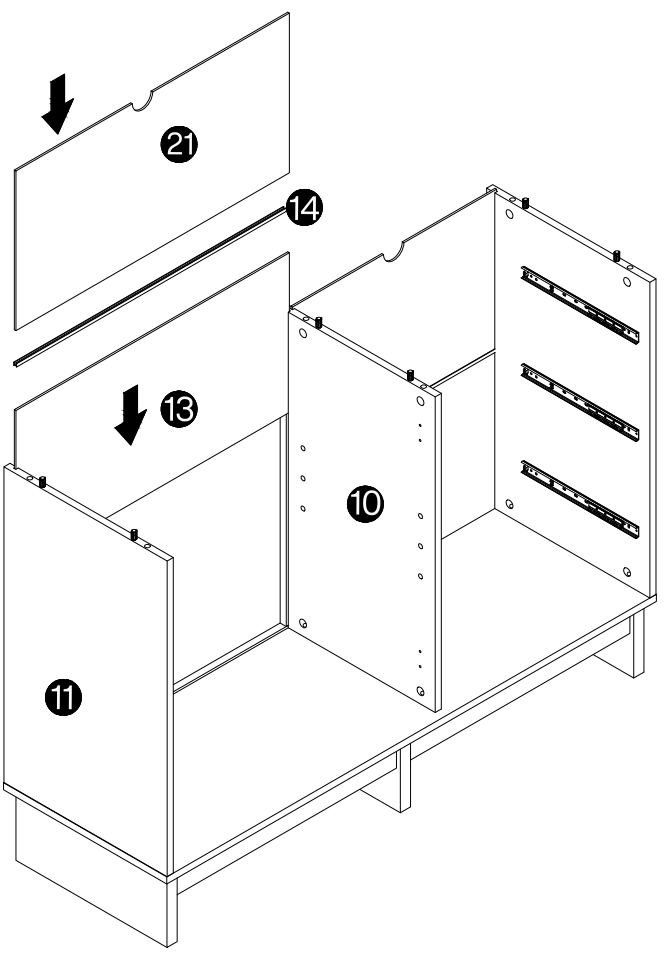


20



21

A


M6x40mm
6 pcs

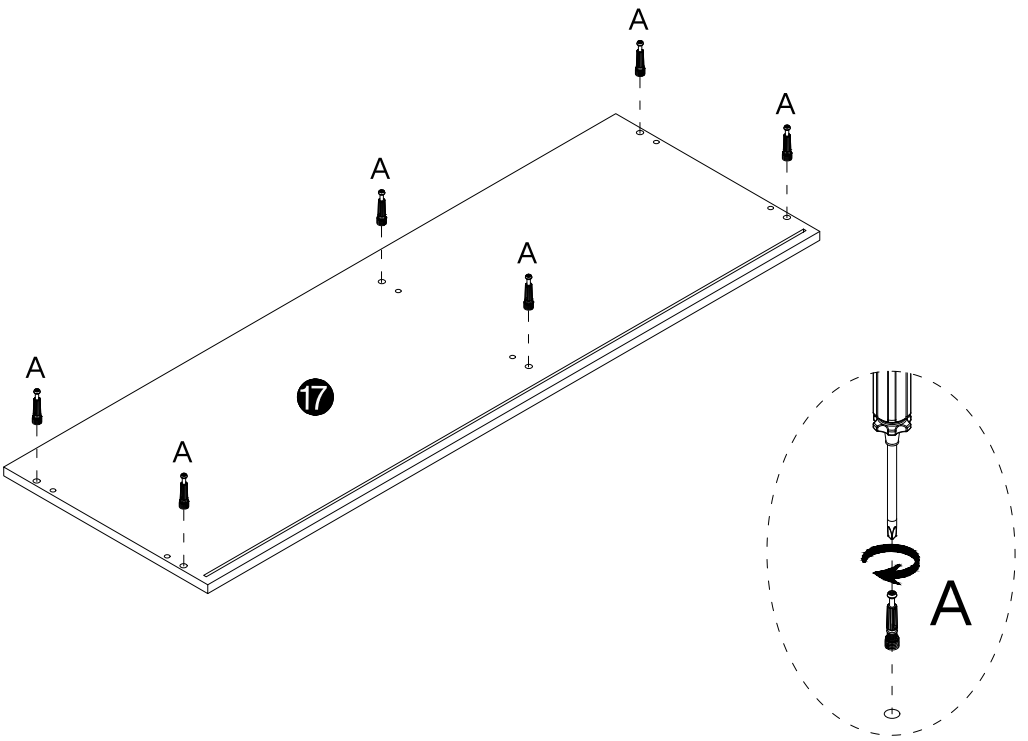


22


B


Ø15X12 mm
6 pcs

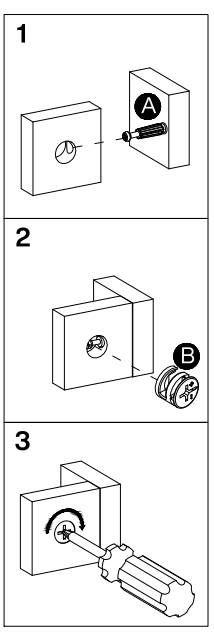


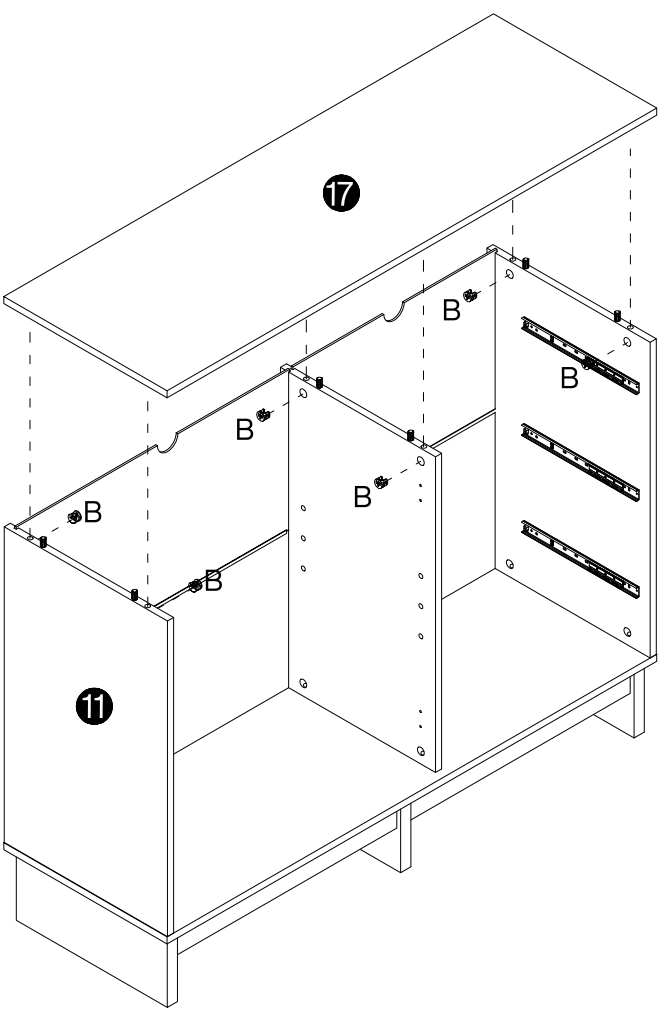


23

E	H
 Ø3x12mm	
8 pcs	8 pcs

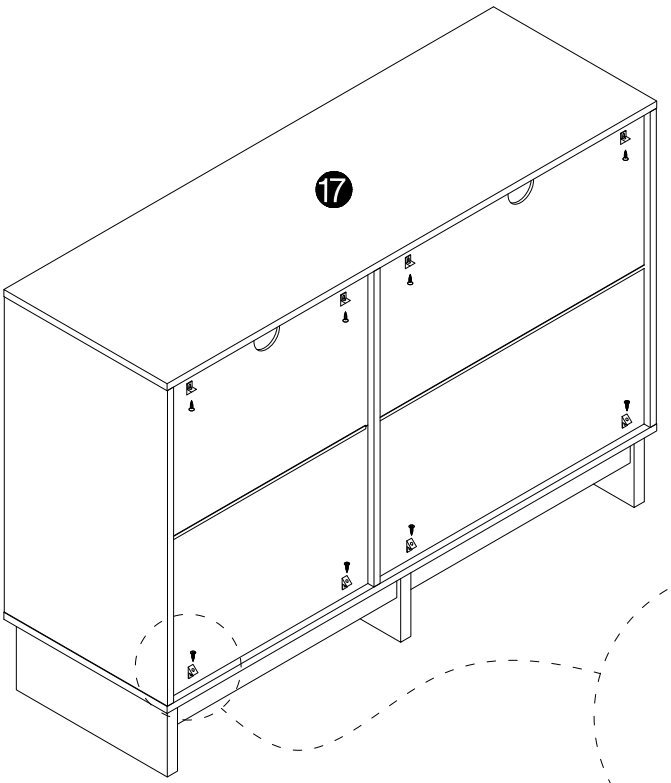

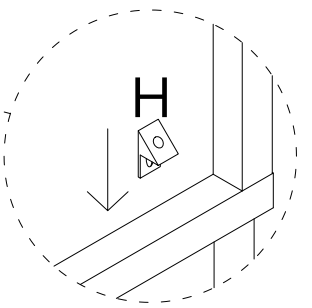



Step 1

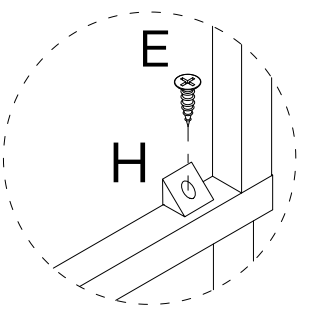


Step 2




24


G
 M5
4 pcs

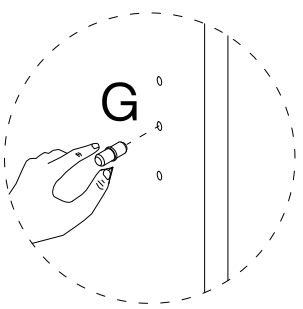



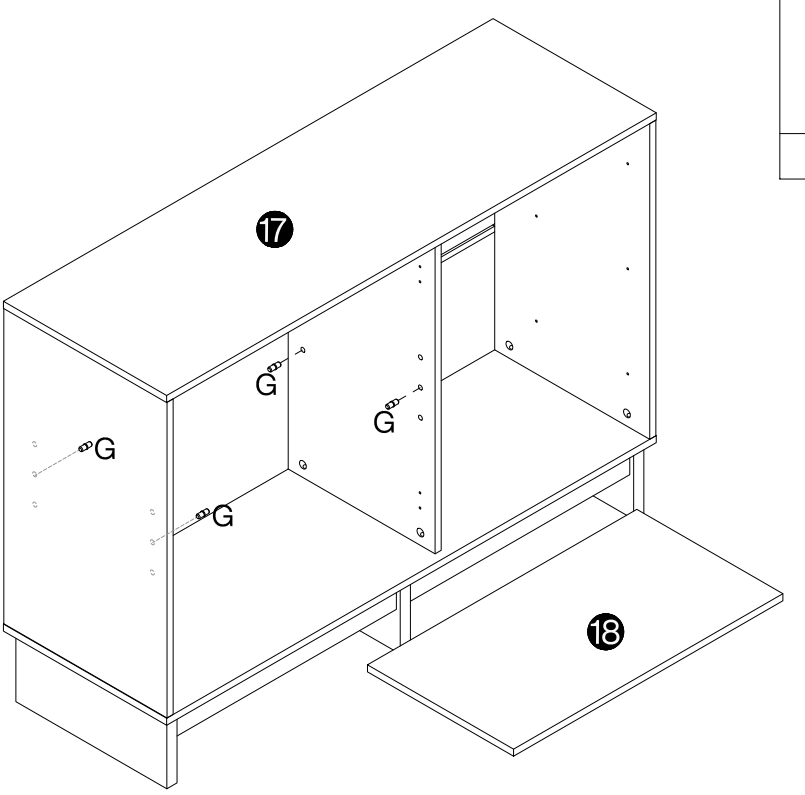



25

M	I	E
		
64#	Dawan Hinge	Ø3x12mm
1 pc	2 pcs	4 pcs

N

Ø4x22mm
2 pcs

26


M	J	E
		
64#	Straight Hinge	Ø3x12mm
1 pc	2 pcs	4 pcs

N

Ø4x22mm
2 pcs

27

E

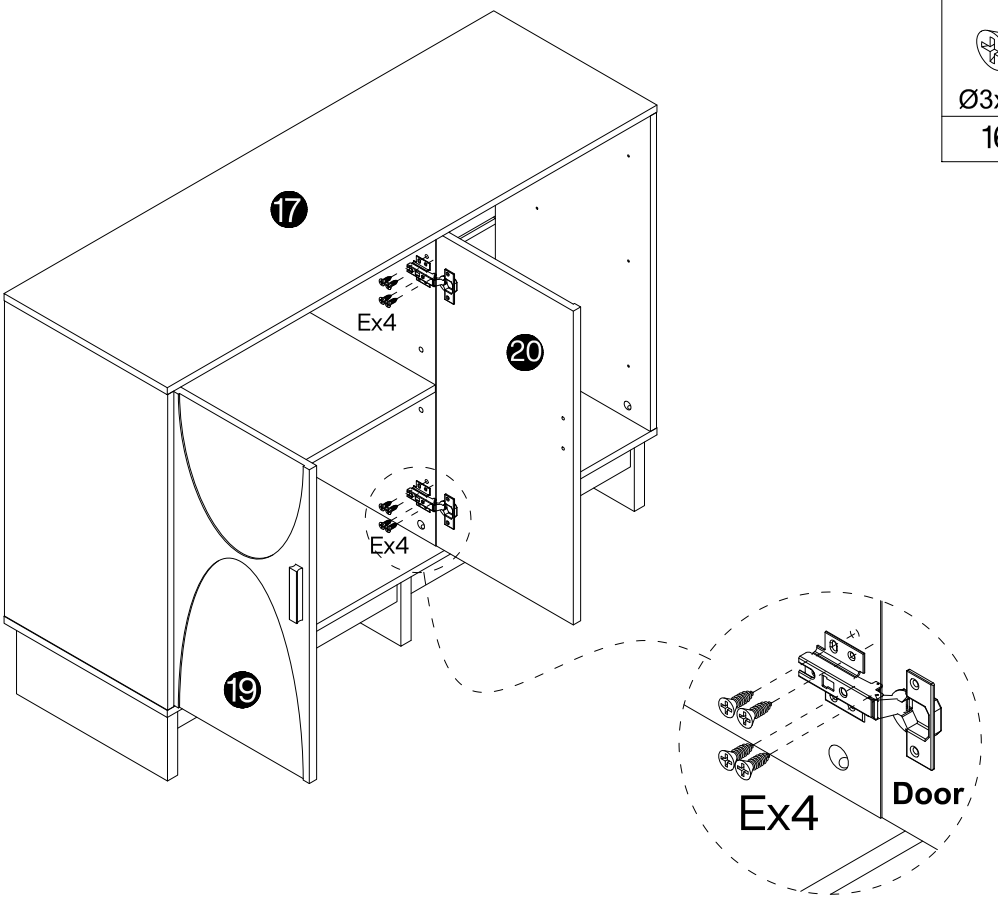
Ø3x12mm
16 pcs




To prevent the door hinge from falling off,please install 4 screws


---


28

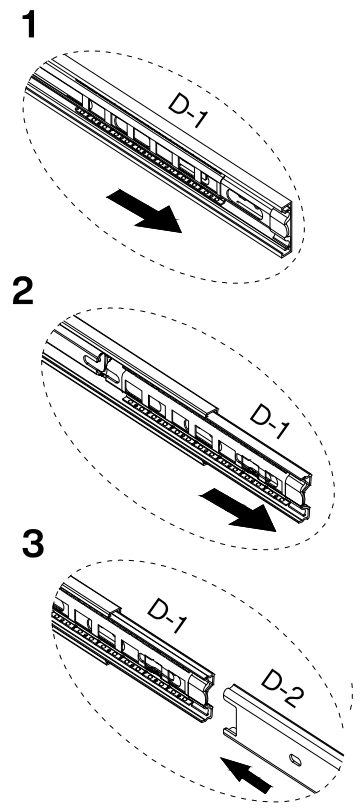


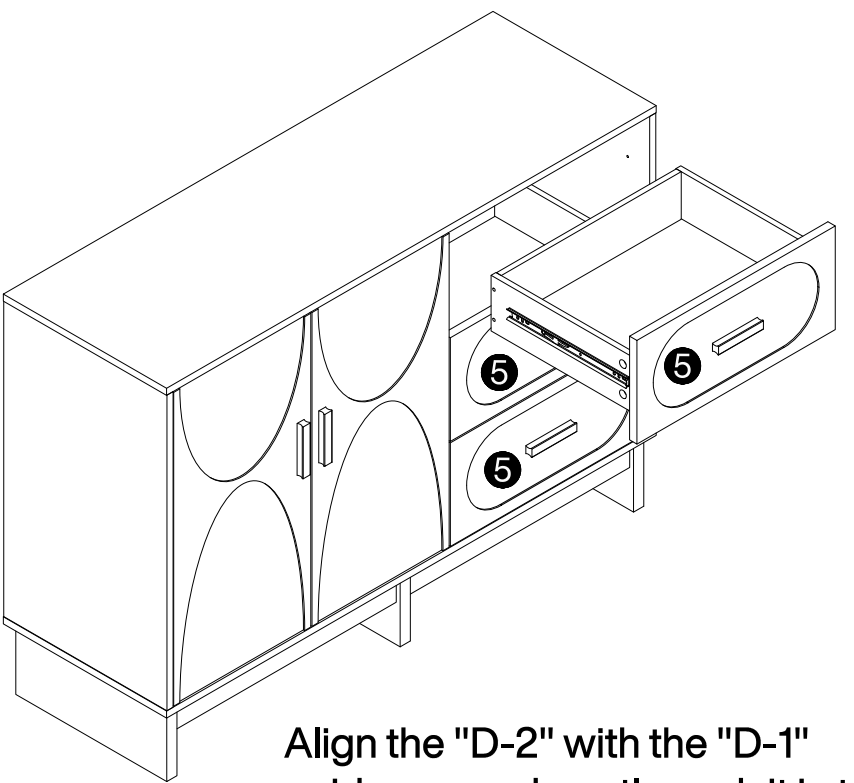


Align the "D-2" with the "D-1" guideway and gently push it in to complete the assembly

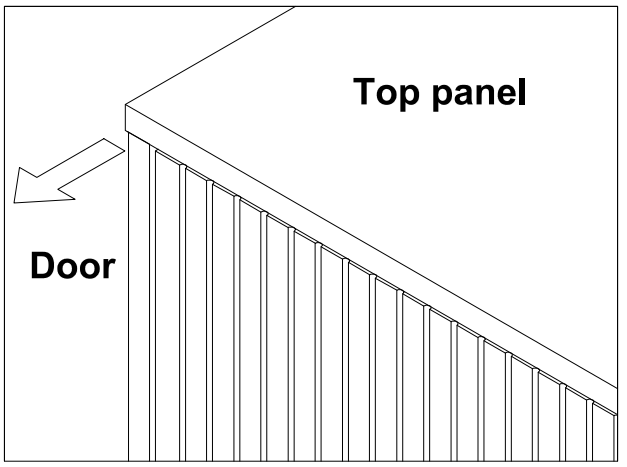

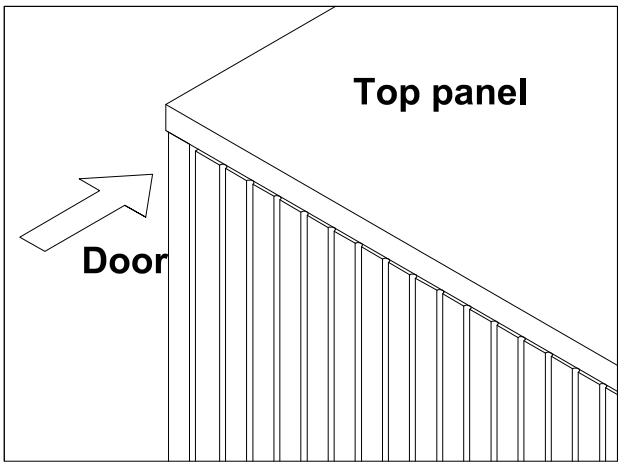


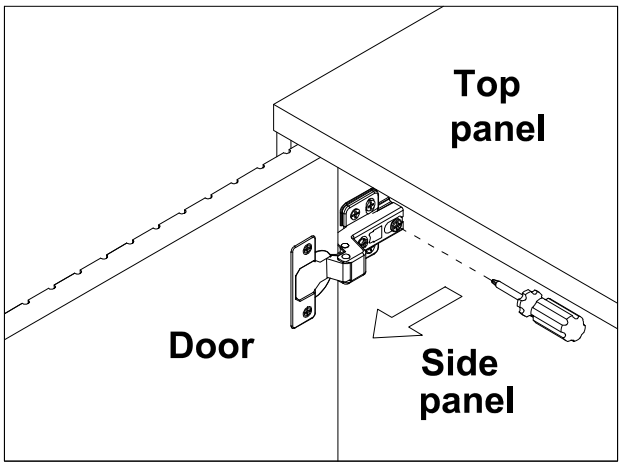



Pull the hinge forward a little.

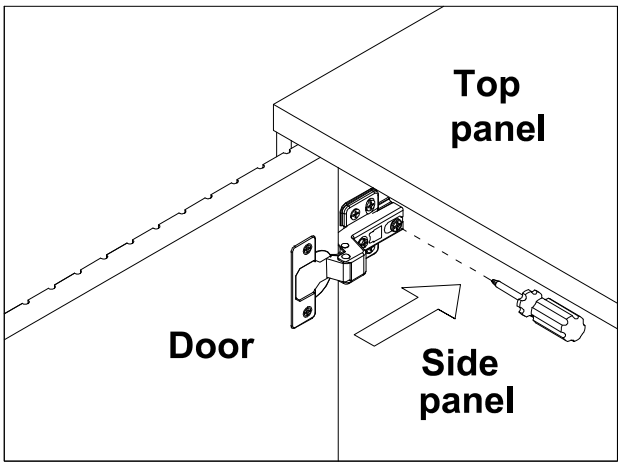


Push the hinge back a little.

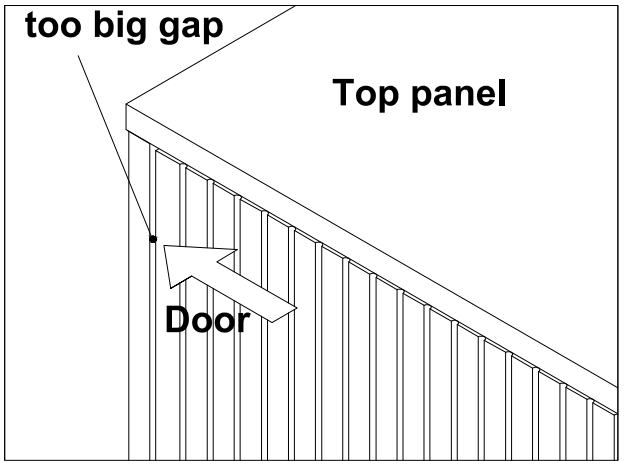

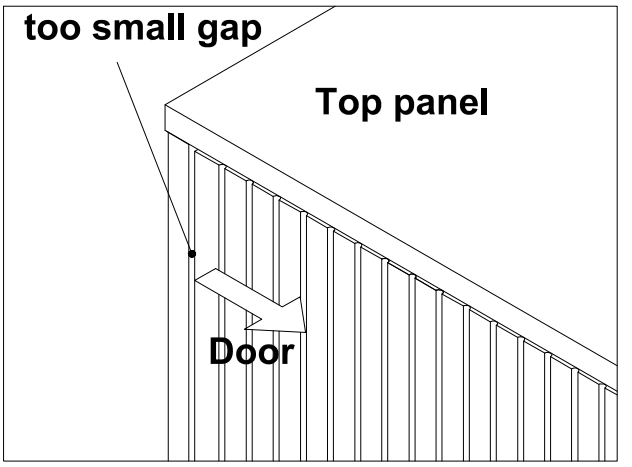

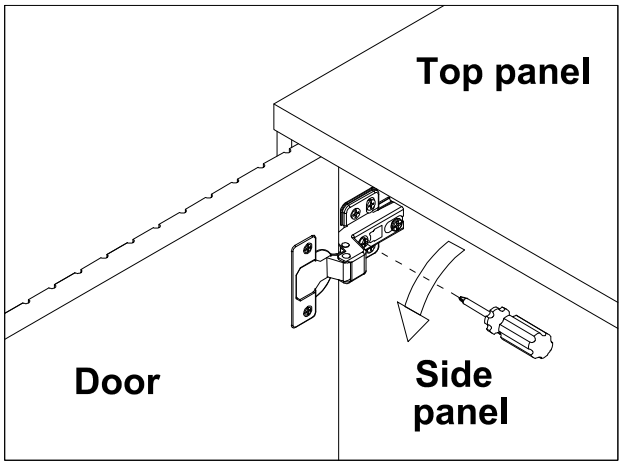

Turn the screw clockwise a little as shown to make the gap smaller

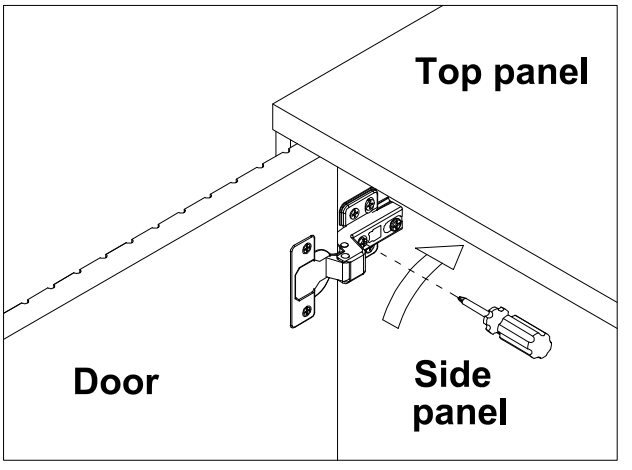

Turn the screw counterclockwise a little as shown to make the gap bigger


29

L


2 pcs

Wall

Step1



Step2

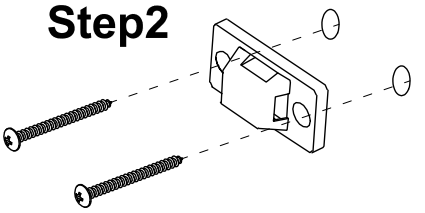

Step3

