

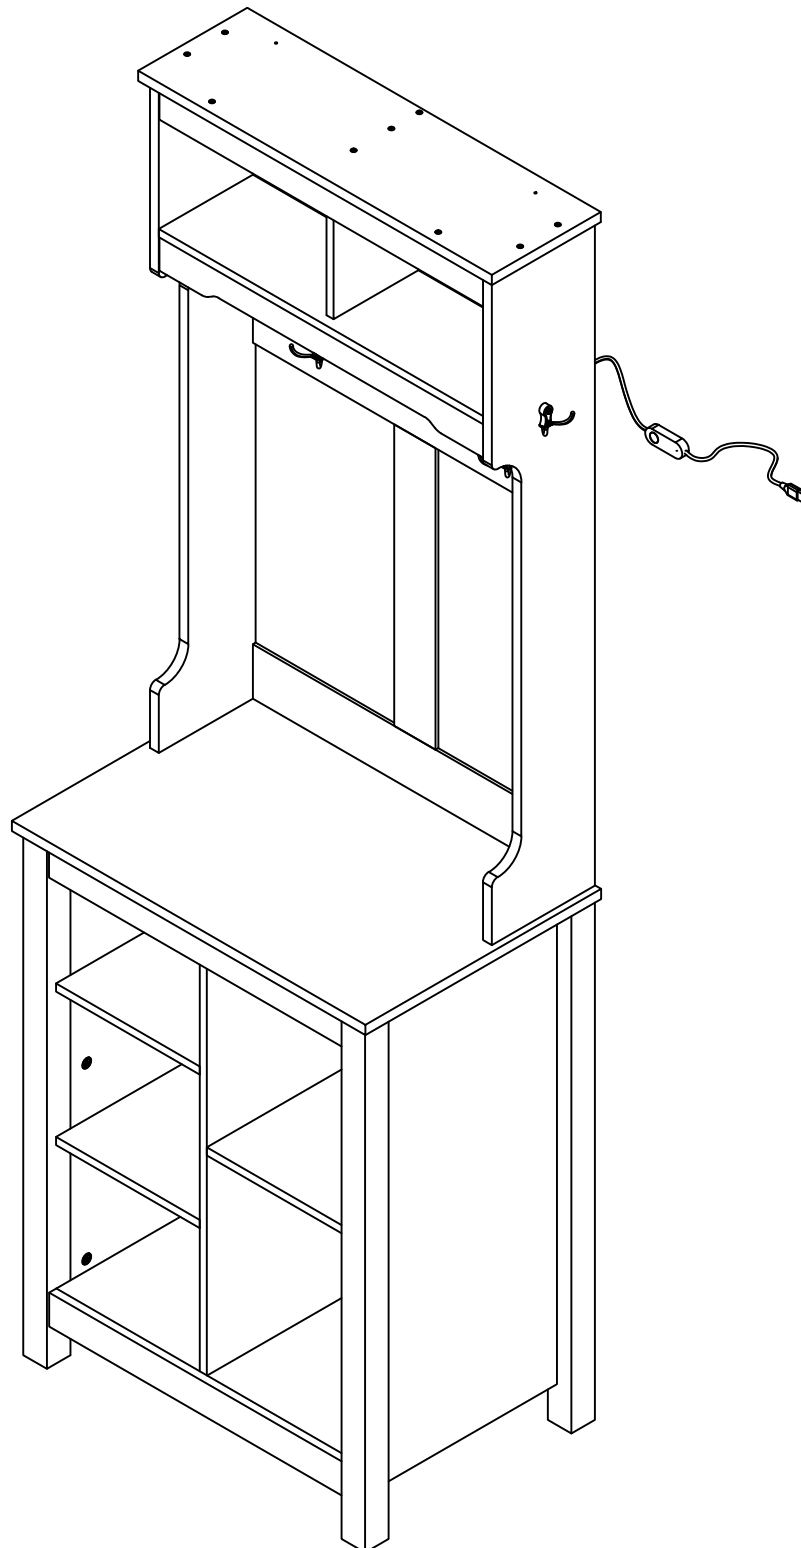
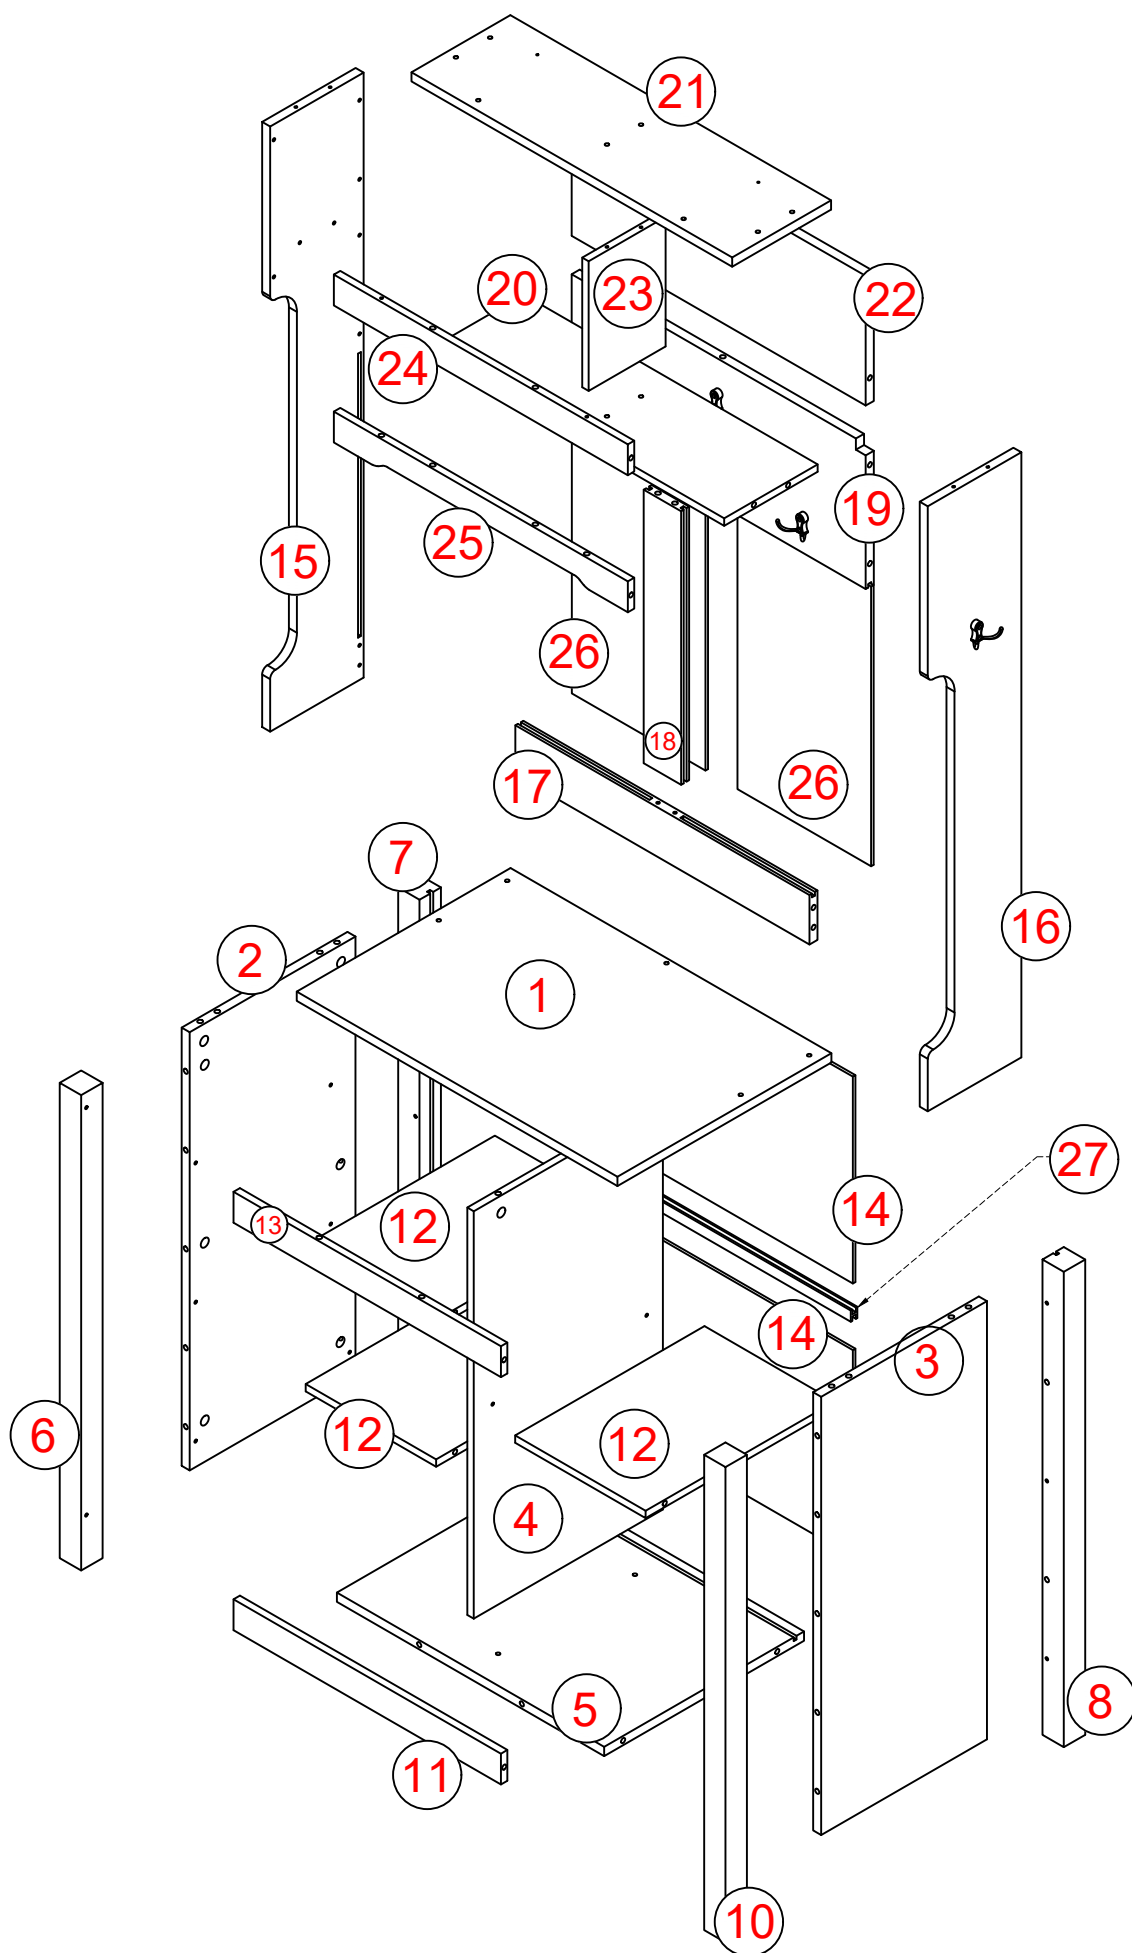




INSTRUCTIONMANUAL






A	 M5X35	69
B	 Ø15X10	69
C	 M5X40	19
D	 Ø6X40	16
E	 M5X55	2
F	 M3.5X16	10
G	 M3.5X14	10
H	 	8
J	 	5
K	 	1
L	 	2
	 	

1

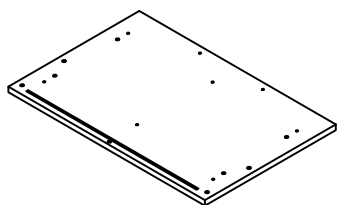


1 PC

2

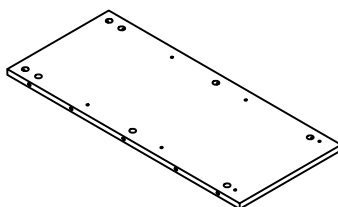


1 PC

3

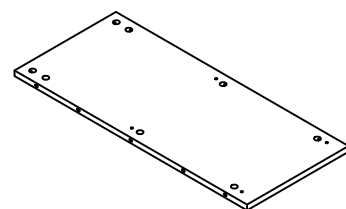


1 PC

4

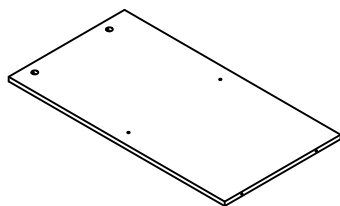


1 PC

5

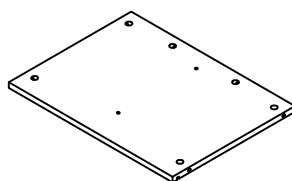

1 PC

6



1 PC

7



1 PC

8




1 PC

10




1 PC

11

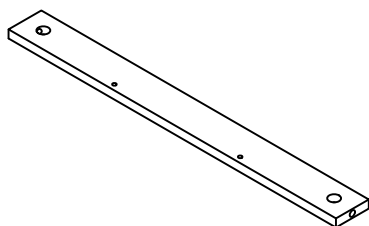


1 PC

12

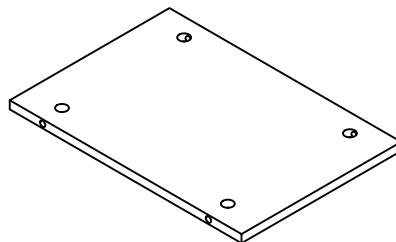


3 PCS

13

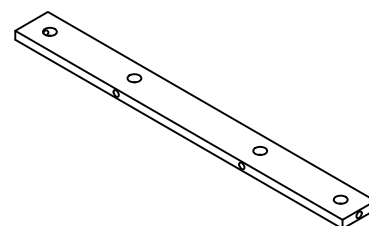


1 PC

14

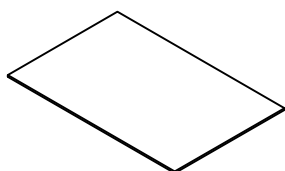


2 PCS

15

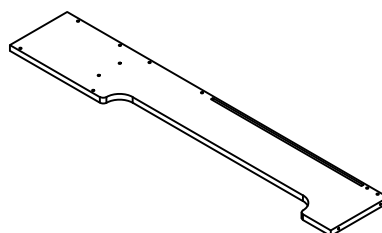


1 PC

16

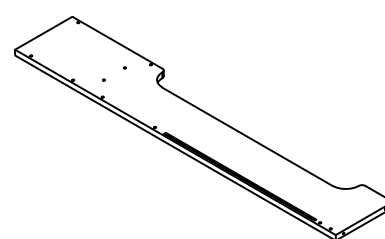


1 PC

17

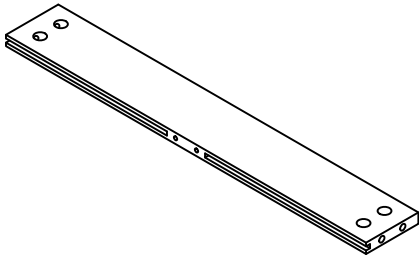


1 PC

18

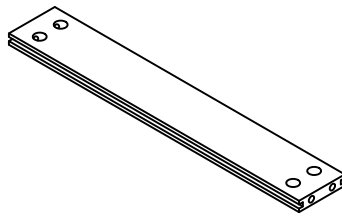


1 PC

19

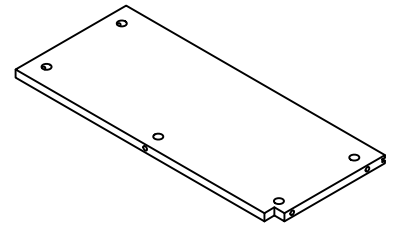


1 PC

20

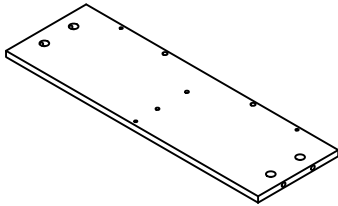


1 PC

21

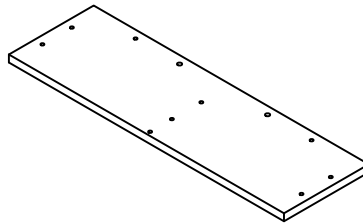


1 PC

22

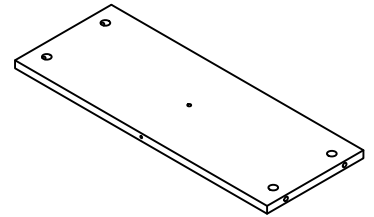


1 PC

23

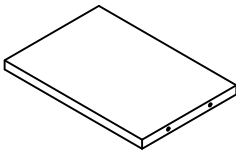


1 PC

24

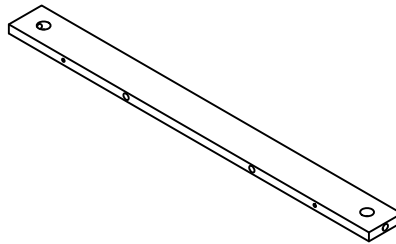


1 PC

25

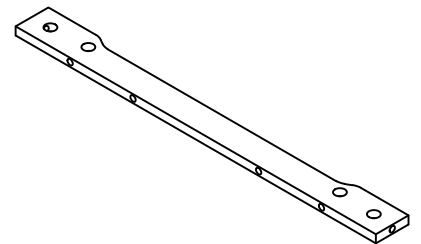


1 PC

26

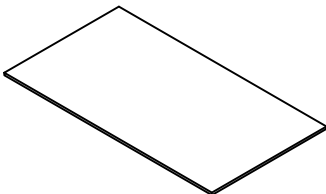

2 PCS

27

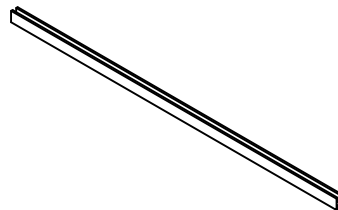


Step: 1

A



M5X35

12

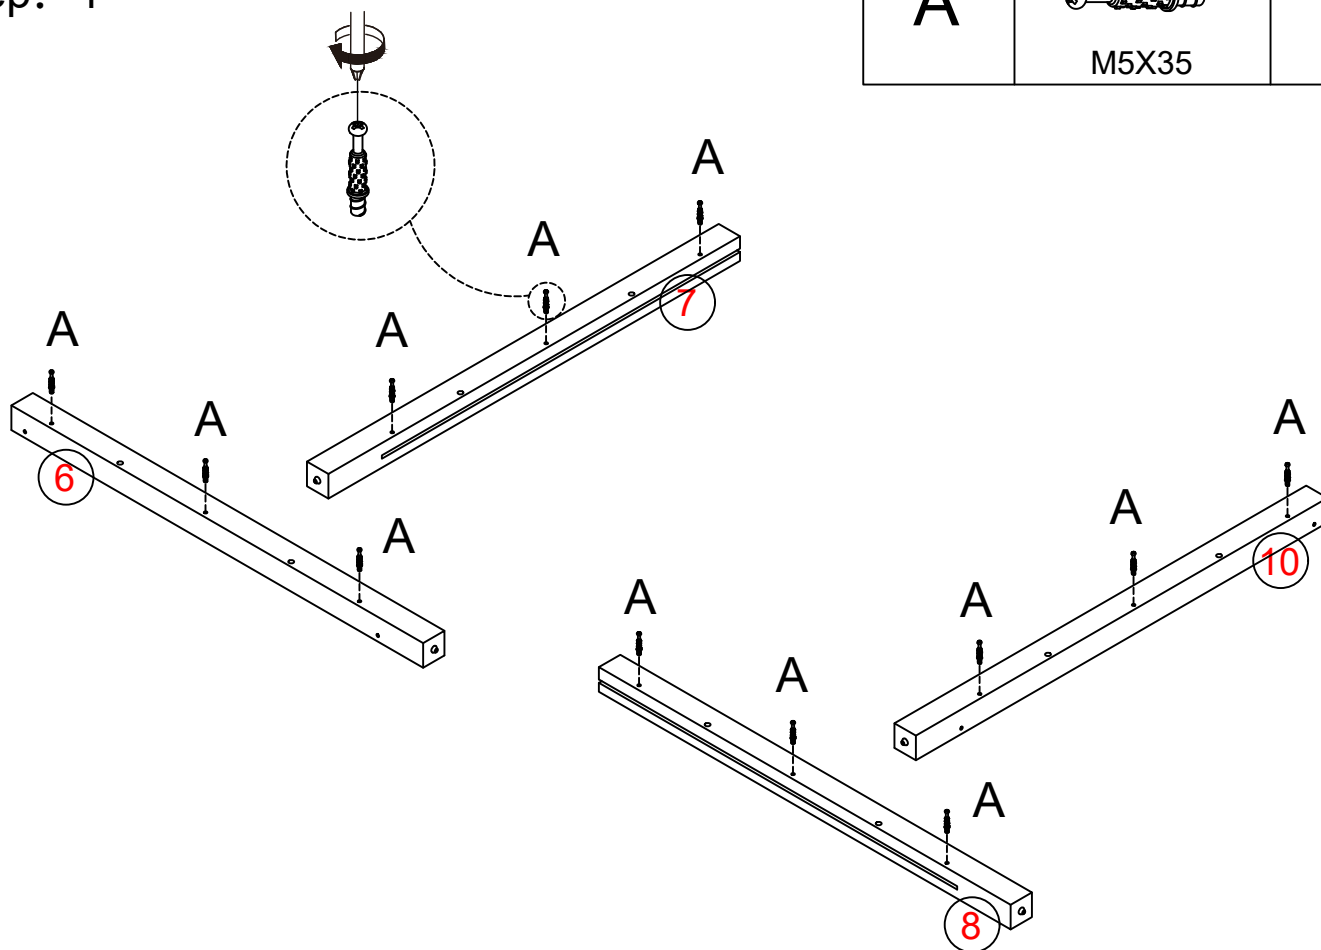



Step: 2

D



Ø6X40

8

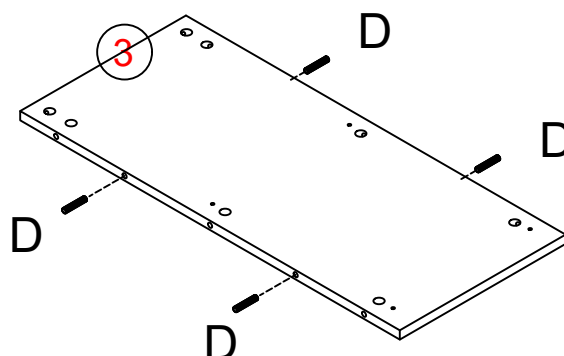
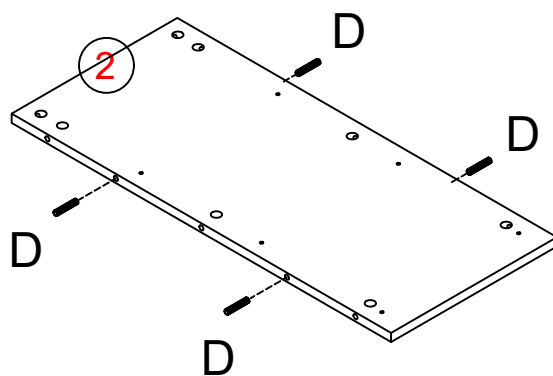


Step: 3

B



6

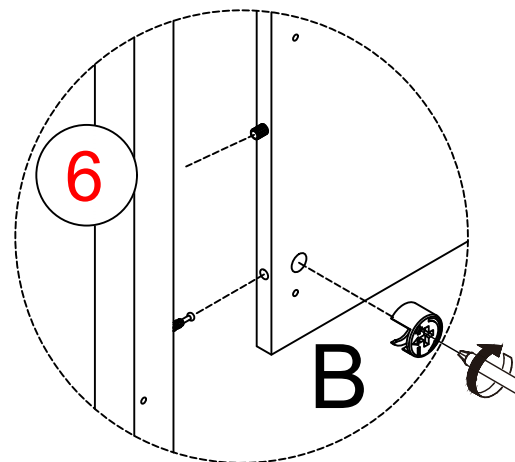
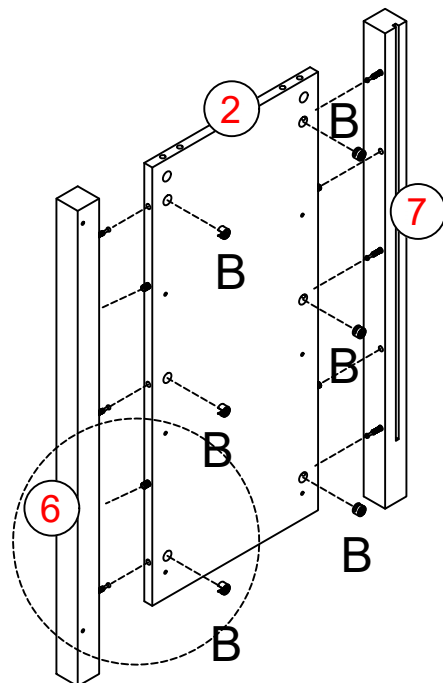


Step: 4

B



6

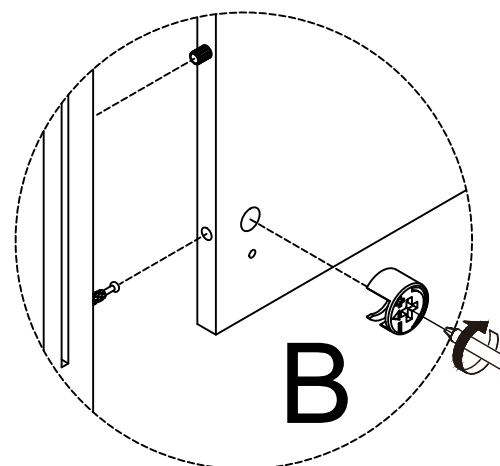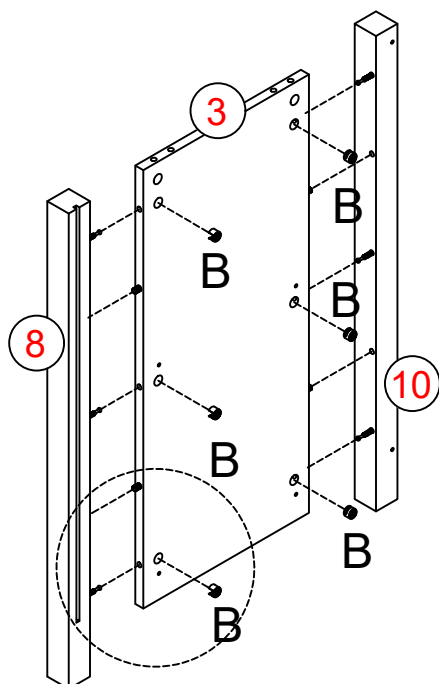


Step: 5

A



M5X35

8

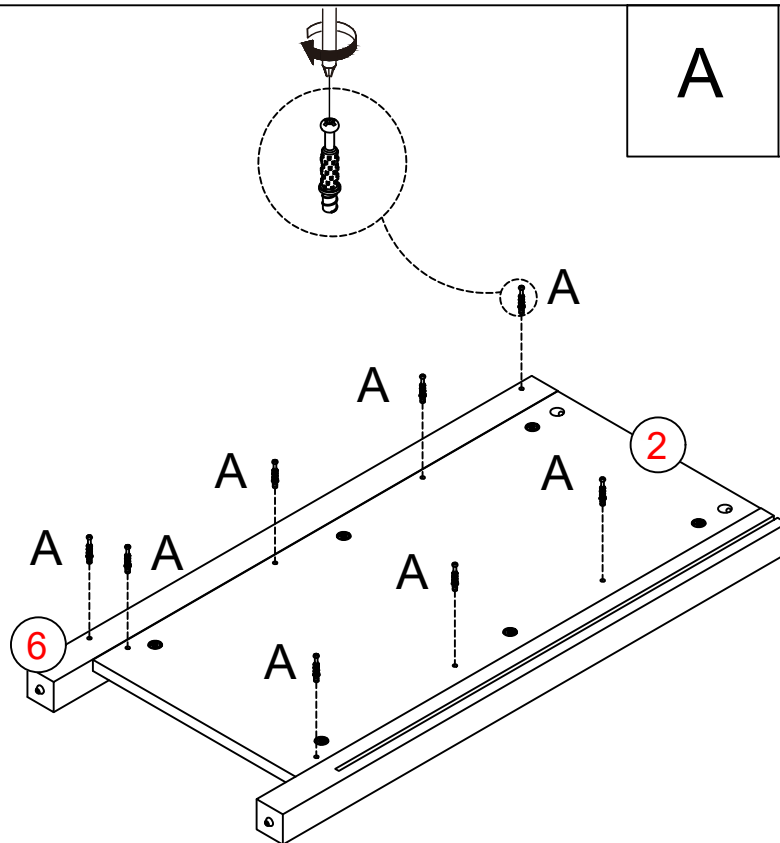


Step: 6

A




M5X35

6

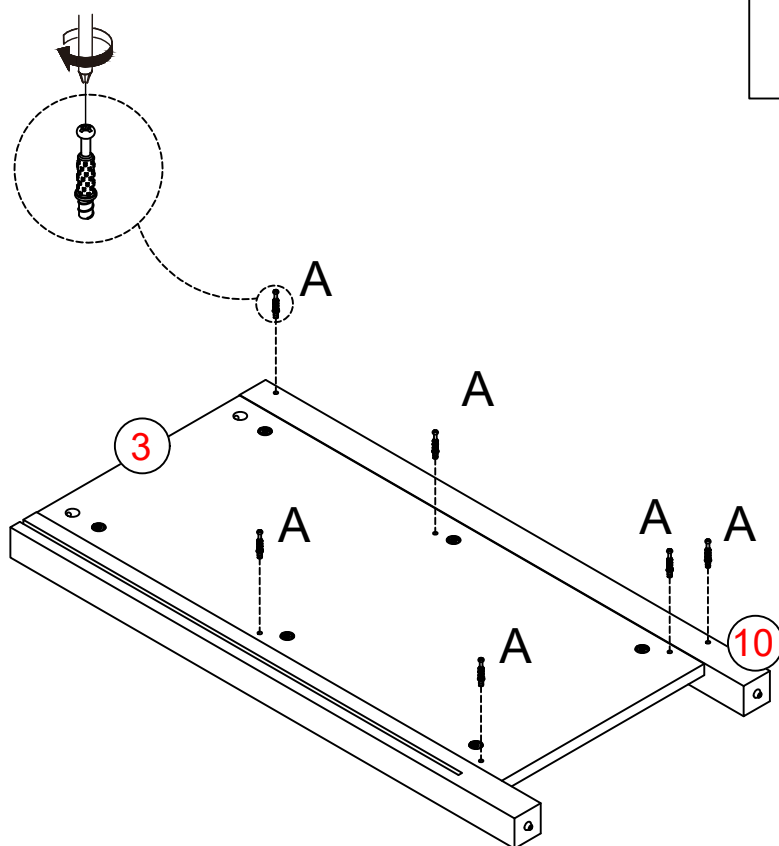


Step: 7

A	 M5X35	4
---	---	---

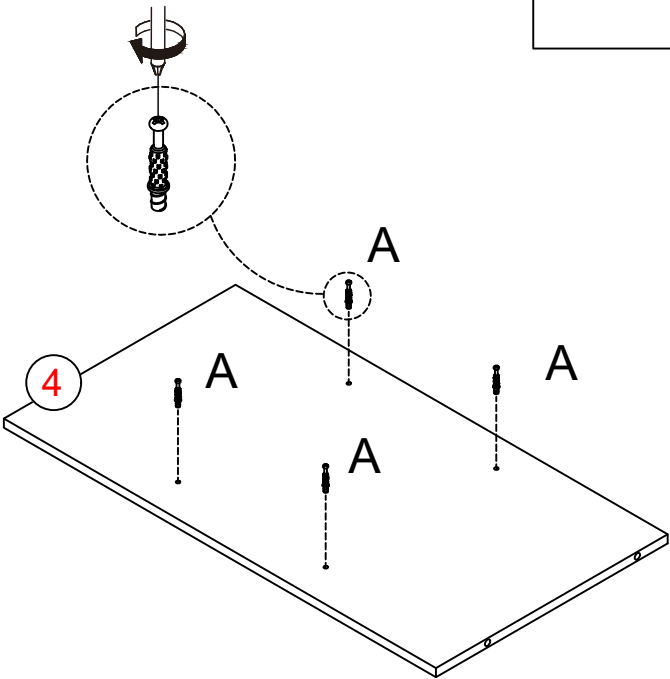

Step: 8

A	 M5X35	2
---	--	---


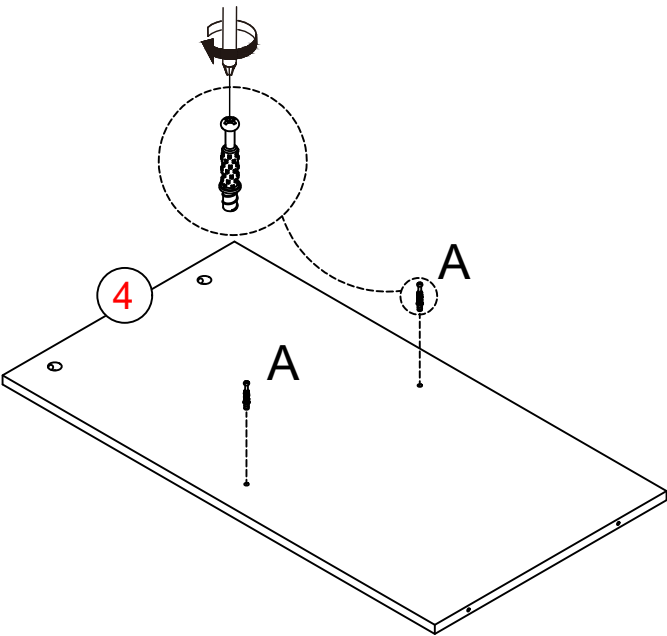


Step: 9

B



2

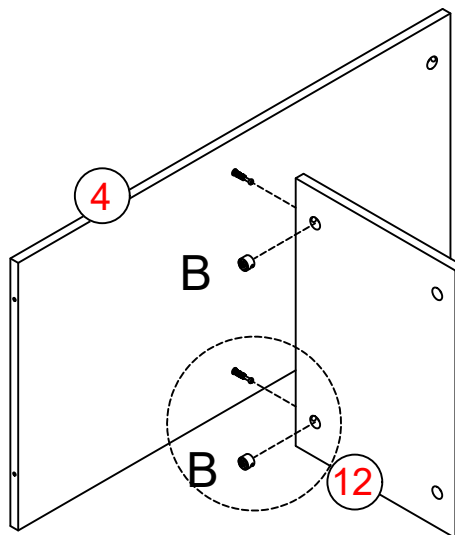
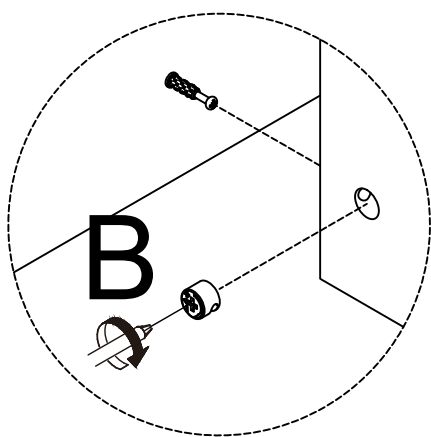


Step: 10


B




4

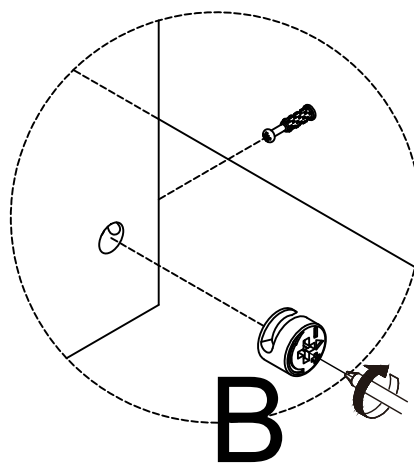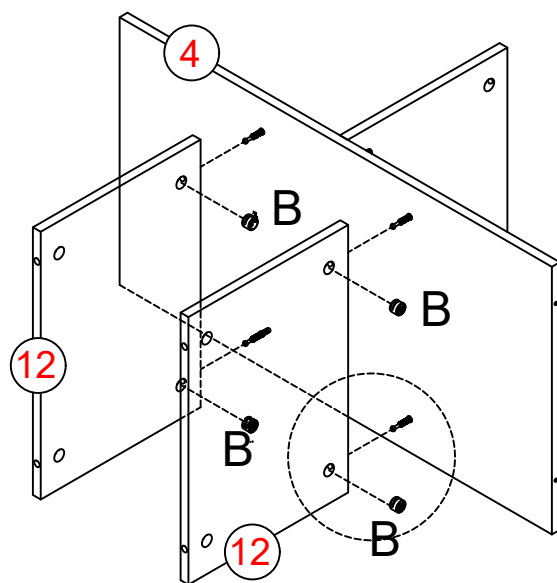


Step: 11

C	 M5X40	2
---	---	---

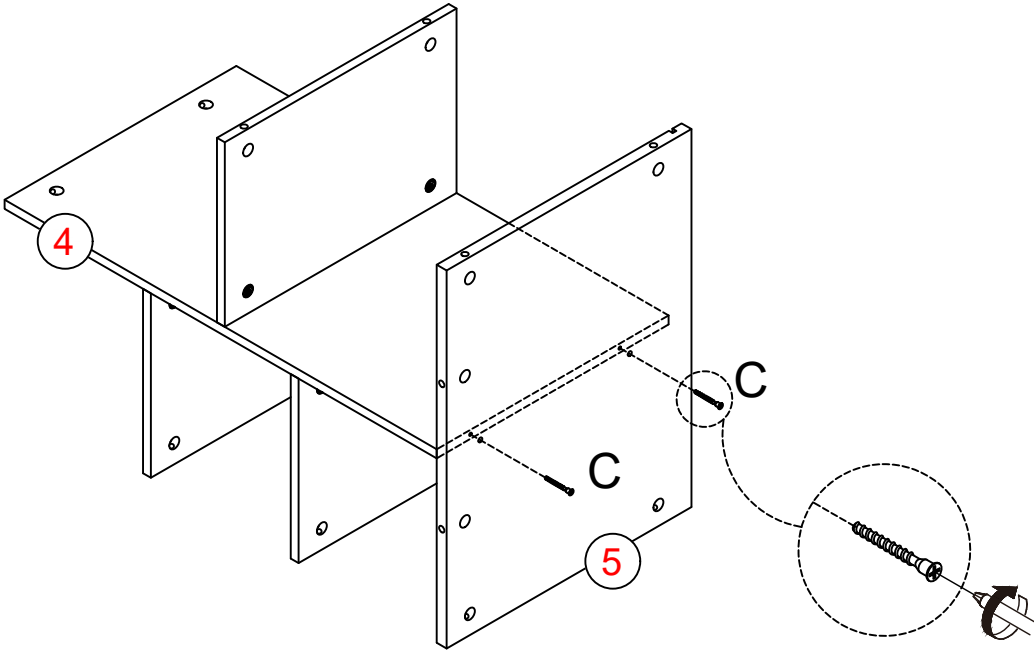

Step: 12

A	 M5X35	2
---	--	---

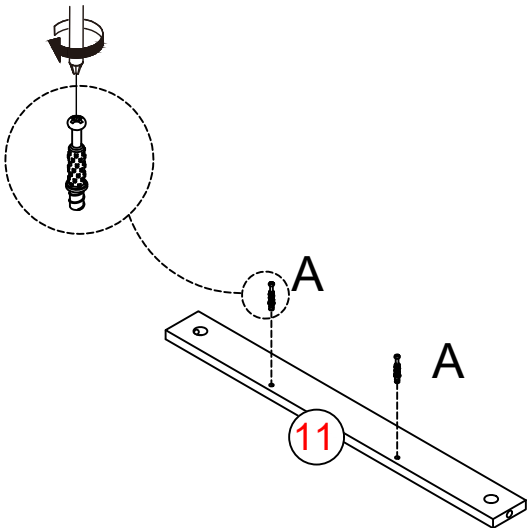


Step: 13

B



2

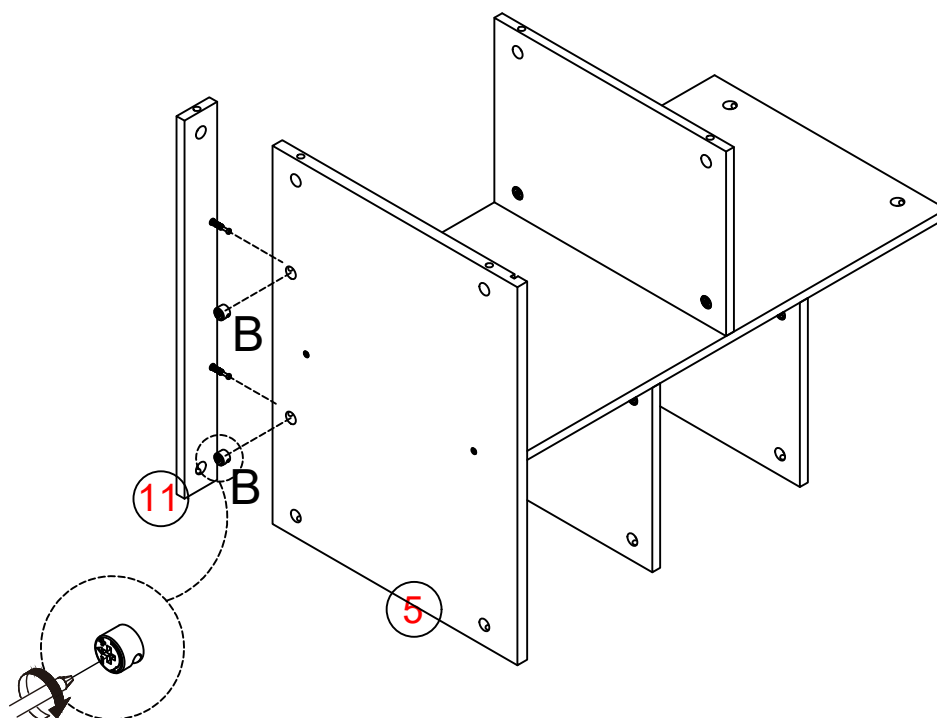


Step: 14

B



7

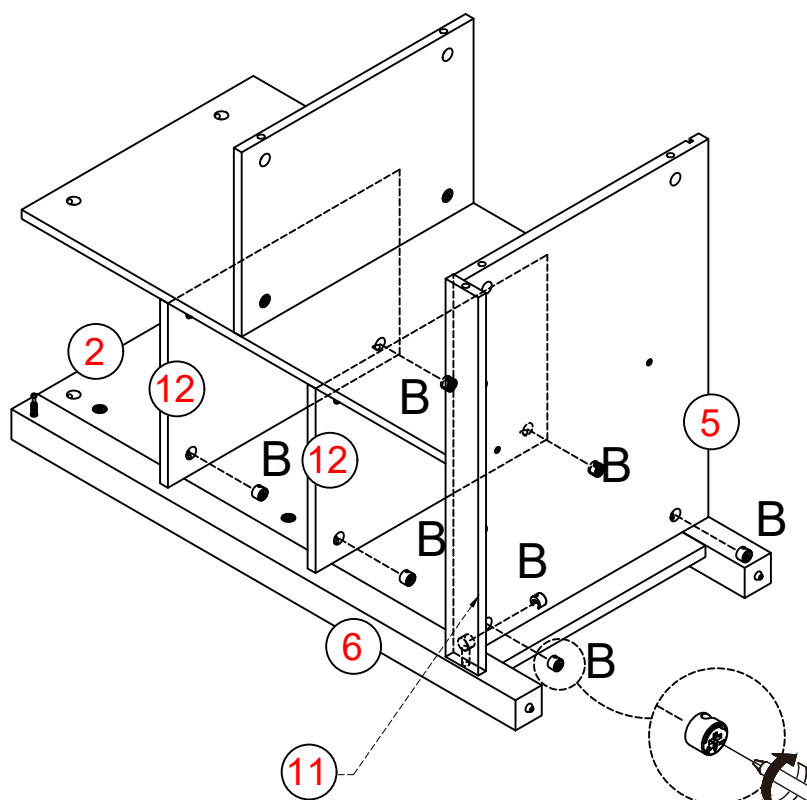


Step: 15

B



1

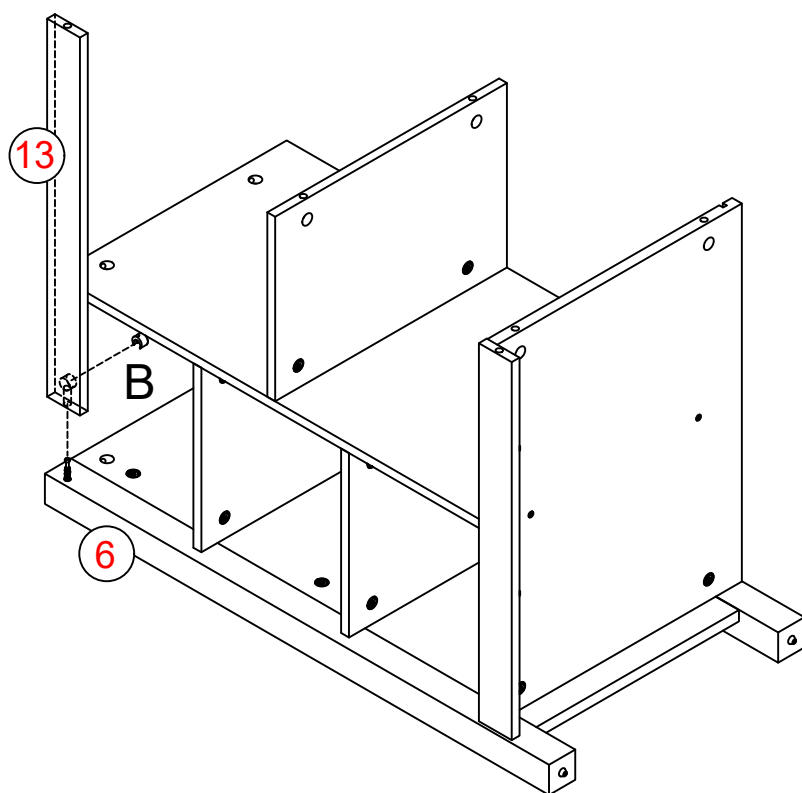


Step: 16


B




6

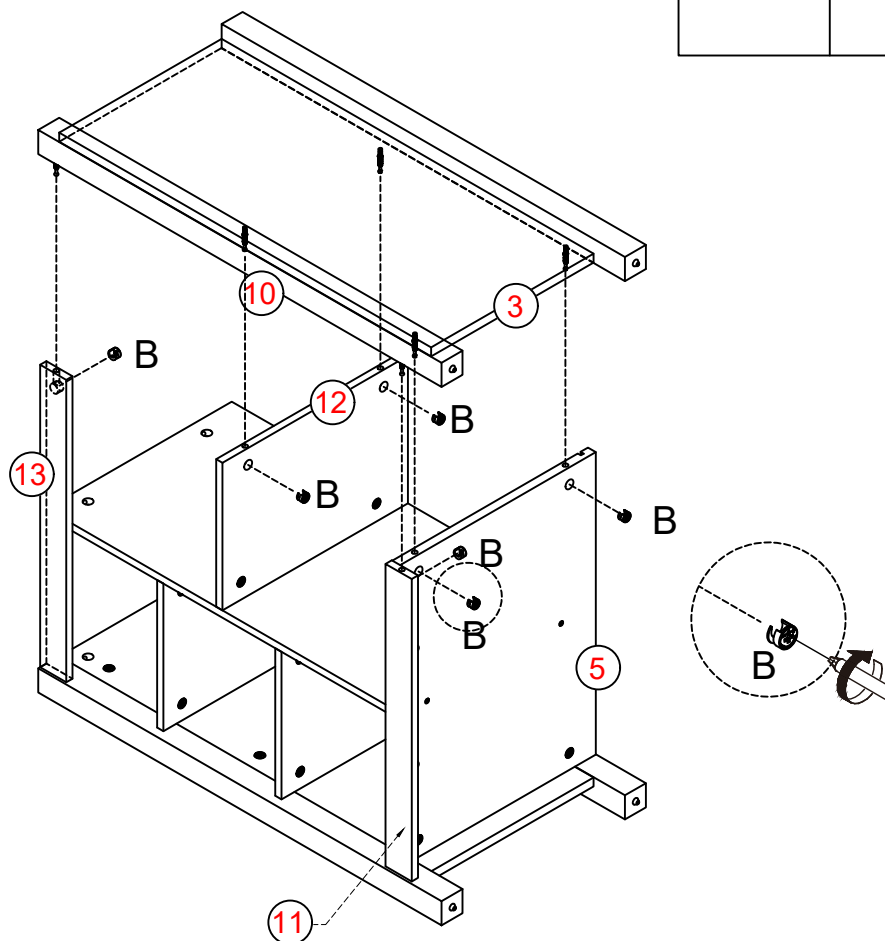

Step: 17

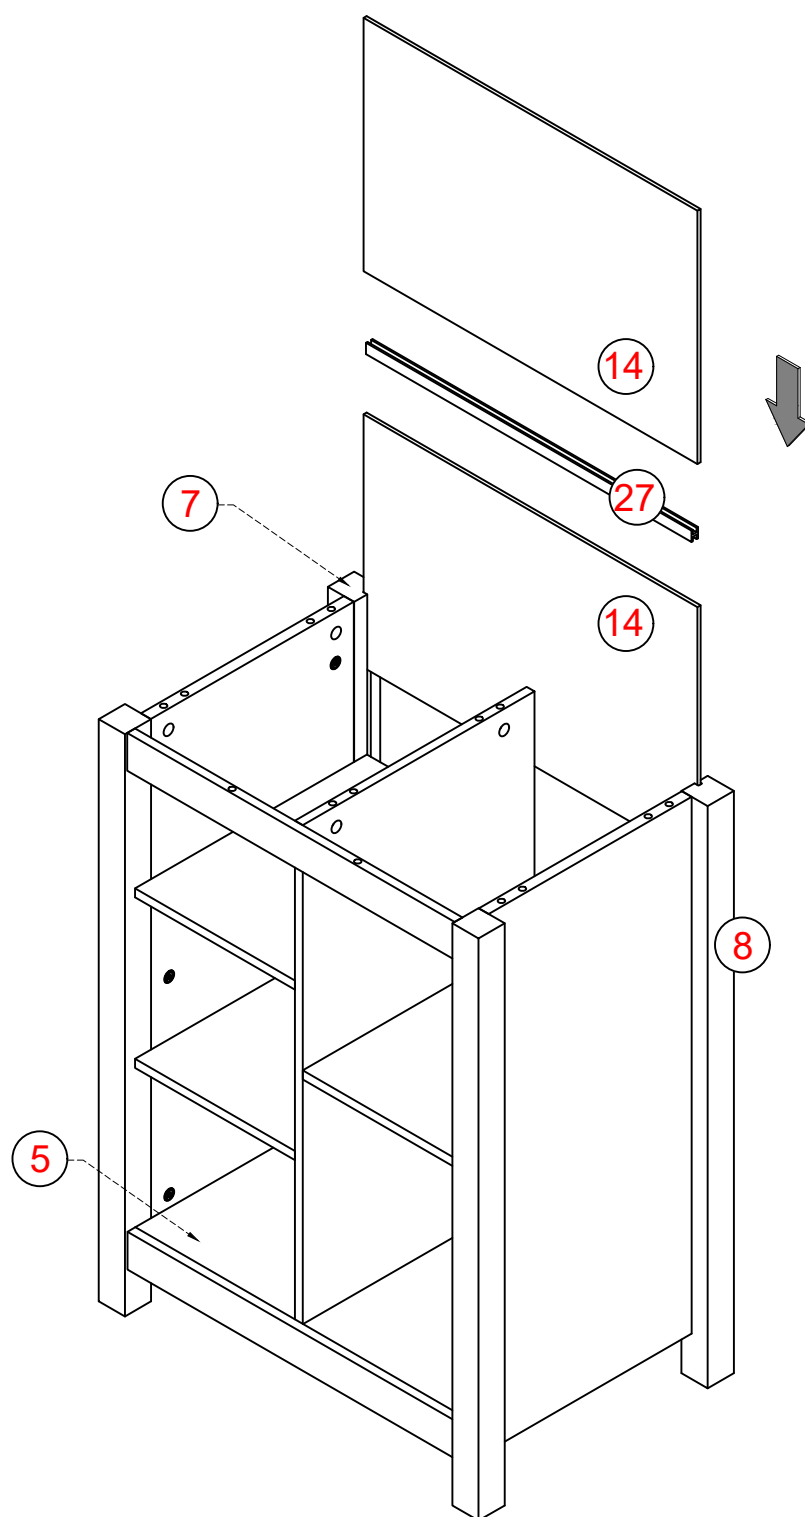

Step: 18

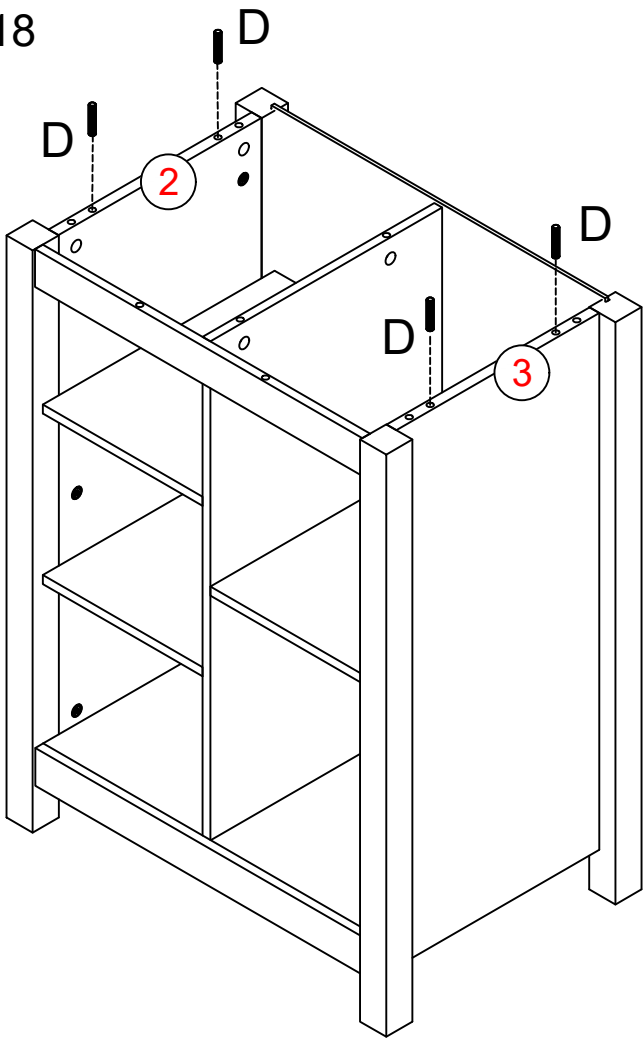


D



Ø6X40

4

Step: 19

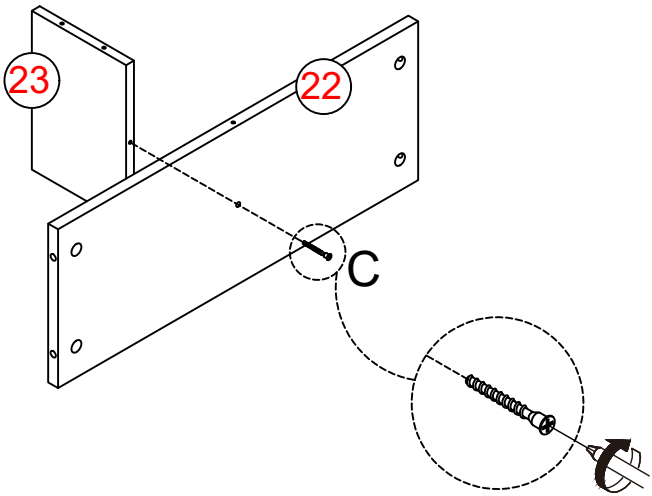

C



M5X40


1

Step: 20

C




3

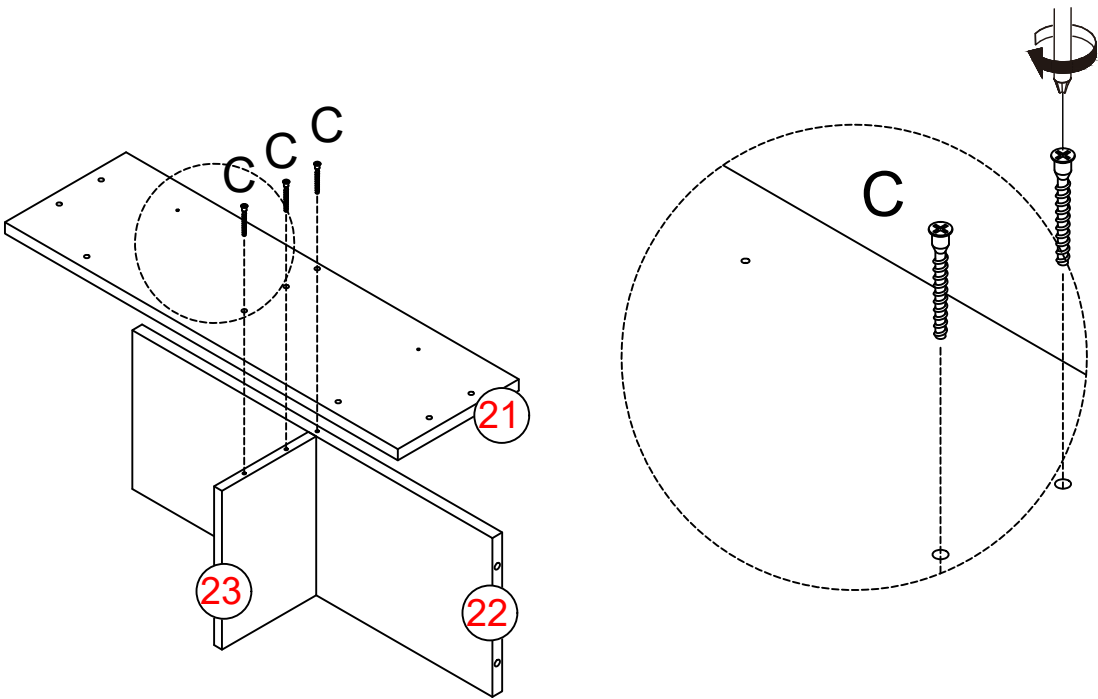


Step: 21

D



4

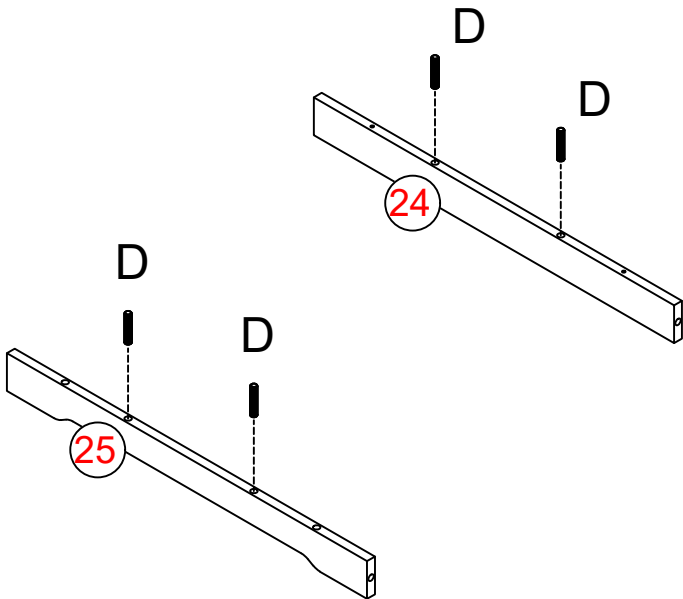


Step: 22

C



2

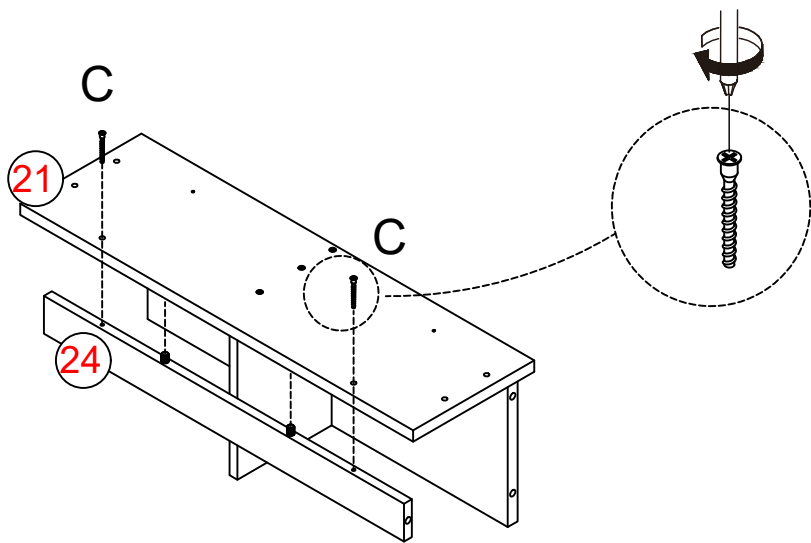


Step: 23



C



2

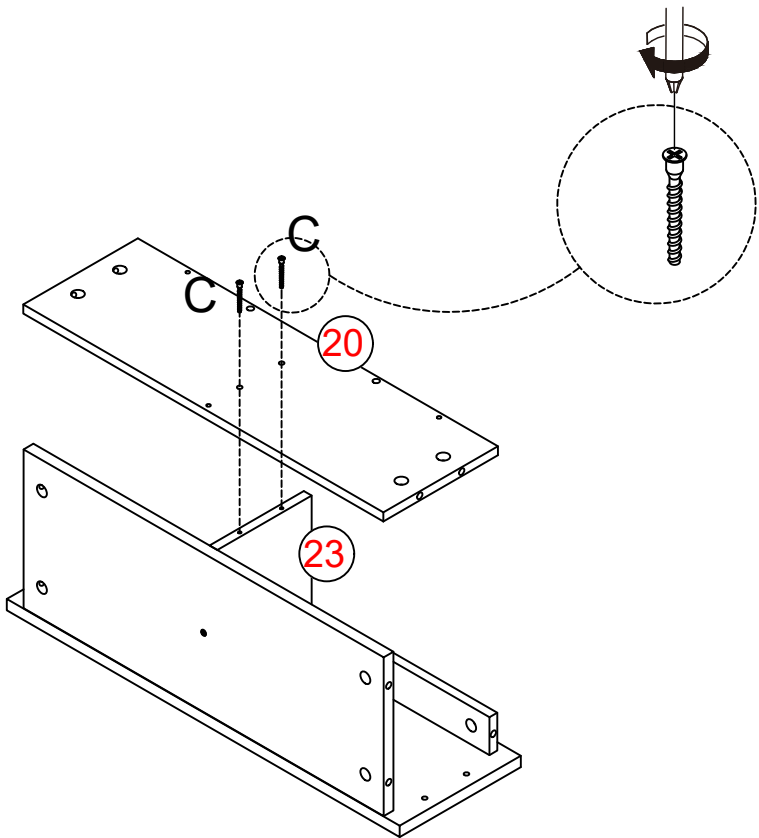

Step: 24

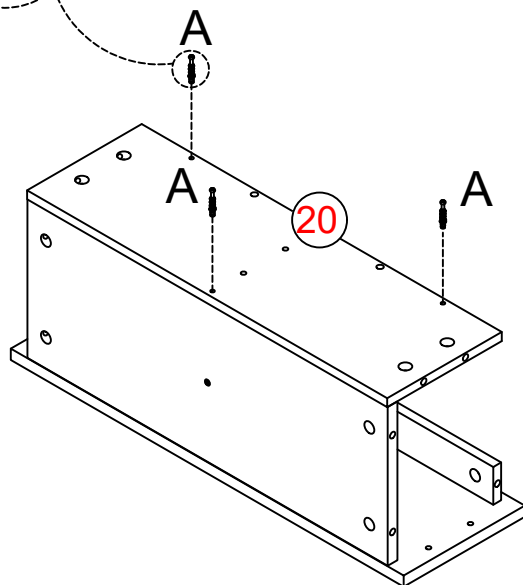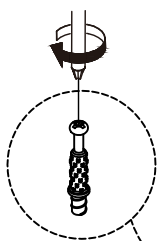


A



M5X35

3

Step: 25

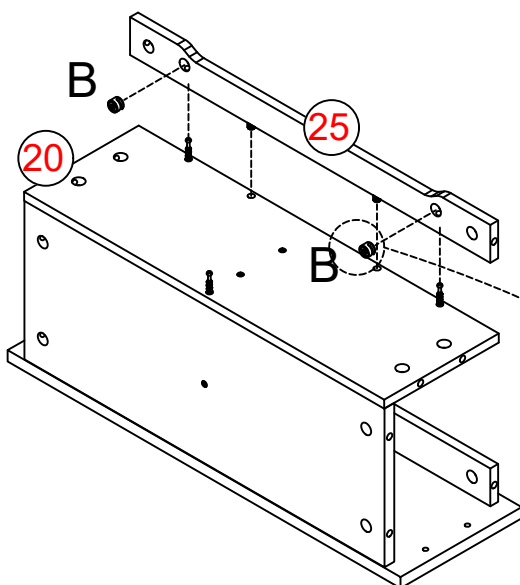


B



Ø15X10

2

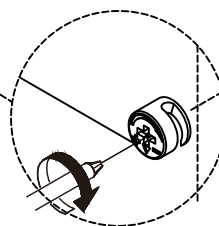


Step: 26

A



M5X35

4

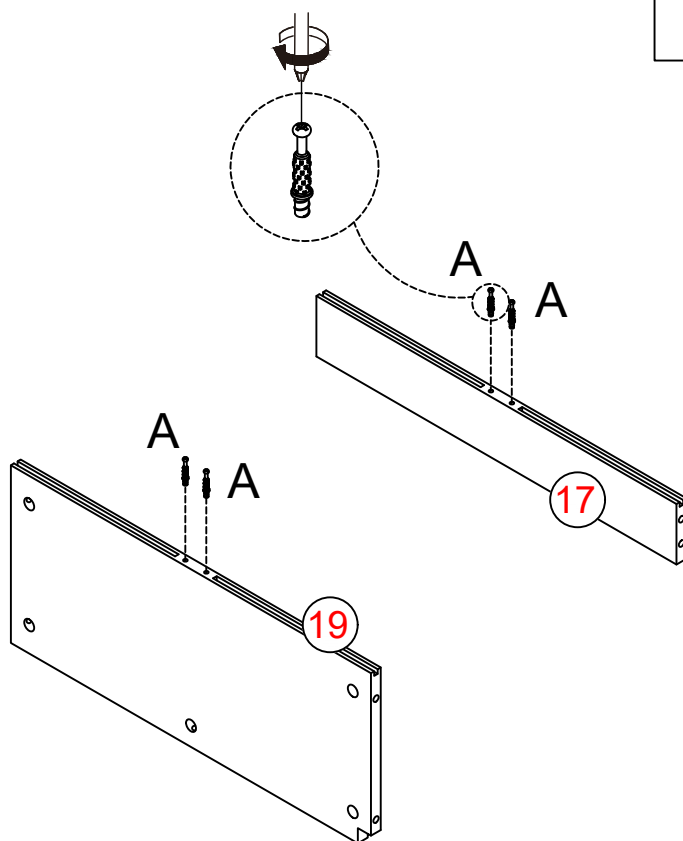


Step: 27

B




Ø15X10


4

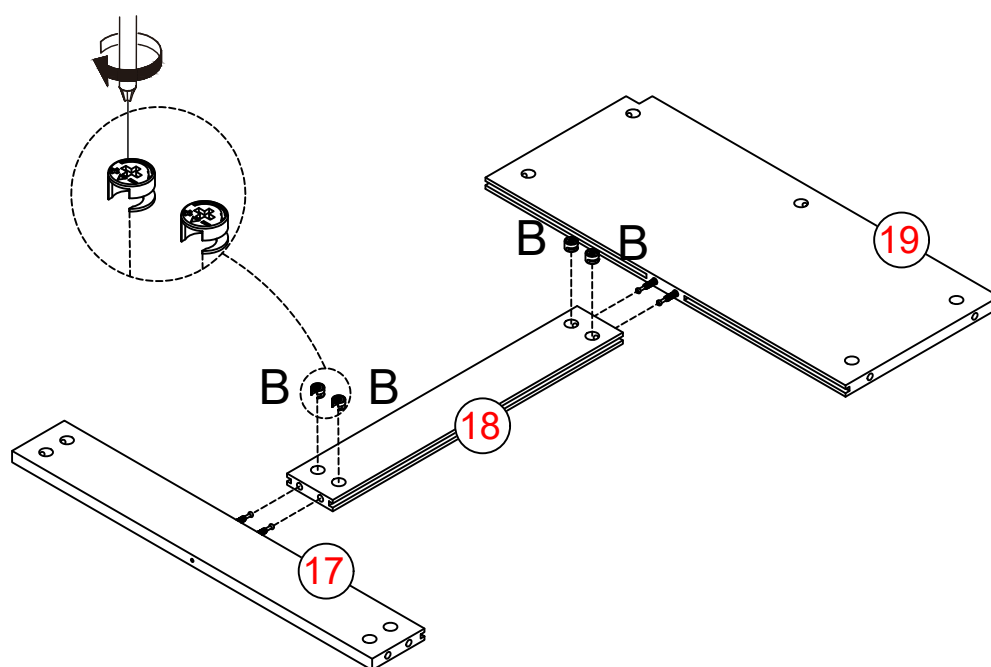

Step: 28

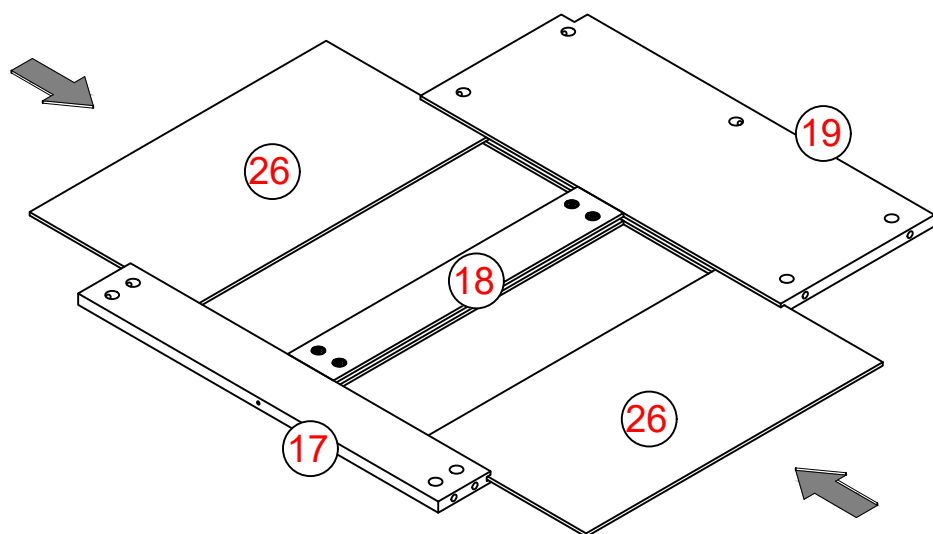

Step: 29

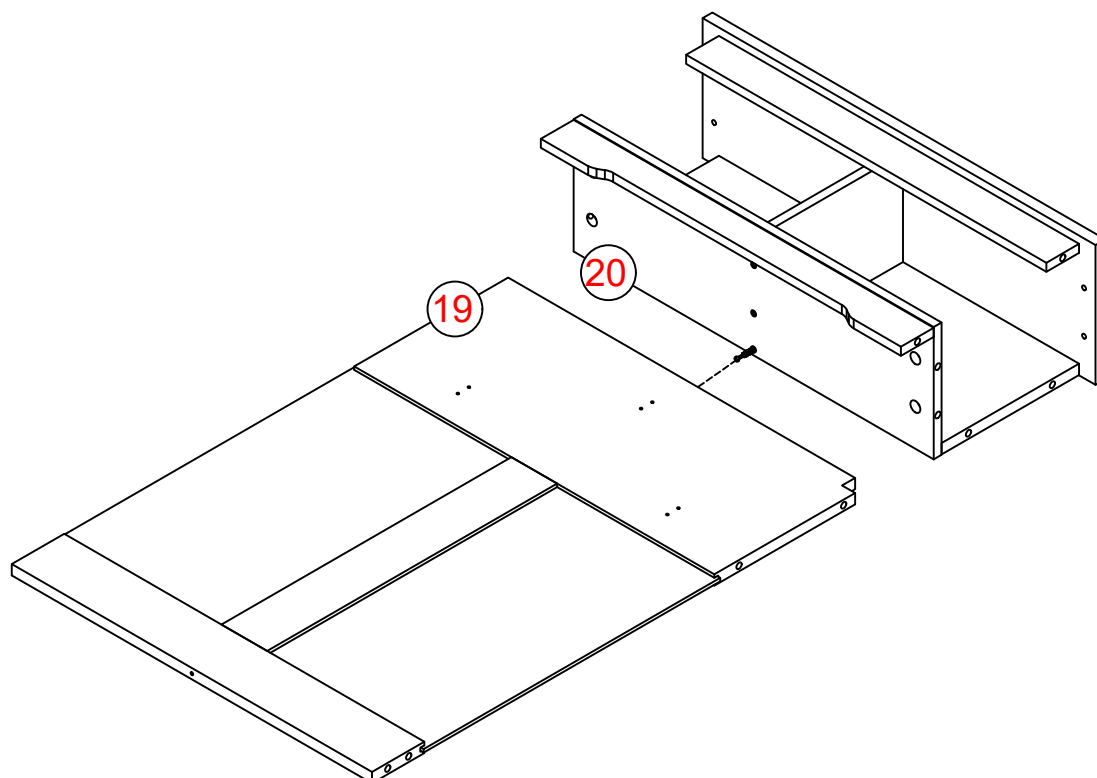


Step: 30

A



M5X35

20

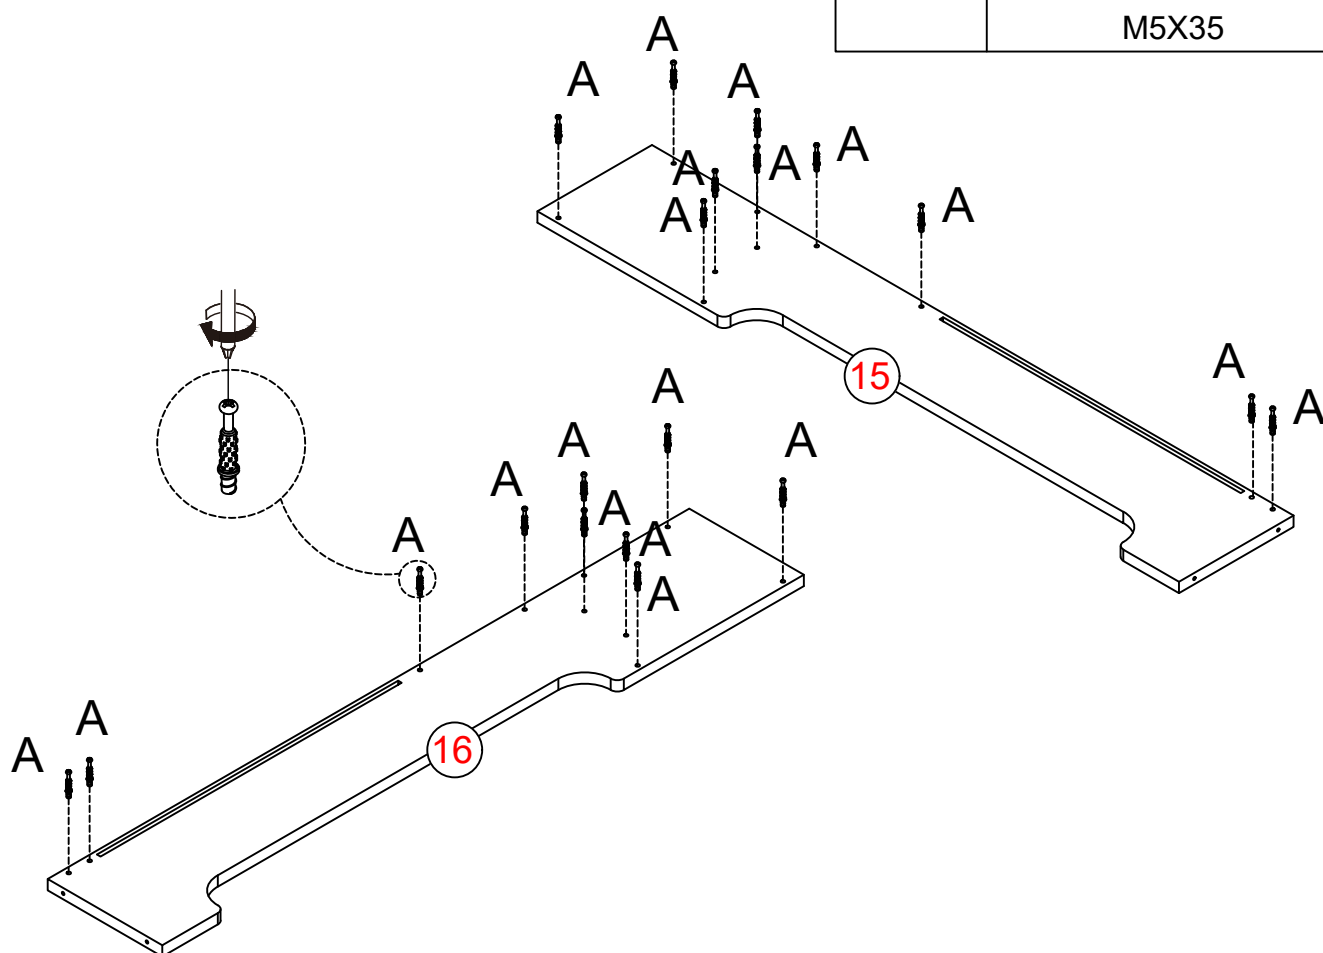


Step: 31

B



Ø15X10

4

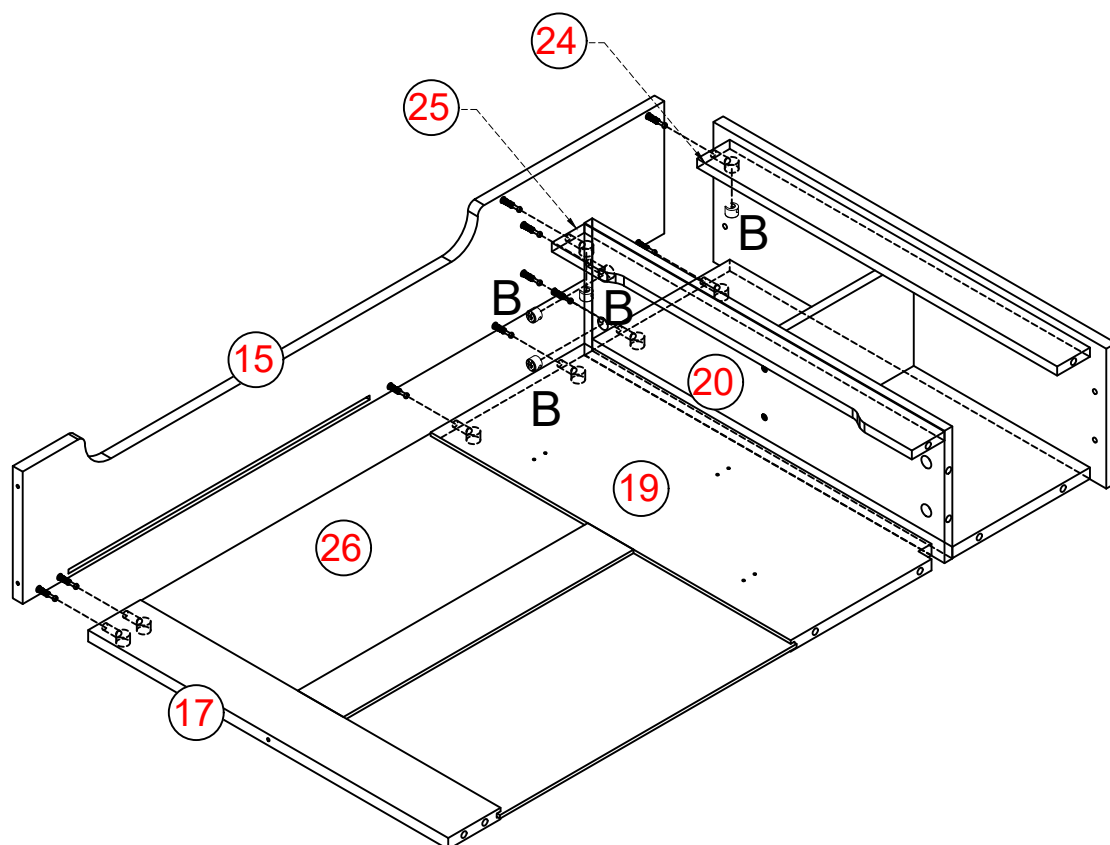


Step: 32

B




4

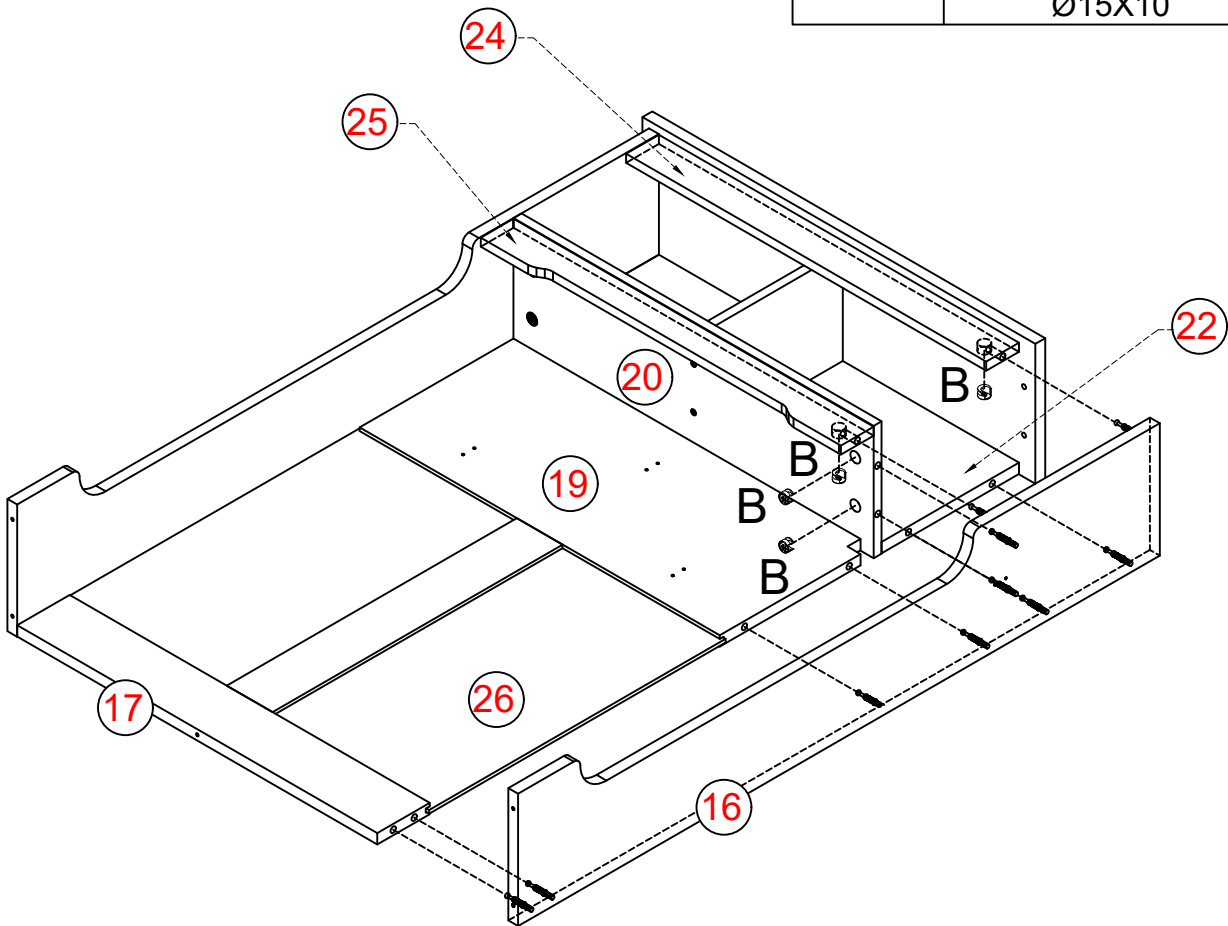


Step: 33

A




8

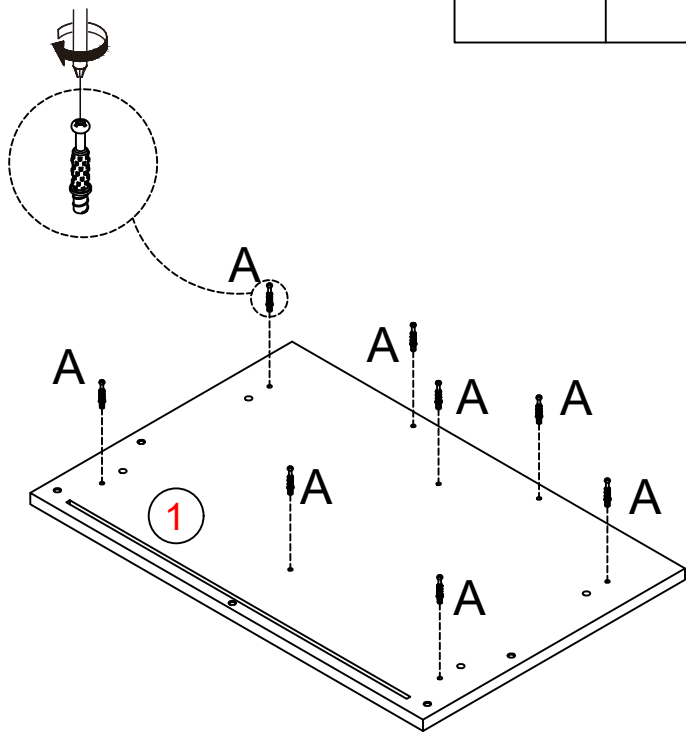


Step: 34

C




M5X40

5

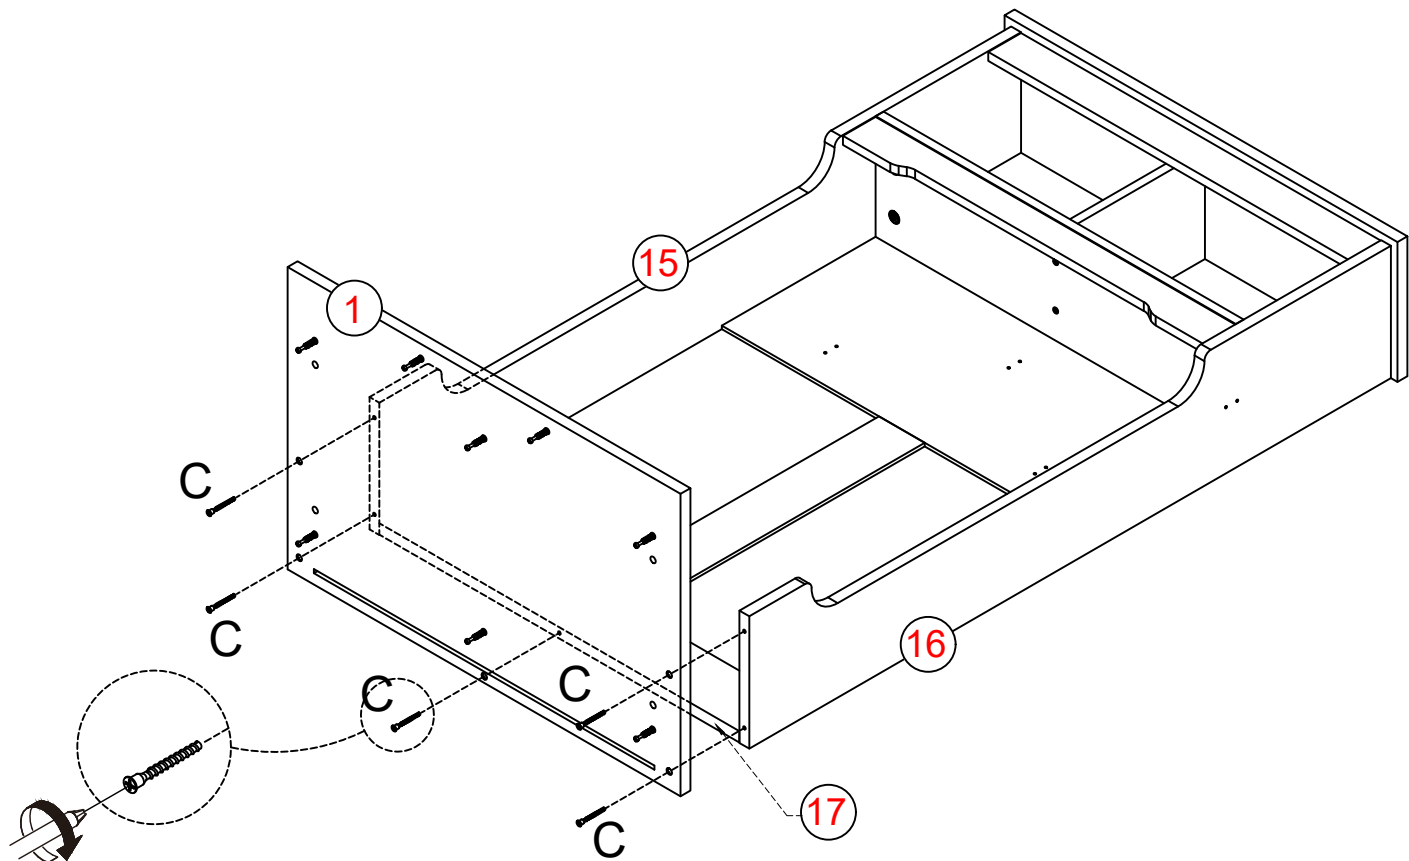


Step: 35

C



M5X40

4

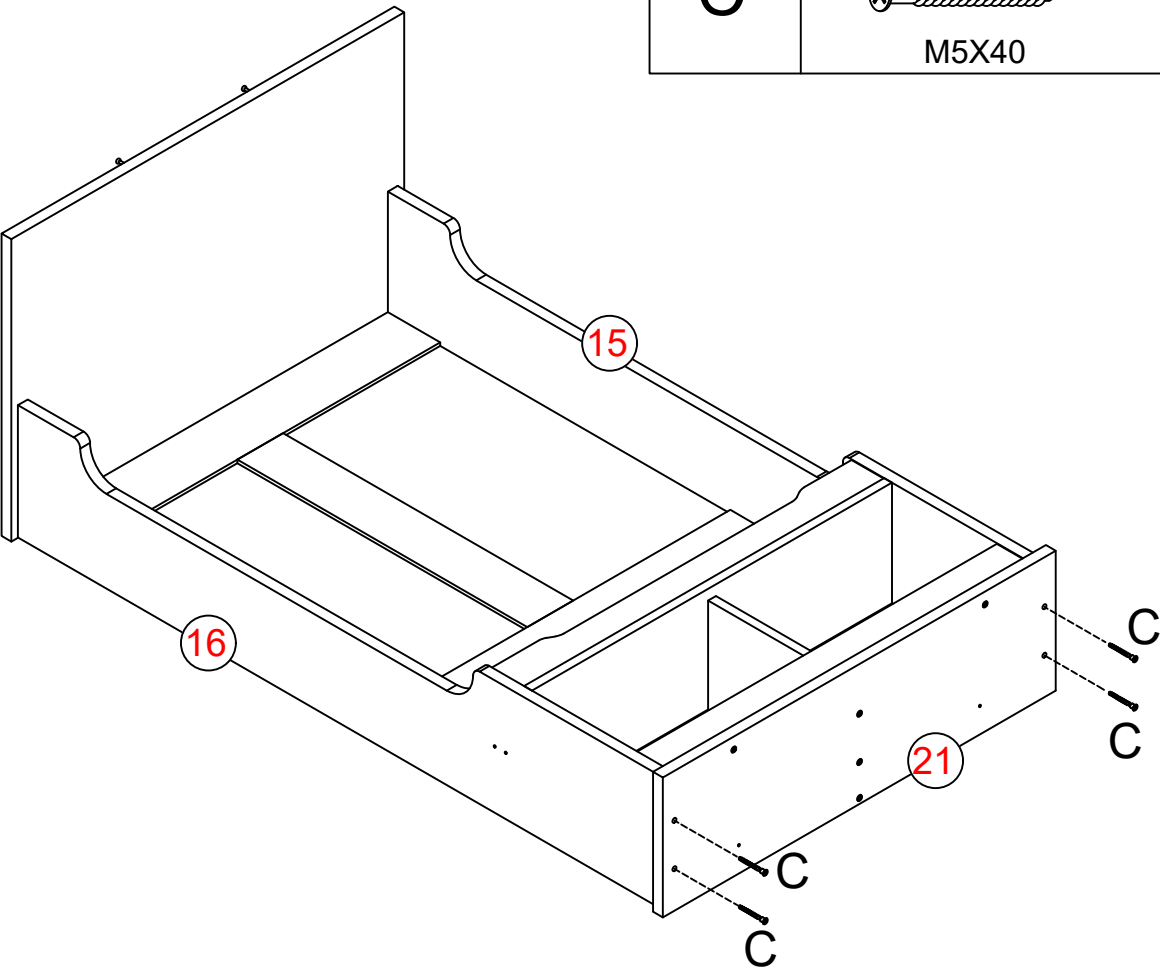


Step: 36

B



Ø15X10

13

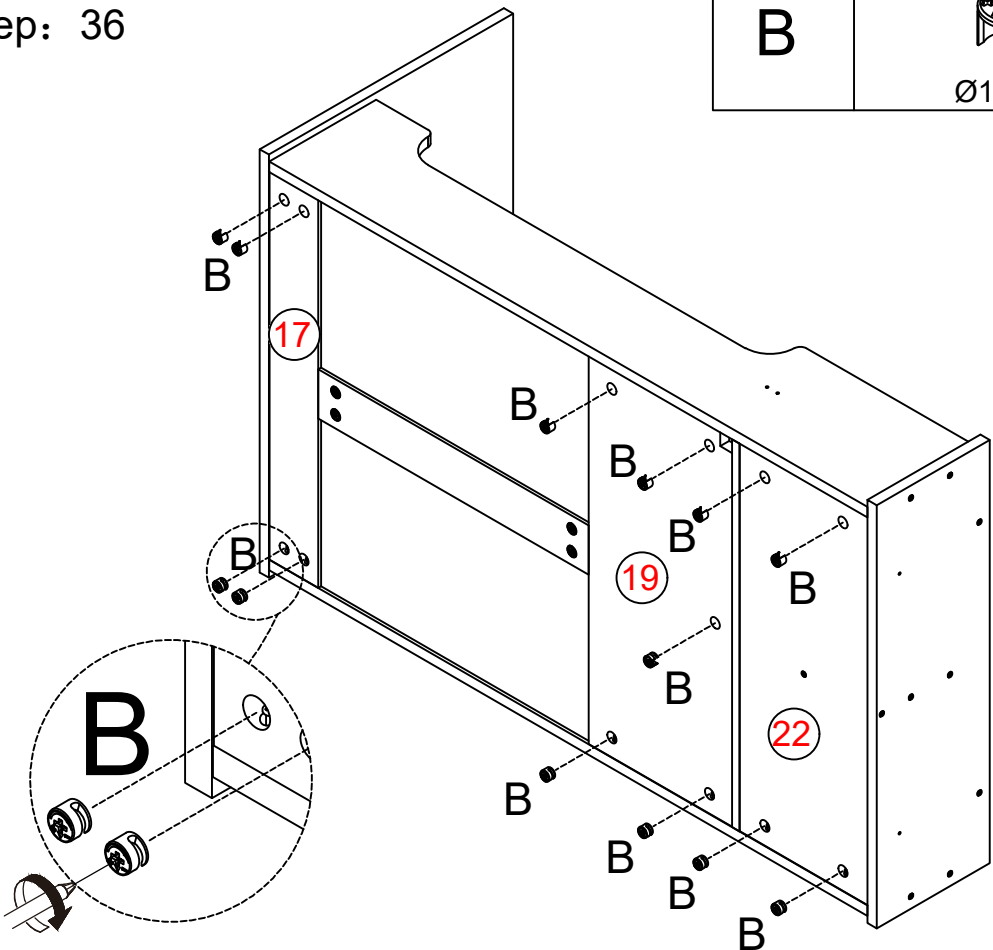

Step: 37

F




M3.5X16


10

J



5


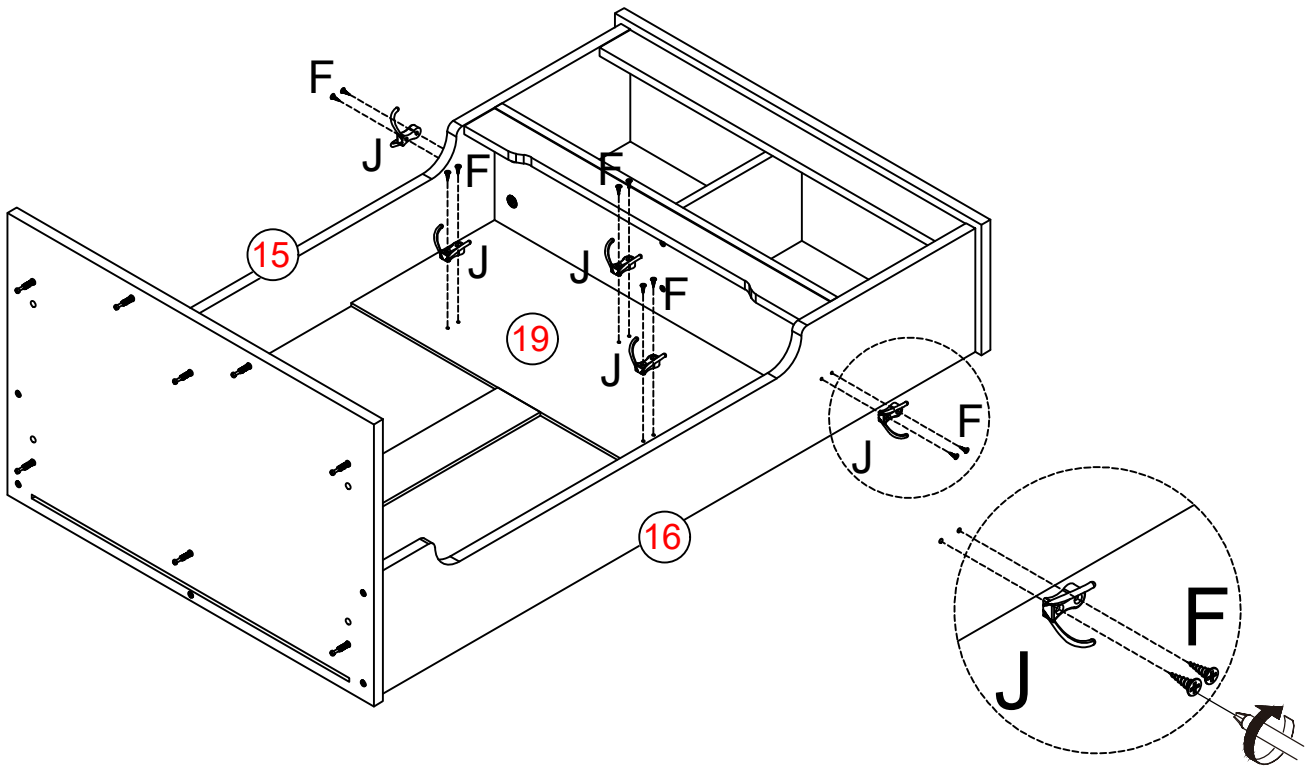


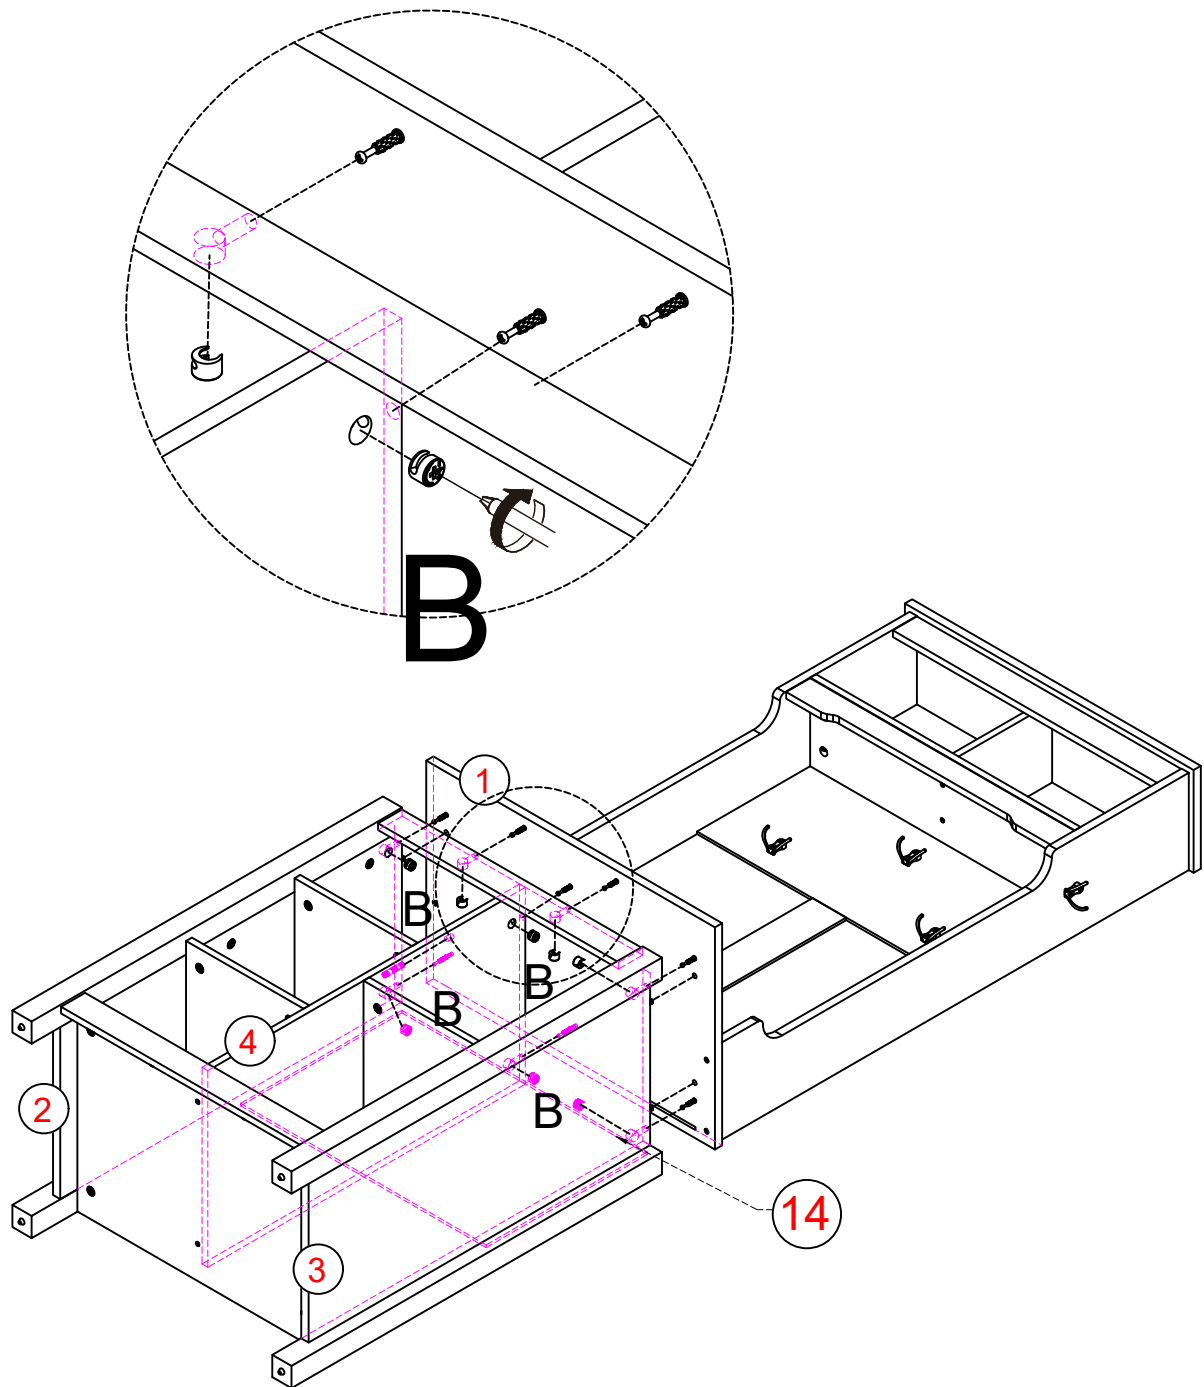



After the upper and lower parts of the cabinet are assembled, 2 people need to help them up




Step: 39

G	 M3.5X14	8
H		8

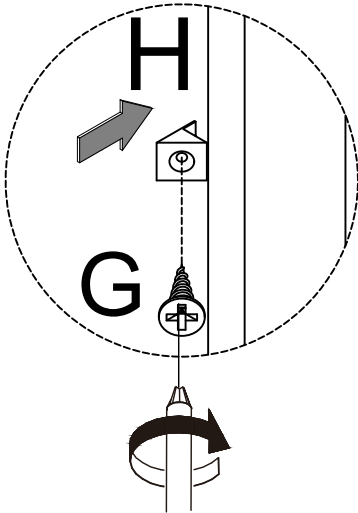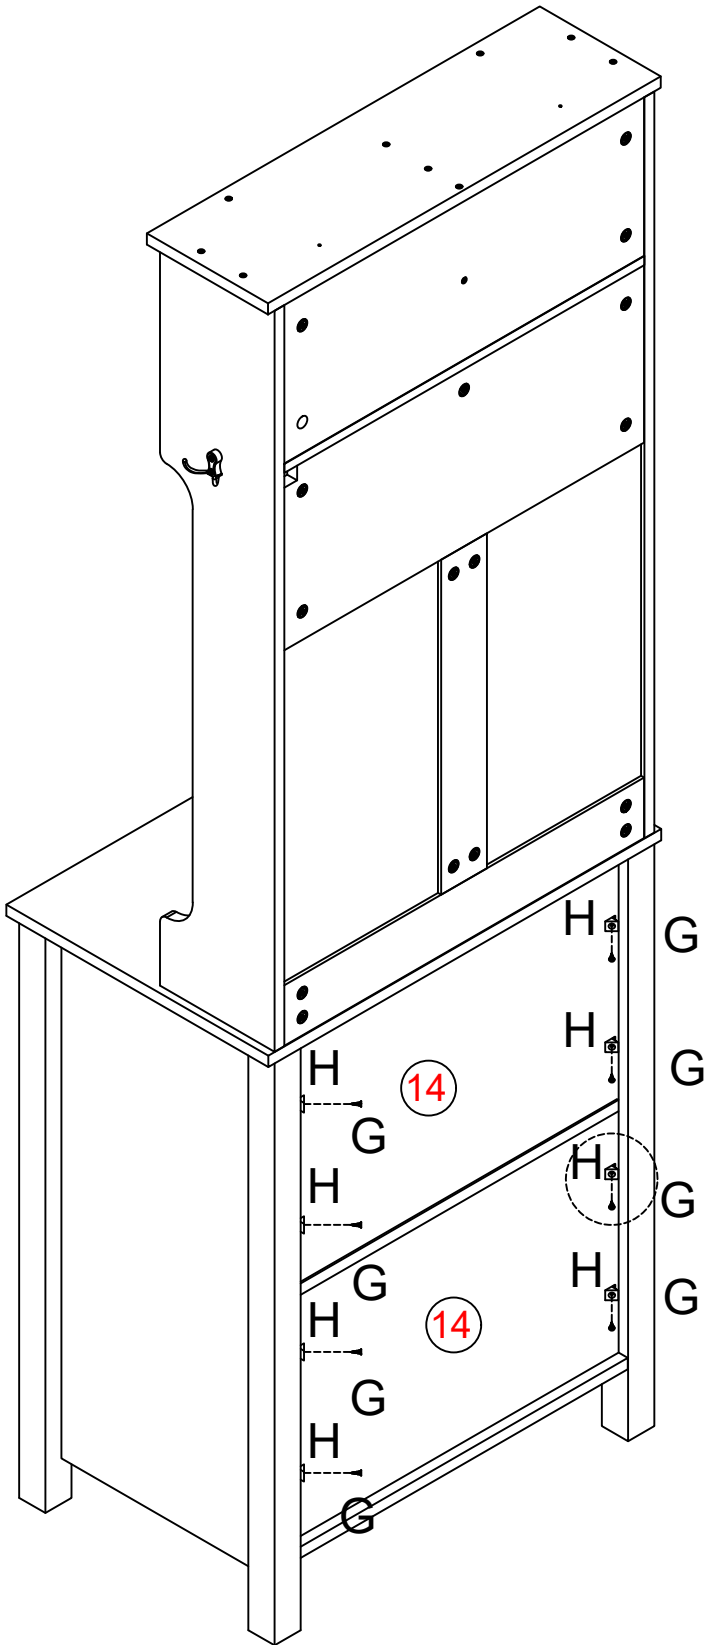

Step: 40

K		1
L		2

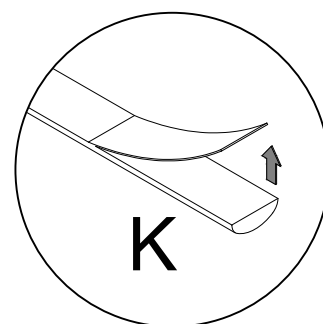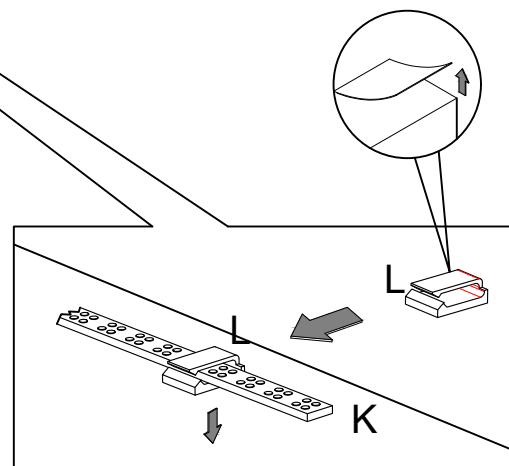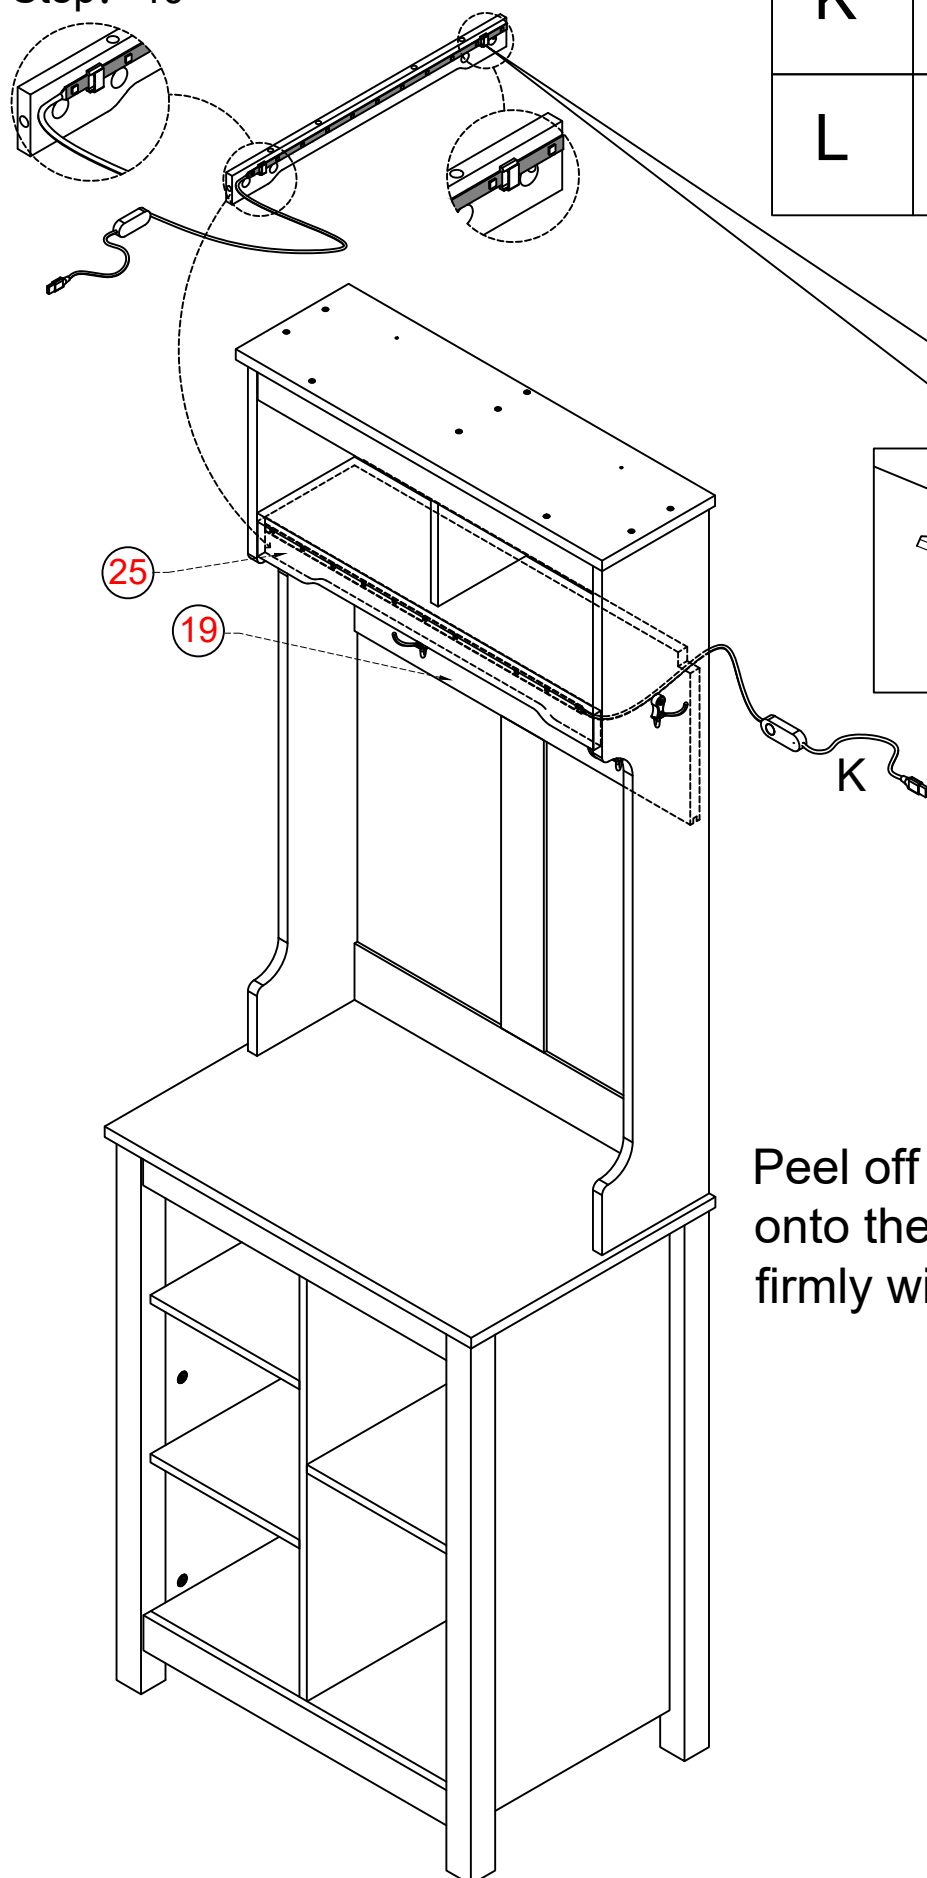

Peel off the tape and stick it onto the board, then press firmly with your hand

Step: 41

E	 M5X55	2
G	 M3.5X14	2

