
Please note: Items cannot be returned once assembled

HLG313


Version:1.0

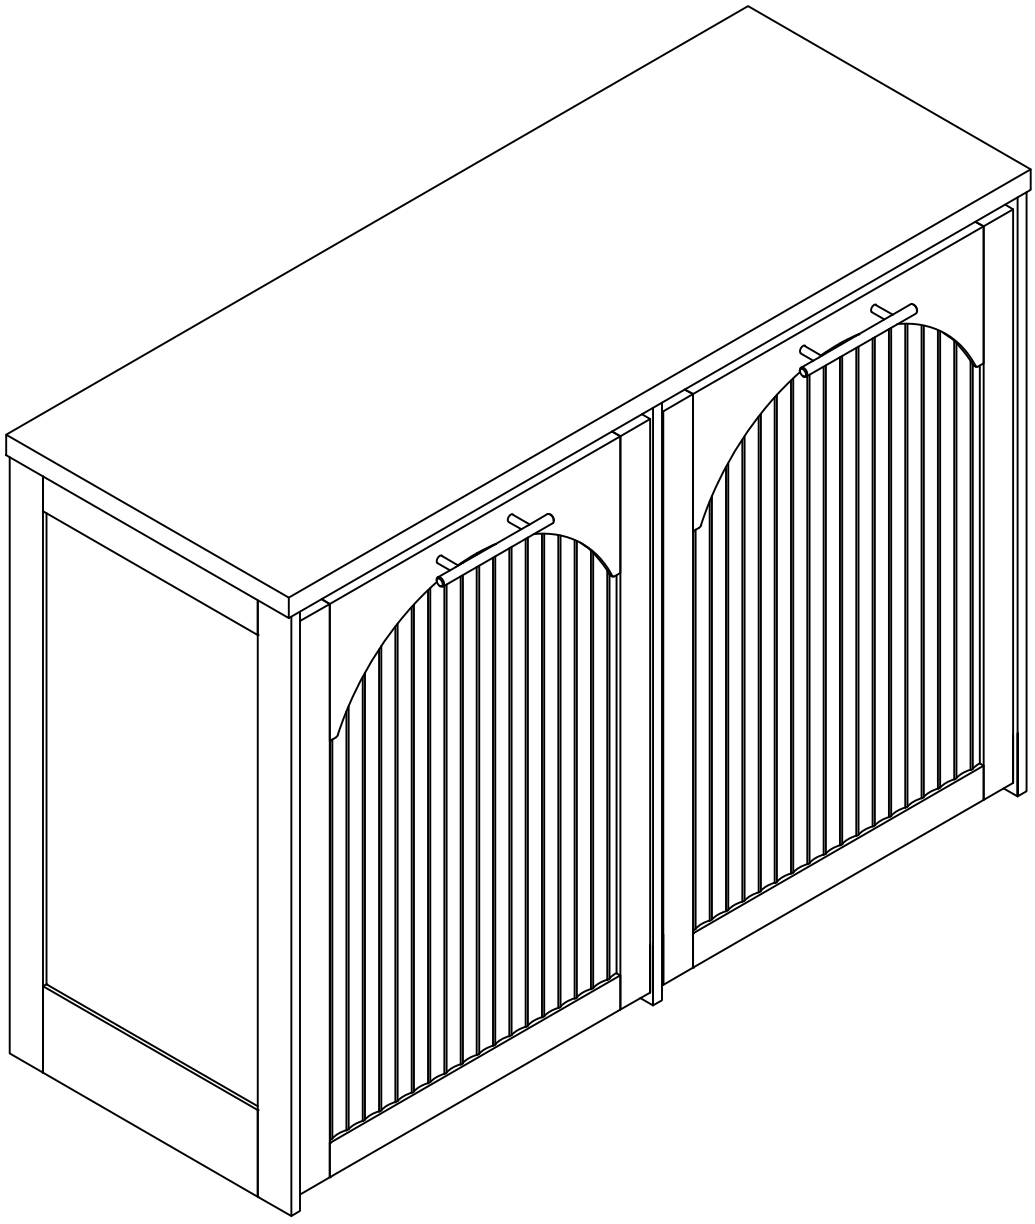


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.
If you have any questions about the product and installation, please contact us.


Email:support@anymaple.com

Our professional after-sales team will serve you online all day.

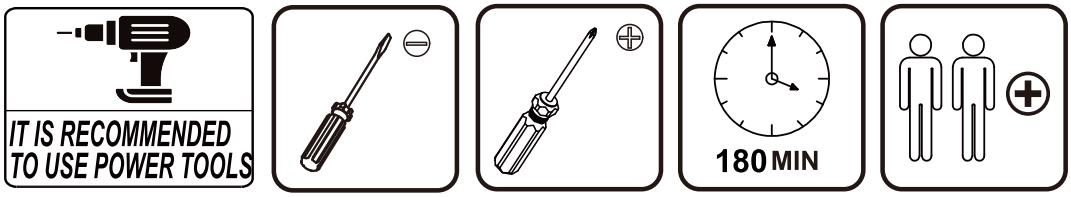


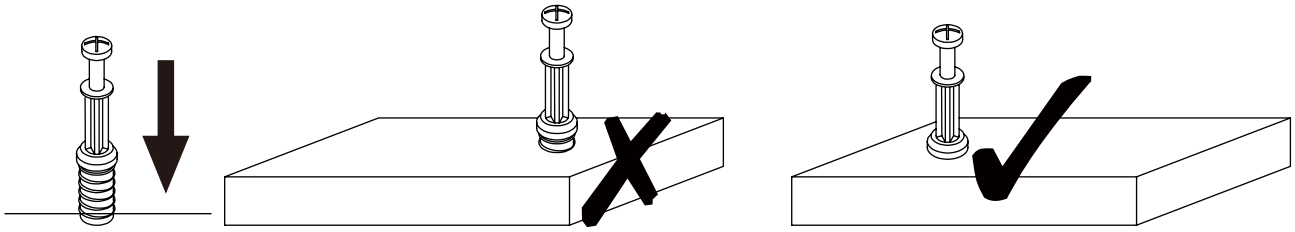


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

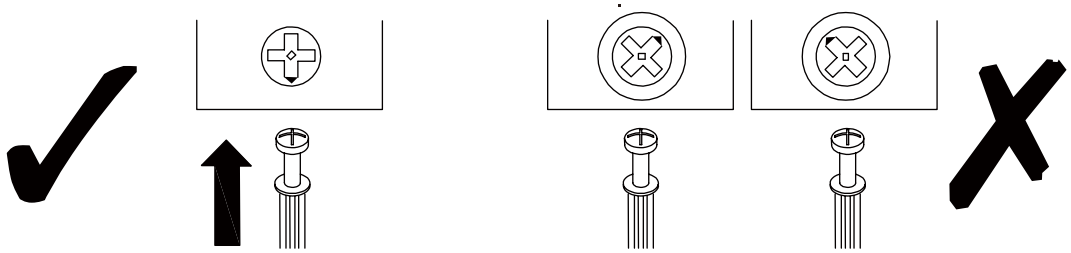











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




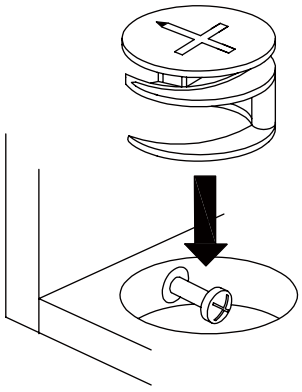



EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

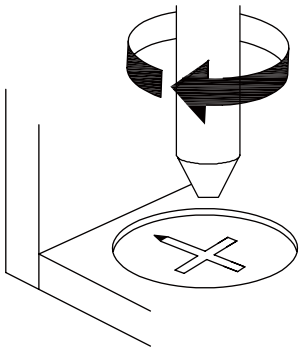

EN_ Turn cam lock clockwise to tighten.

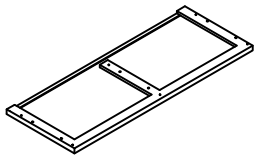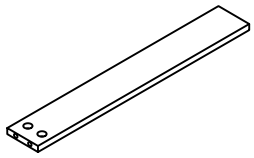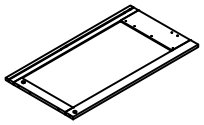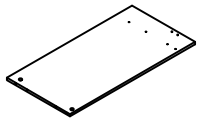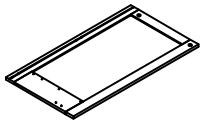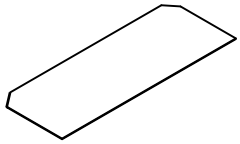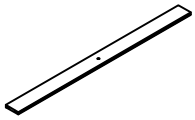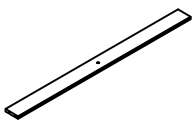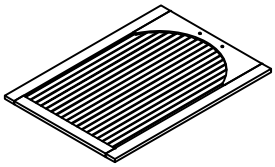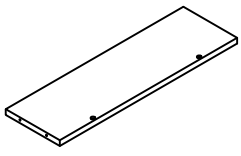NO.	PARTS	QTY	SPARE
①		x1	
③		x2	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x2	
⑪		x2	

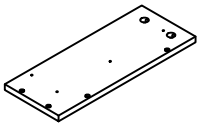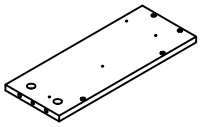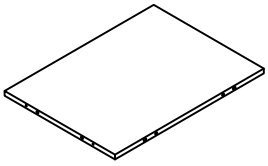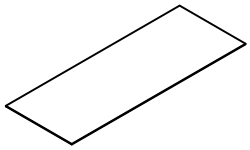
NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x1	
	 Hardware Kit		

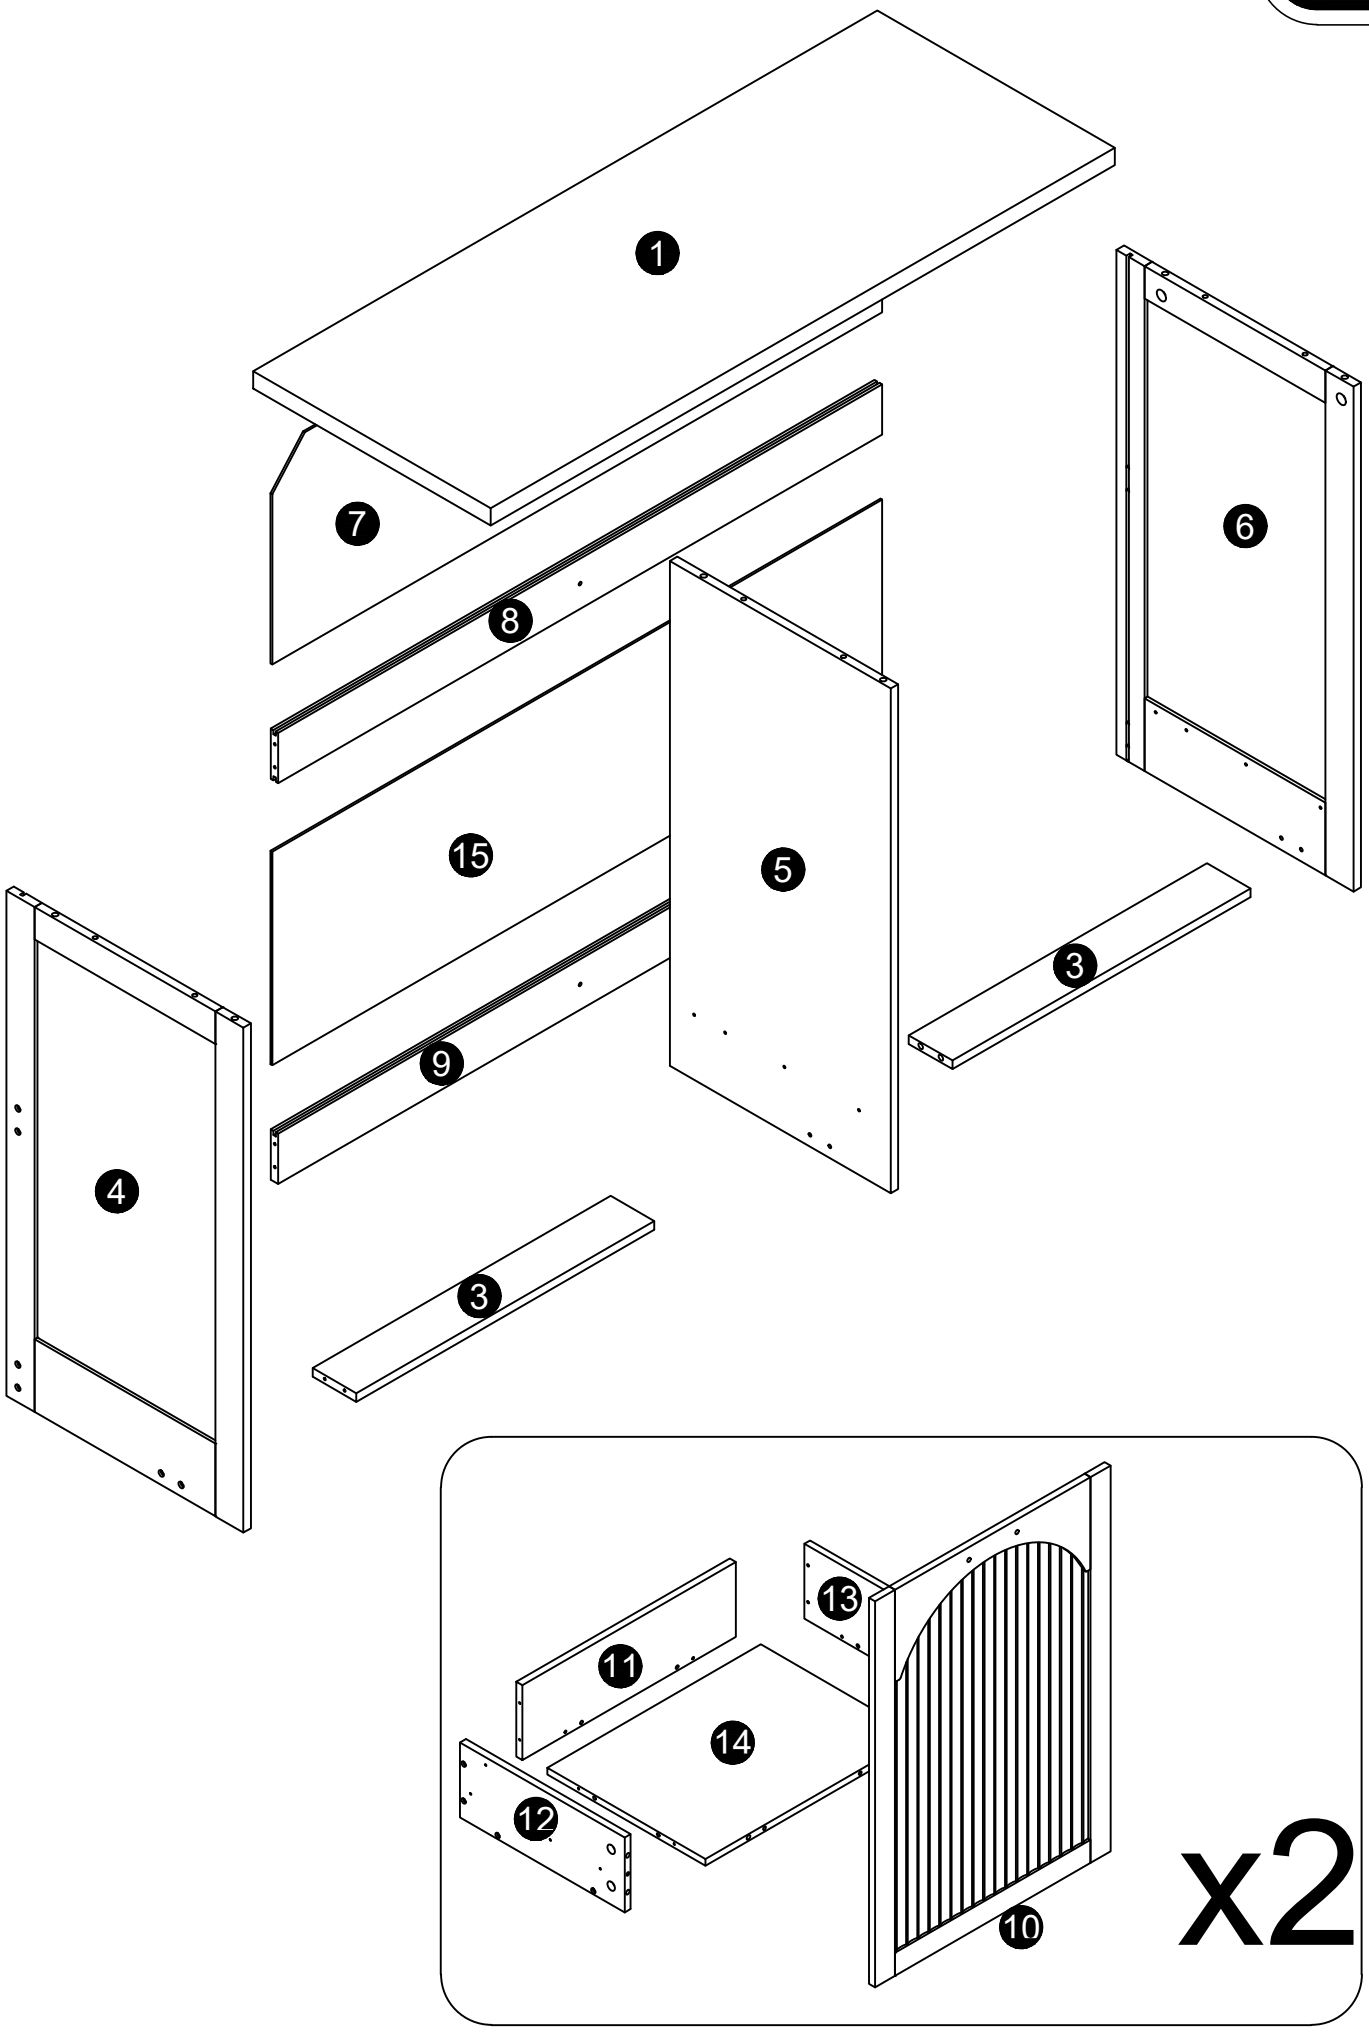
1
7
8
6
15
5
3
9
4
3
13
11
14
12
10
x2


HARDWARE


A x22 Ø6x35mm +2(spare)	B x22 Ø15x10mm +2(spare)	C x26 Ø6x30mm +2(spare)	D x34 Ø4x35mm +3(spare)	E x52 Ø3.5x12mm +3(spare)	F x2 F-1 F-2
G x4 L330mm	H x4	I x4	J x12 +1(spare)	K x18 +4(spare)	L x8 Ø3x16mm +1(spare) L-1 L-2
M x2 Ø4x14mm M-1 M-2	N x2 Ø6x30mm	O x4			


G x4




01

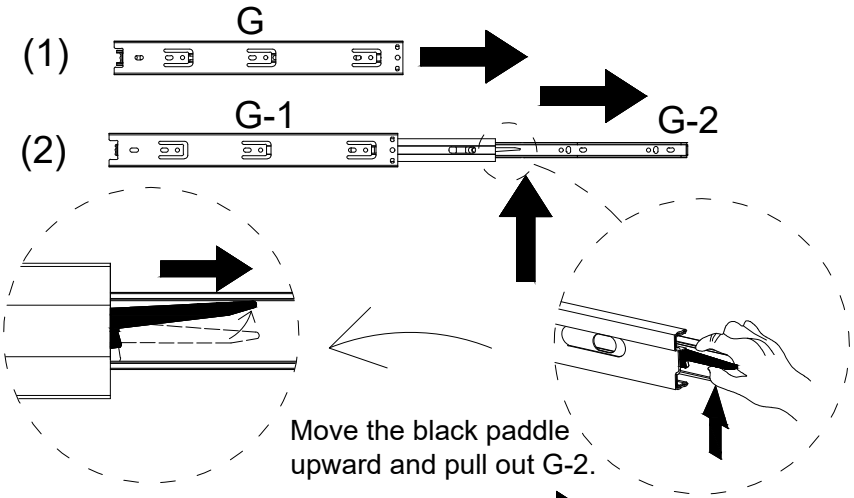


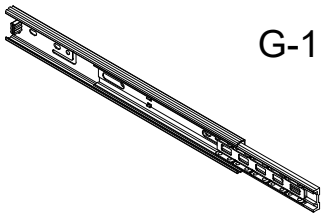


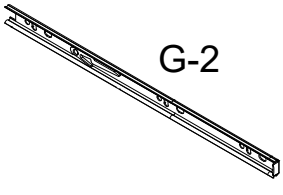


x4

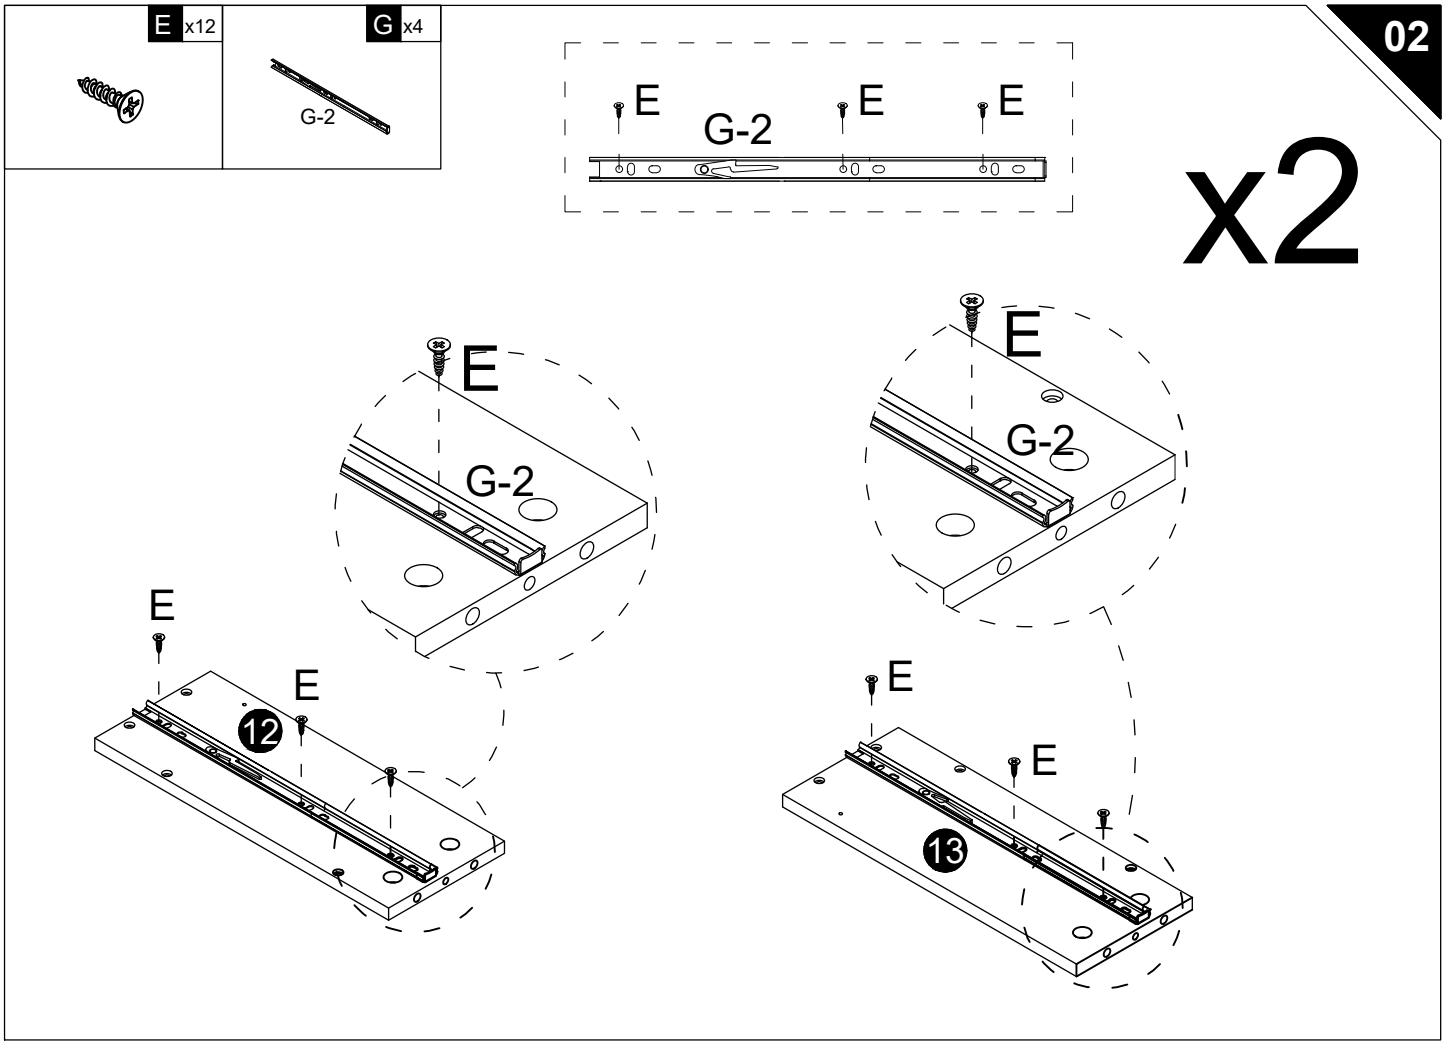
E x12
G x4
G-2
02
E
G-2
E
E
x2
E
G-2
E
E
12
E
G-2
E
E
13

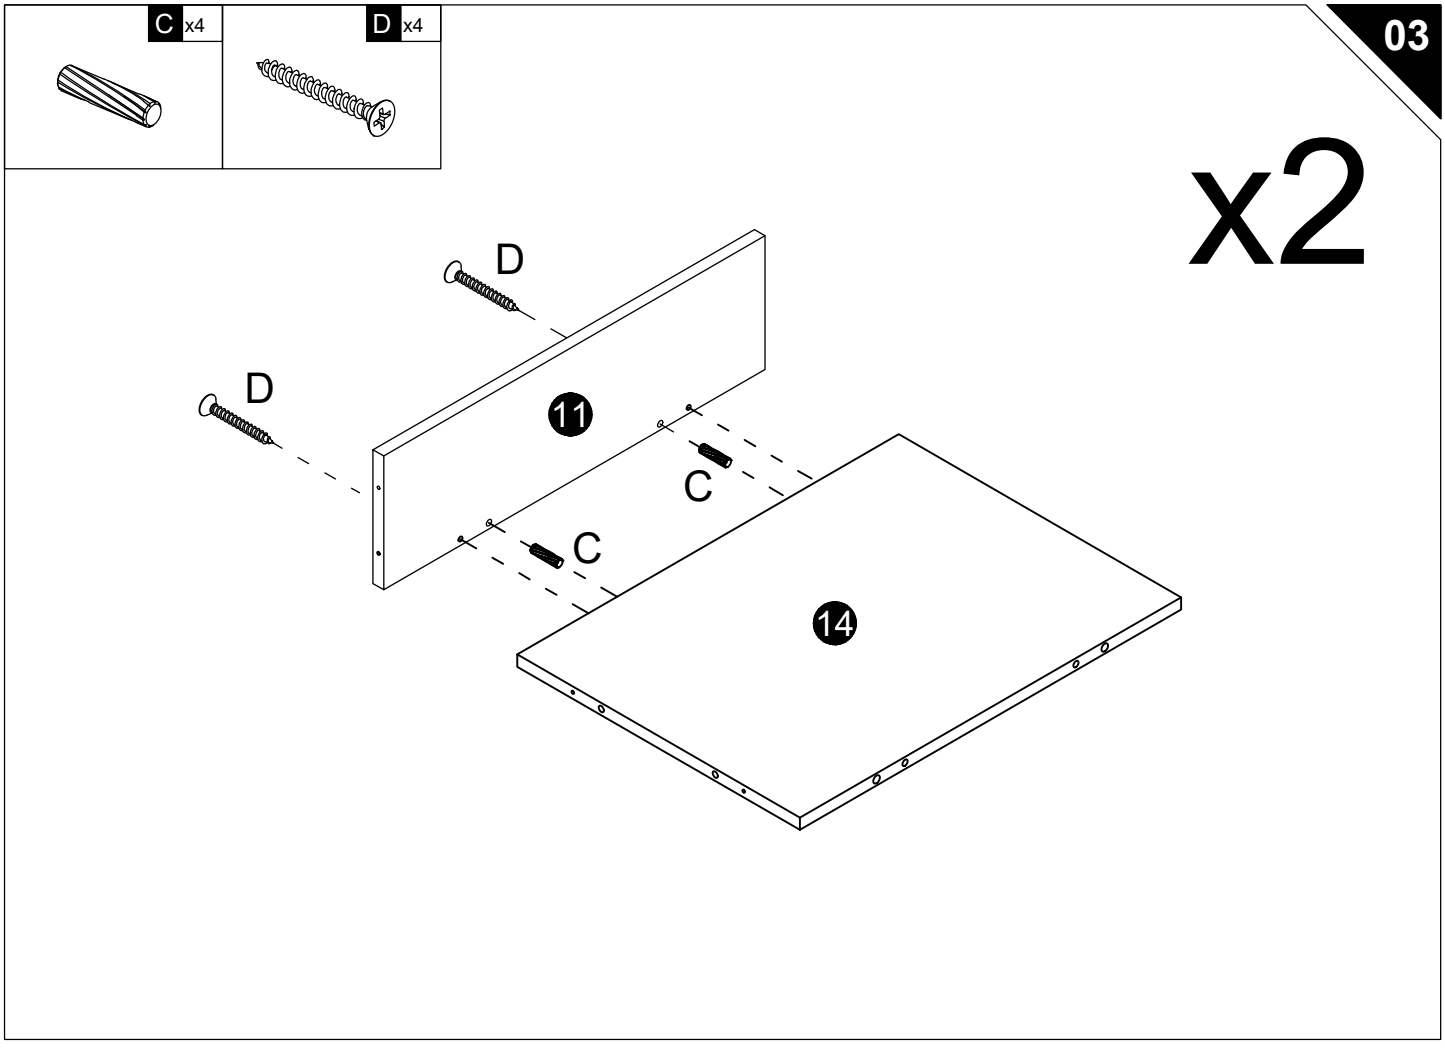

C x4
D x4
03
x2
D
D
11
C
C
14

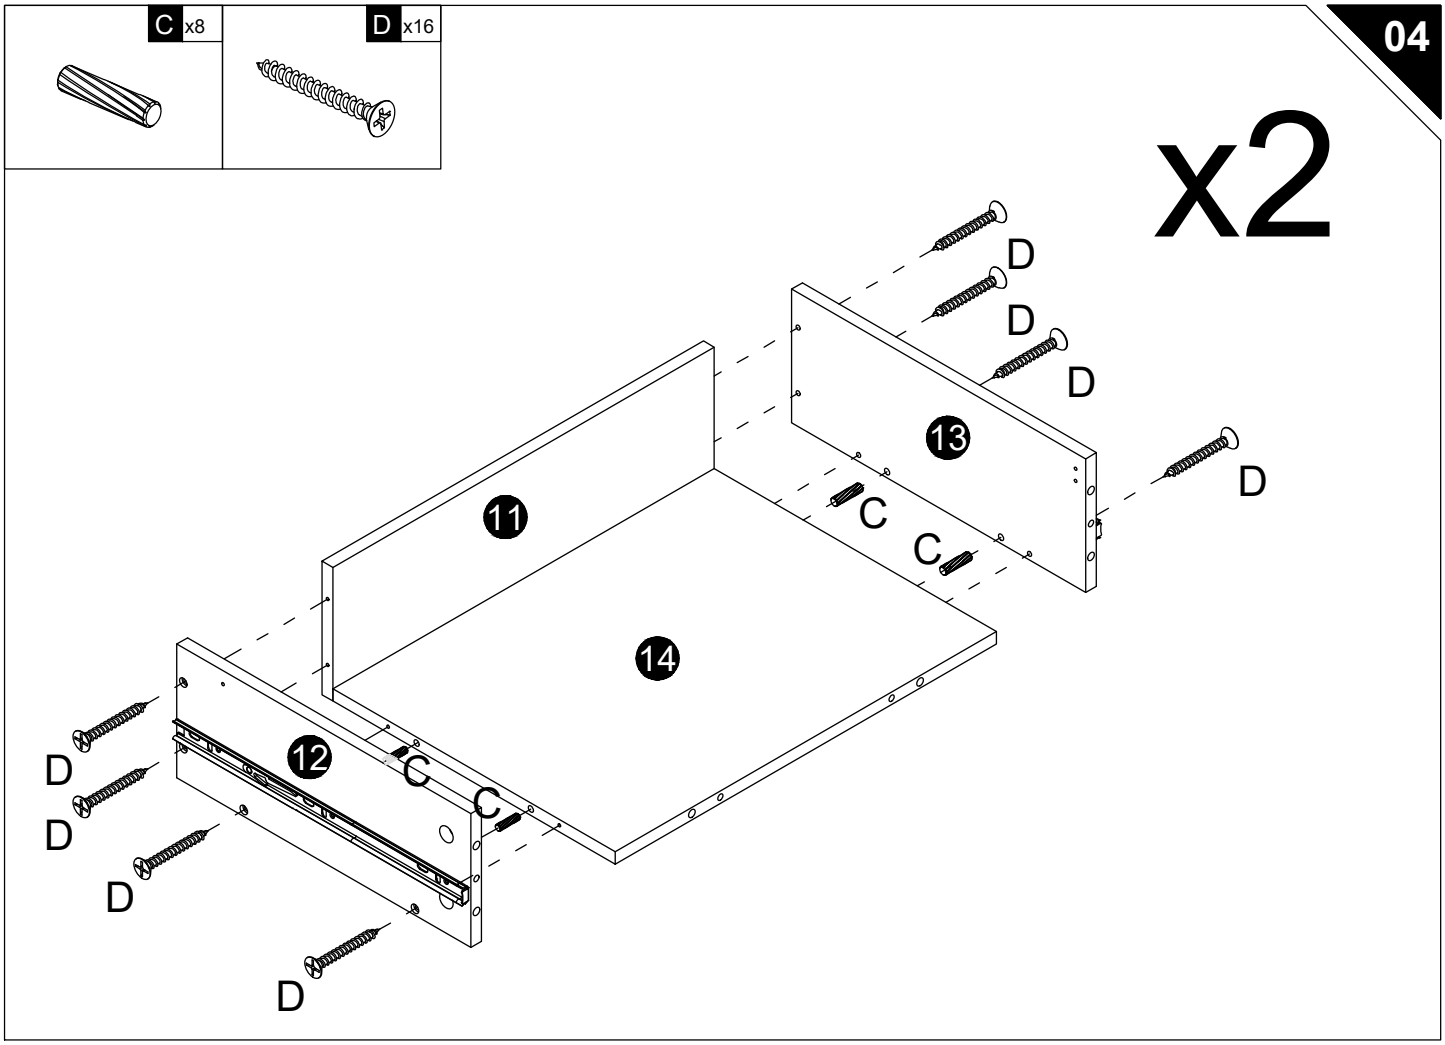
C x8
D x16
04
x2
D
D
D
D
13
11
C
C
14
D
12
C
C
D
D
D
D

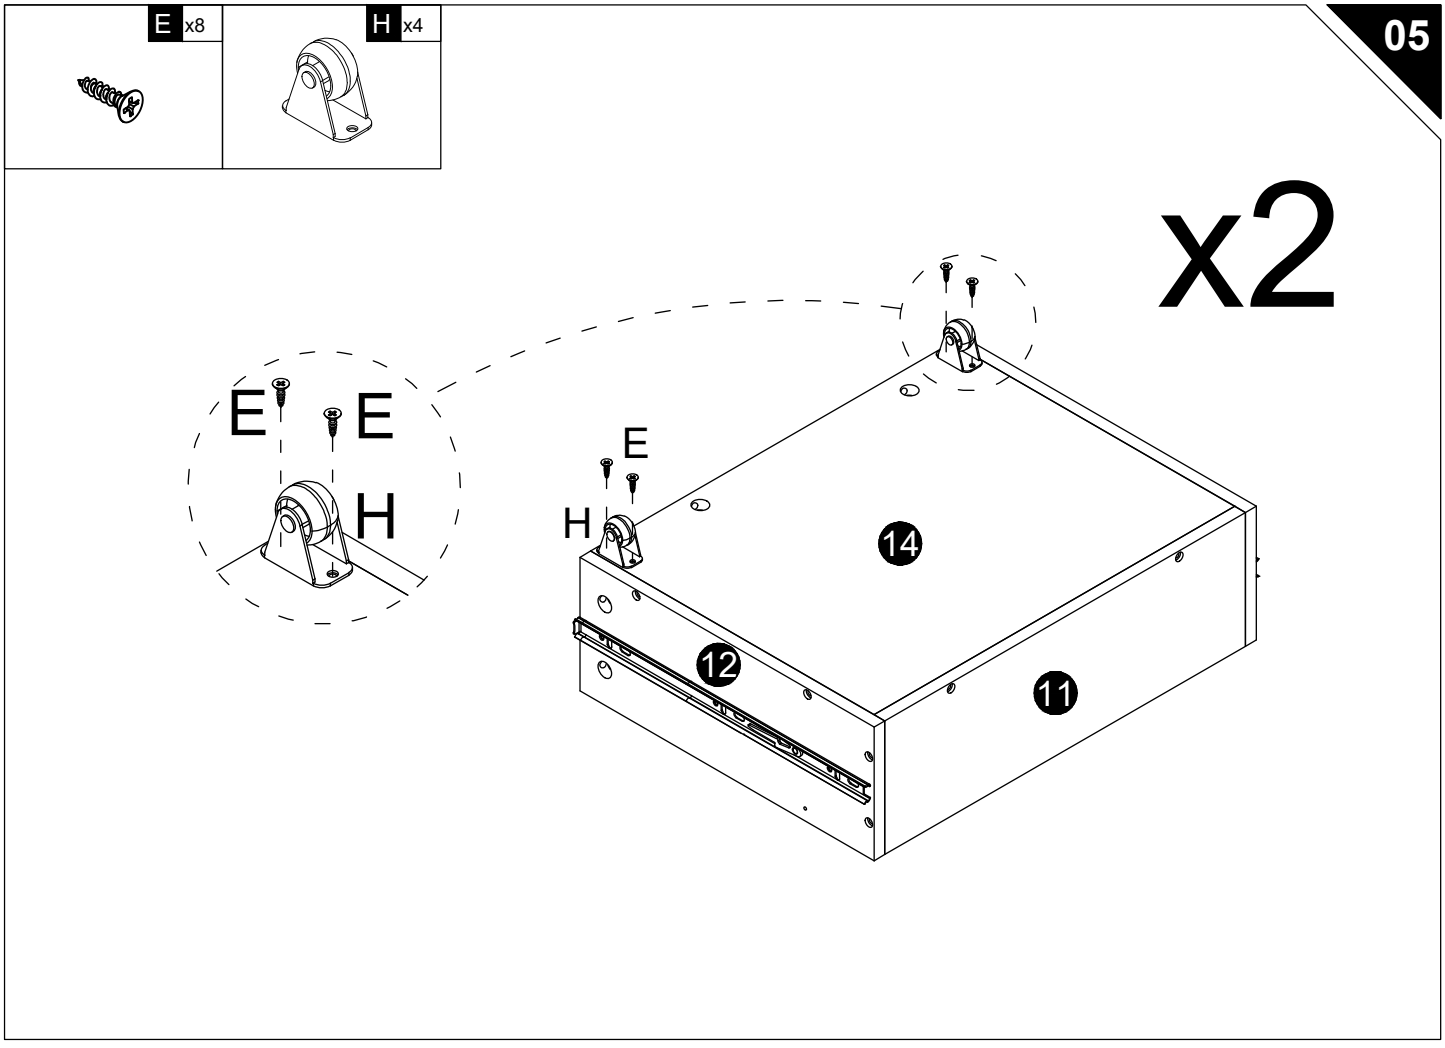

E x8
H x4
05
x2
E
E
H
E
H
14
12
11

06

A x12



x2

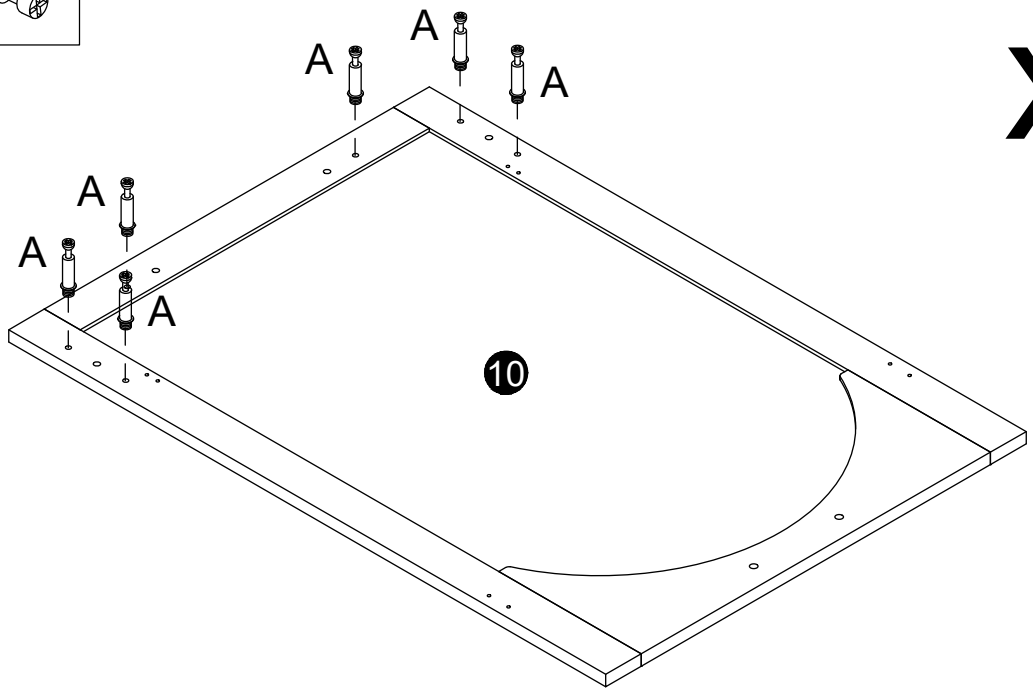


07


B x12



C x8





x2

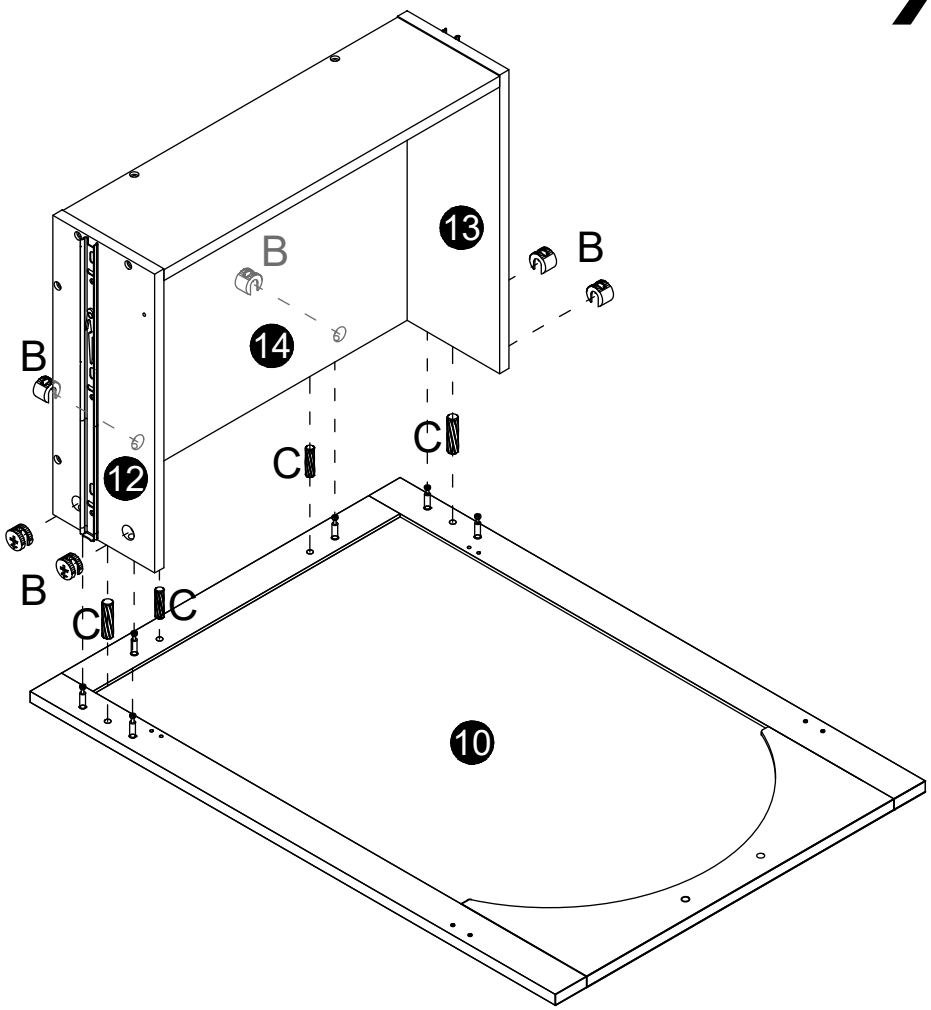



F x2	I x4	J x12	E x16	O x4
F-1 F-2				


x2

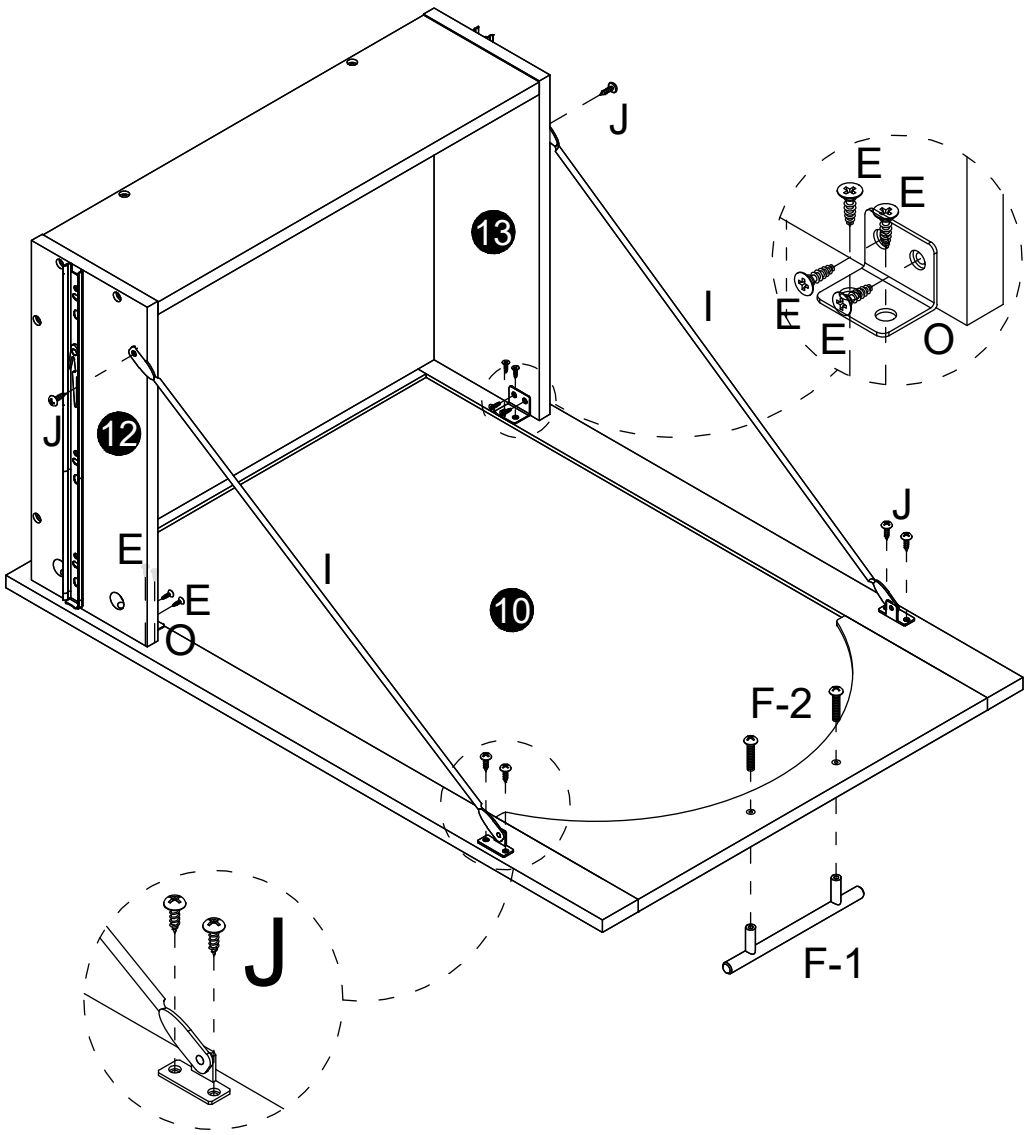


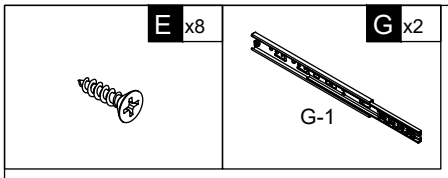
E x8
G x2
G-1

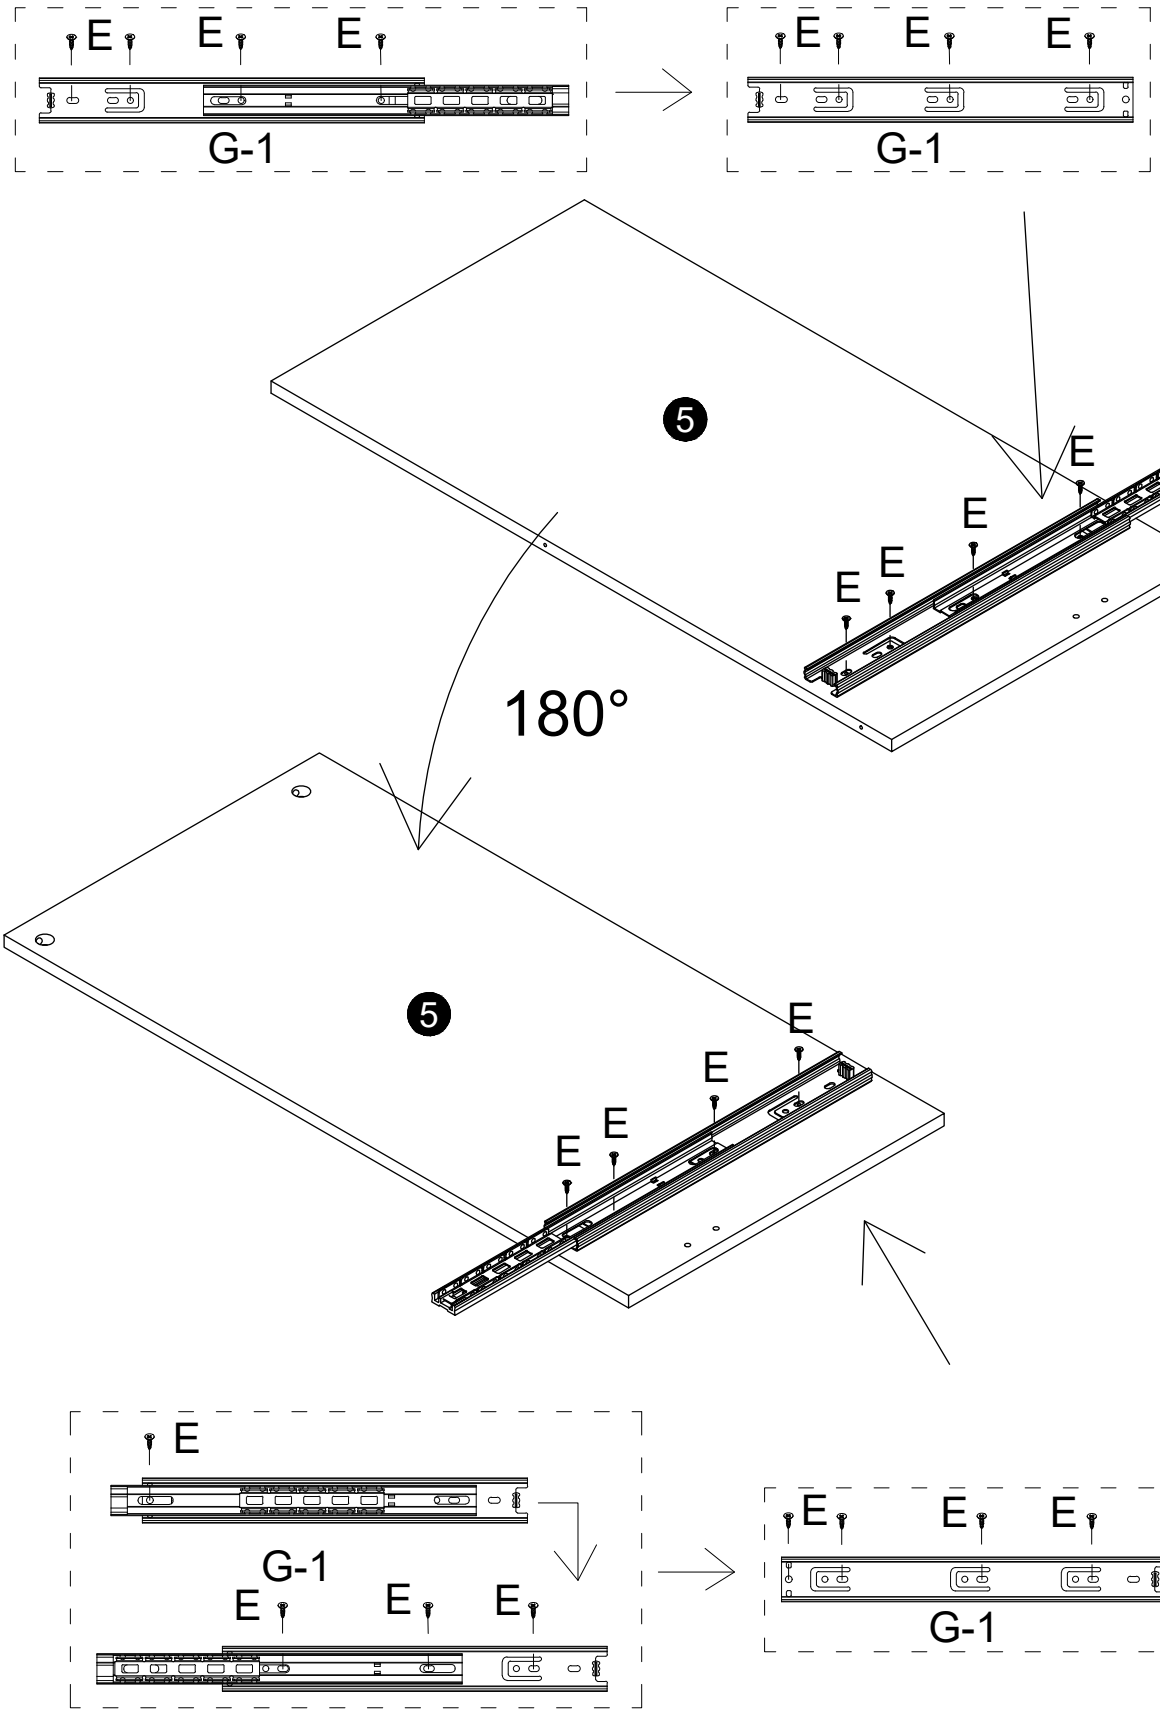
E
E
E
G-1
E
E
E
G-1
5
E
E
E
E
180°
5
E
E
E
E
E
G-1
E
E
E
G-1

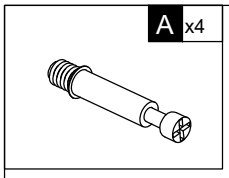

A x4

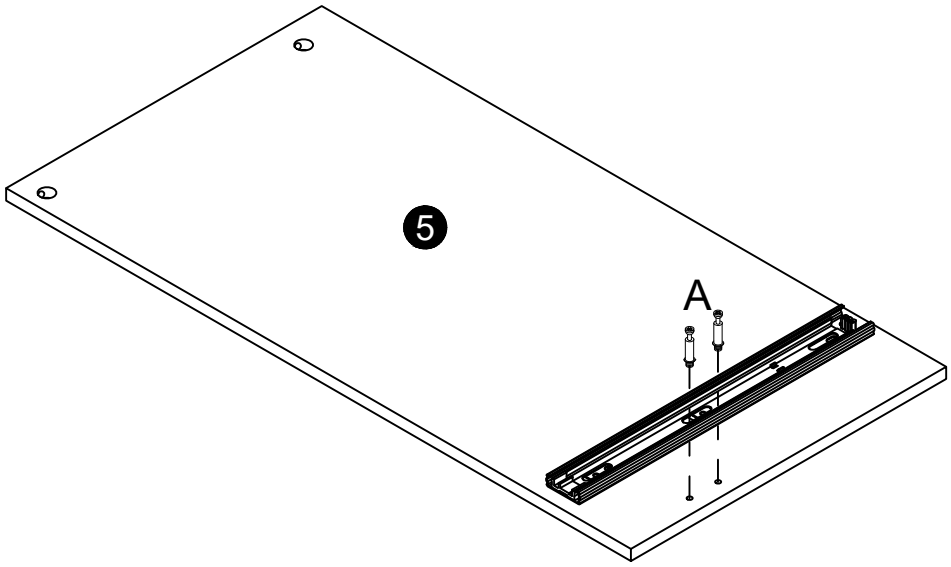
5
A

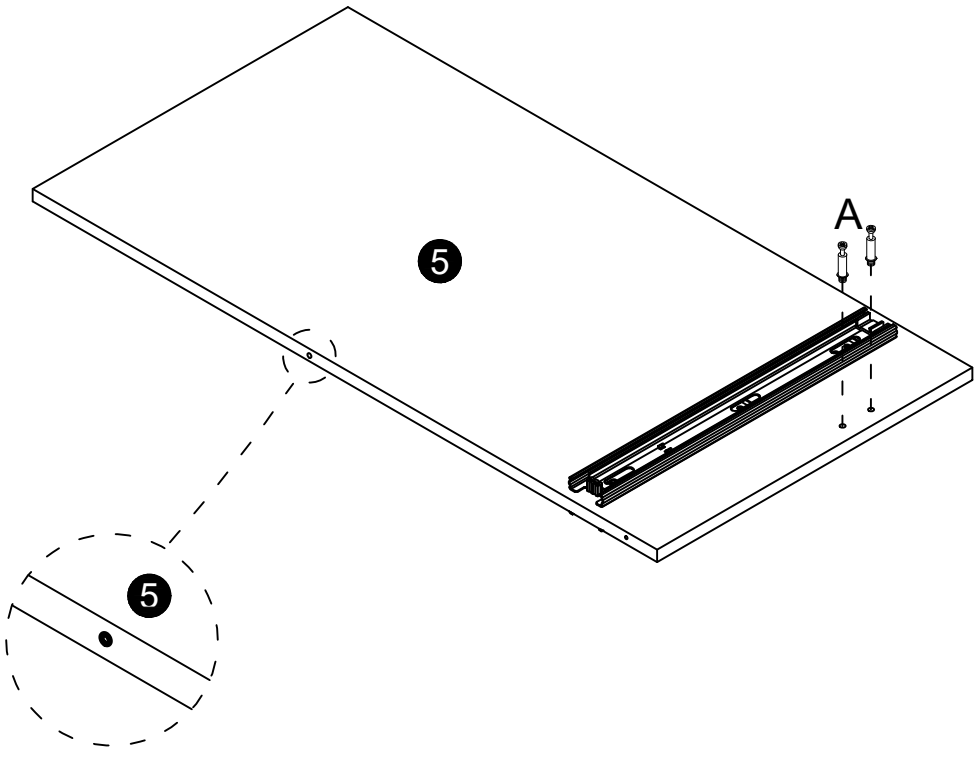
5
A
5

11

B x4

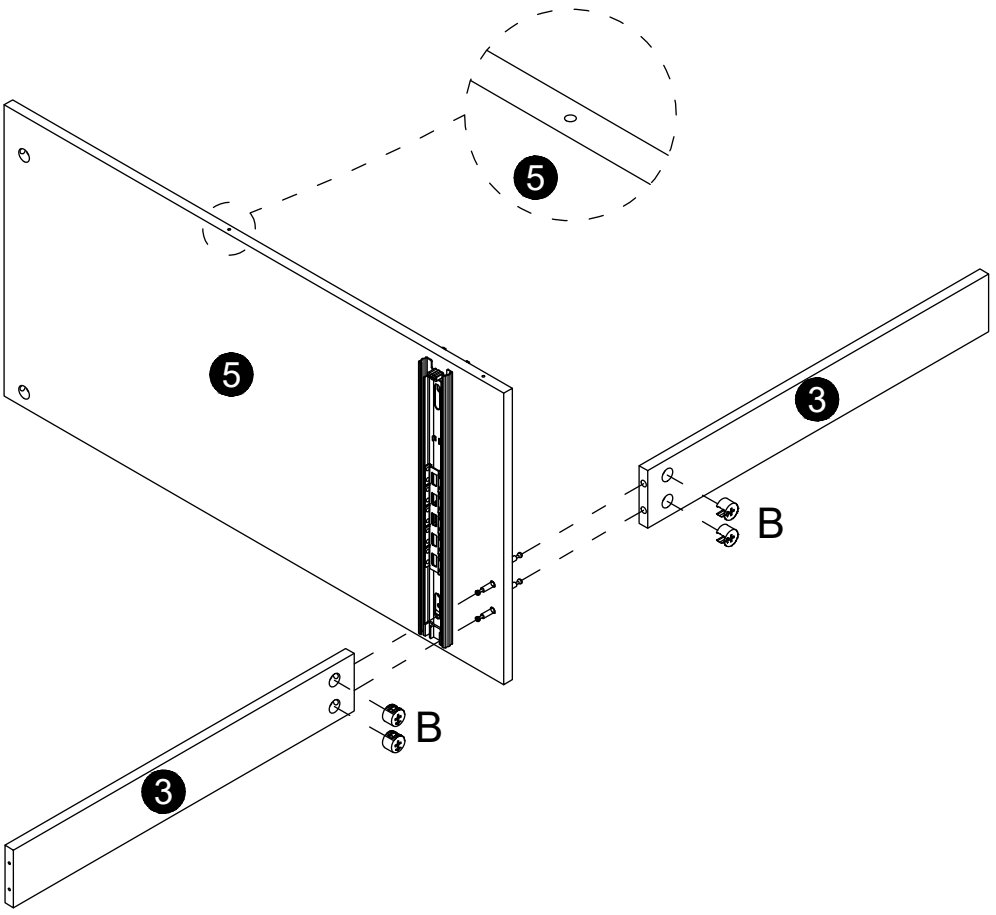


12


E x4


G x1




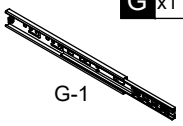


Pay attention to the installation position of the holes.

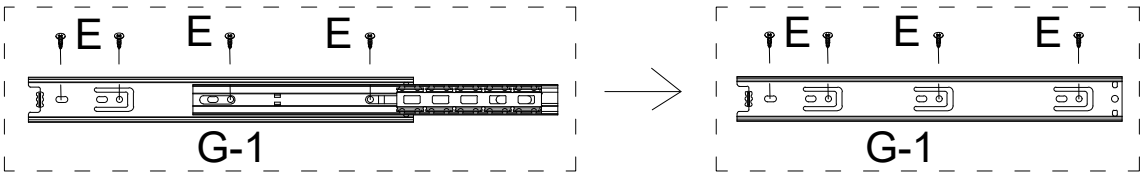


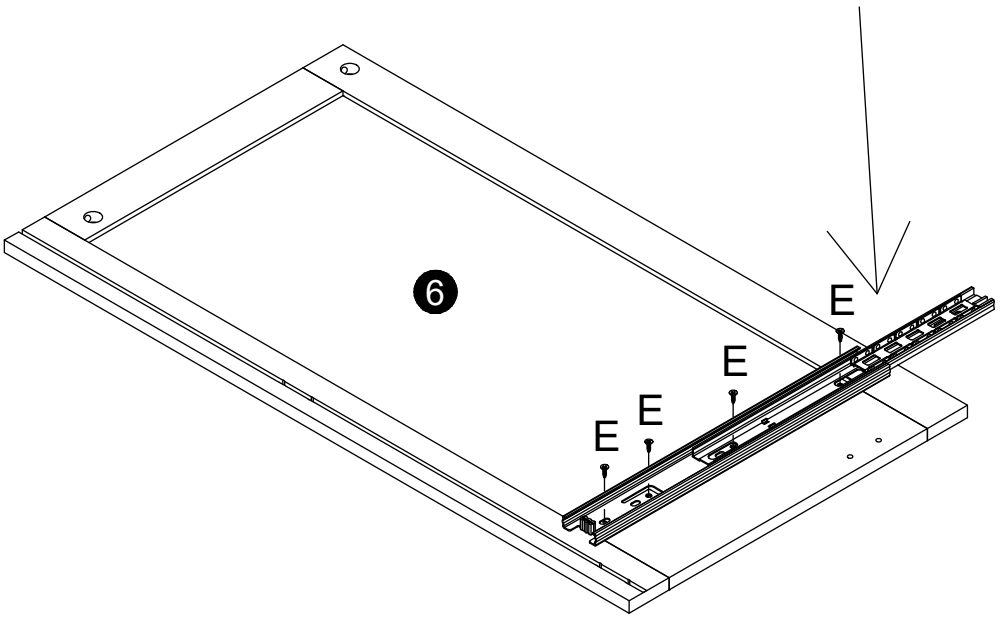

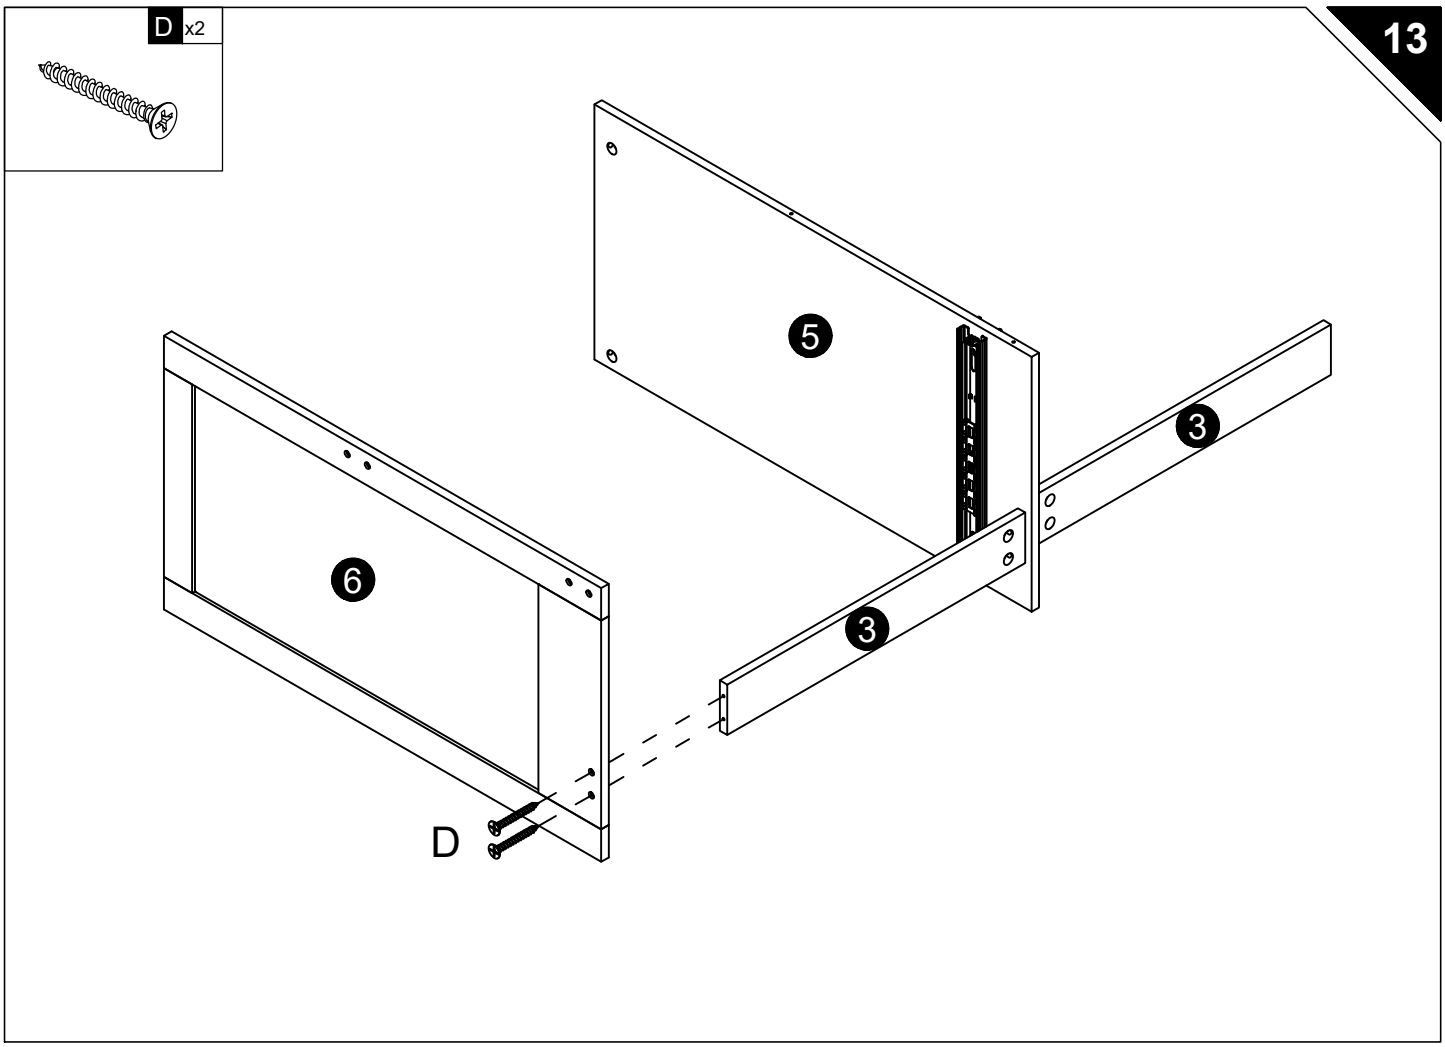

D x2
13
5
3
6
3
D

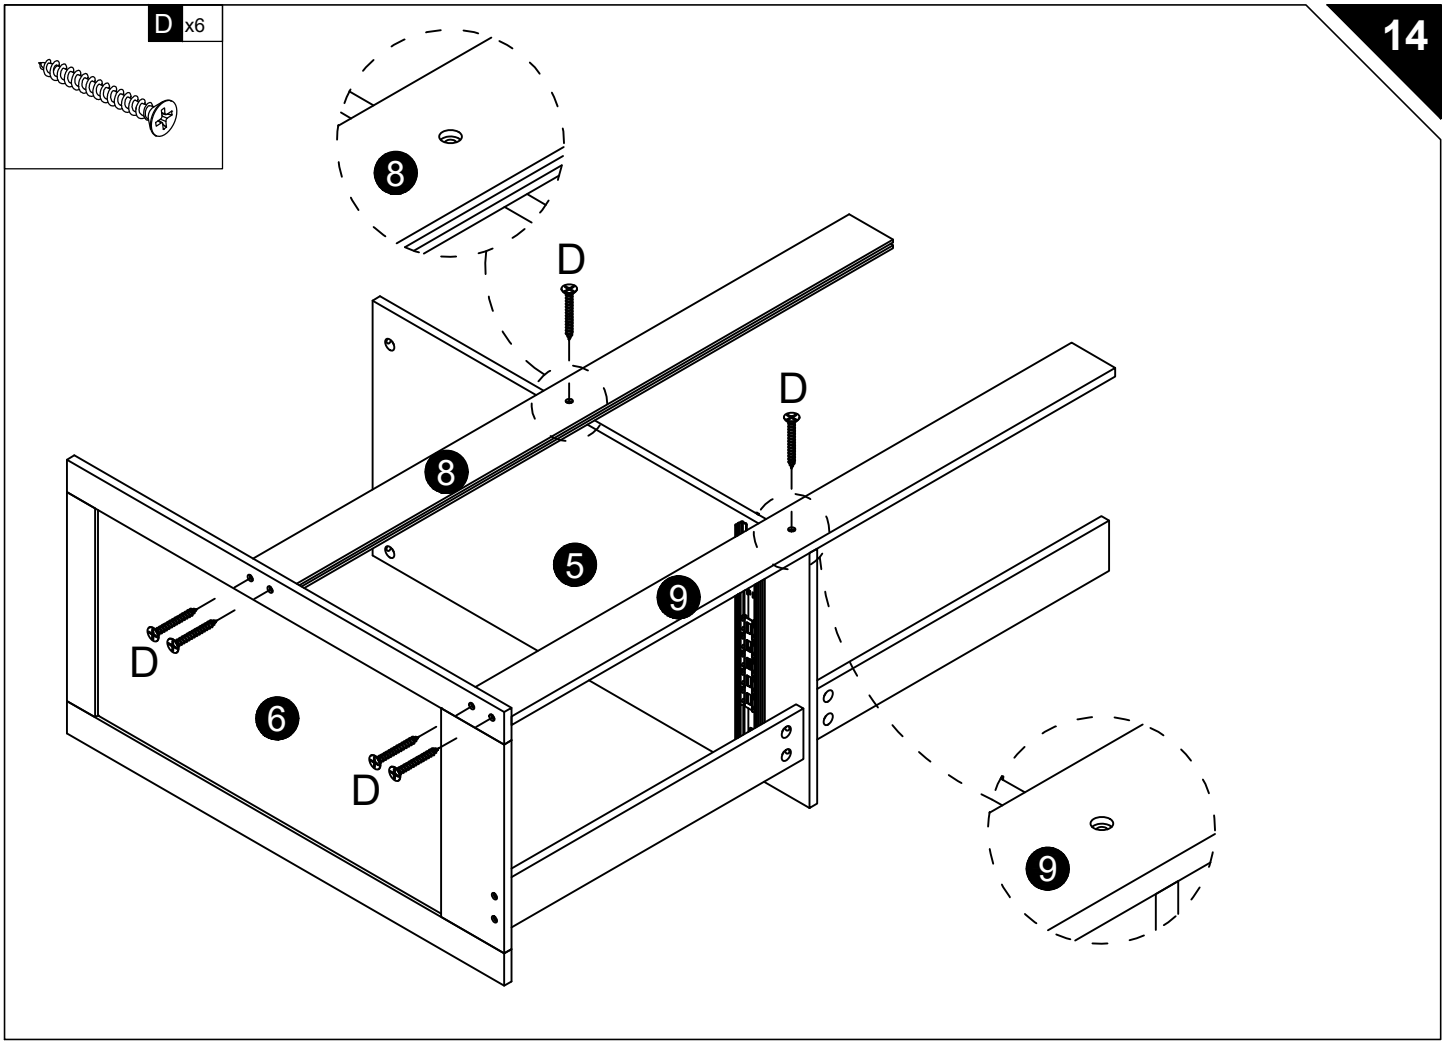
D x6
14
8
D
D
8
5
9
D
6
D
9


15

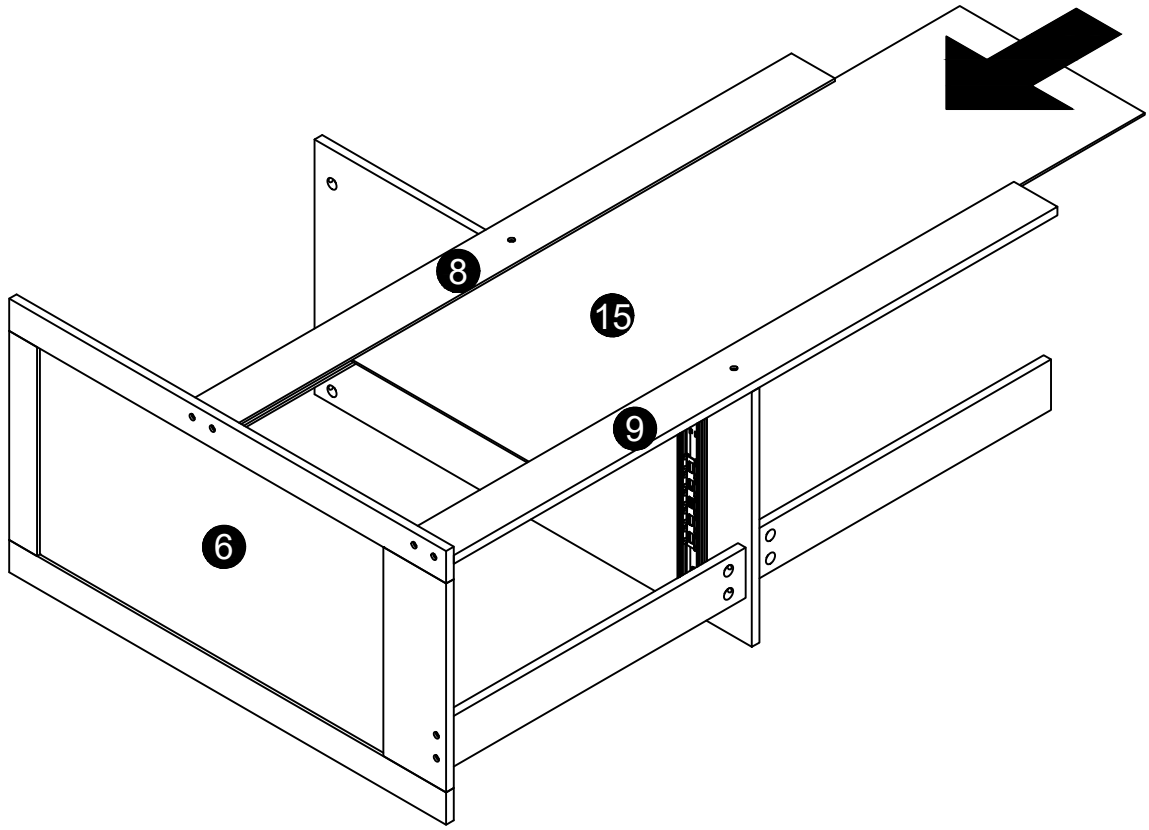



16

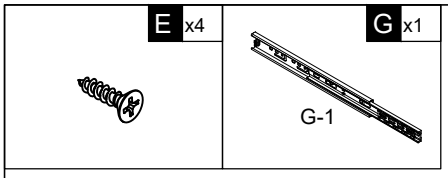



Pay attention to the installation position of the holes.

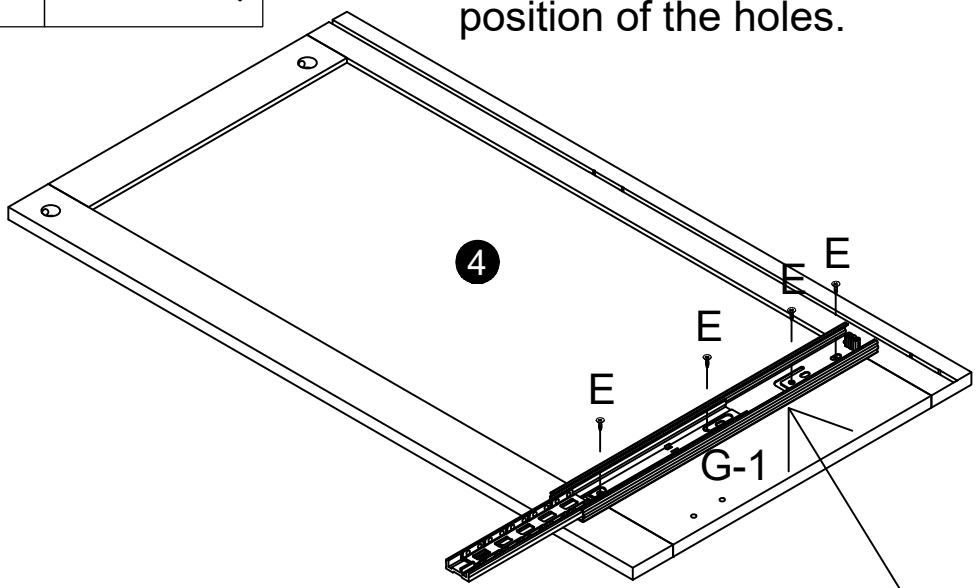


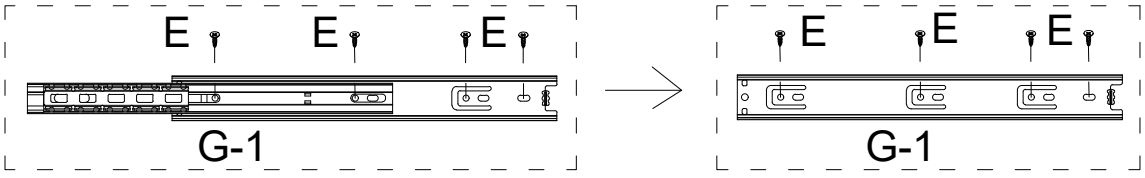


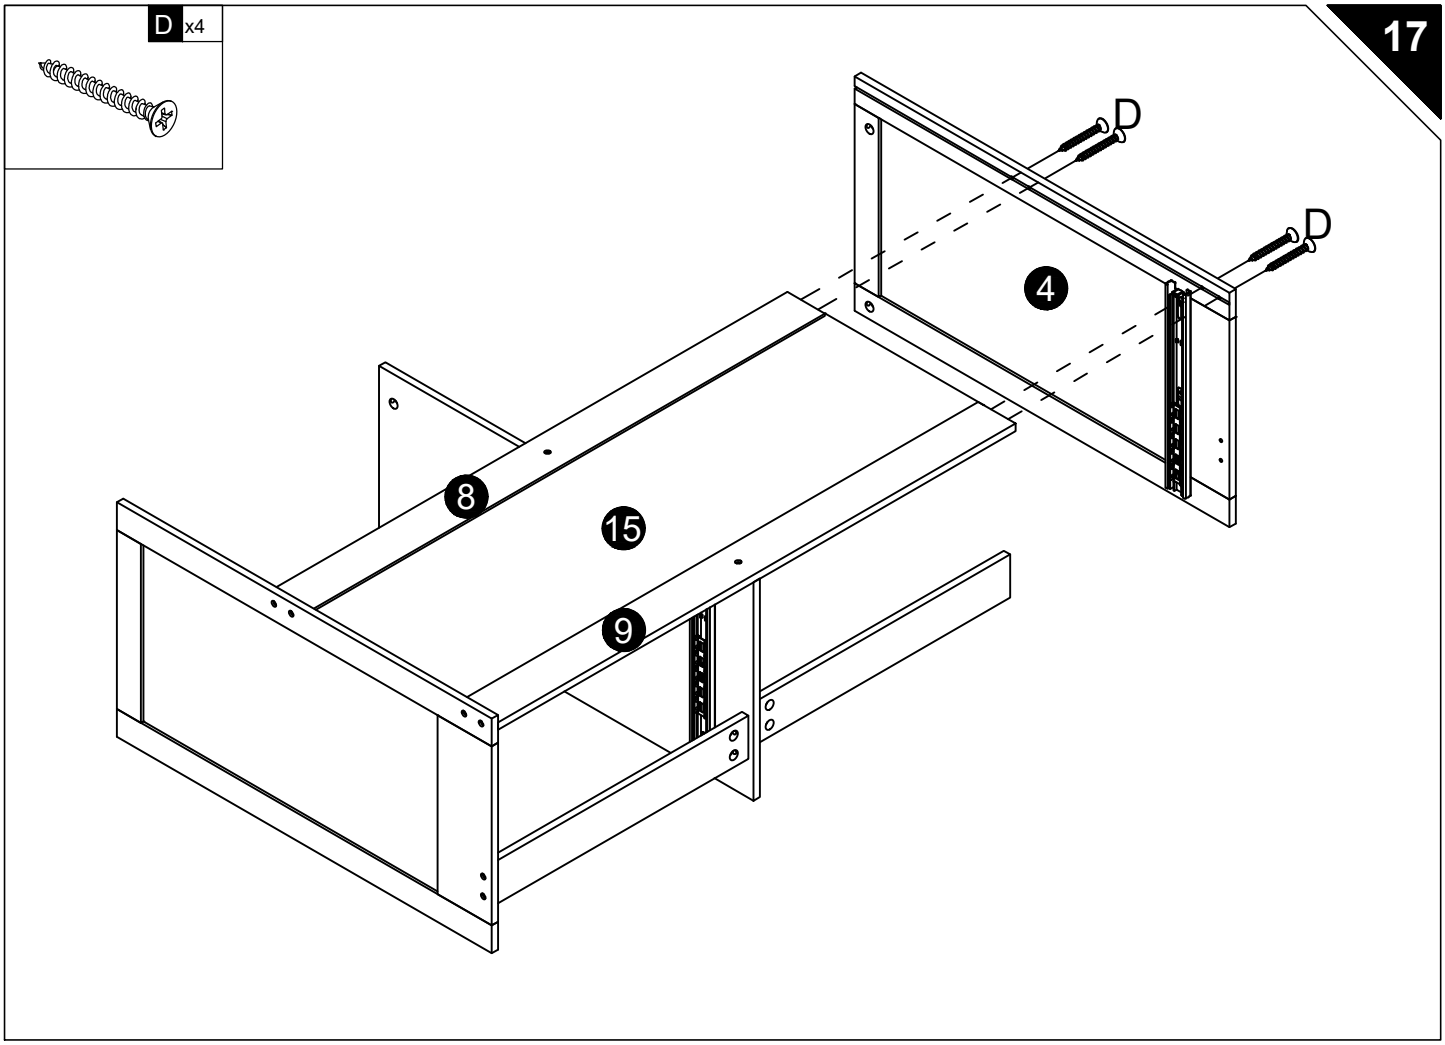

D x4
17
D
D
4
8
15
9

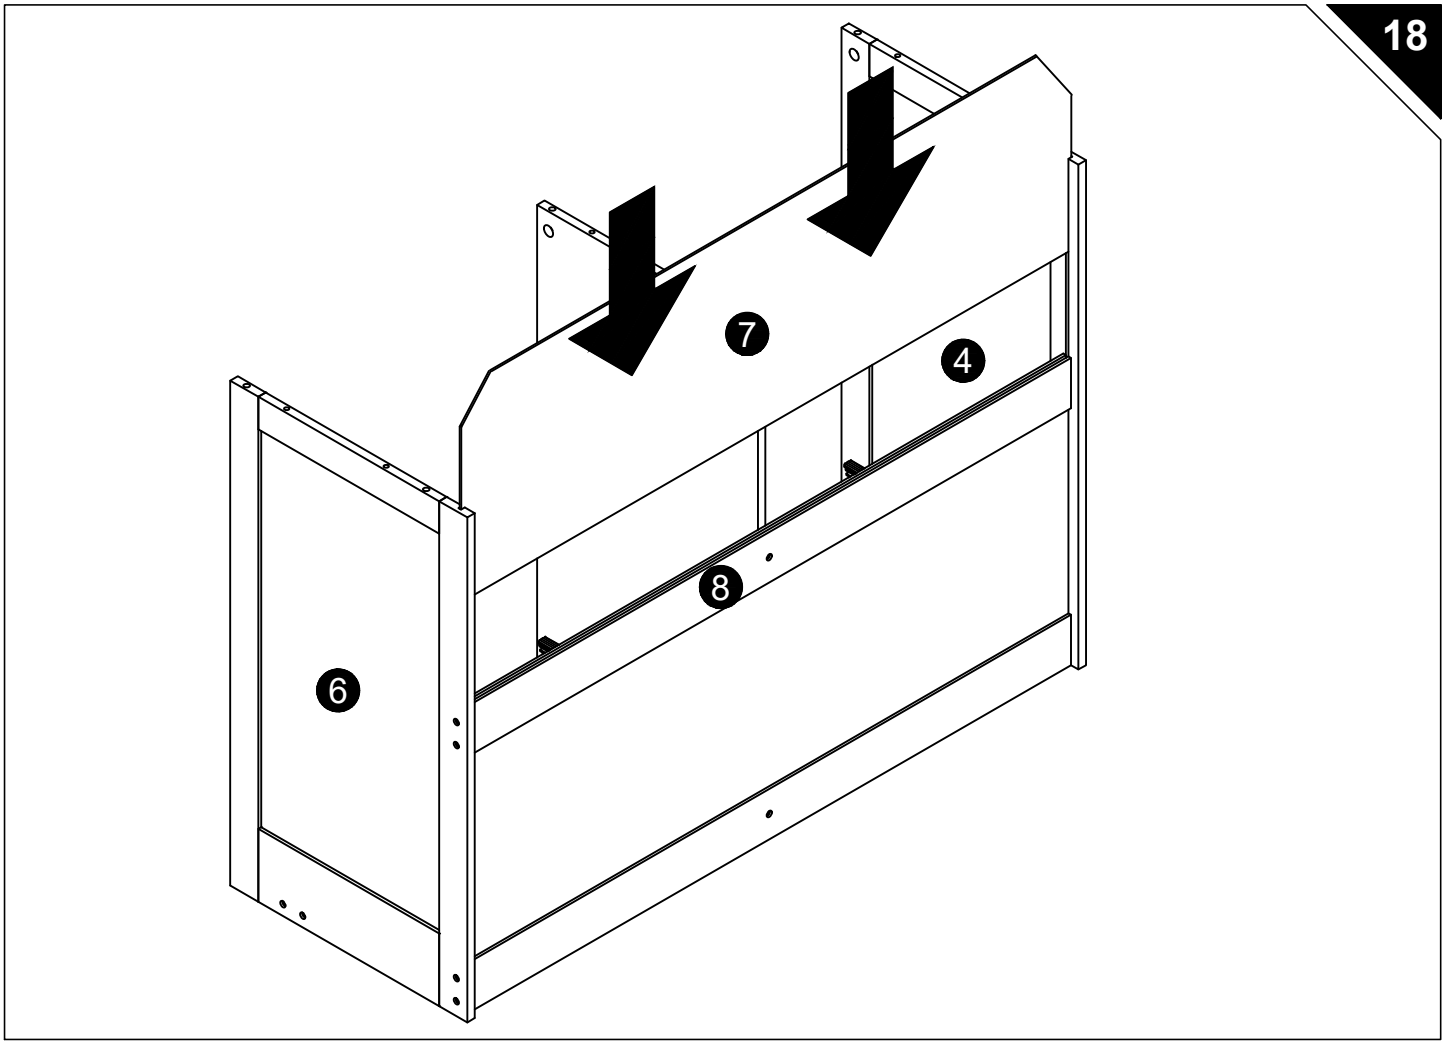

18
7
4
8
6

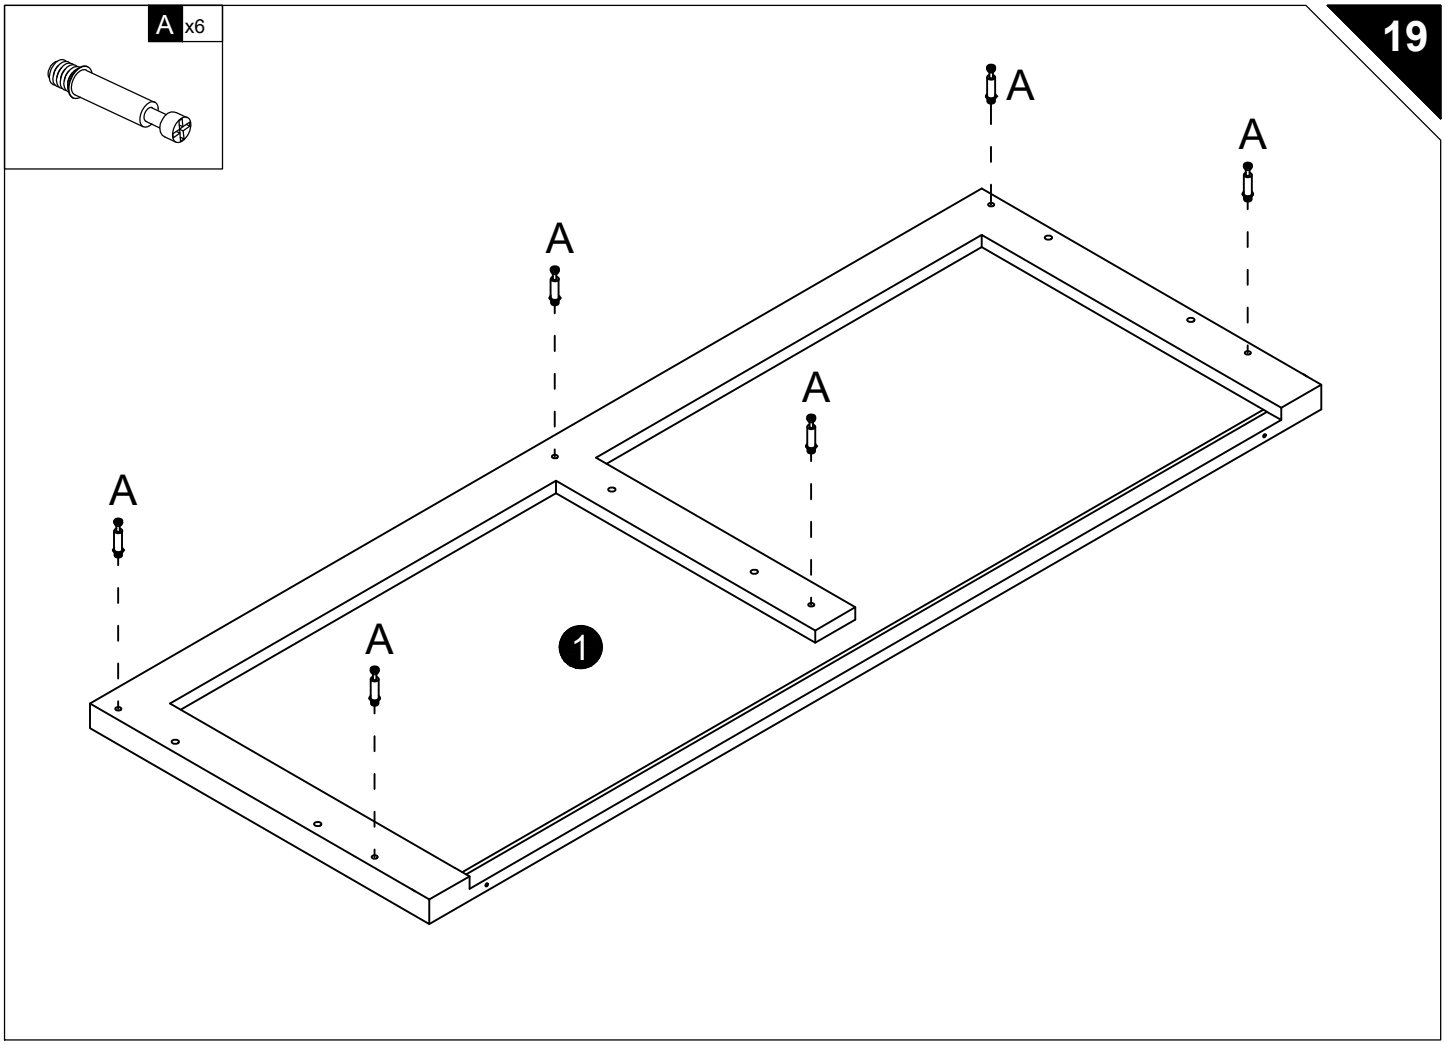
A x6
19
A
A
A
A
A
A
1

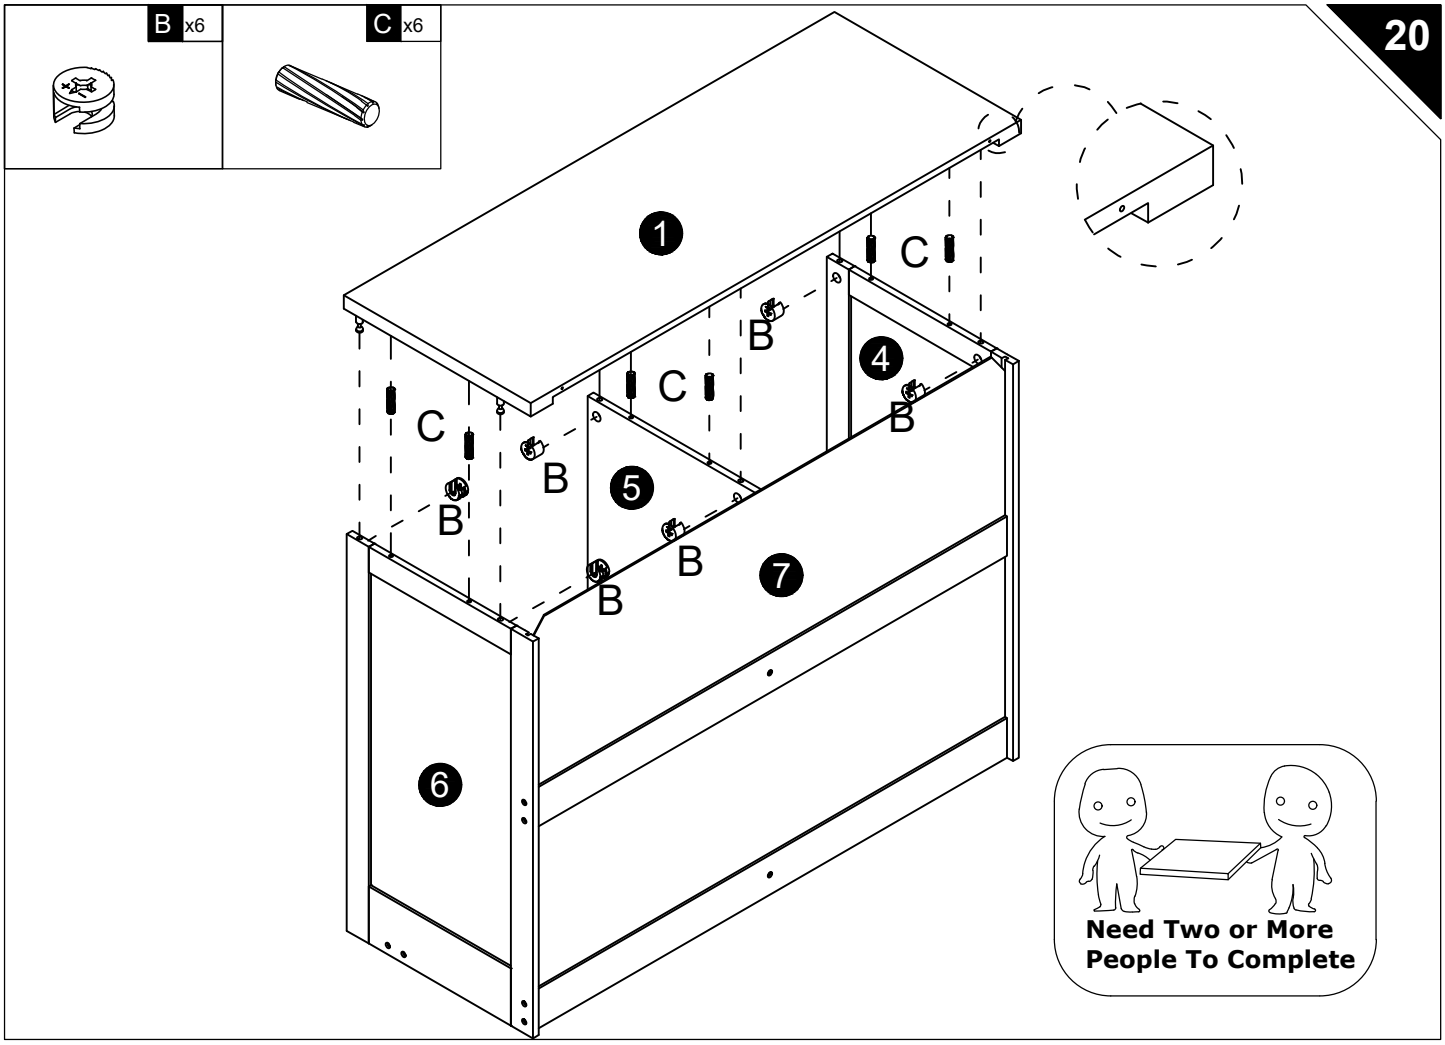

B x6
C x6
20
1
C
B
C
B
4
B
C
B
5
B
B
7
6
Need Two or More
People To Complete

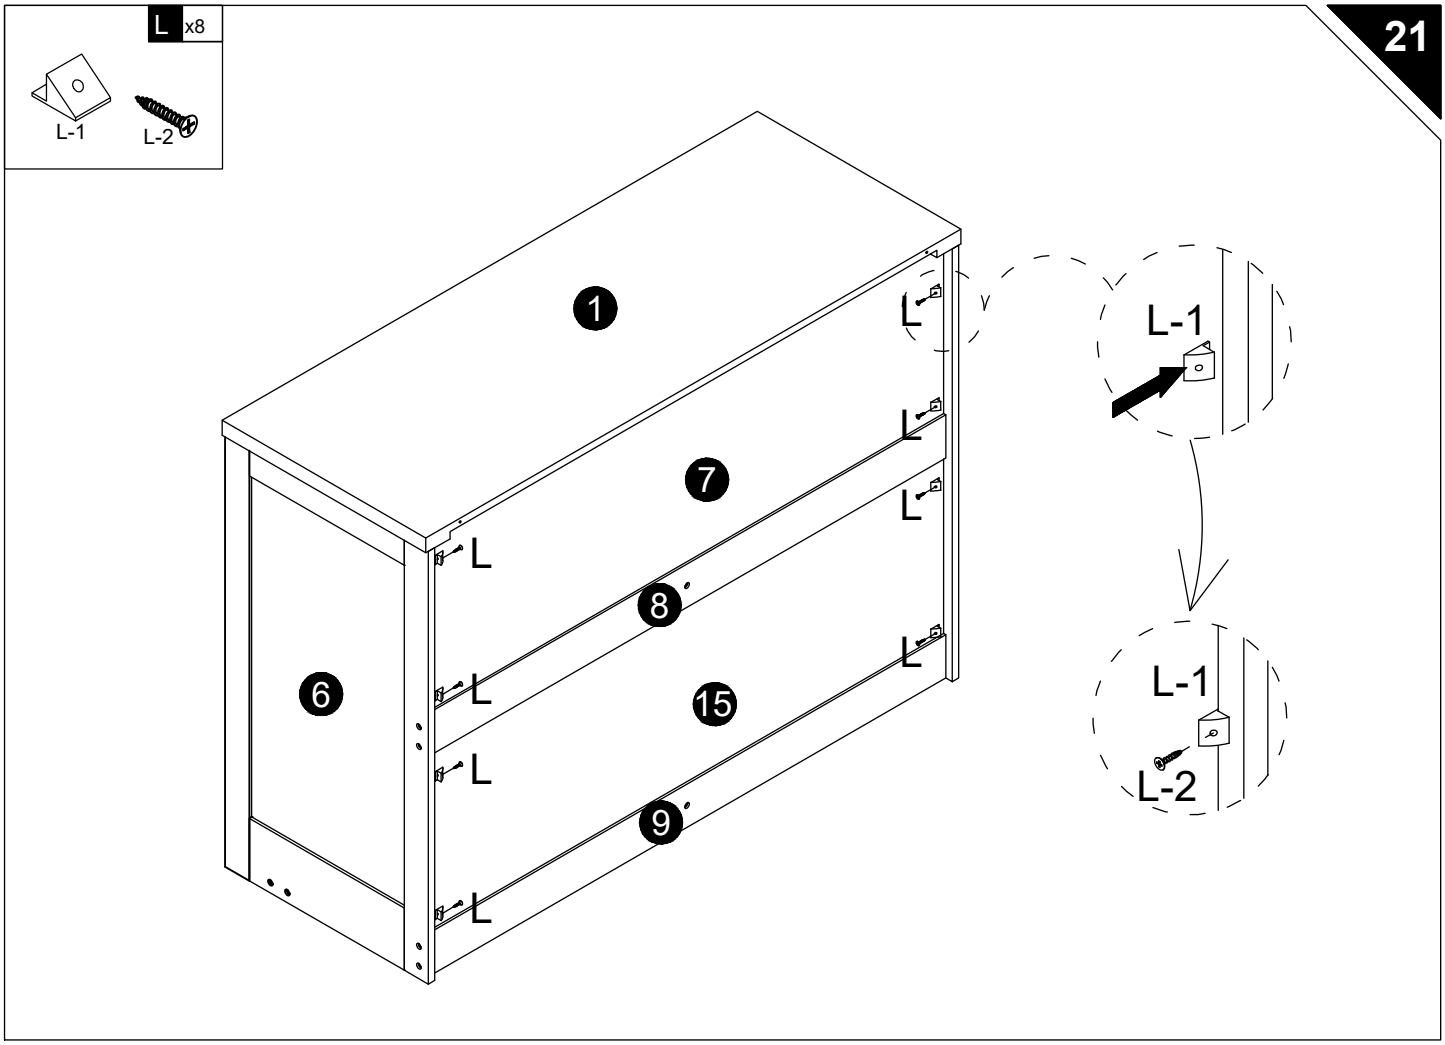

21
L x8
L-1
L-2
1
7
8
6
15
9
L
L-1
L-2

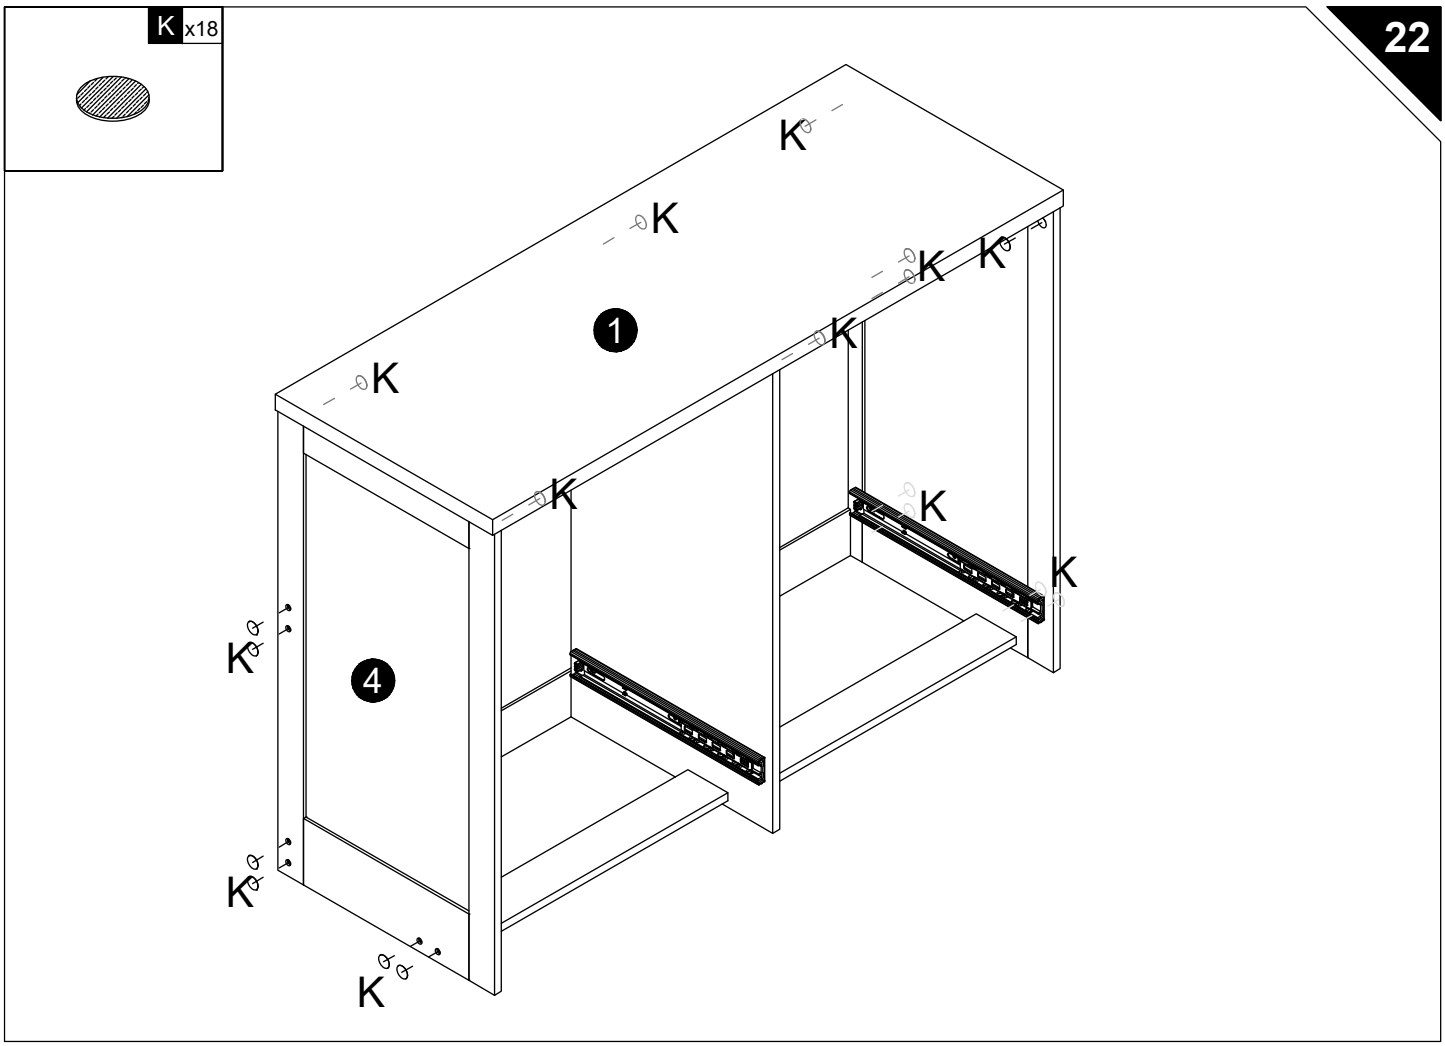
22
K x18
K
1
4

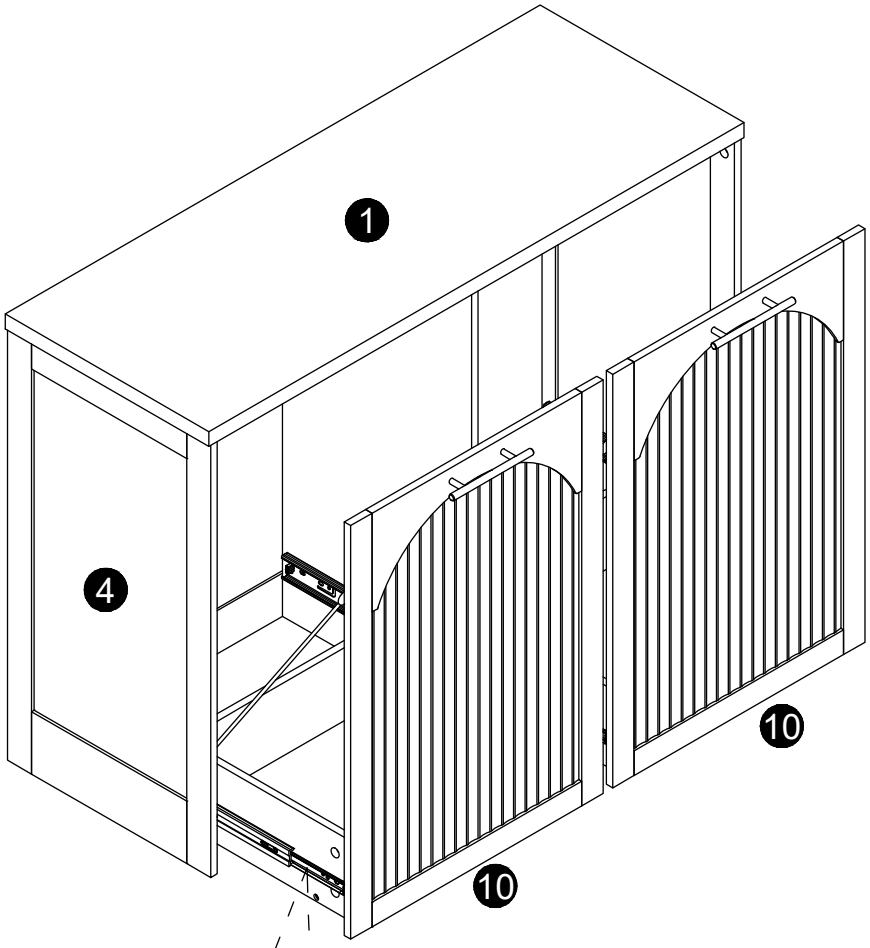


Please make sure to align the slide rail with the notch properly. Support it with your hand and push it in horizontally so that the sliding ball can fit into the groove and function properly.

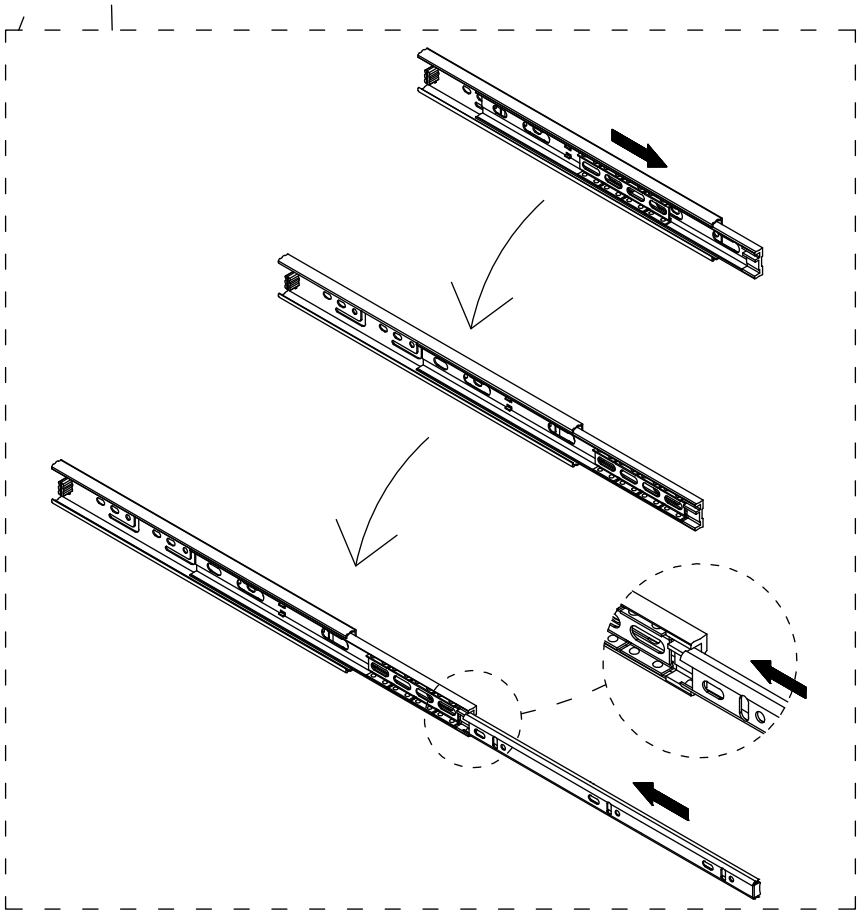


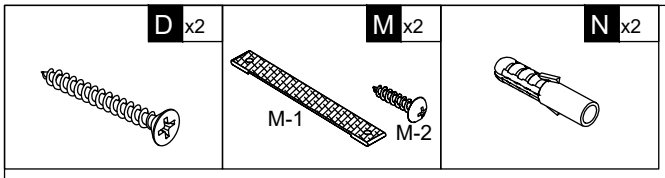


Done

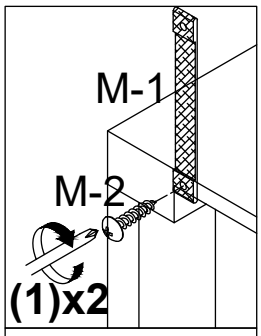


First fix the anti-rewind screw in the reserved hole of the product.

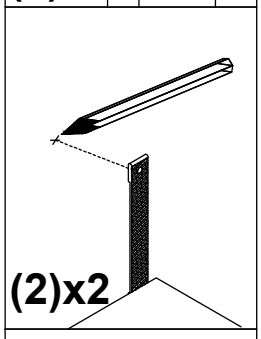


then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

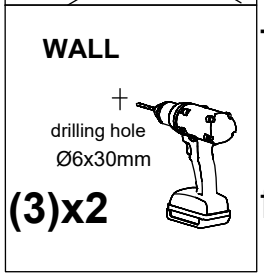


Then use a tape drill to make holes in the wall that are suitable for the product screws.

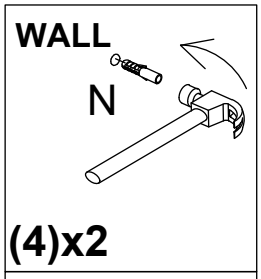

Then,put the expansion bolt into the hole

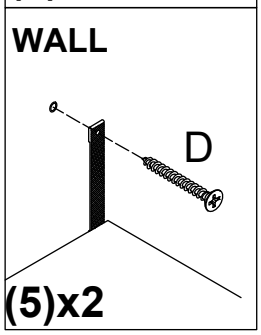

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

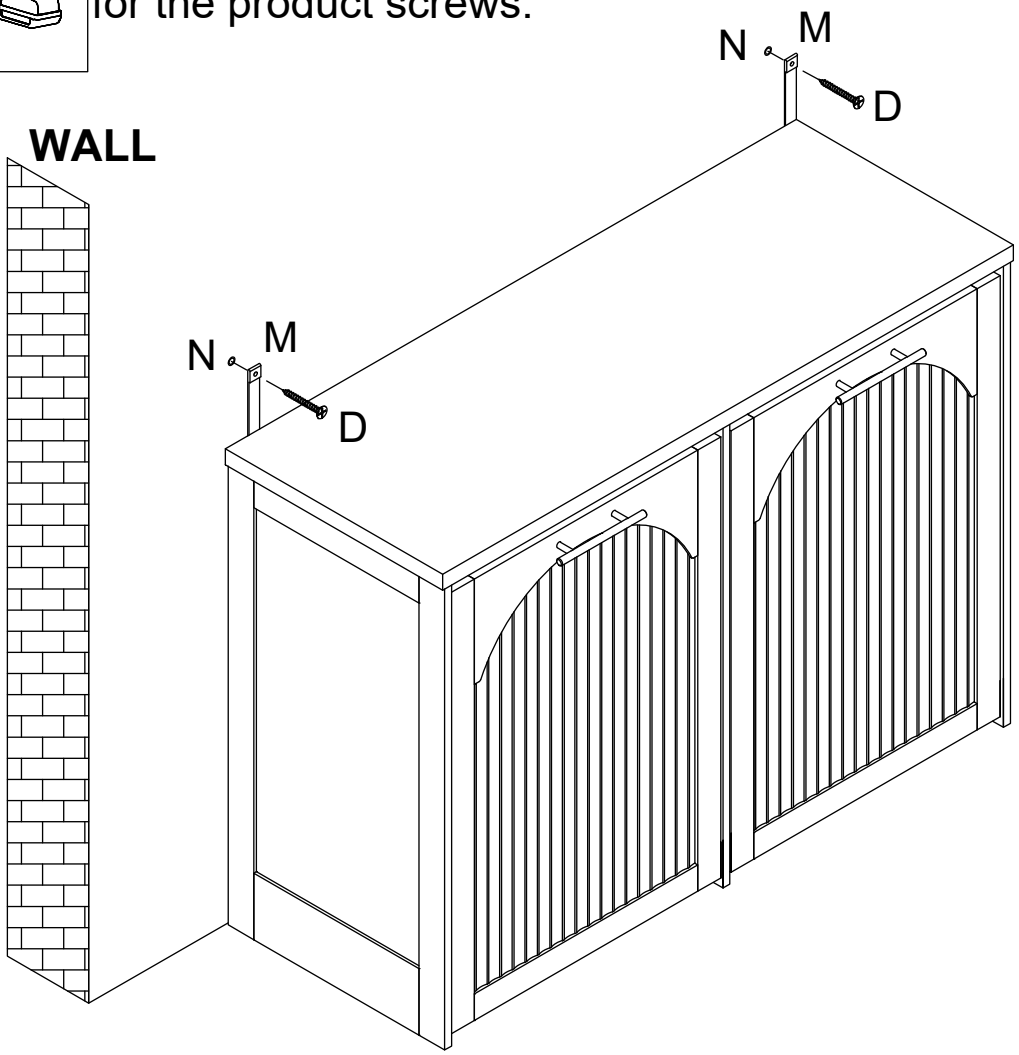


We have included a set of tipping restraint hardware for this unit. You install this hardware to prevent accidents or injuries that can result from the unit falling.When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing.

We strongly recommend mounting this hardware to a wall stud and your unit.



Young children can be seriously injured by tipping furniture. You install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage.The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision.

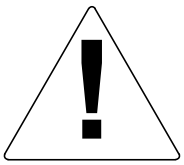

The tipping restraints are not earthquake restraints. lf you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.Depending upon your wall construction different anchor hardware maybe required.
Please contact your local hardware store for assistance.