




**MANHATTAN
COMFORT**

SB007

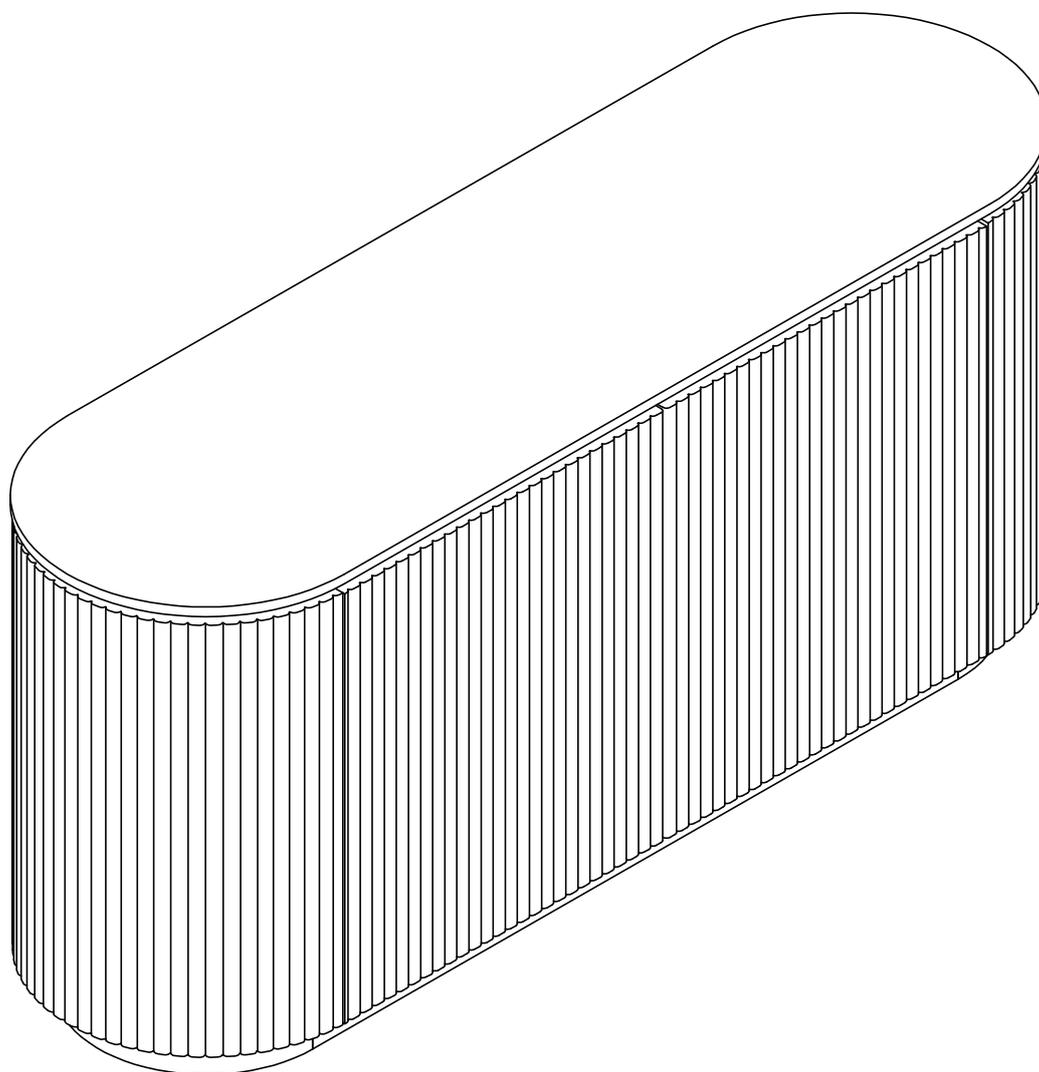





STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

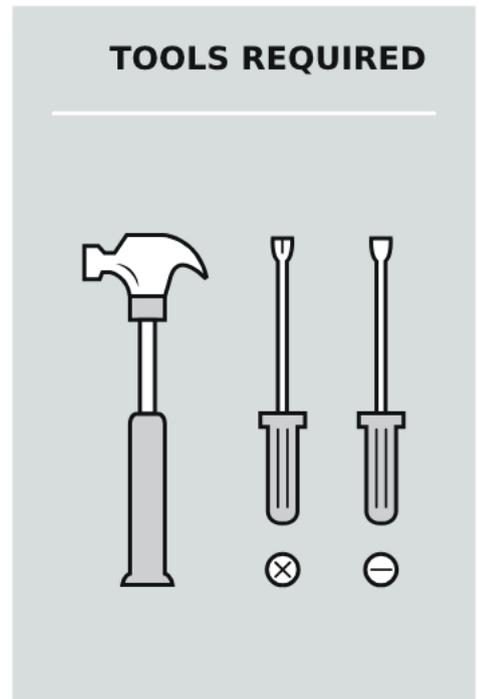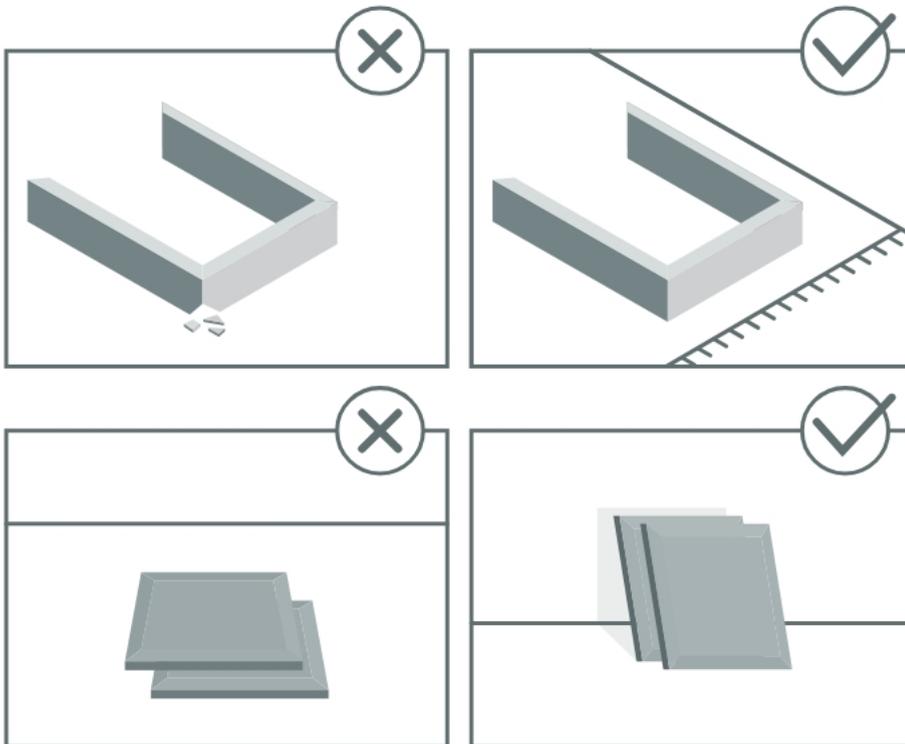

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail:

Support Site




Included in this package:

BOX 01/02

- E. BACK PANEL (2)
- F. ADJUSTABLE SHELF (2)
- G. BOTTOM PANEL (1)
- H. MEDIAN PANEL (1)
- I. FRONT & BACK LOWER PANEL (2)
- K. MIDDLE LOWER PANEL (1)
- L. LEFT DOOR (1)
- M. RIGHT DOOR (1)
- ALL HARDWARE ARE IN BOX 01/02

BOX 02/02

- A. TOP PANEL (1)
- B. SUBTOP FRAME (1)
- C. LEFT FRAME (1)
- D. RIGHT FRAME (1)
- J. LEFT & RIGHT LOWER PANEL (2)

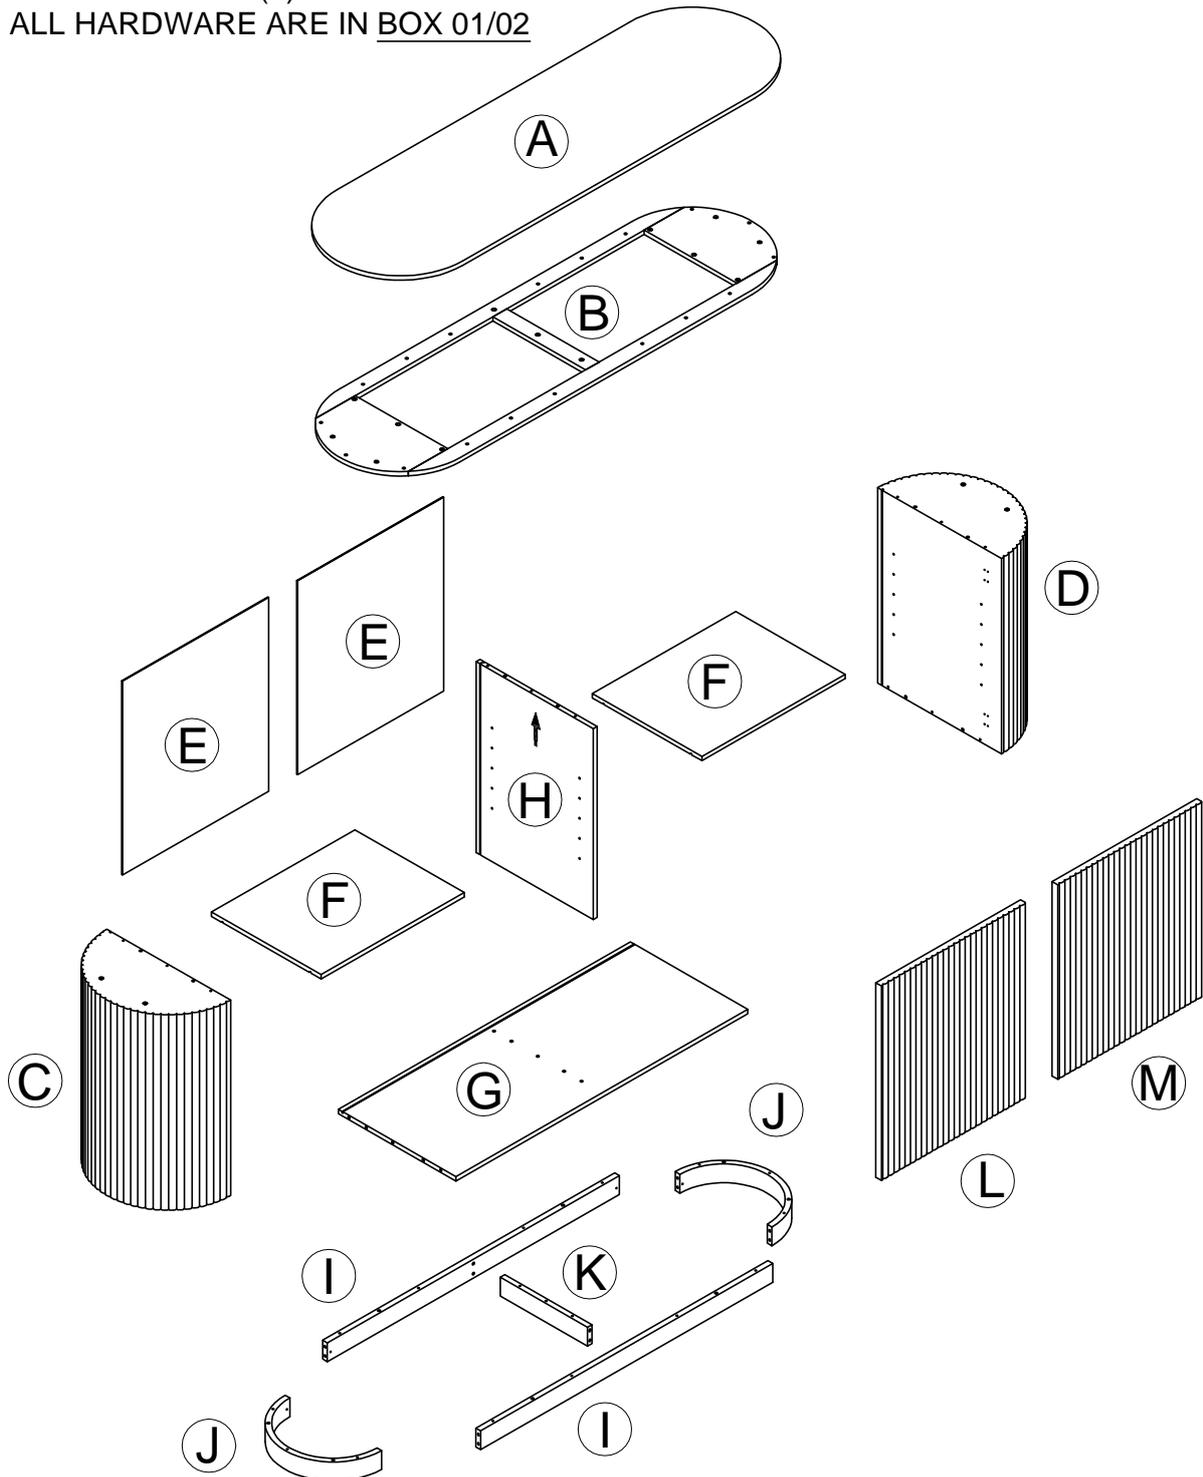


Hardware Identification


- ① KD BOLT - 8pcs
Ø6*35mm




- ② KD LARGE CAM - 8pcs
Ø15*12mm



- ③ COVER CAP - 8pcs




- ④ WOOD DOWEL - 31pcs
Ø8*30mm




- ⑤ BOLT - 12pcs
1/4"x22mm




- ⑥ WOOD DOWEL - 10pcs
Ø8*20mm



- ⑦ SCREW - 10pcs
Ø3.5*12mm




- ⑧ SCREW - 24pcs
Ø3.5*15mm



- ⑨ SCREW - 16pcs
Ø3*17mm




- ⑩ SCREW - 8pcs
Ø3.5*12mm




- ⑪ SCREW - 12pcs
Ø6*50mm




- ⑫ SHELF PIN - 8pcs
Ø5*16mm




- ⑬ PLASTIC WEDGE - 16pcs
16*16.5*10.5mm



- ⑭ I BRACKET - 4pcs




- ⑮ STRAPS - 2pcs
25*150mm

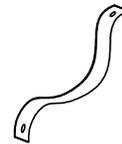

- ⑯ PLASTIC WEDGE - 2pcs
8*30mm



- ⑰ SCREW - 2pcs
Ø4*25mm



- ⑱ SCREW - 2pcs
Ø4*18mm




Hardware Identification


①⑨ EURO HINGE - 4pcs



②⑩ FRONT OVERLAY - 2pcs
Ø18*1.2mm




②① TIP ON - 2pcs

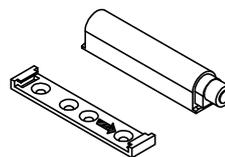


②② SCREW - 16pcs
Ø4*50mm




②③ LOCK - 1pc



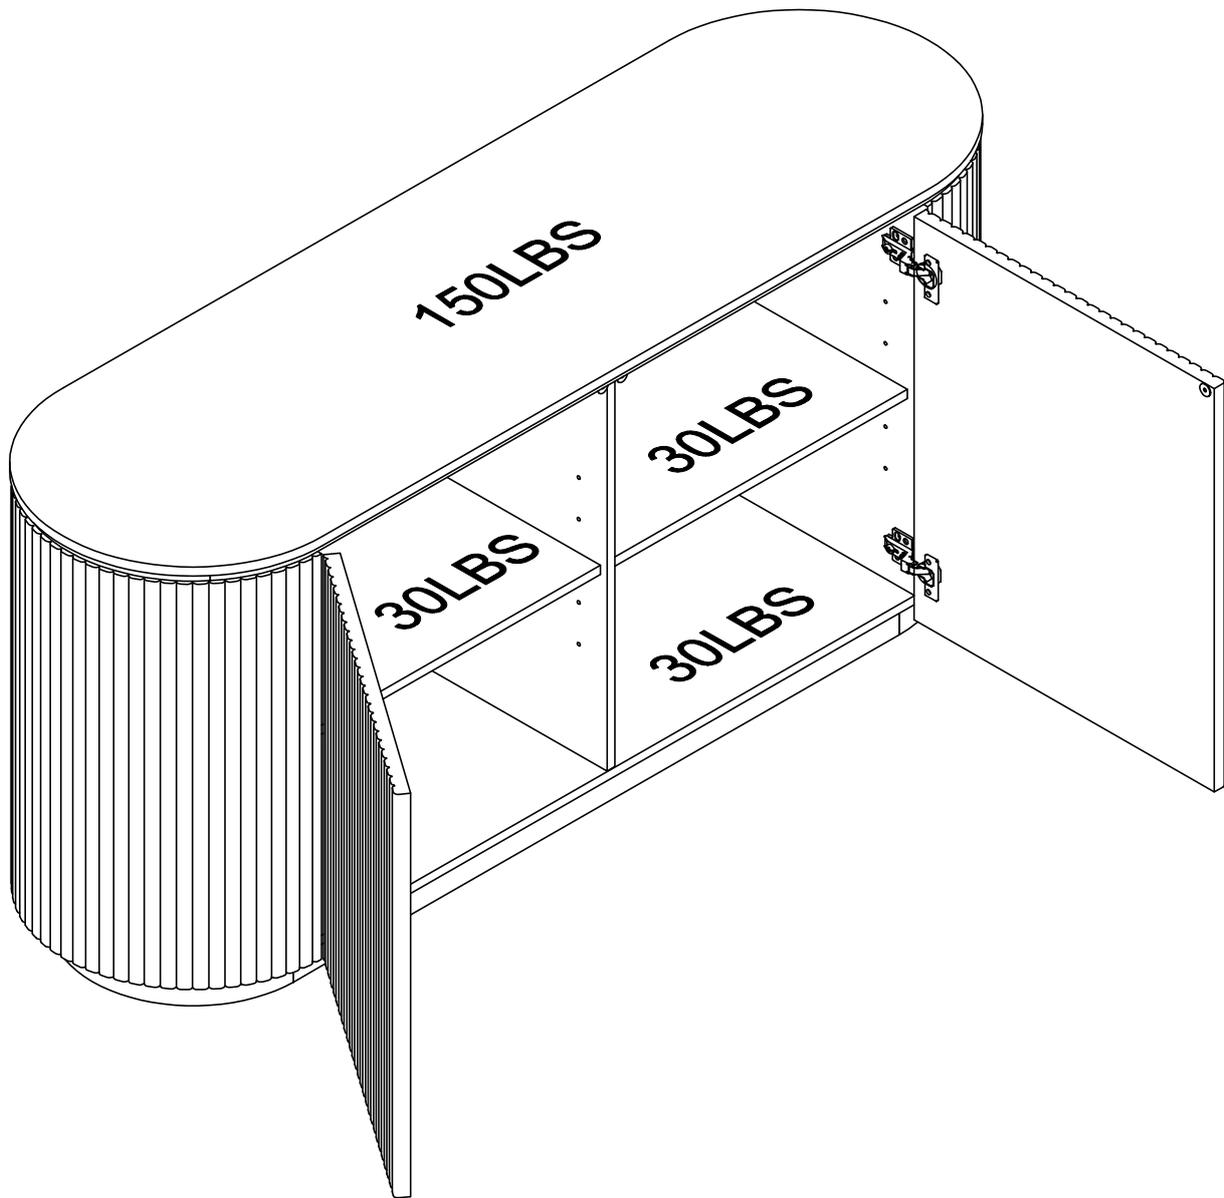



Step 1:

* Insert Six KD BOLT (1) to the LEFT FRAME (C) and RIGHT FRAME (D)

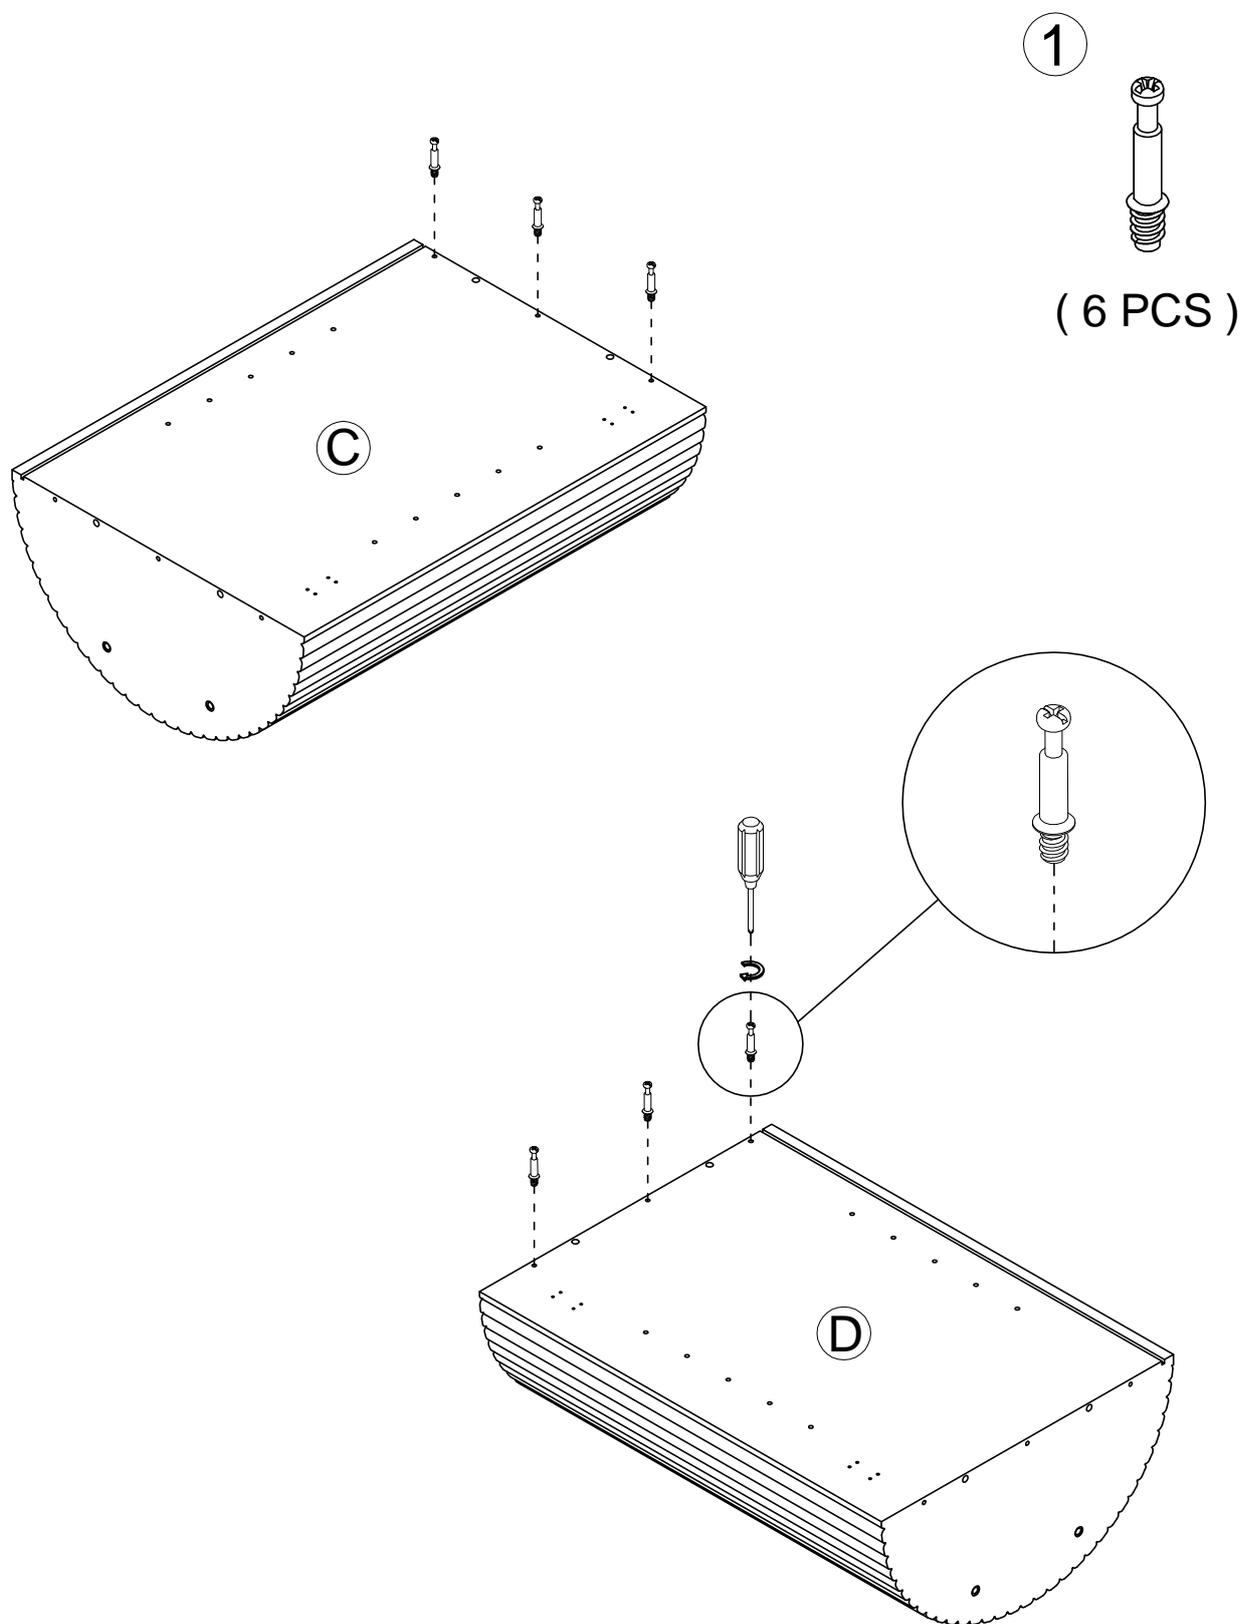

Step 2:


* Use LOCK (23) attach the BOTTOM PANEL (G) to the MEDIAN PANEL (H) by two WOOD DOWEL (4) and Three SCREW (11)

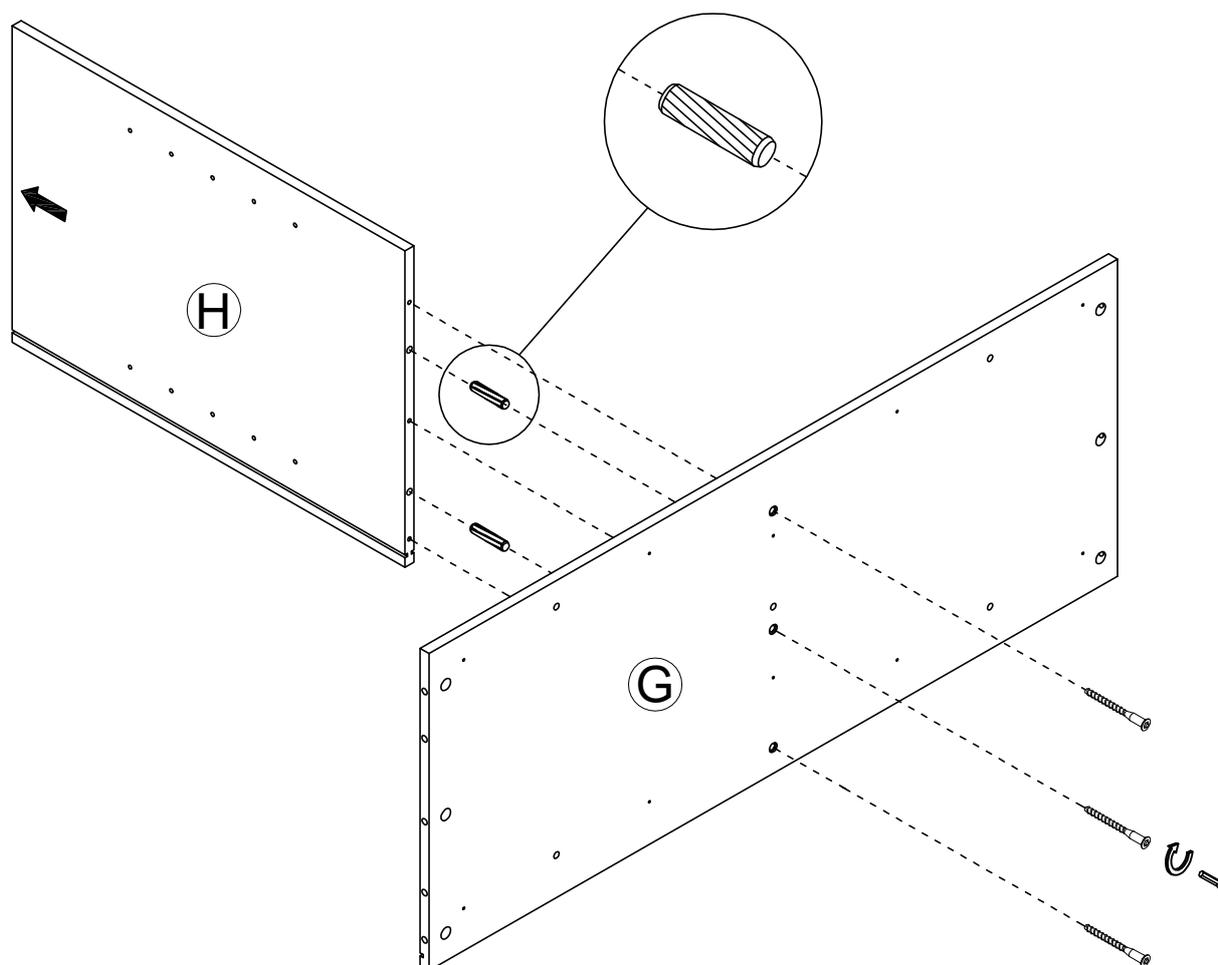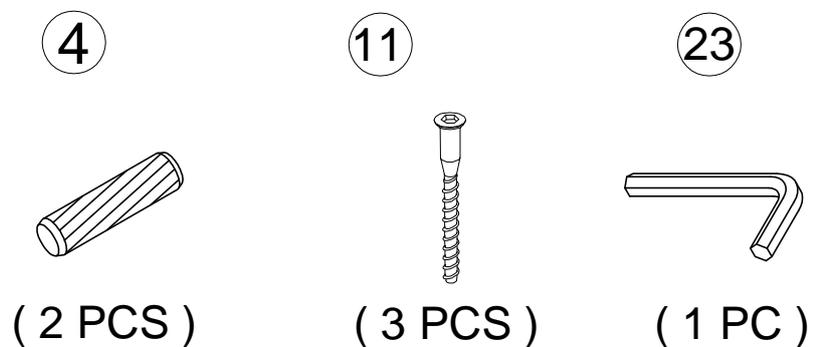

Step 3:


* Install module at step 2 to the LEFT FRAME (C) by the Three KD LARGE CAM (2)
Three COVER CAP (3) and Two WOOD DOWEL (4)

②




(3 PCS)

③




(3 PCS)

④




(2 PCS)

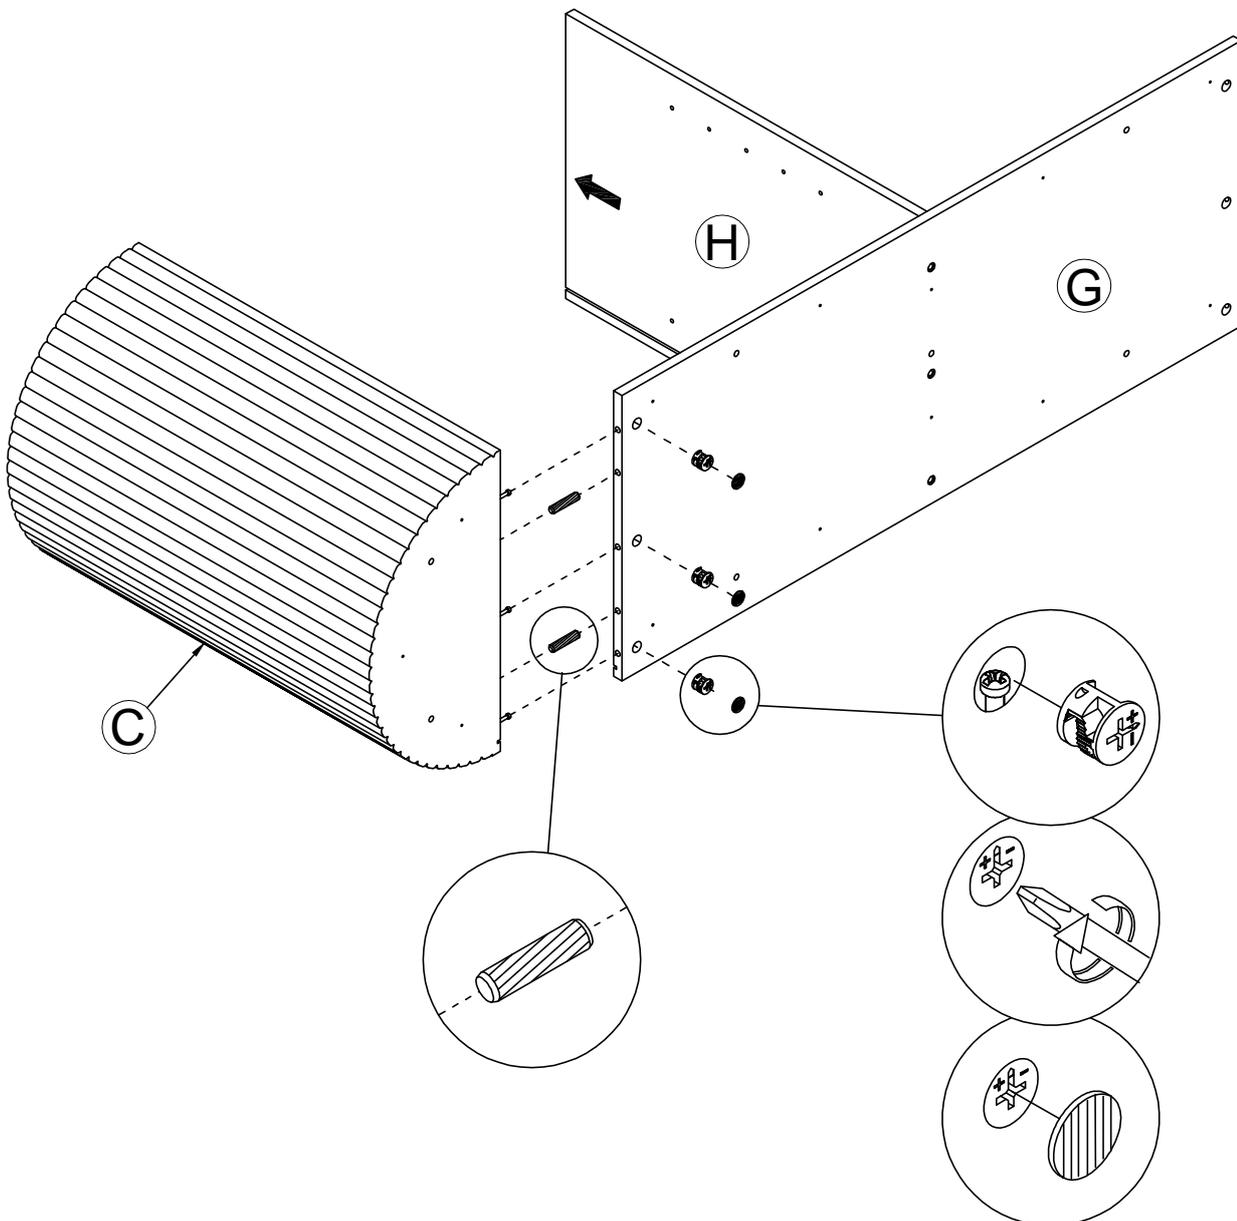


Step 5:

* Insert Two BACK PANEL (E) to the stand.

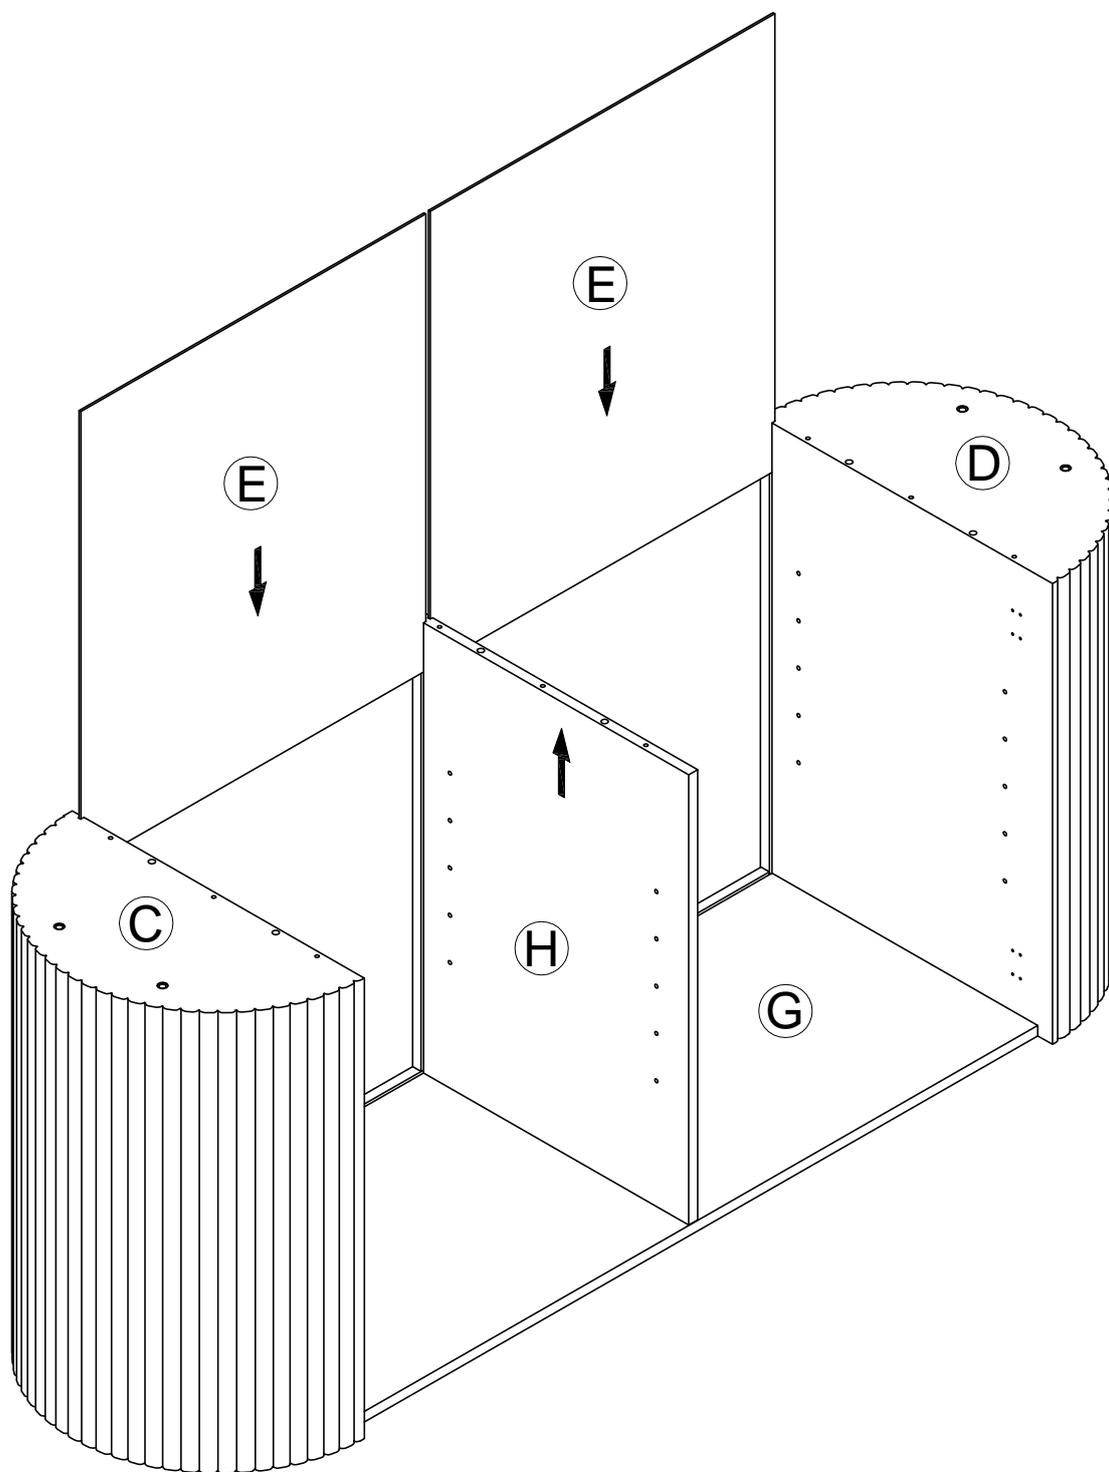



Step 6:

* Insert Two Tip on (21) to the SUBTOP FRAME (B) by the eight SCREW (7)

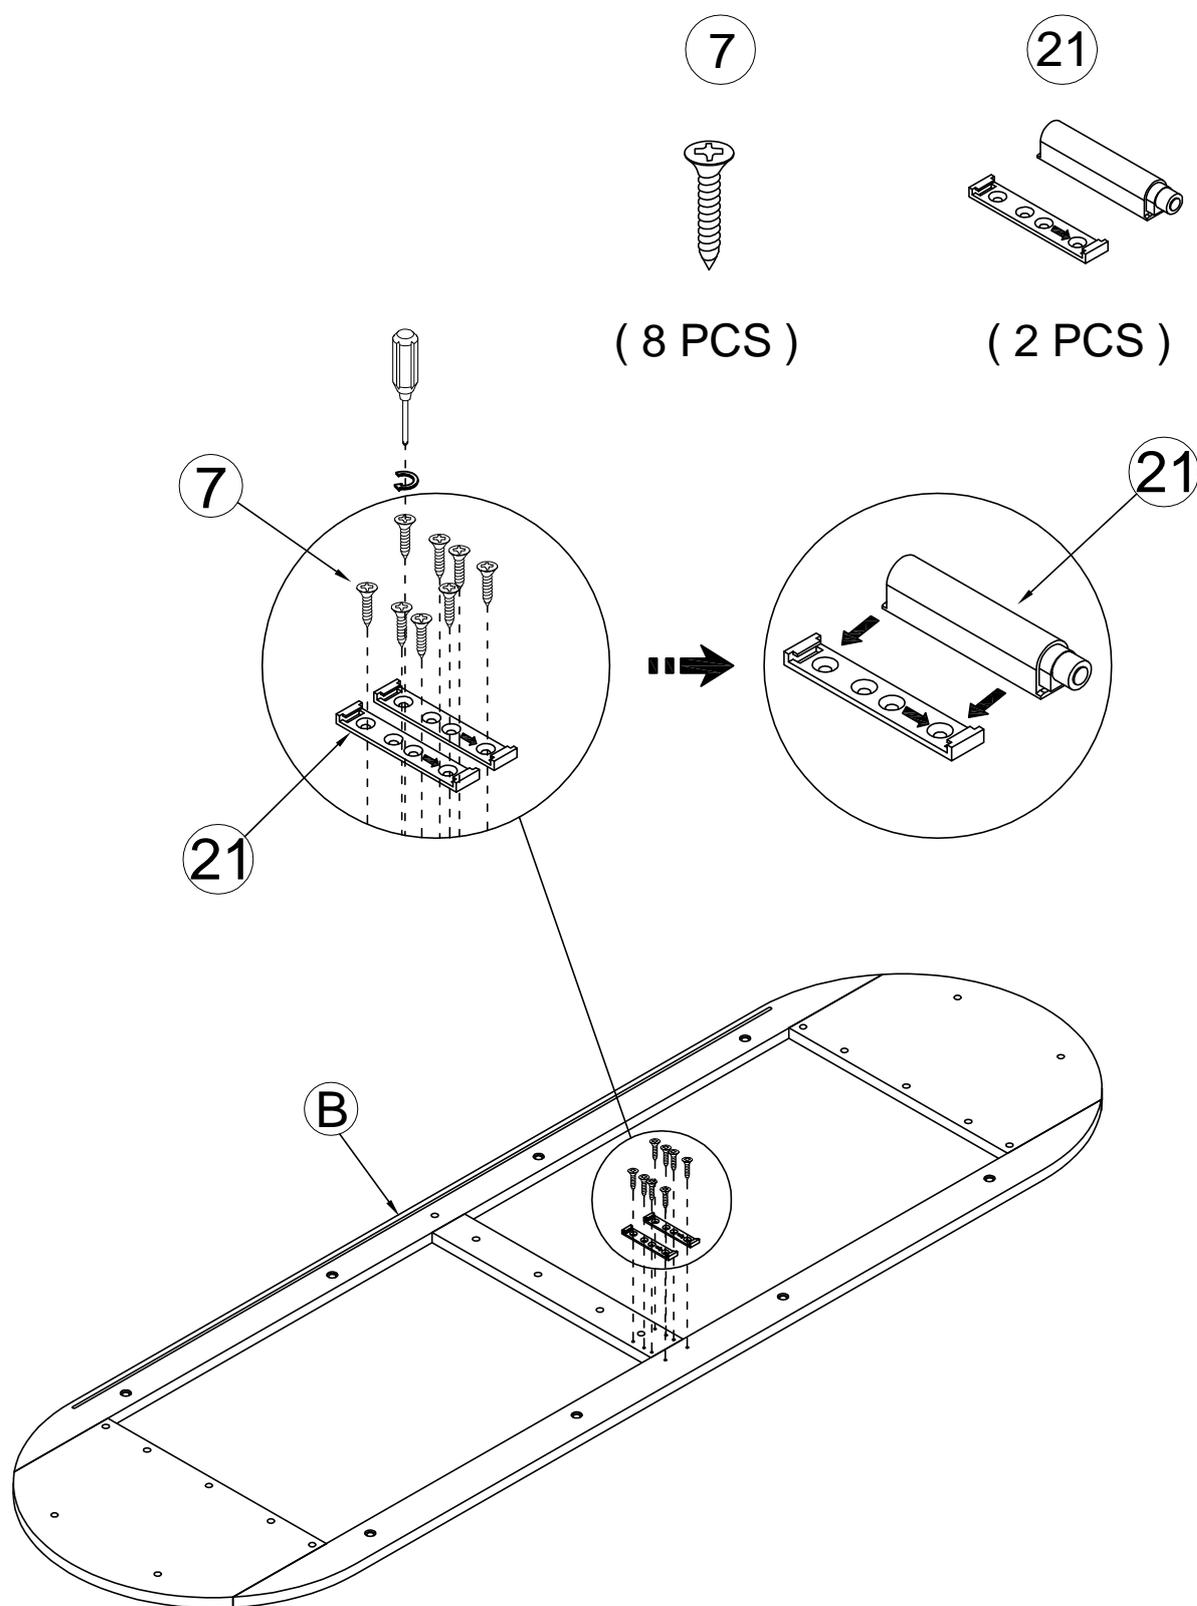

Step 7:

* Use LOCK (23) Install SUBTOP FRAME (B) to the module at step 5 by four BOLD (5) ,nine SCREW (11), Six WOOD DOWEL (4)

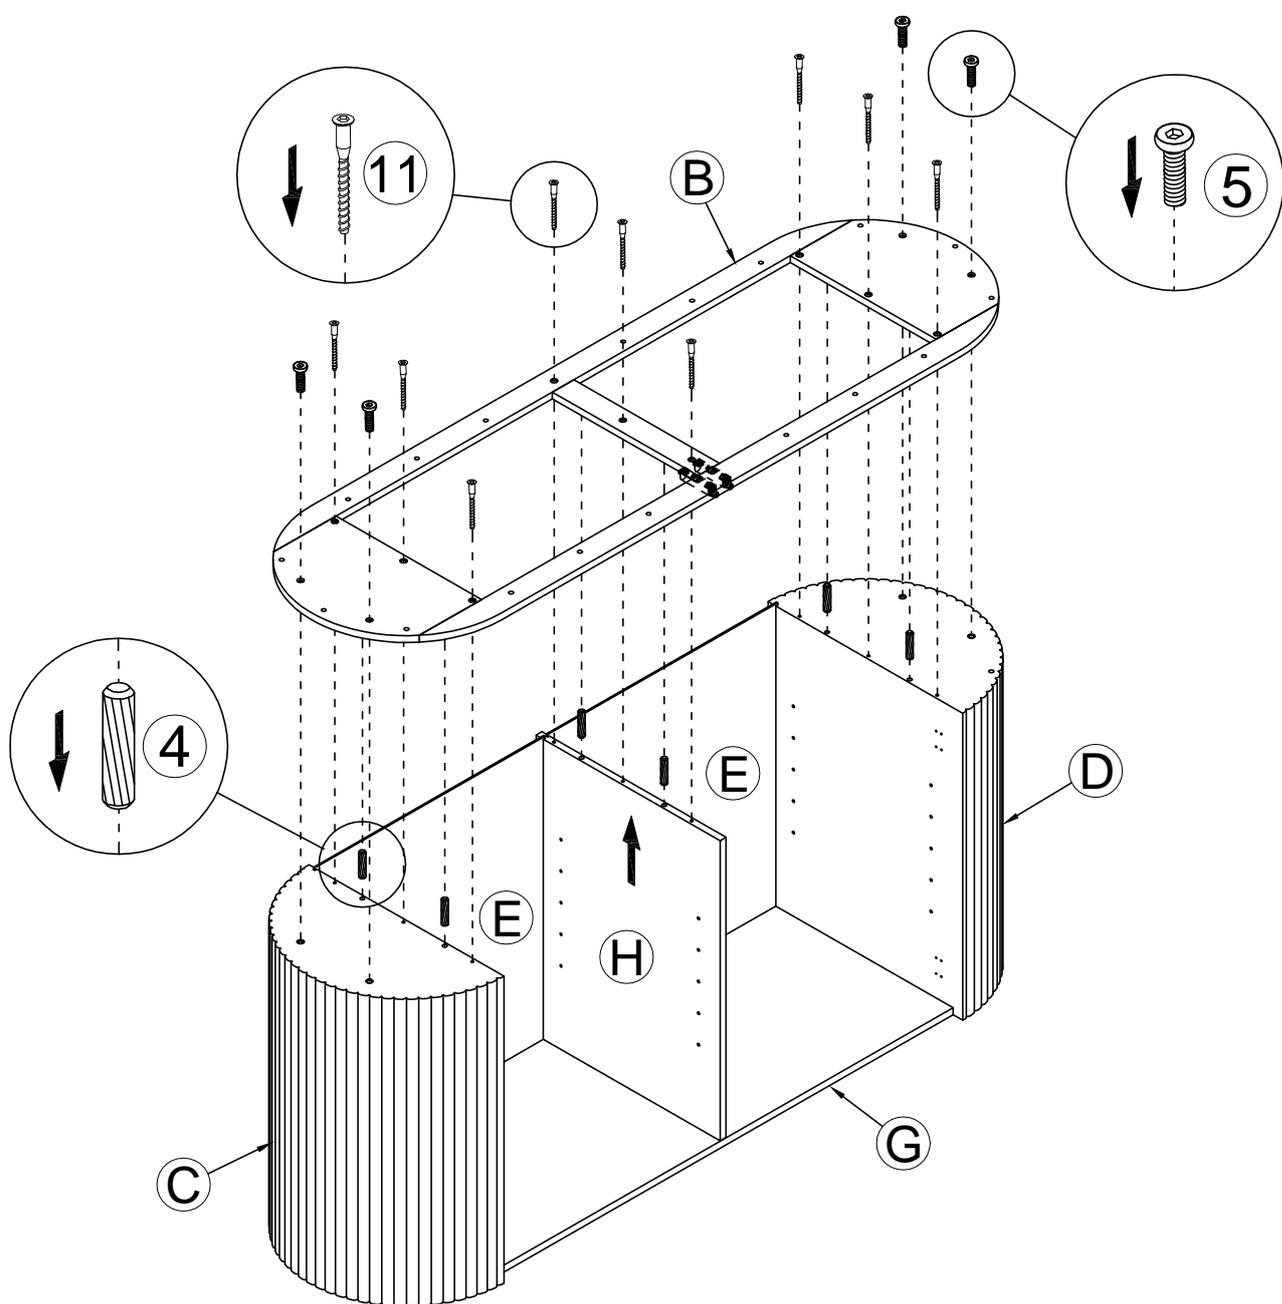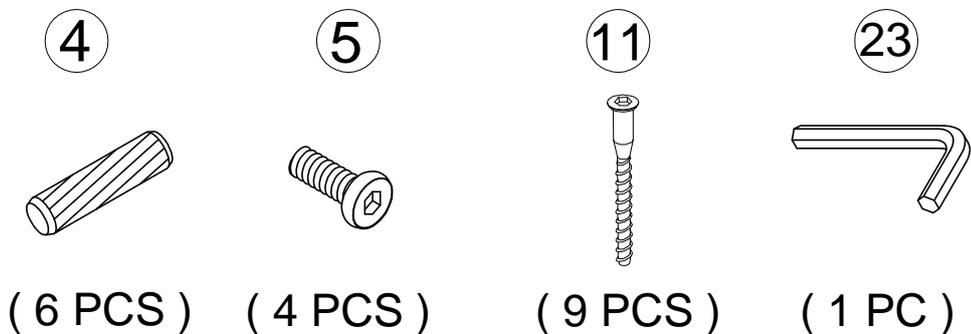


Step 8:

* Use LOCK (23) Install TOP PANEL (A) to the module at step 7 by eight BOLD (5) and Ten WOOD DOWEL (6) and Ten WOOD DOWEL (6)



6



(10 PCS)

5




(8 PCS)

23




(1 PC)

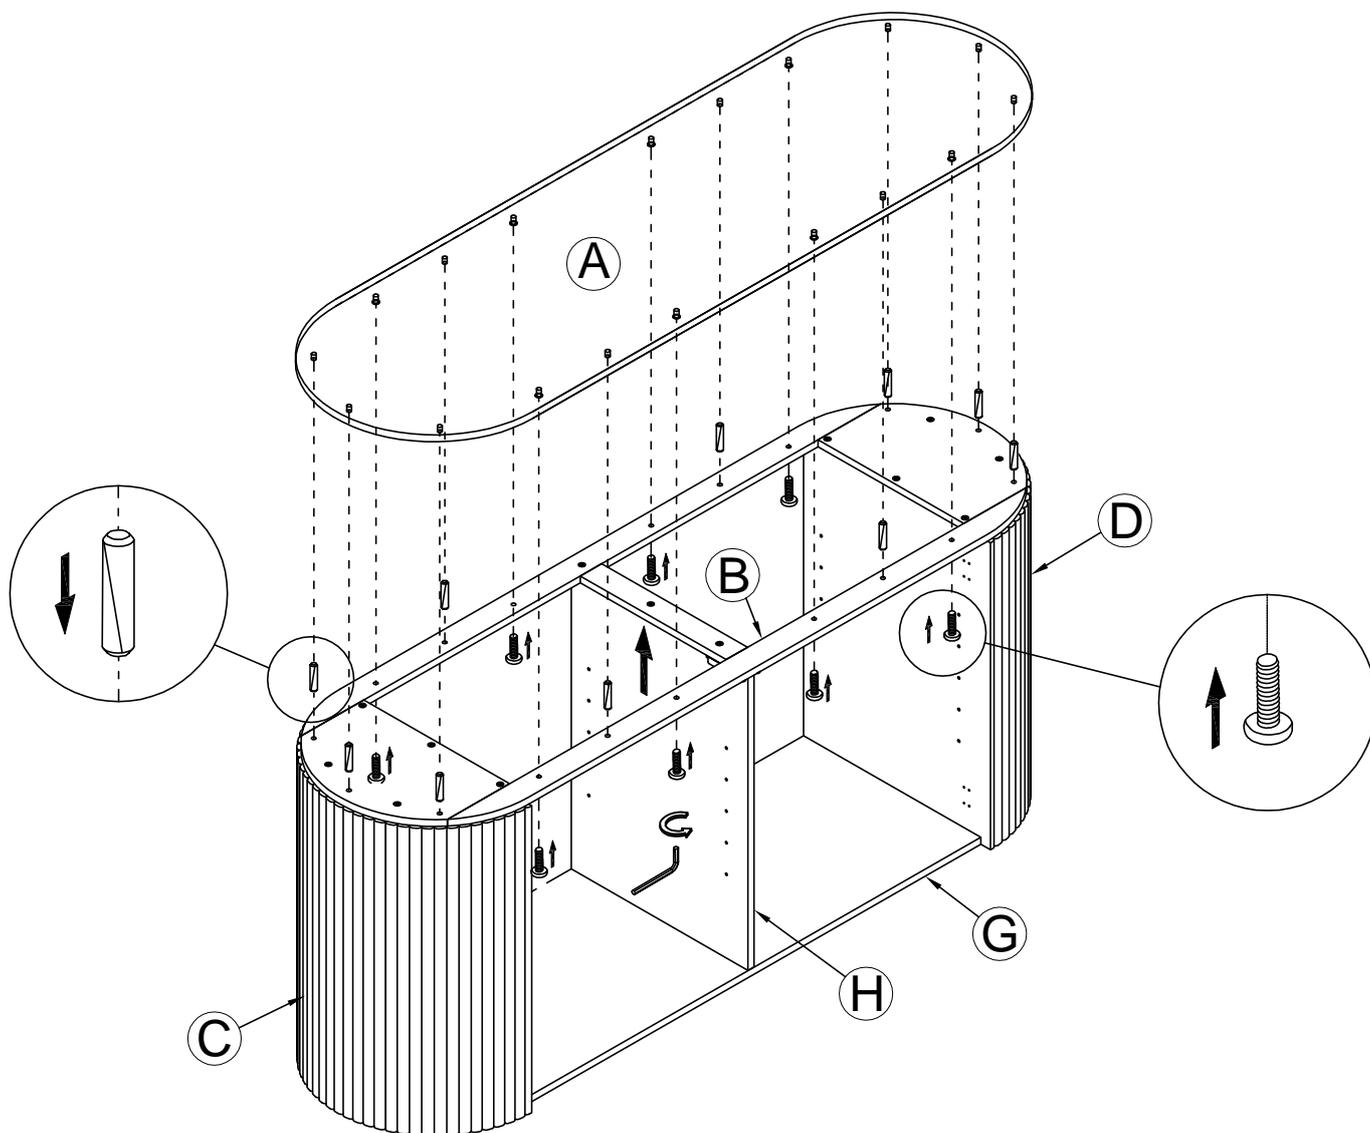


Step 9:

* Insert Two KD BOLT (1) to the FRONT & BACK LOWER PANEL (I)

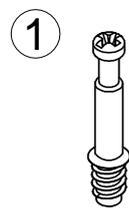

(2 PCS)

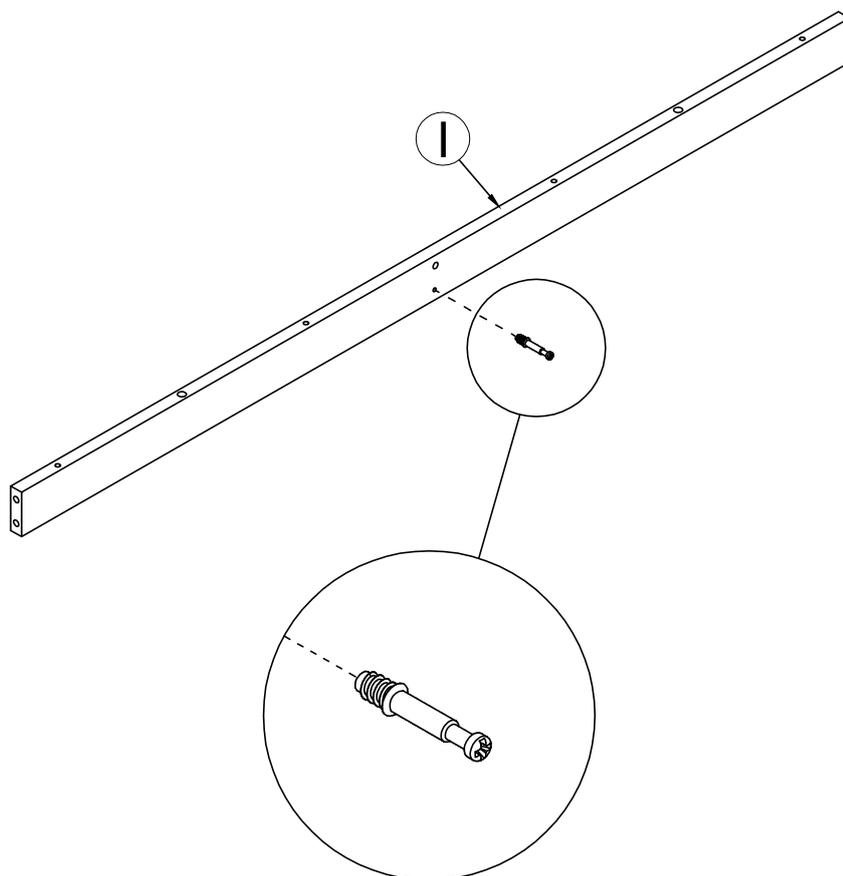


x2

Step 10:


* Attach the MIDDLE LOWER PANEL (K) to the FRONT & BACK LOWER PANEL (I) by the Two KD LARGE CAM (2) ,Two COVER CAP (3) ,Two WOOD DOWEL (4)

②




(2 PCS)

③




(2 PCS)

④





(2 PCS)

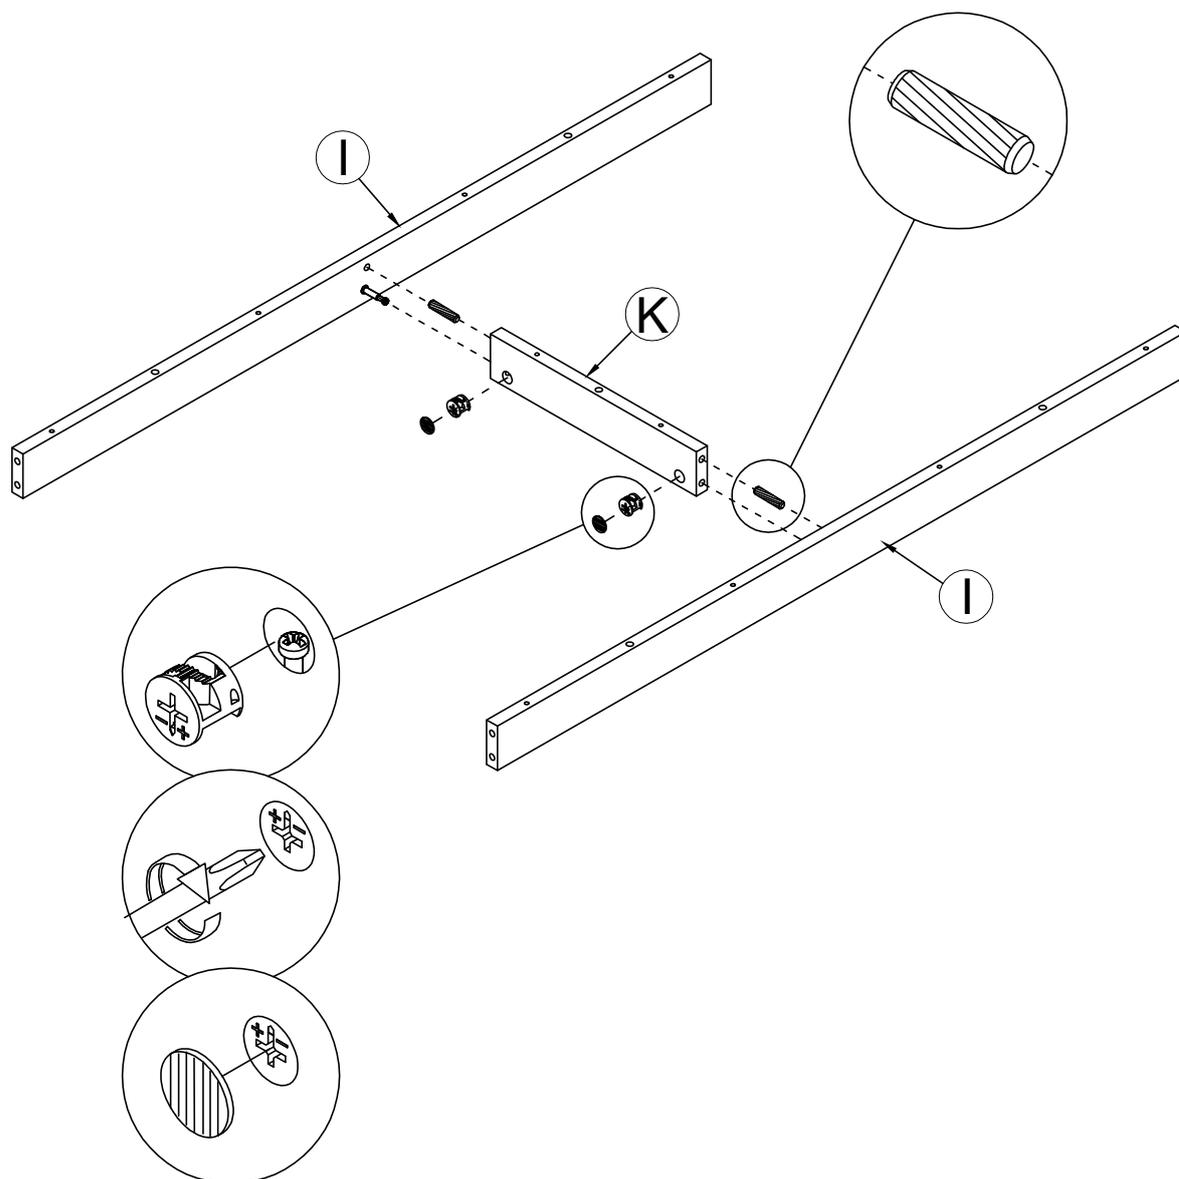

Step 11:

* Attach the LEFT & RIGHT LOWER PANEL (J) to the MODULE step 10 by the Eight WOOD DOWEL (4) and Four I BRACKET (14), Eight SCREW (10)

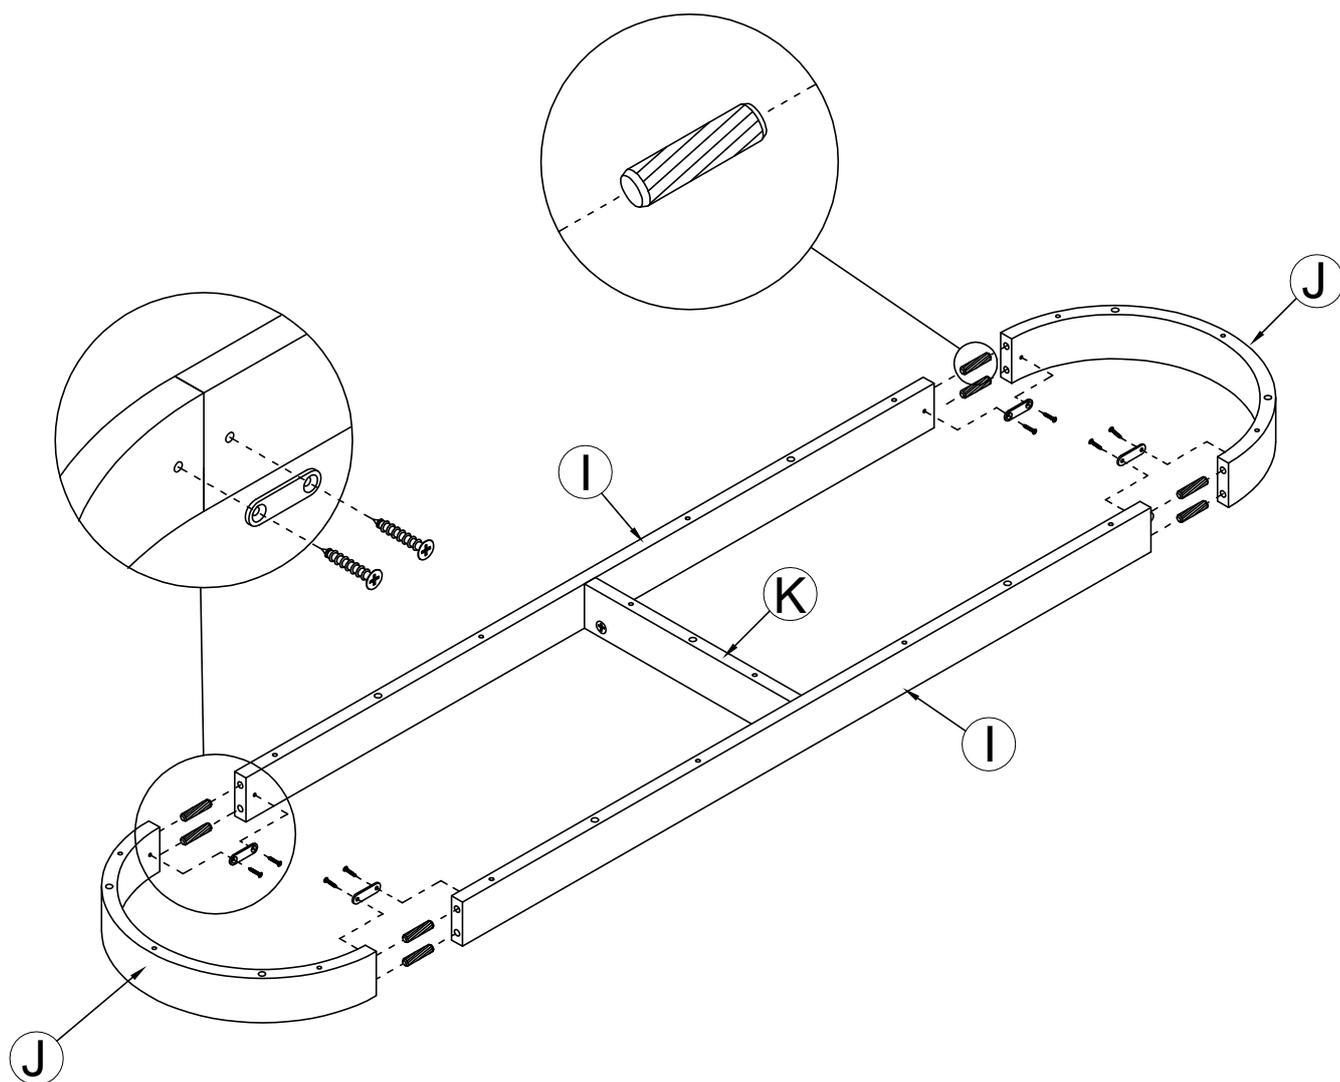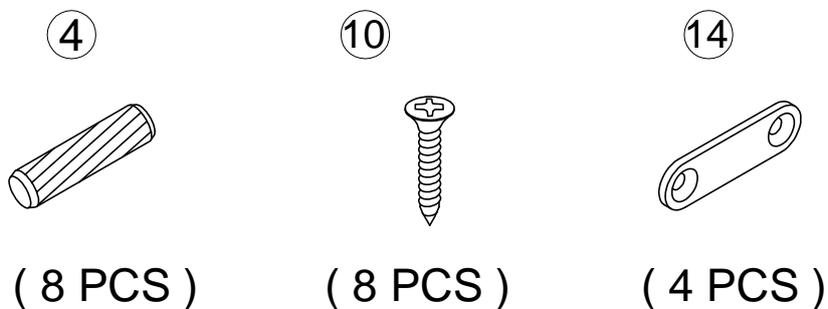


Step 12:

* Install module at step 11 to the LEFT FRAME (C), RIGHT FRAME (D) and BOTTOM PANEL (G) by the sixteen SCREW (22) and nine WOOD DOWEL (4)


4

22



(9 PCS)

(16 PCS)

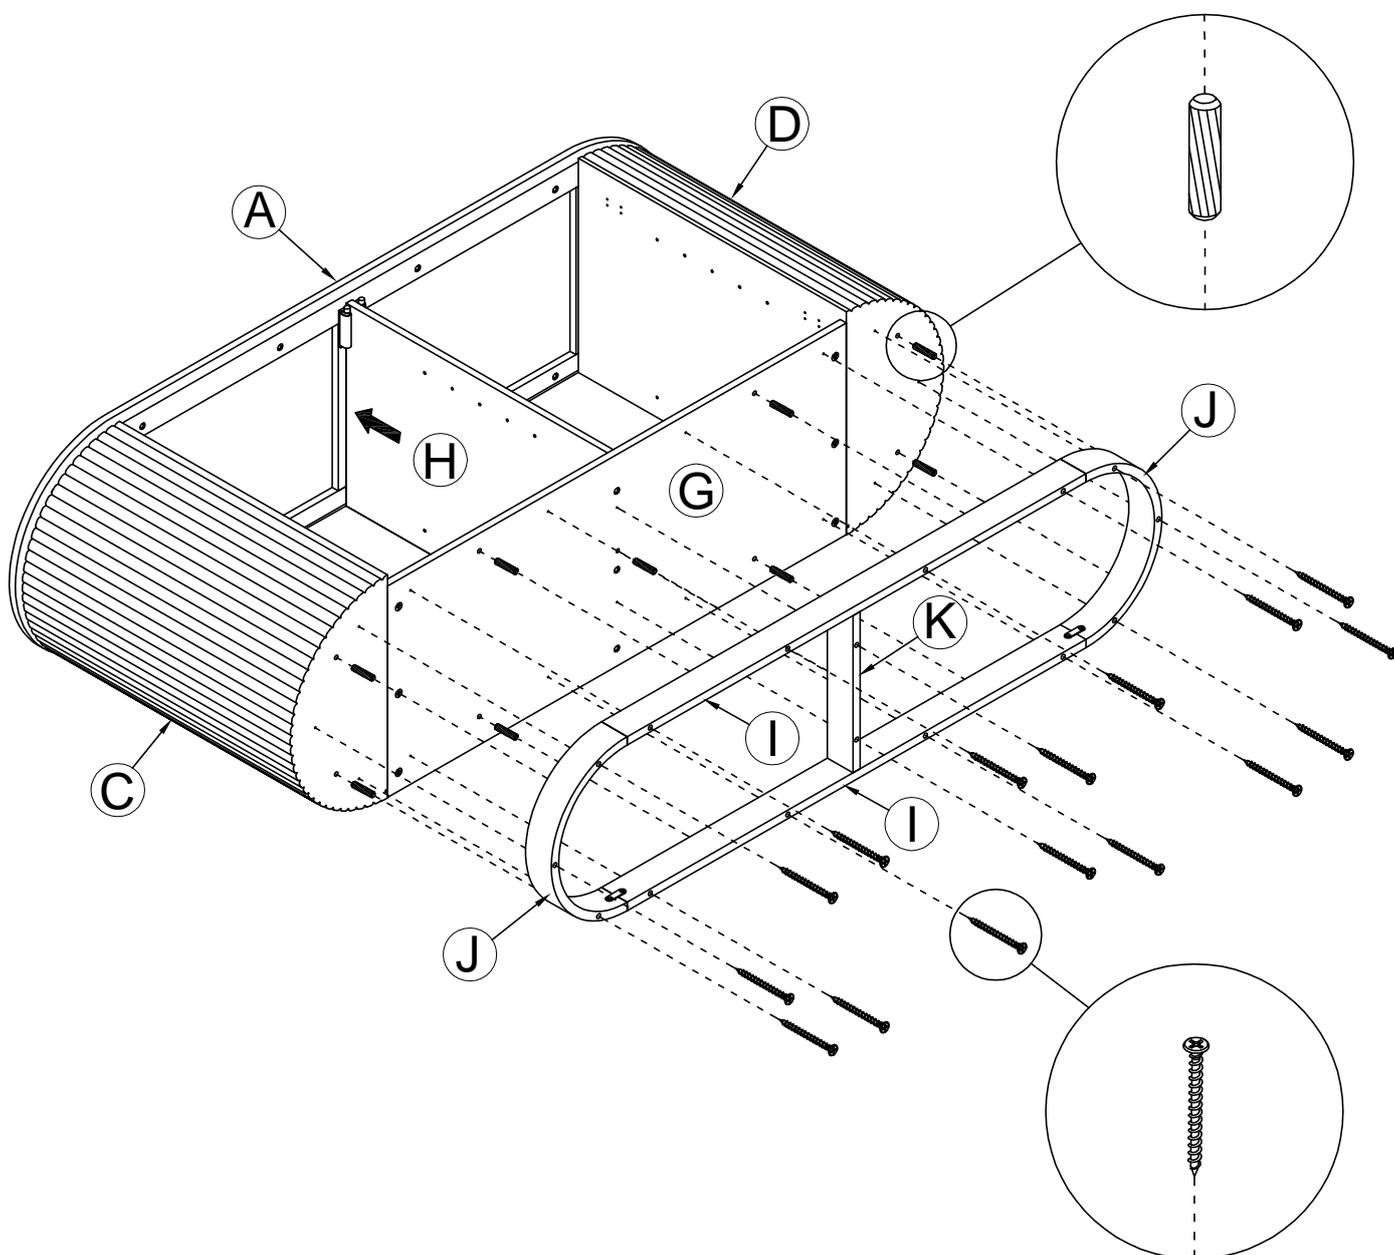

Step 13:

- * Insert two EURO HINGE (19) to the LEFT DOOR (L) by the four SCREW (8)
- Insert two EURO HINGE (19) to the RIGHT DOOR (M) by the four SCREW (8)
- Insert two FRONT OVERLAY (20) to the DOOR by the Two SCREW (7)

7



(2 PCS)

8



(8 PC)

19




(4 PCS)

20




(2 PCS)

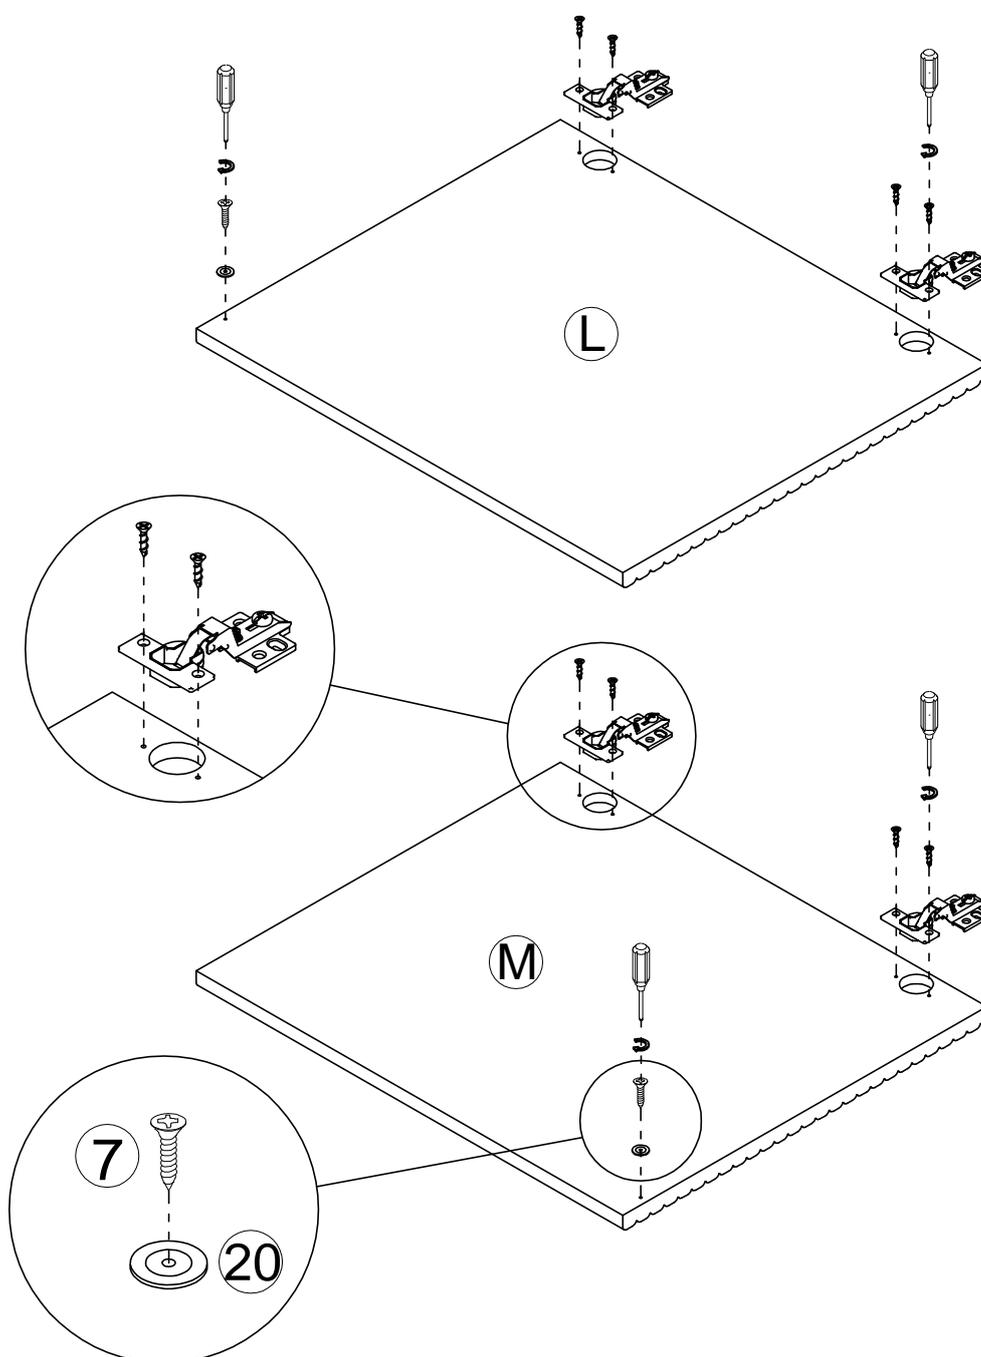


Step 14:

* Assemble the LEFT DOOR (L) & RIGHT DOOR (M) at step 13 to LEFT FRAME (C), RIGHT FRAME (D) by the sixteen SCREW (8)

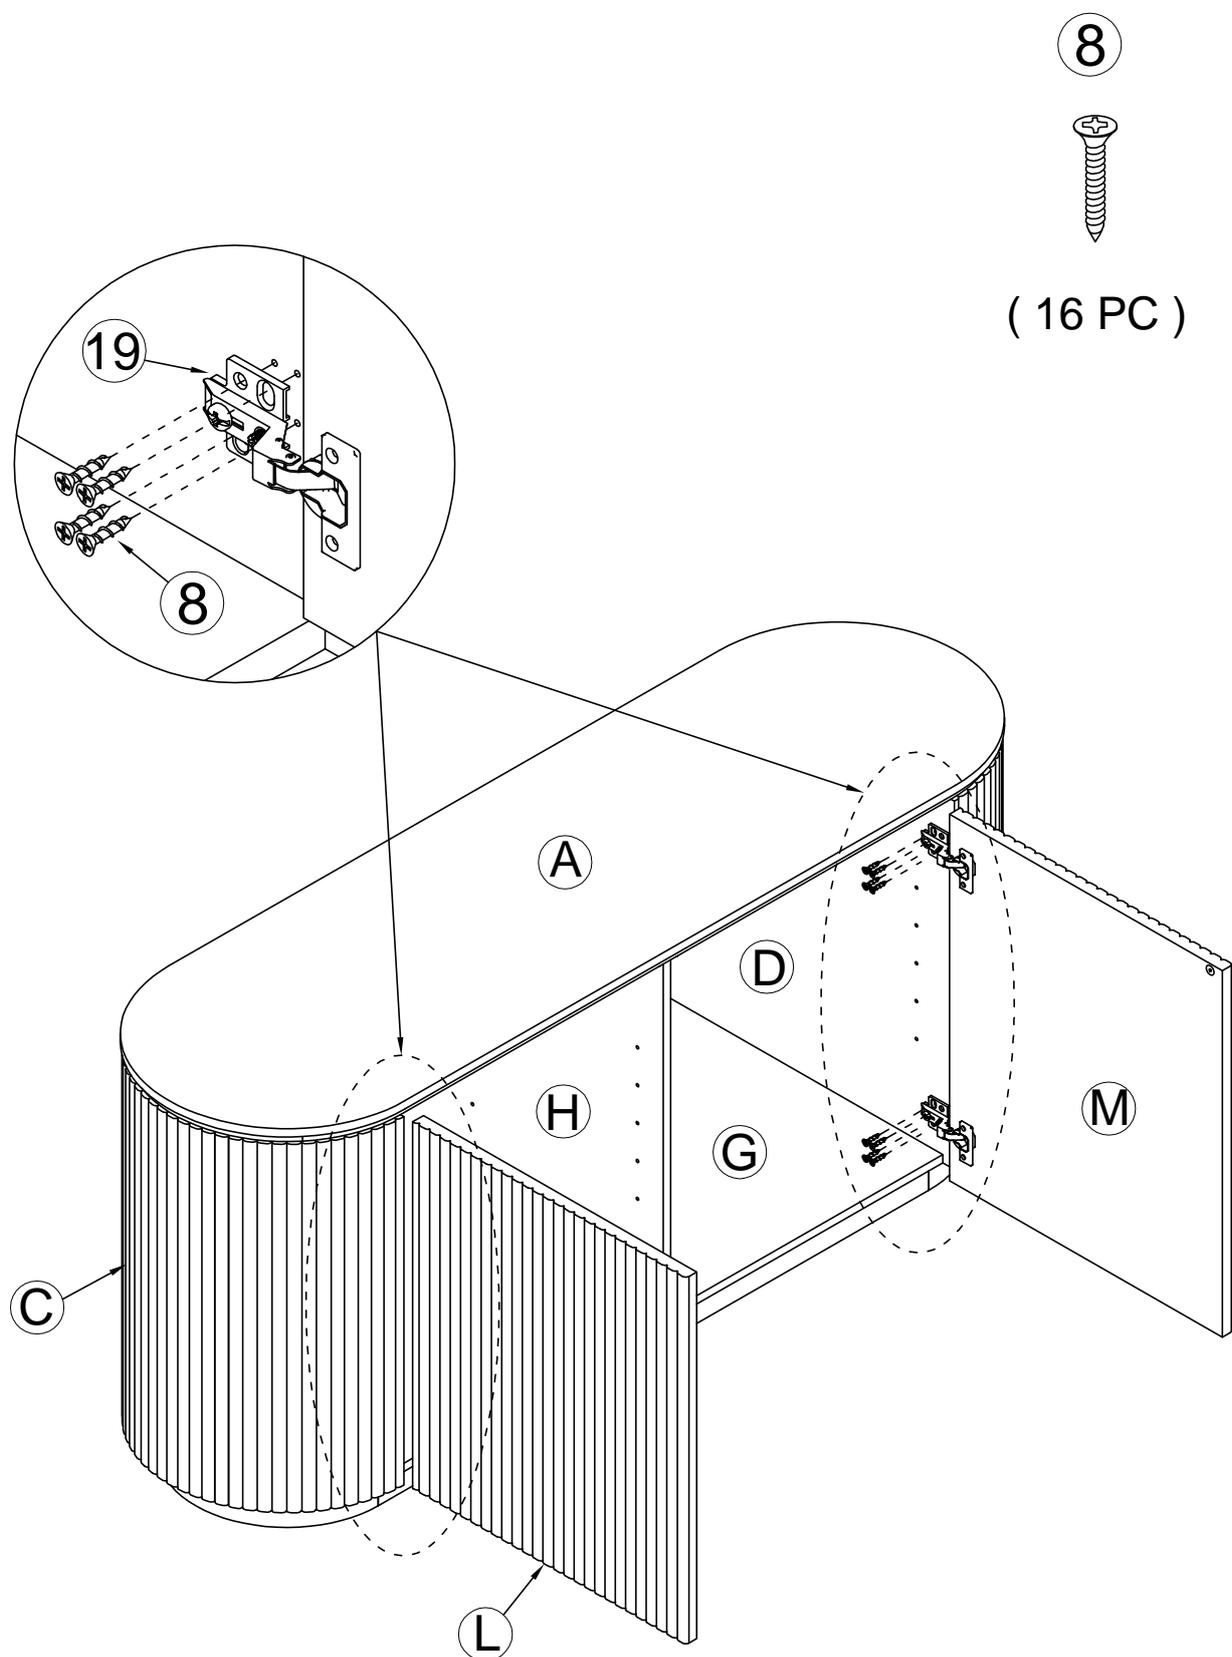

Step 15:

* Insert 2pcs SHELF PIN (12) to the LEFT FRAME (C), RIGHT FRAME (D) and MEDIAN PANEL (H). Then put the two ADJUSTABLE SHELVES (F) on shelf pin

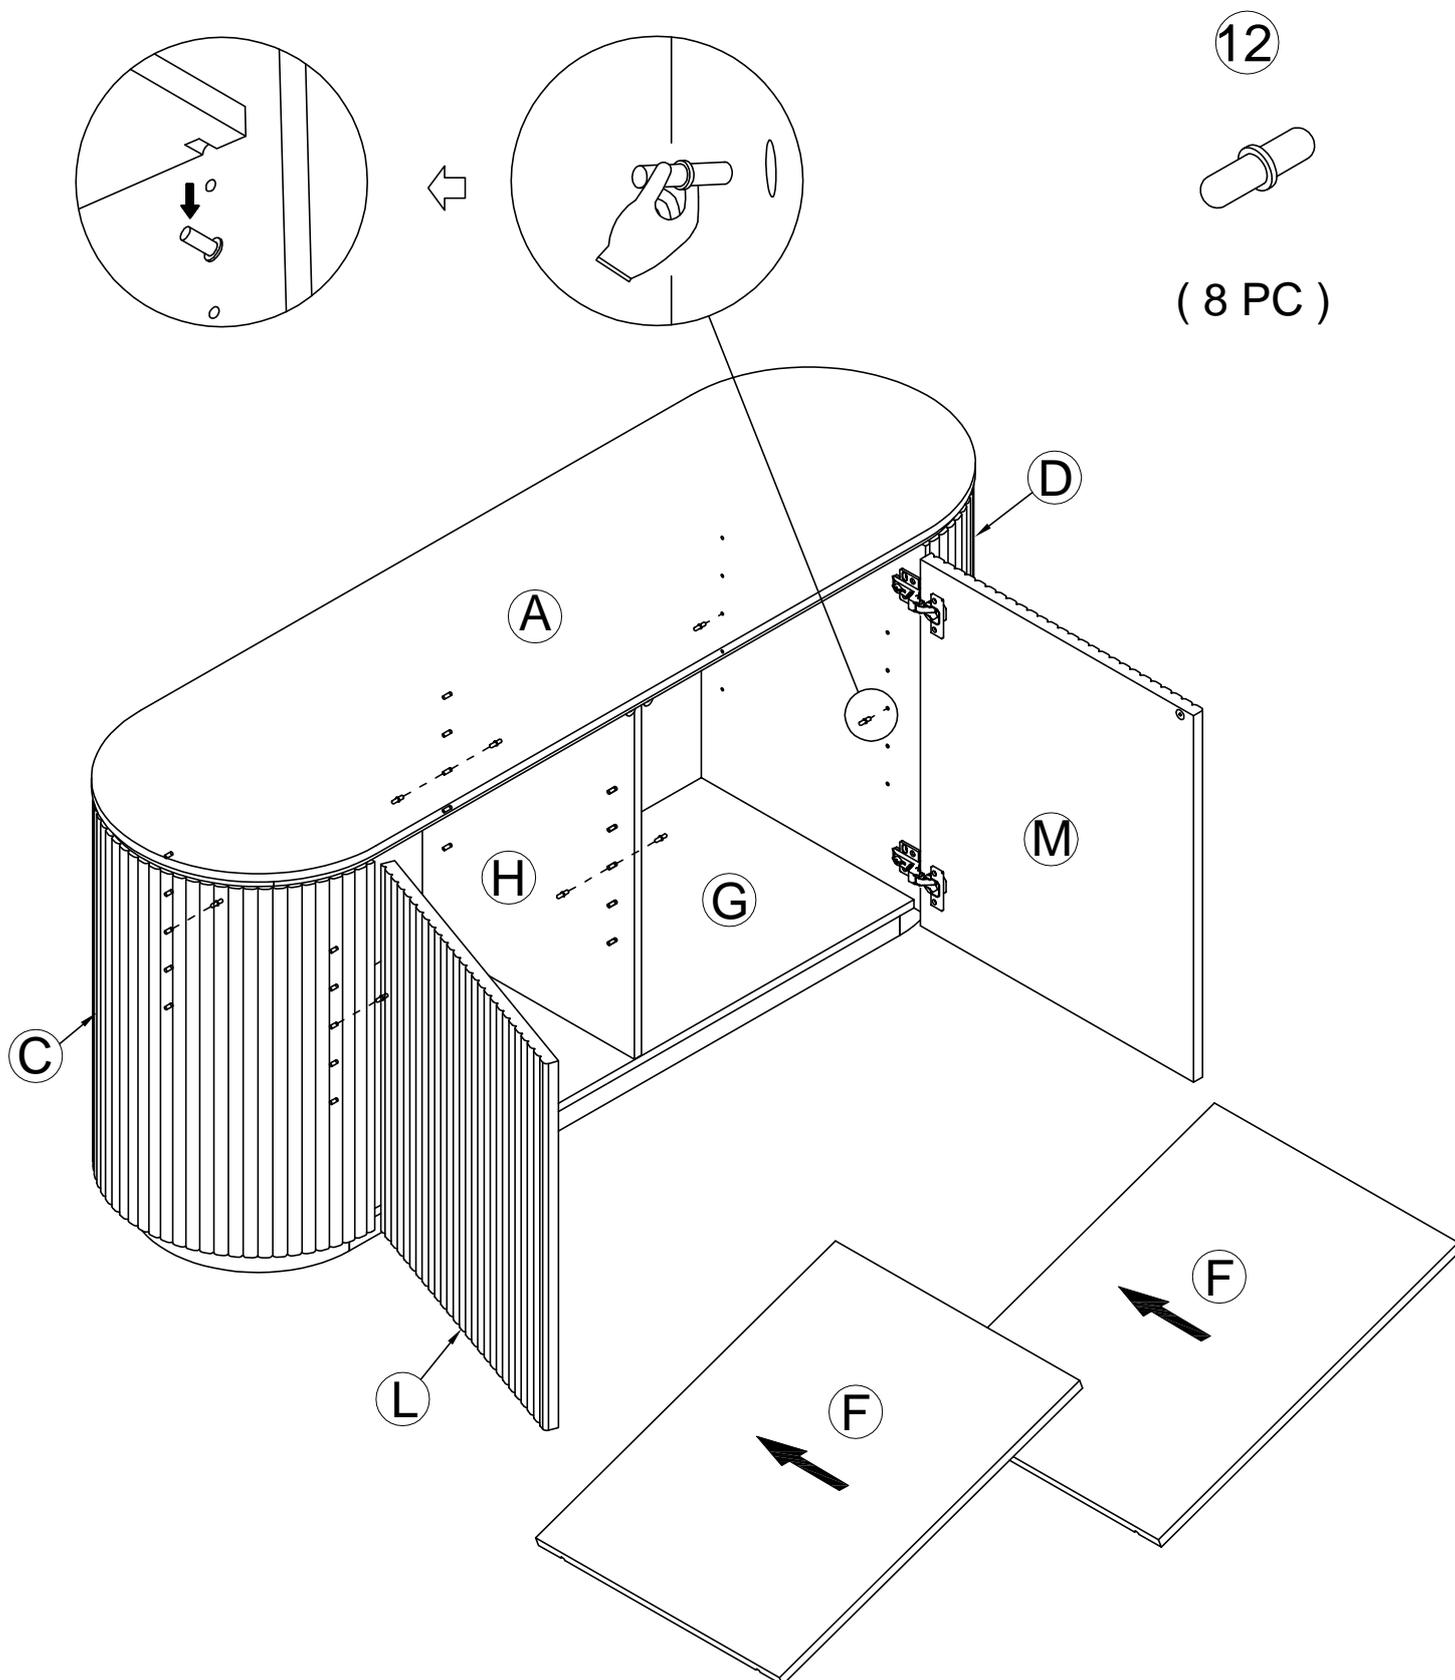

Step 16:


* Insert sixteen PLASTIC WEDGE (13) to the BACK PANEL (E) by the sixteen SCREW (9)

9




(16 PC)

13




(16 PC)

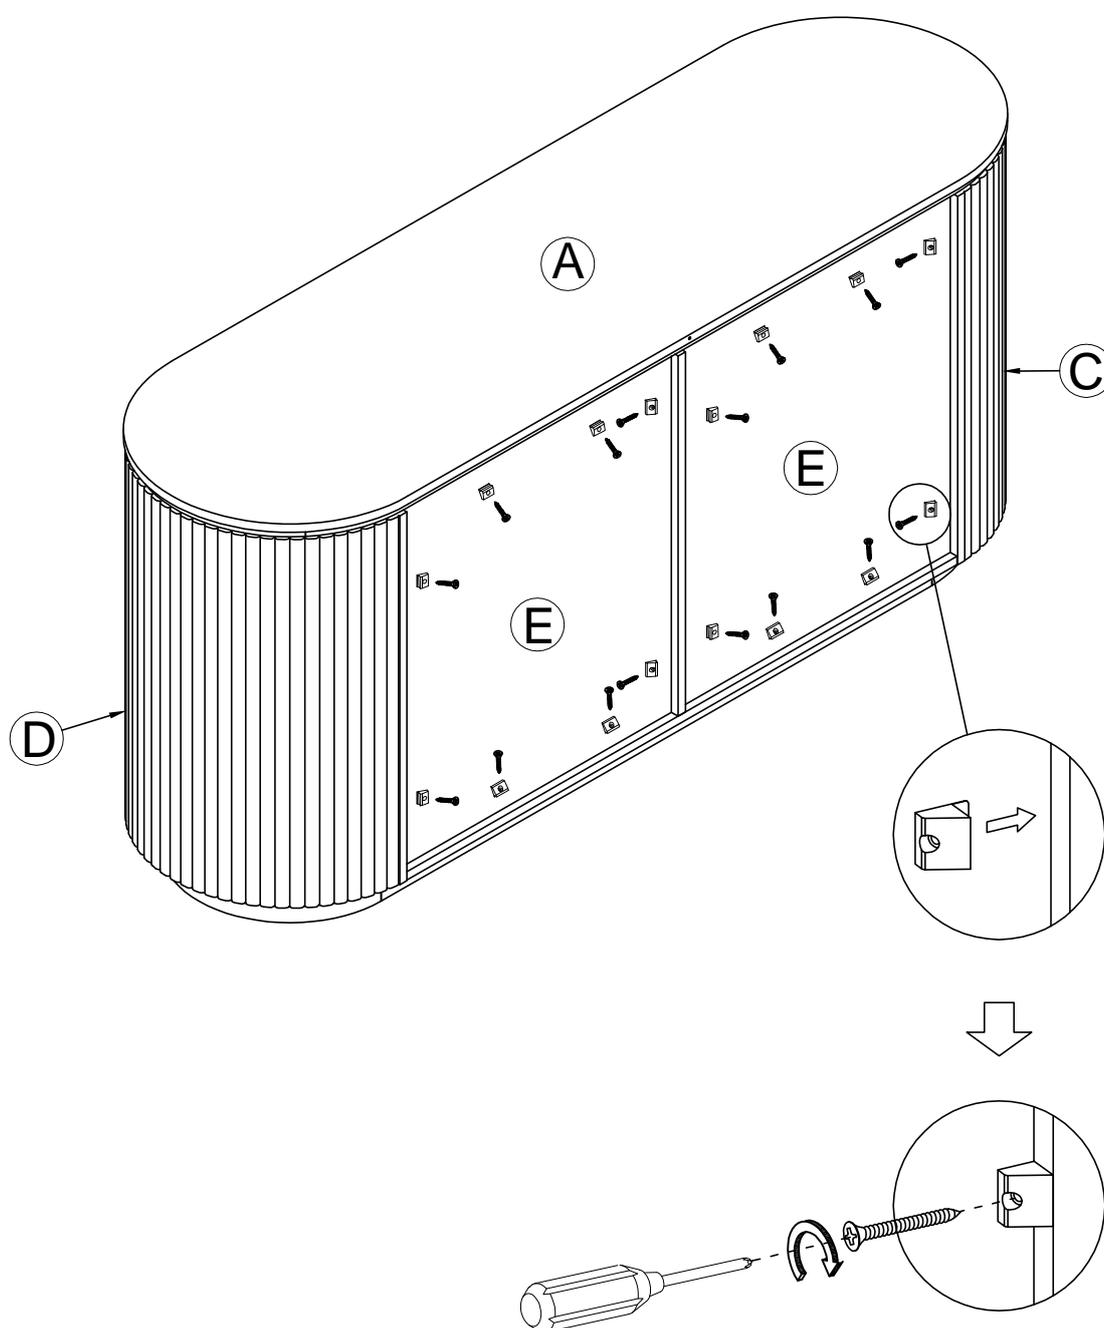

Step 17:


* Attach anti-tipping straps (15) to the back of the stand.

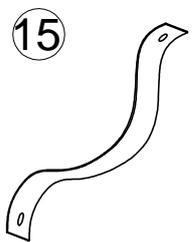

(2 PCS)



(2 PCS)

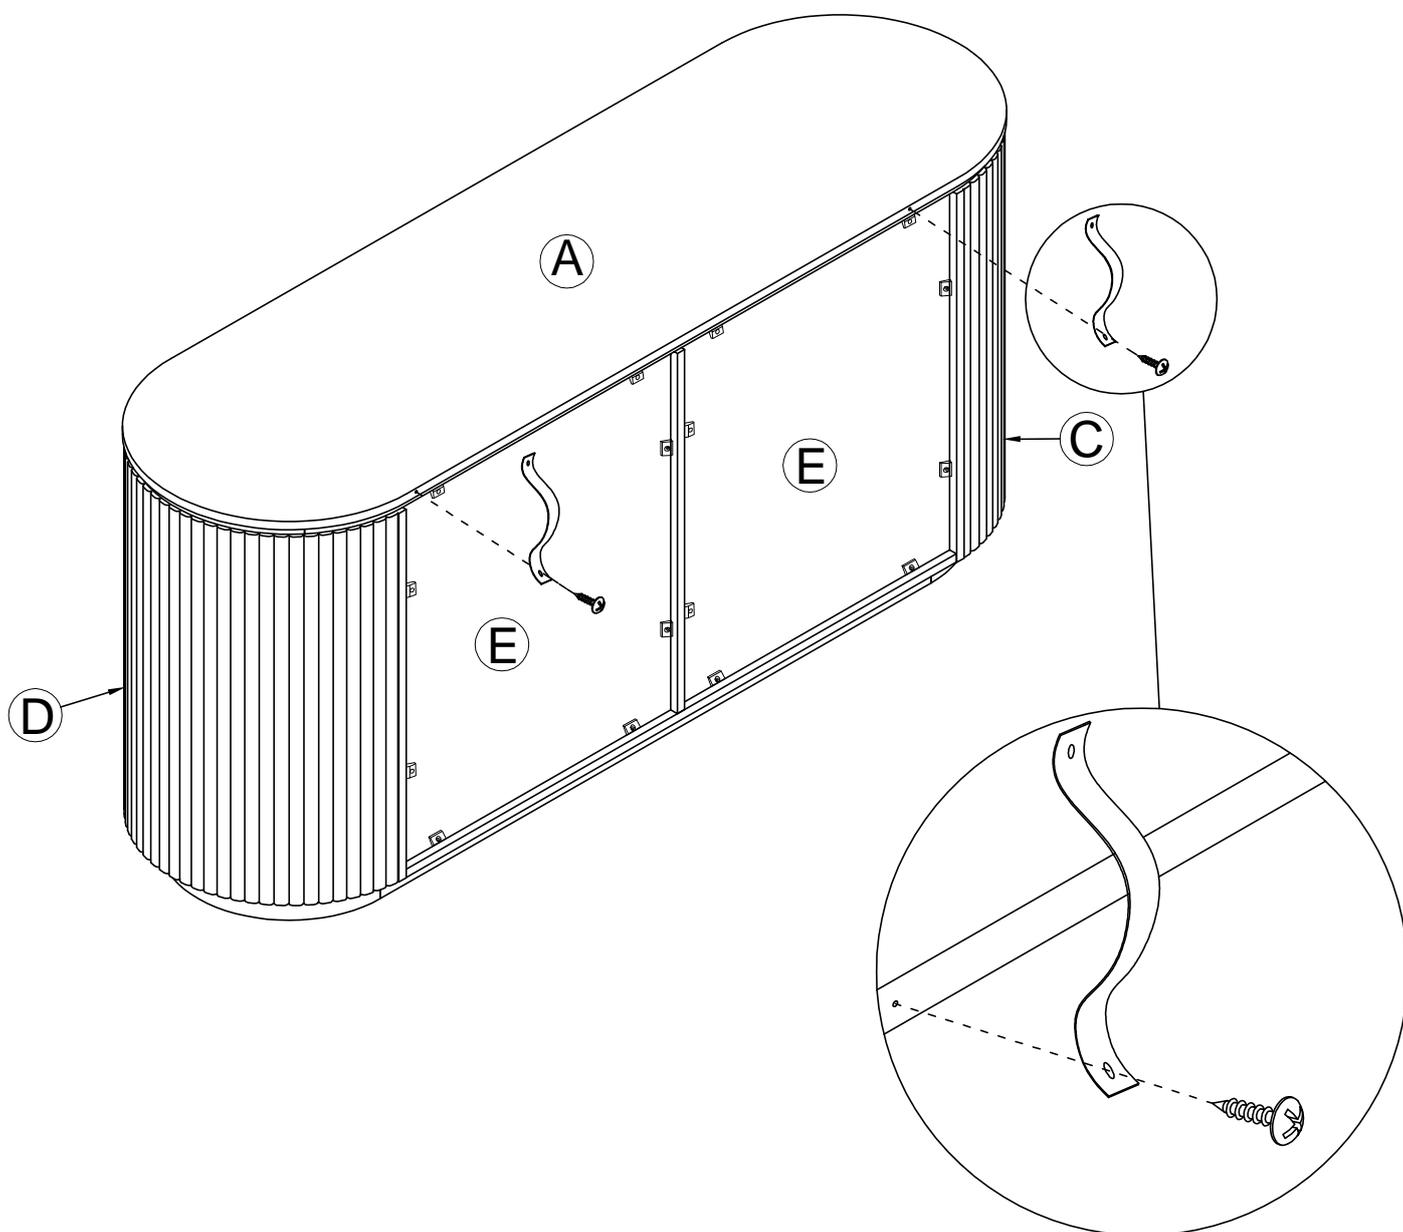

Step 18:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (16) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

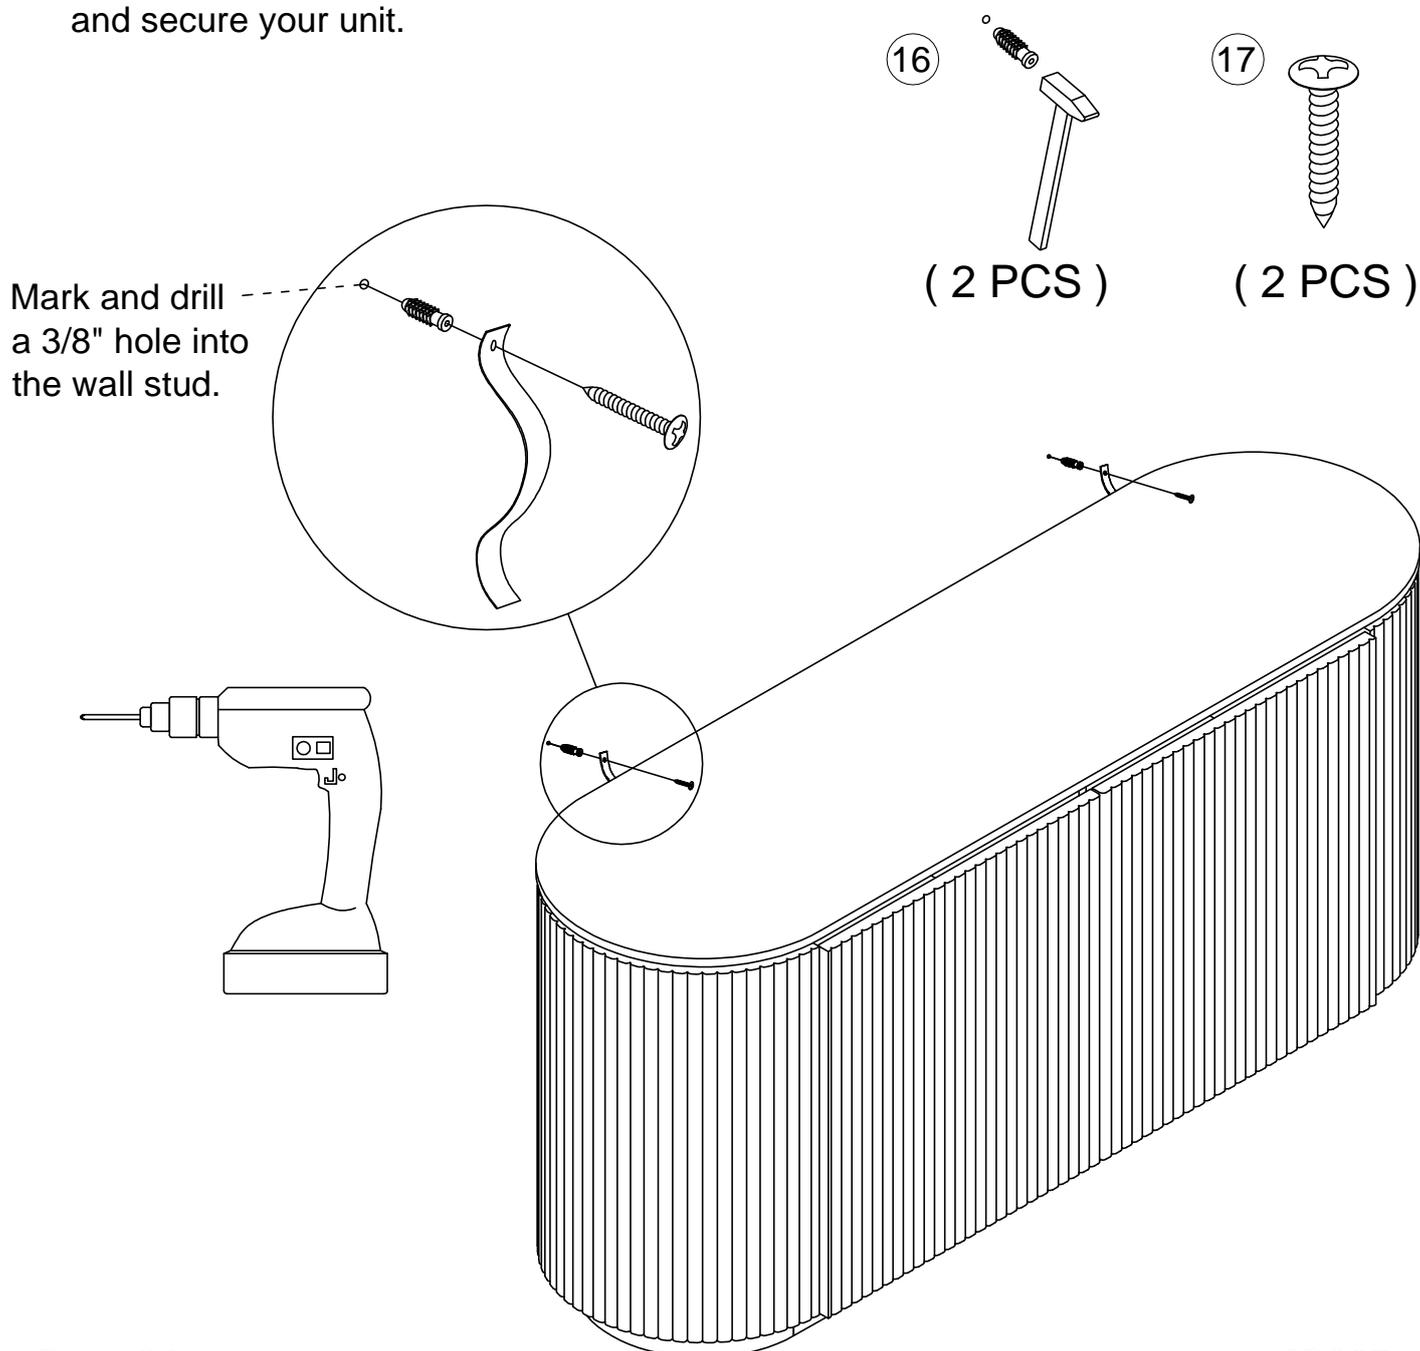



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818