





ZWJ-605 3-Tier Storage Shelf




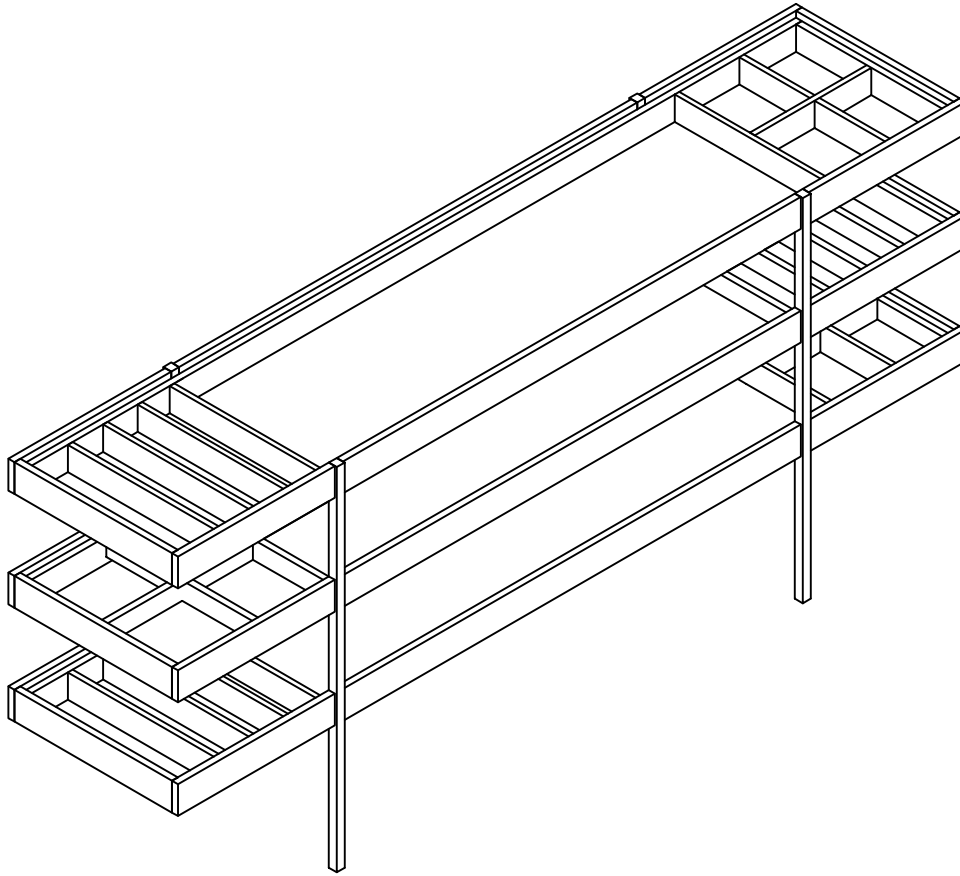


Disassembly and installation of accessories

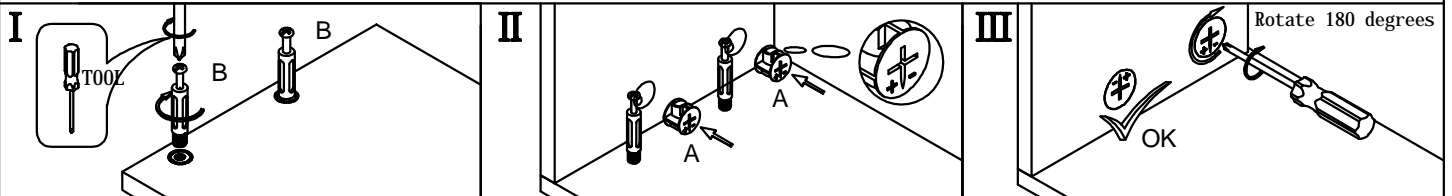


A	48PCS	B	1 PCS
			
M6*30		5mm	

Parts list

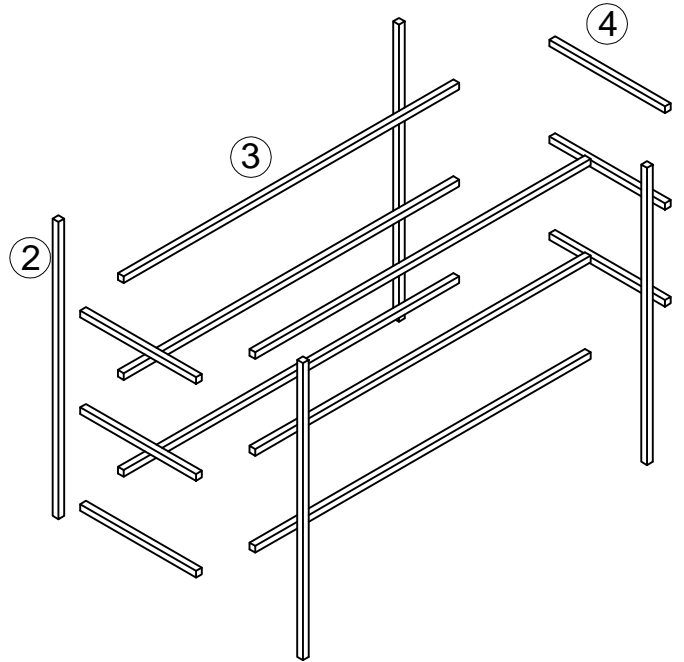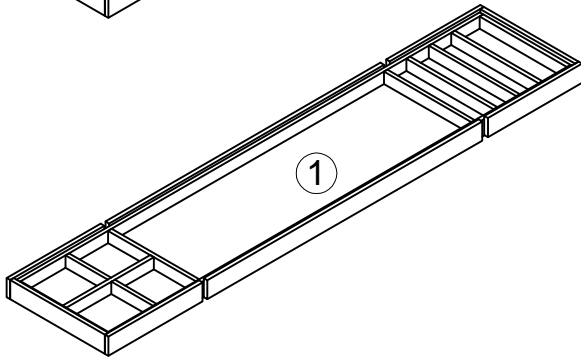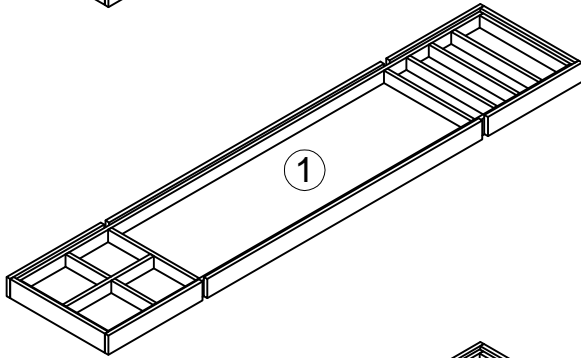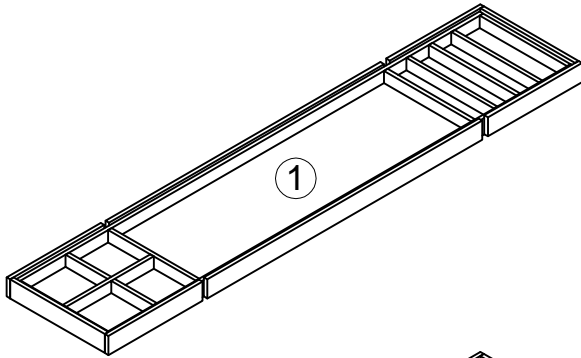

1

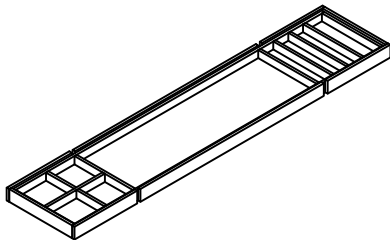


3PC

2




4PC

3

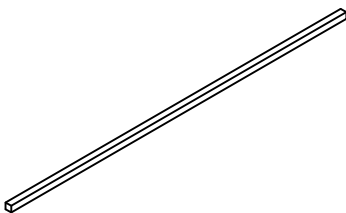


6PC

4

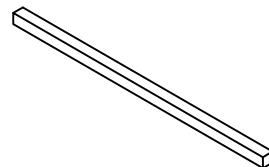




6PC

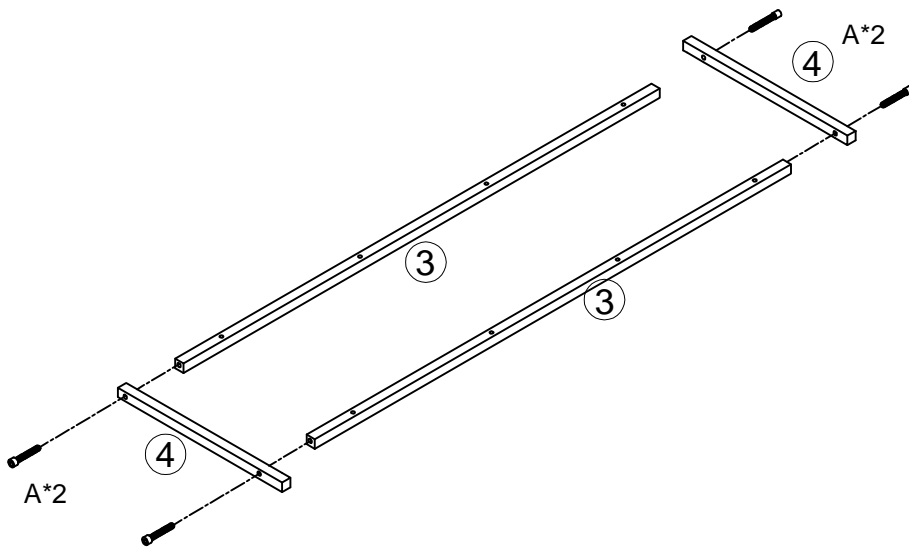STEP 1

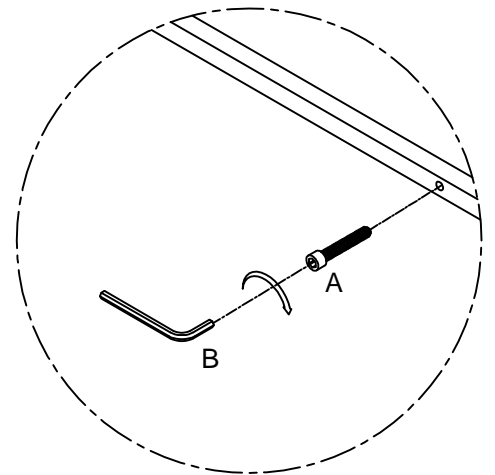


Attach hardware 4 to both sides of hardware 3 using fitting A; as shown, use fitting B to assist the installation of fitting A.
 Note: the long-side holes of hardware 3 should face upward.






A 12PCS	B 1 PCS
	
M6*30	5mm

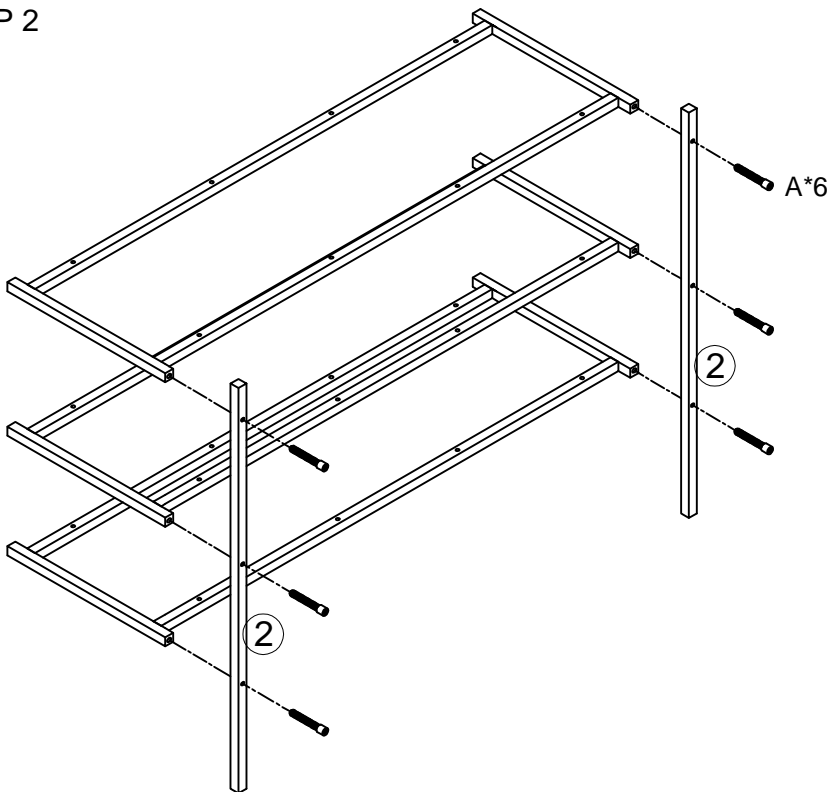STEP 2

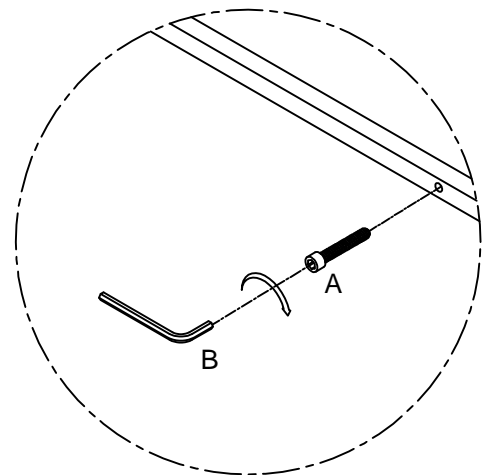

Attach hardware 2 to the frame assembled in the previous step using fitting A.






A 6PCS	B 1 PCS
	
M6*30	5mm


On the same side of hardware 3, as shown, use fitting B to assist the installation of fitting A.

STEP 3

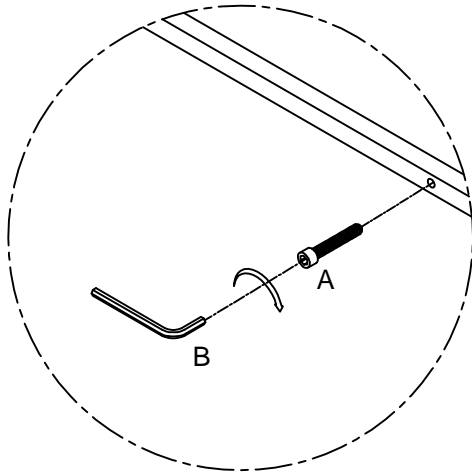Flip the hardware frame assembled in the previous step, place panel 1 onto the top of the hardware frame, and secure it with fitting A; as shown, use fitting B to assist the installation of fitting A.




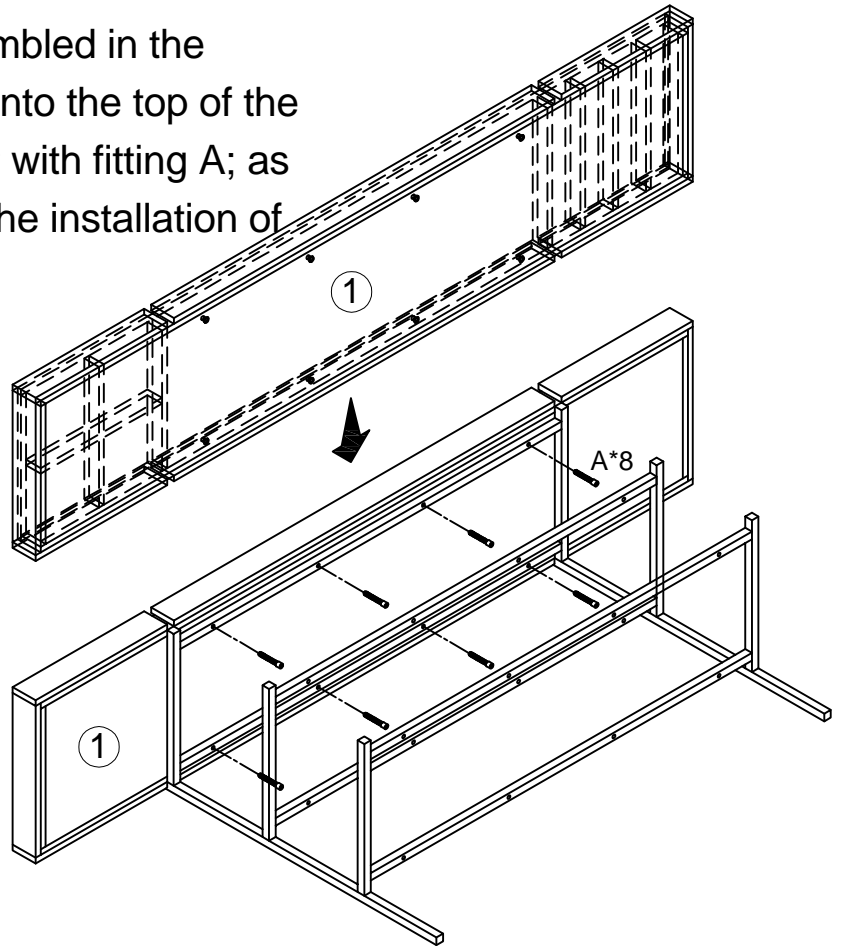

A 8PCS	B 1 PCS
	
M6*30	5mm




STEP 4

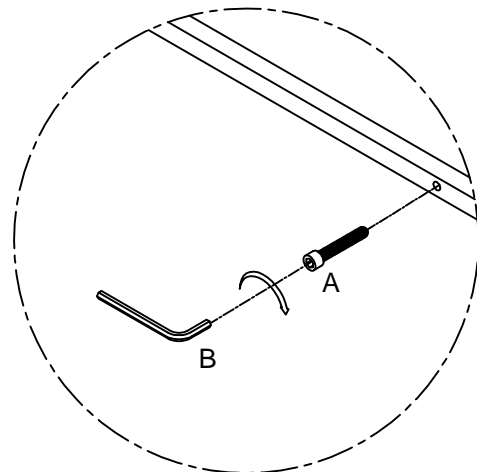Place assembled panel 1 onto the middle hardware frame and secure it with fitting A; as shown, use fitting B to assist the installation of fitting A.





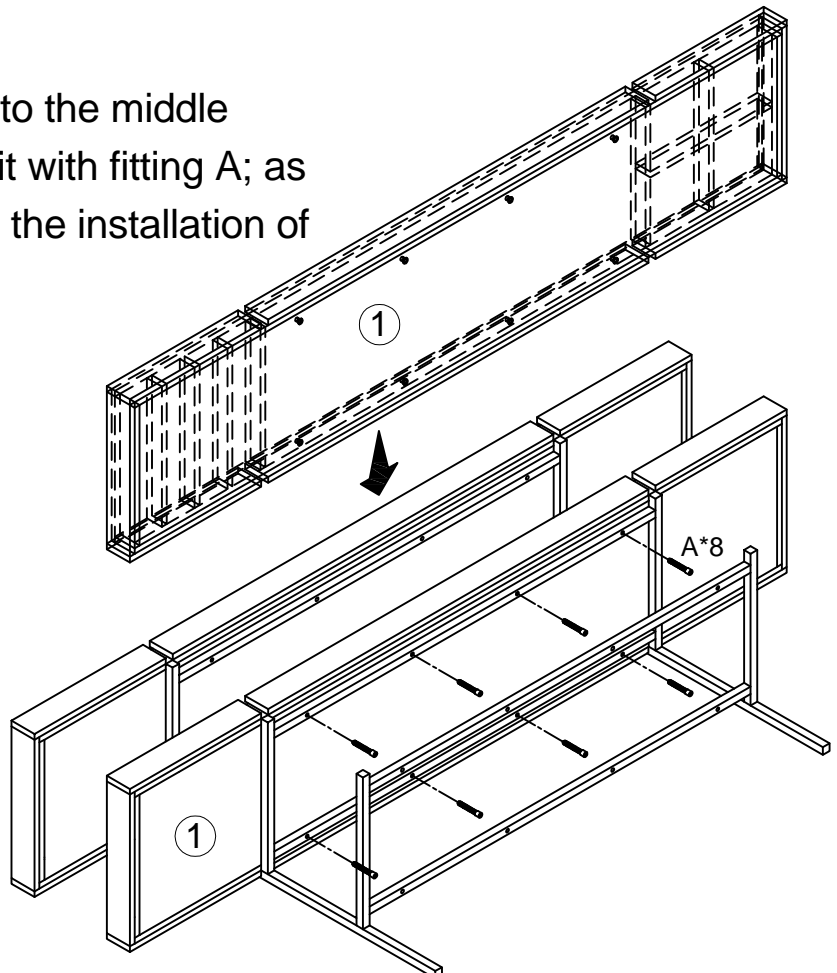

A 8PCS	B 1 PCS
	
M6*30	5mm



STEP 5

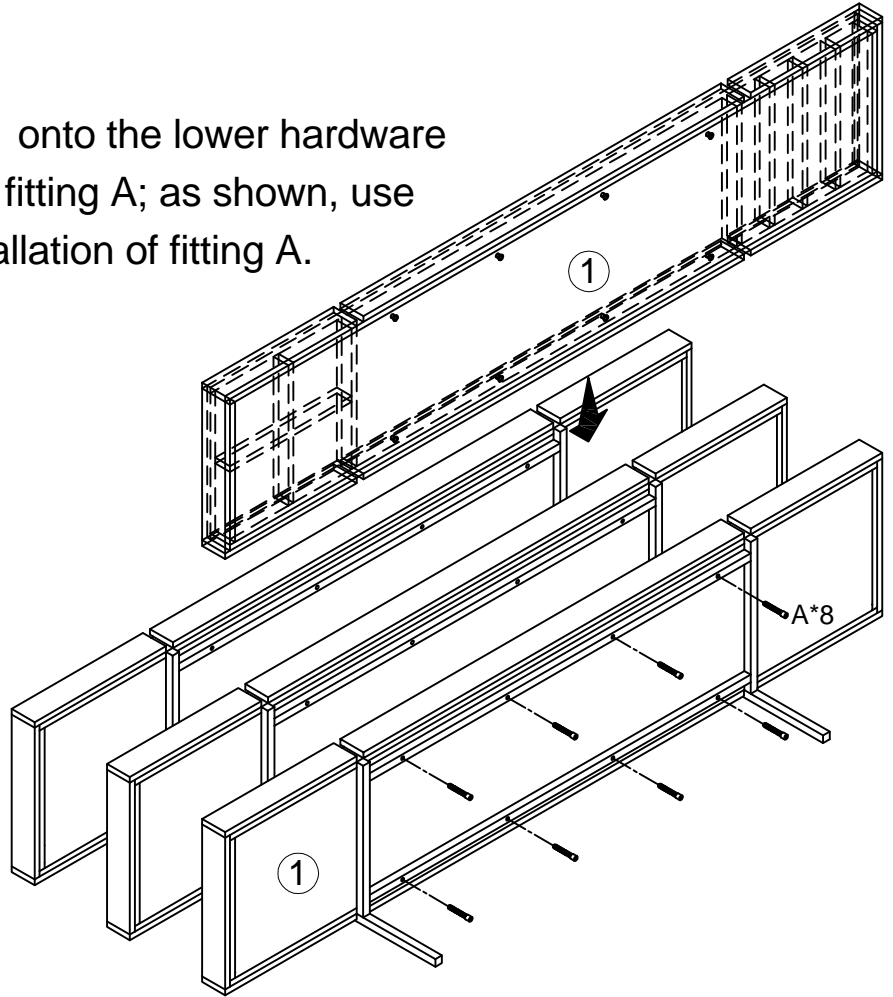
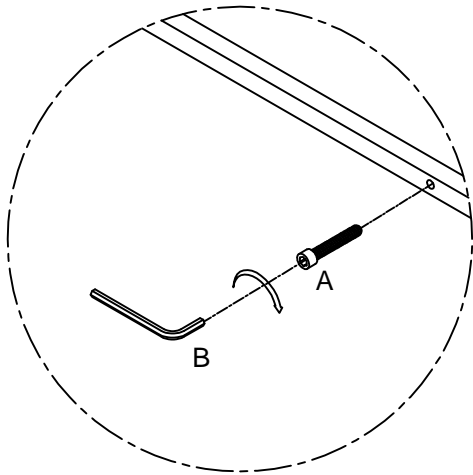
Place assembled panel 1 onto the lower hardware frame and secure it with fitting A; as shown, use fitting B to assist the installation of fitting A.






A 8PCS	B 1 PCS
	
M6*30	5mm

STEP 6

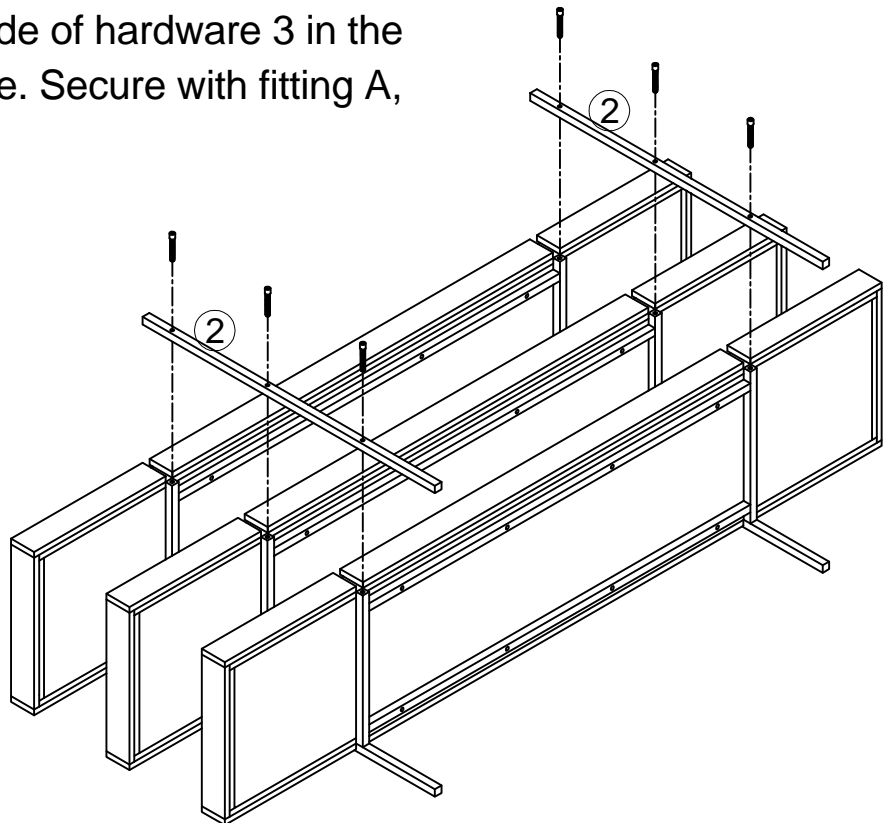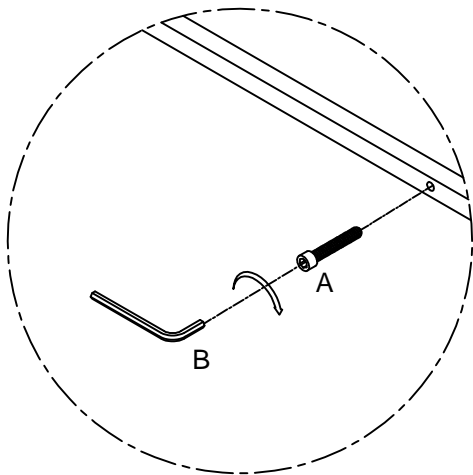Attach hardware 2 to one side of hardware 3 in the previously assembled frame. Secure with fitting A, using fitting B as shown.



A 6PCS	B 1 PCS
	
M6*30	5mm

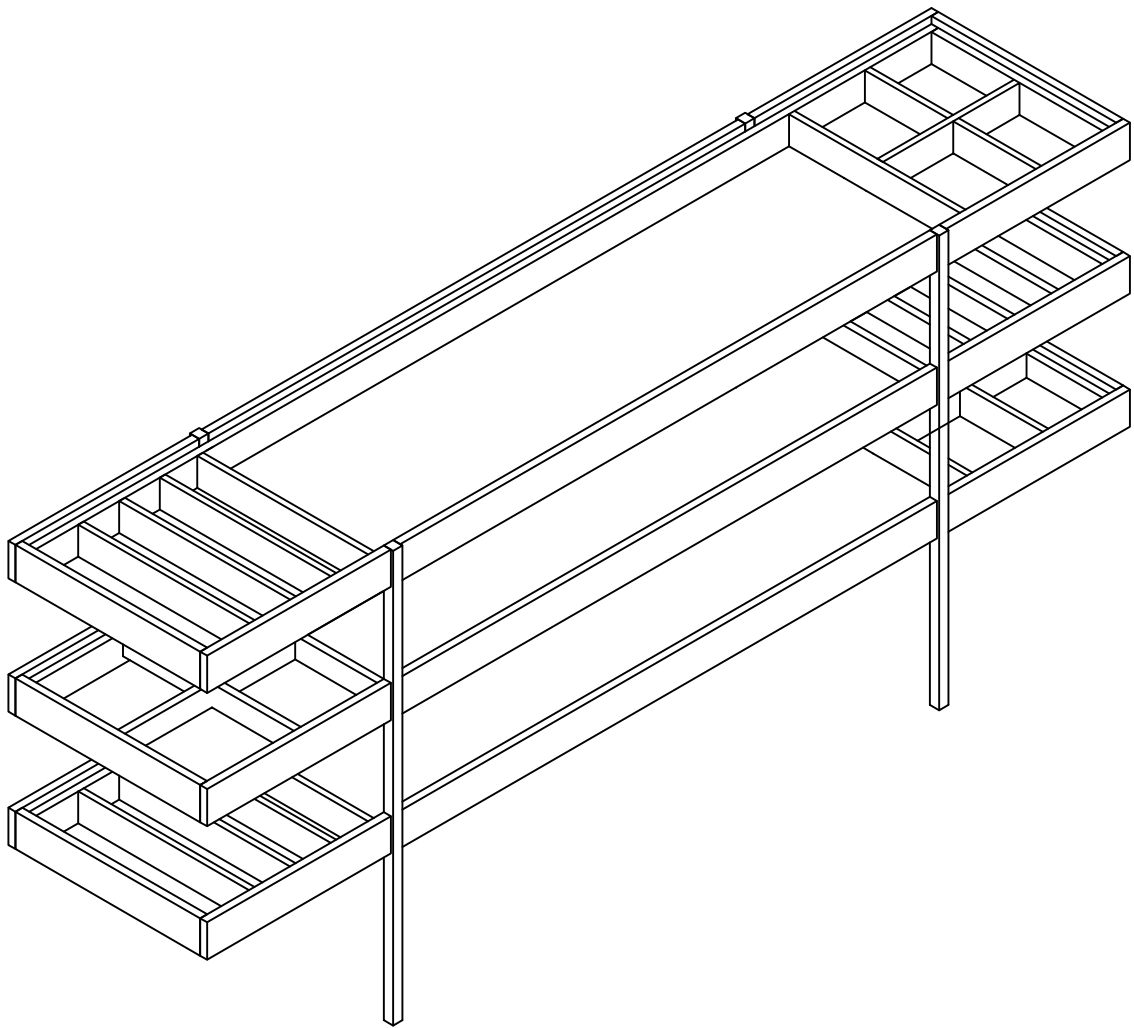

OK