

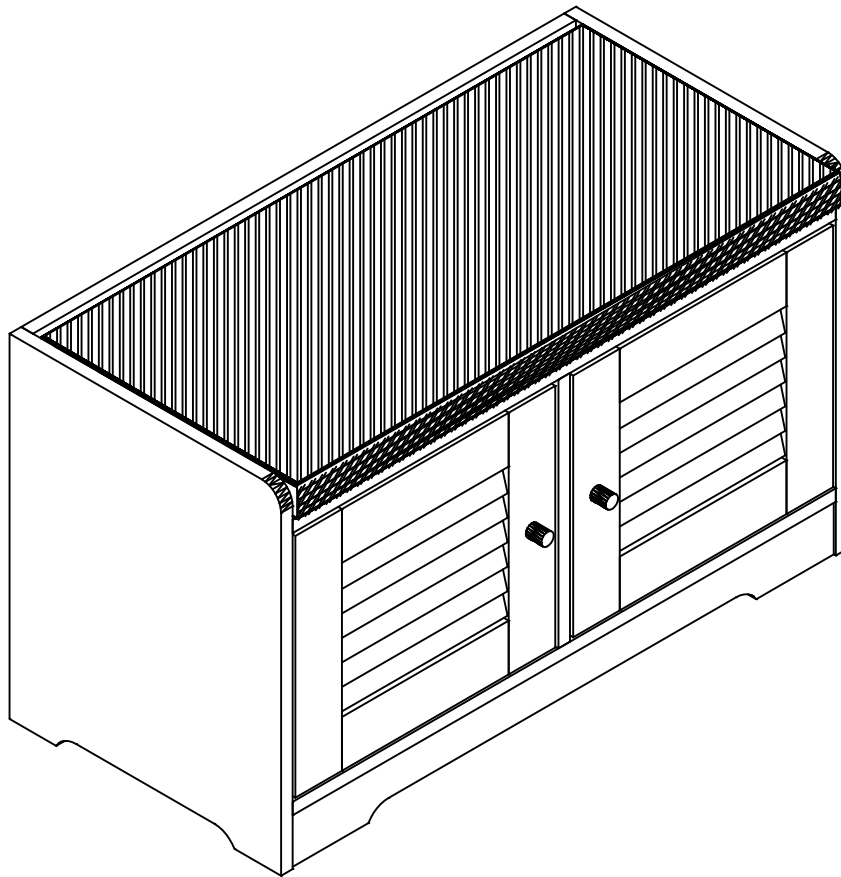
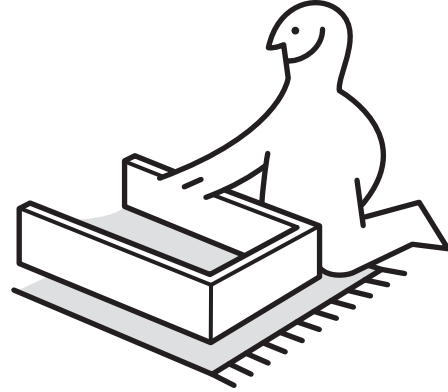



Installation & Assembly

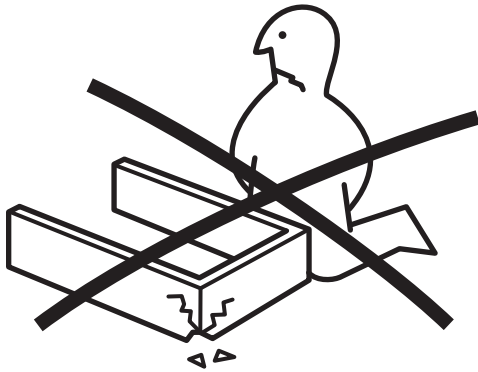

Thanks for purchasing one of our products,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

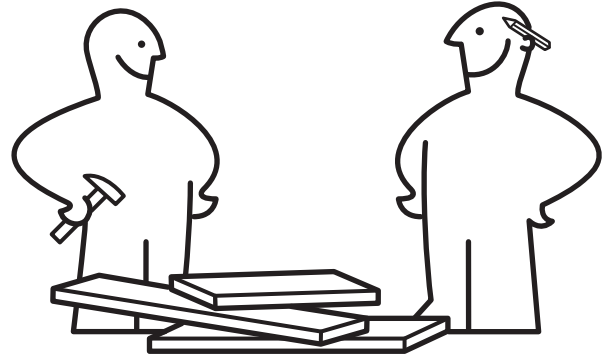


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer



To Assemble the Unit
Wooden Hammer

PAGE1
Exploded View

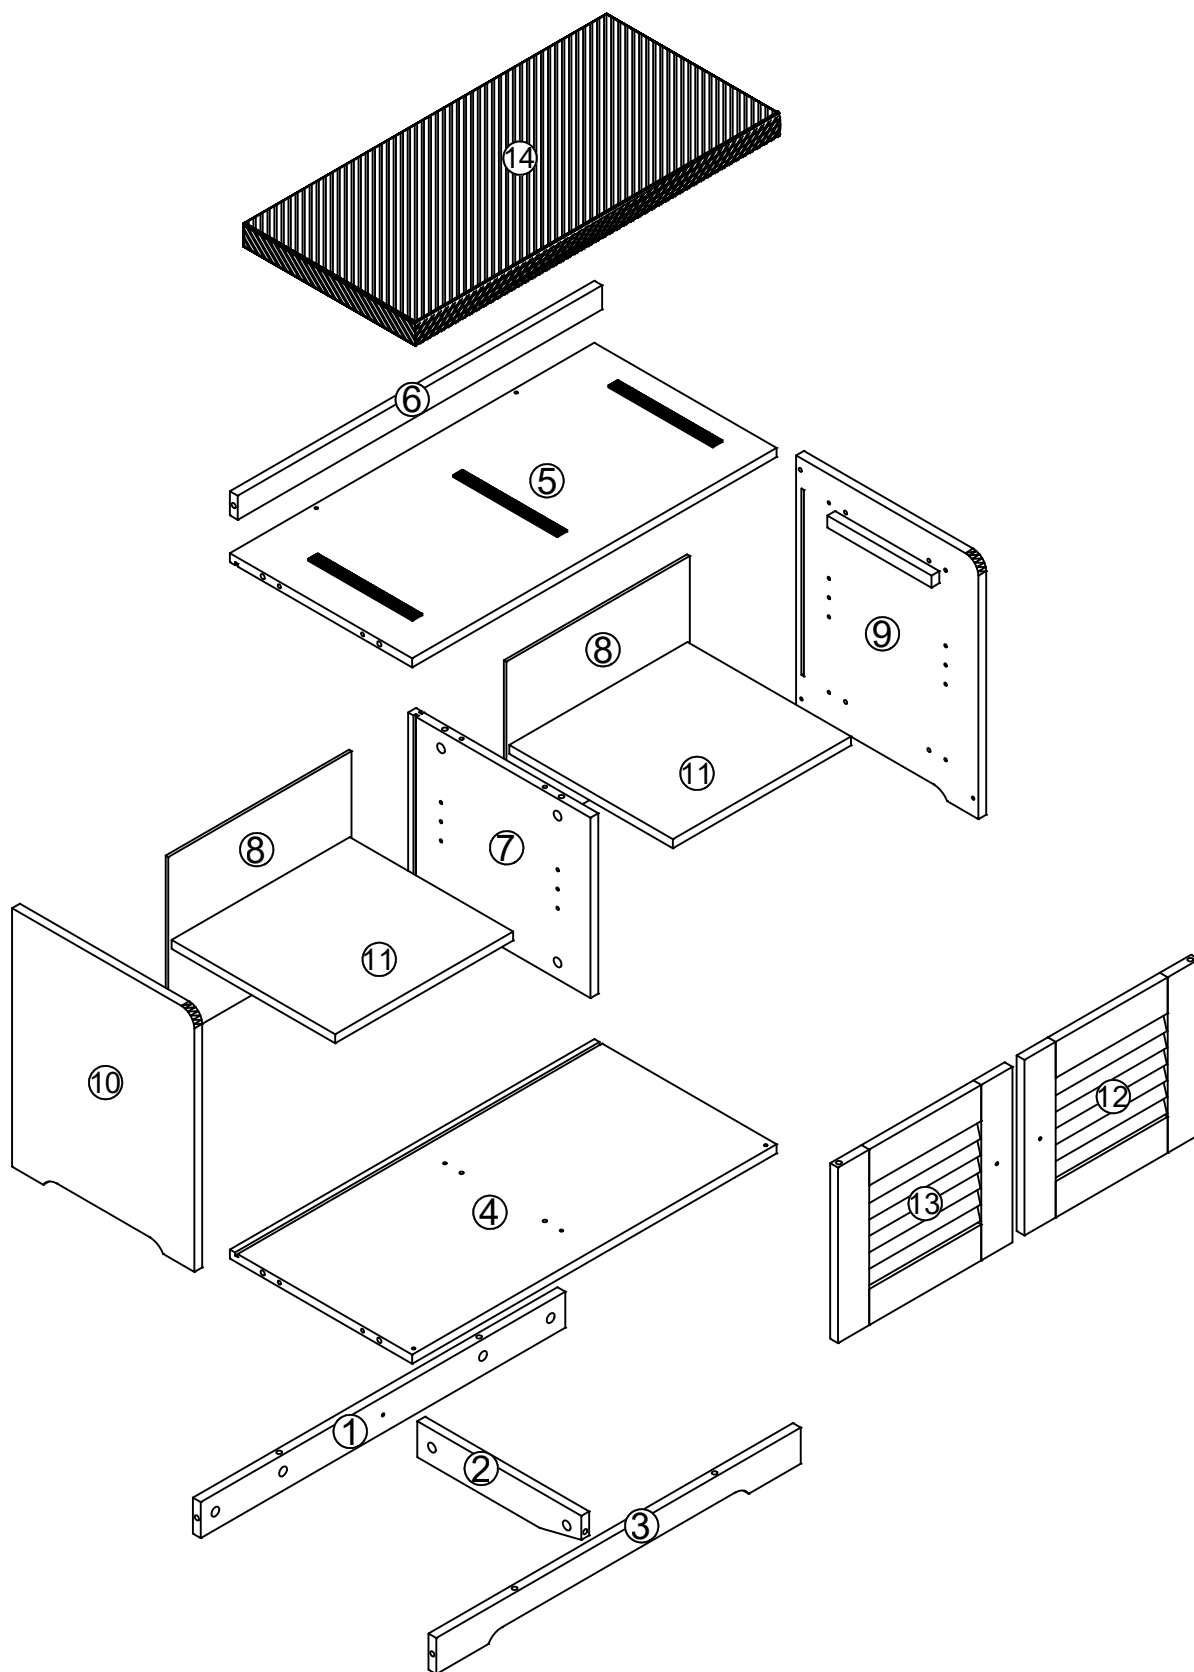


PAGE2
will require these parts


A  26+2PCS	B  26+2PCS	C  M6X30MM 12+2PCS	D  M3X16M 4+1PCS
E  M3X10M 4+1PCS	F  2PCS	G  4PCS	H  2PCS
I  M4X20M 2PCS	J   (3*16MM) 8PCS	K  8PCS	

STEP1

will require these parts

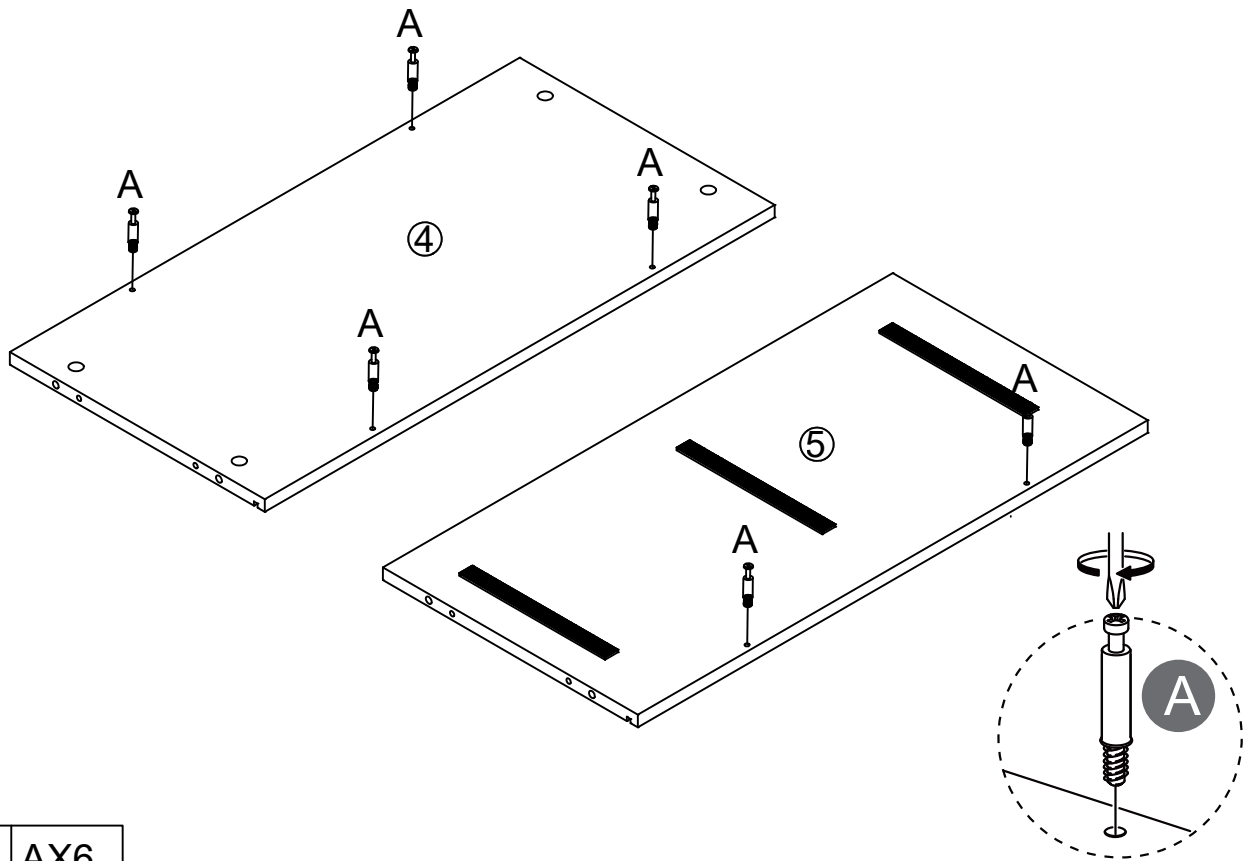


AX6

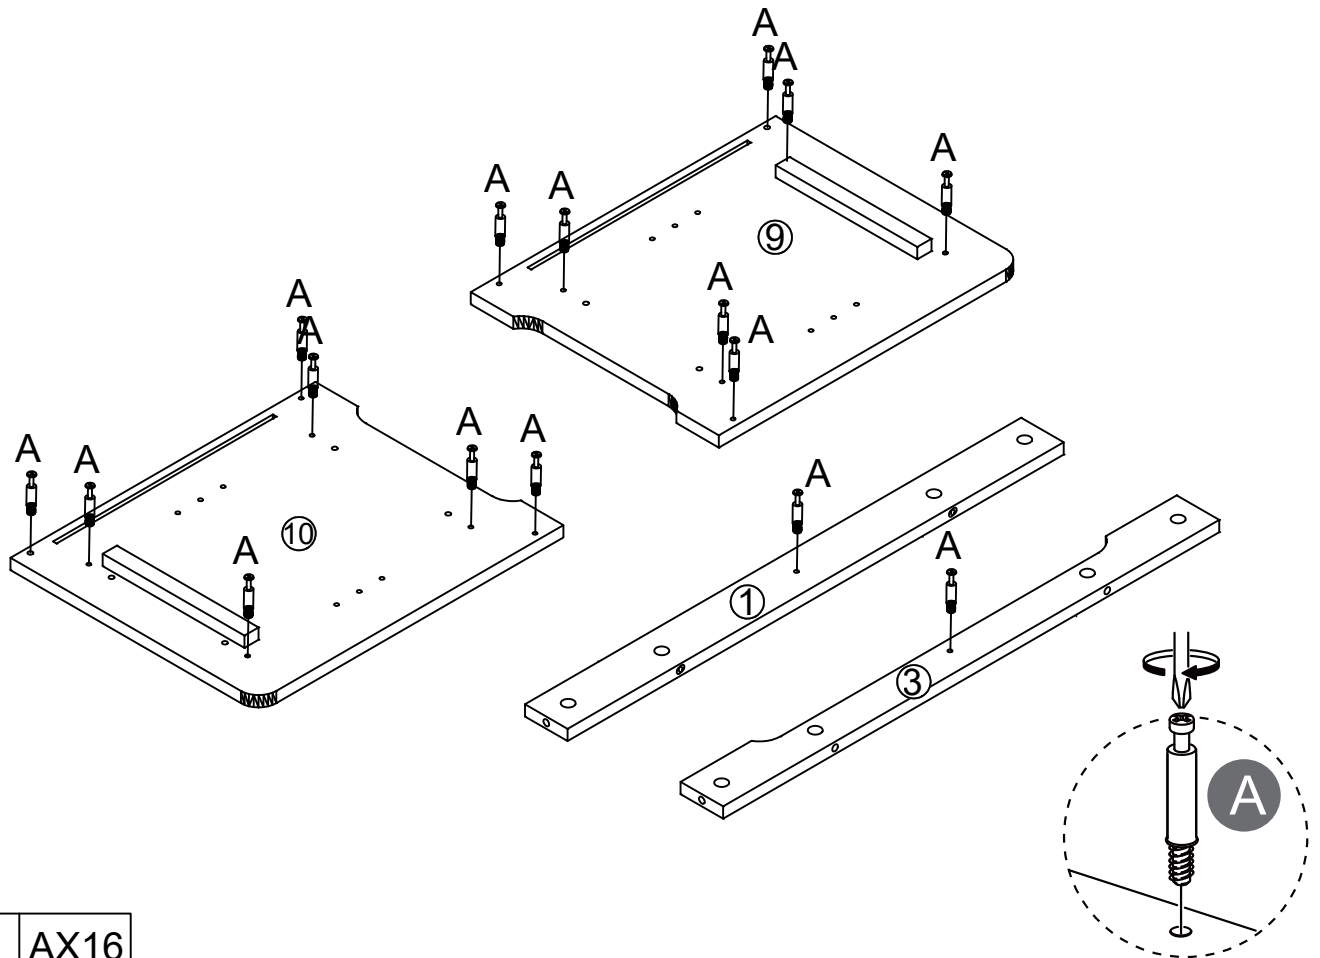

AX16


STEP2

will require these parts

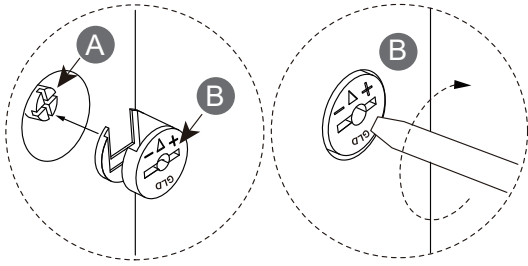


Attention:

Put **(B)** into the hole and turn **(B)** clockwise to lock **(A)** tightly.

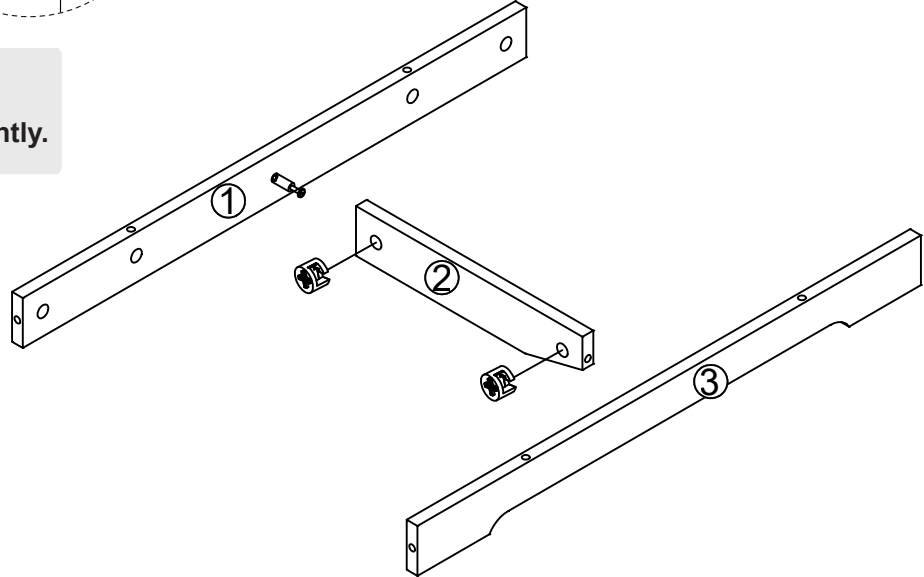


BX2

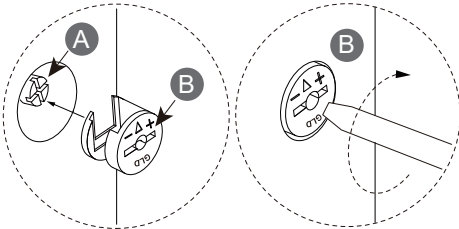

Attention:

Put **(B)** into the hole and turn **(B)** clockwise to lock **(A)** tightly.

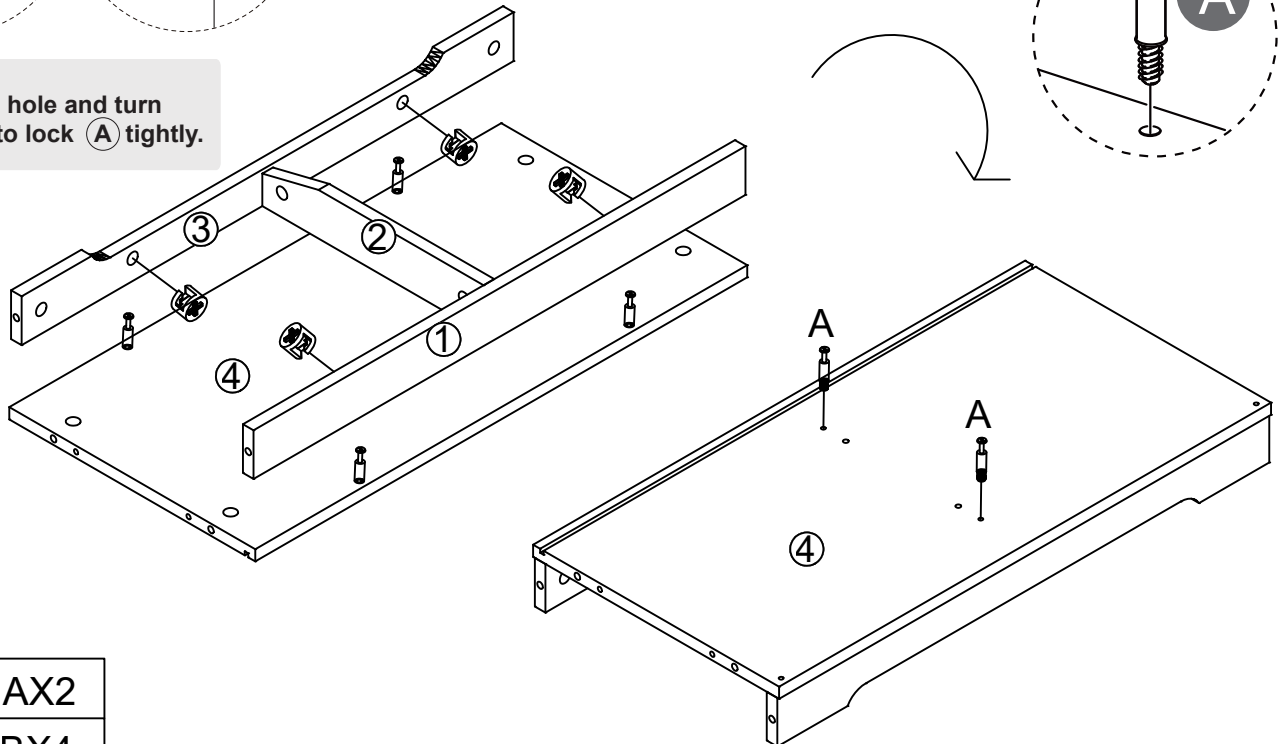



AX2



BX4


STEP3

will require these parts


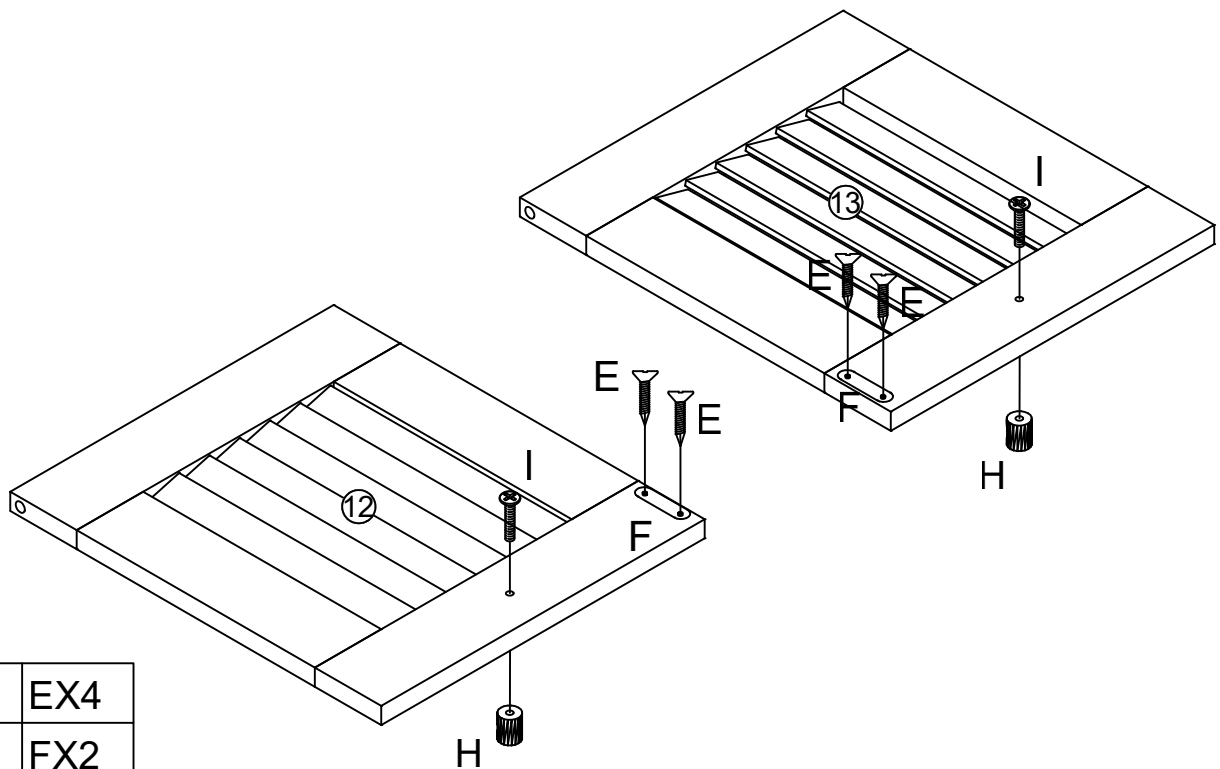
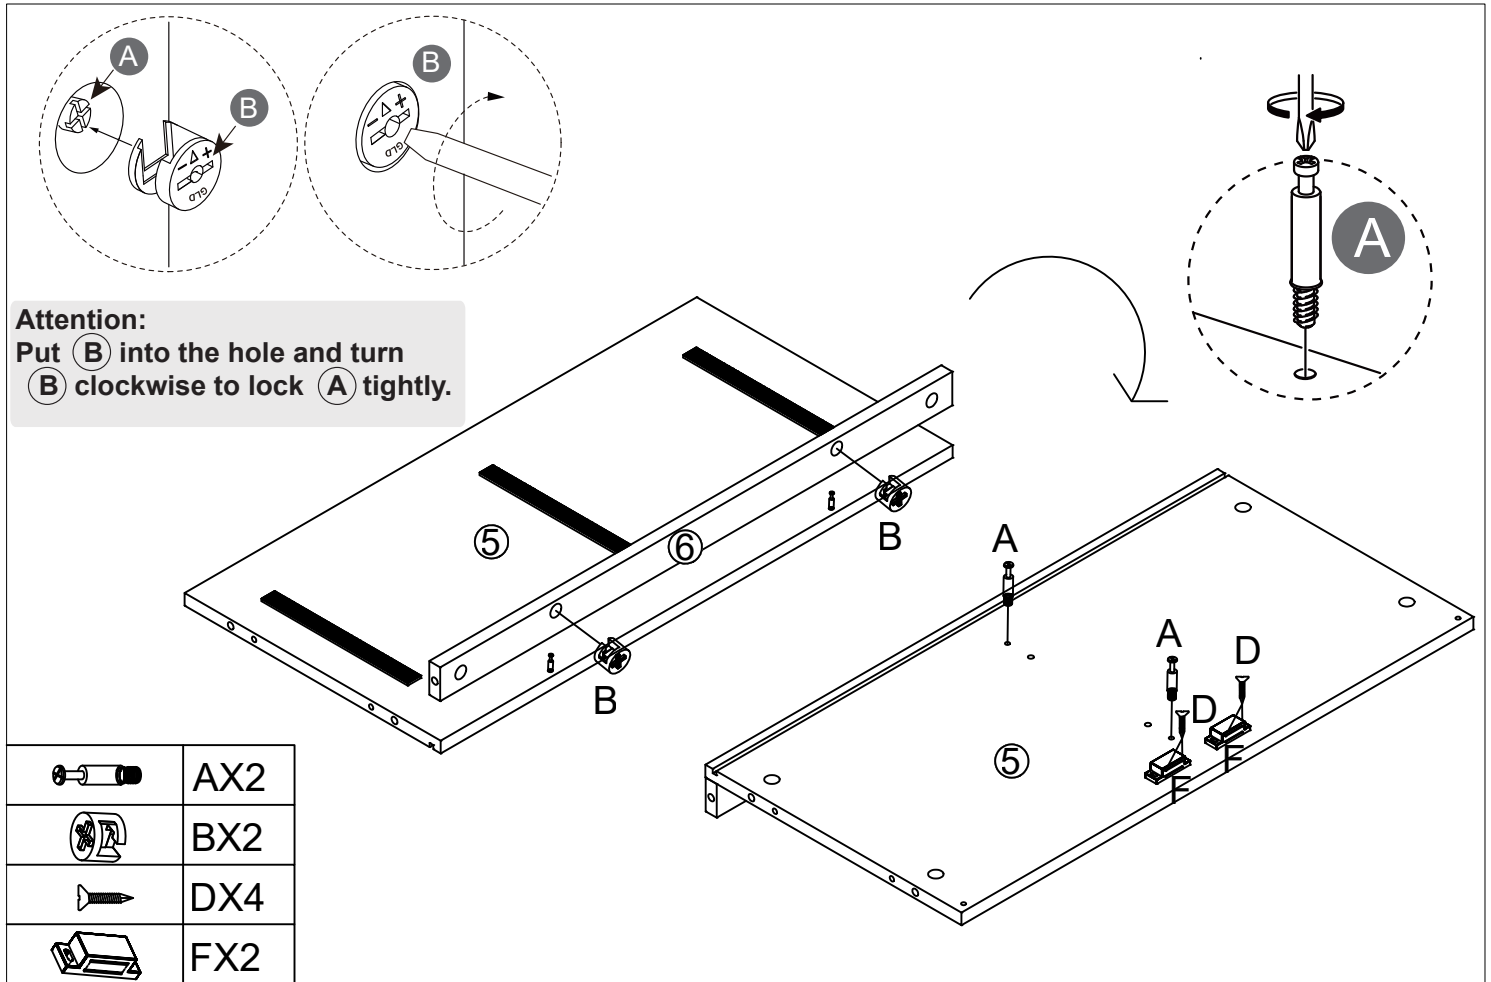


STEP4

will require these parts

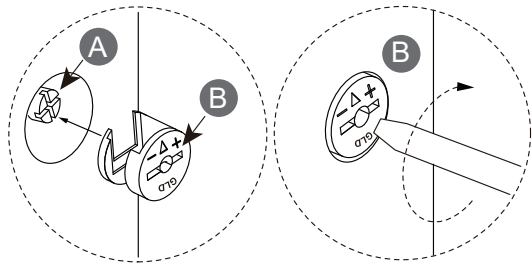**Attention:**



Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

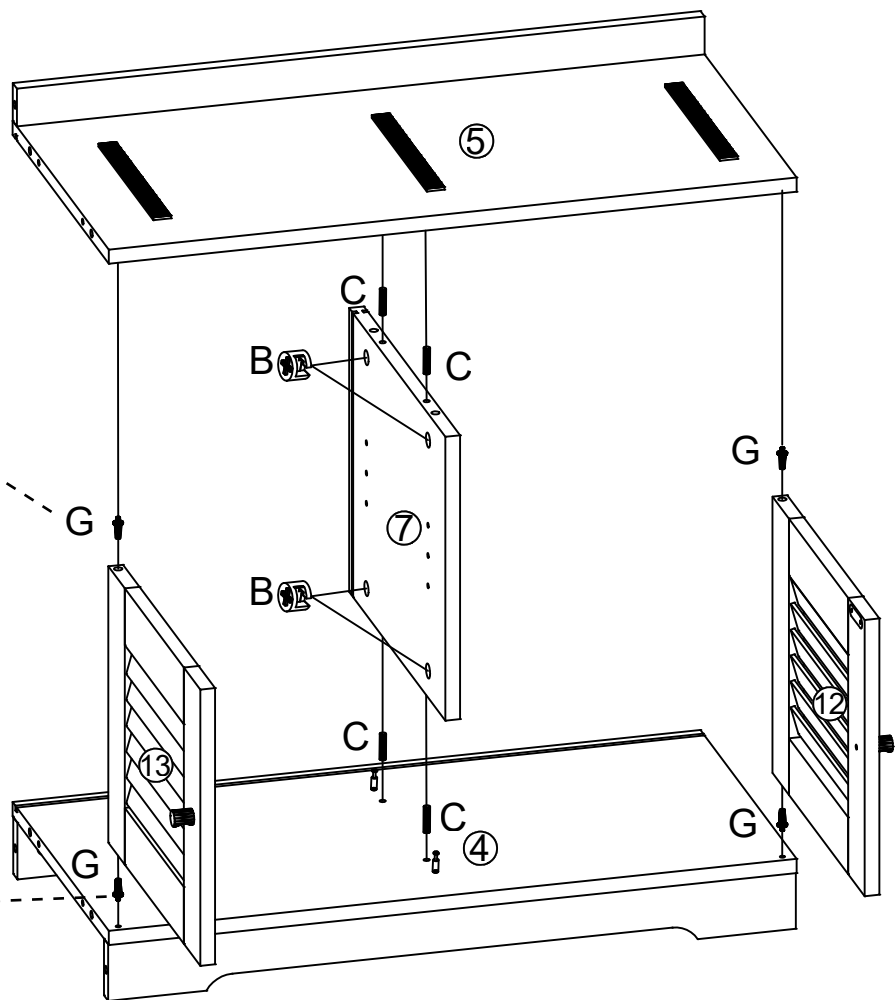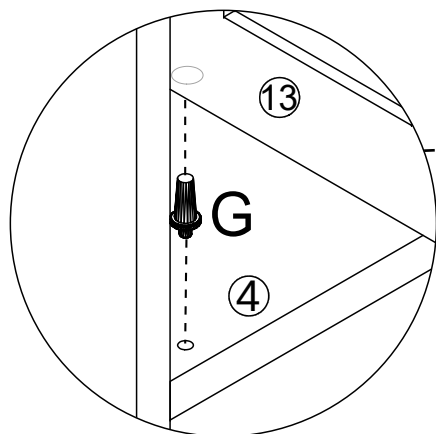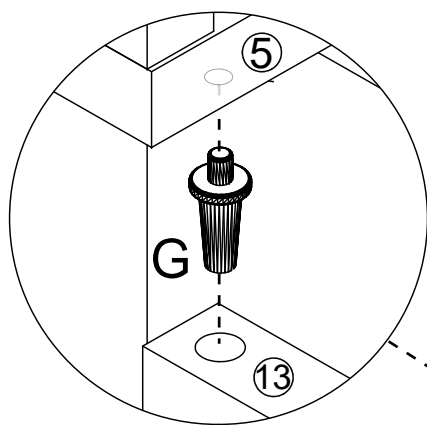

	BX2
	CX8
	GX4

STEP5


will require these parts

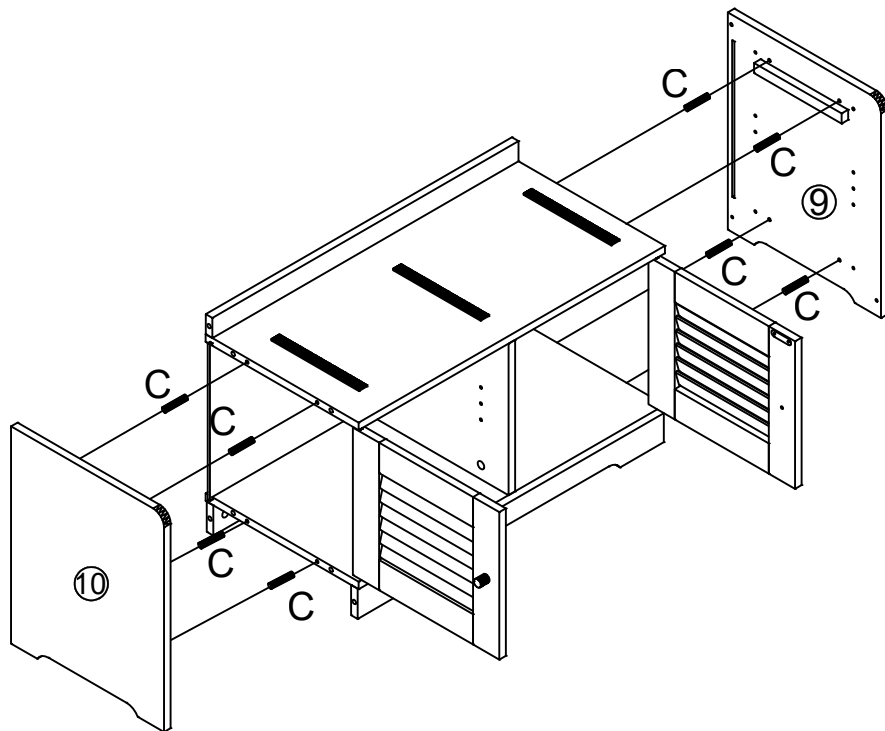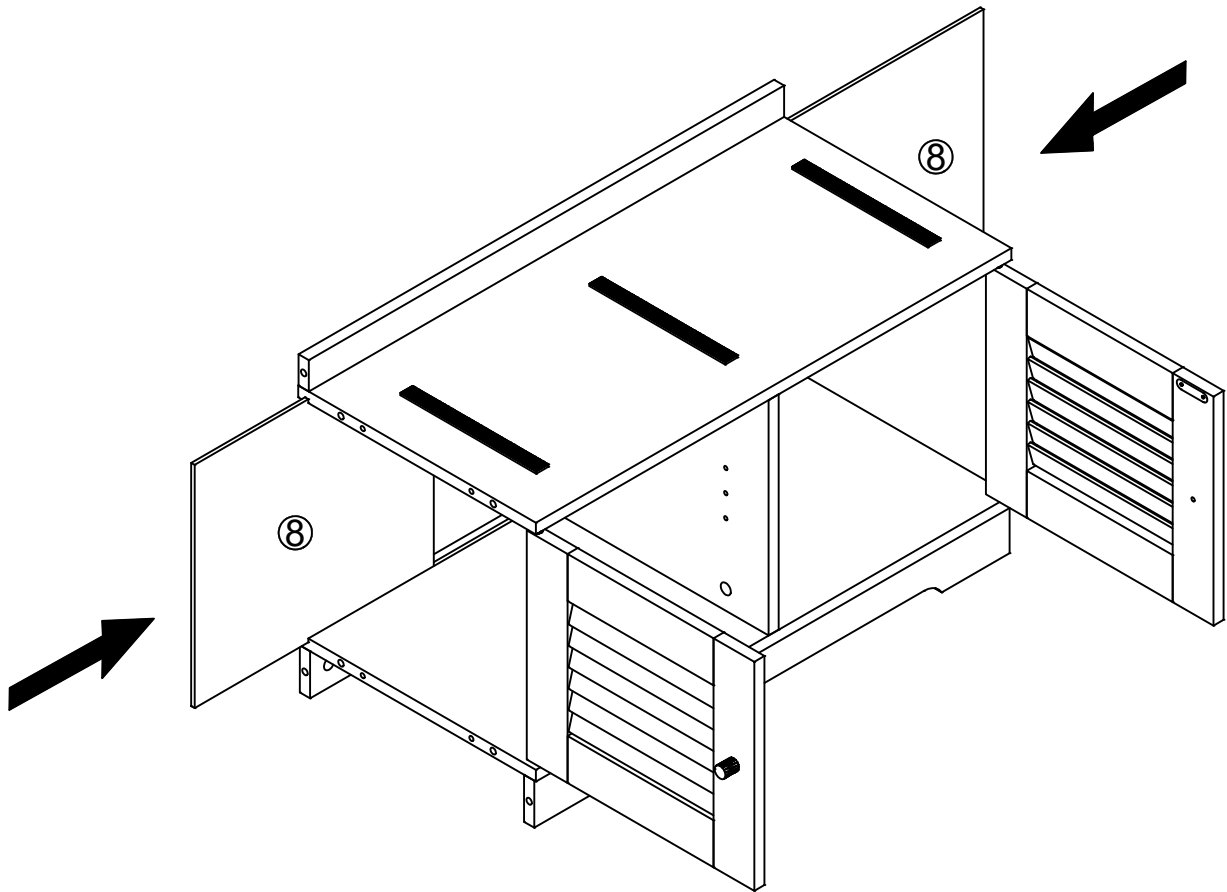


CX8

STEP6


will require these parts

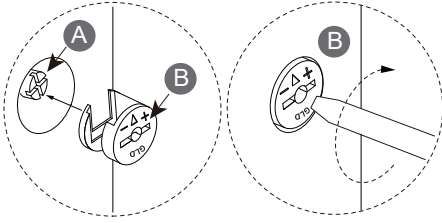**Attention:**


Put **(B)** into the hole and turn
(B) clockwise to lock **(A)** tightly.

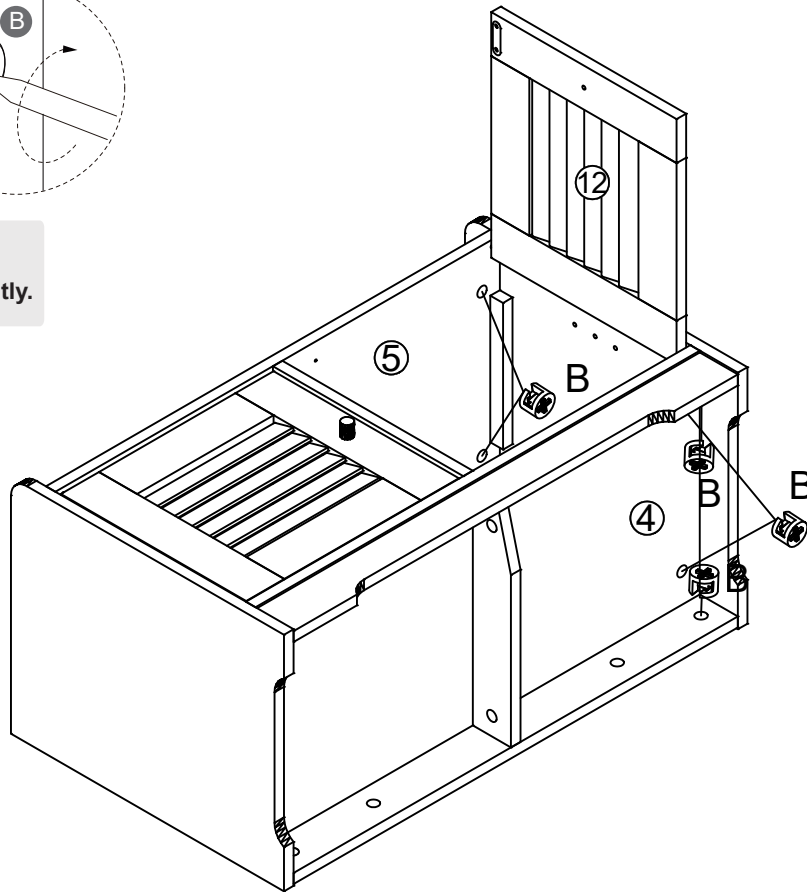

BX6

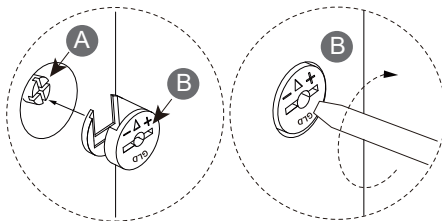**Attention:**


Put **(B)** into the hole and turn
(B) clockwise to lock **(A)** tightly.

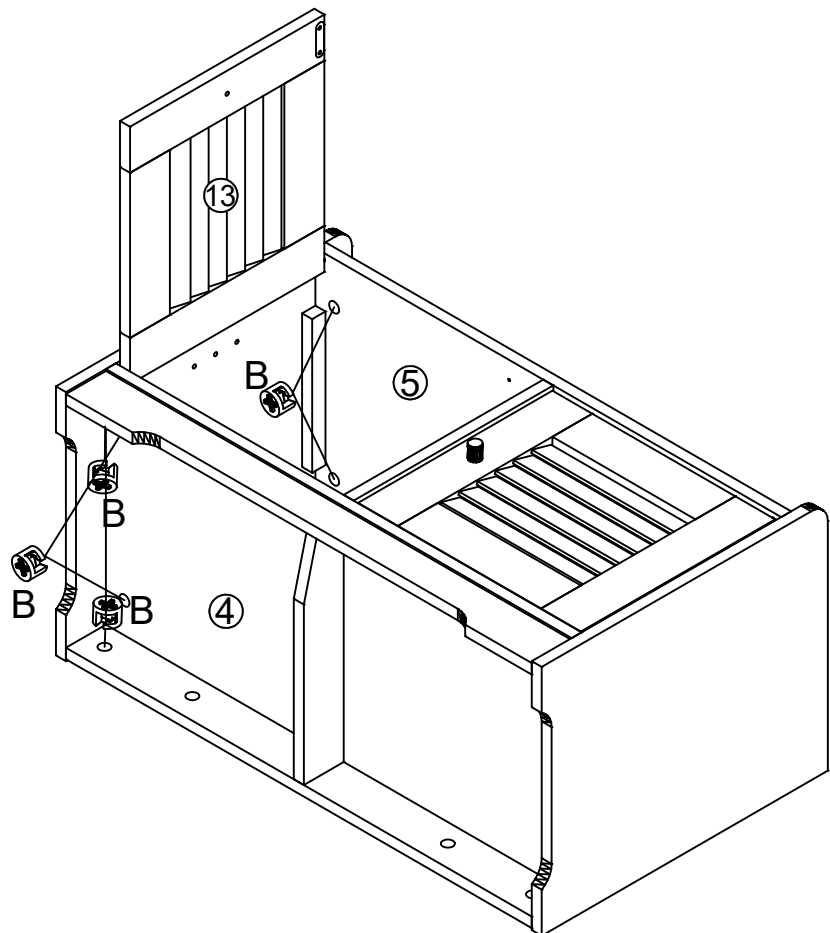


BX6

STEP7


will require these parts

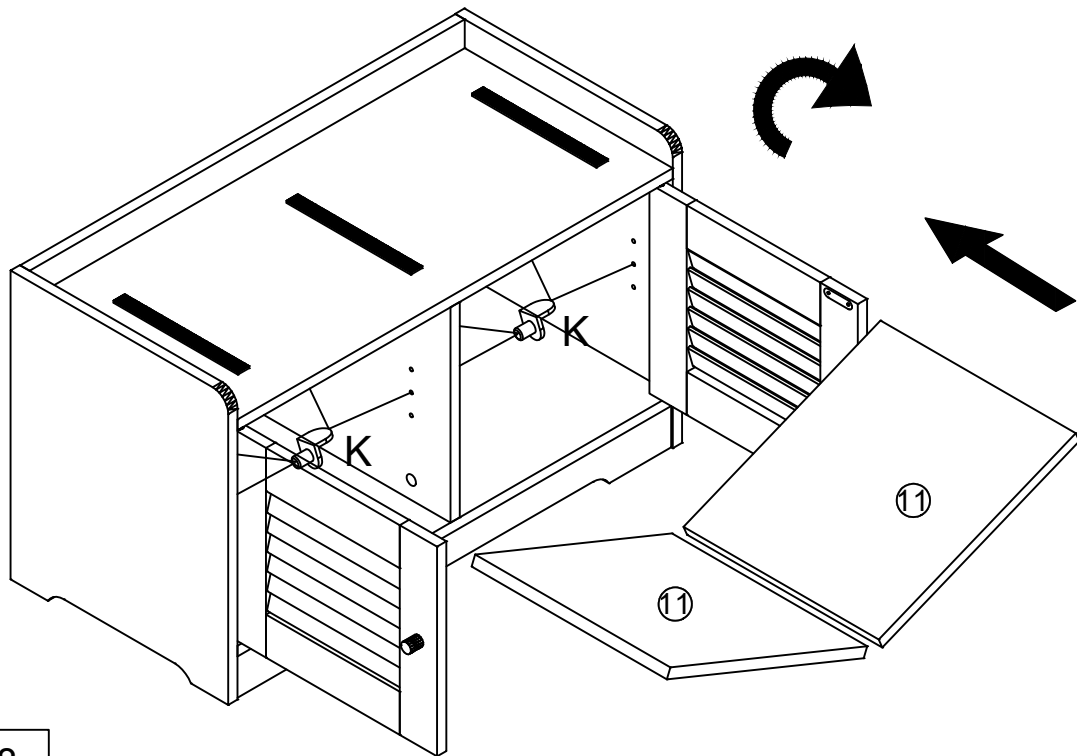

KX8

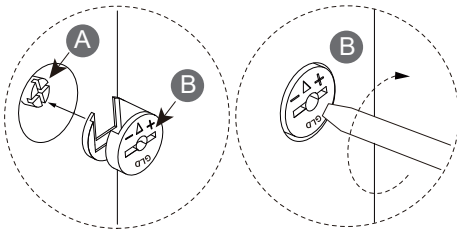

Attention:
Put **B** into the hole and turn
B clockwise to lock **A** tightly.

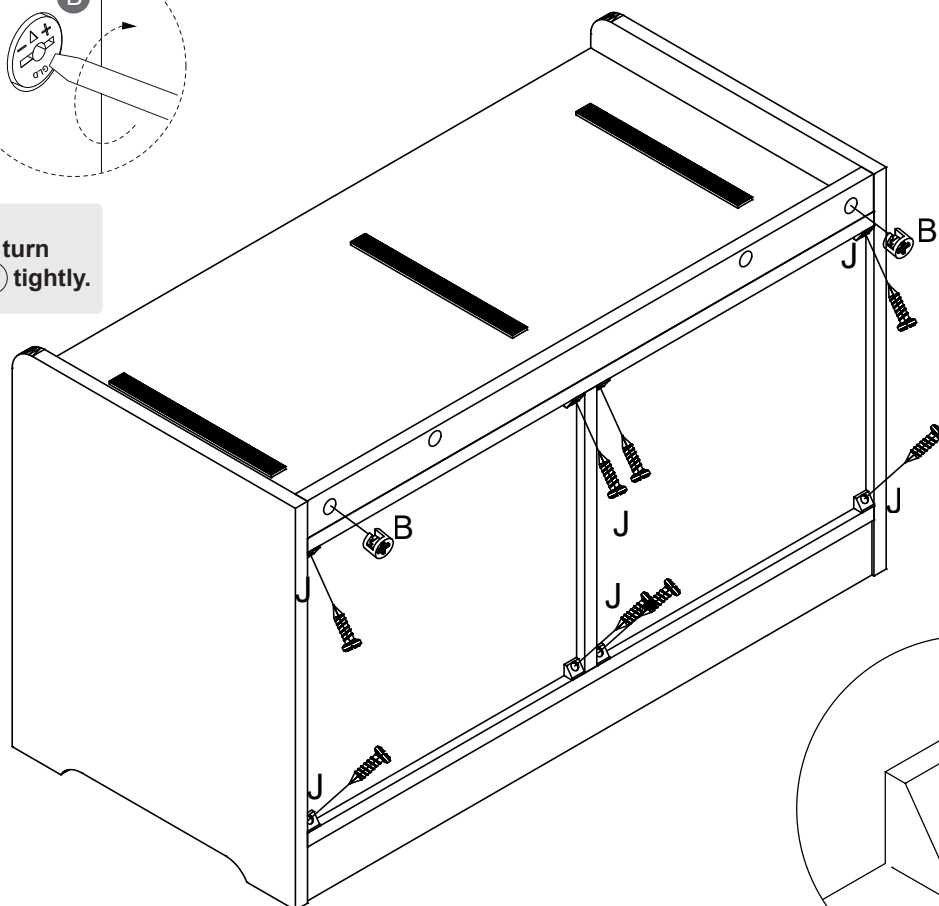

BX2



JX8

STEP8

will require these parts

