



# ASSEMBLY INSTRUCTIONS




**STEP 7 : Fix the Bed Slat Support ( G ) to the Bed Slat ( F ) as shown.**

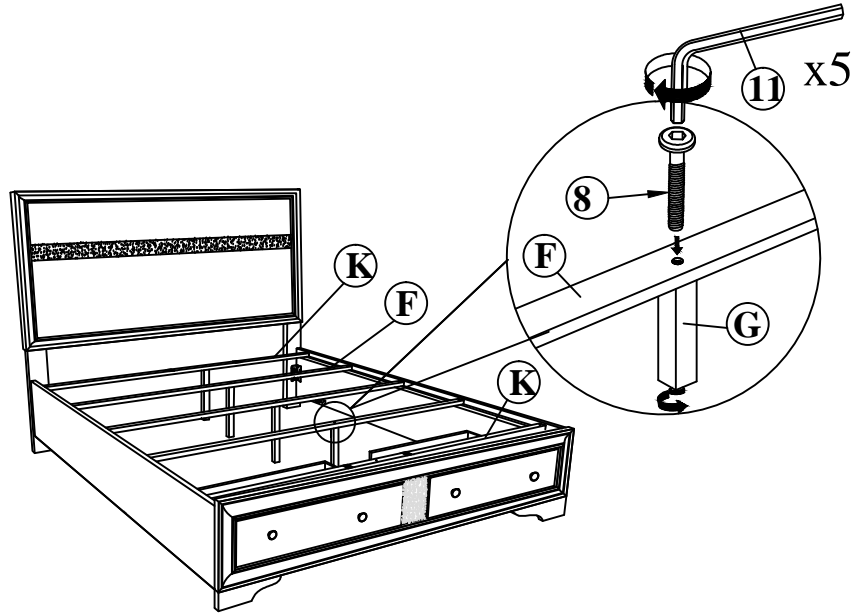

**STEP 8 : Fix the Bed Slat ( F ) by push closely to the Side Rail ( D ) by using SCK Screw ( 5 ) as shown.**

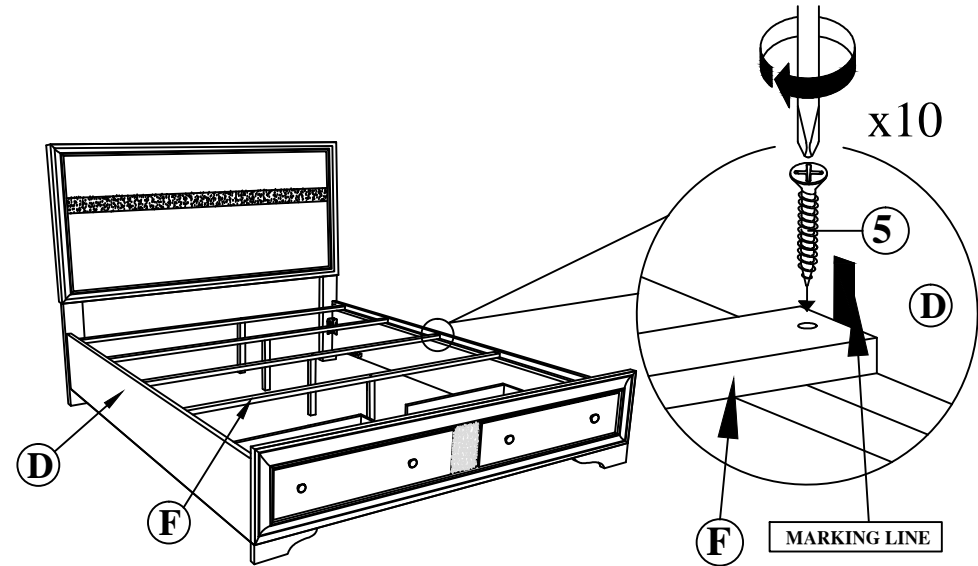

**STEP 9: Attach Concealed Panel ( I ) at the upper Bed Slat ( F ) using Panhead Screw ( 6 ) and tighten with Screw Driver.(not Included)**

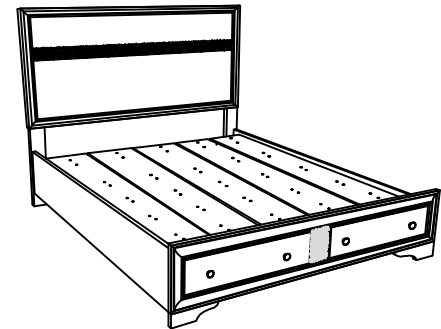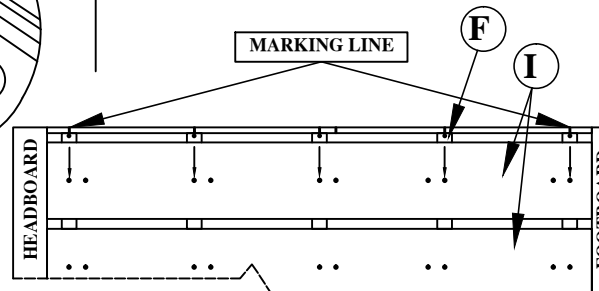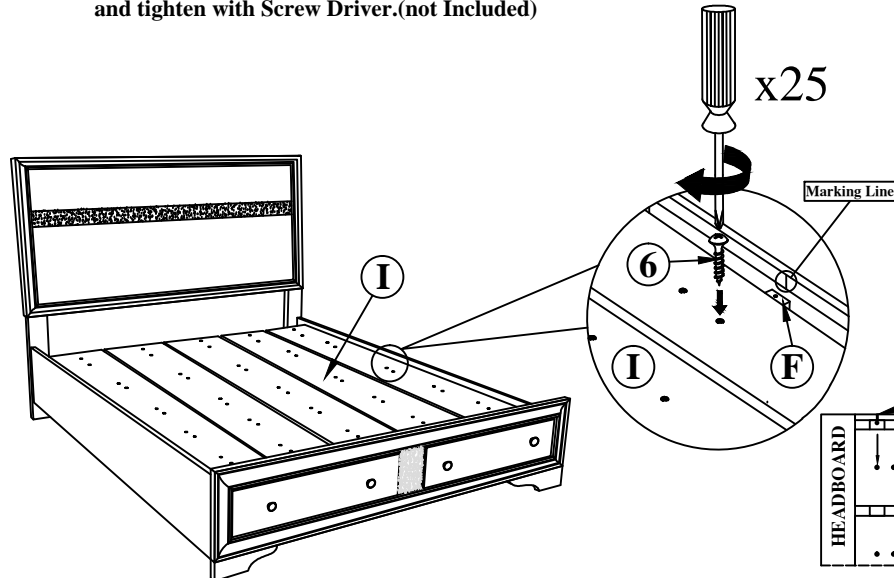

**COMPLETED ASSEMBLY**

**TIGHTEN THE PANHEAD SCREW (6)  
BY FOLLOW THE ARROW AS SHOWN**