


Installation Instruction

HS09










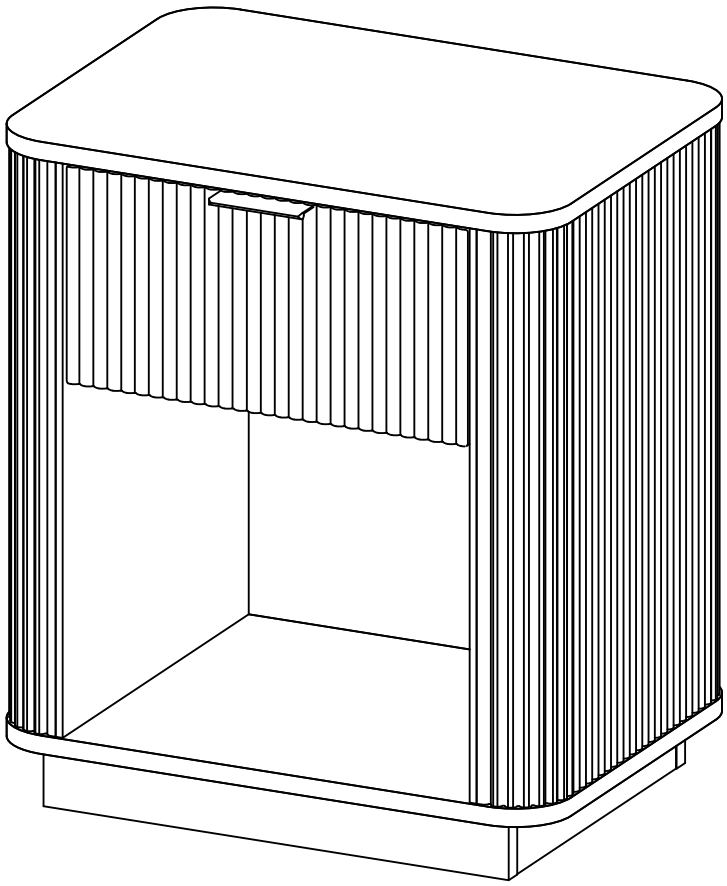


PARTS LIST

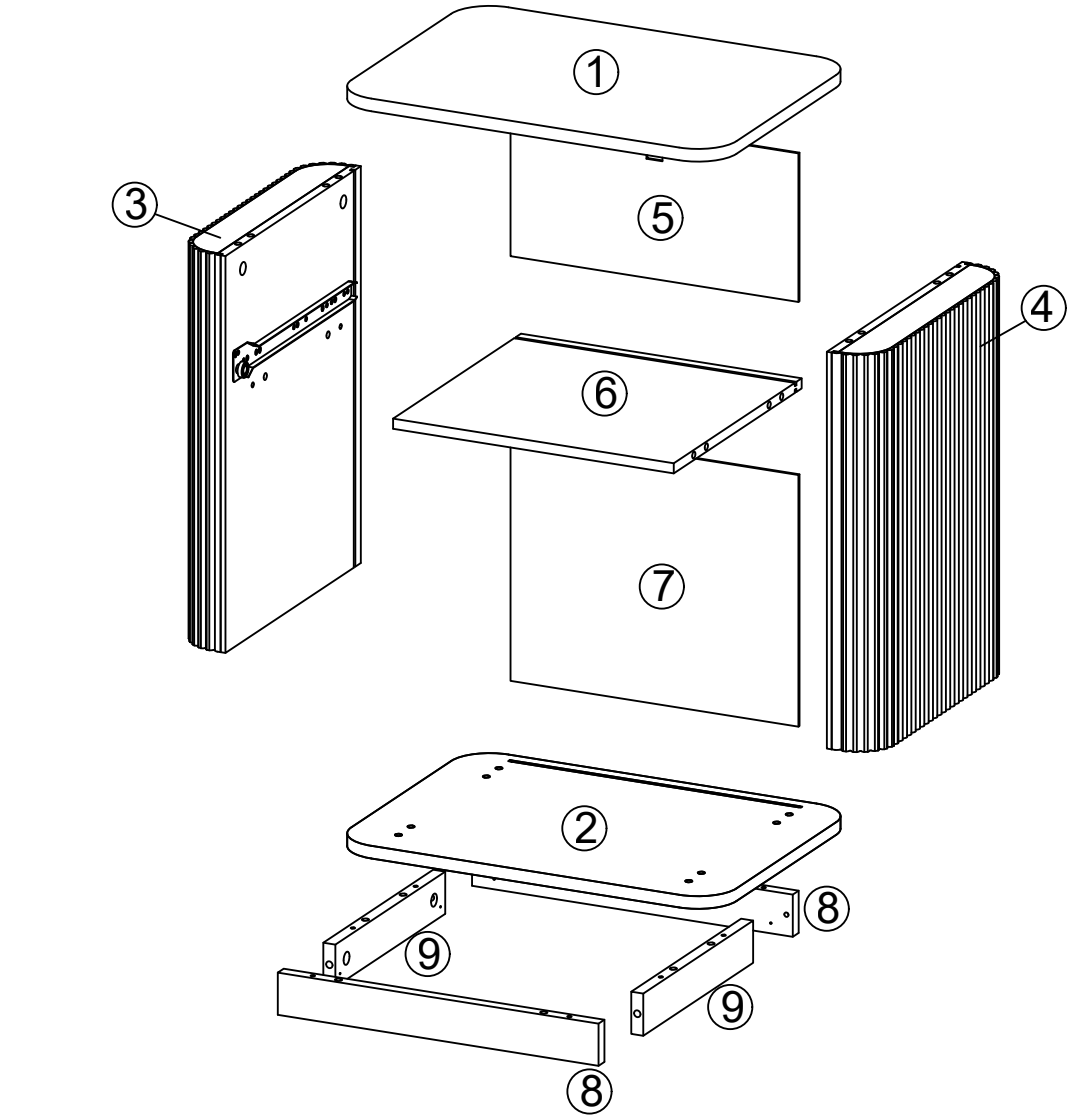








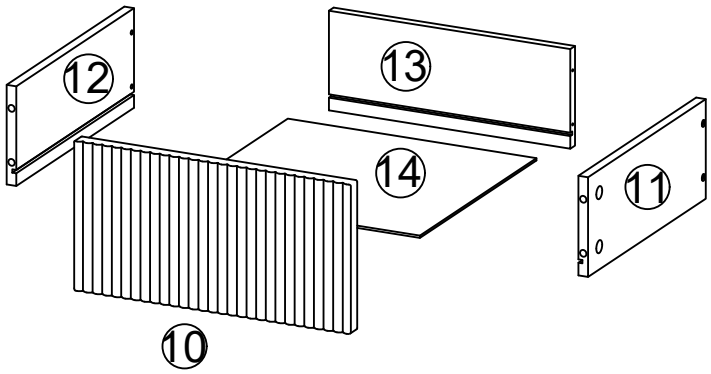


PARTS LIST

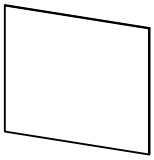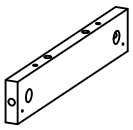
1 X1  Desktop Board	2 X1  Bottom Board
3 X1  Left Board	4 X1  Right Board
5 X1  Backboard	6 X1 
7 X1  Backboard	8 X2 
9 X2 	10 X1  Drawer Desktop board
11 X1  Right Drawer Side Board	12 X1  Left Drawer Side Board
13 X1  Drawer Back Board	14 X1  Drawer Bottom Board


Hardware:


ASSEMBLY TOOLS REQUIRED (NOT INCLUED)

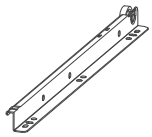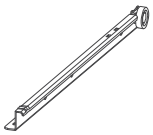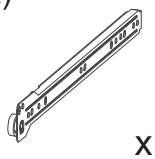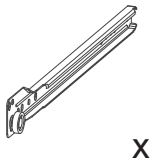
A 6*35 mm  x16	B 15*10 mm  x16	C 8*30 mm  x20	Screwdriver 	Hammer 
D 7*38 mm  x4	E 3.5*14 mm  x33	F 4*48mm  x8	G  x4	H 4 mm  x1
I  x1	J  x8	K x4	L  x1	M 4*35mm  x5
N  x1	(DL)  x1	(DR)  x1	(CR)  x1	(CL)  x1


Step 1

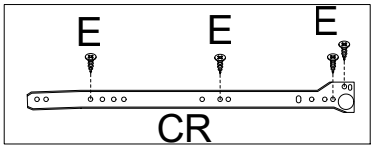


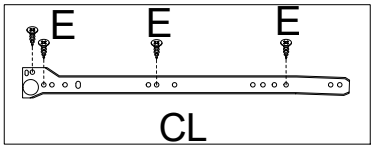


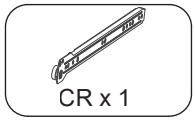

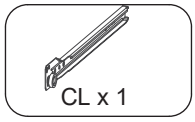


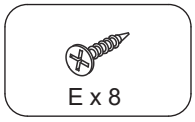


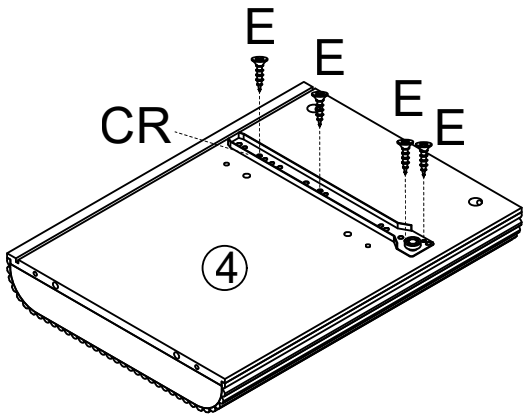


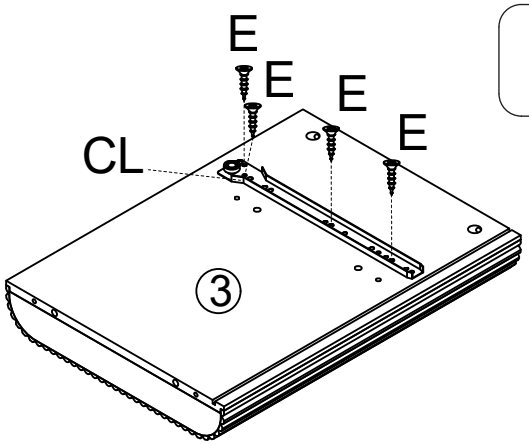


Step 2

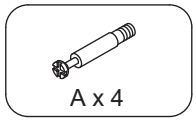


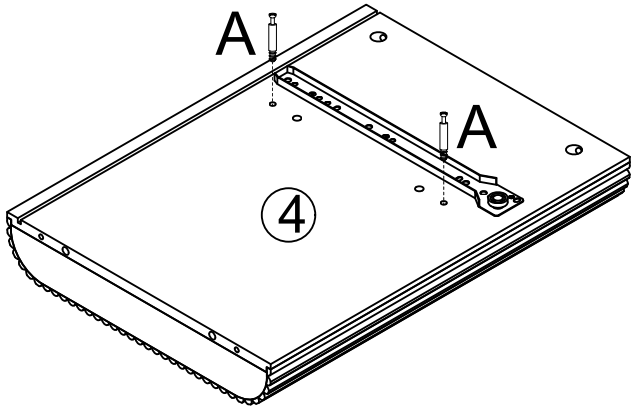


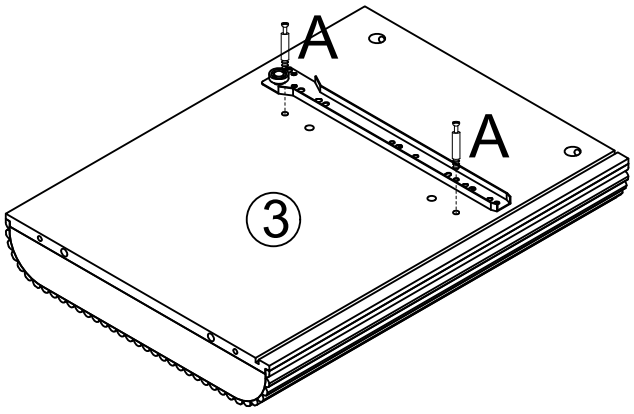


Step 3

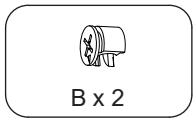


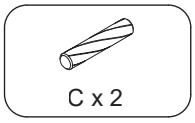


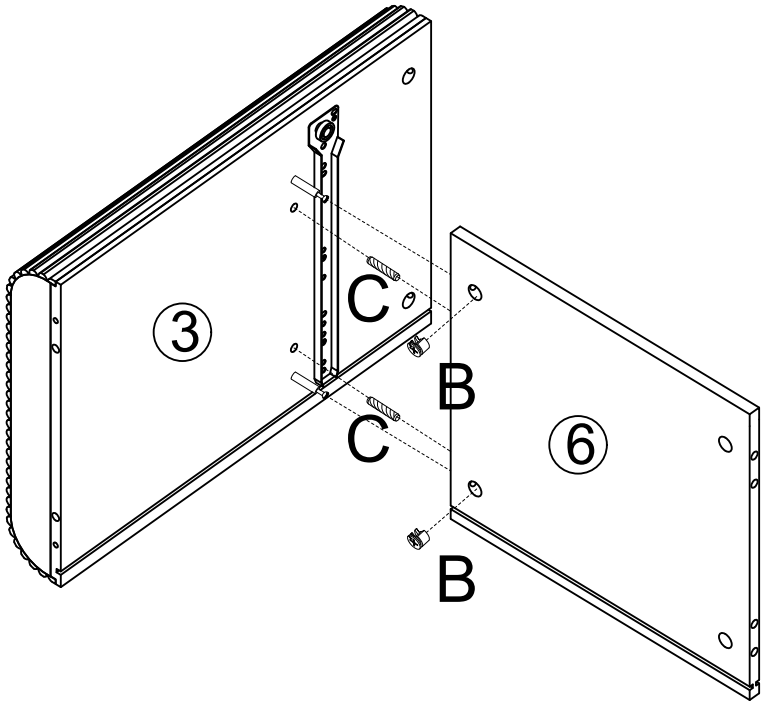


Step 4

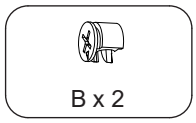

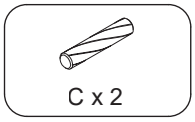


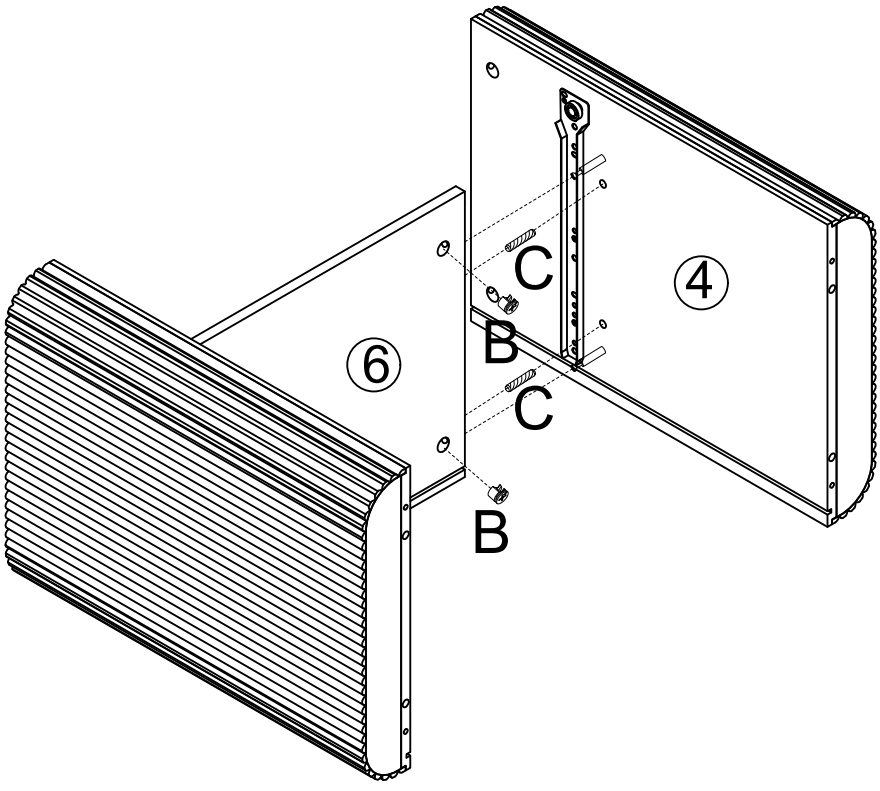



Step 5

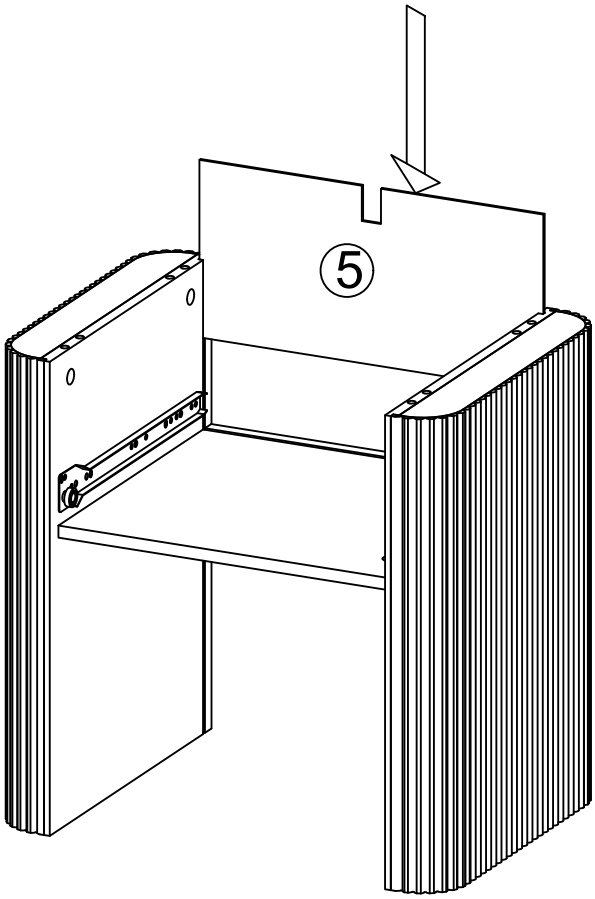


Step 6

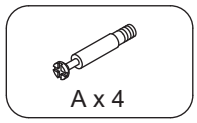

A x 4

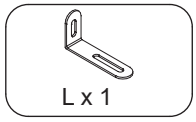

L x 1

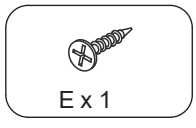
E x 1

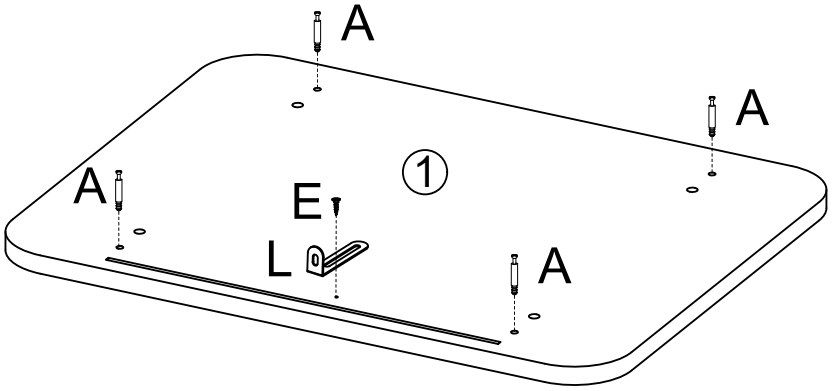


Step 7

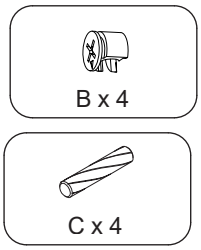


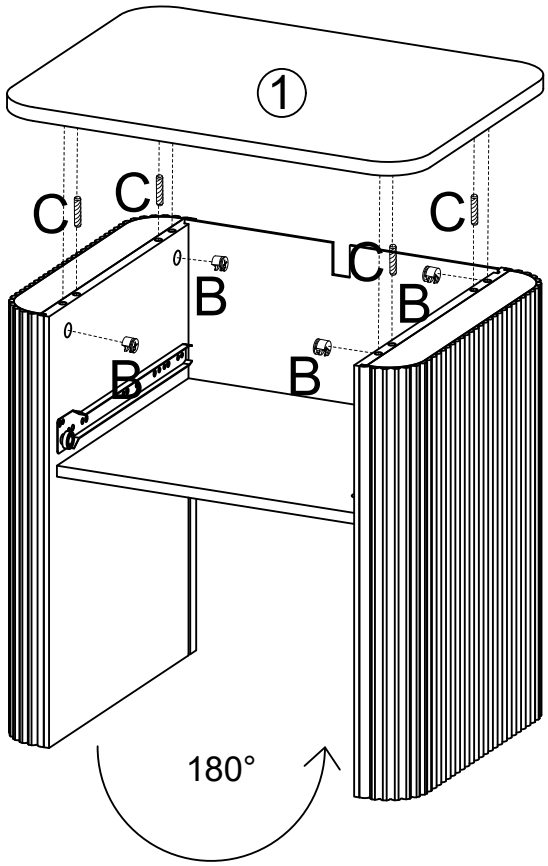



Step 8

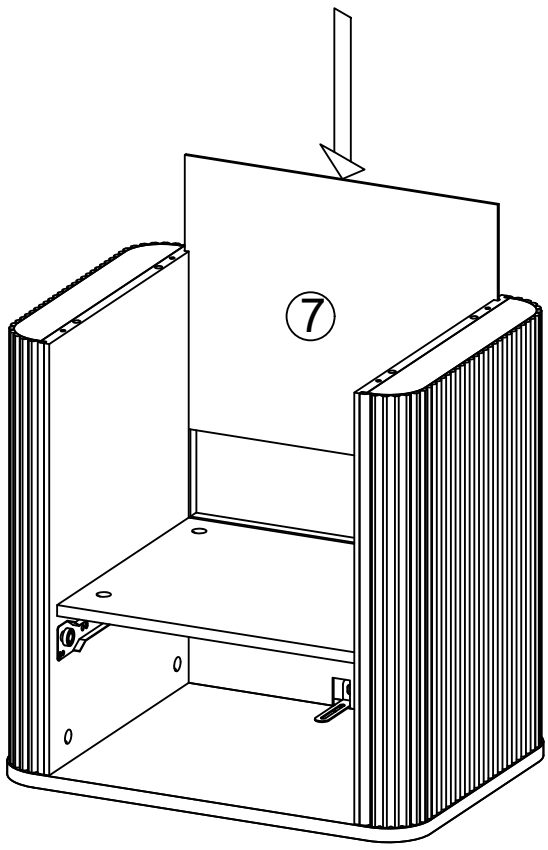


Step 9

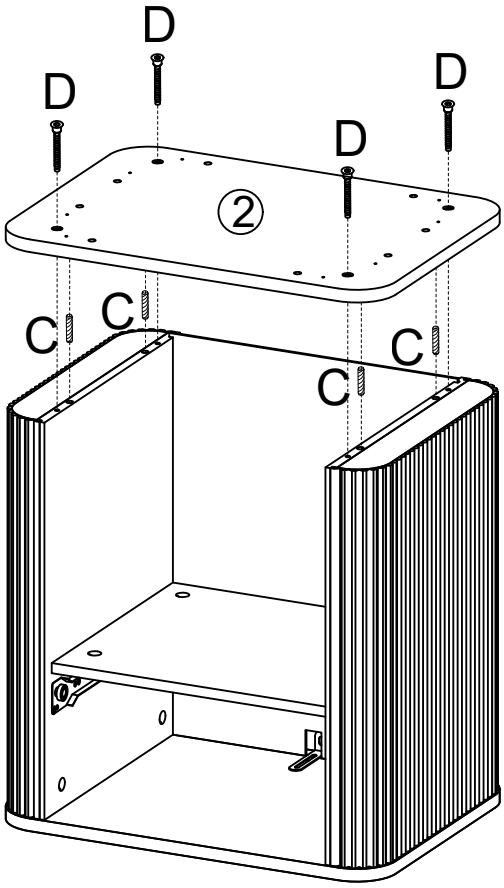


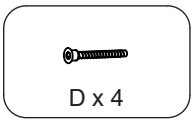


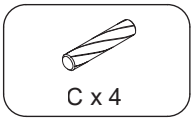


Step 10

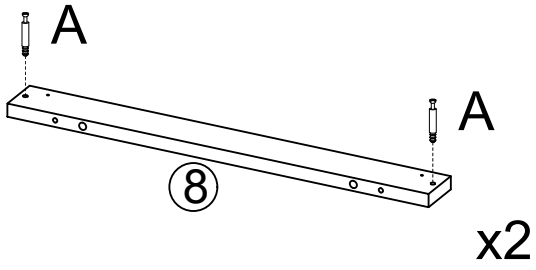


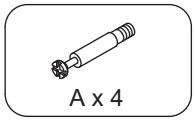


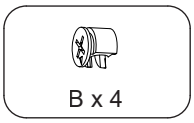


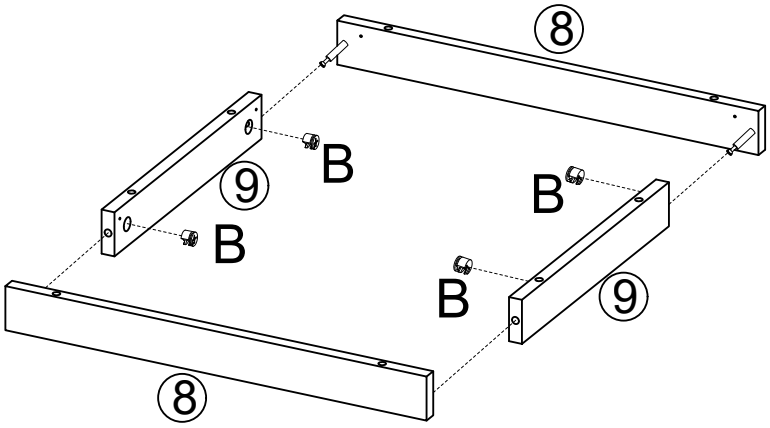


Step 11

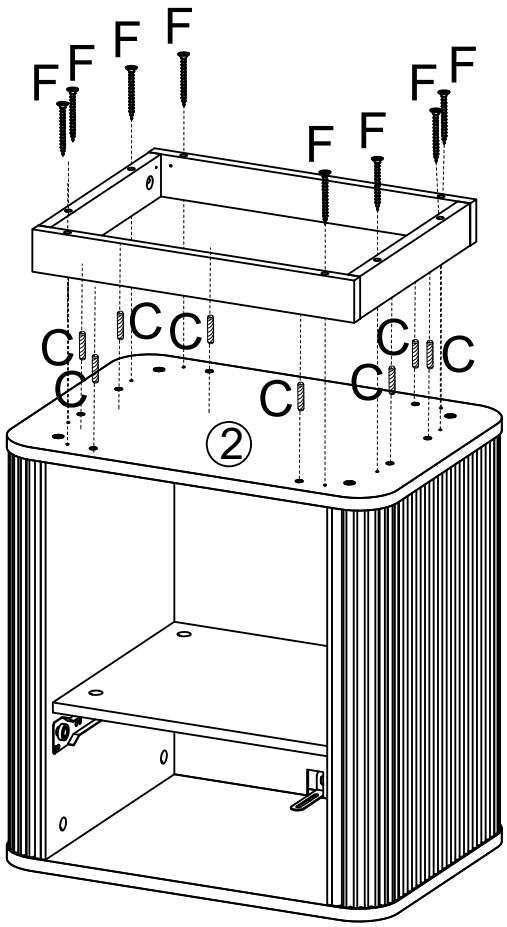

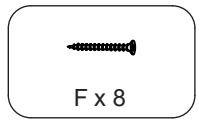


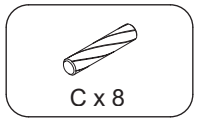

Step 12

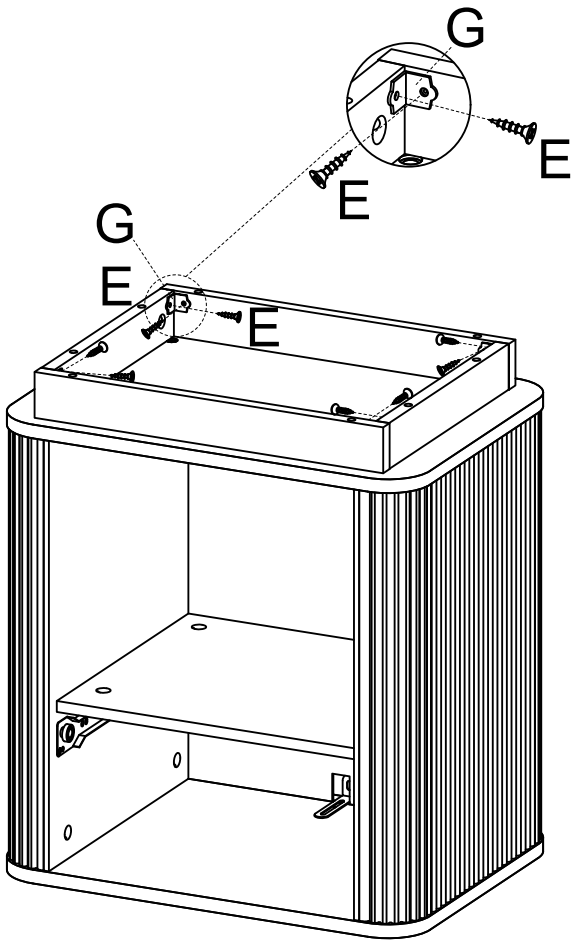



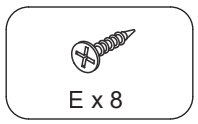


Step 13

K x 4



Remove the protective film on the bottom of the EVA.

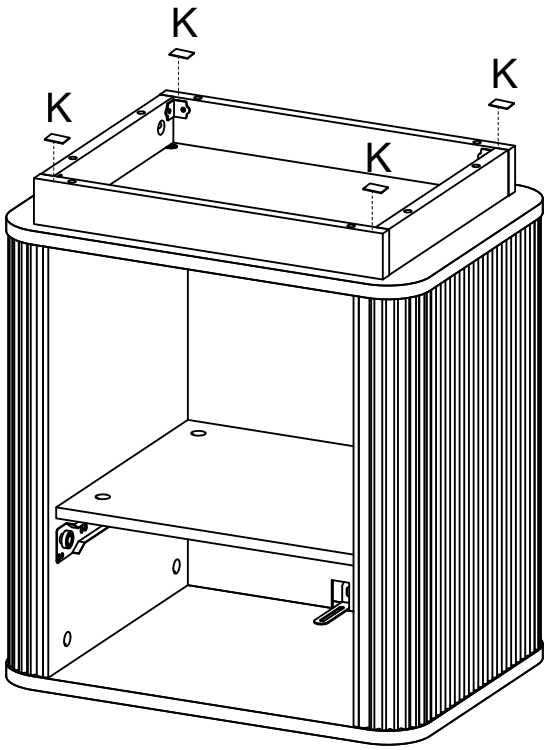


Step 14


J x 8




E x 8

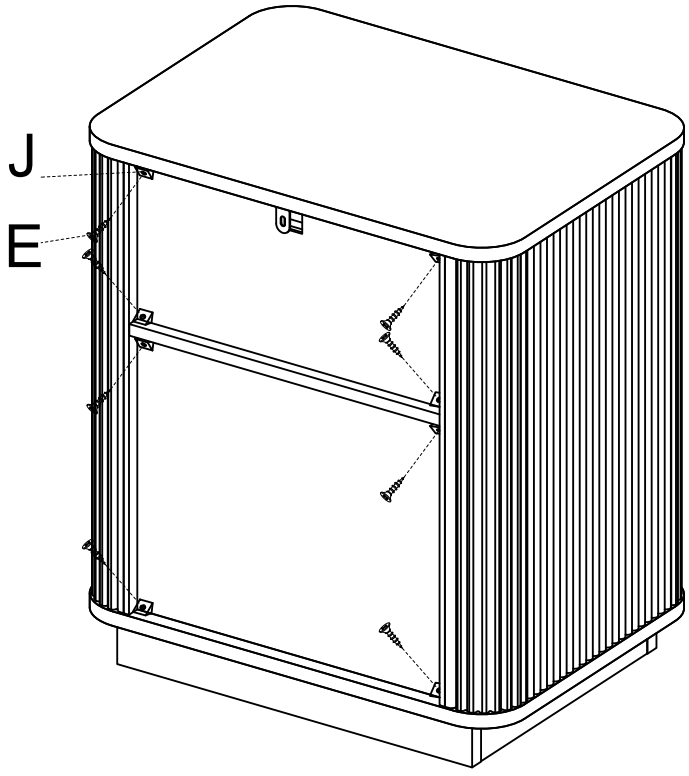



Step 15

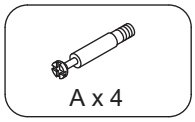

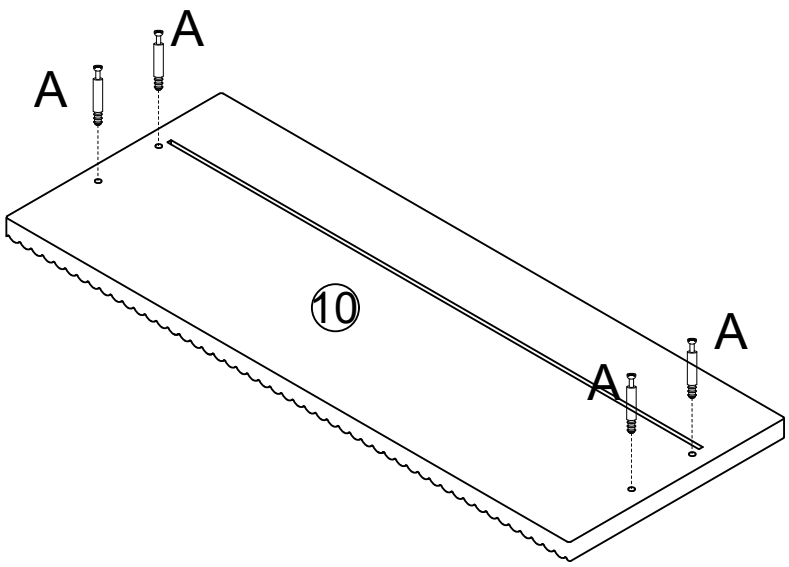


Step 16

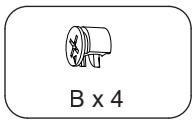


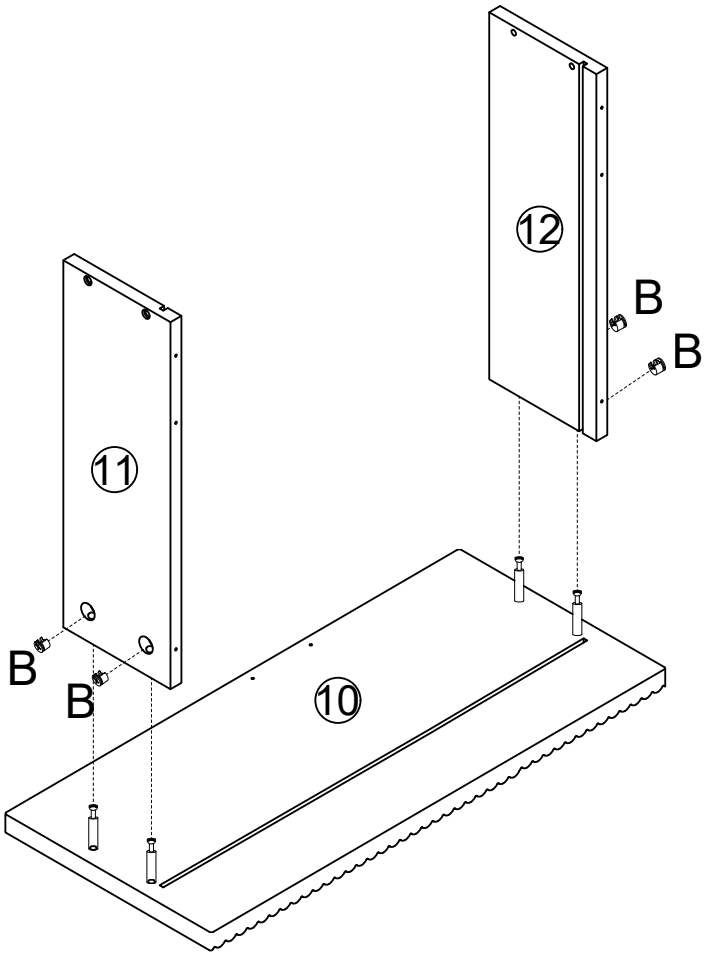


Step 17

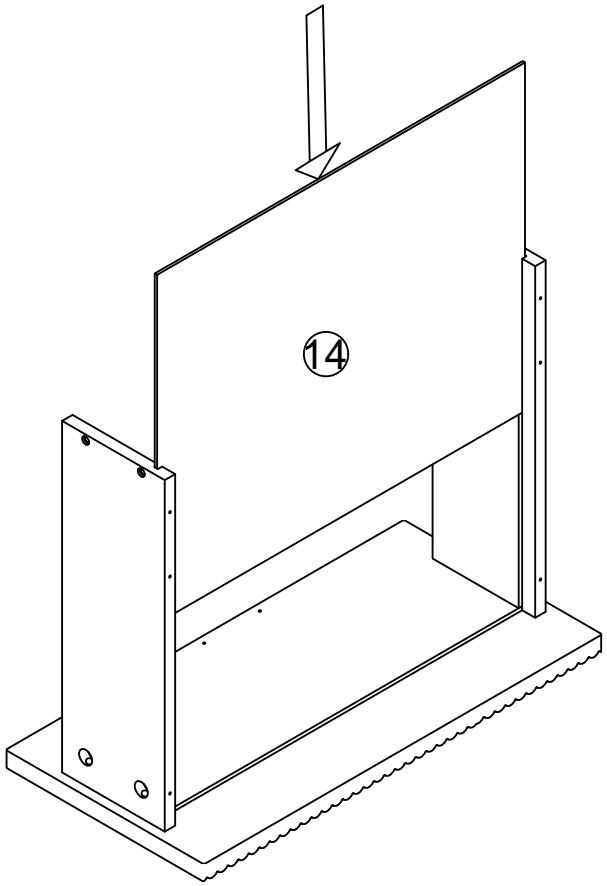


Step 18

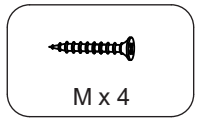

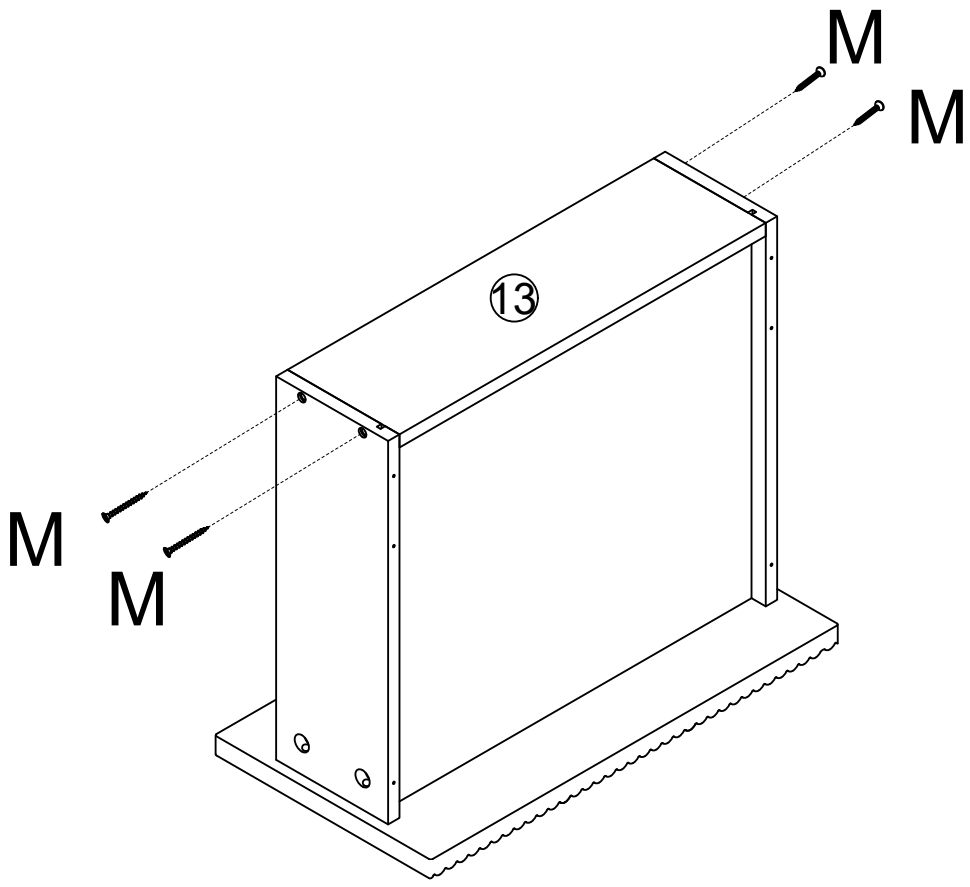

Step 19

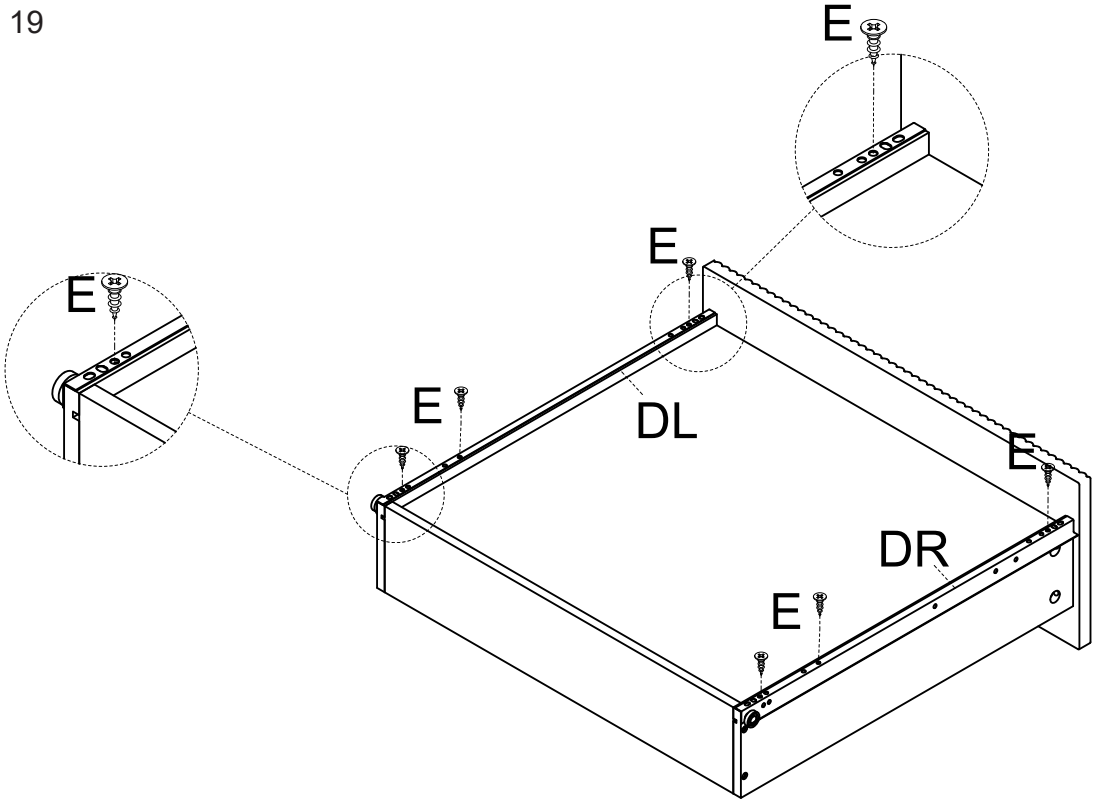



E x 6


DR x 1


DL x 1


Step 20

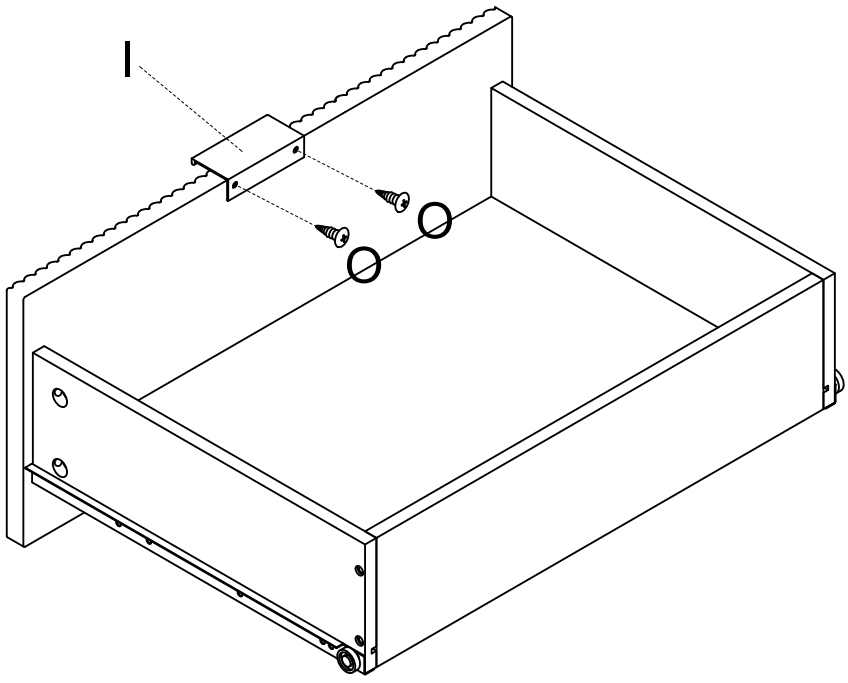




I x 1


O x 2


Step 21

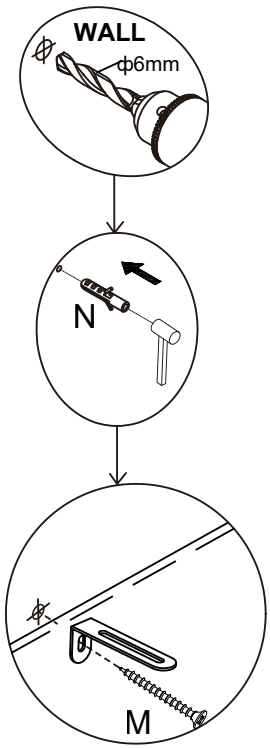

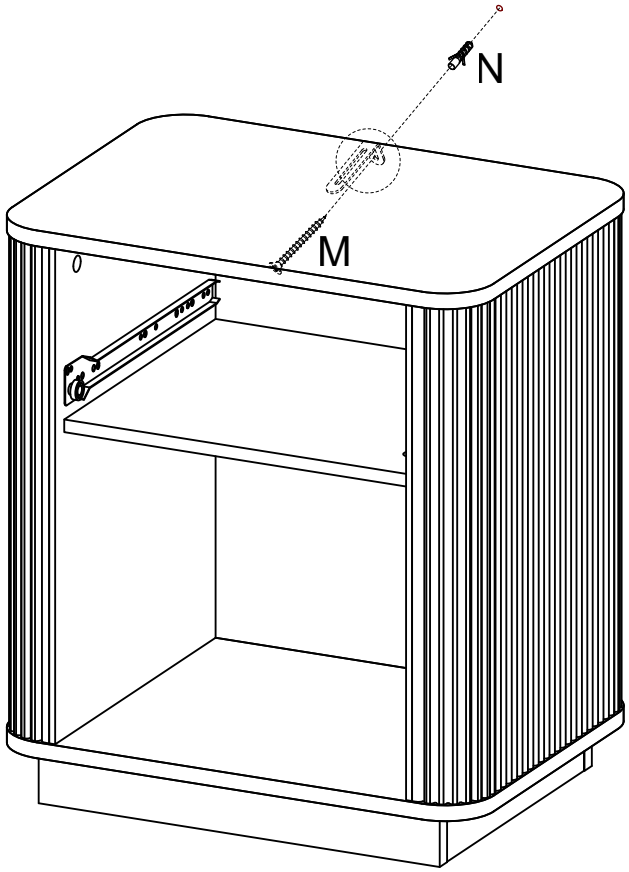


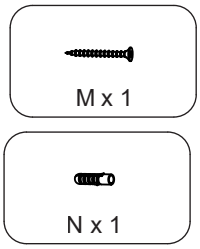

Step 22

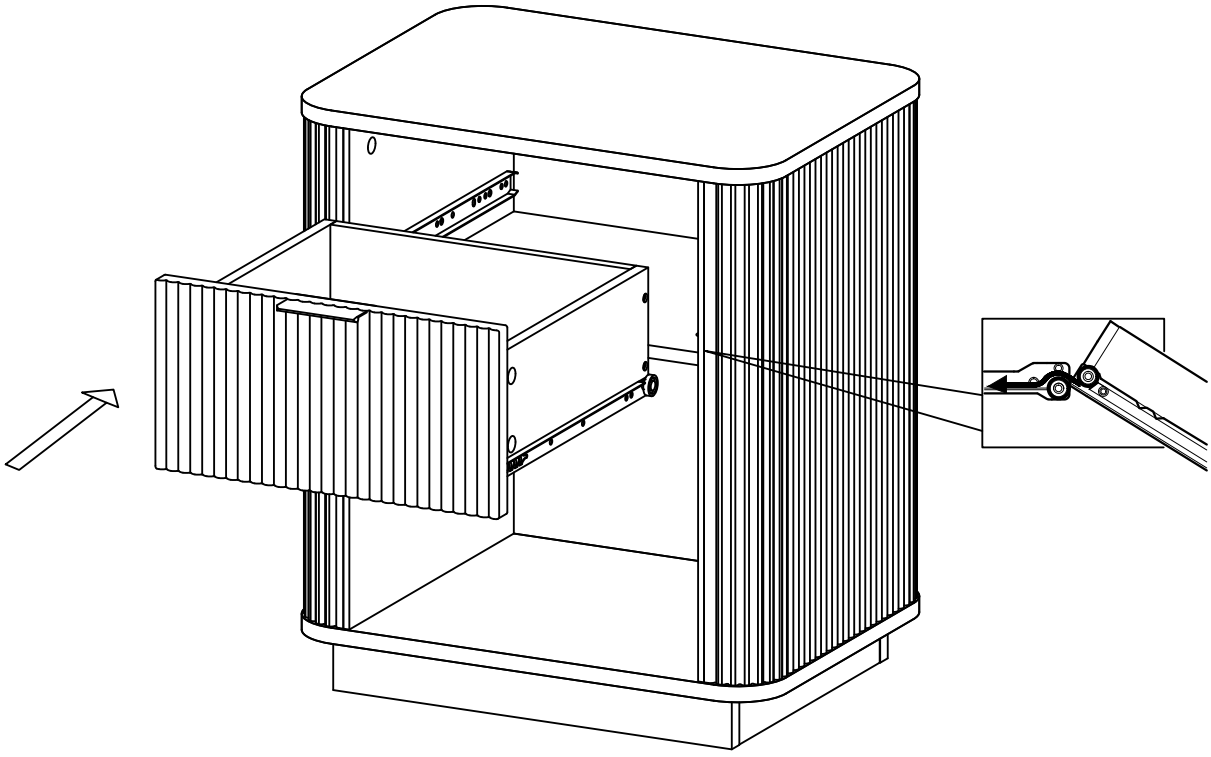

Step 23

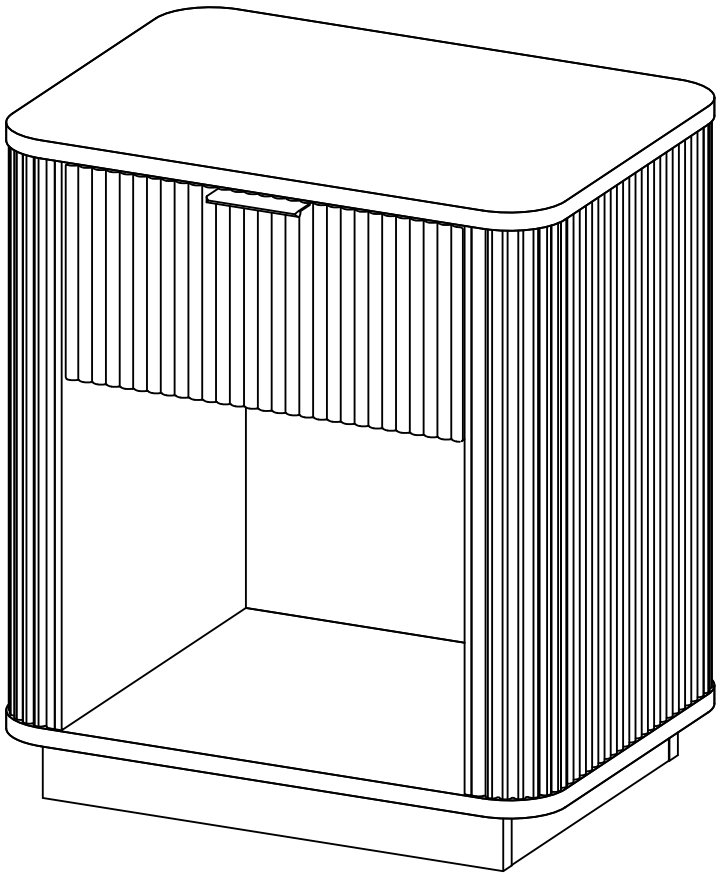

Attention:For safety and stability,we suggest you have to secure the anti-tip accessories to the wall to prevent tipping,injury,and property damage.

Installation Completed