



After opening the packaging, you can first distinguish according to the accessory list and then install according to the steps

A
C
C
E
S
S
O
R
I
E
S


L
I
S
T

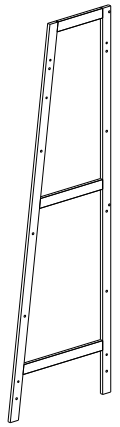


Bracket A*3

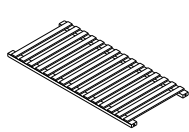


Layer C * 1

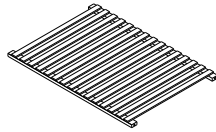

Layer board D * 1



Horizontal bar * 2



Round rod * 1



Hook * 2




Screw



Layer board G * 1



Layer board H * 1



Layer board J * 1



Layer board K * 1




Layer board M * 1

The width of laminated board G/laminated board H/laminated board J/laminated board K/laminated board M is different, one piece is larger than the other

i
n
s
t
a
l
l
a
t
i
o
n


d
i
a
g
r
a
m

1

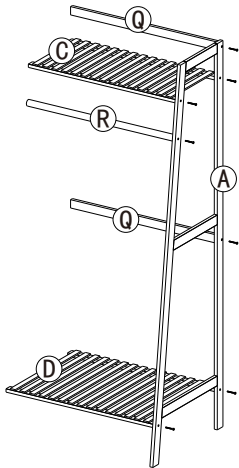


Use screws to install the laminated board D/laminated board C/round rod R and stopper Q on bracket A

2

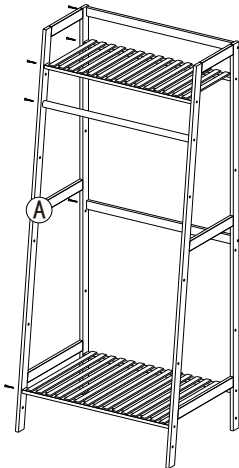


Install bracket A with screws

3

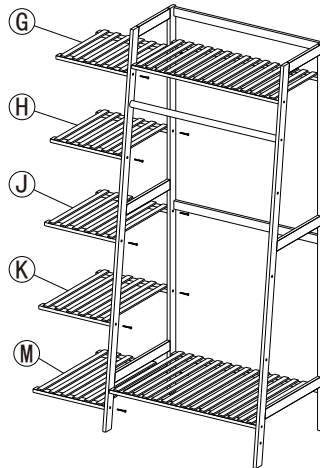


Install the laminated board G/H/J/K/M onto bracket A with screws

4

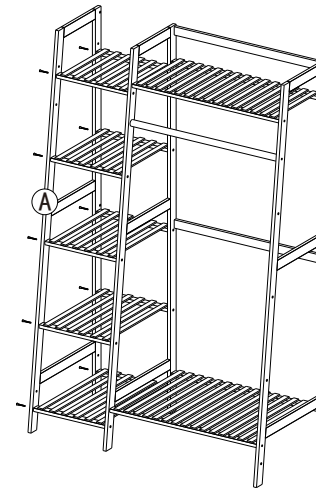

Install bracket A with screws

5

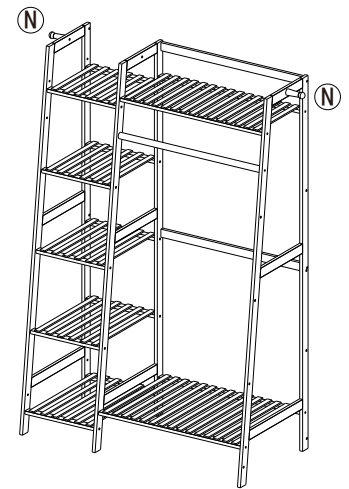

Install hook N onto the bracket with screws to complete the installation