















# UPHOLSTERED DAYBED


Side Panels & Slats - Fog  
Back Panel & Side Rails - Fog  
Side Panels & Slats - Smoke  
Back Panel & Side Rails - Smoke

Page 1 of 1

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product is designed for residential use only.

CODE	QTY	HARDWARE
A	8	M8 x 20mm Bolts 
B	4	M6 x 45mm Bolts 
C	4	M6 x 13mm Spring Washers 
D	4	M6 x 19mm Flat Washers 
E	1	M4 x 65mm Allen Wrench 
F	1	M5 x 65mm Allen Wrench 
G	8	M4 X 32mm Wood Screws 
H	4	M6 x 35mm Bolts 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
J	1	Back Panel 	K	2	Side Panel 
L	1	Front Rail 	M	1	Back Rail 
N	2	Mattres Support 	O	4	Wooden Foot 

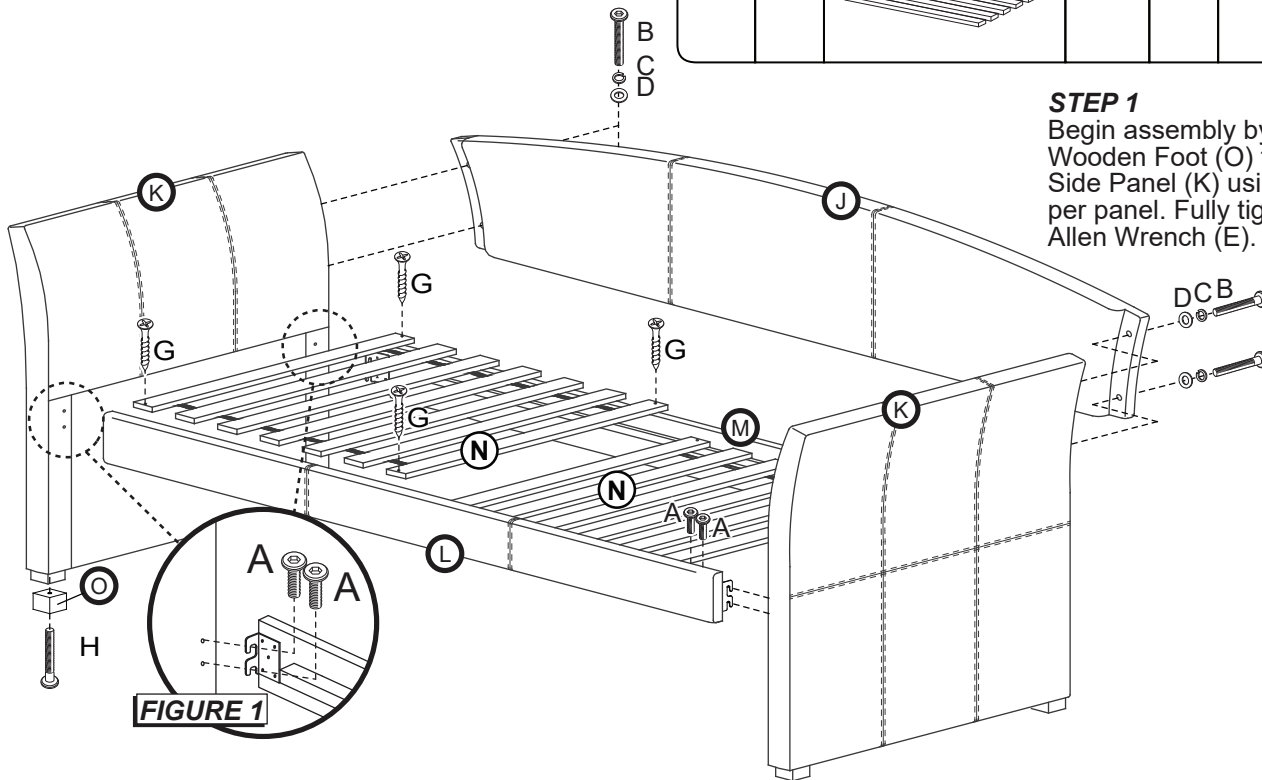

## STEP 1

Begin assembly by attaching each Wooden Foot (O) to the bottom of the Side Panel (K) using 2 Allen Bolts (H) per panel. Fully tighten all bolts using Allen Wrench (E).

## STEP 2

Attach the Back Panel (J) to the back of each Side Panel (K) by aligning the holes and securing with 2 Allen Bolt (B), 2 spring Washer (C) & 2 Flat Washer (D) from the backside per each end. Do not fully tighten bolts for this step.

## STEP 3

Next attach the Back Rail (M) to the inside of each Side Panel (K) at the back by aligning the holes and securing with 2 Allen Bolts (A) per each end. **See Figure 1.** Do not fully tighten bolts for this step.

## STEP 4

Attach the Front Rail (L) to the inside of each Side Panel (K) at the front by aligning the holes and securing with 2 Allen Bolts (A) per each end. **See Figure 1.** Tighten all bolts from **STEP 2 through 4.**

## STEP 5

Attach each Mattres Support (N) to Front & Back Rails (L&M) by unrolling and securing with 4 Wood Screws (G) 2 per each side. Tighten all screws using Philips screwdriver (\*not inclded). Your new Daybed is now complete.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.