

# Installation


## *Product Manual*

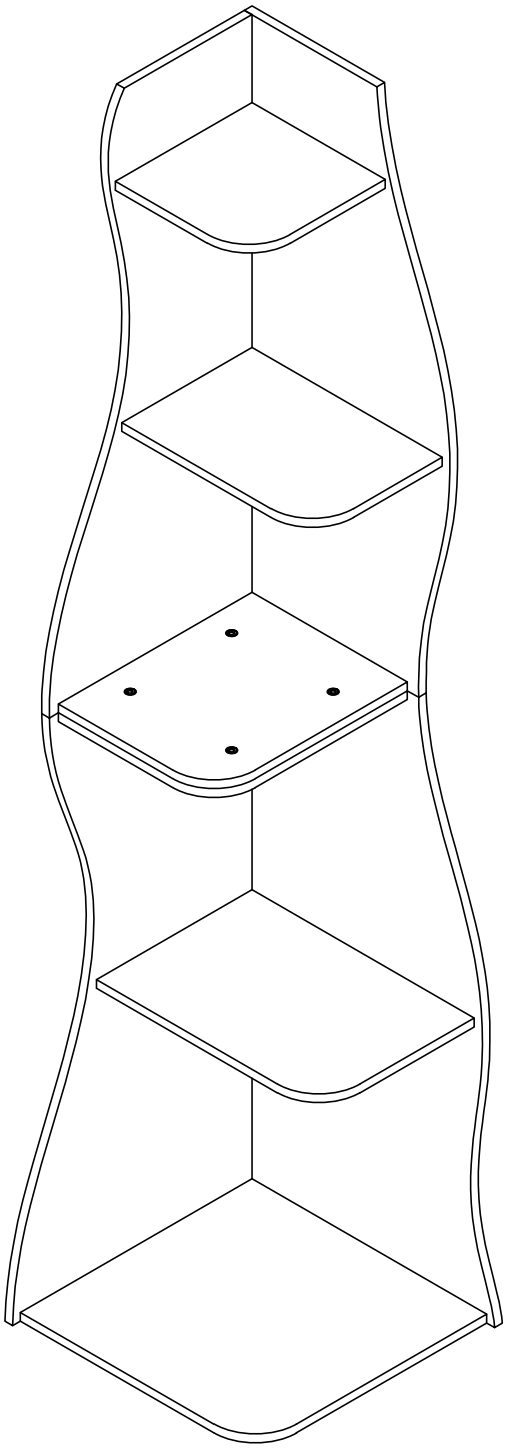


Tools

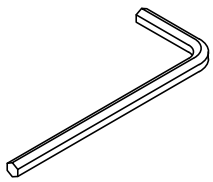


Hexagon wrench

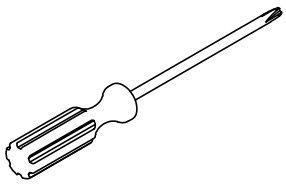



Cross Screwdriver

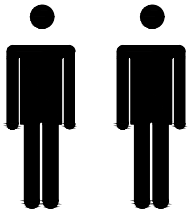


2 Persons

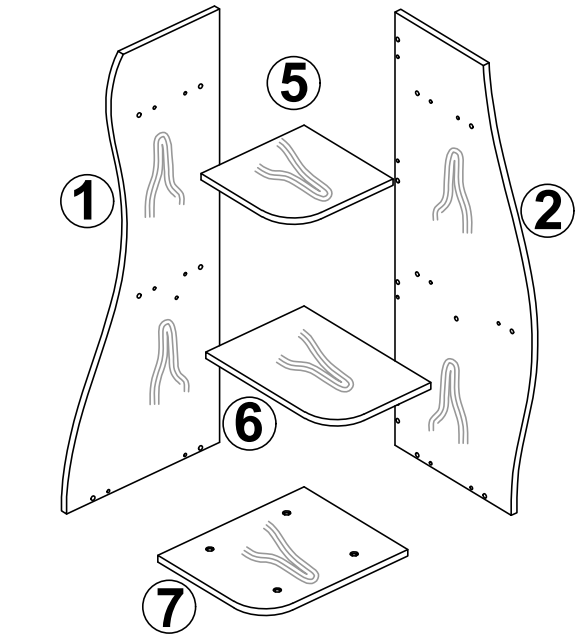


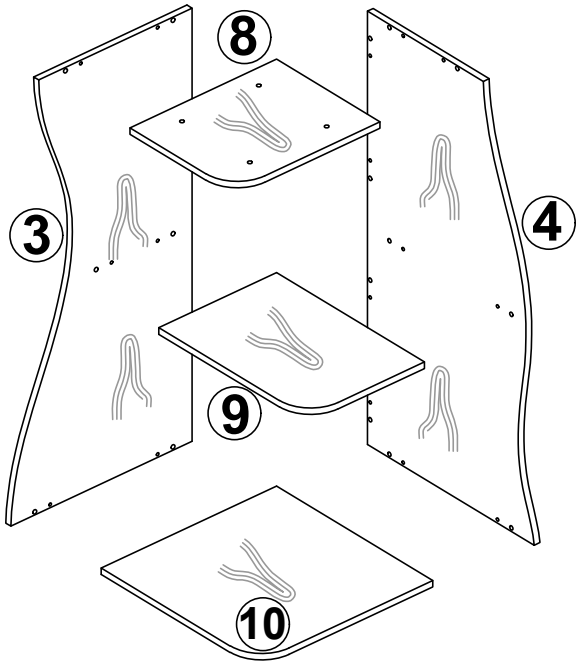


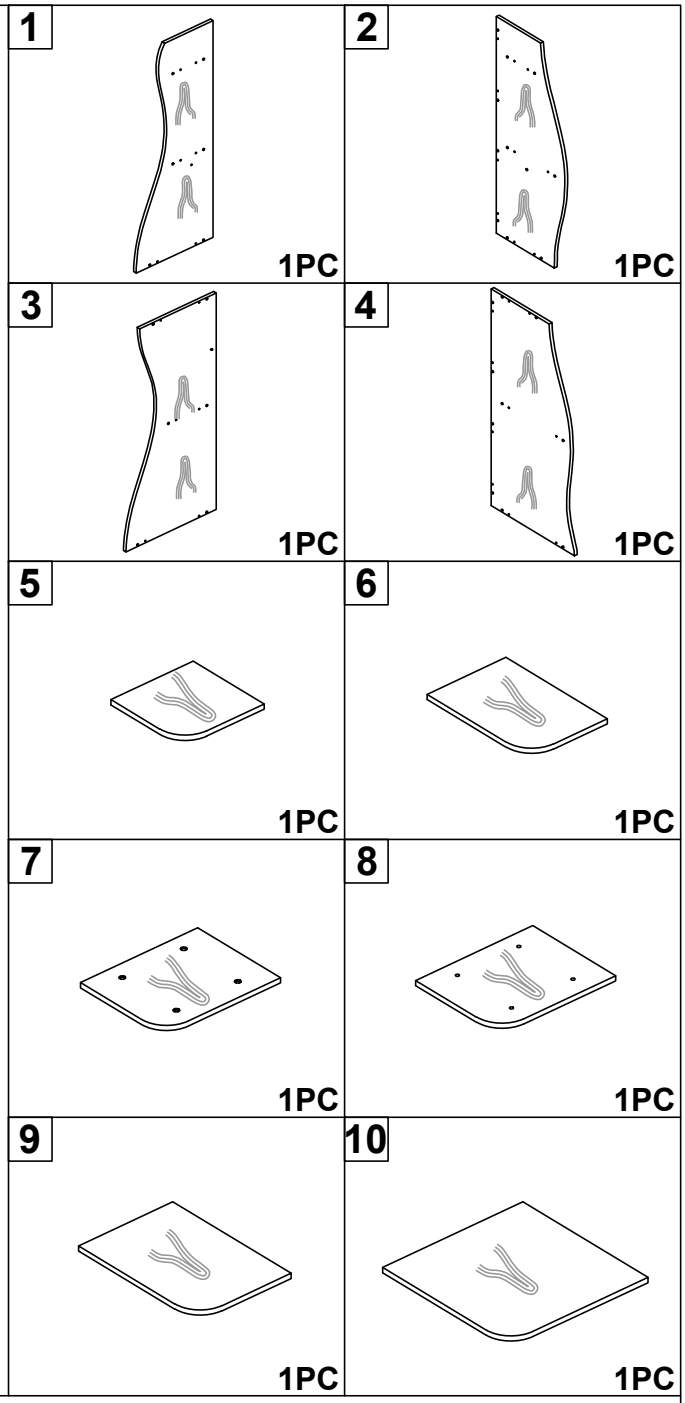




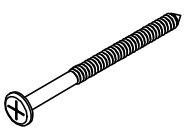

# Hardware List

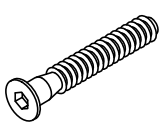
| A | 32 PCS |
|---|---|
|  | |
| Ø7*38mm | |


| B | 32 PCS |
|---|---|
|  | |
| Ø6*30mm | |
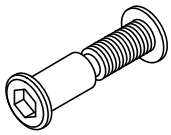
| C | 4 PCS |
|---|---|
|  | |
| Ø8*18mm | |

| D | 2 PCS |
|---|---|
|  | |
| Ø6*40mm | |

| E | 2 PCS |
|---|---|
|  | |
| Ø4*40mm | |

| F | 6 PCS |
|---|---|
|  | |
| Ø30*2mm | |
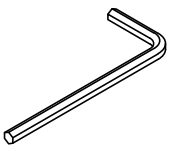
| G | 2 PCS |
|---|---|
|  | |

| H | Spare Parts | |
|---|---|---|
| A*2 | B*2 | C*1 |
| D*1 | E*1 | |

# Matters Need Attention

## During Installation

1. Please assemble this item on soft surfaces such as carpets to protect the finish.

2. Pay attention to stability when assembling to avoid falling or scratching.

## Cleaning and Maintenance


1. To protect the finish, avoid chemicals and household cleaners.

2. Keep away from the heat source to prolong the service life.

3. Wipe off any remaining liquid on the surface with a damp cloth.

**Step 1**


Install accessory **B** on Panel **1**

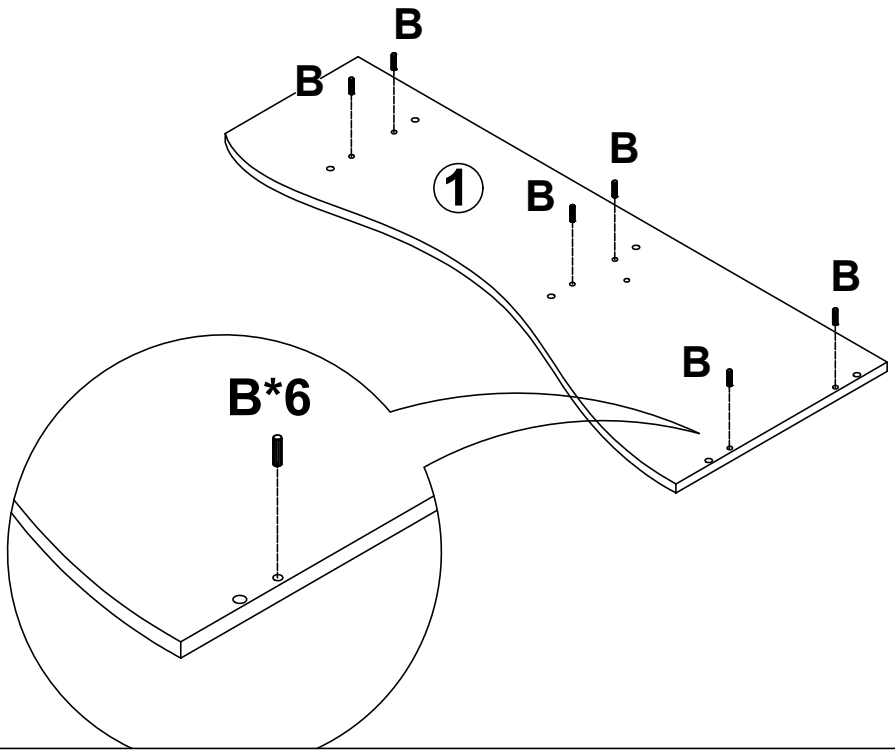


| B | 6 PCS |
|---|---|
|  | |
| Ø6*30mm | |

**Step 2**


Install panels **5**, **6**, and **7** in order onto panel **1**, and secure them using accessory **A**

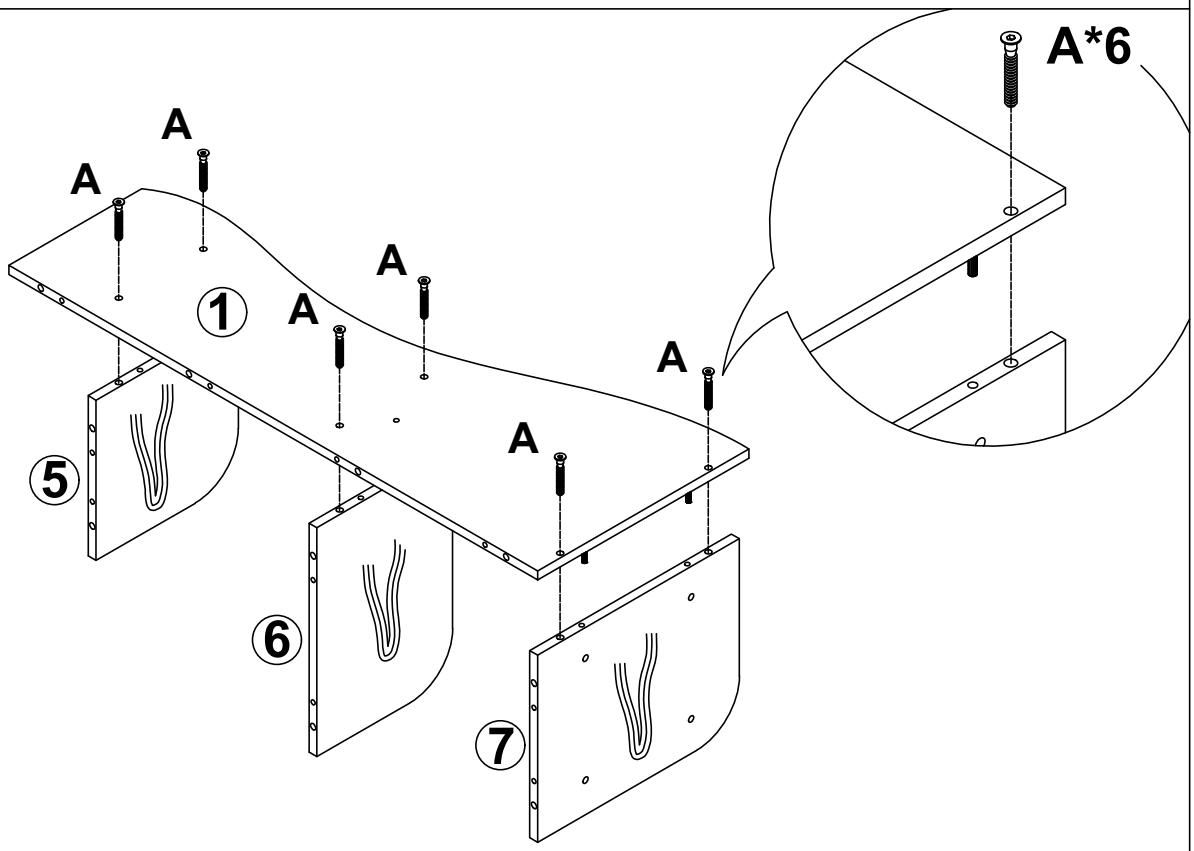


| A | 6 PCS |
|---|---|
|  | |
| Ø6*48mm | |

**Step 3**


Install accessory **B** on Panel **2**

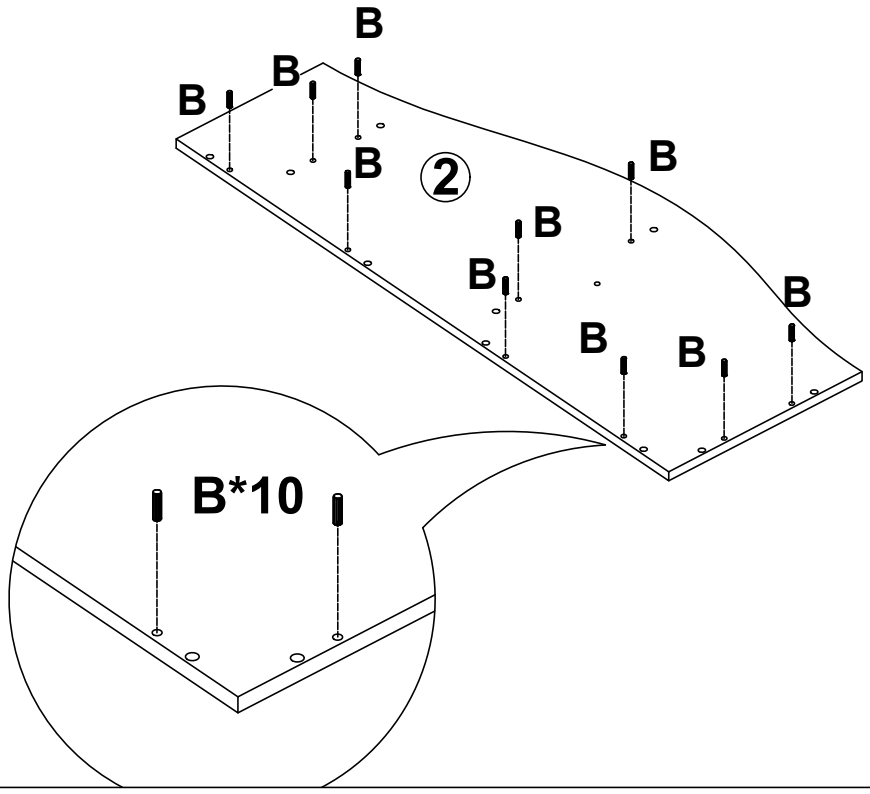


| B | 10 PCS |
|---|---|
|  | |
| Ø6*30mm | |

**Step 4**


Install panels **1,5**, **6**, and **7** in order onto panel **2**, and secure them using accessory **A**

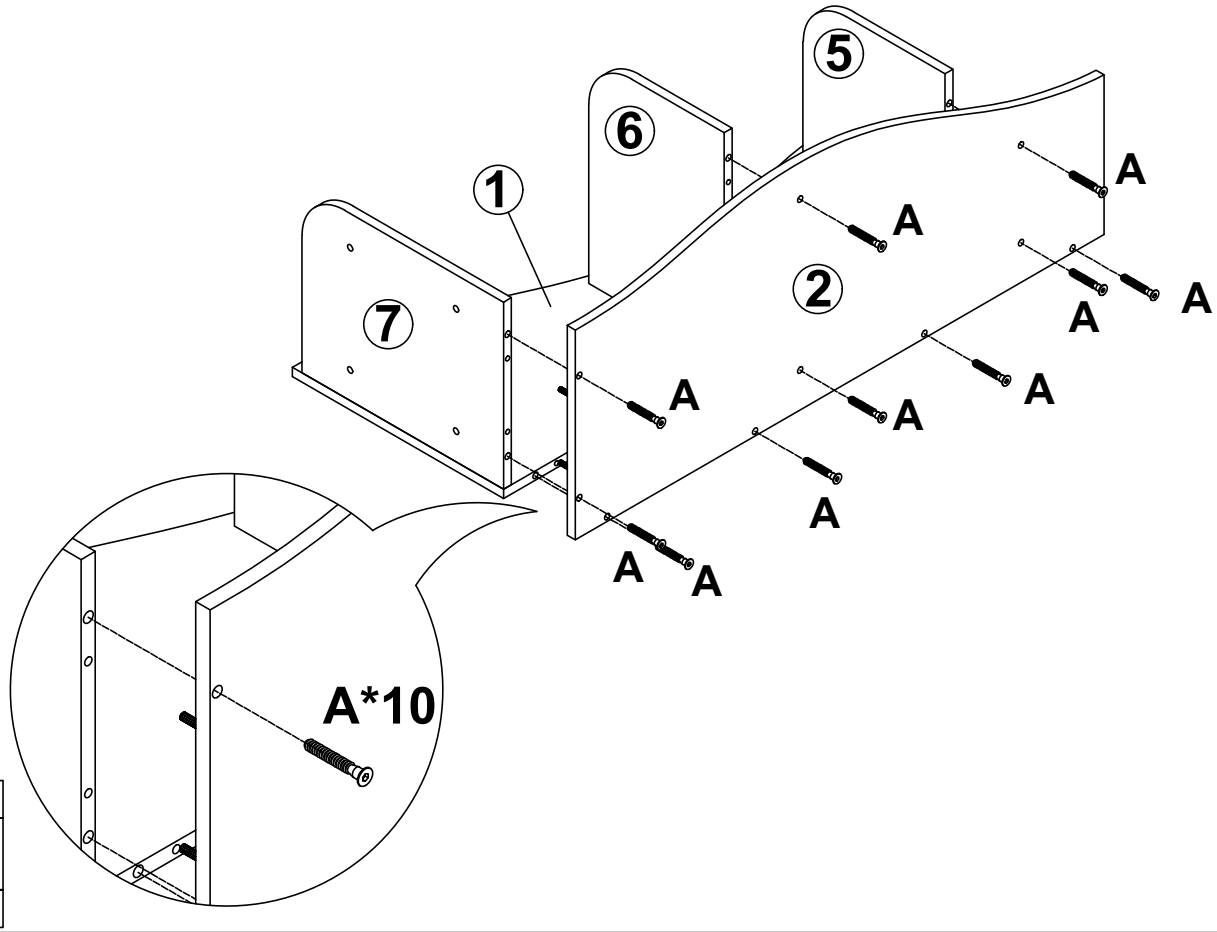


| A | 10 PCS |
|---|---|
|  | |
| Ø6*48mm | |

**Step 5**


Install accessory **B** on Panel **3**

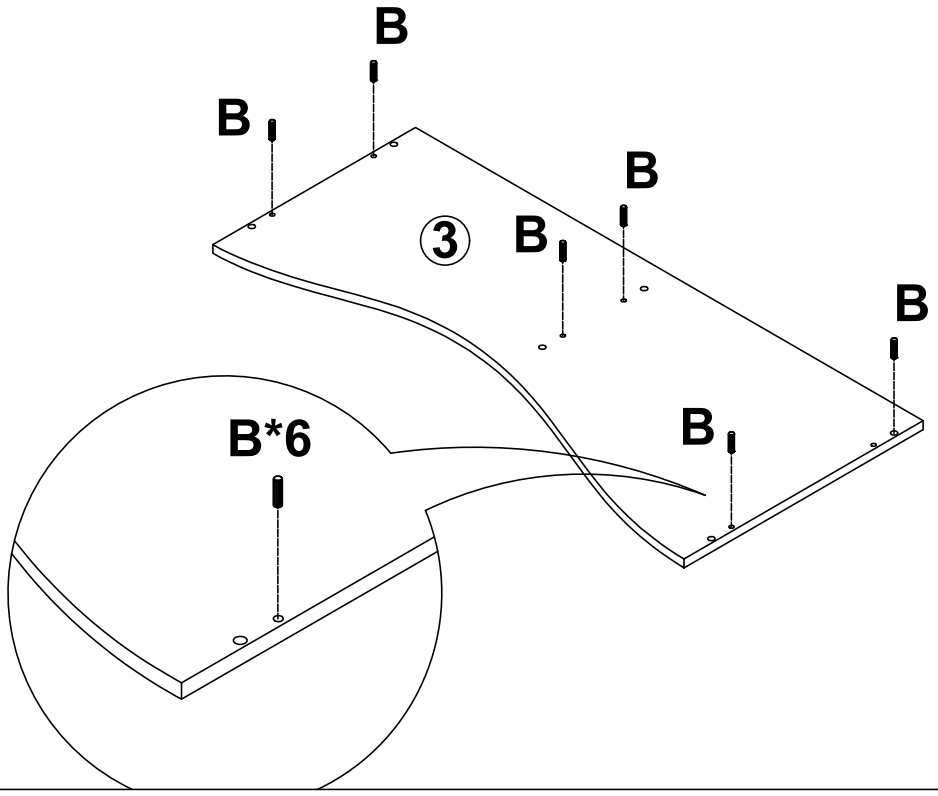


| B | 6 PCS |
|---|---|
|  | |
| Ø6*30mm | |

**Step 6**


Install panels **8**, **9**, and **10** in order onto panel **3**, and secure them using accessory **A**

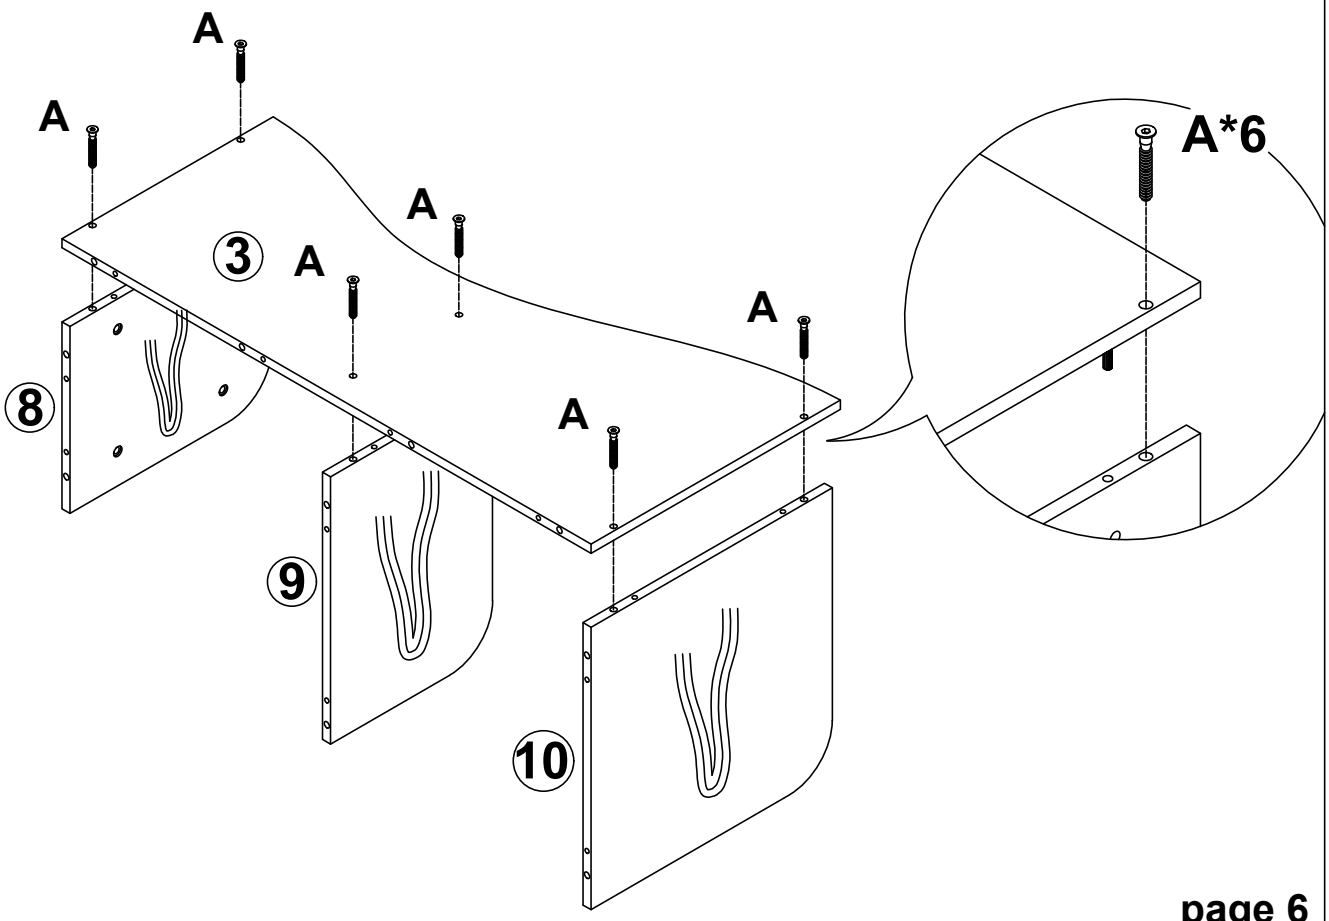


| A | 6 PCS |
|---|---|
|  | |
| Ø6*48mm | |

**Step 7**


Install accessory **B** on Panel **4**

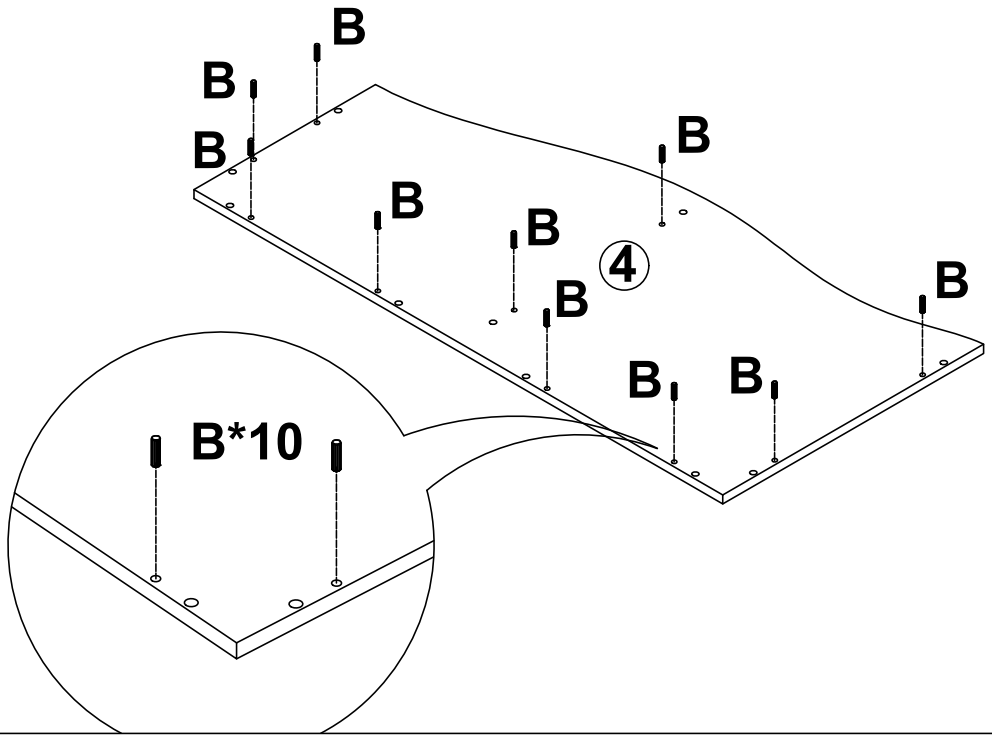


| B | 10 PCS |
|---|---|
|  | |
| Ø6*30mm | |


**Step 8**

Install panels **3, 8**, **9**, and **10** in order onto panel **4**, and secure them using accessory **A**

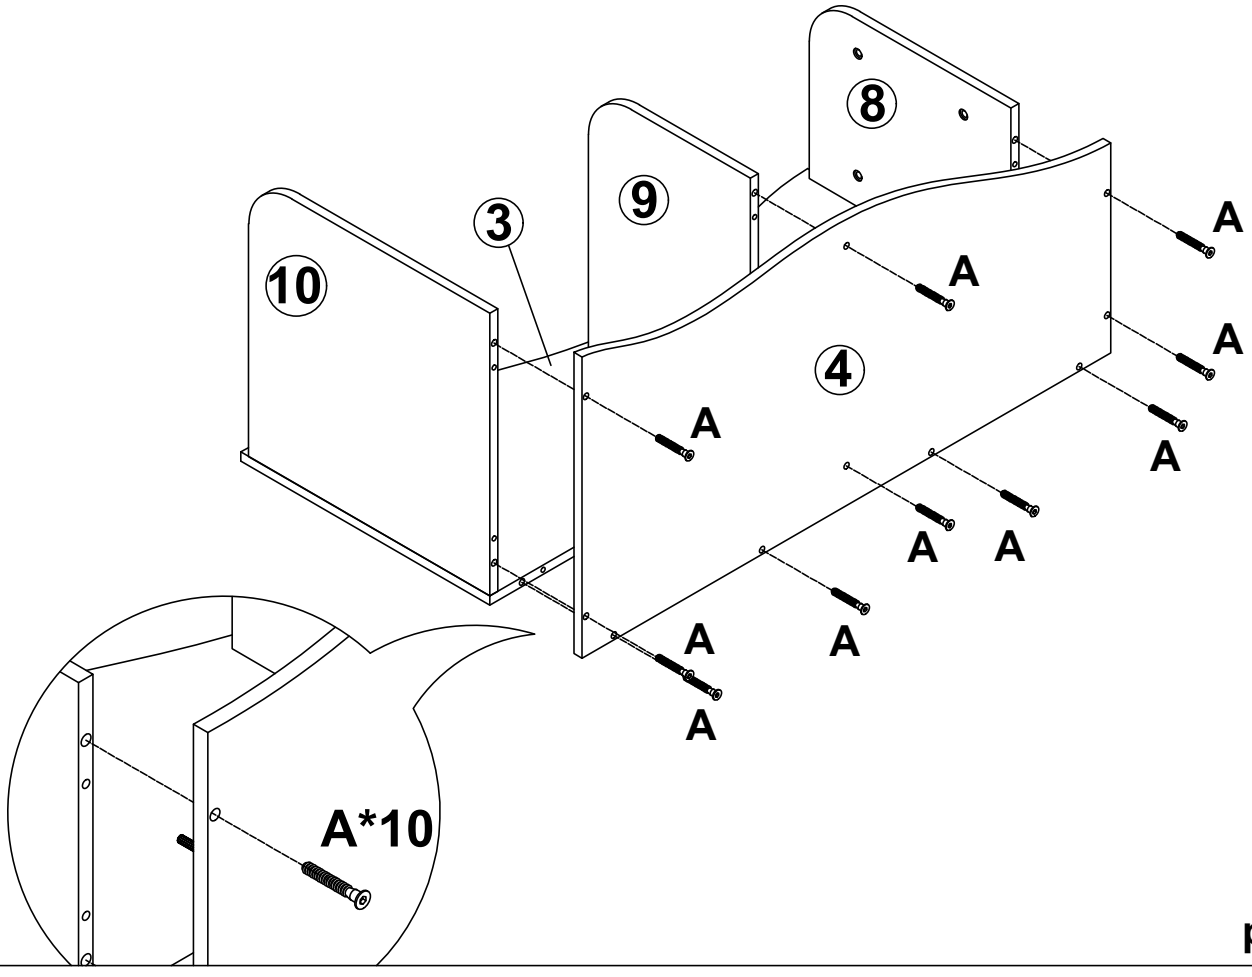


| A | 10 PCS |
|---|---|
|  | |
| Ø6*48mm | |


**Step 9** Assemble the upper and lower sections of the cabinet, and use accessory **C** to secure panels **7** and **8**

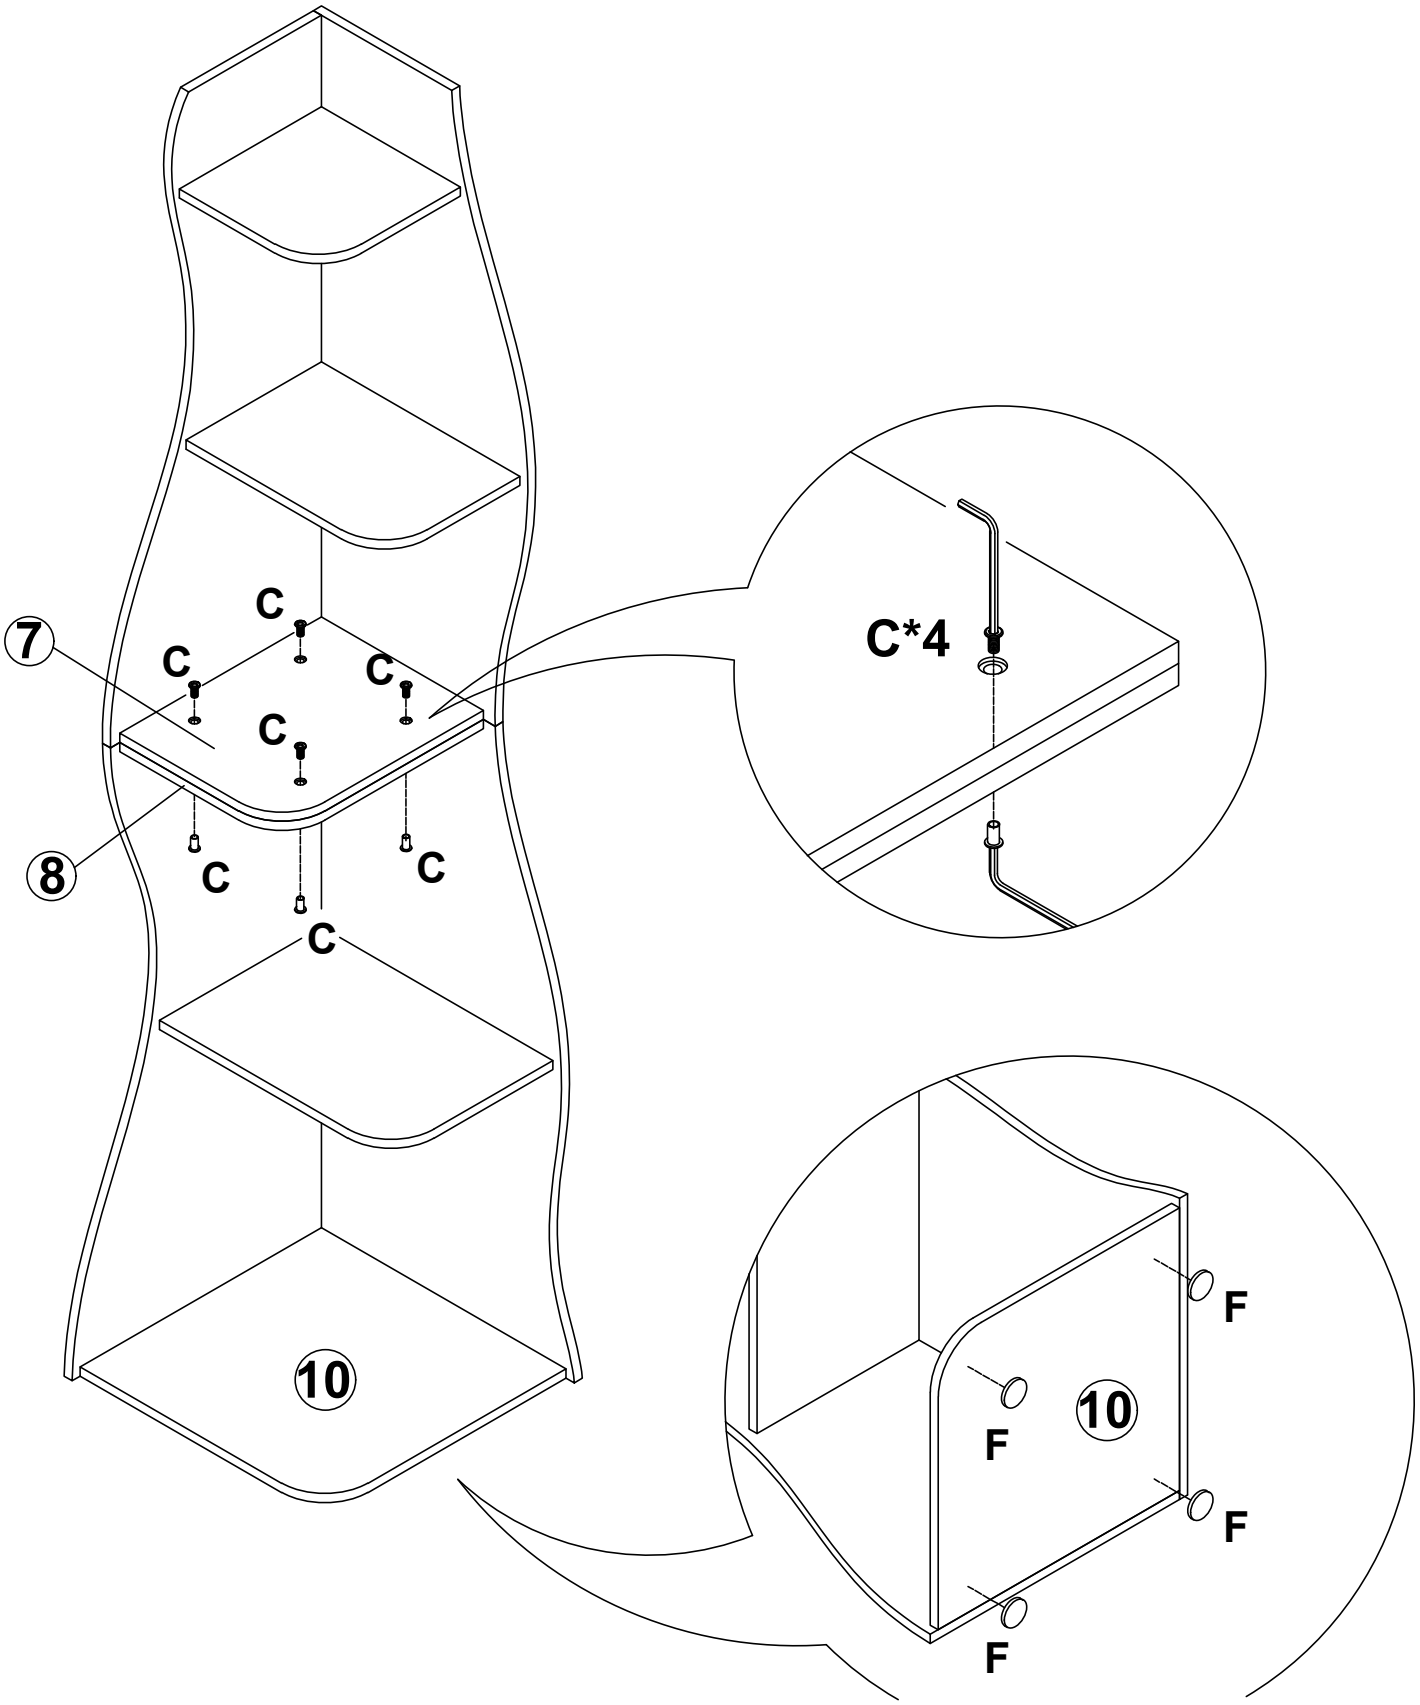



Attach the sponge pad accessory **F** to Panel **10**

| C | 4 PCS | F | 6 PCS |
|---|---|---|---|
|  | |  | |
| Ø8*18mm | | Ø30*2mm | |

**Step 10** Drill holes in panels **1** and **2** of the cabinet and install accessory **D** into the wall, then install the cabinet and secure it using accessory **E**

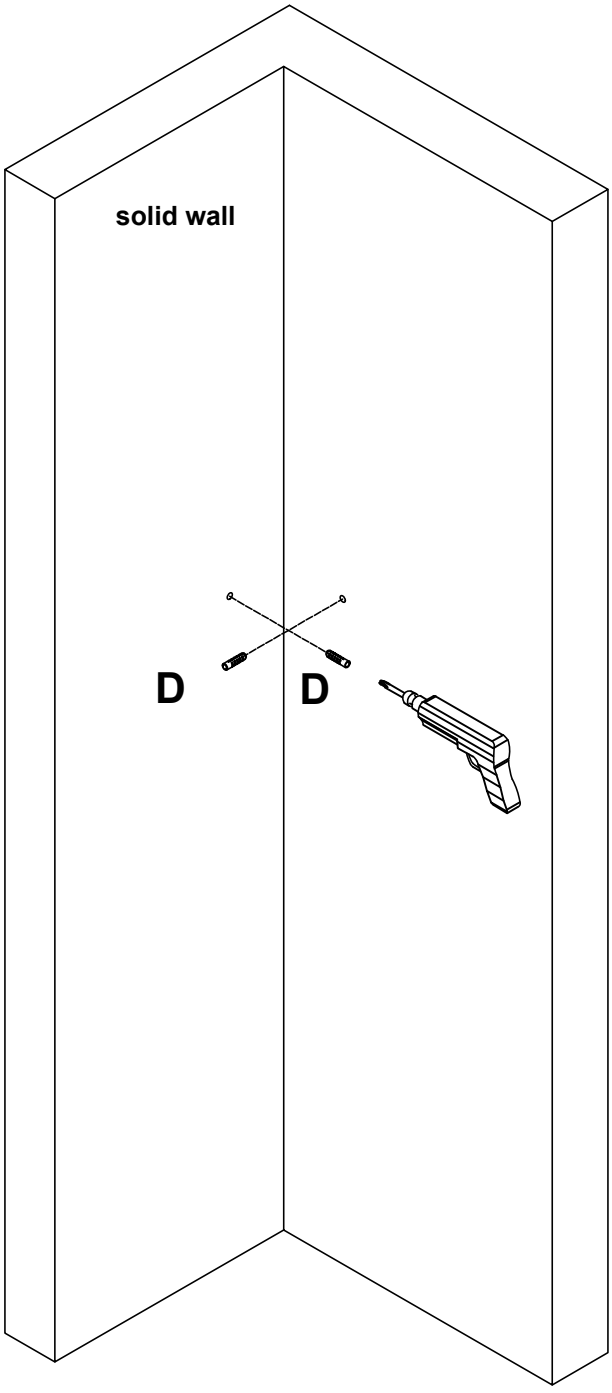

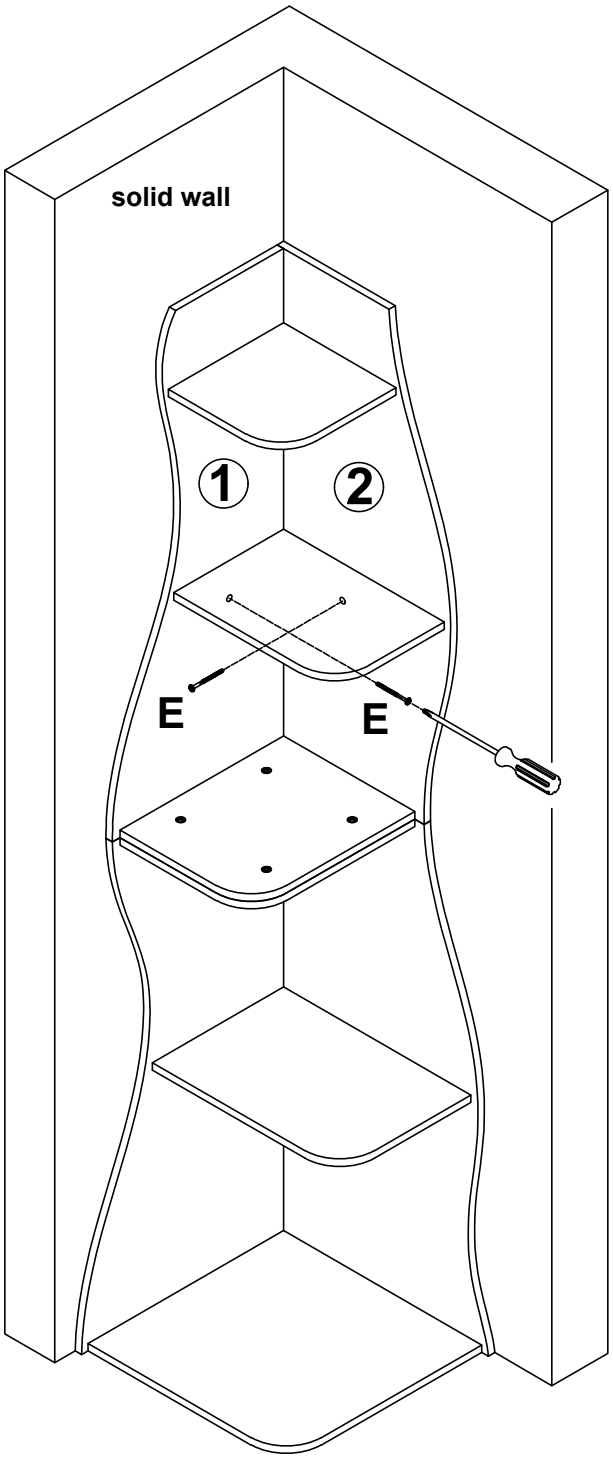
| D | 2 PCS |
|---|---|
|  | |
| Ø6*40mm | |

| E | 2 PCS |
|---|---|
|  | |
| Ø4*40mm | |