




Product Installation Instructions

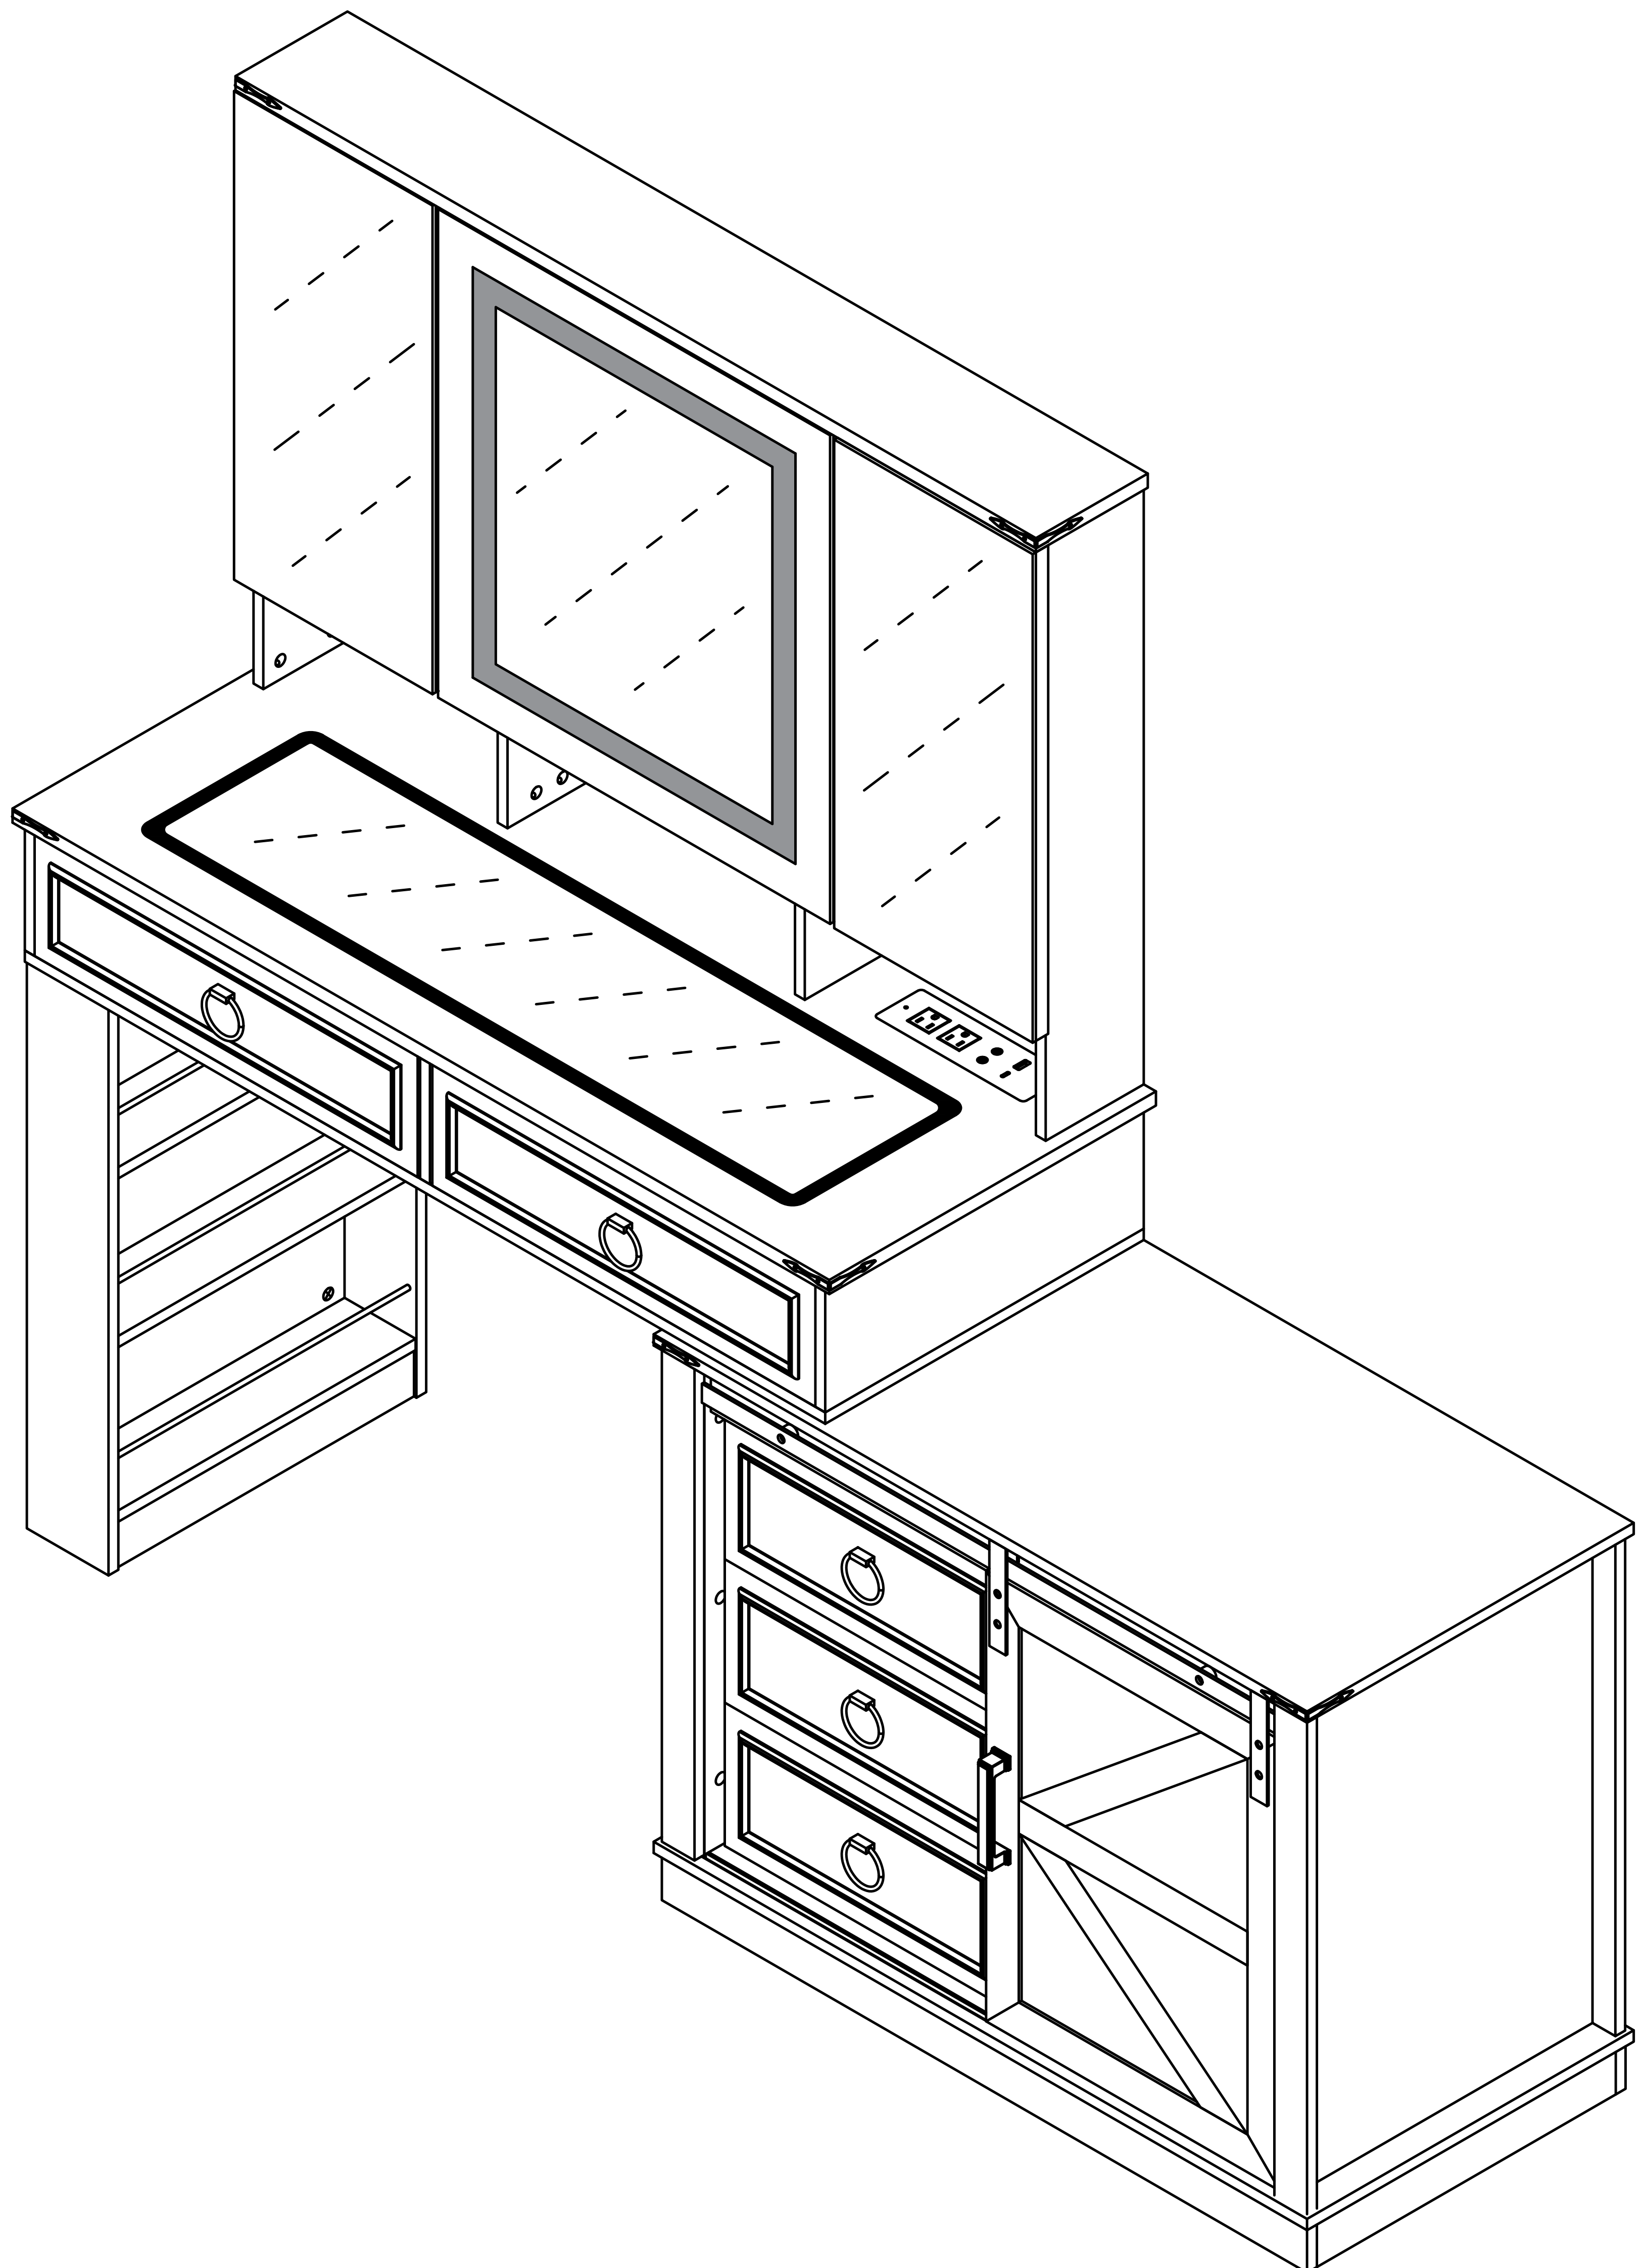


Effect 1

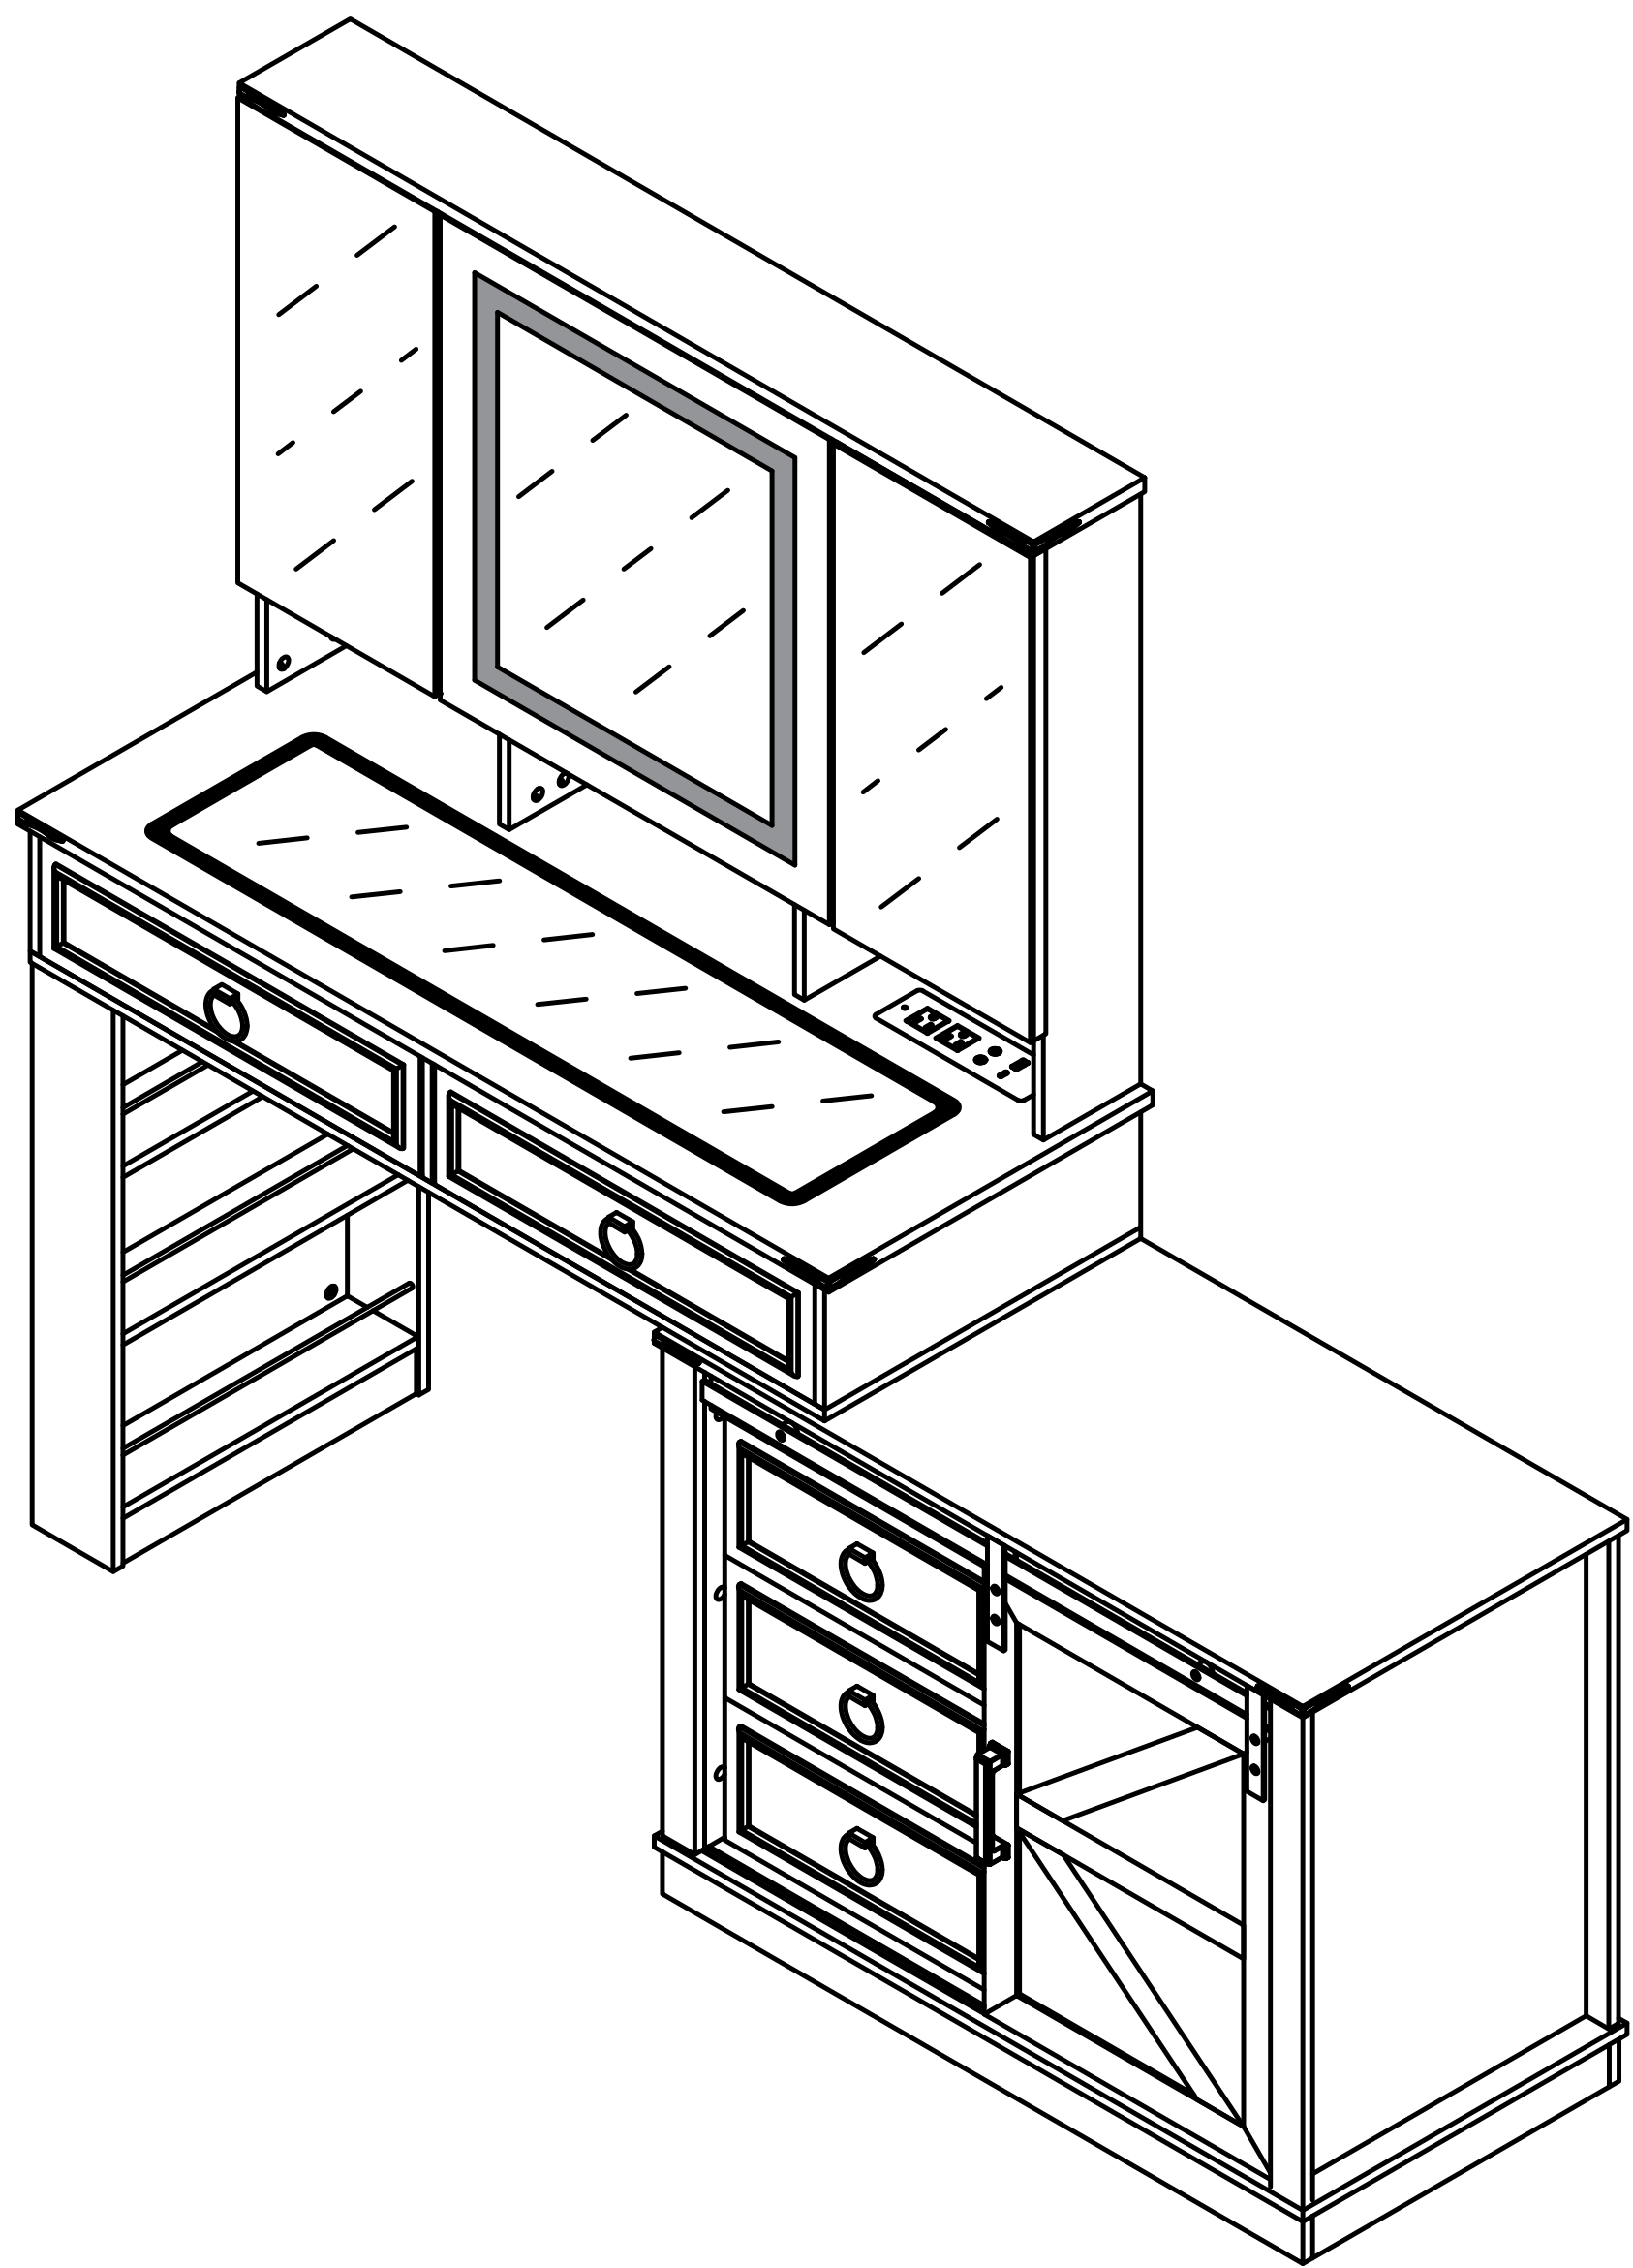


Effect 2

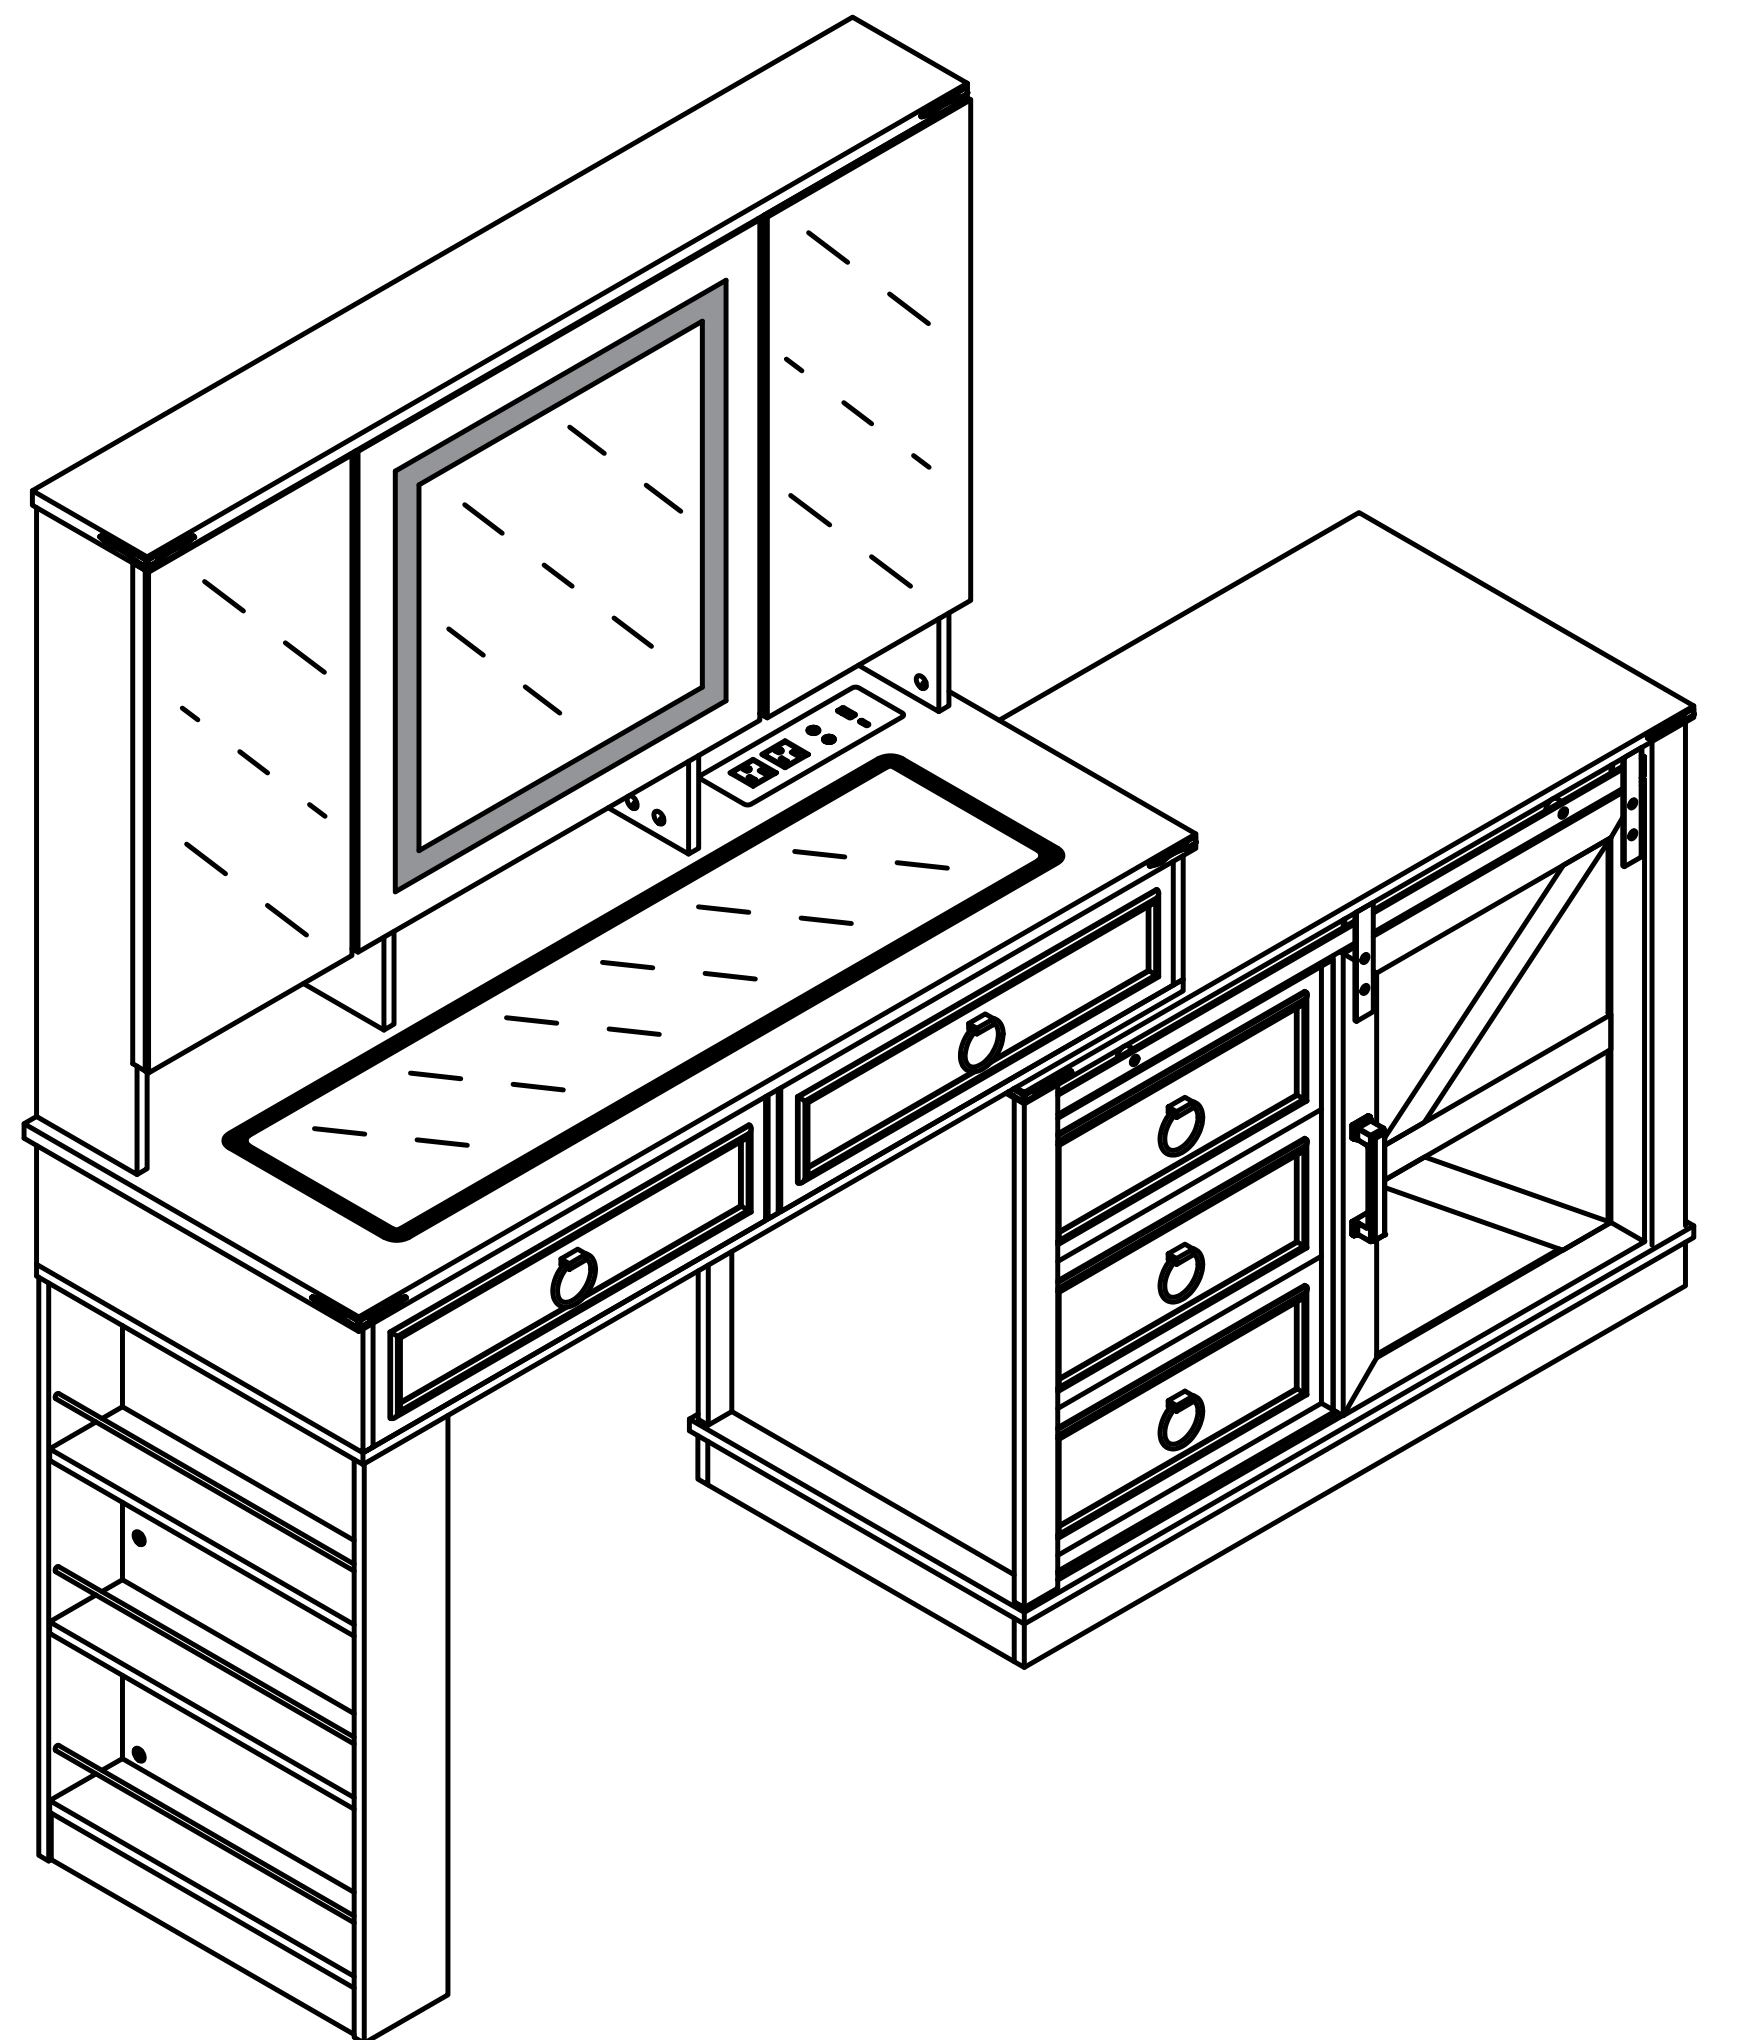


Effect 3

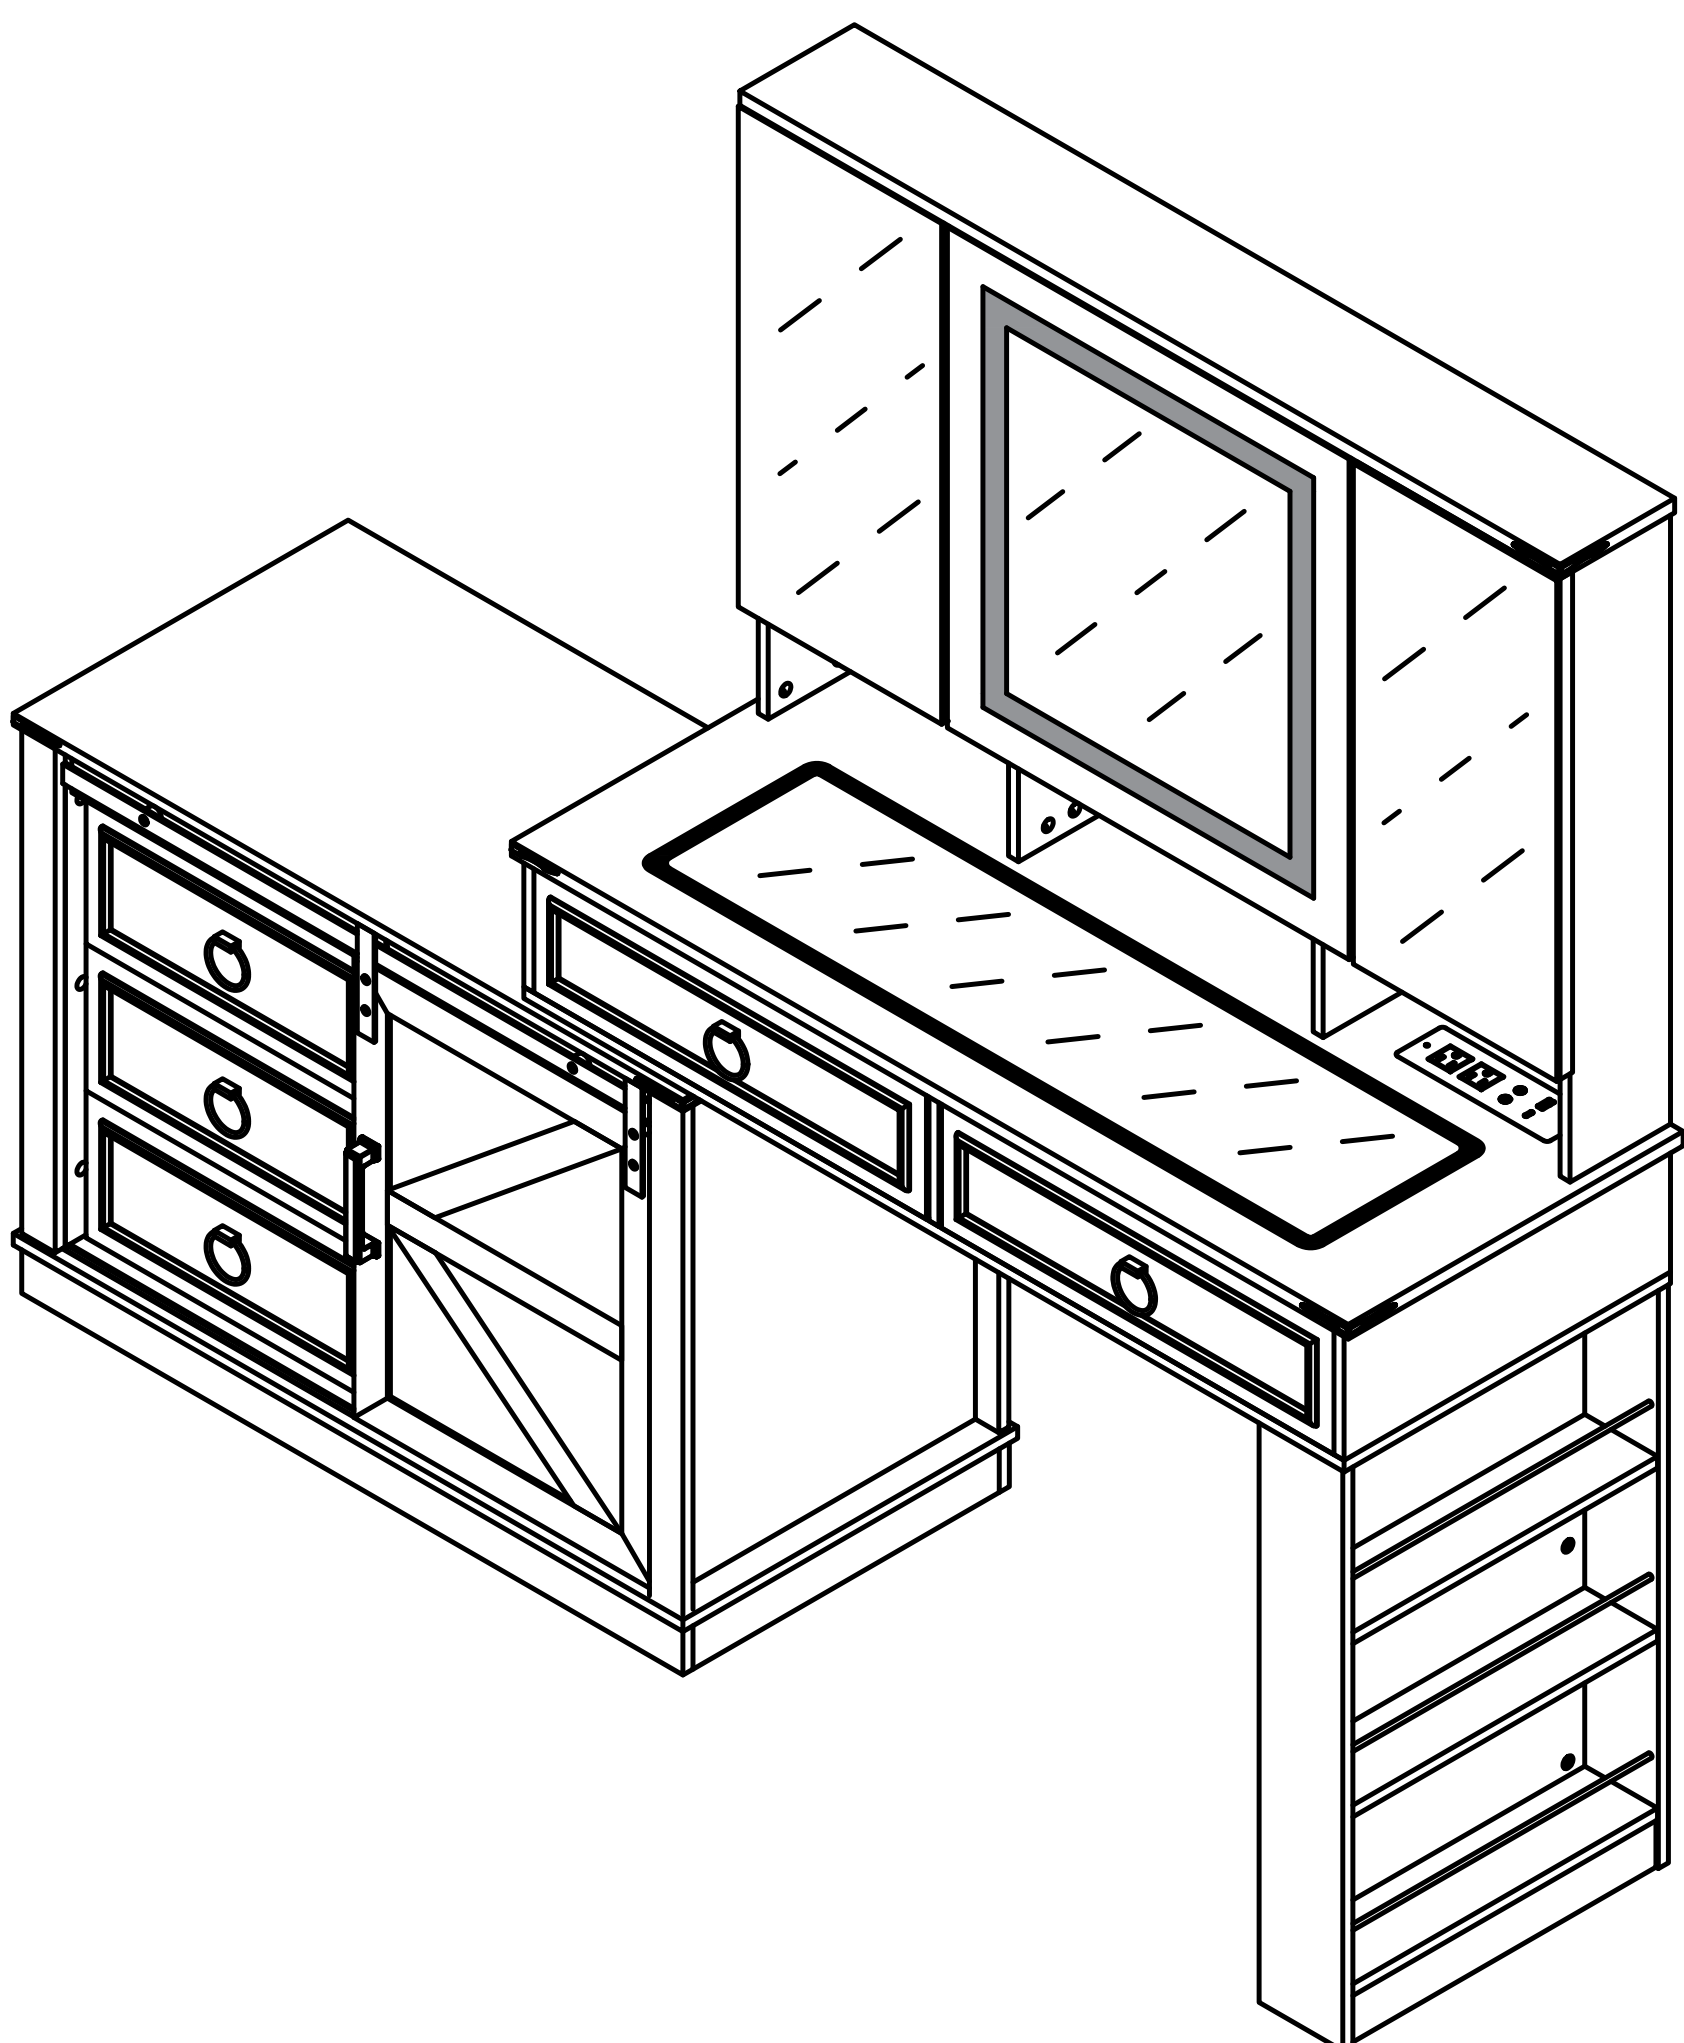


Effect 4

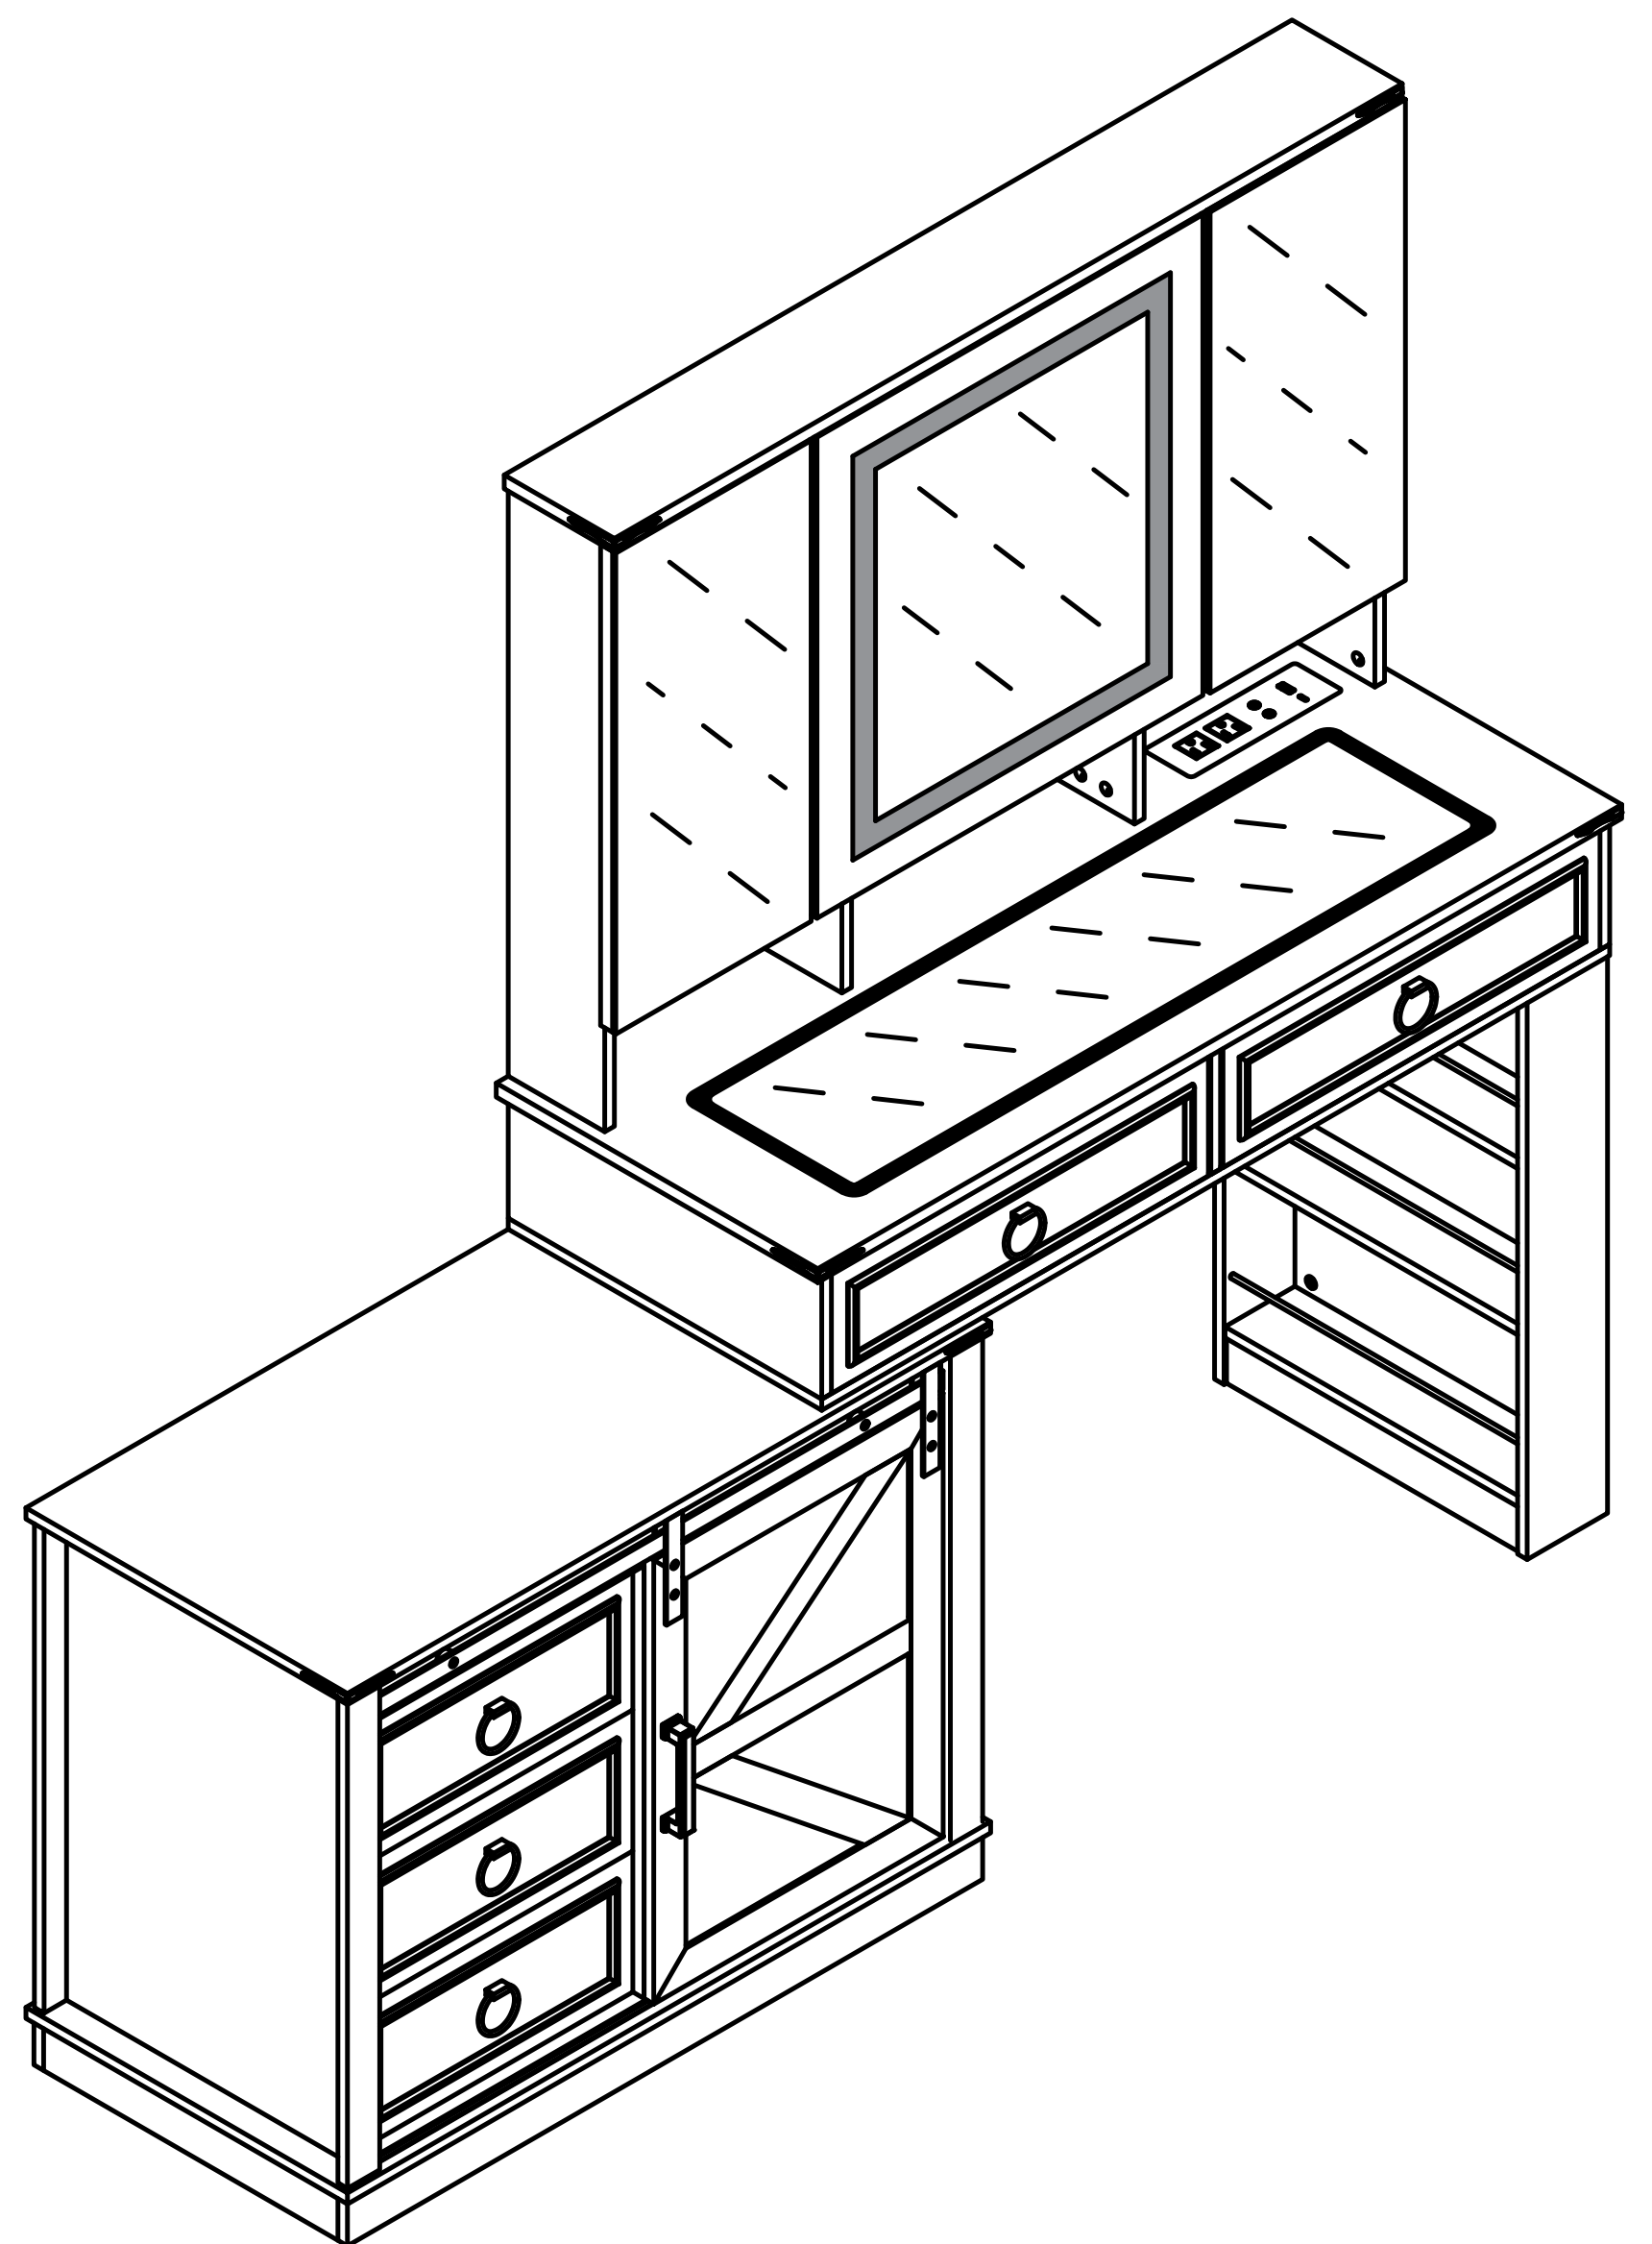


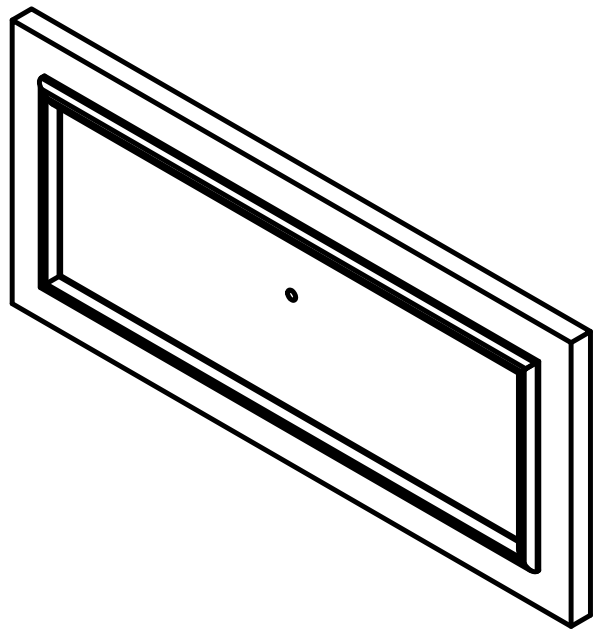


1x3

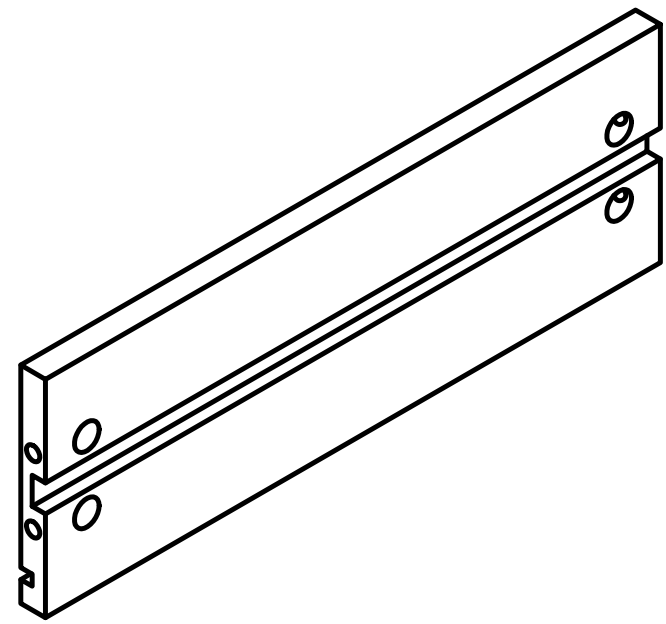


2x6

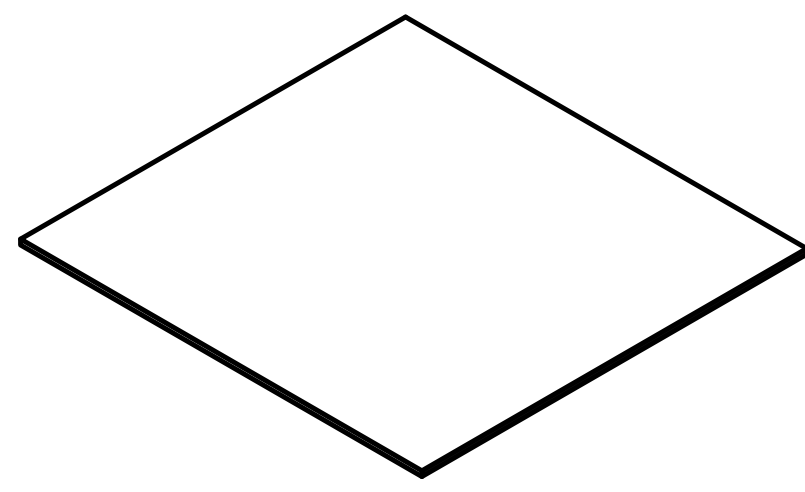


3x3

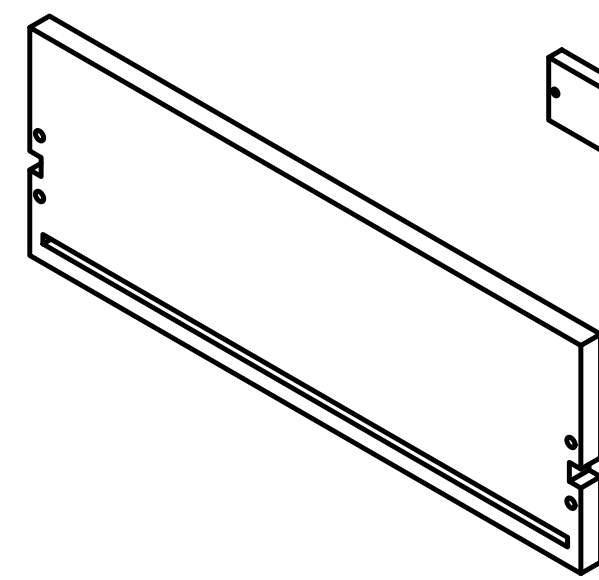


4x3

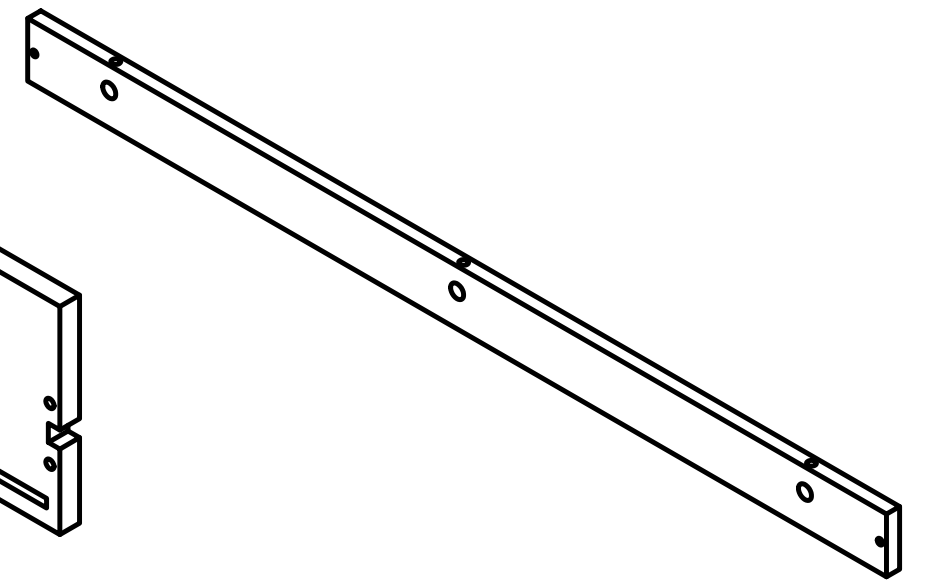


5x2

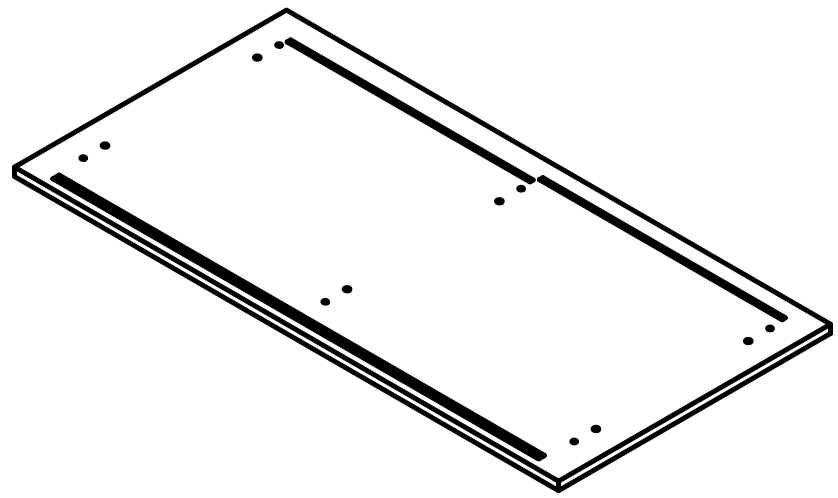


6x1

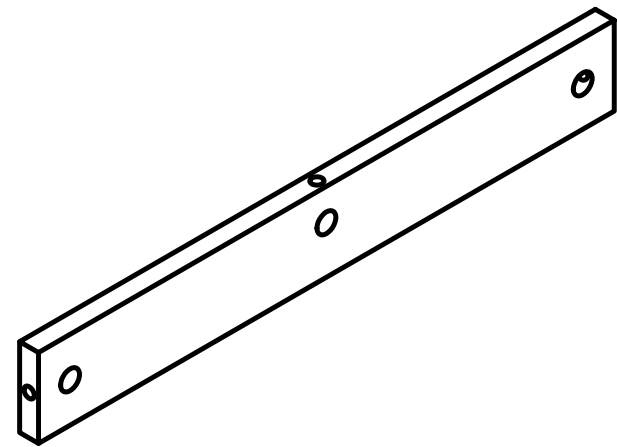


7x2

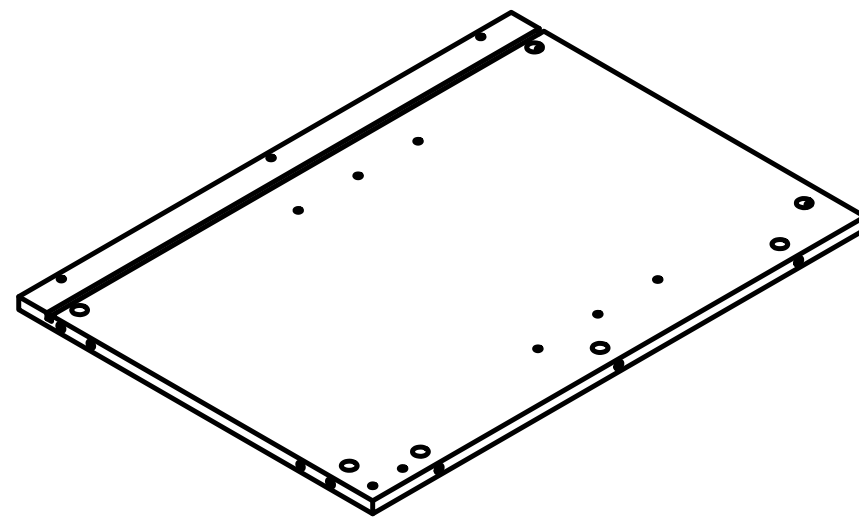


8x1

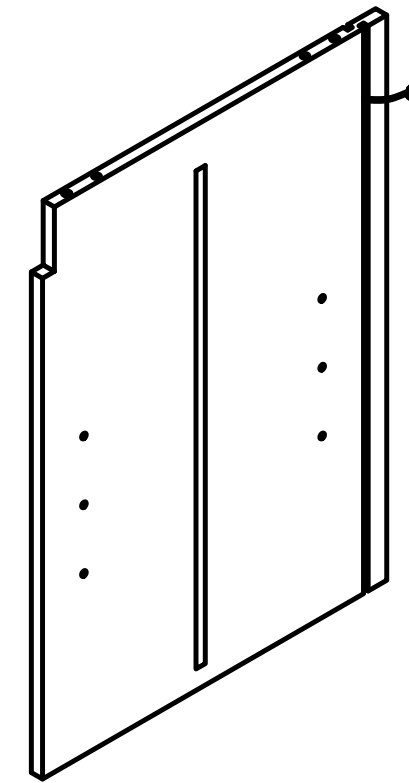


9x1

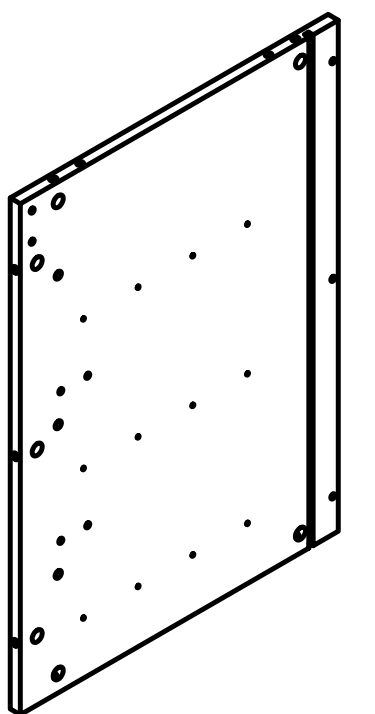


10x1

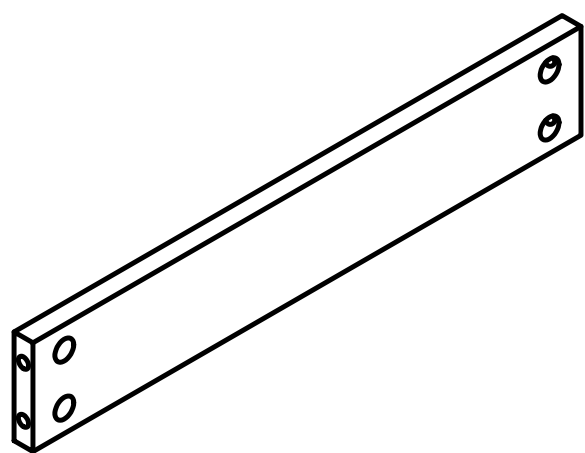

11x2

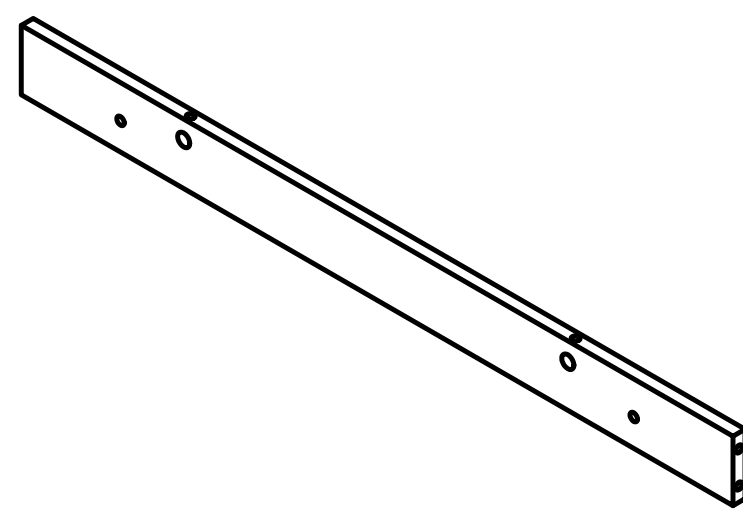


12x1

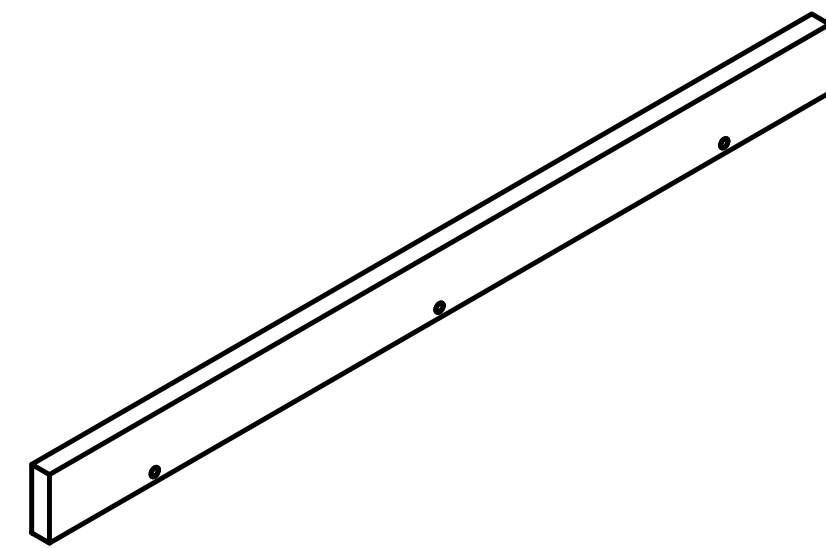


13x2




14x2

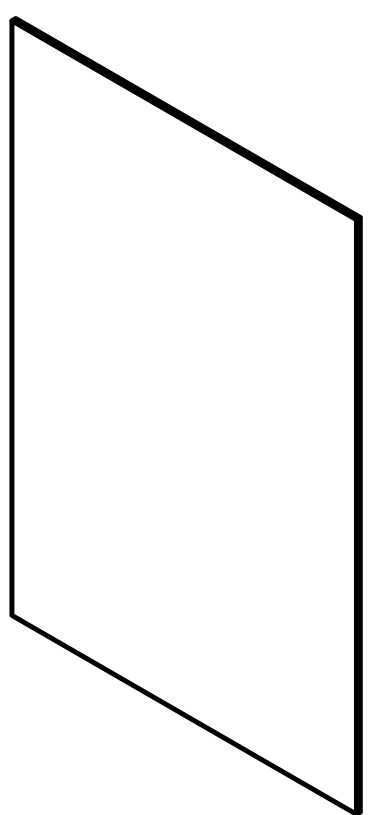


15Ax1

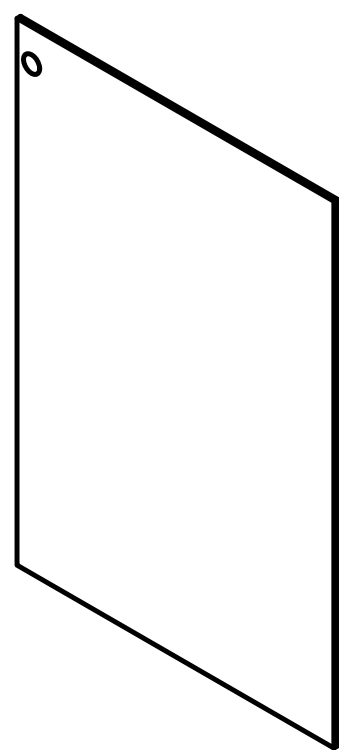


15Bx1

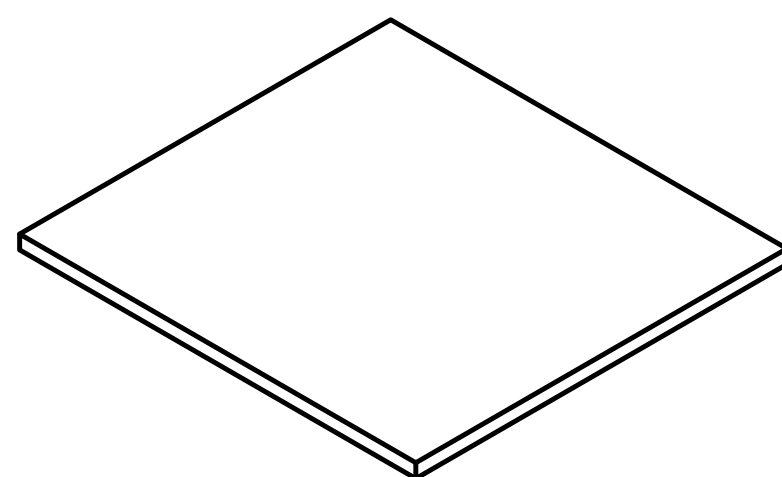


16x1

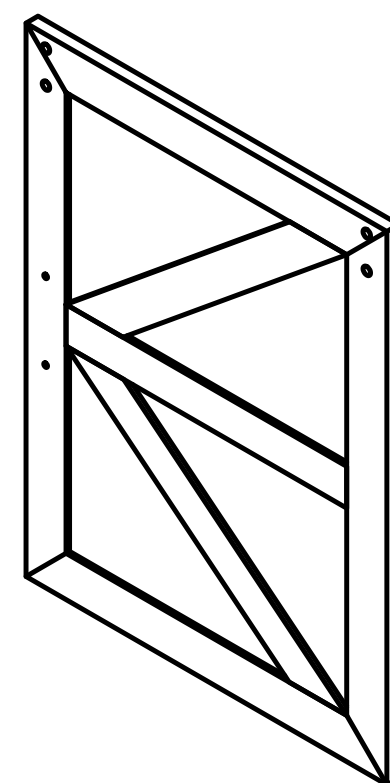


17x1

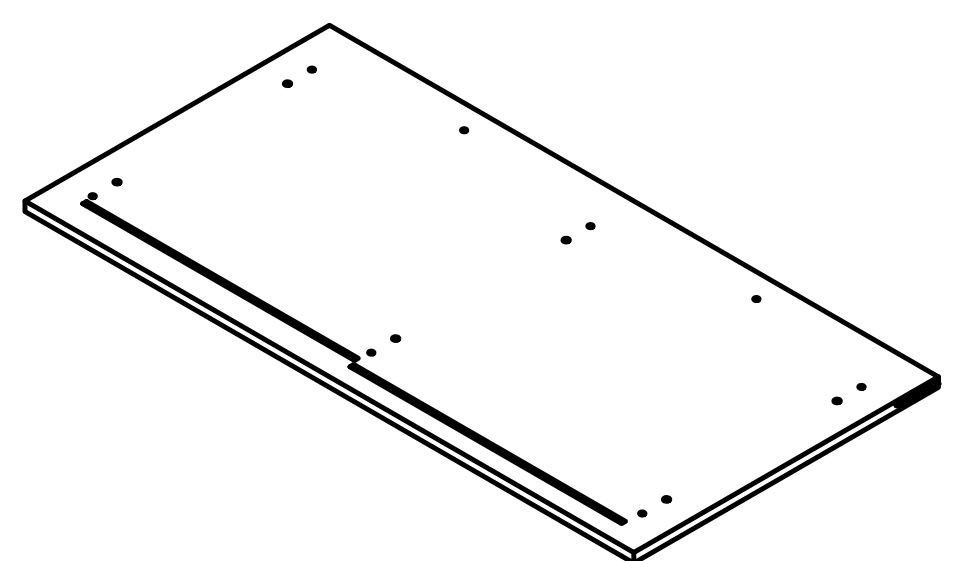


18x1

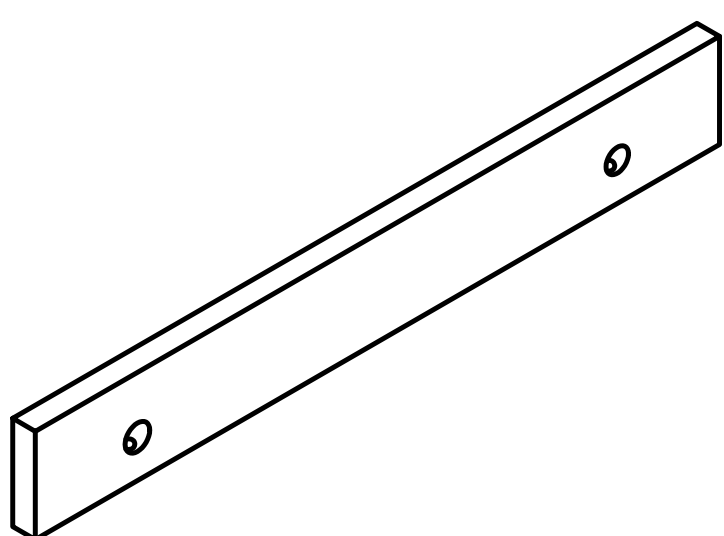


19x1

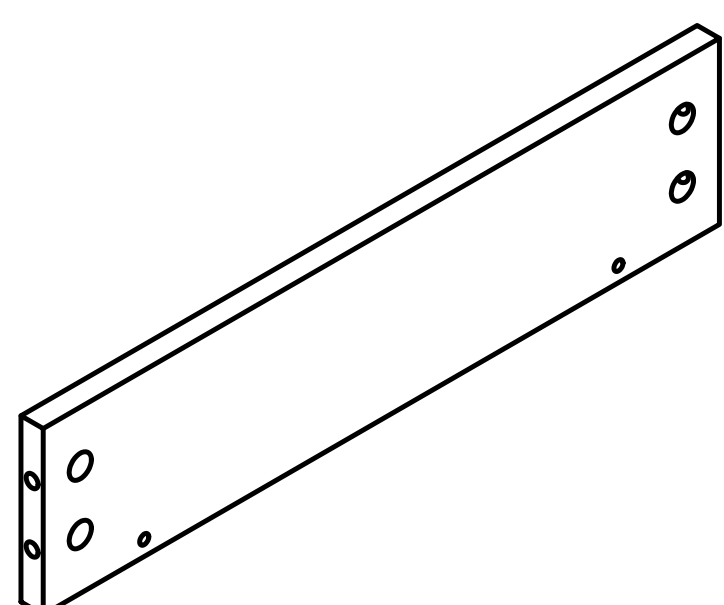


20x1

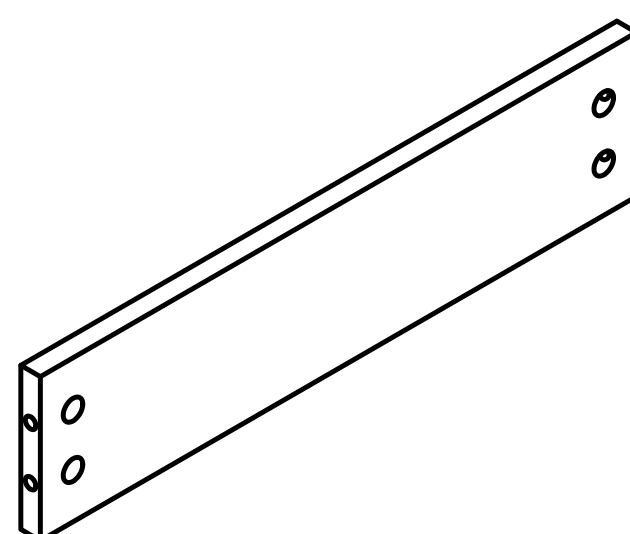


21x2

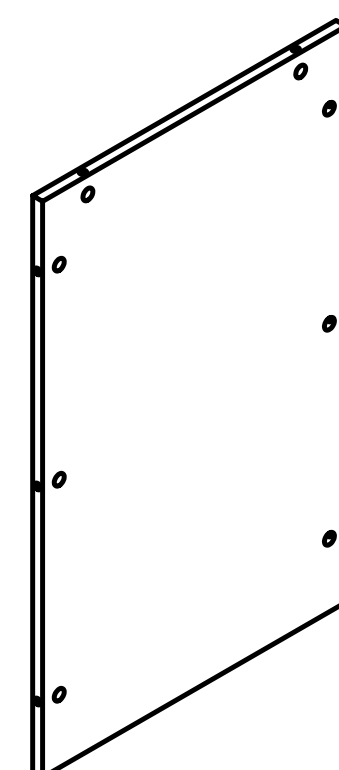


22x1

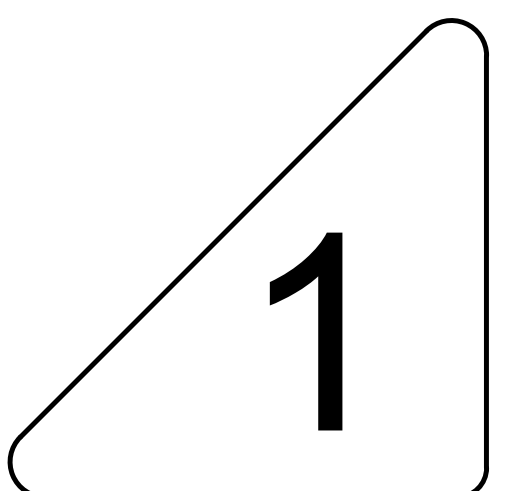


1

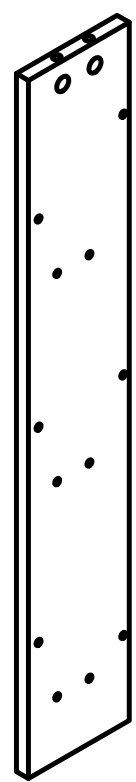


23x1

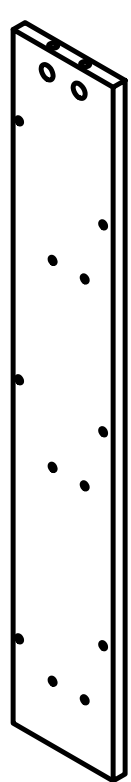


24x1

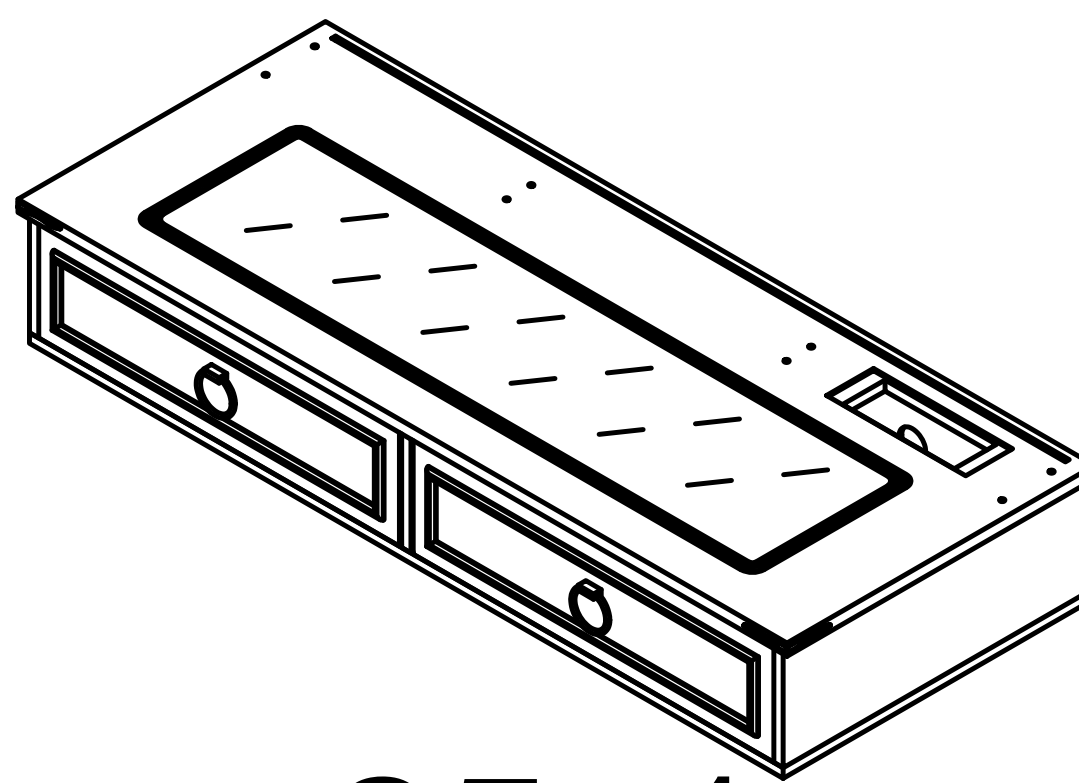


25x1

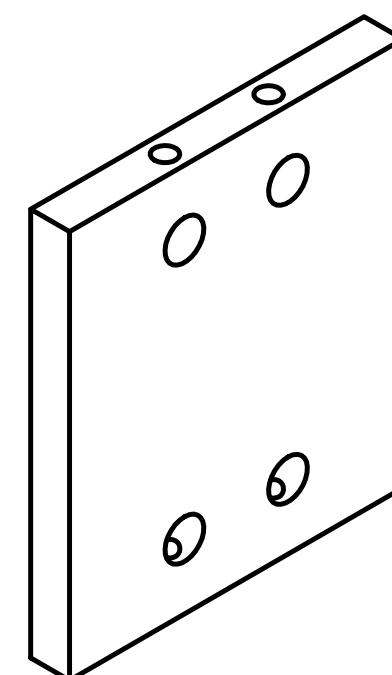


26x2

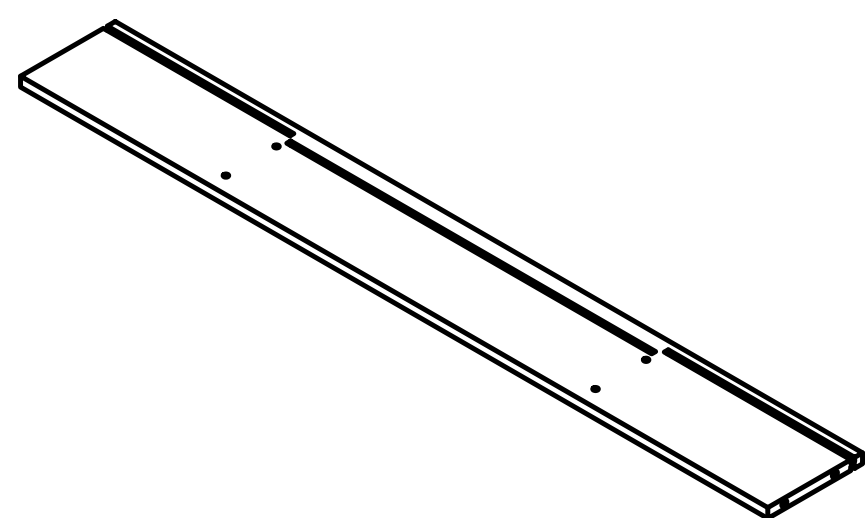


27x1

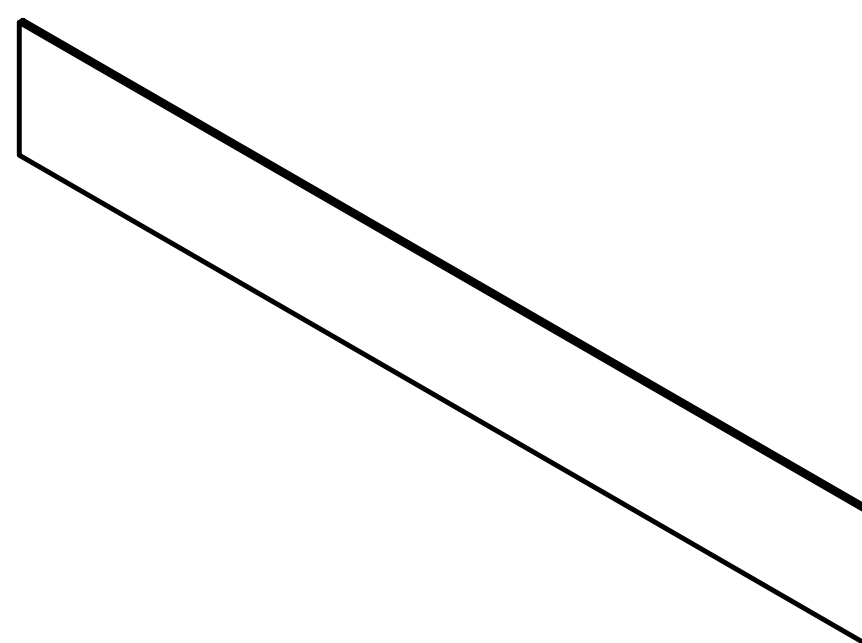


28x1

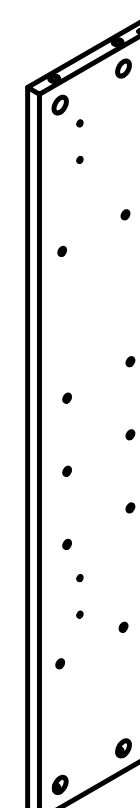


29x1

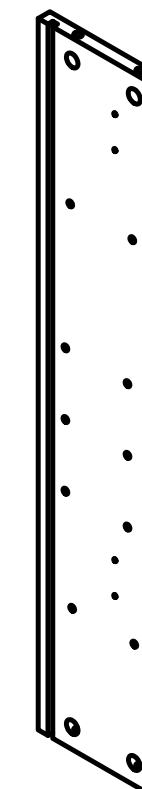


30x1

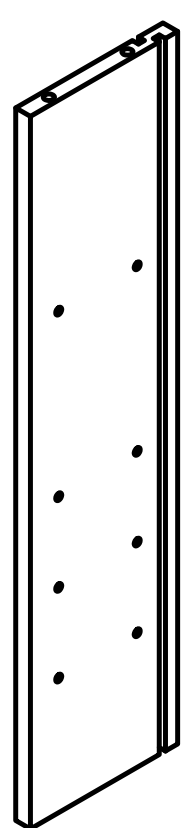


31x1

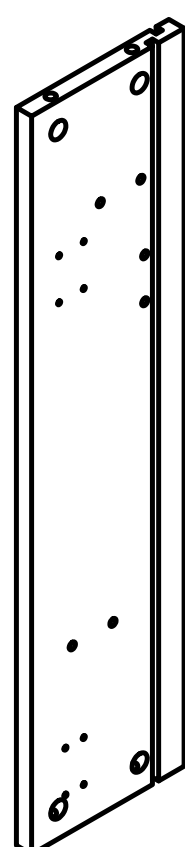


32x1

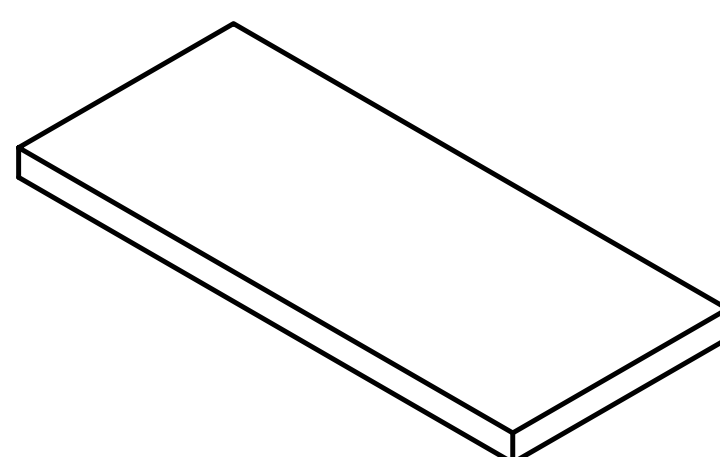


33x2

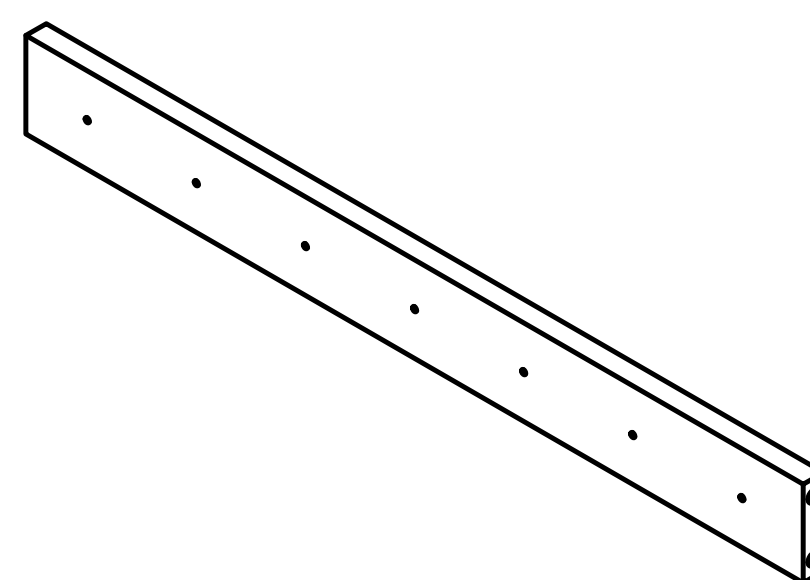


34x1

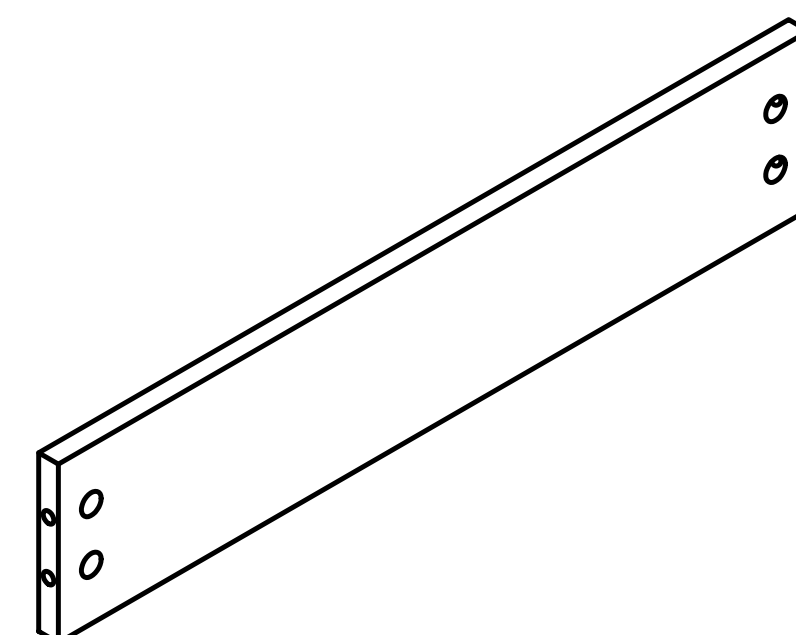


35x1

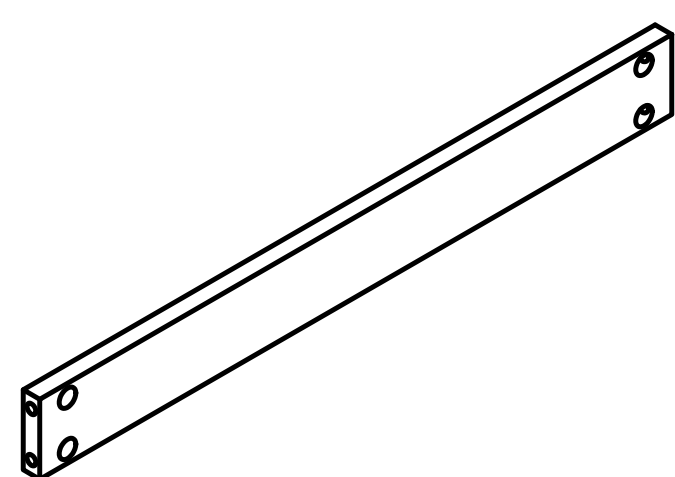


36x1

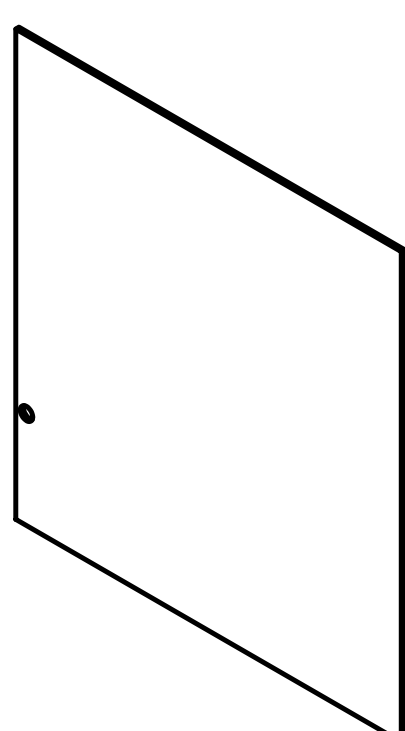


37x1

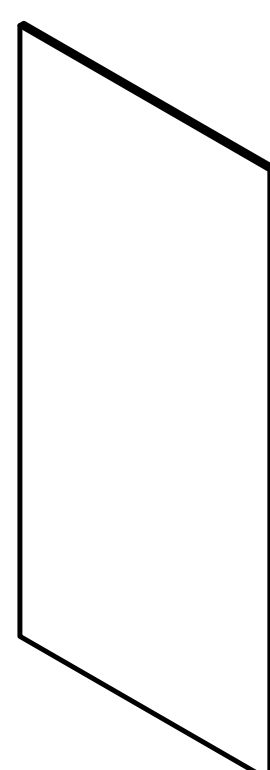


38x2

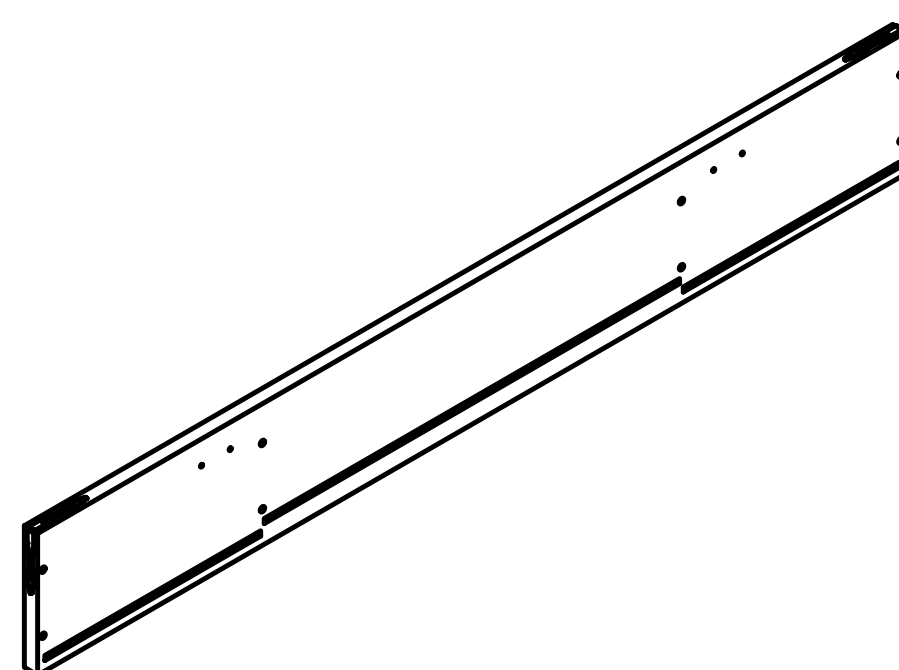


39x1

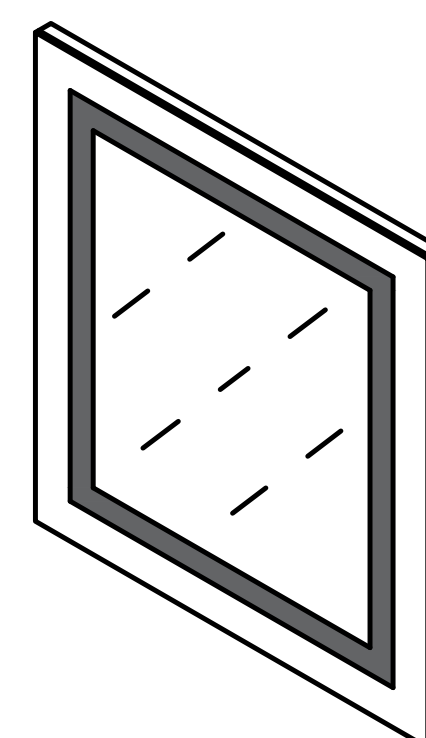


40x1

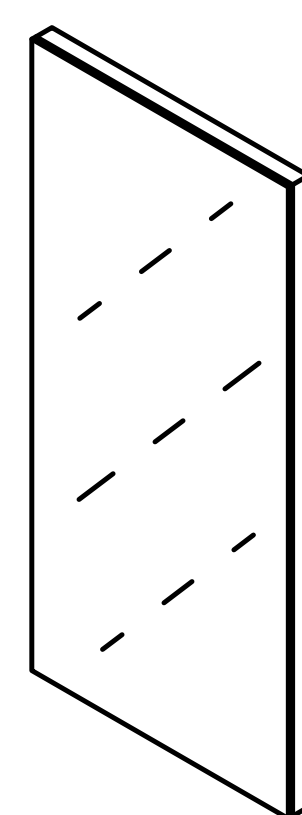


41x1

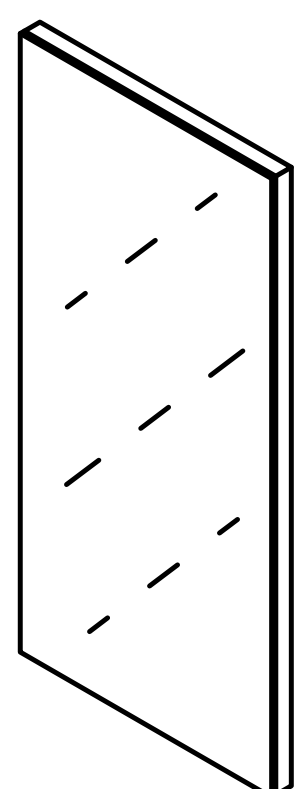


42x1

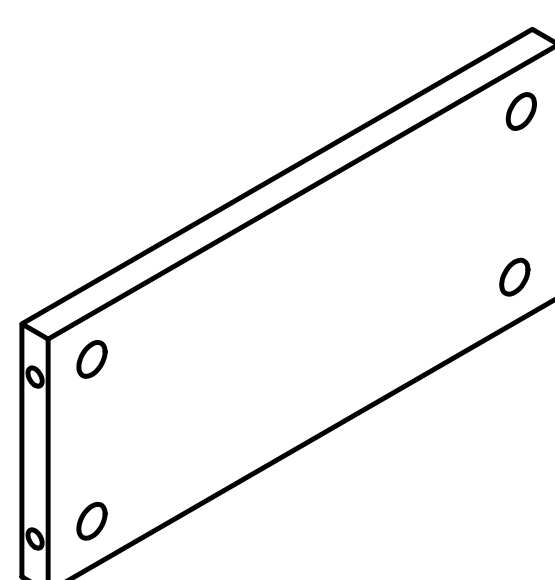


43x2

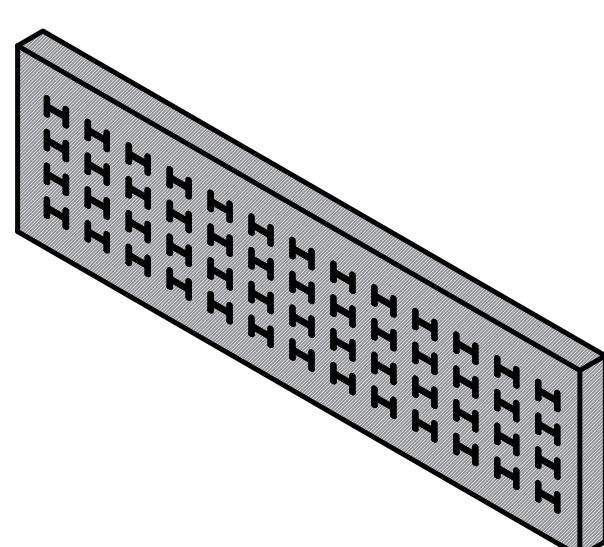


44x1

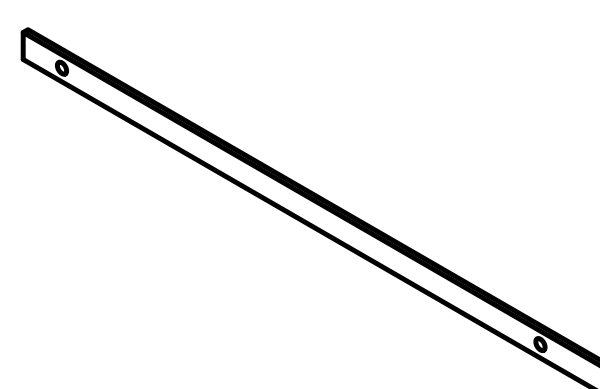



















45x1

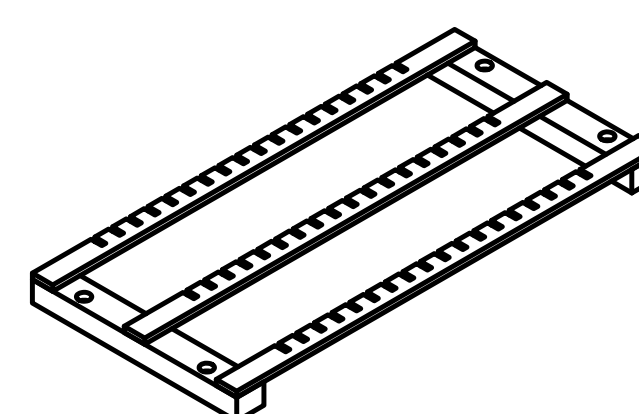


46x1

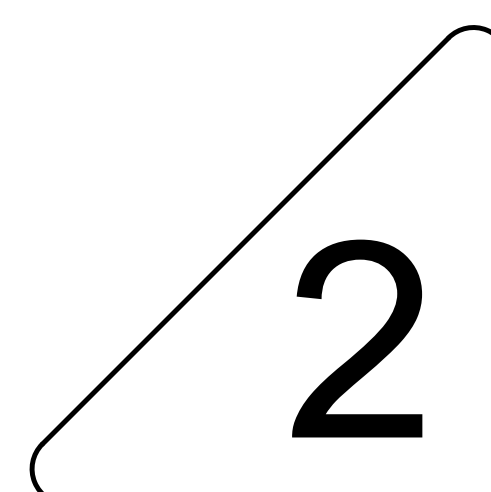


2

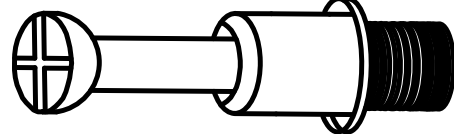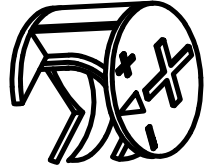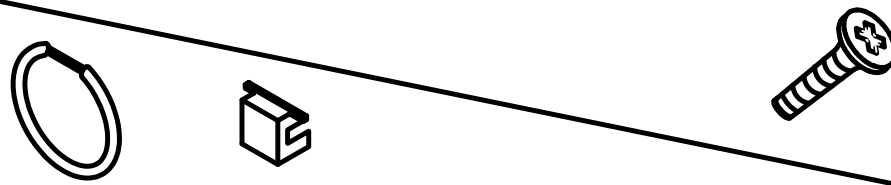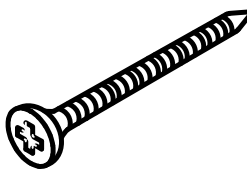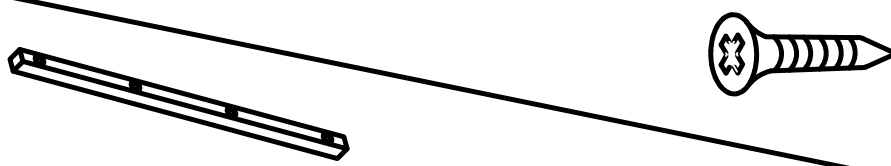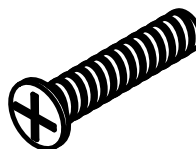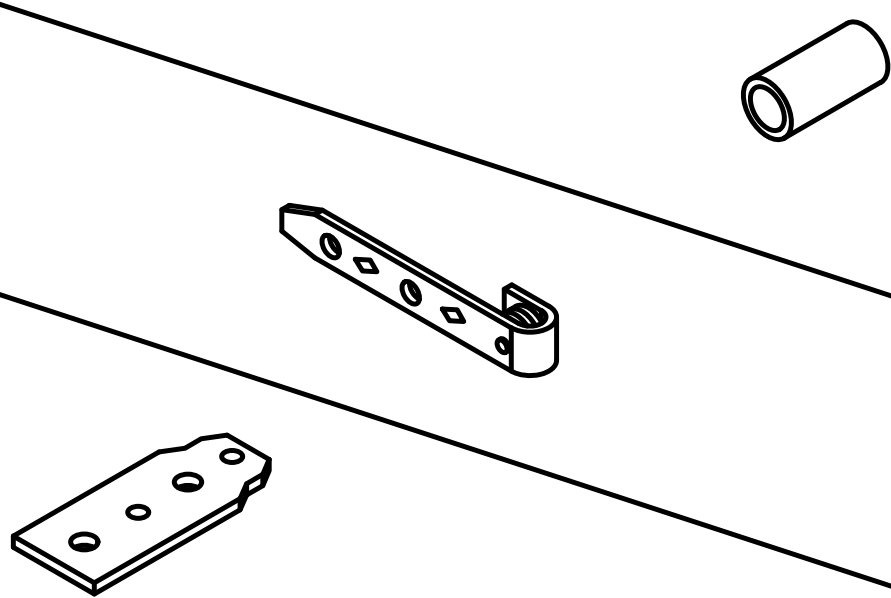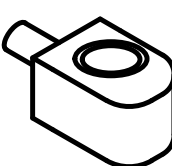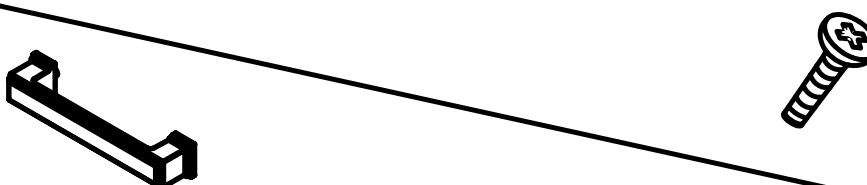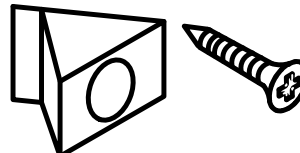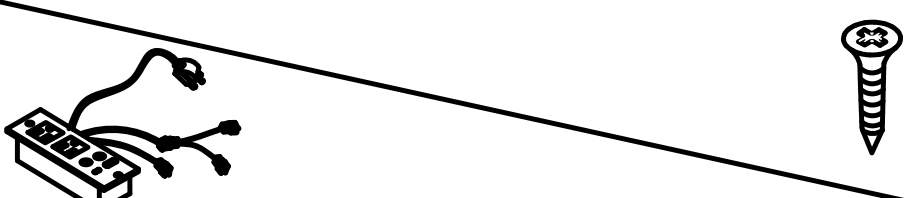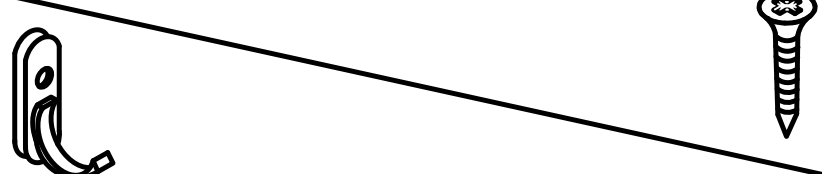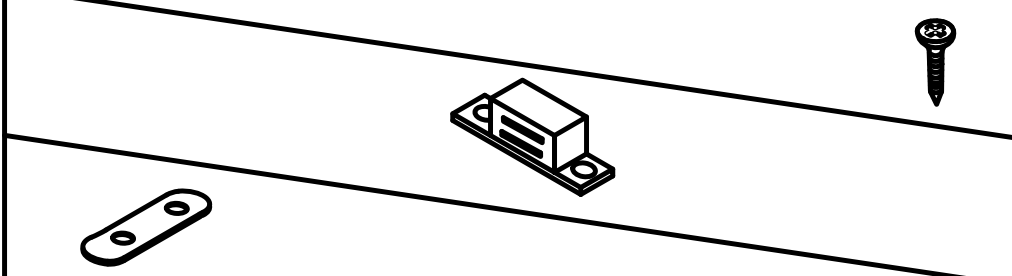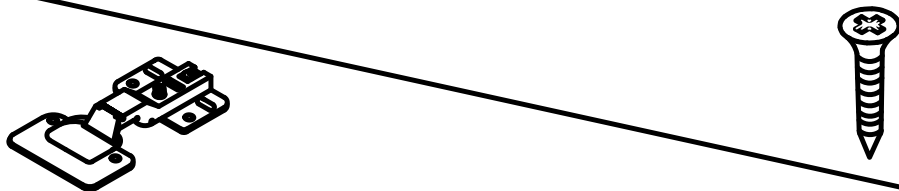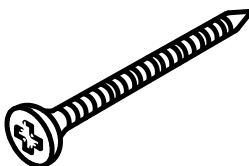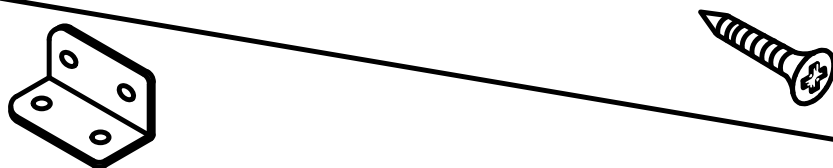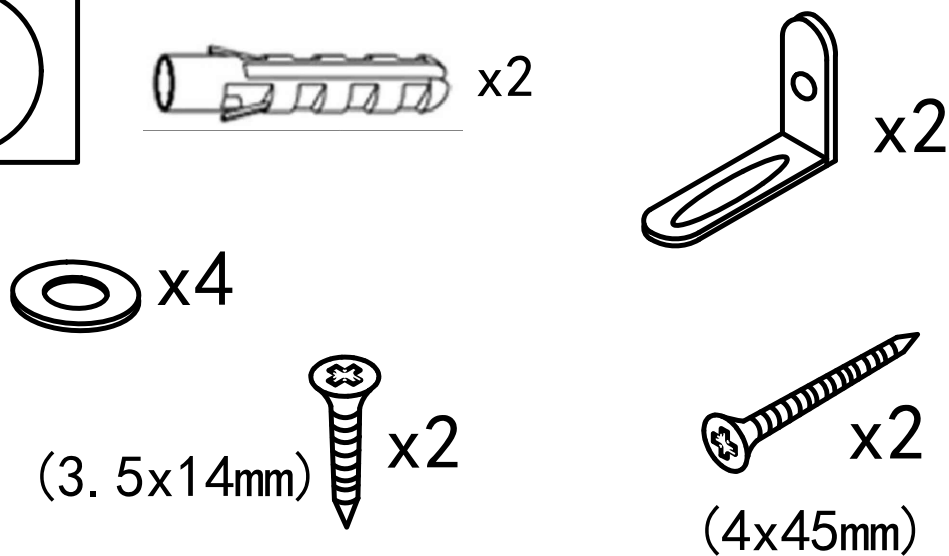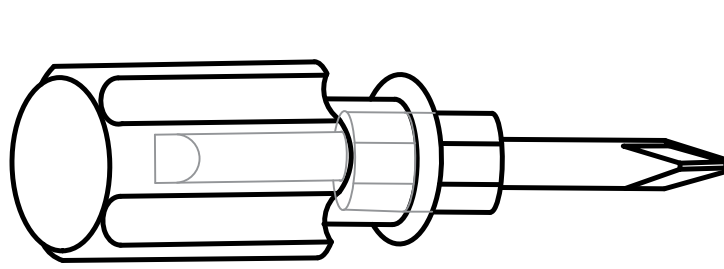A		Two In One Screw (6x28mm)	142pcs +8pcs
B		Two In One Nut (10x12mm)	142pcs +8pcs
C		Wood Chipping (6x30mm)	12pcs +2pcs
D		Pull loop handle (4x16mm)	5pcs 5pcs +1pcs
E		Non-slip pads	10pcs +2pcs
F		Screw (3x20mm)	6pcs
G		Rubber strip guide & Screw (4x16mm)	6pcs 24pcs +3pcs
H		Screw (6x28mm)	2pcs
I		Plastic hoses Iron guide rail hook Plastic slide	2pcs 2pcs 2pcs
J		Screw (3.5x12mm)	4pcs +1pcs
K		Screw (6x12mm)	4pcs +1pcs
L		Iron bar	6pcs
M		Laminate support nail	12pcs
N		Handle & Screw (4x16mm)	1pcs 2pcs +1pcs
O		Fixing Clip & Screw (3x16mm)	30pcs +1pcs
P		Iron wire (376)	3pcs
Q		Power Socket & Screw (3x10mm)	1pcs 2pcs +1pcs
R		Screw & Hook (3x14mm)	7pcs 7pcs +1pcs
S		Screw (3x10mm) Magnetic attraction Iron sheet	8pcs +1pcs 2pcs 2pcs
T		Hinge & Screw (3.5x12mm)	6pcs 36pcs +1pcs
U		Screw (3x18mm)	4pcs +2pcs
V		Wire Clamp	5pcs +2pcs
W		Corner code(30x30x1.5) Screw (3.5x12)	2pcs 8pcs +2pcs
X		 1pcs Double-head screwdriver, use as required	

Product structure decomposition

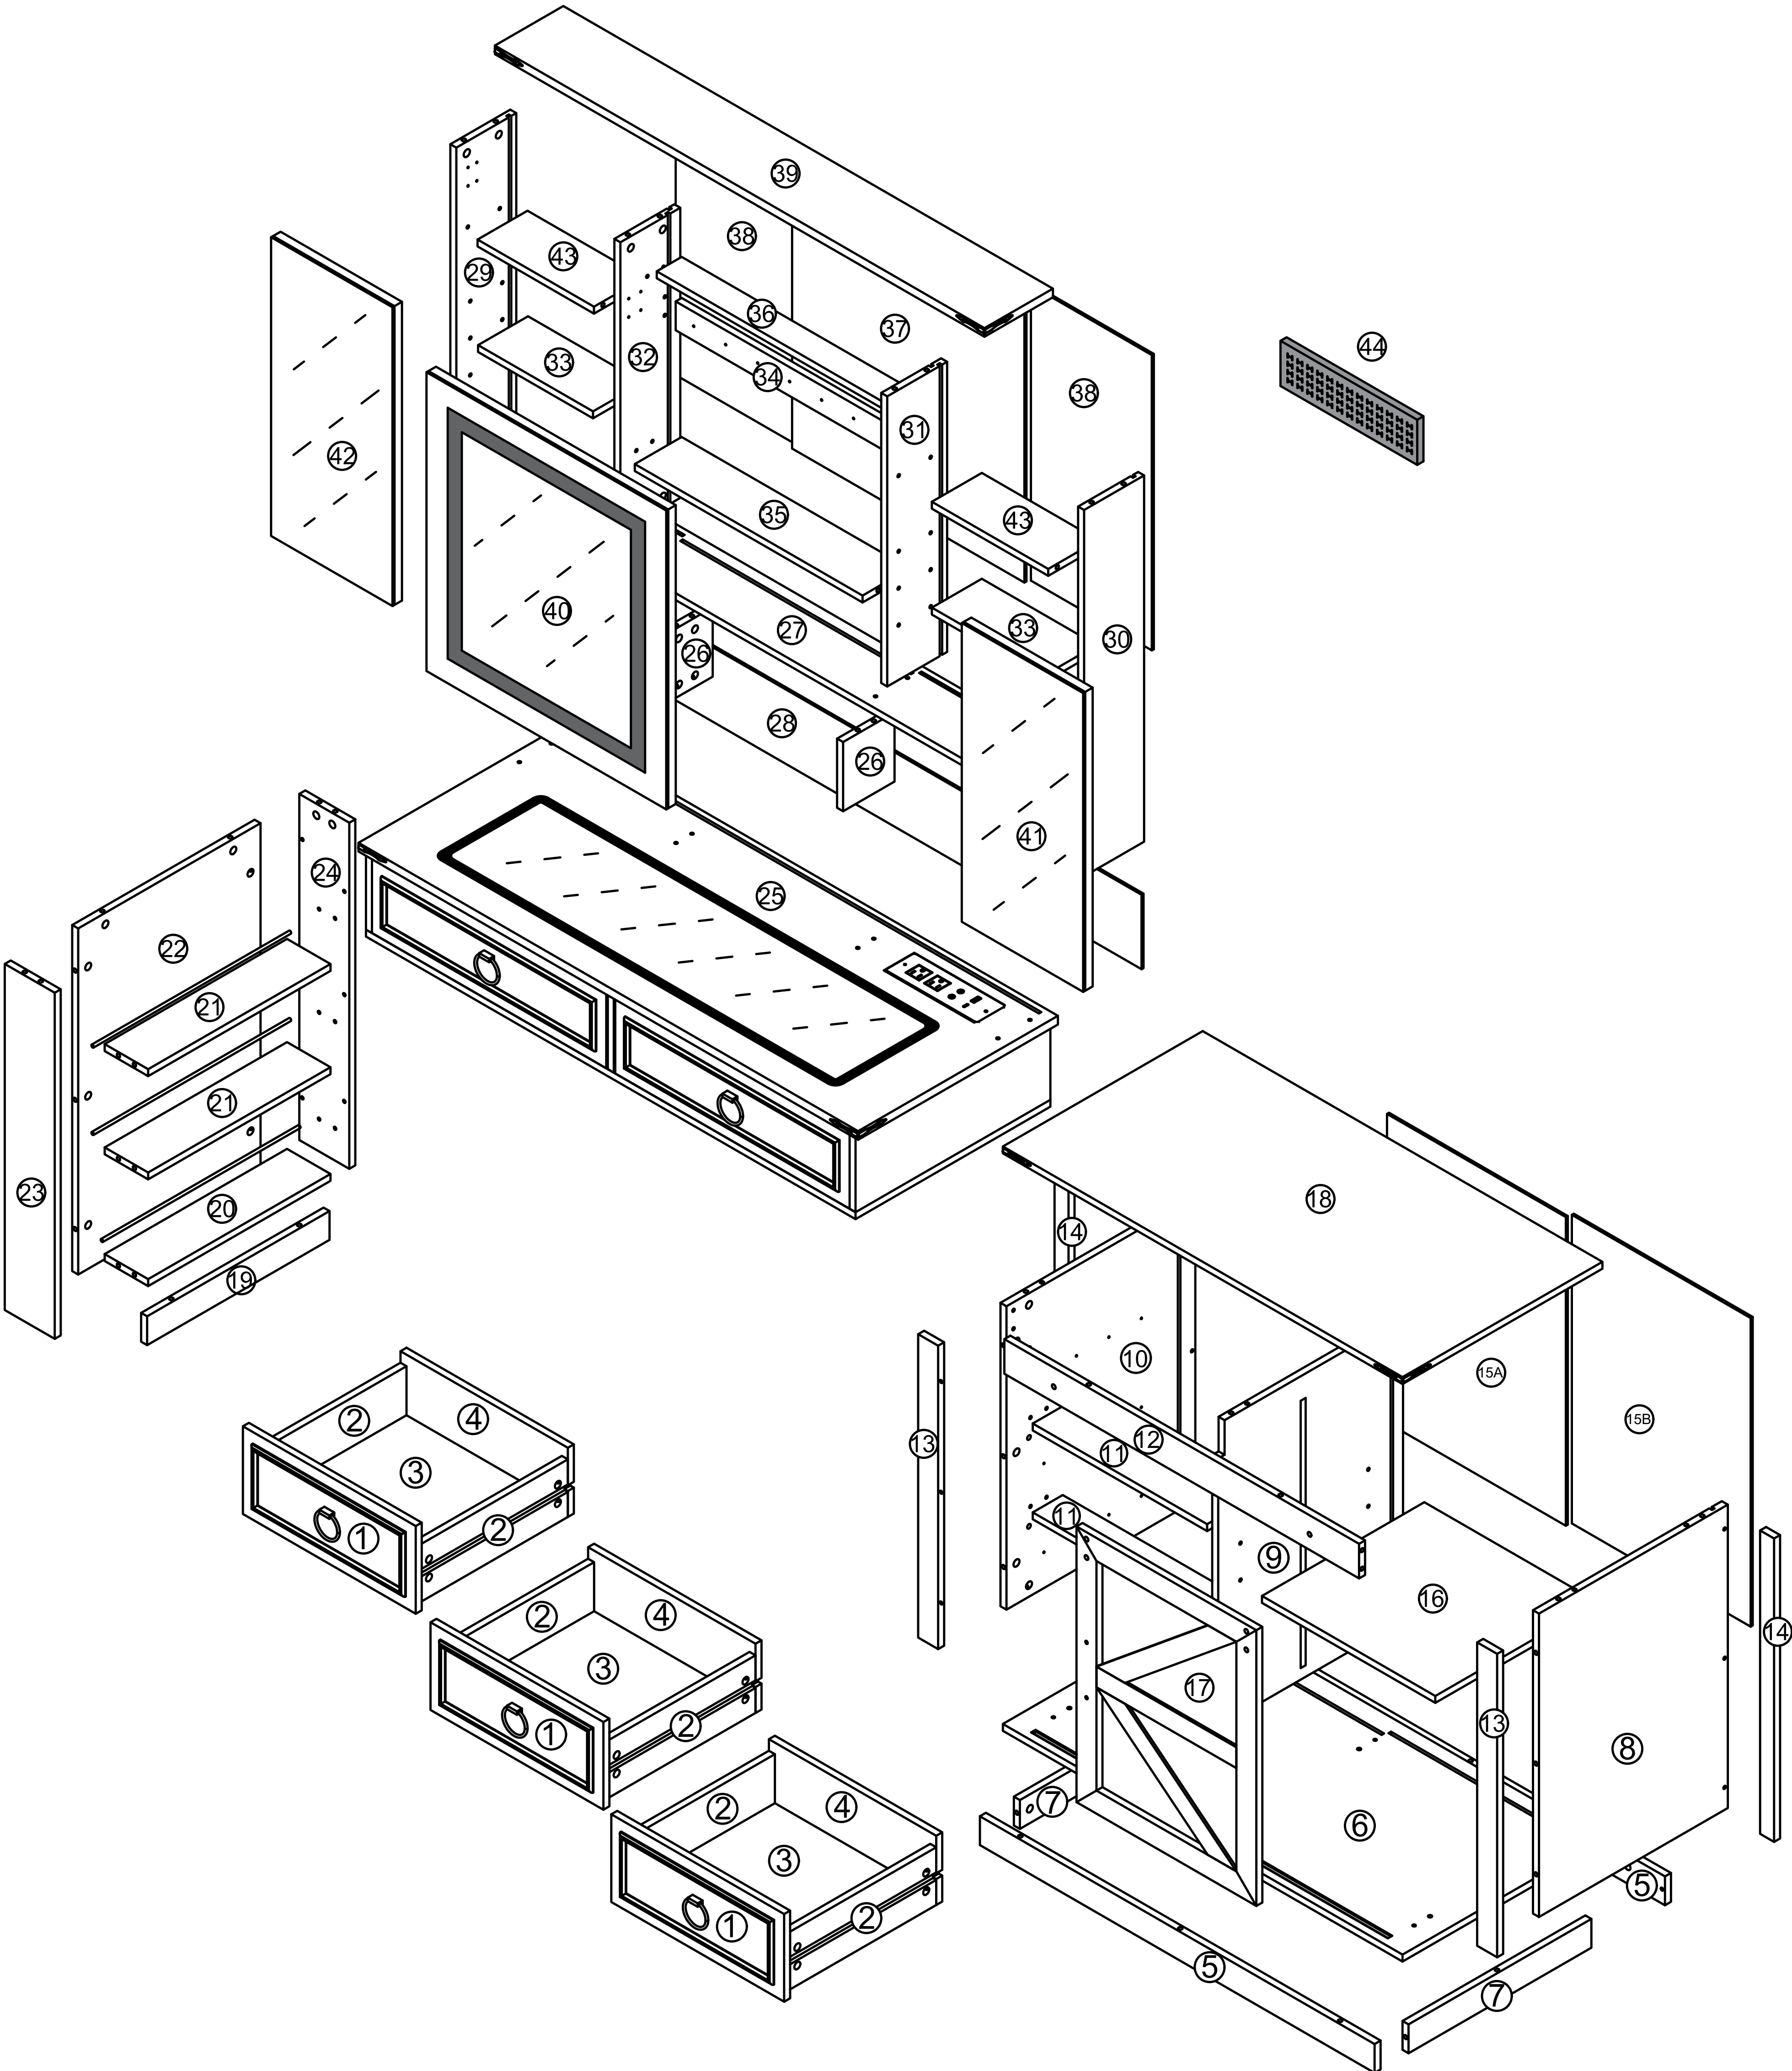


A

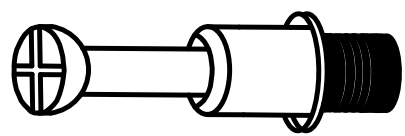

24pcs

B

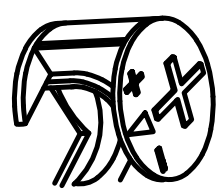

24pcs

D




3pcs



3pcs




3pcs

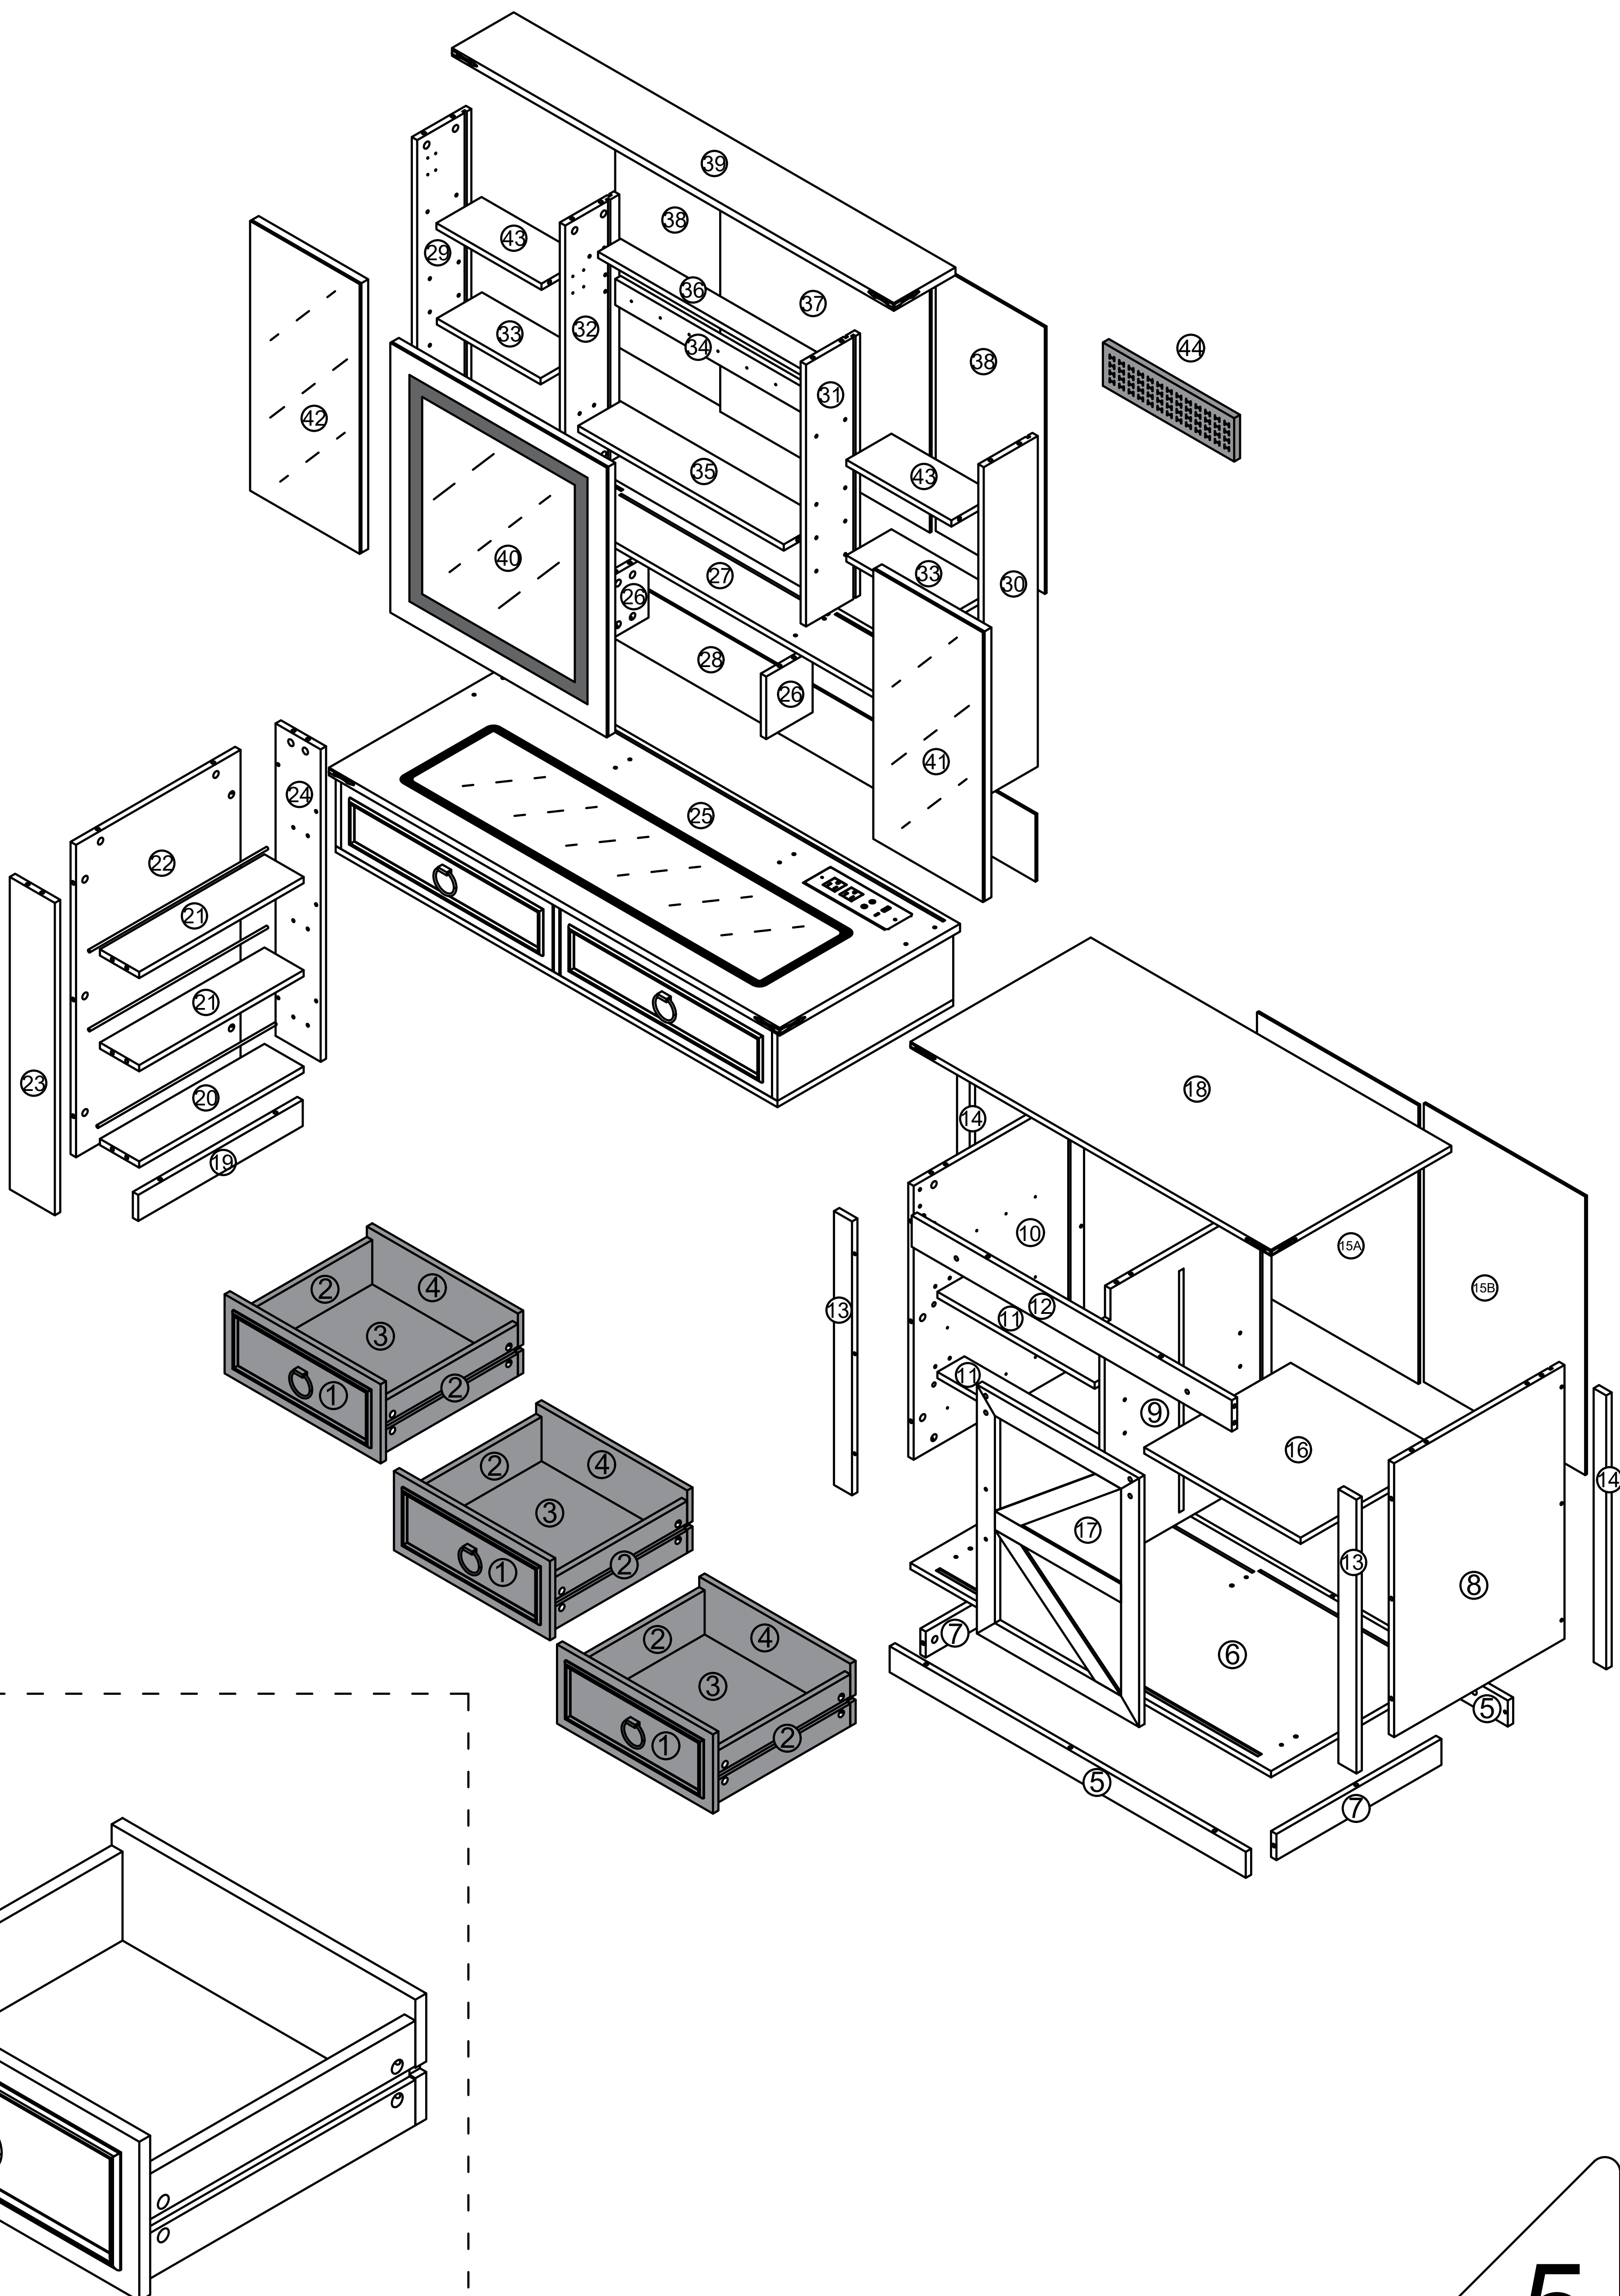


Use parts A and B



Step1

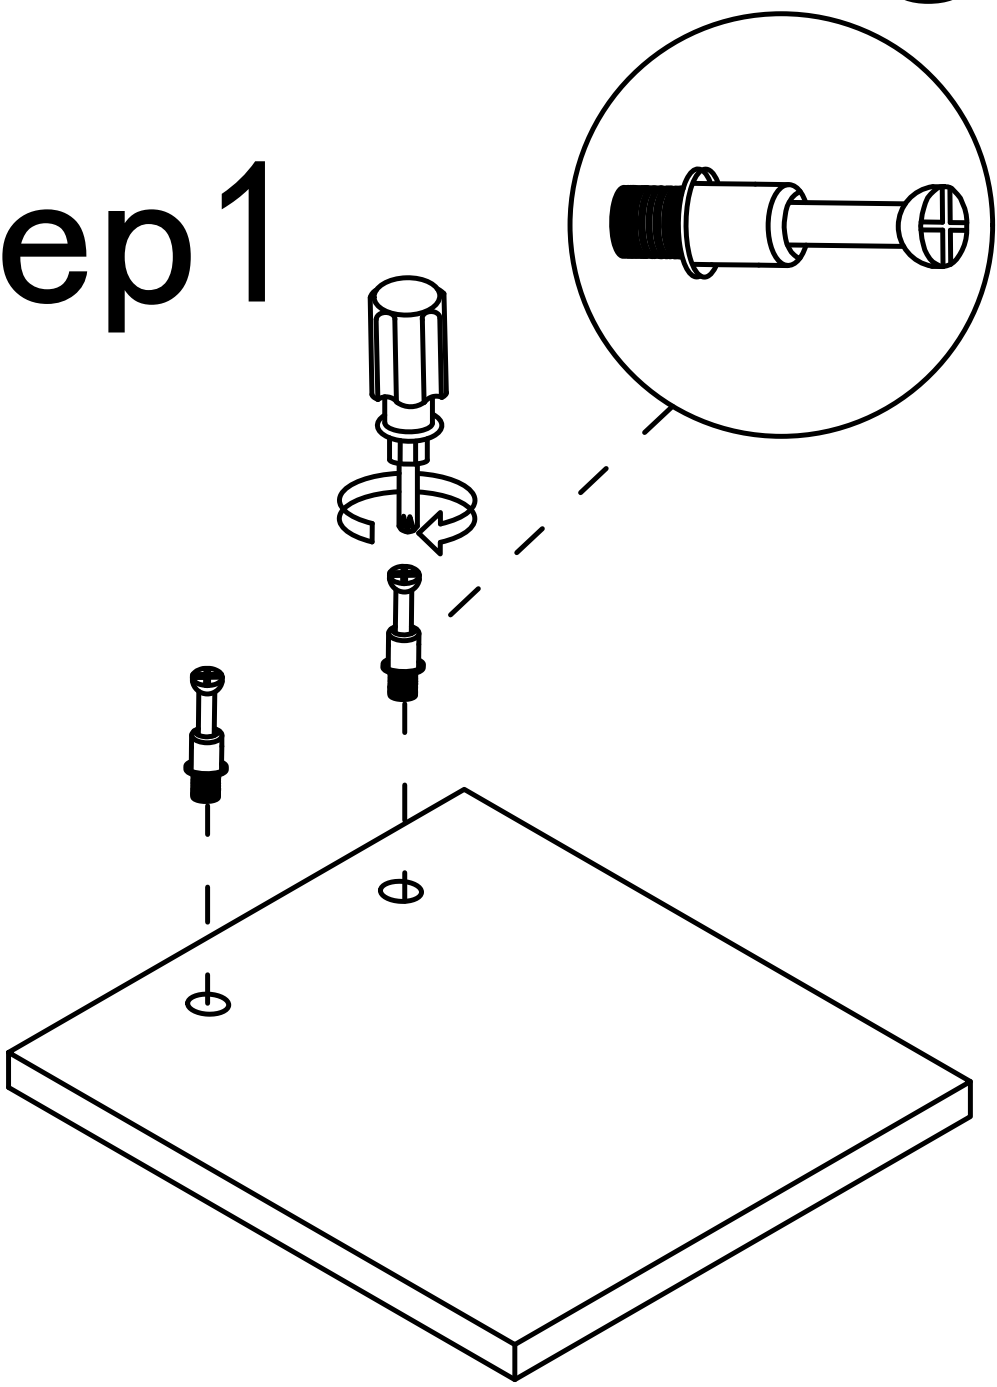


Step2

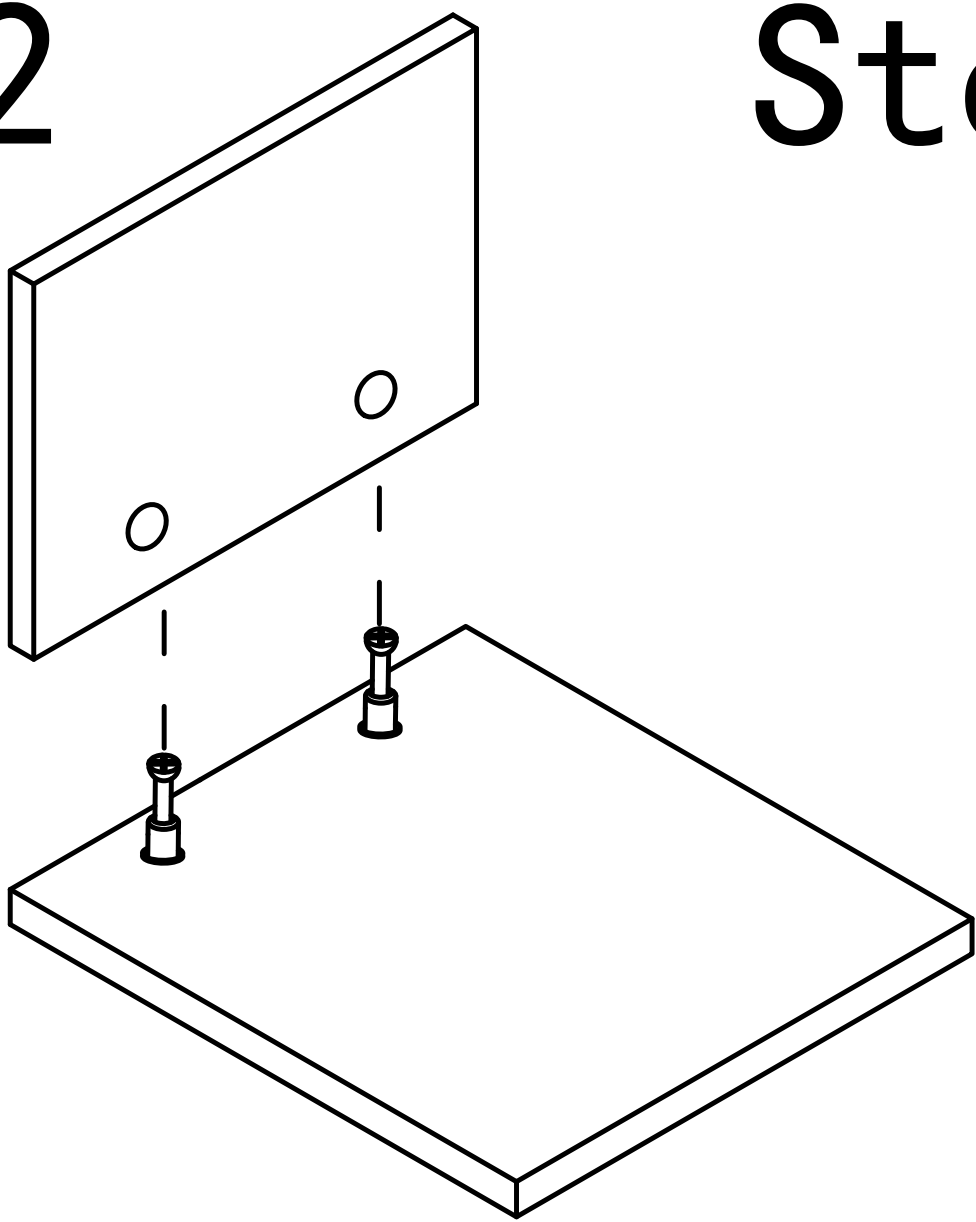

Step3

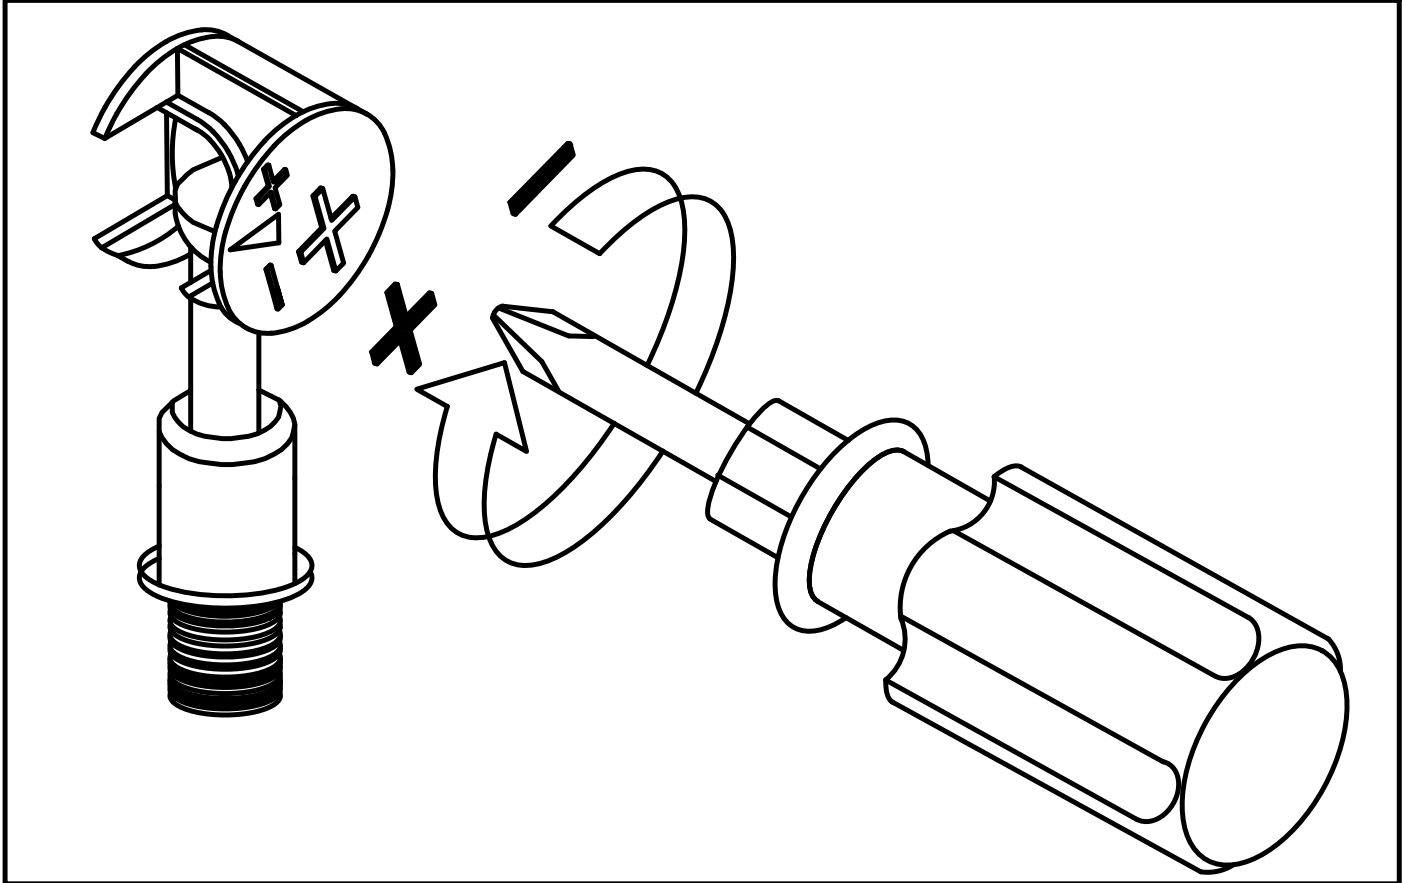
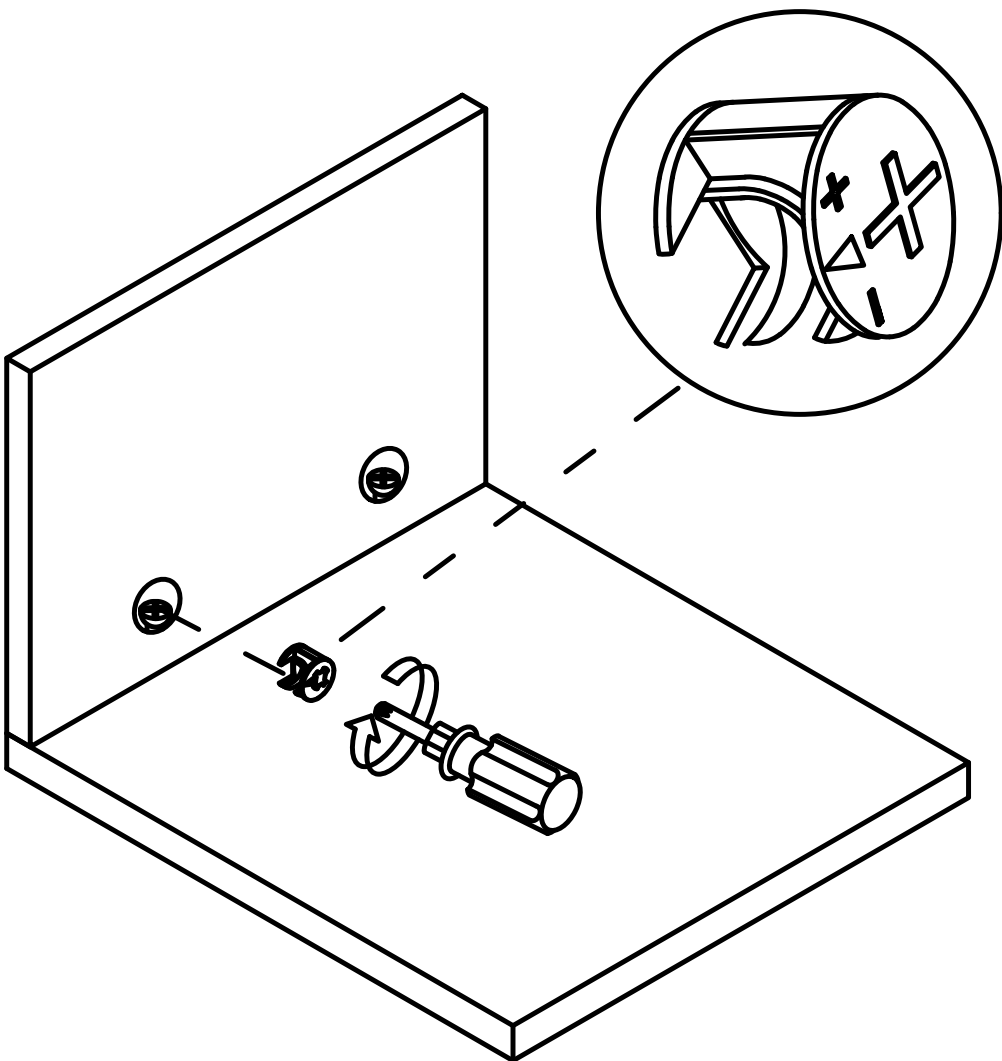


Use a screwdriver to lock in the direction of the "+" sign



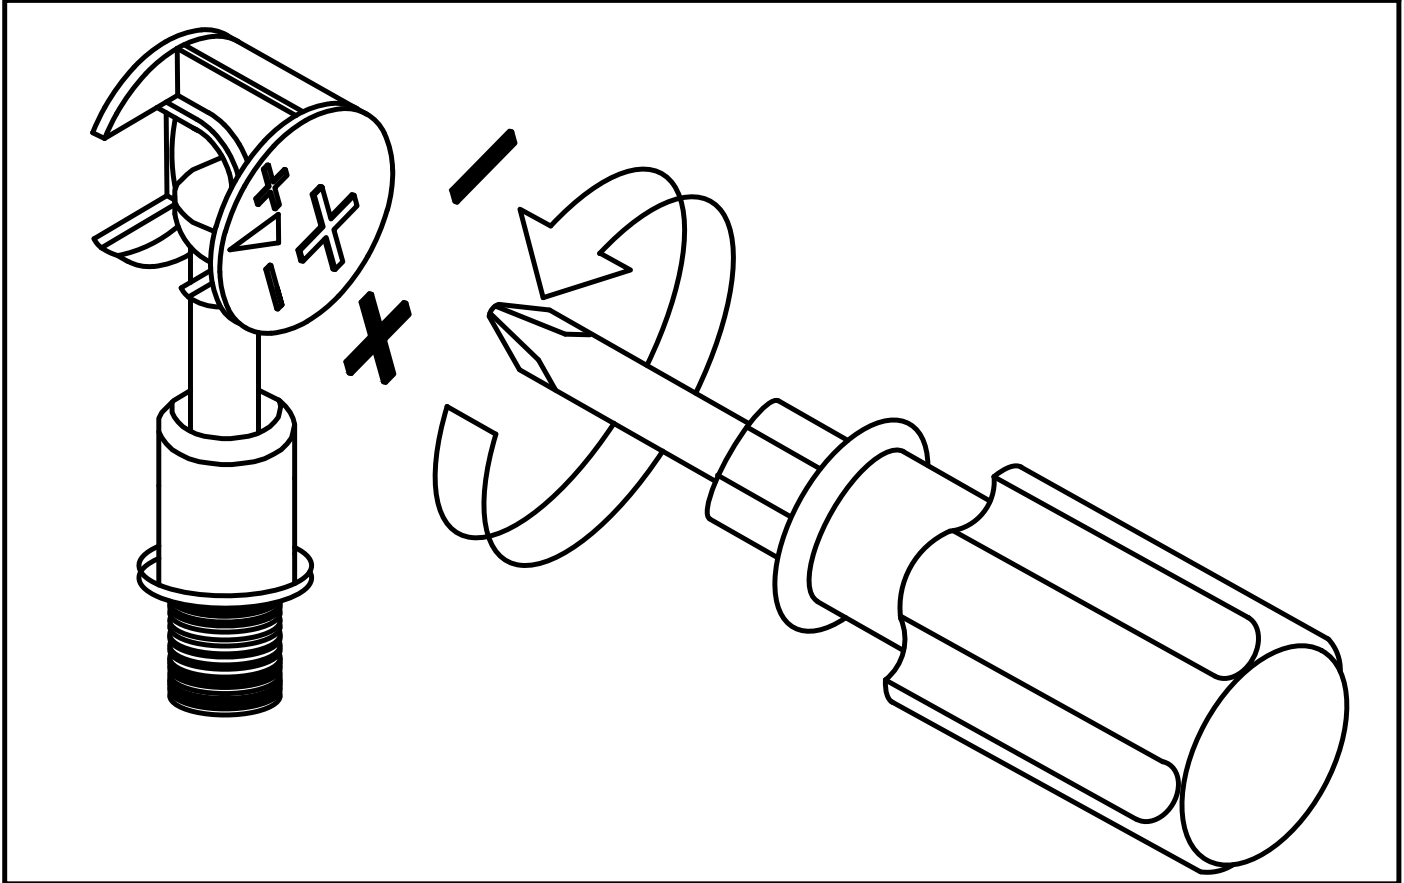


Disassemble along the direction of "-" sign

Step 1

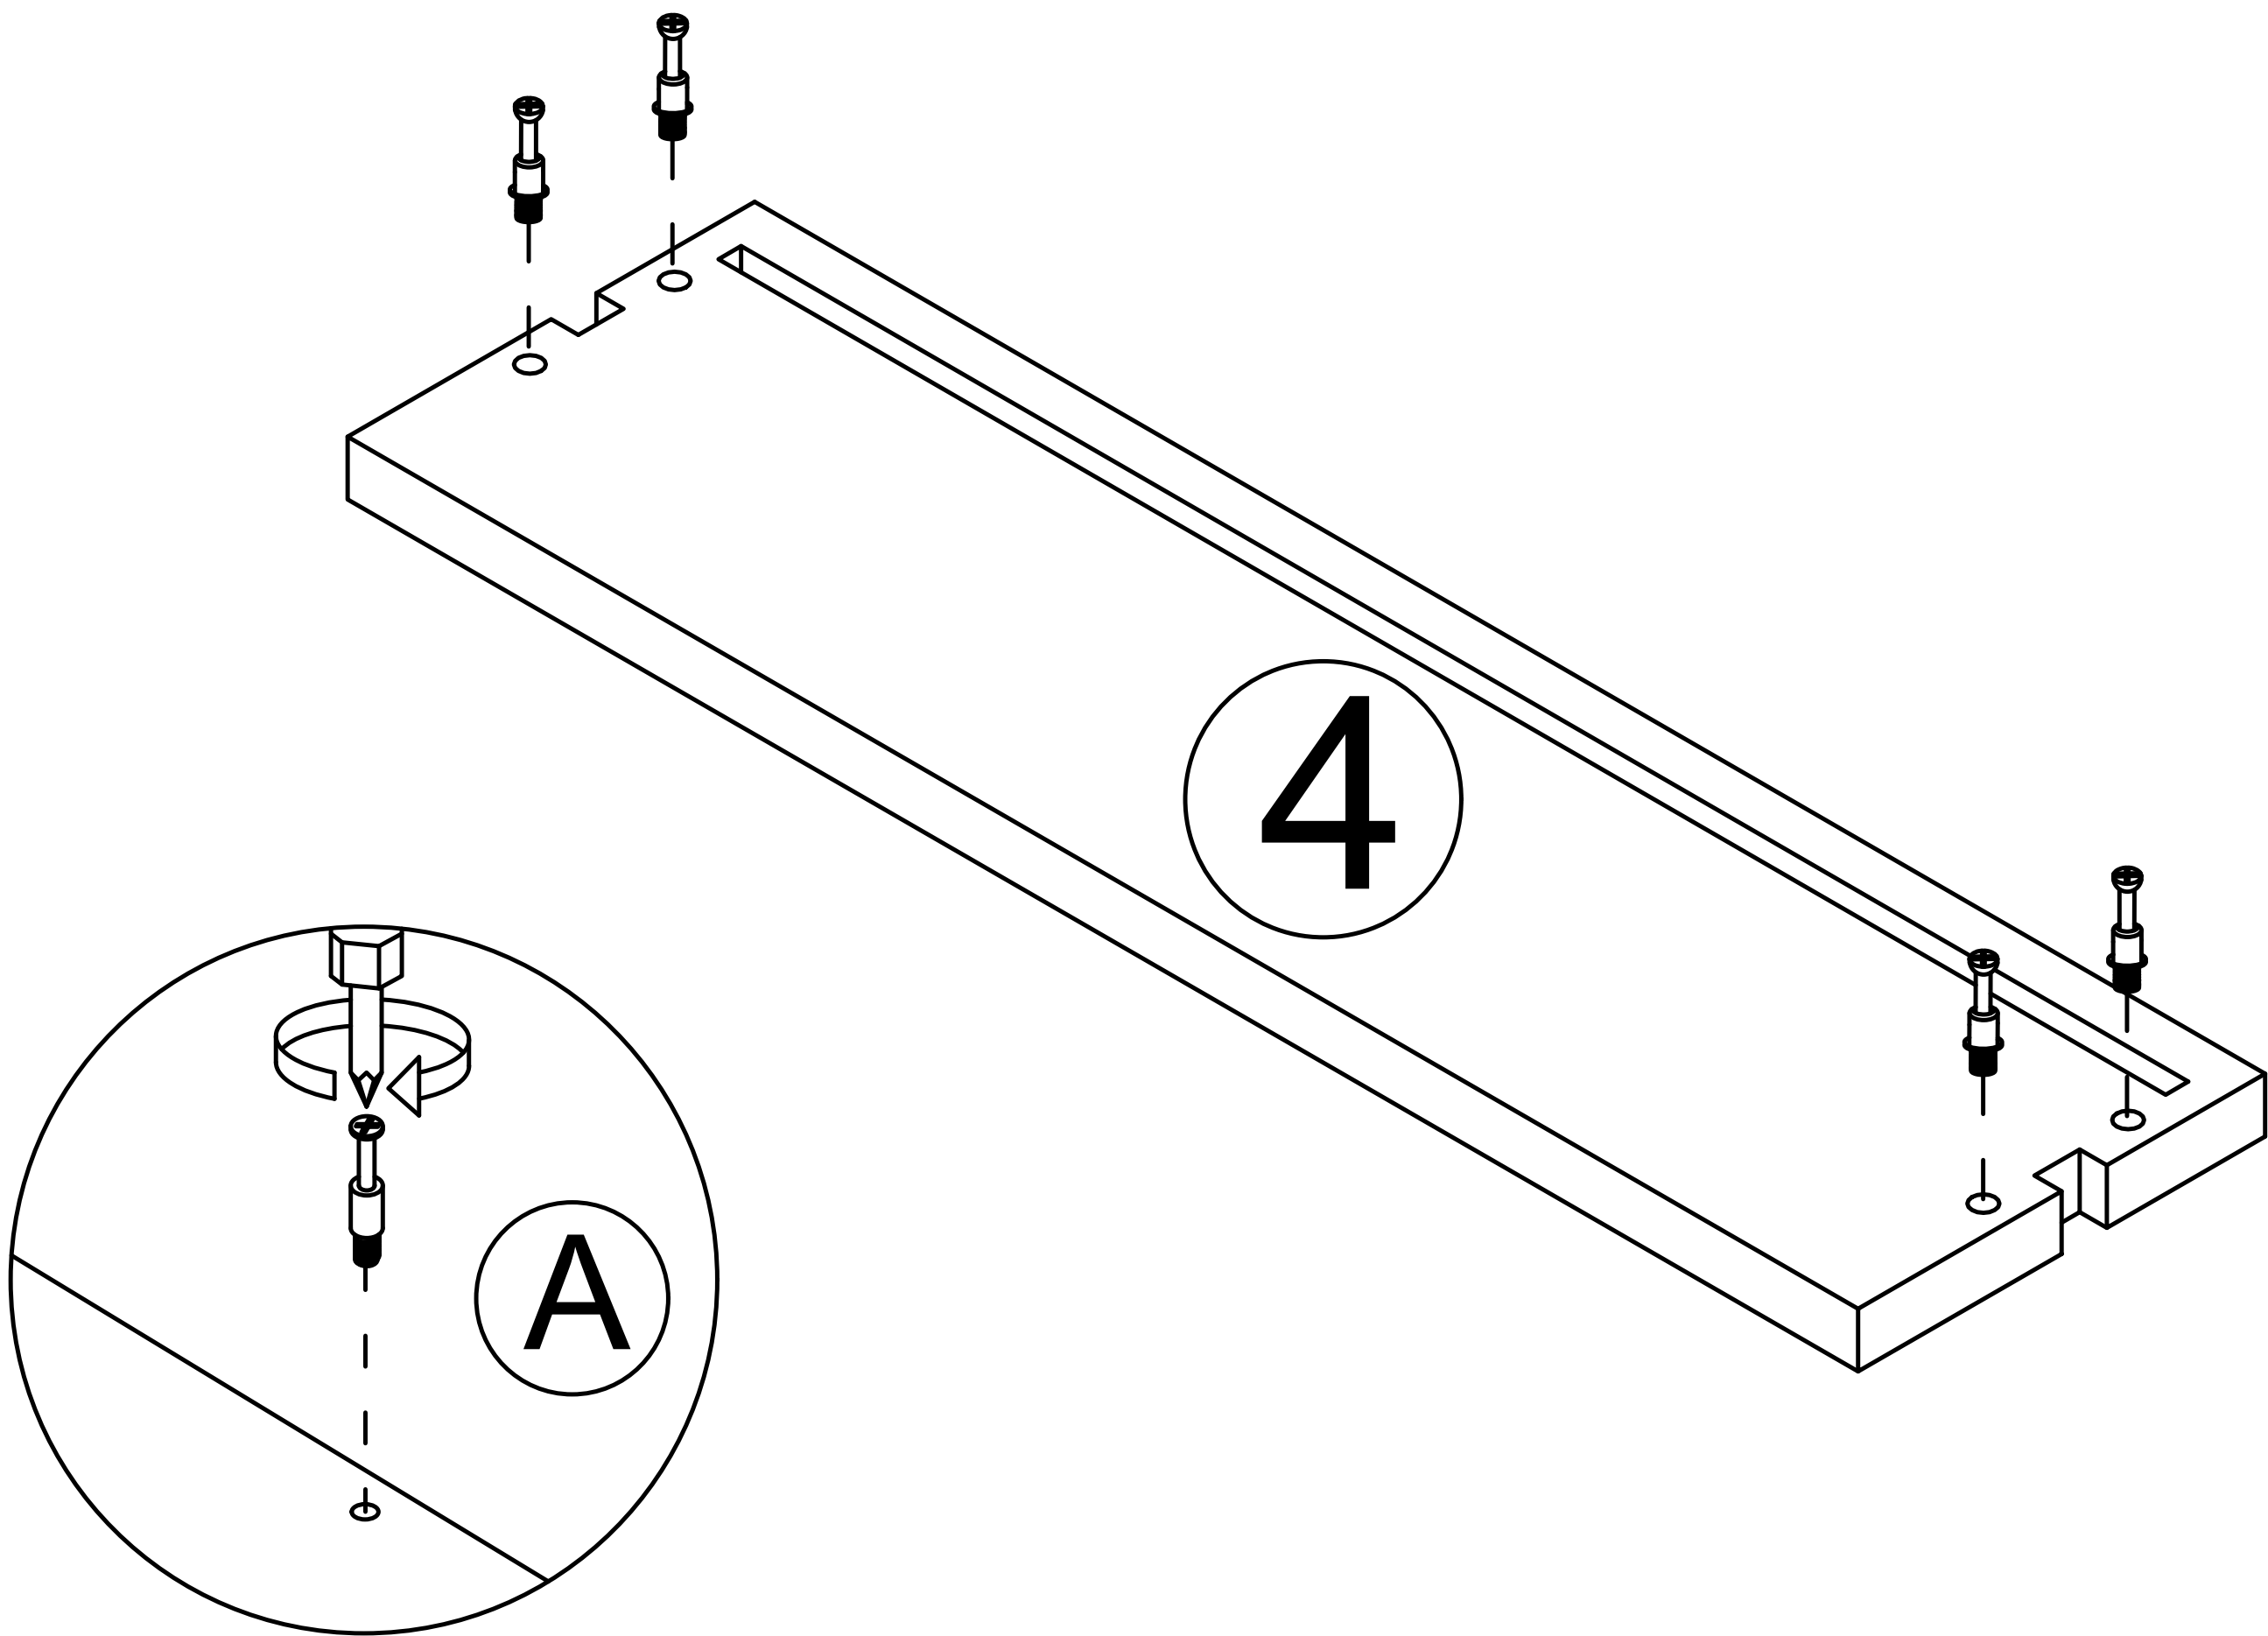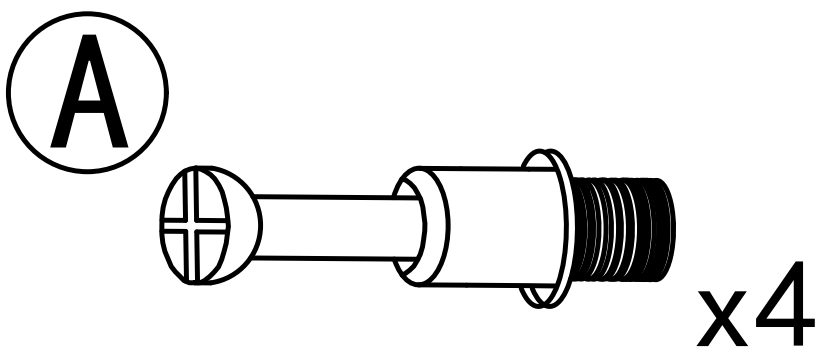


Step 2

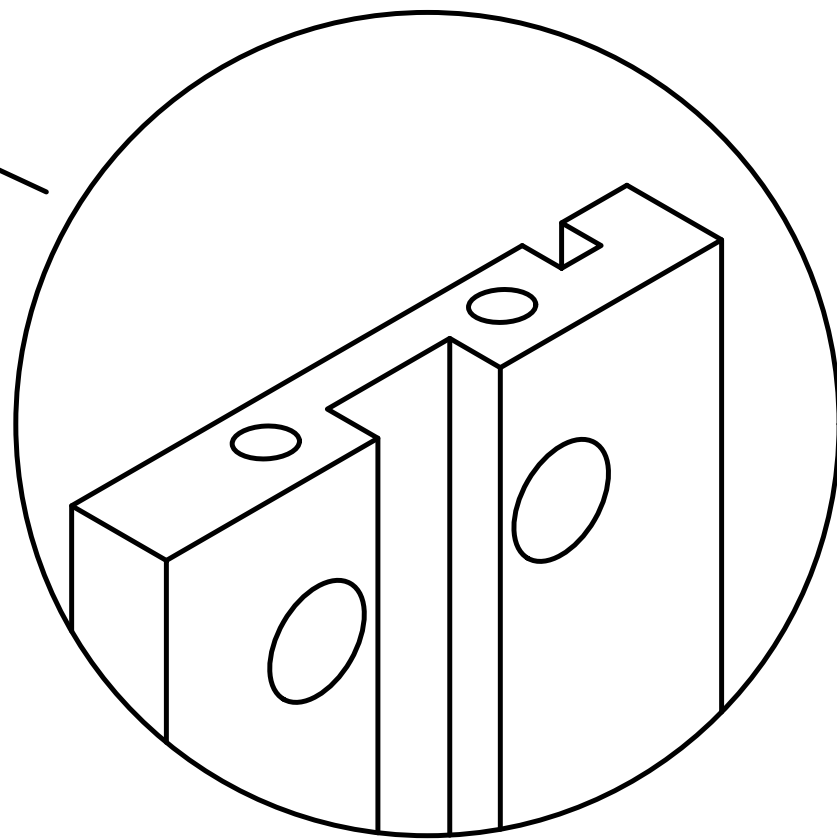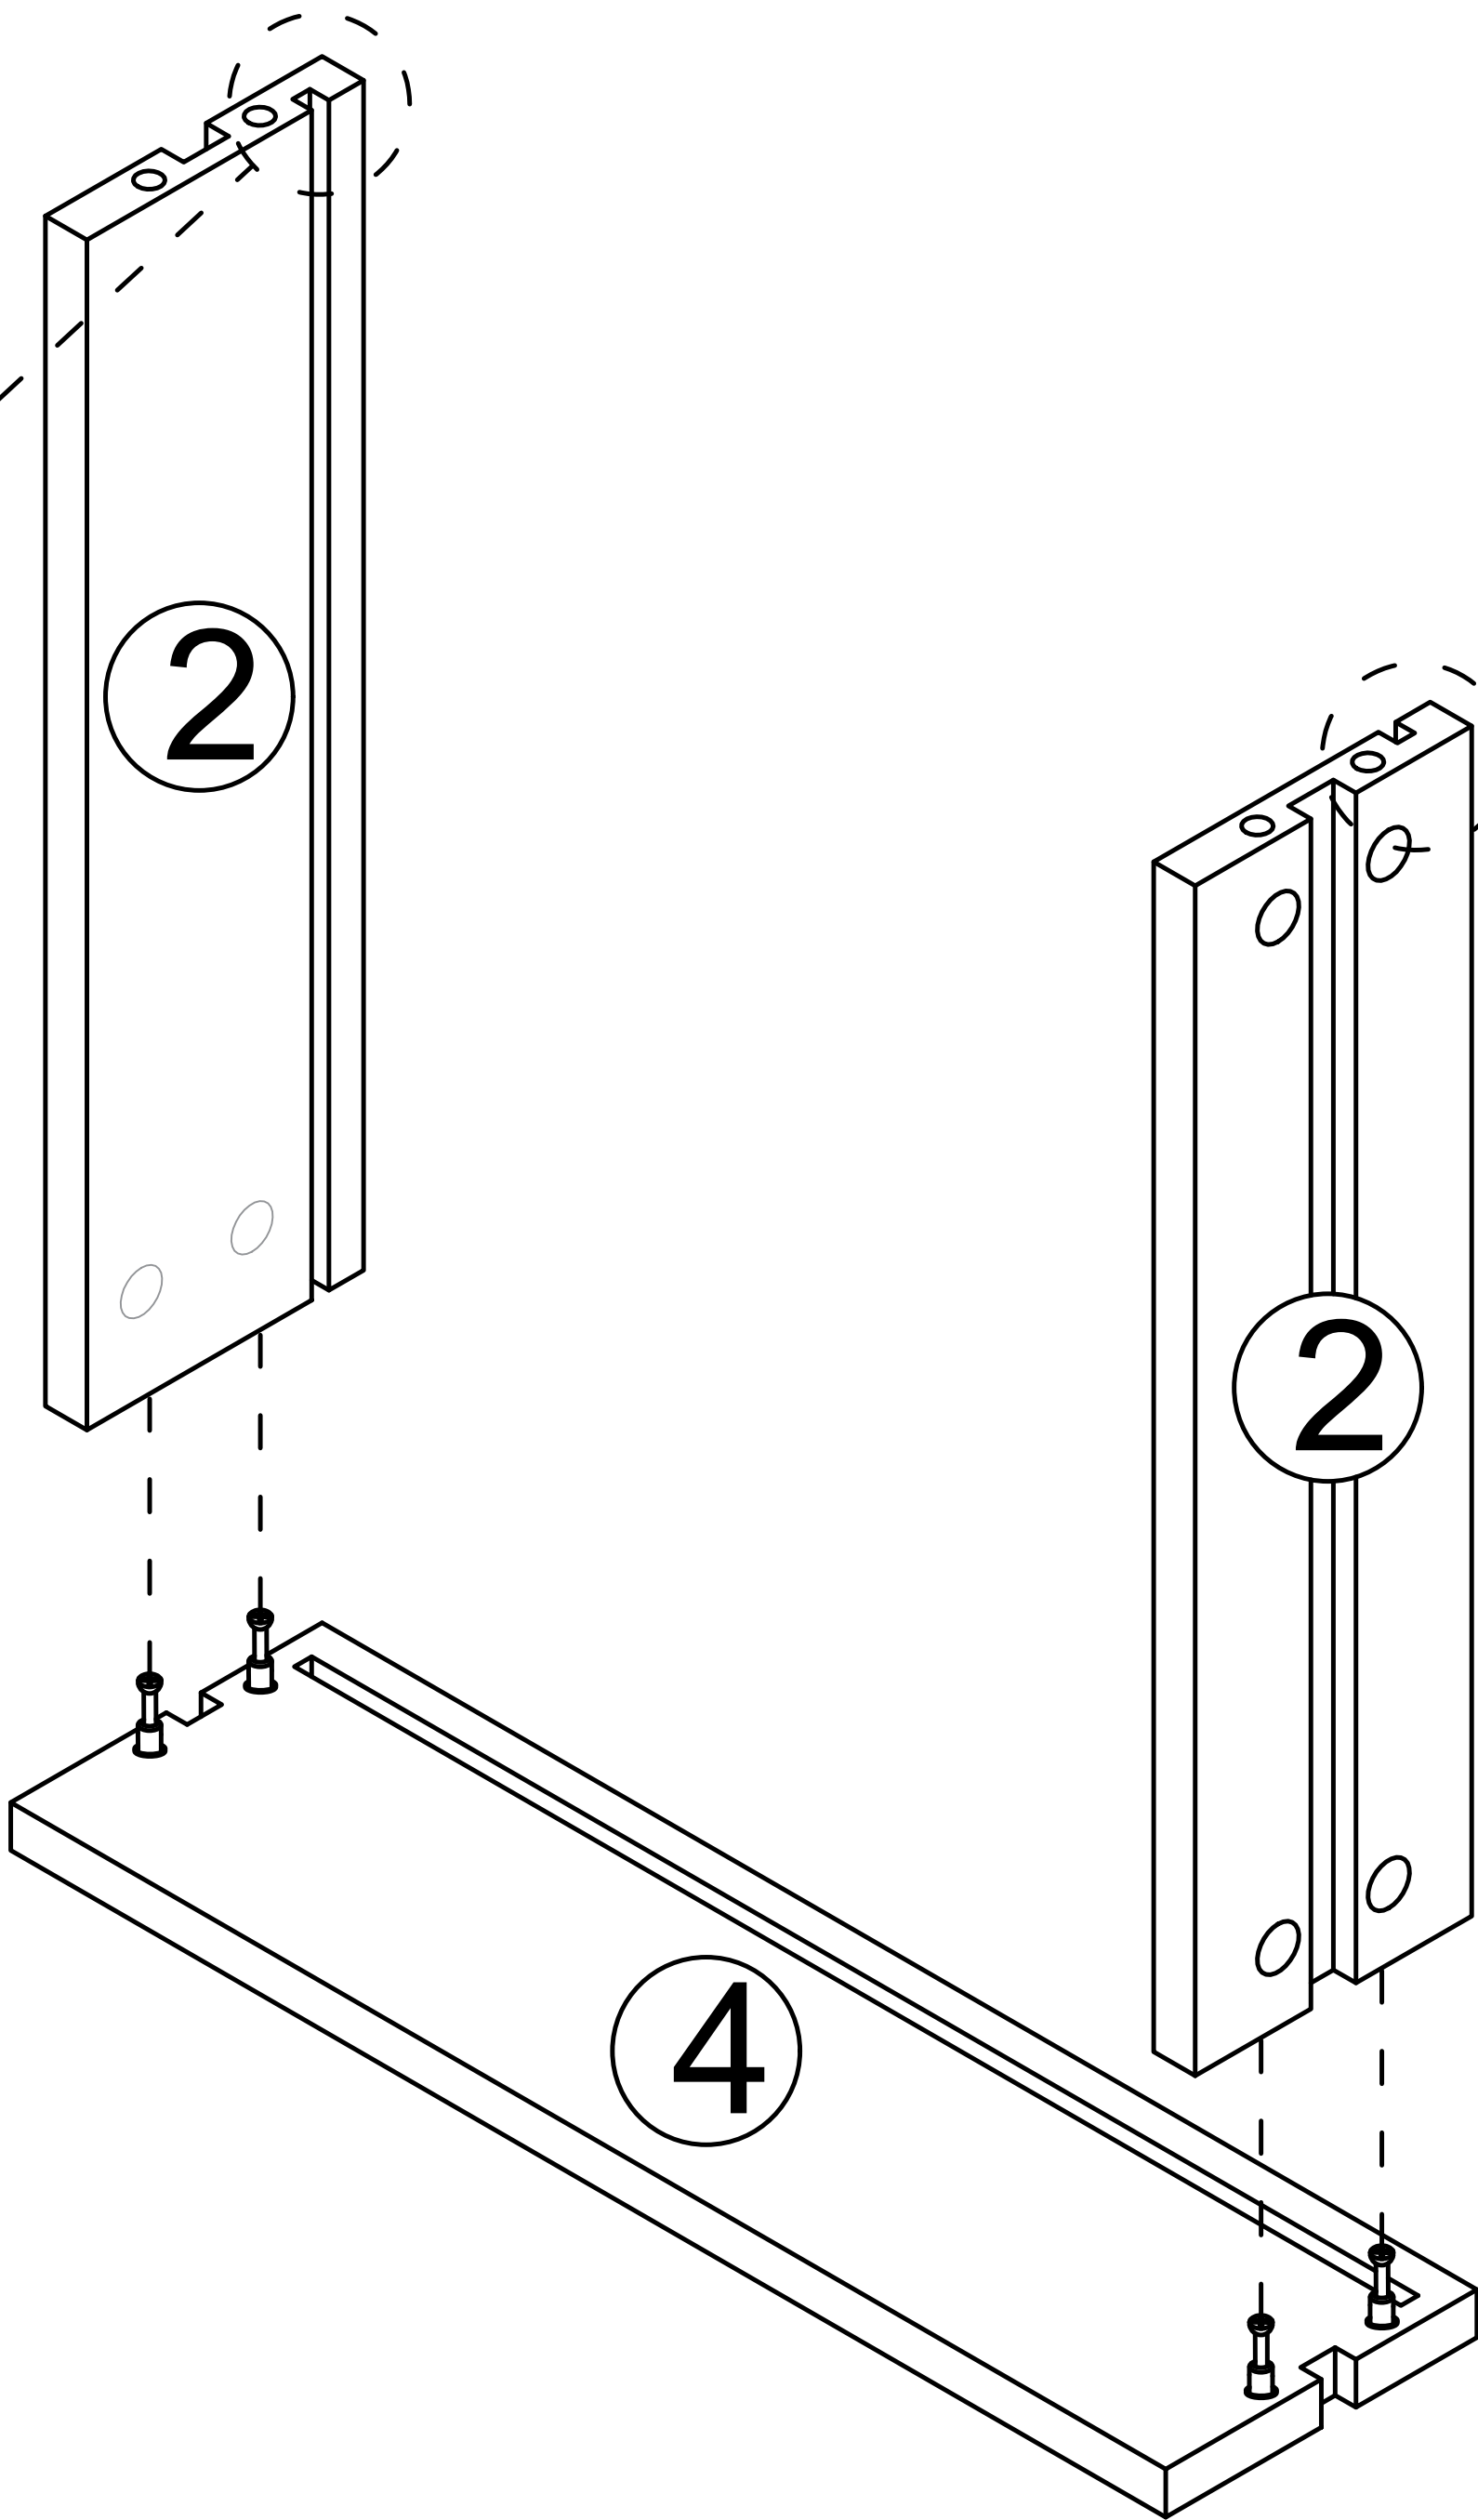
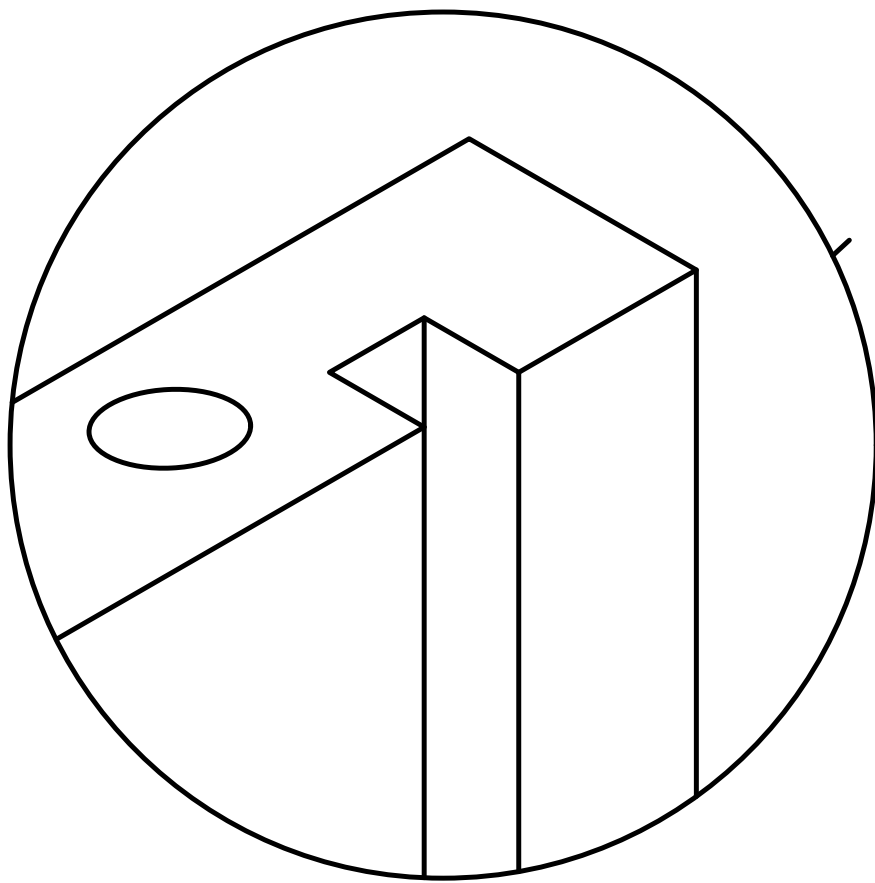


Step 3

B

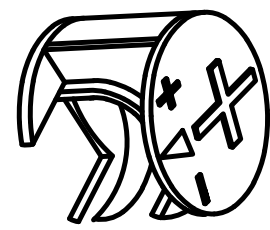


x4

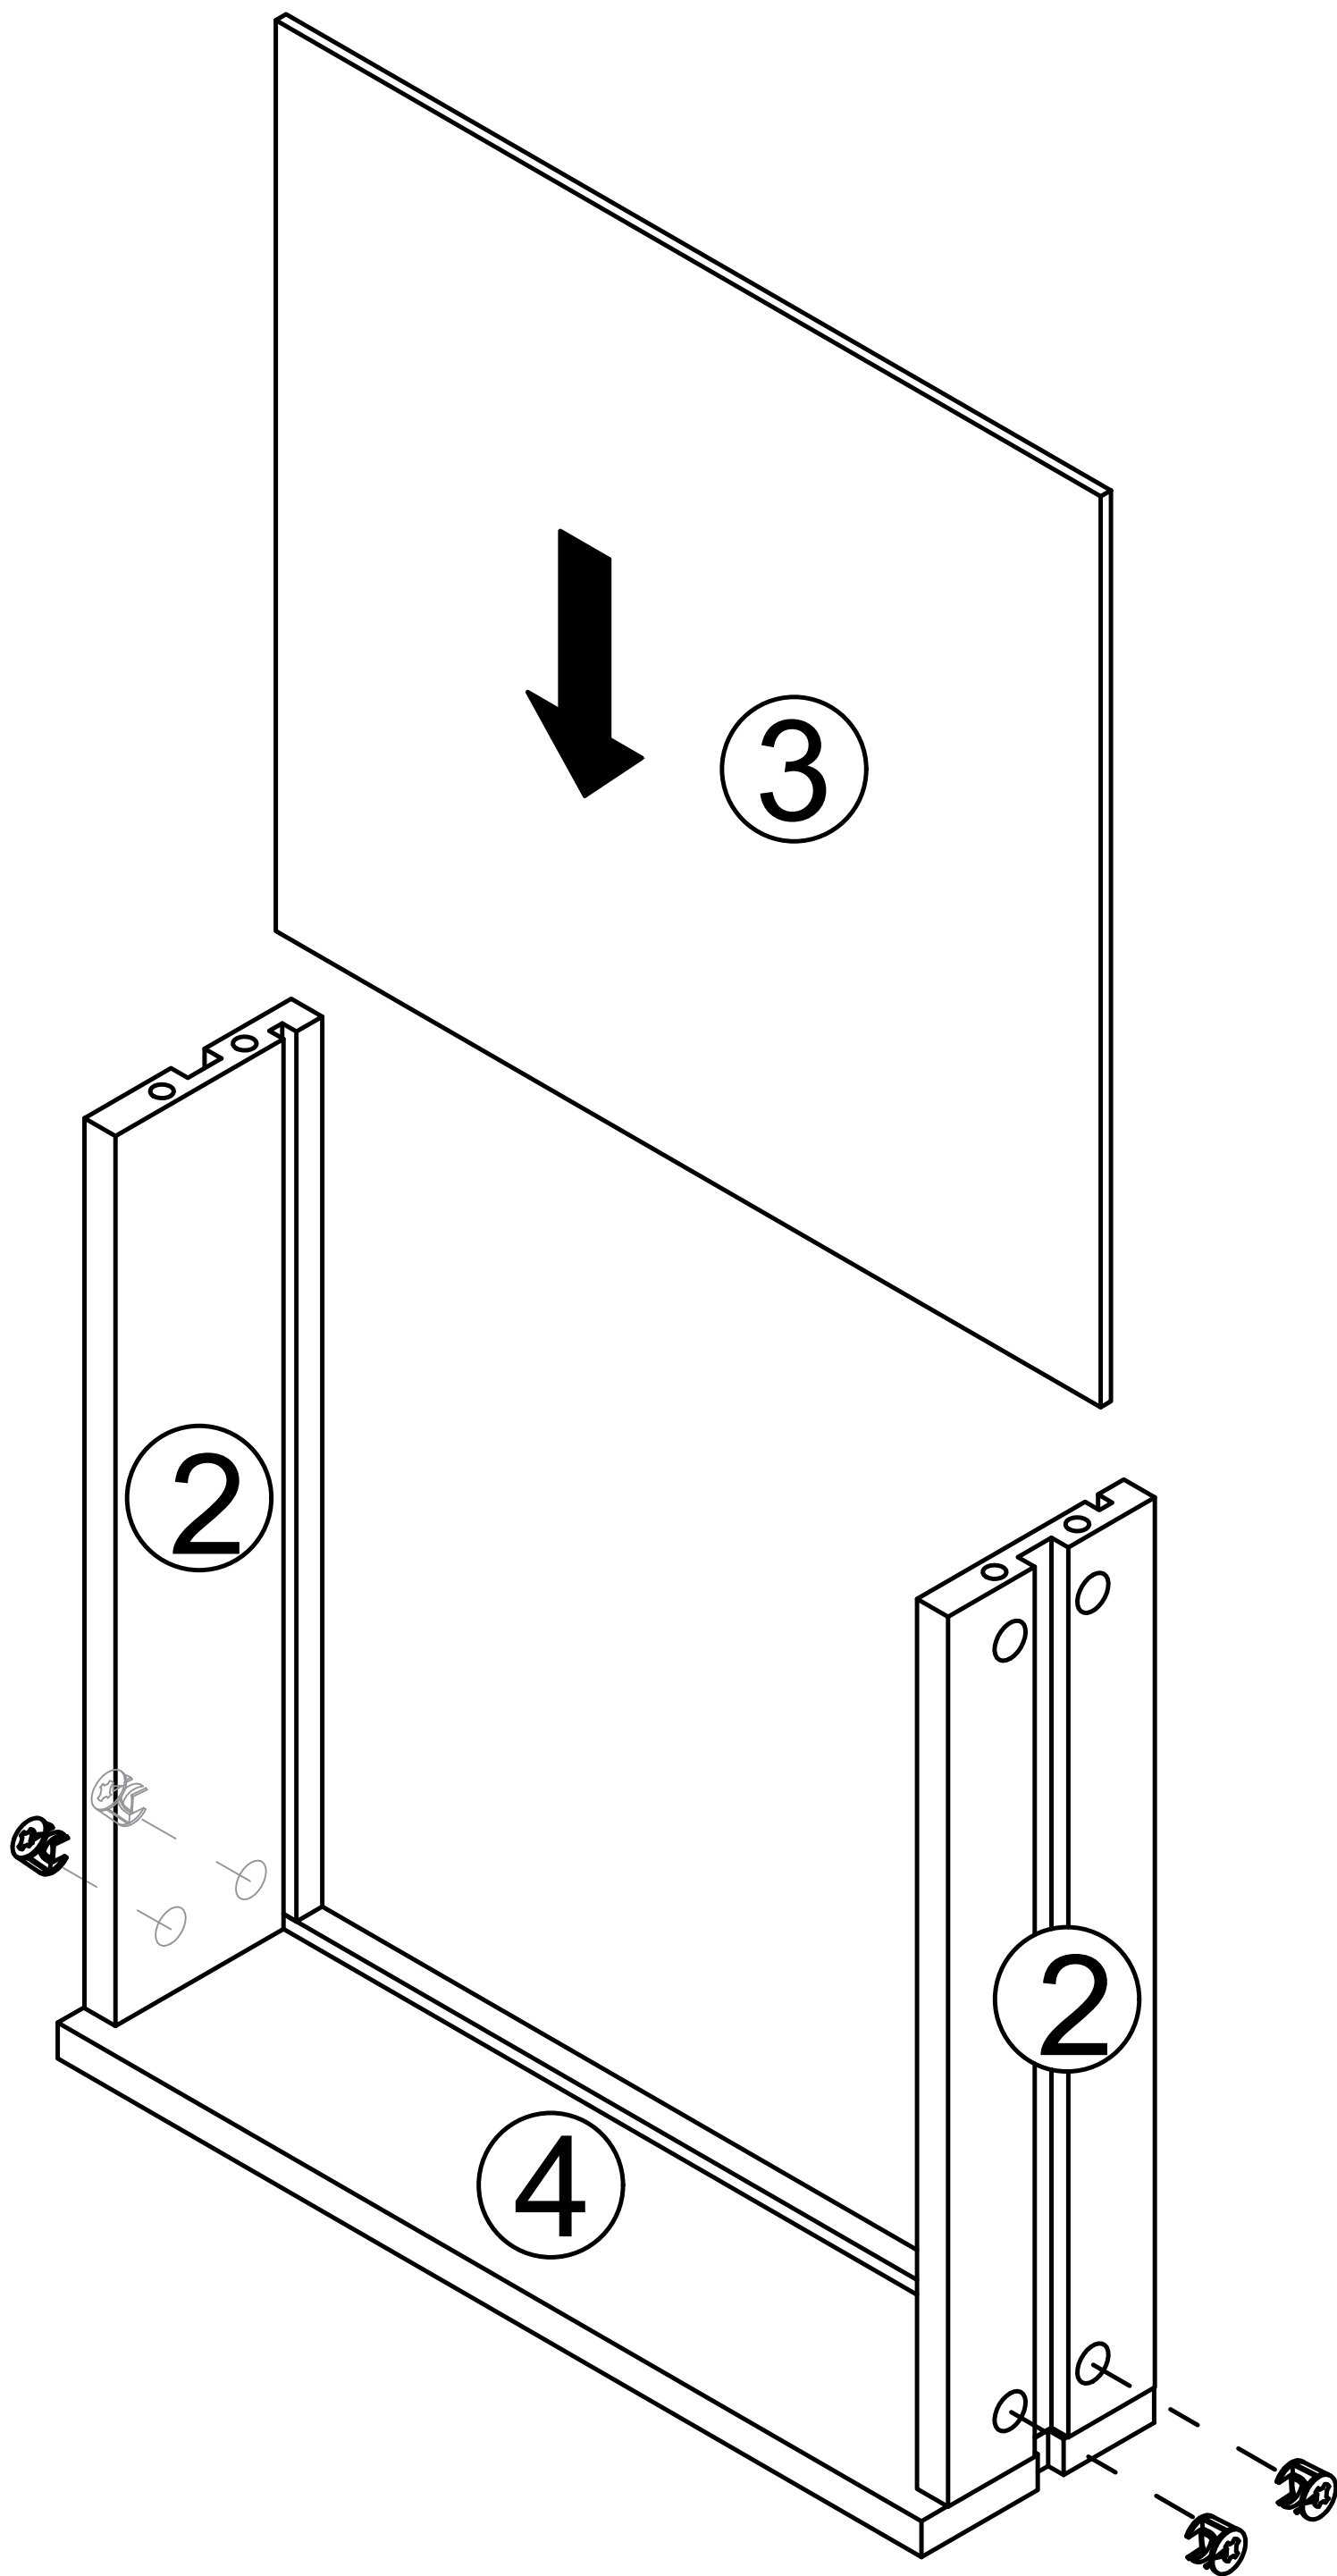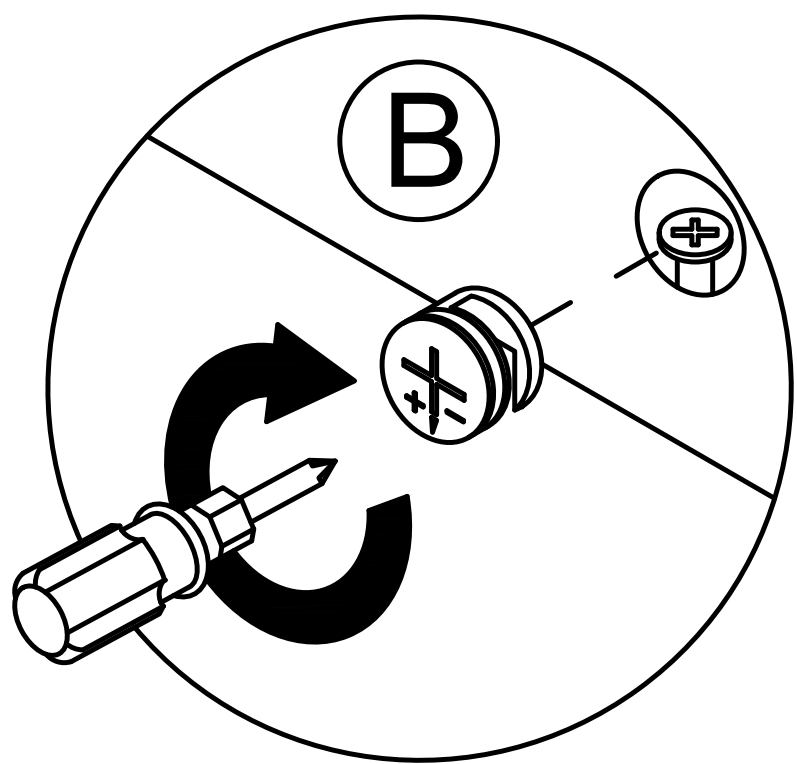

7

Step 4

A

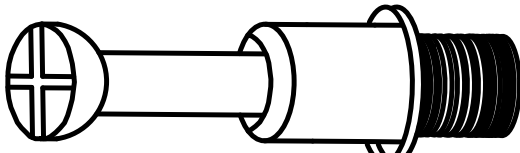

x4

D






x1



x1




x1

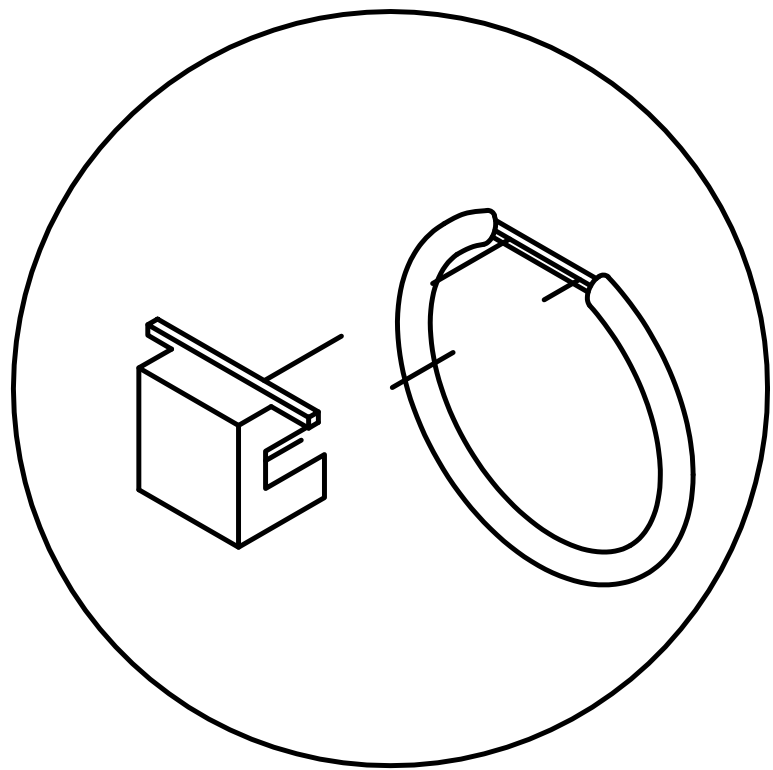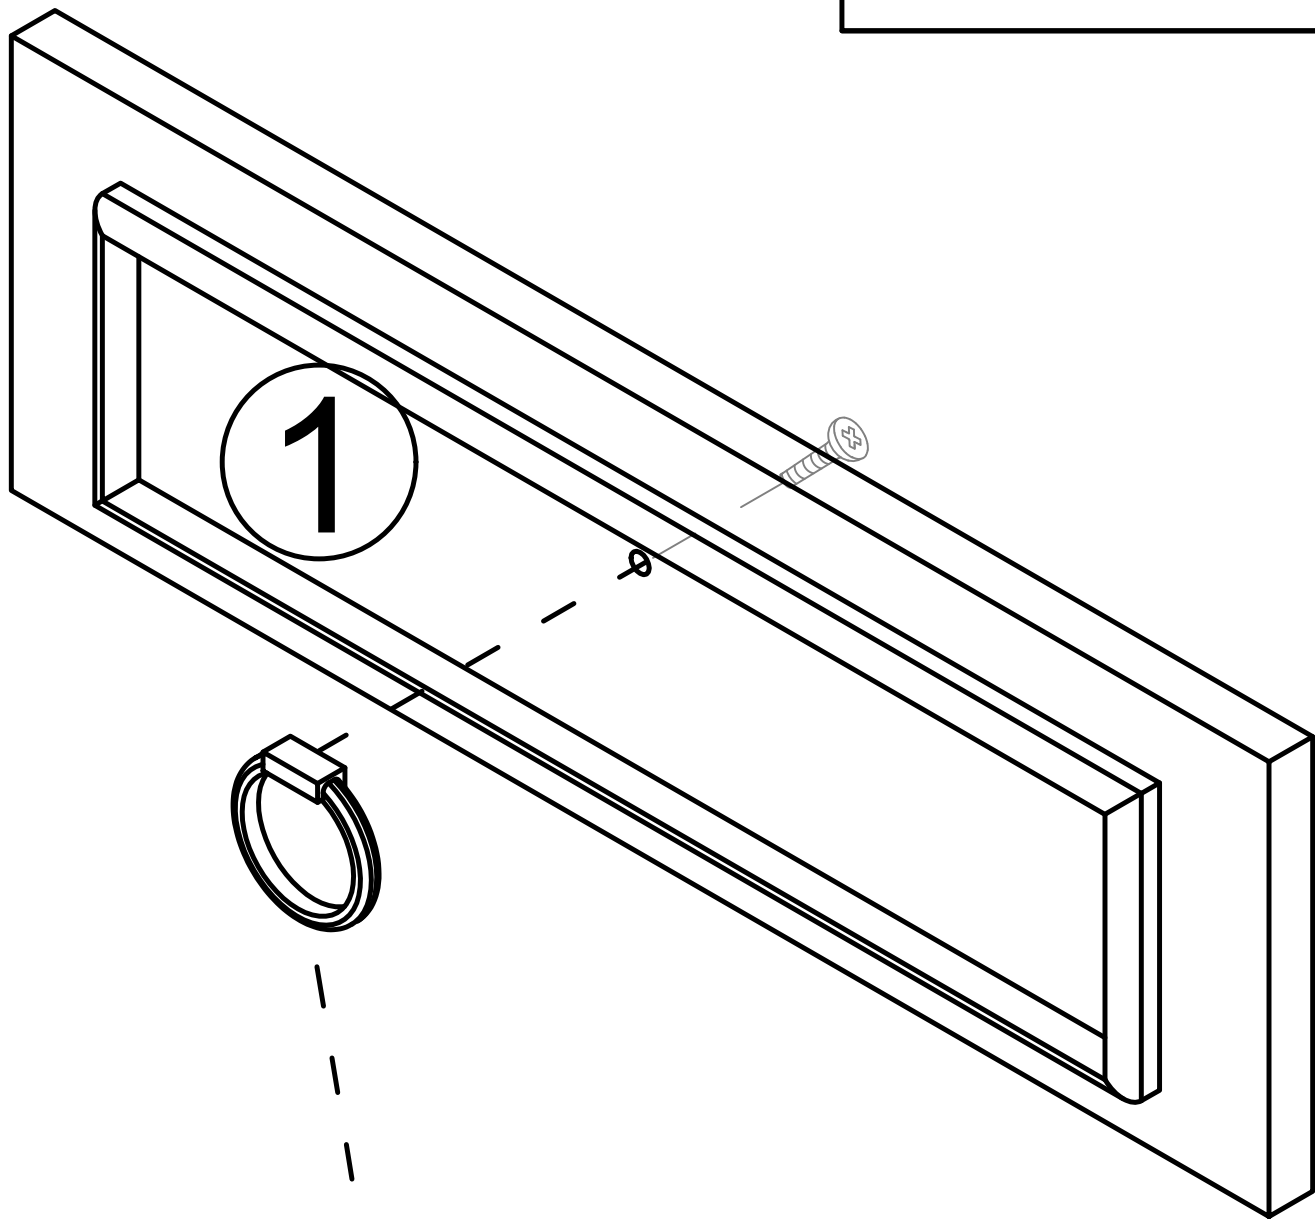
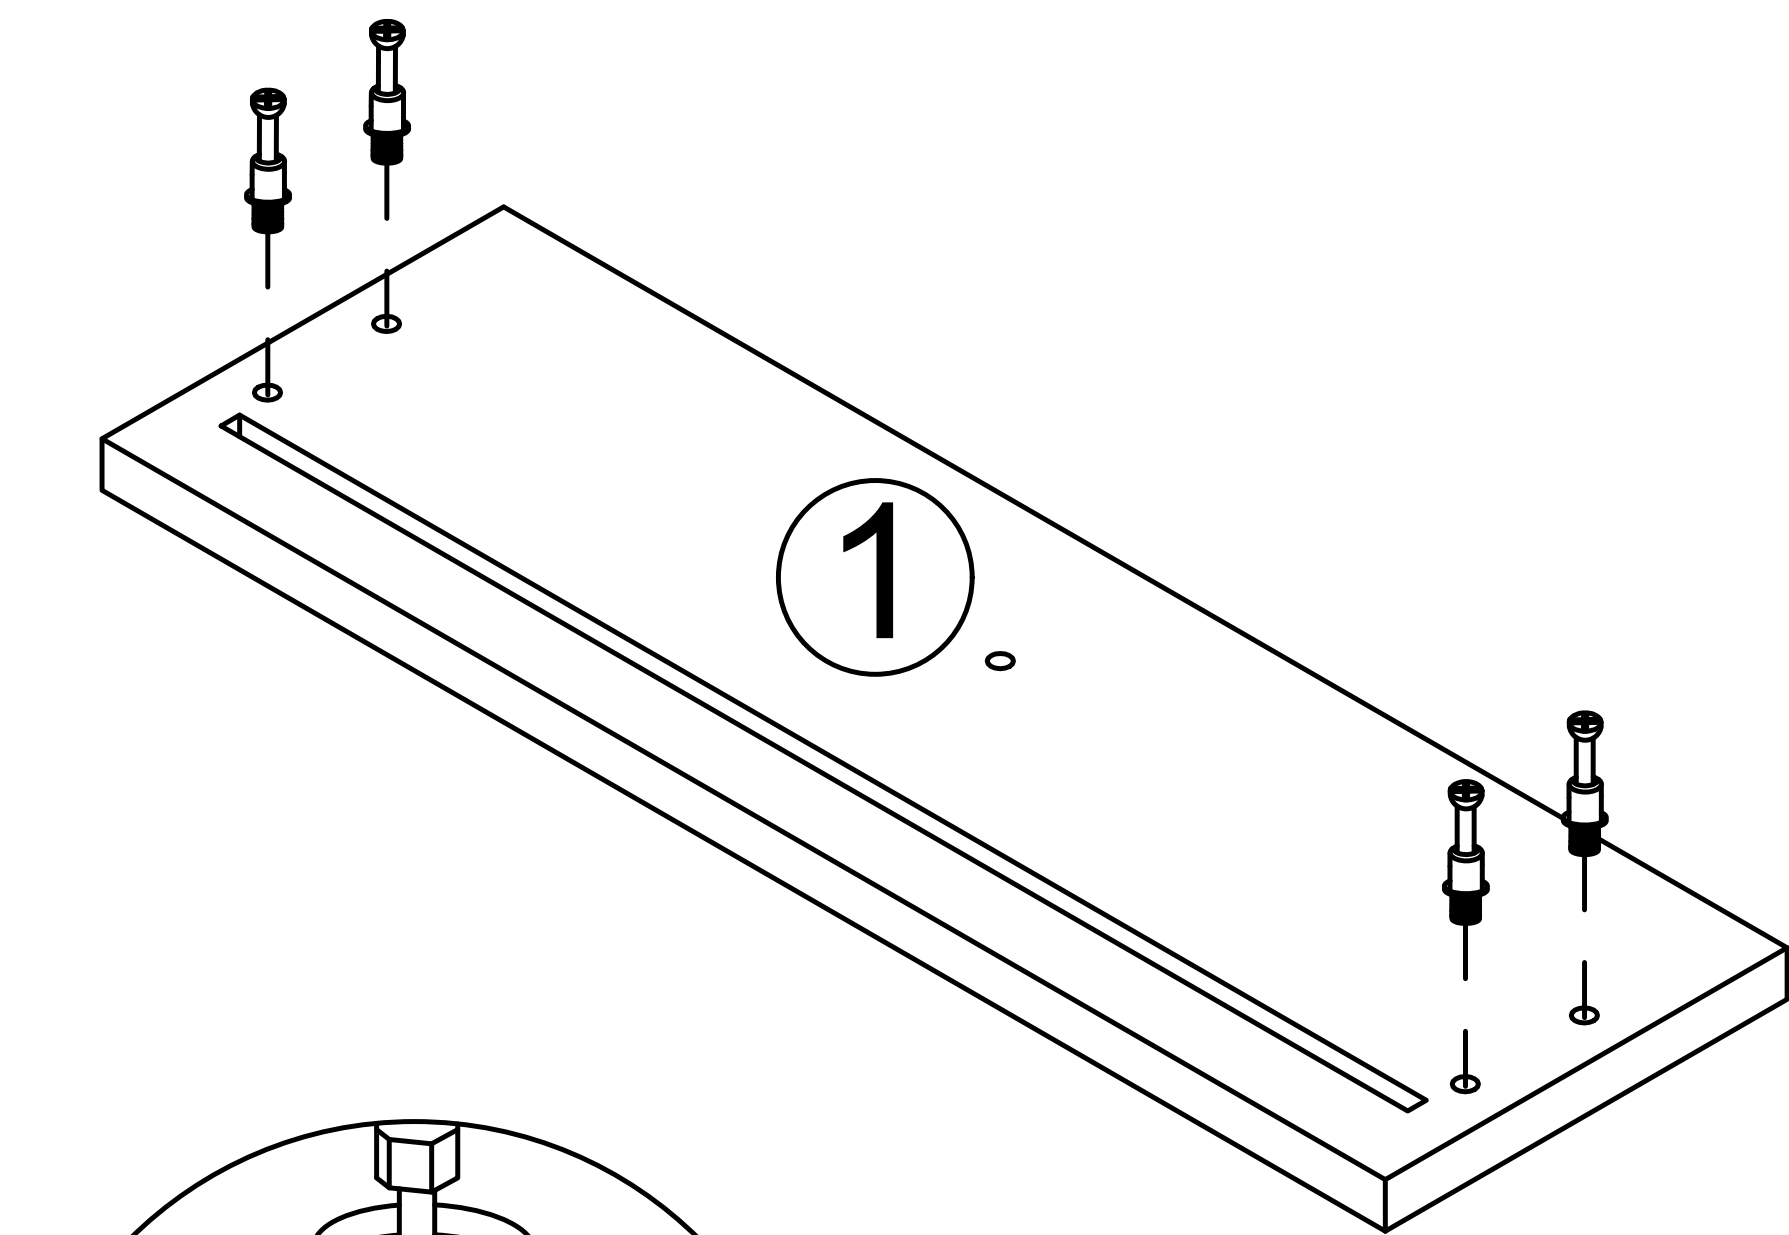


Step 5

B

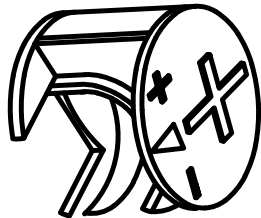


x4

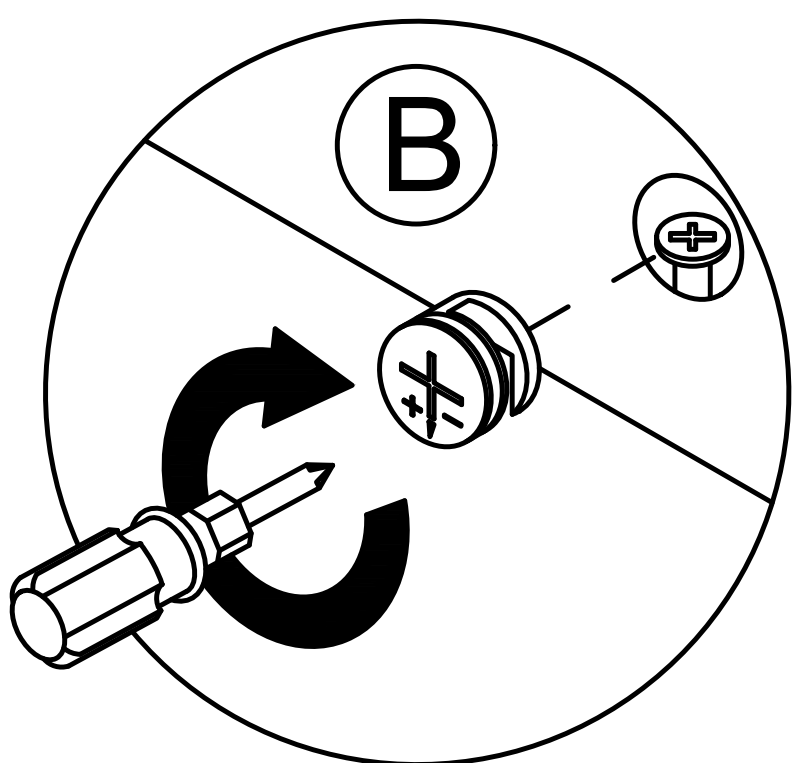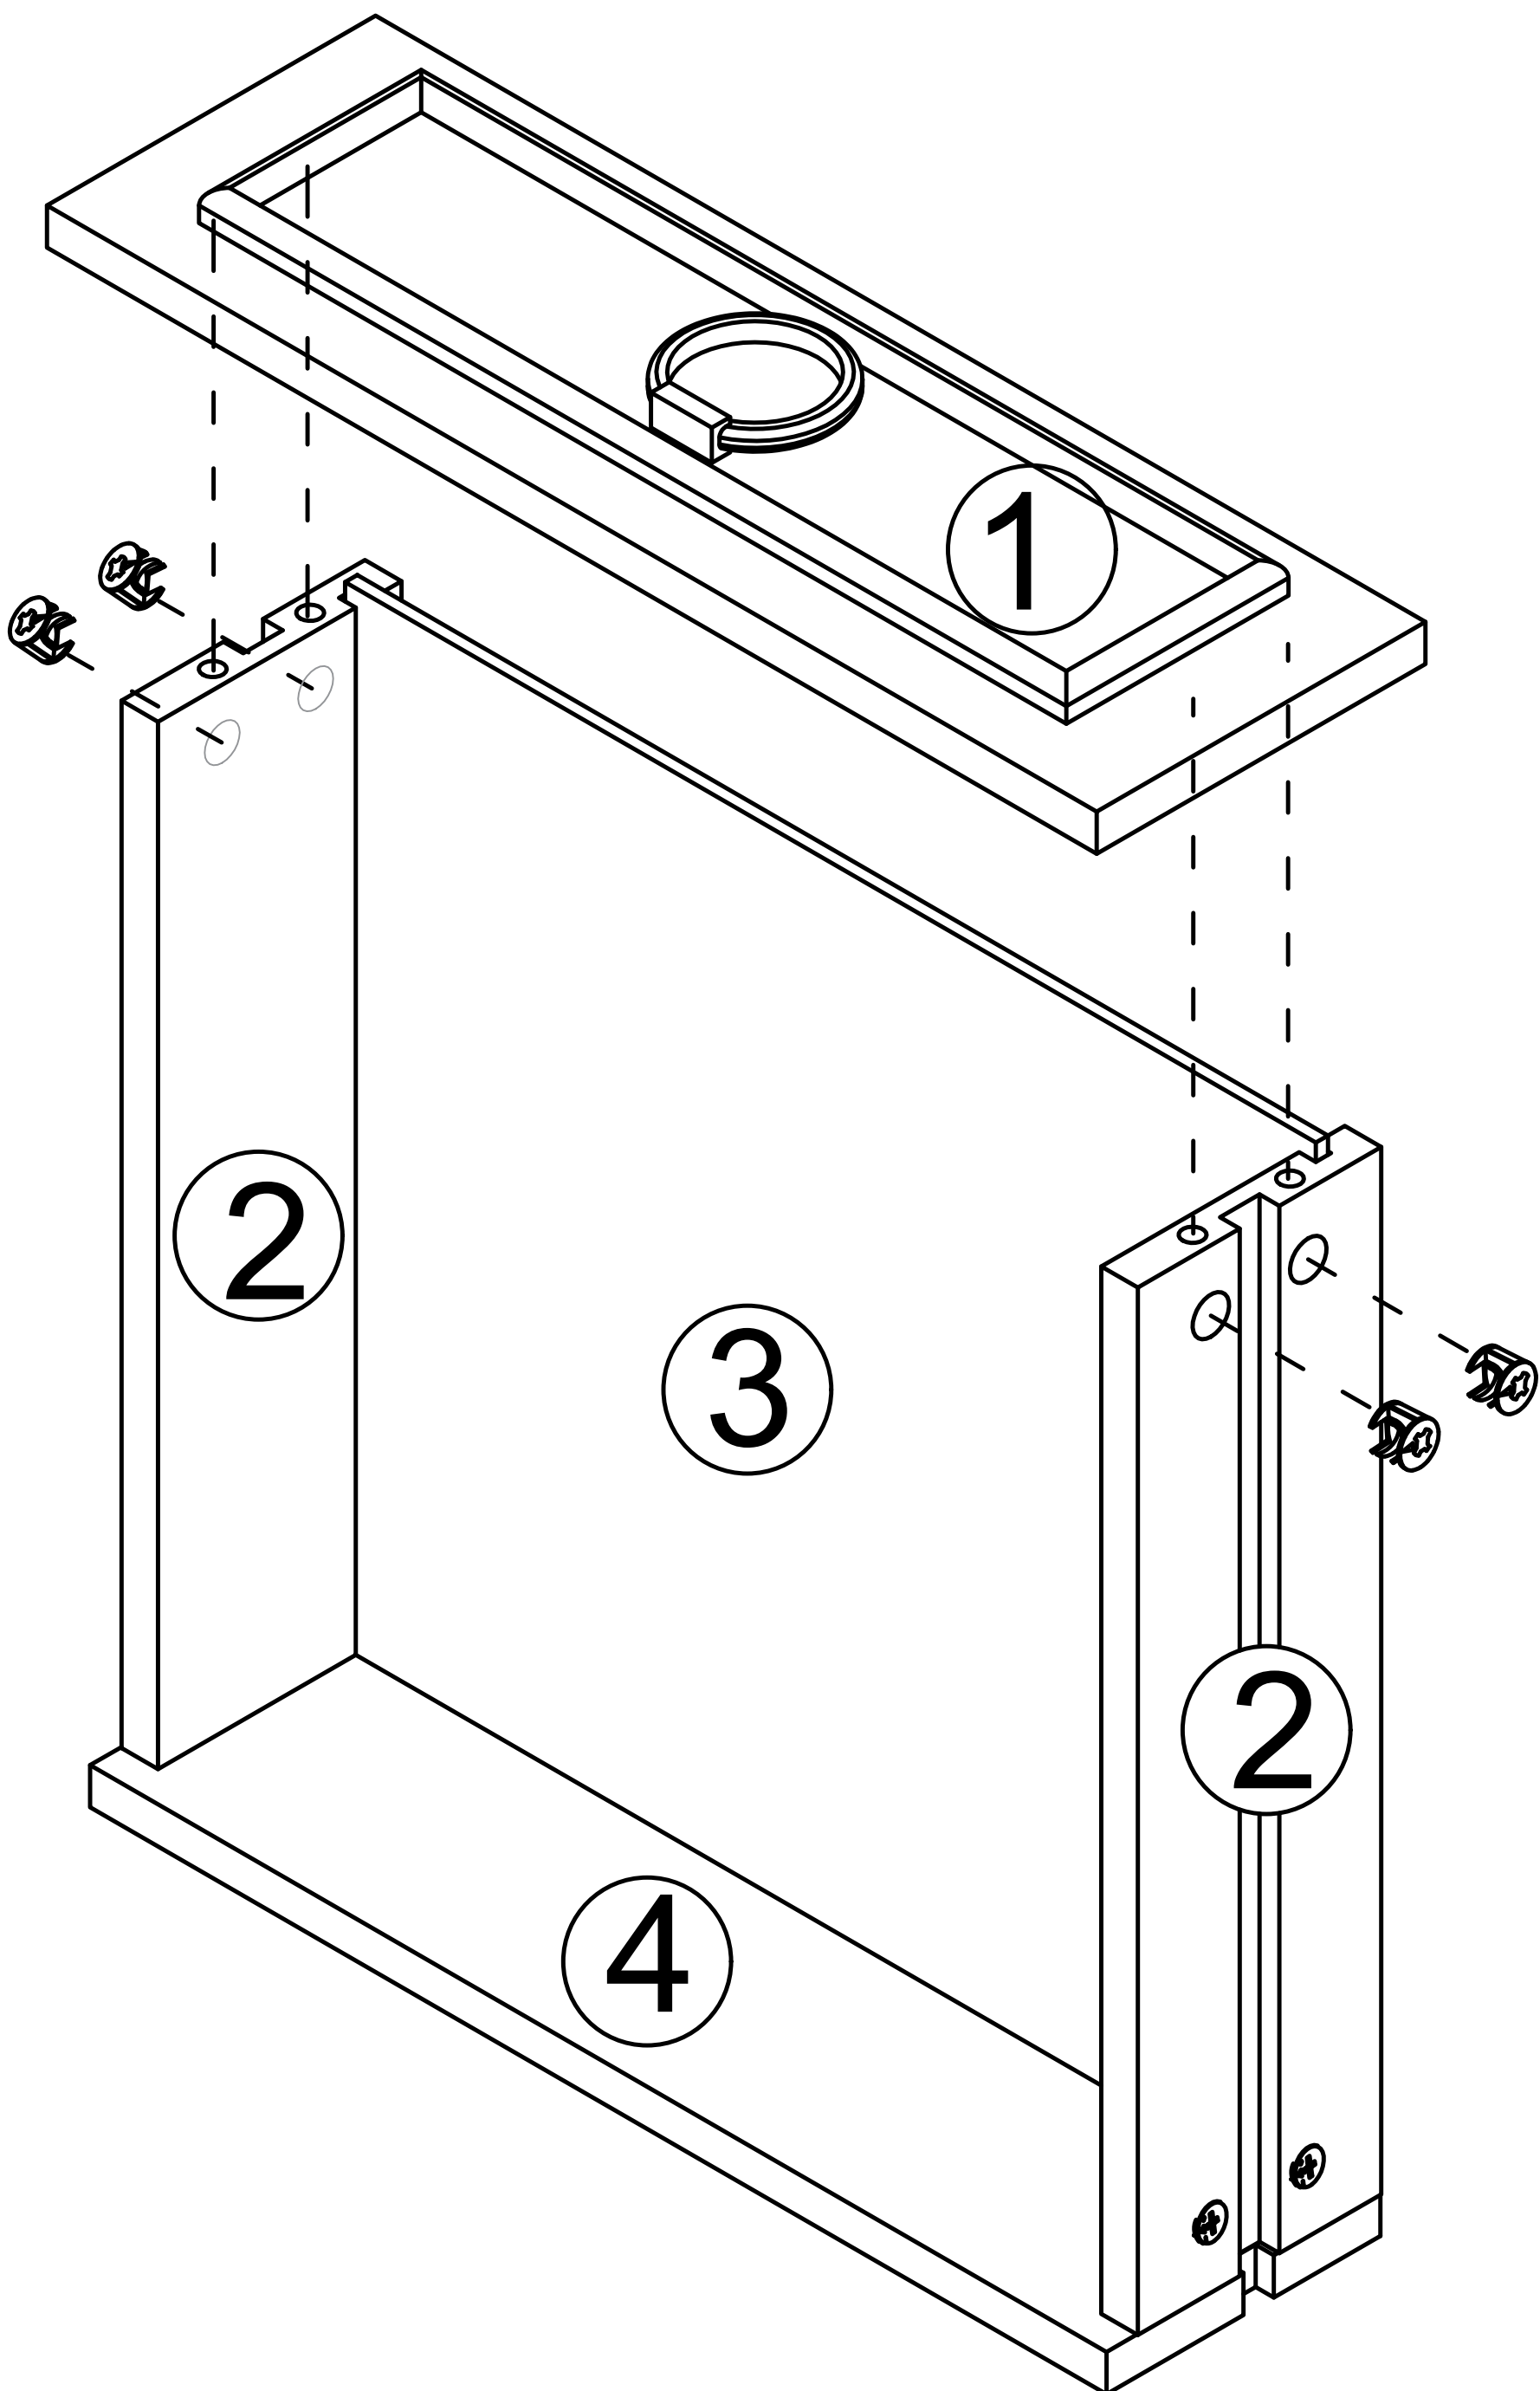


Step 6

- A

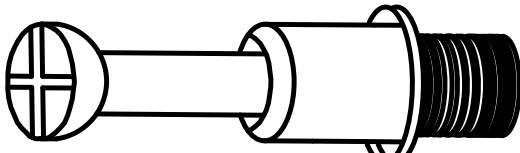

x16
- B

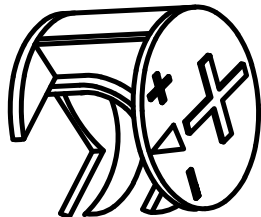

x16
- D




x2


















x2





x2

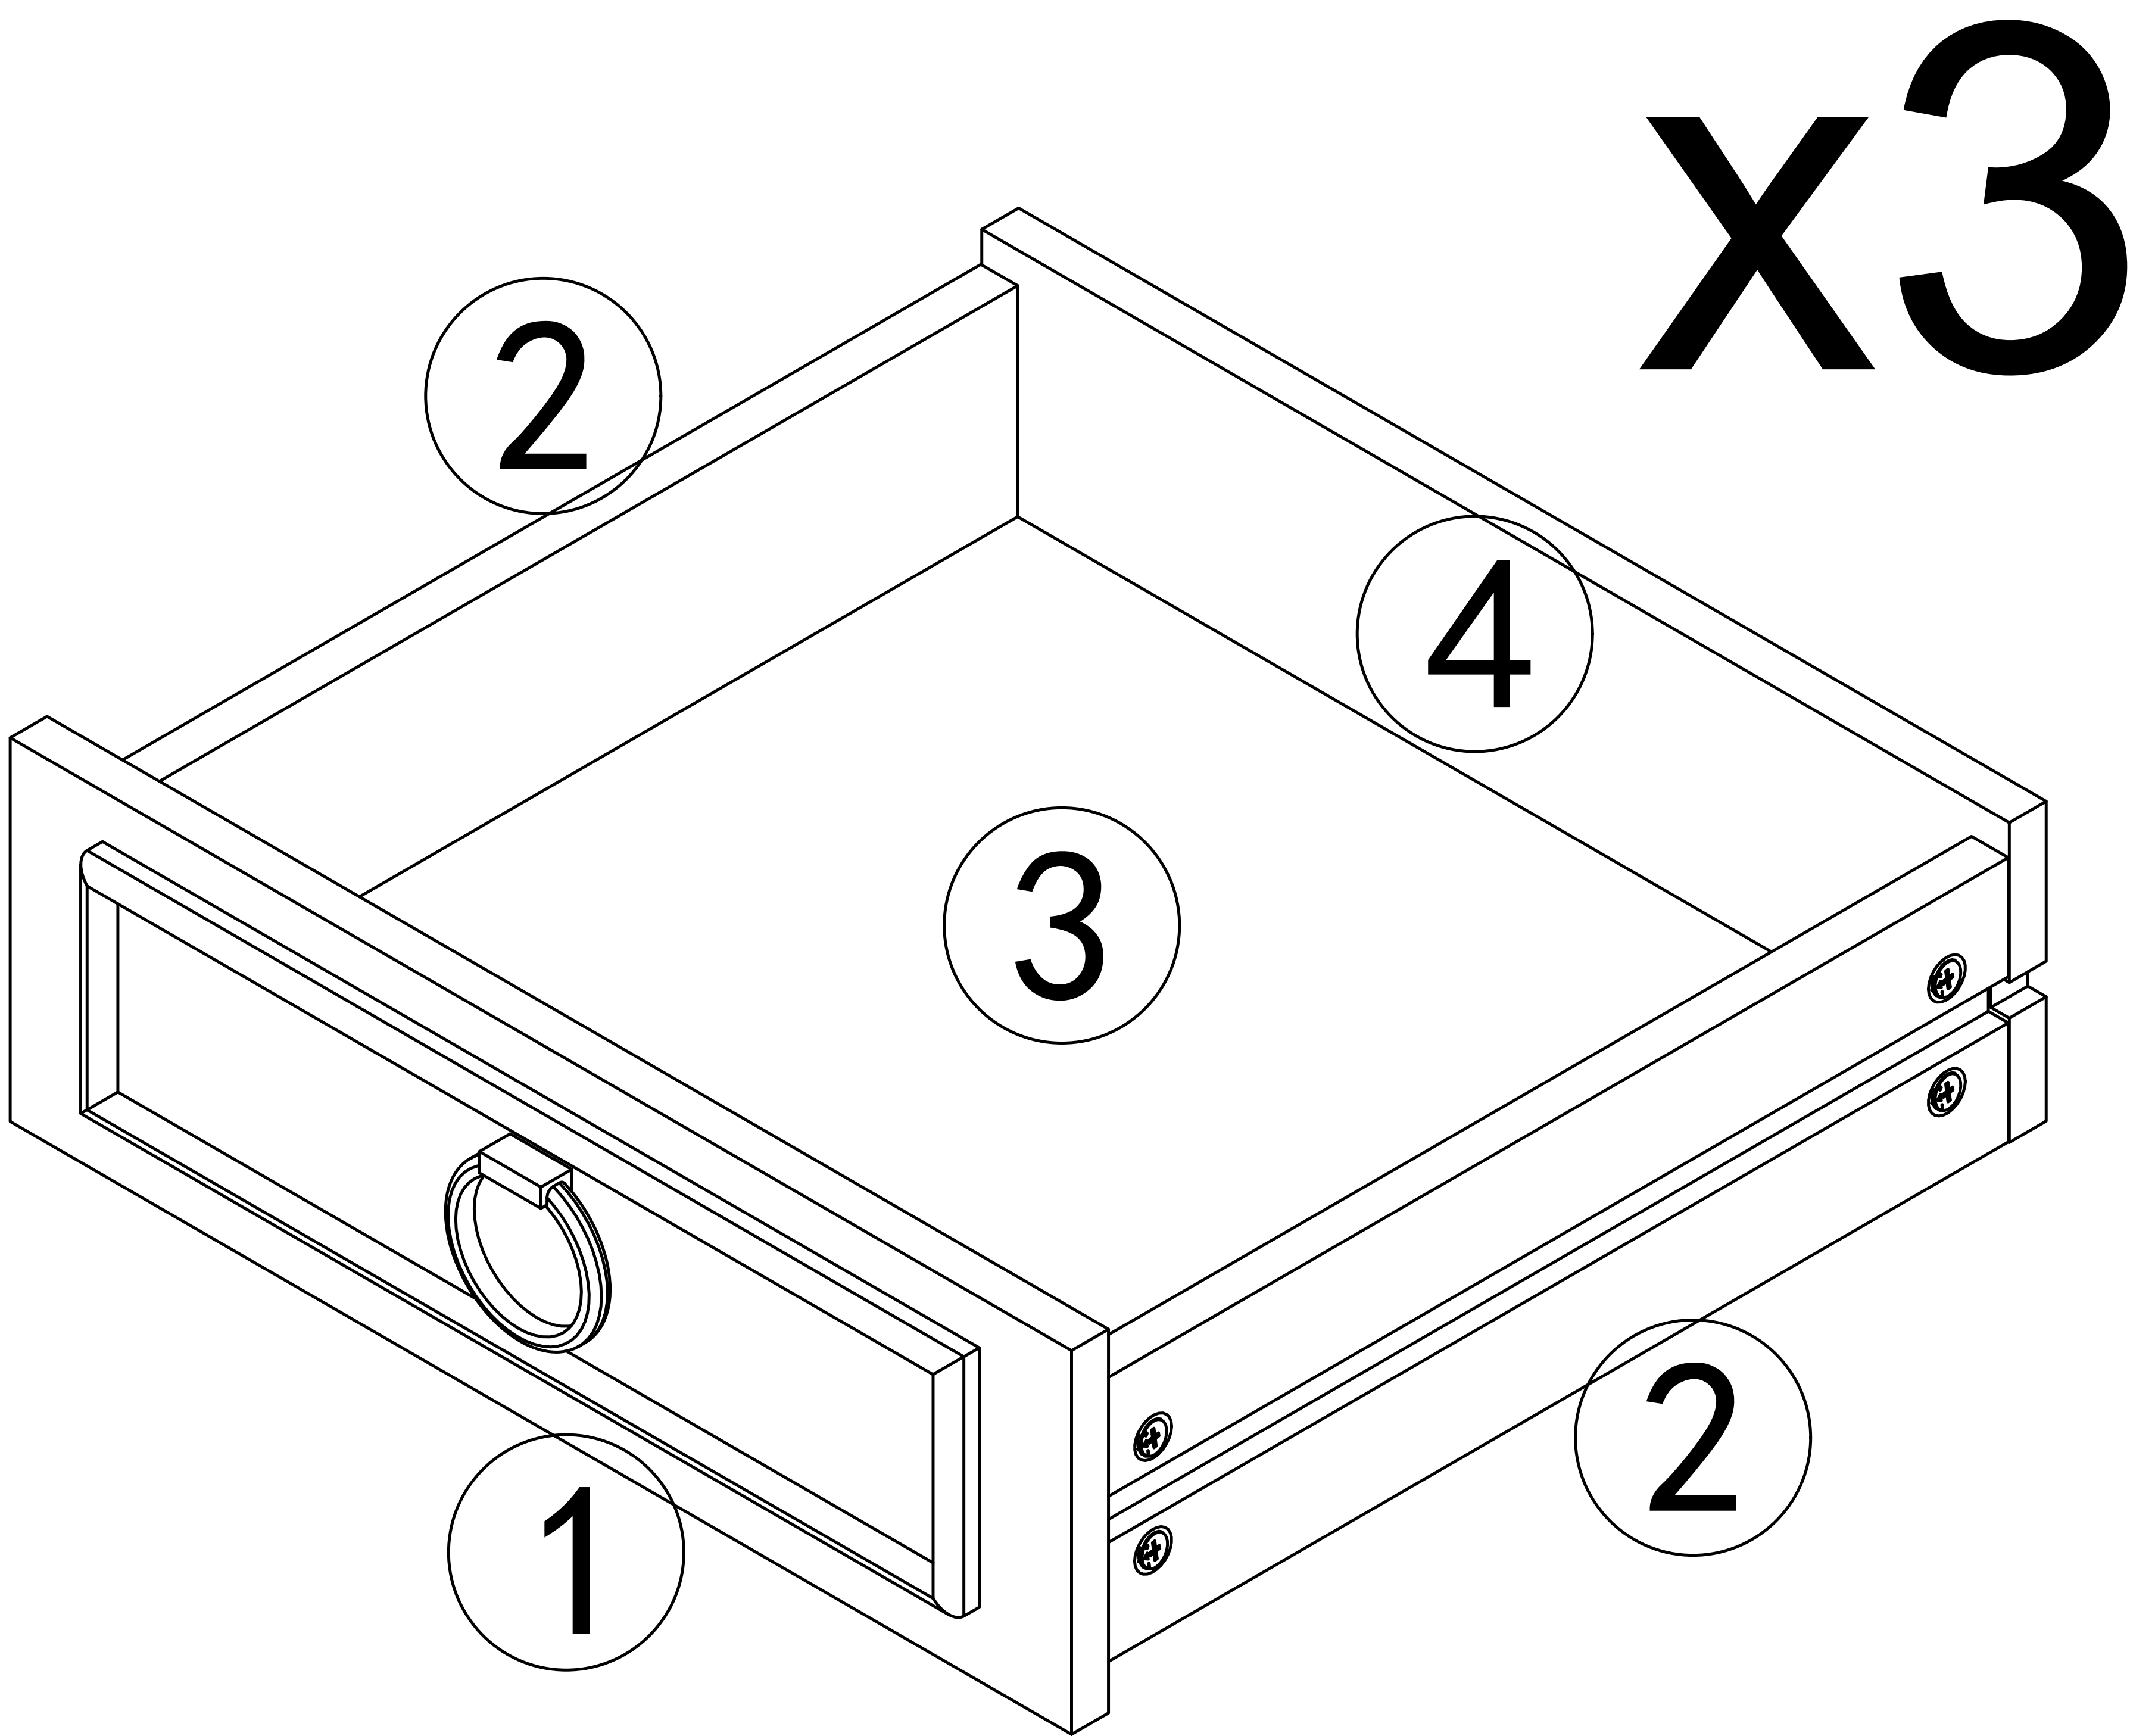


Repeat the drawer installation steps

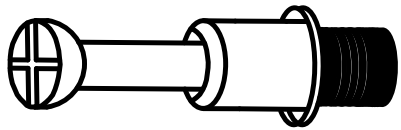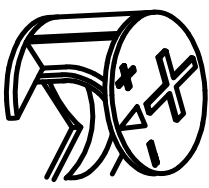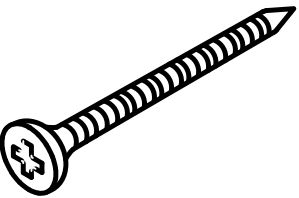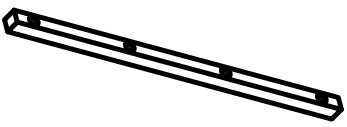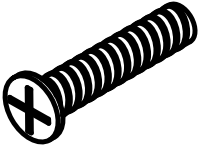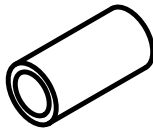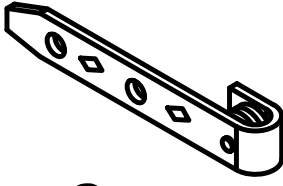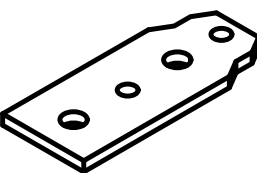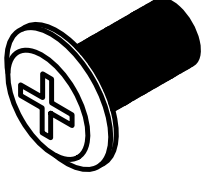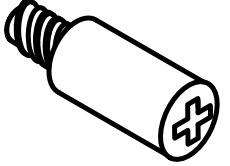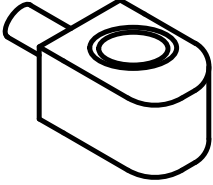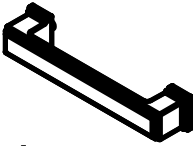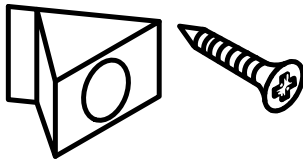A		44pcs	B		44pcs	C		12pcs
E		6pcs	F		6pcs	G	 	24pcs
H		2pcs	I	  	2pcs 2pcs 2pcs	J		4pcs
K		4pcs	L		6pcs	M		4pcs
N	 1pcs	 2pcs	O		12pcs			

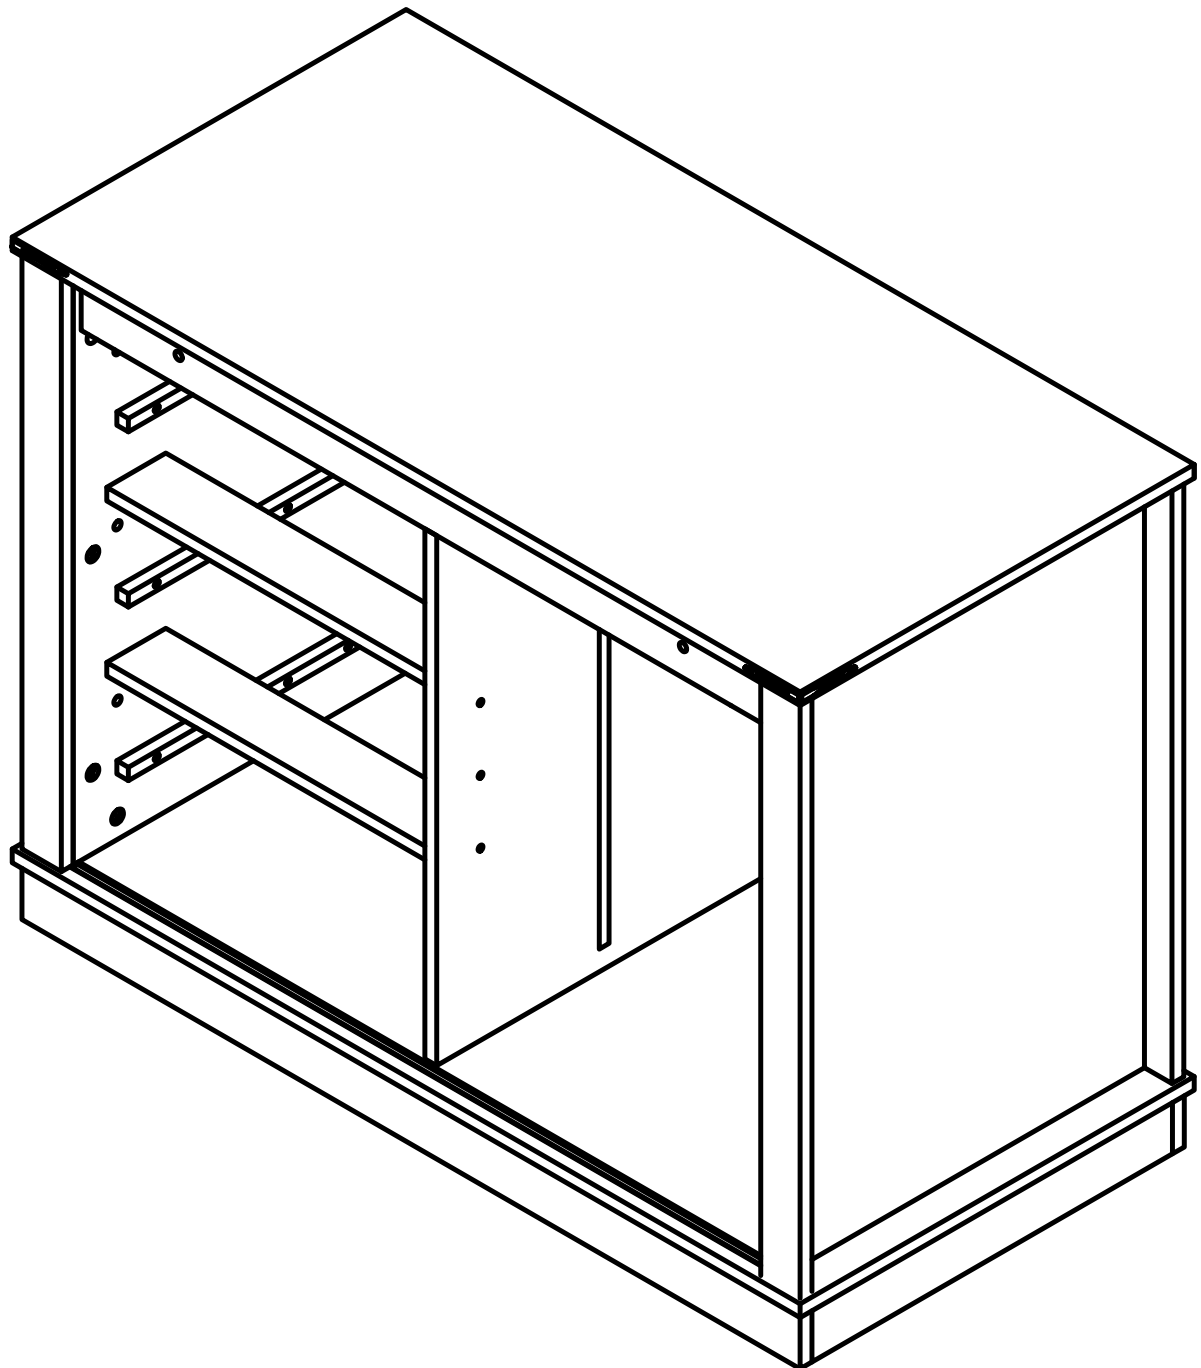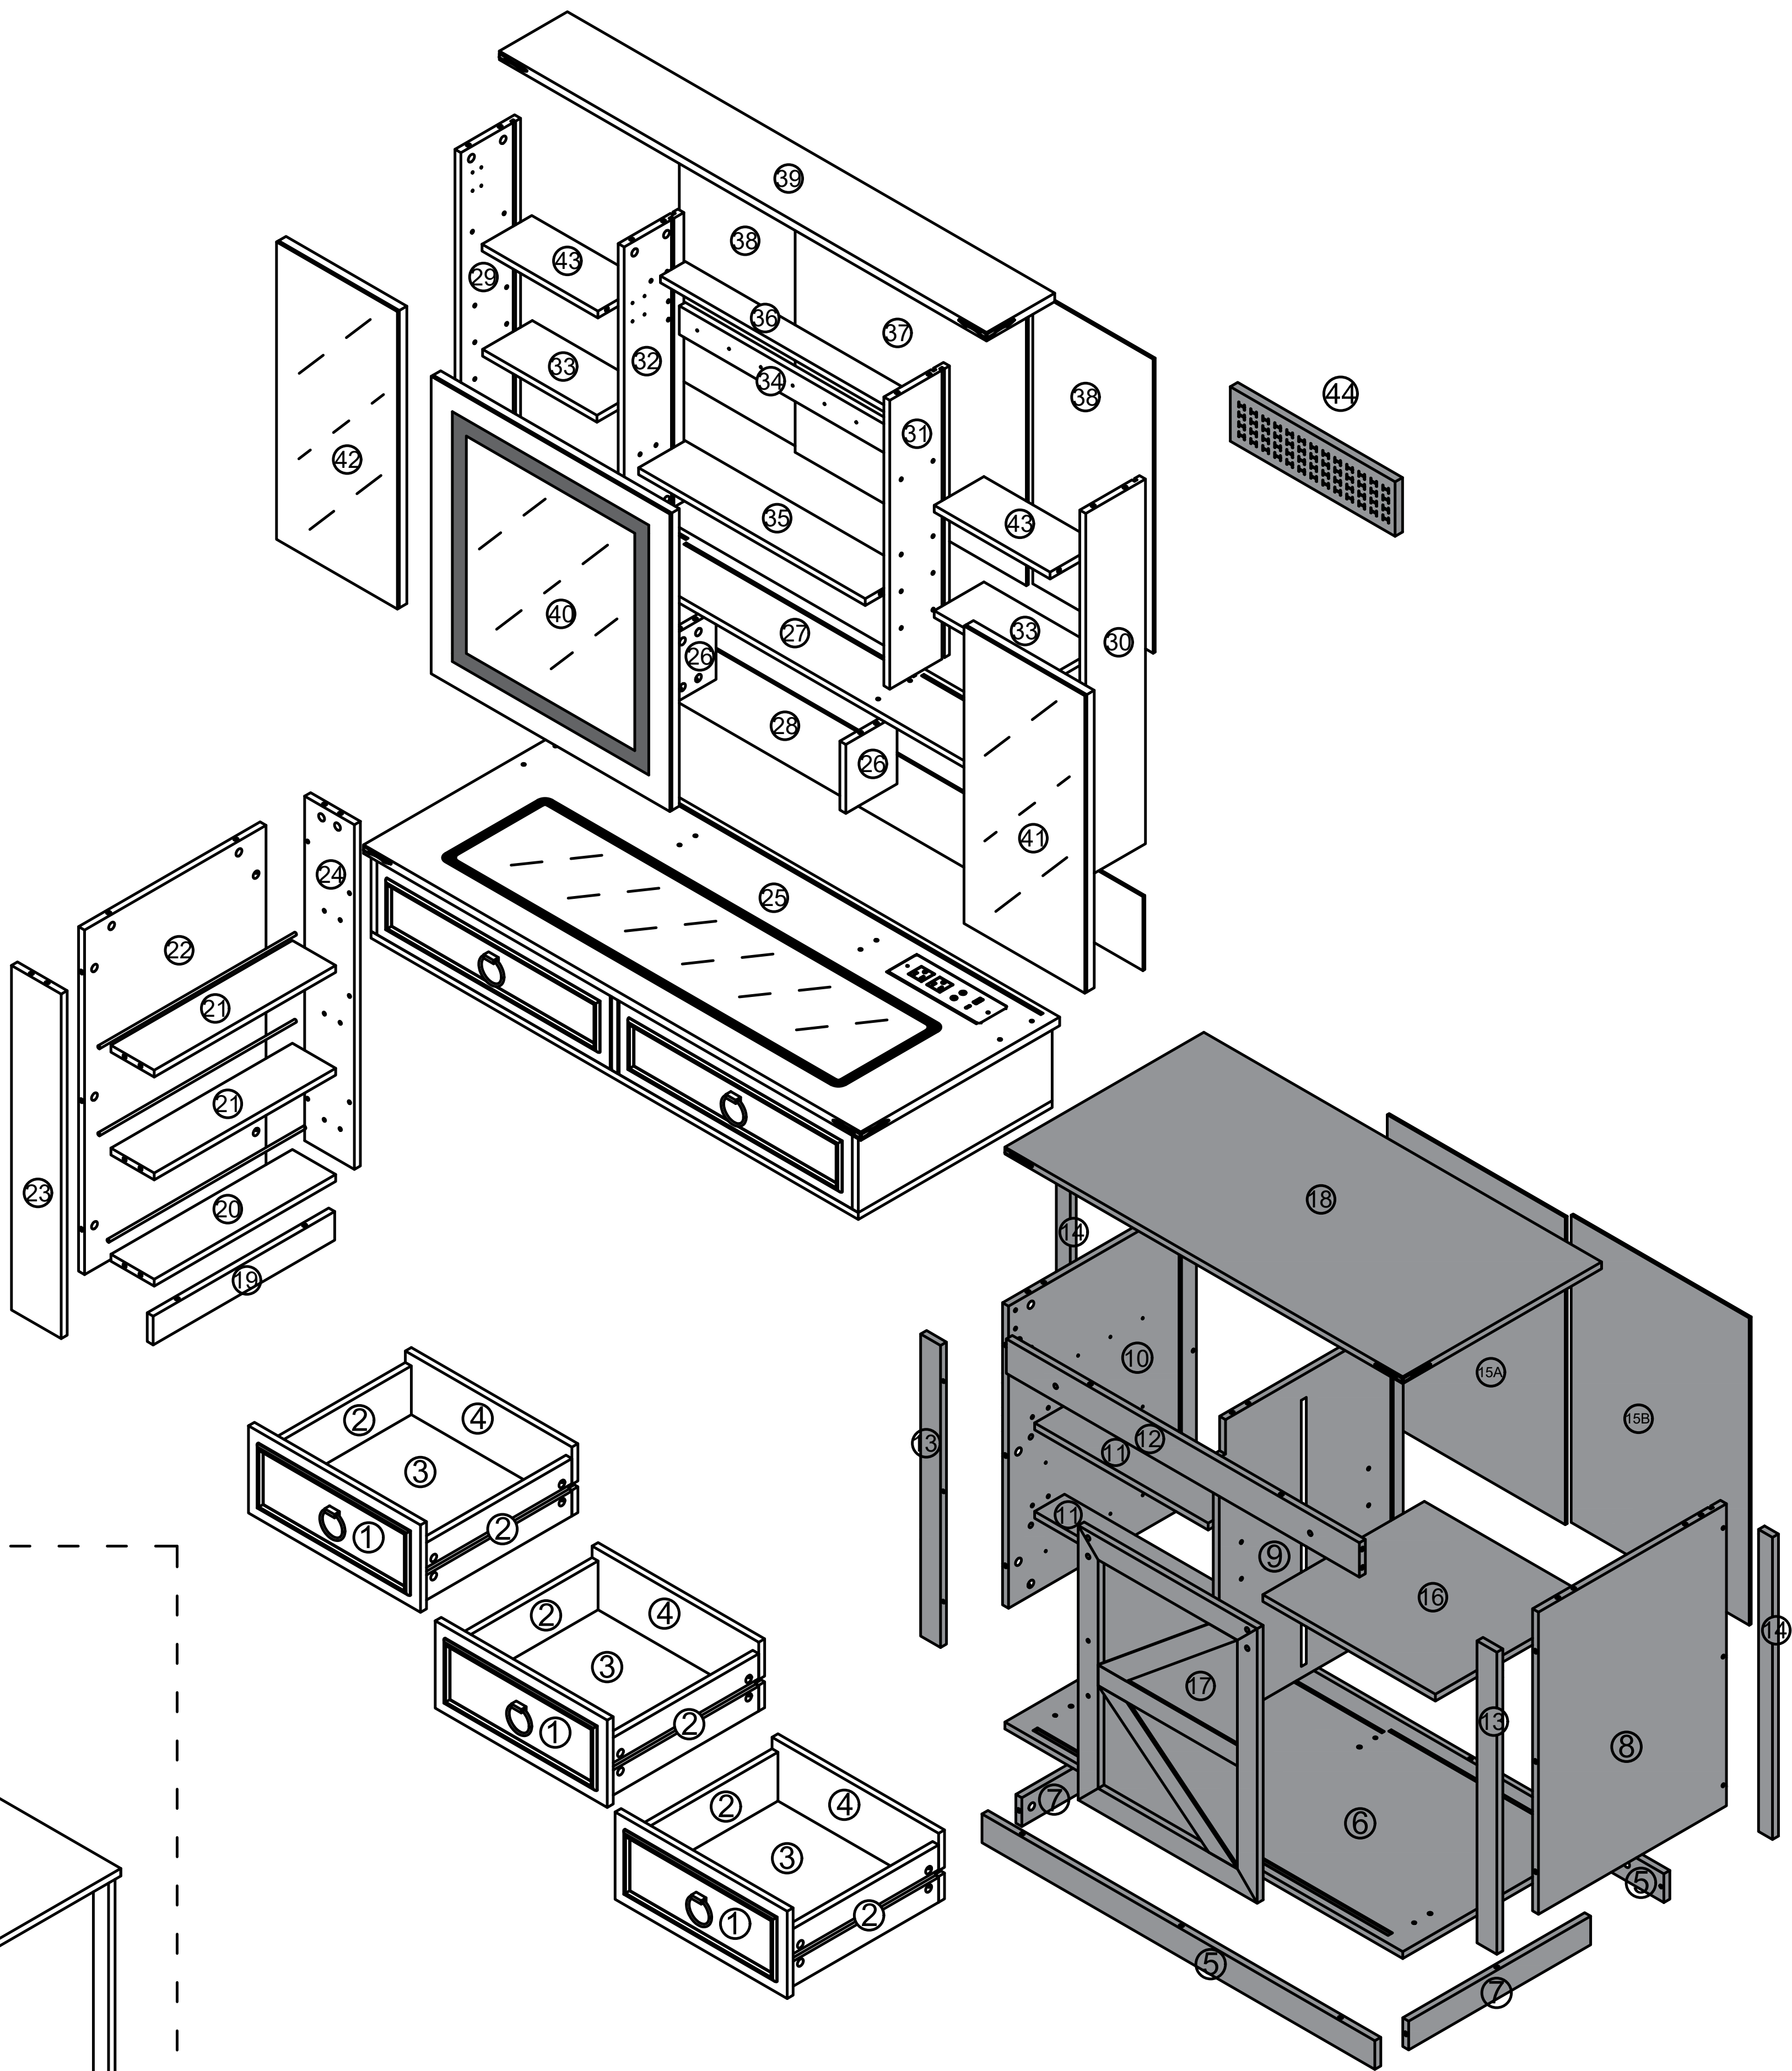


Step 7


- A

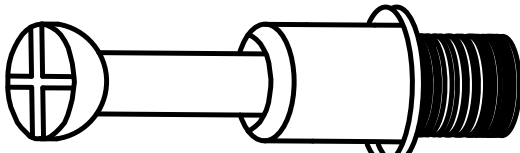

x4
- B

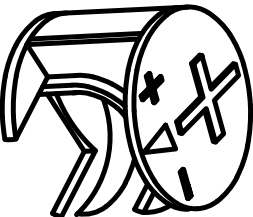


x4

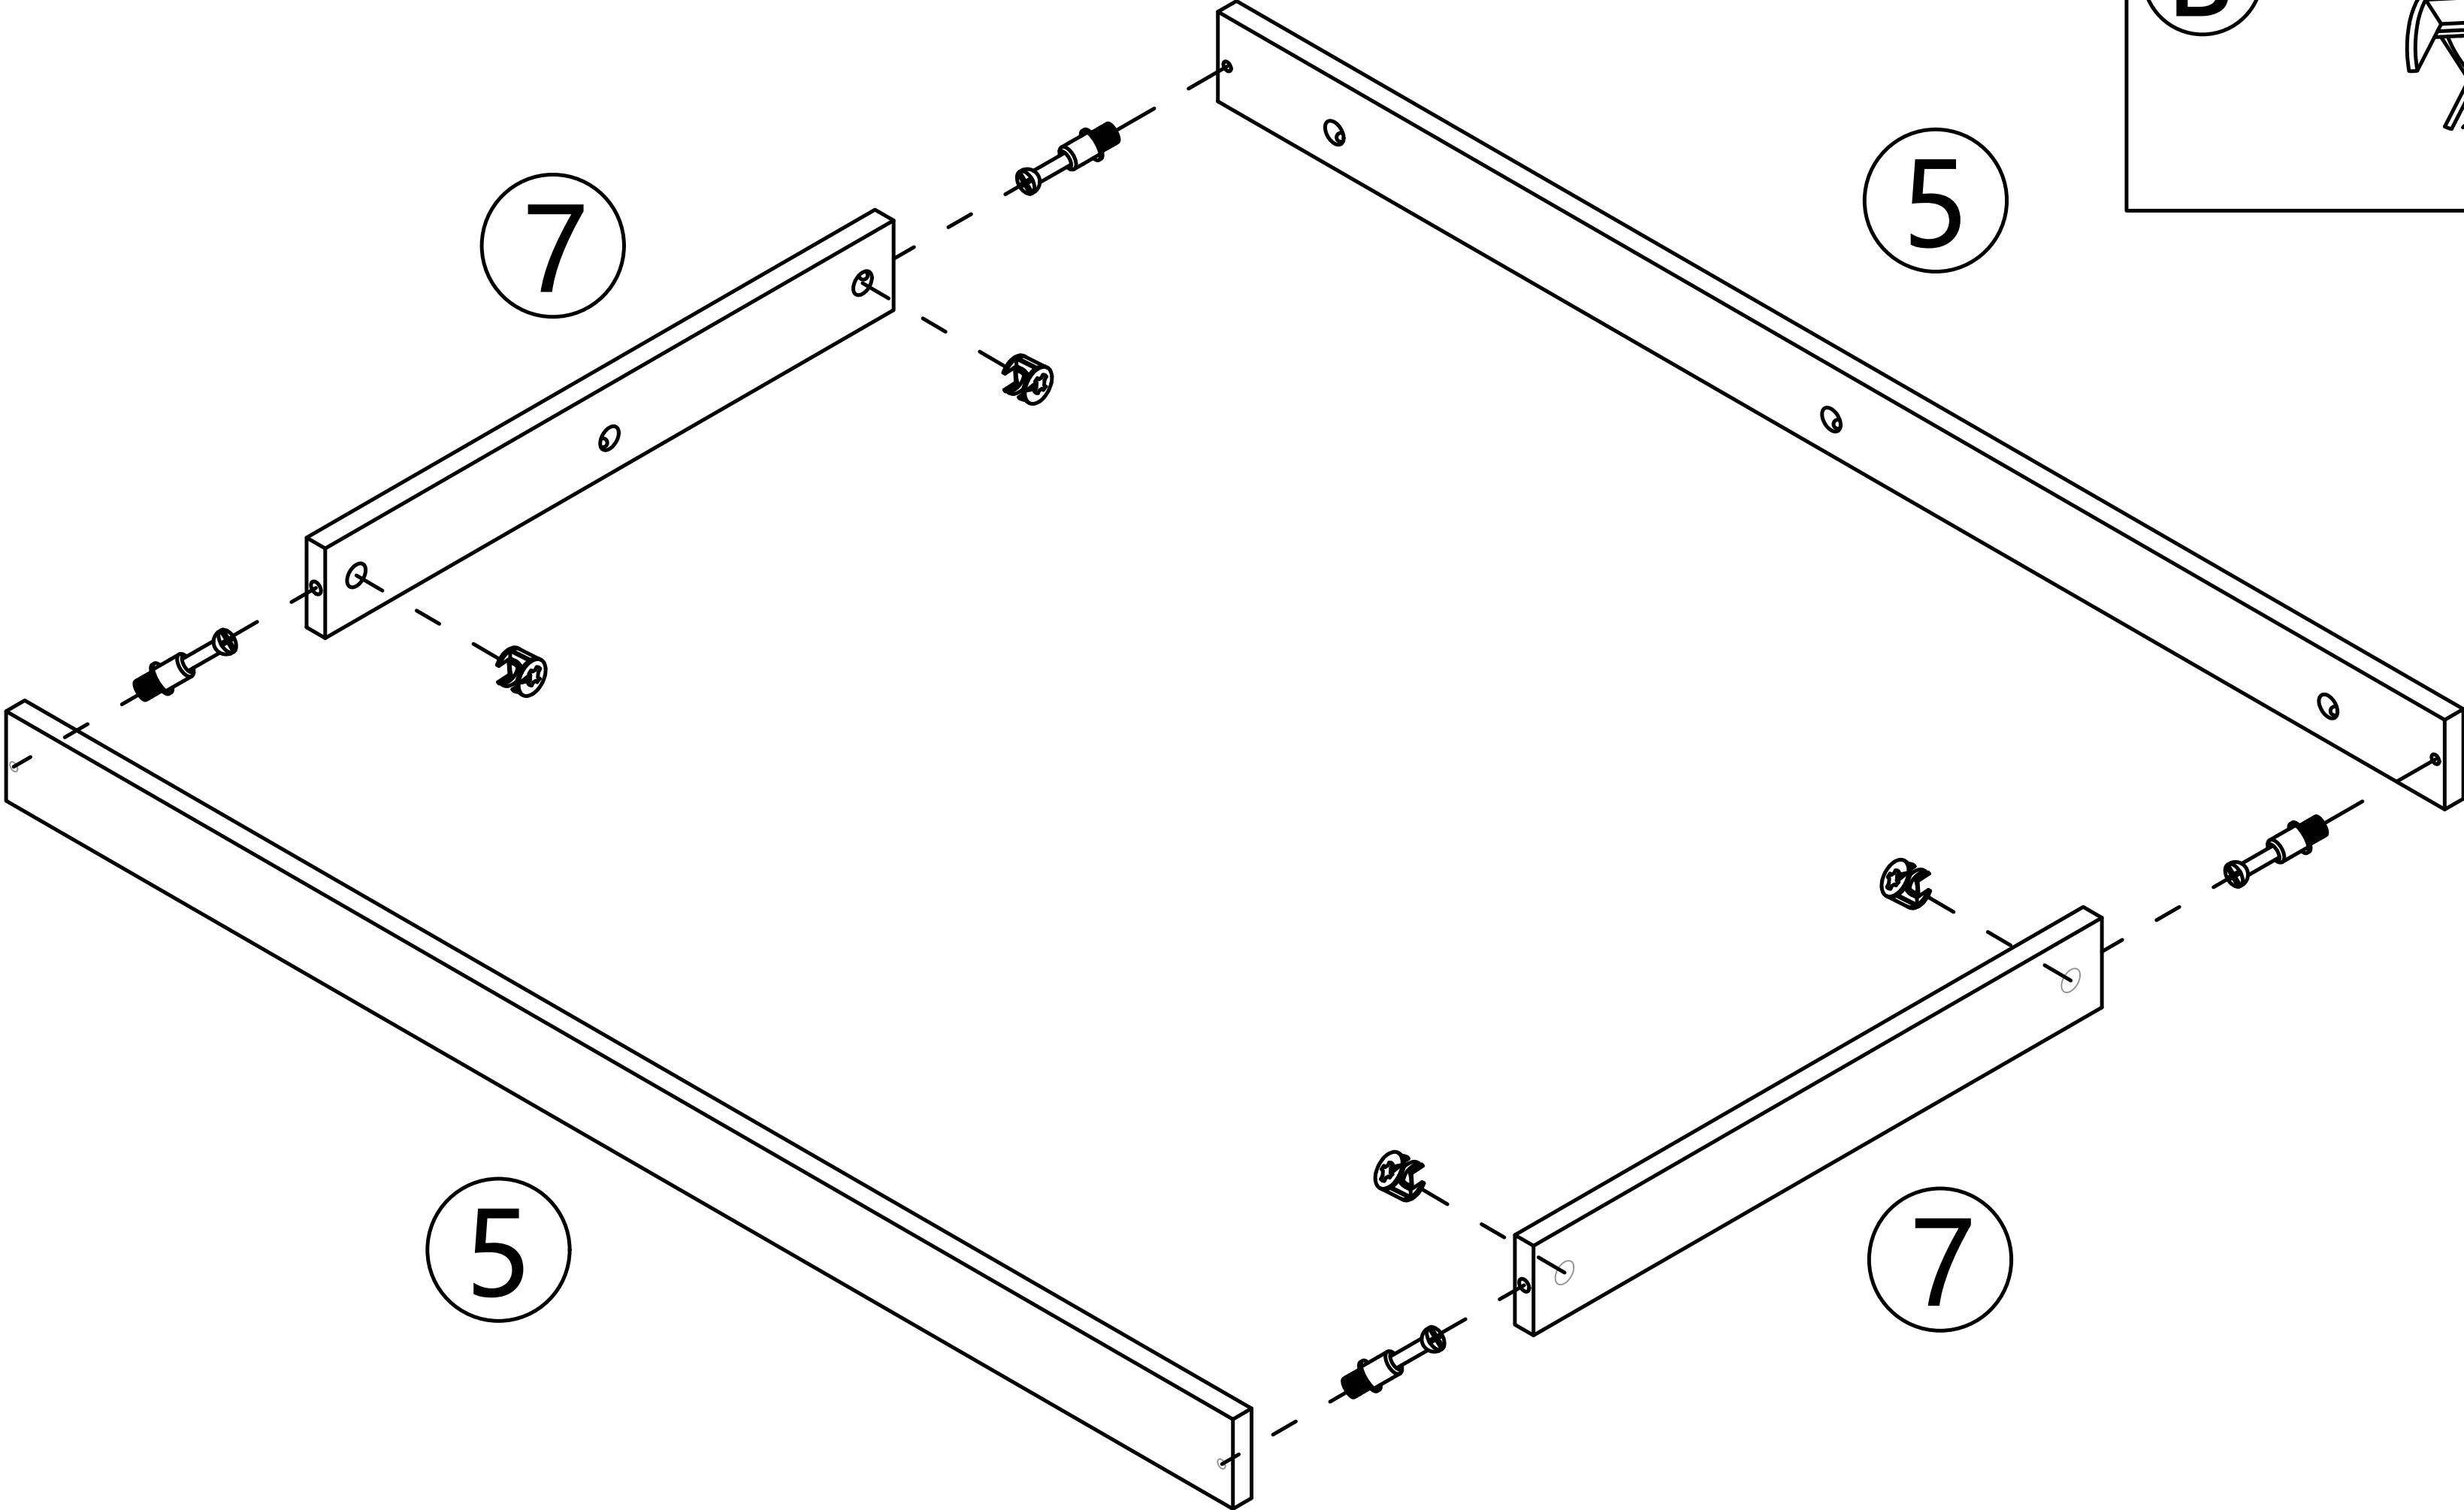


Step 8

- A

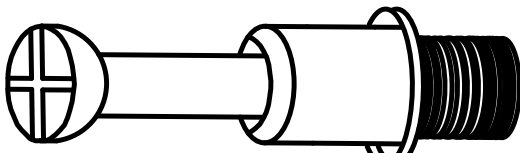


x8

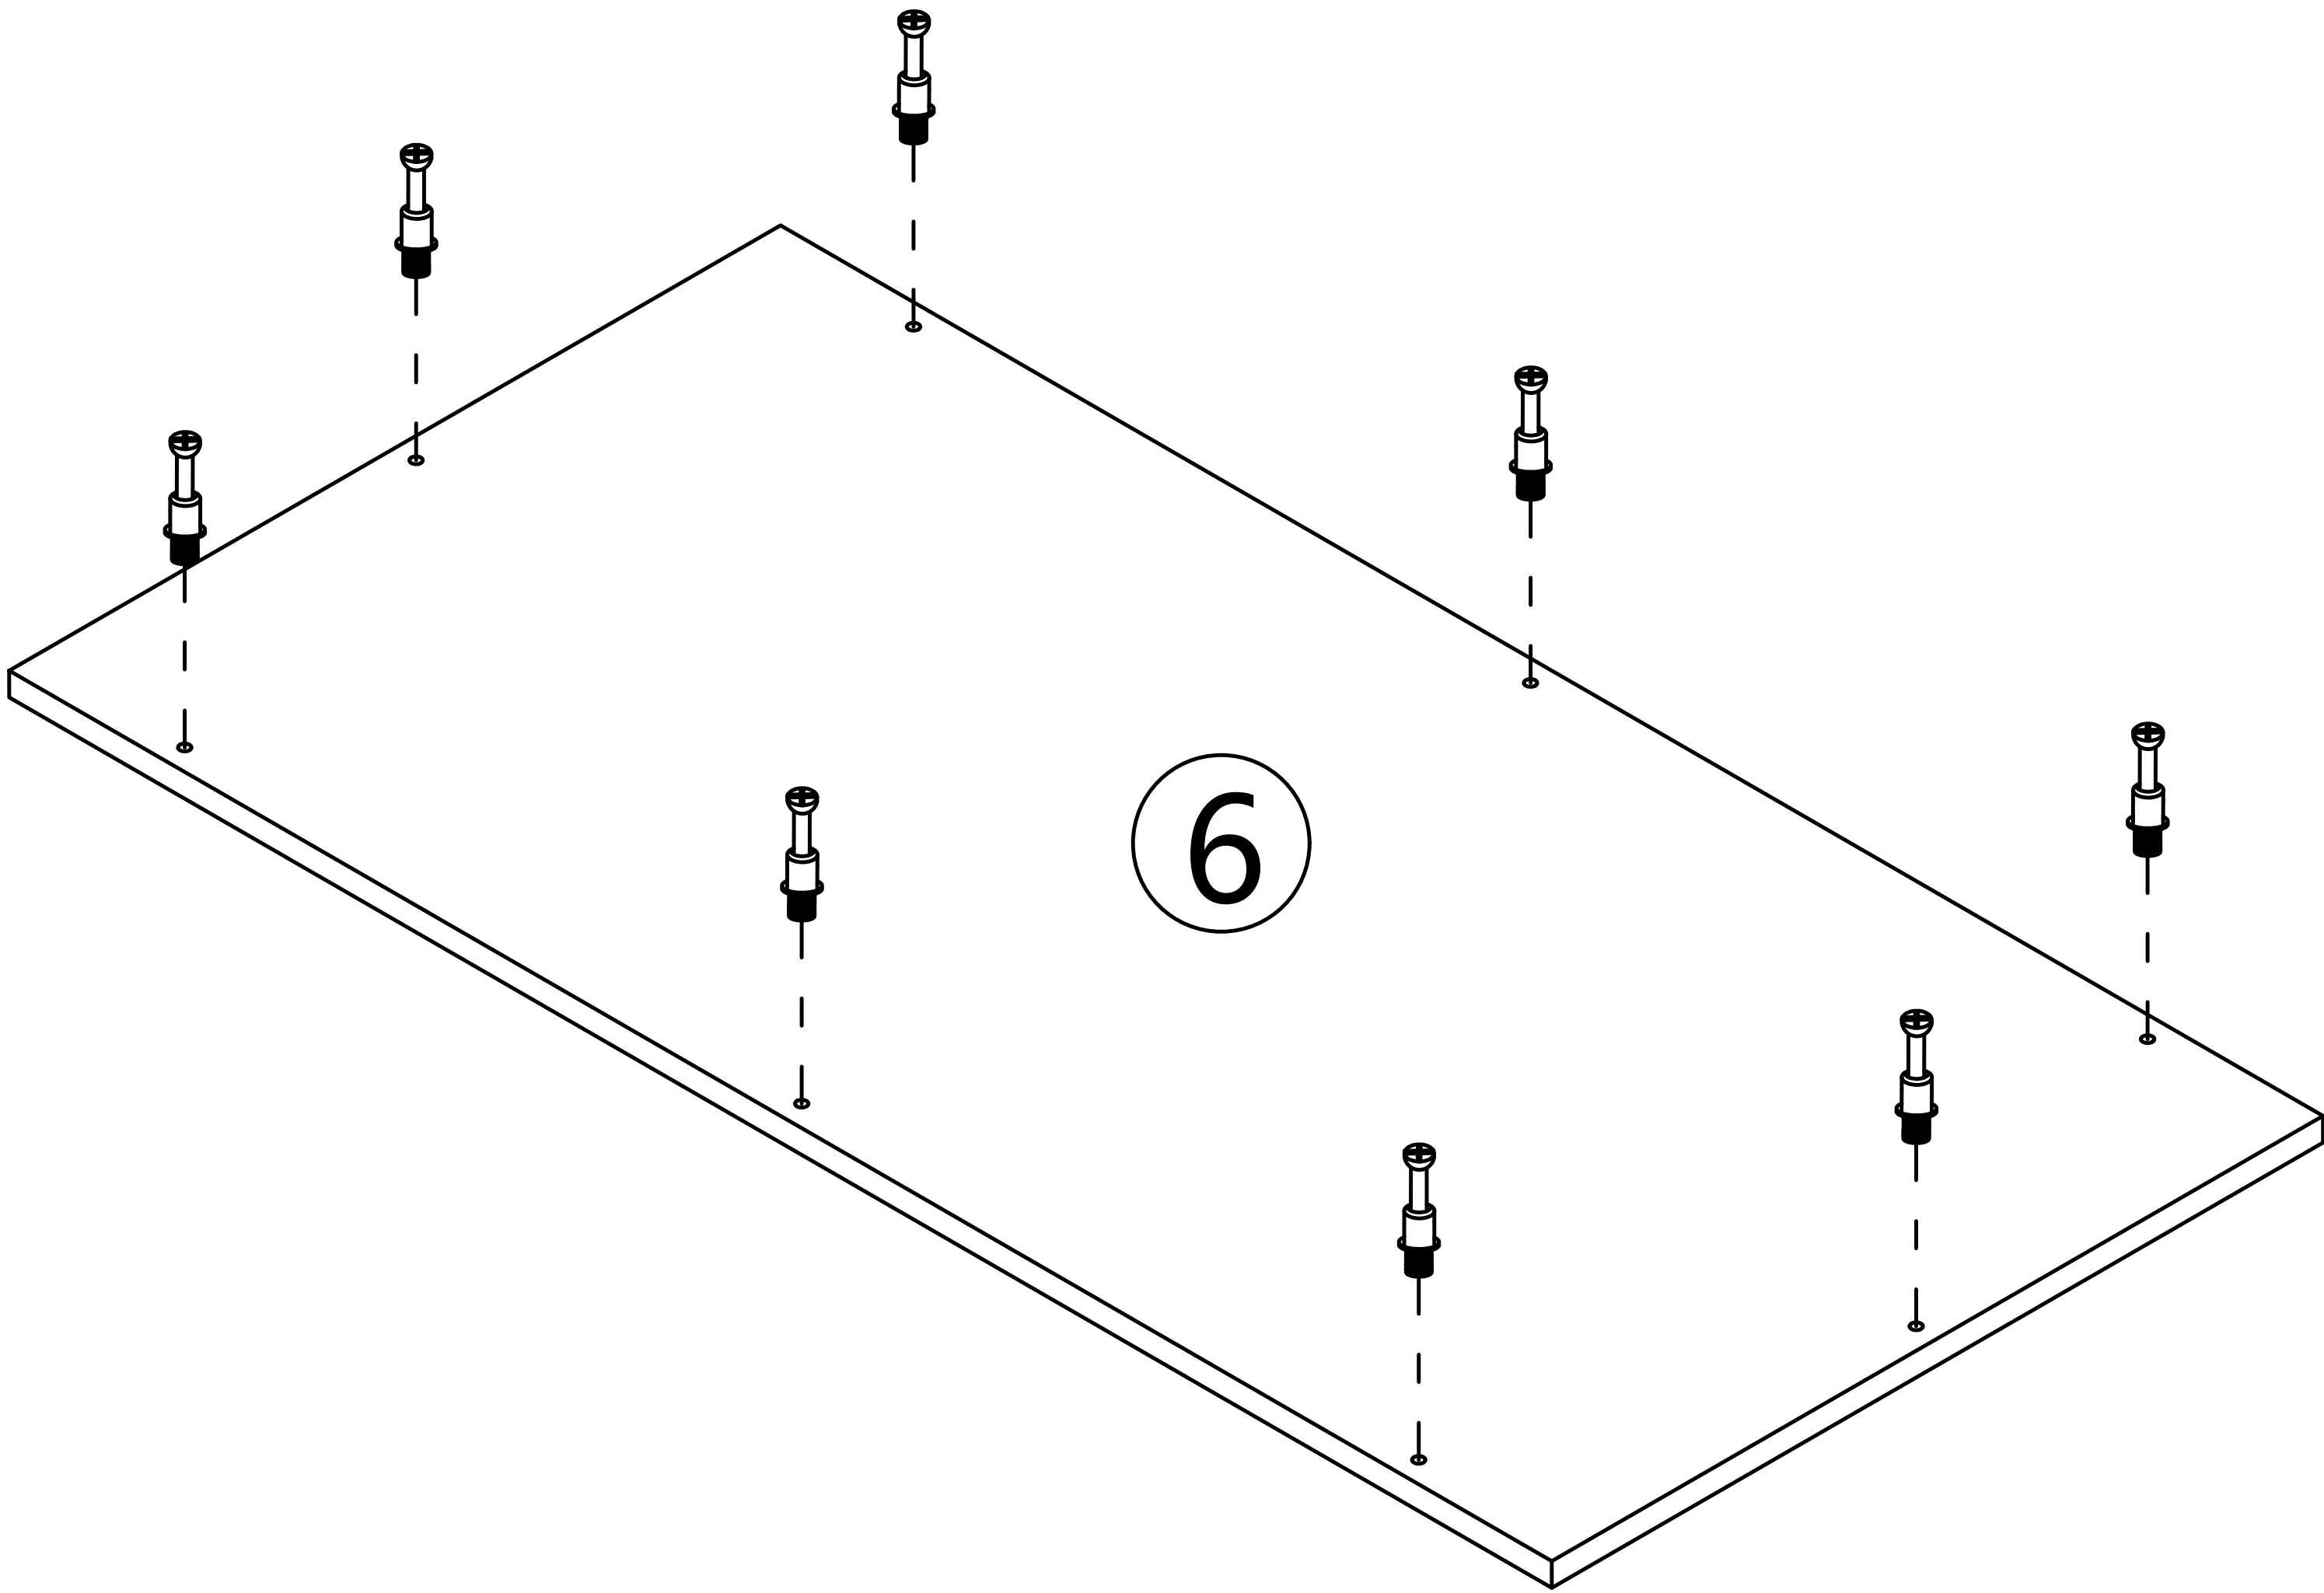


Step 9

B

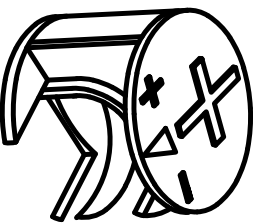


x8

E

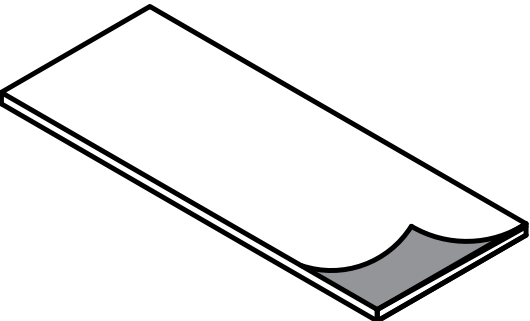


x6

Tear off release paper and stick the black foot pad on the board

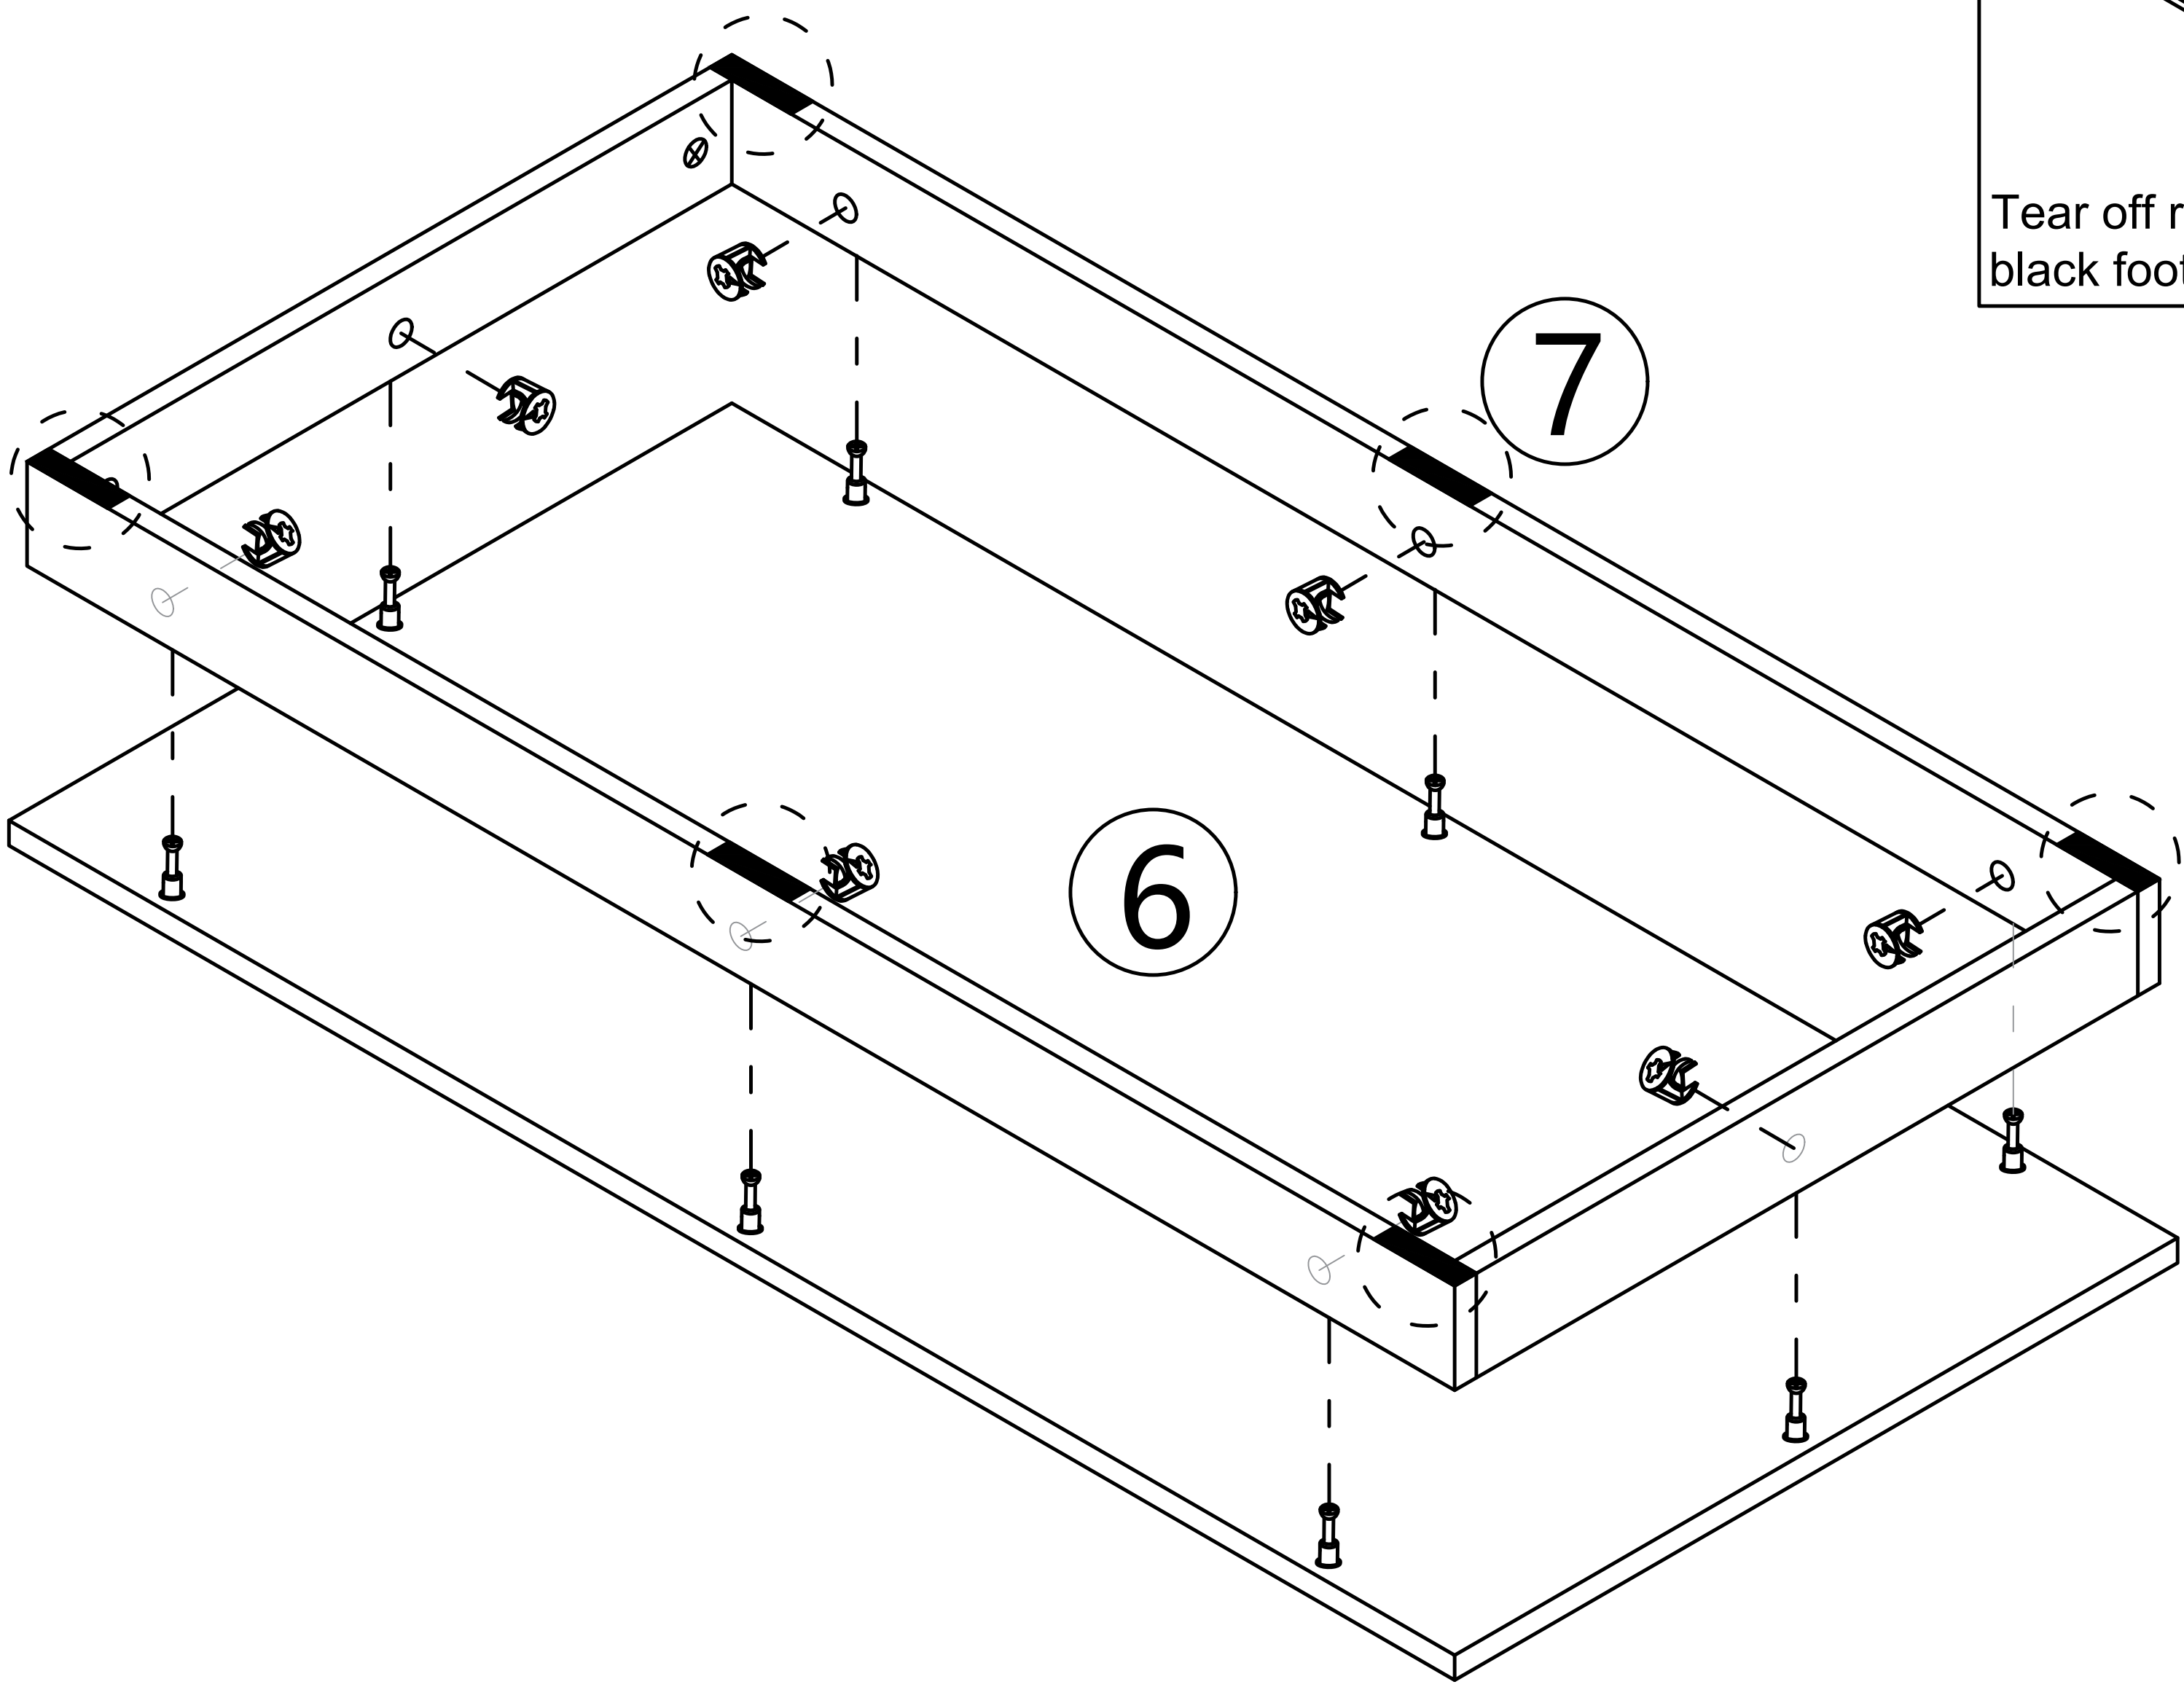


Step 10

A

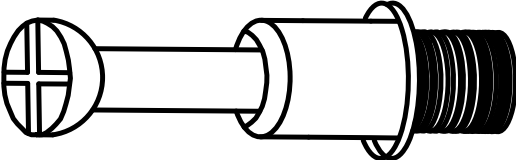


x6

C

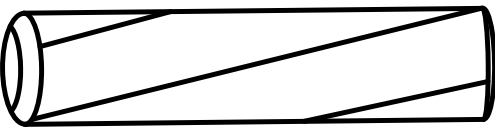



x6

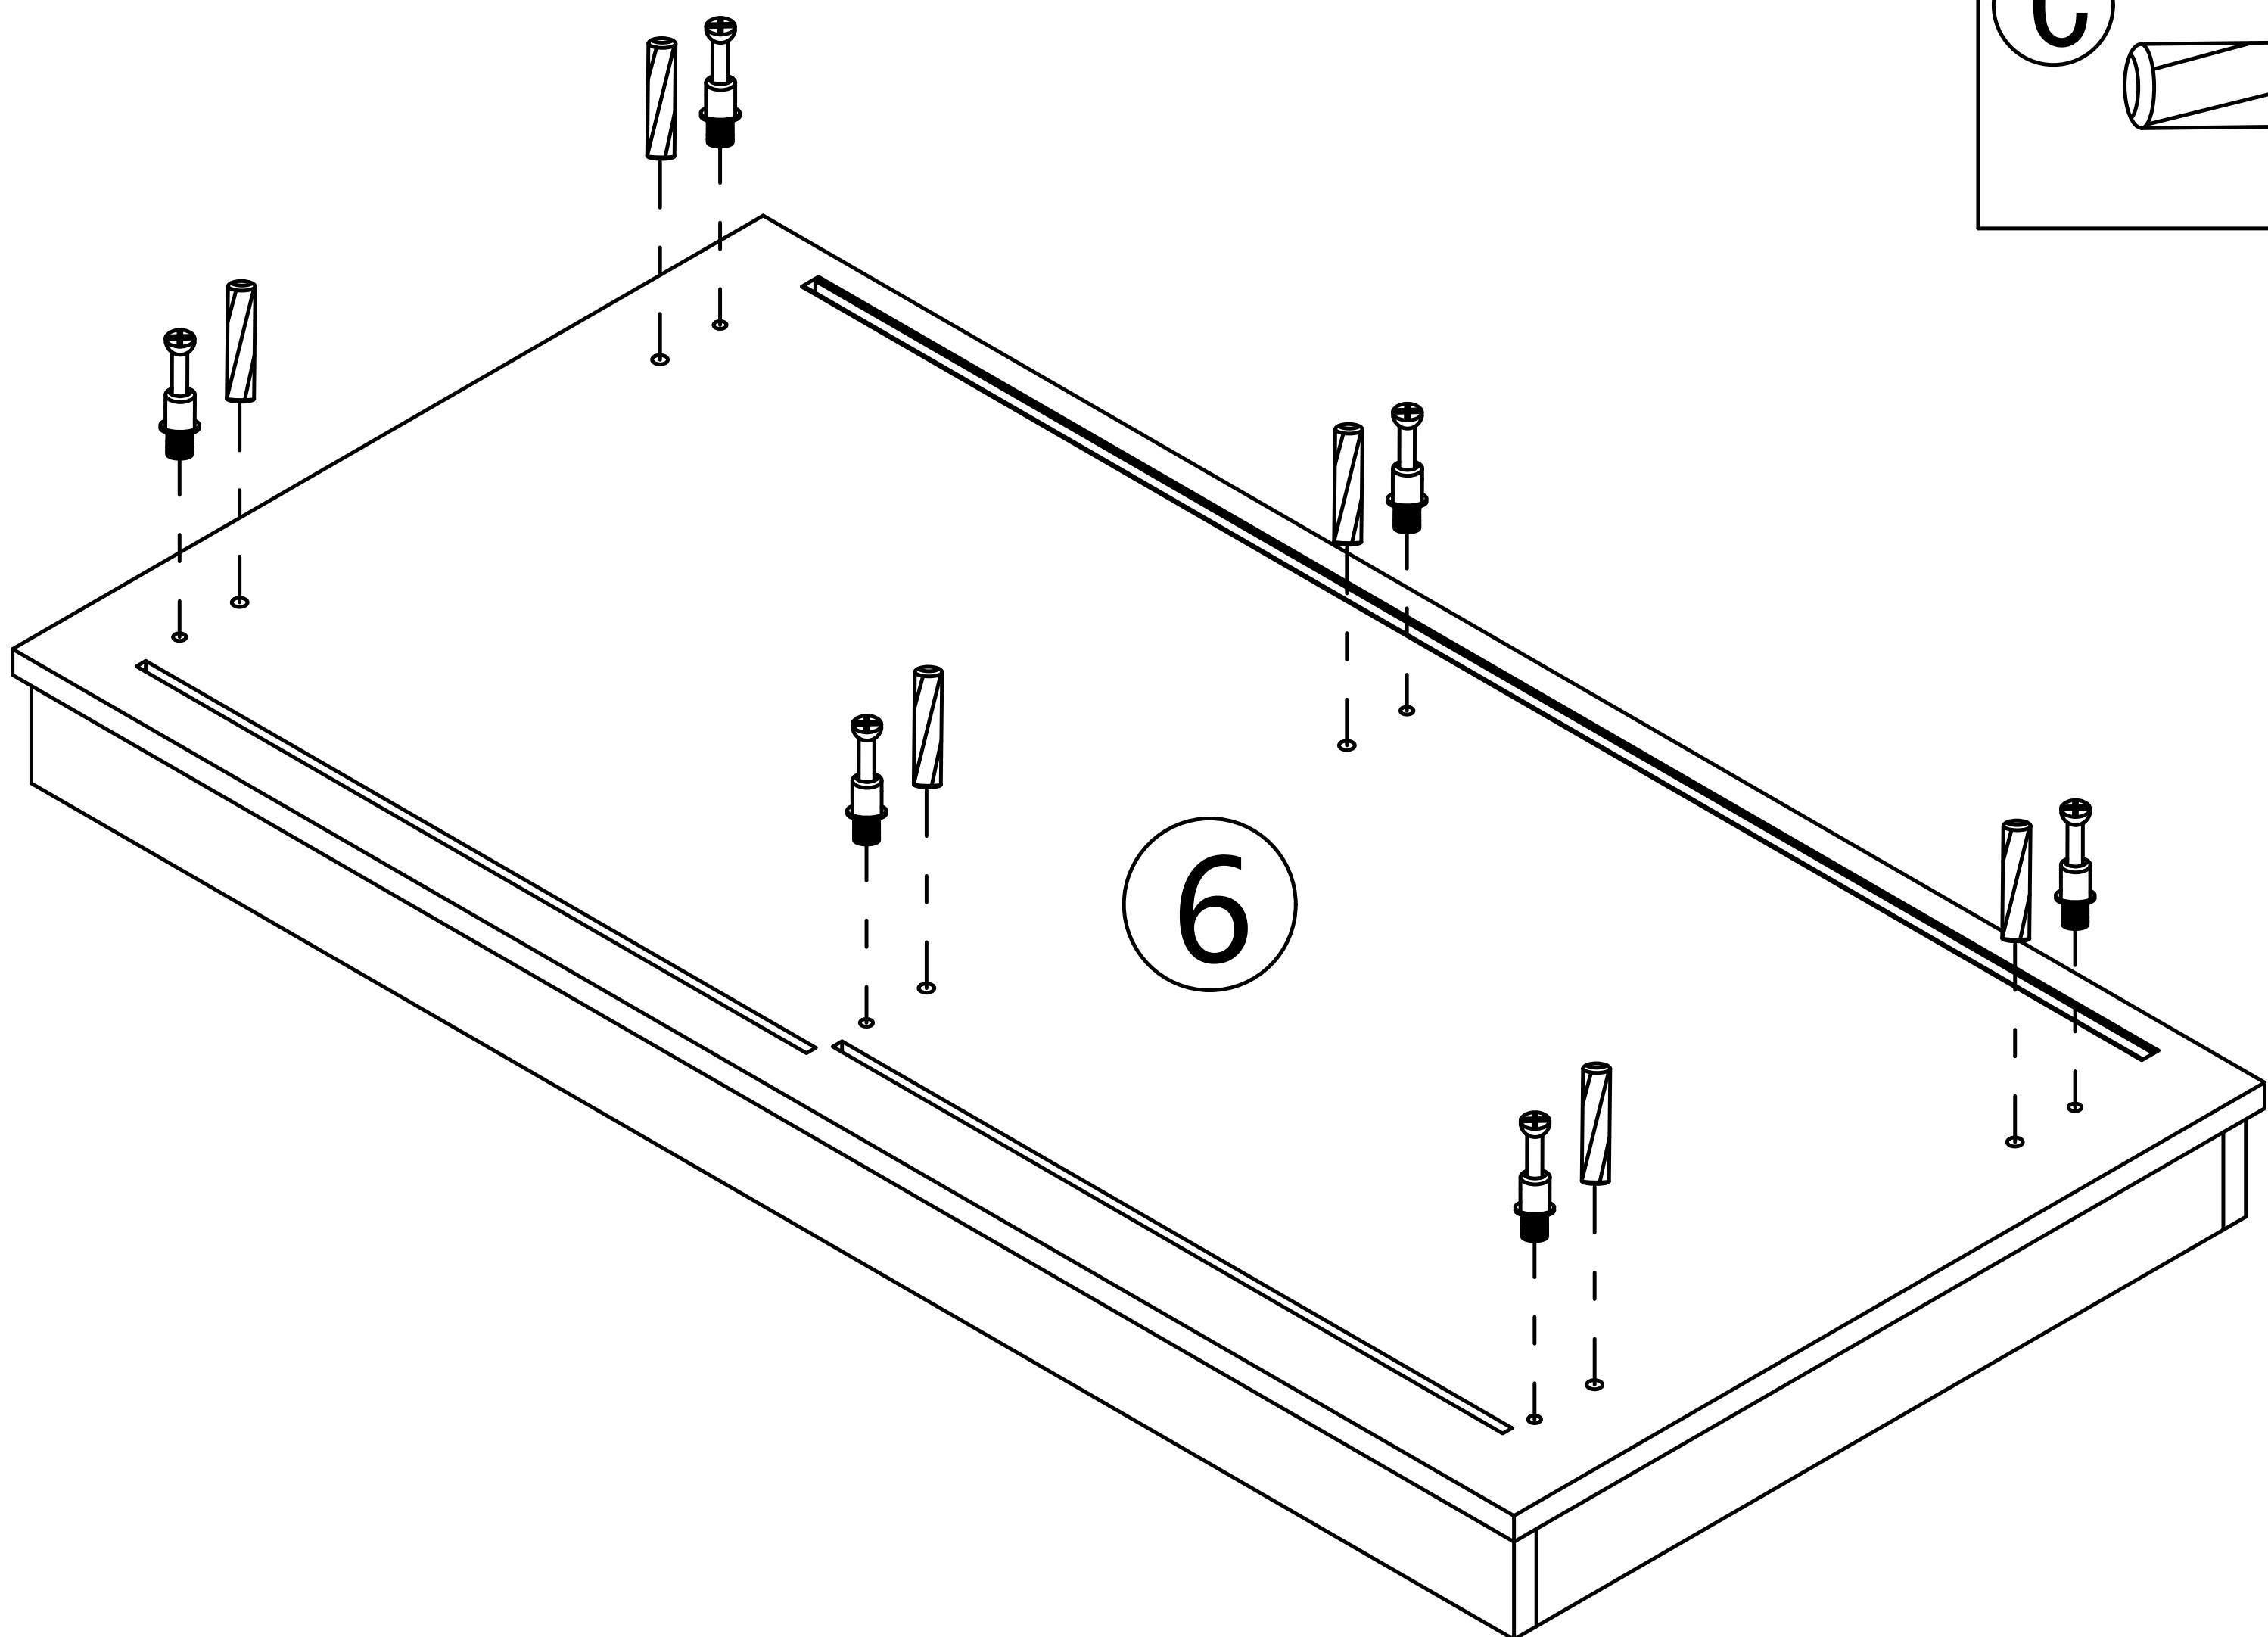


Step 11

- A

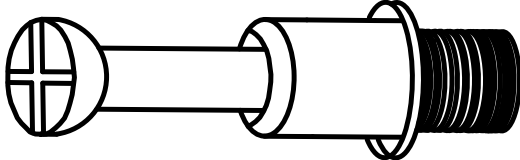
x3
- B

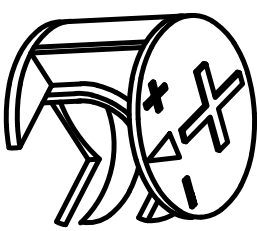
x3

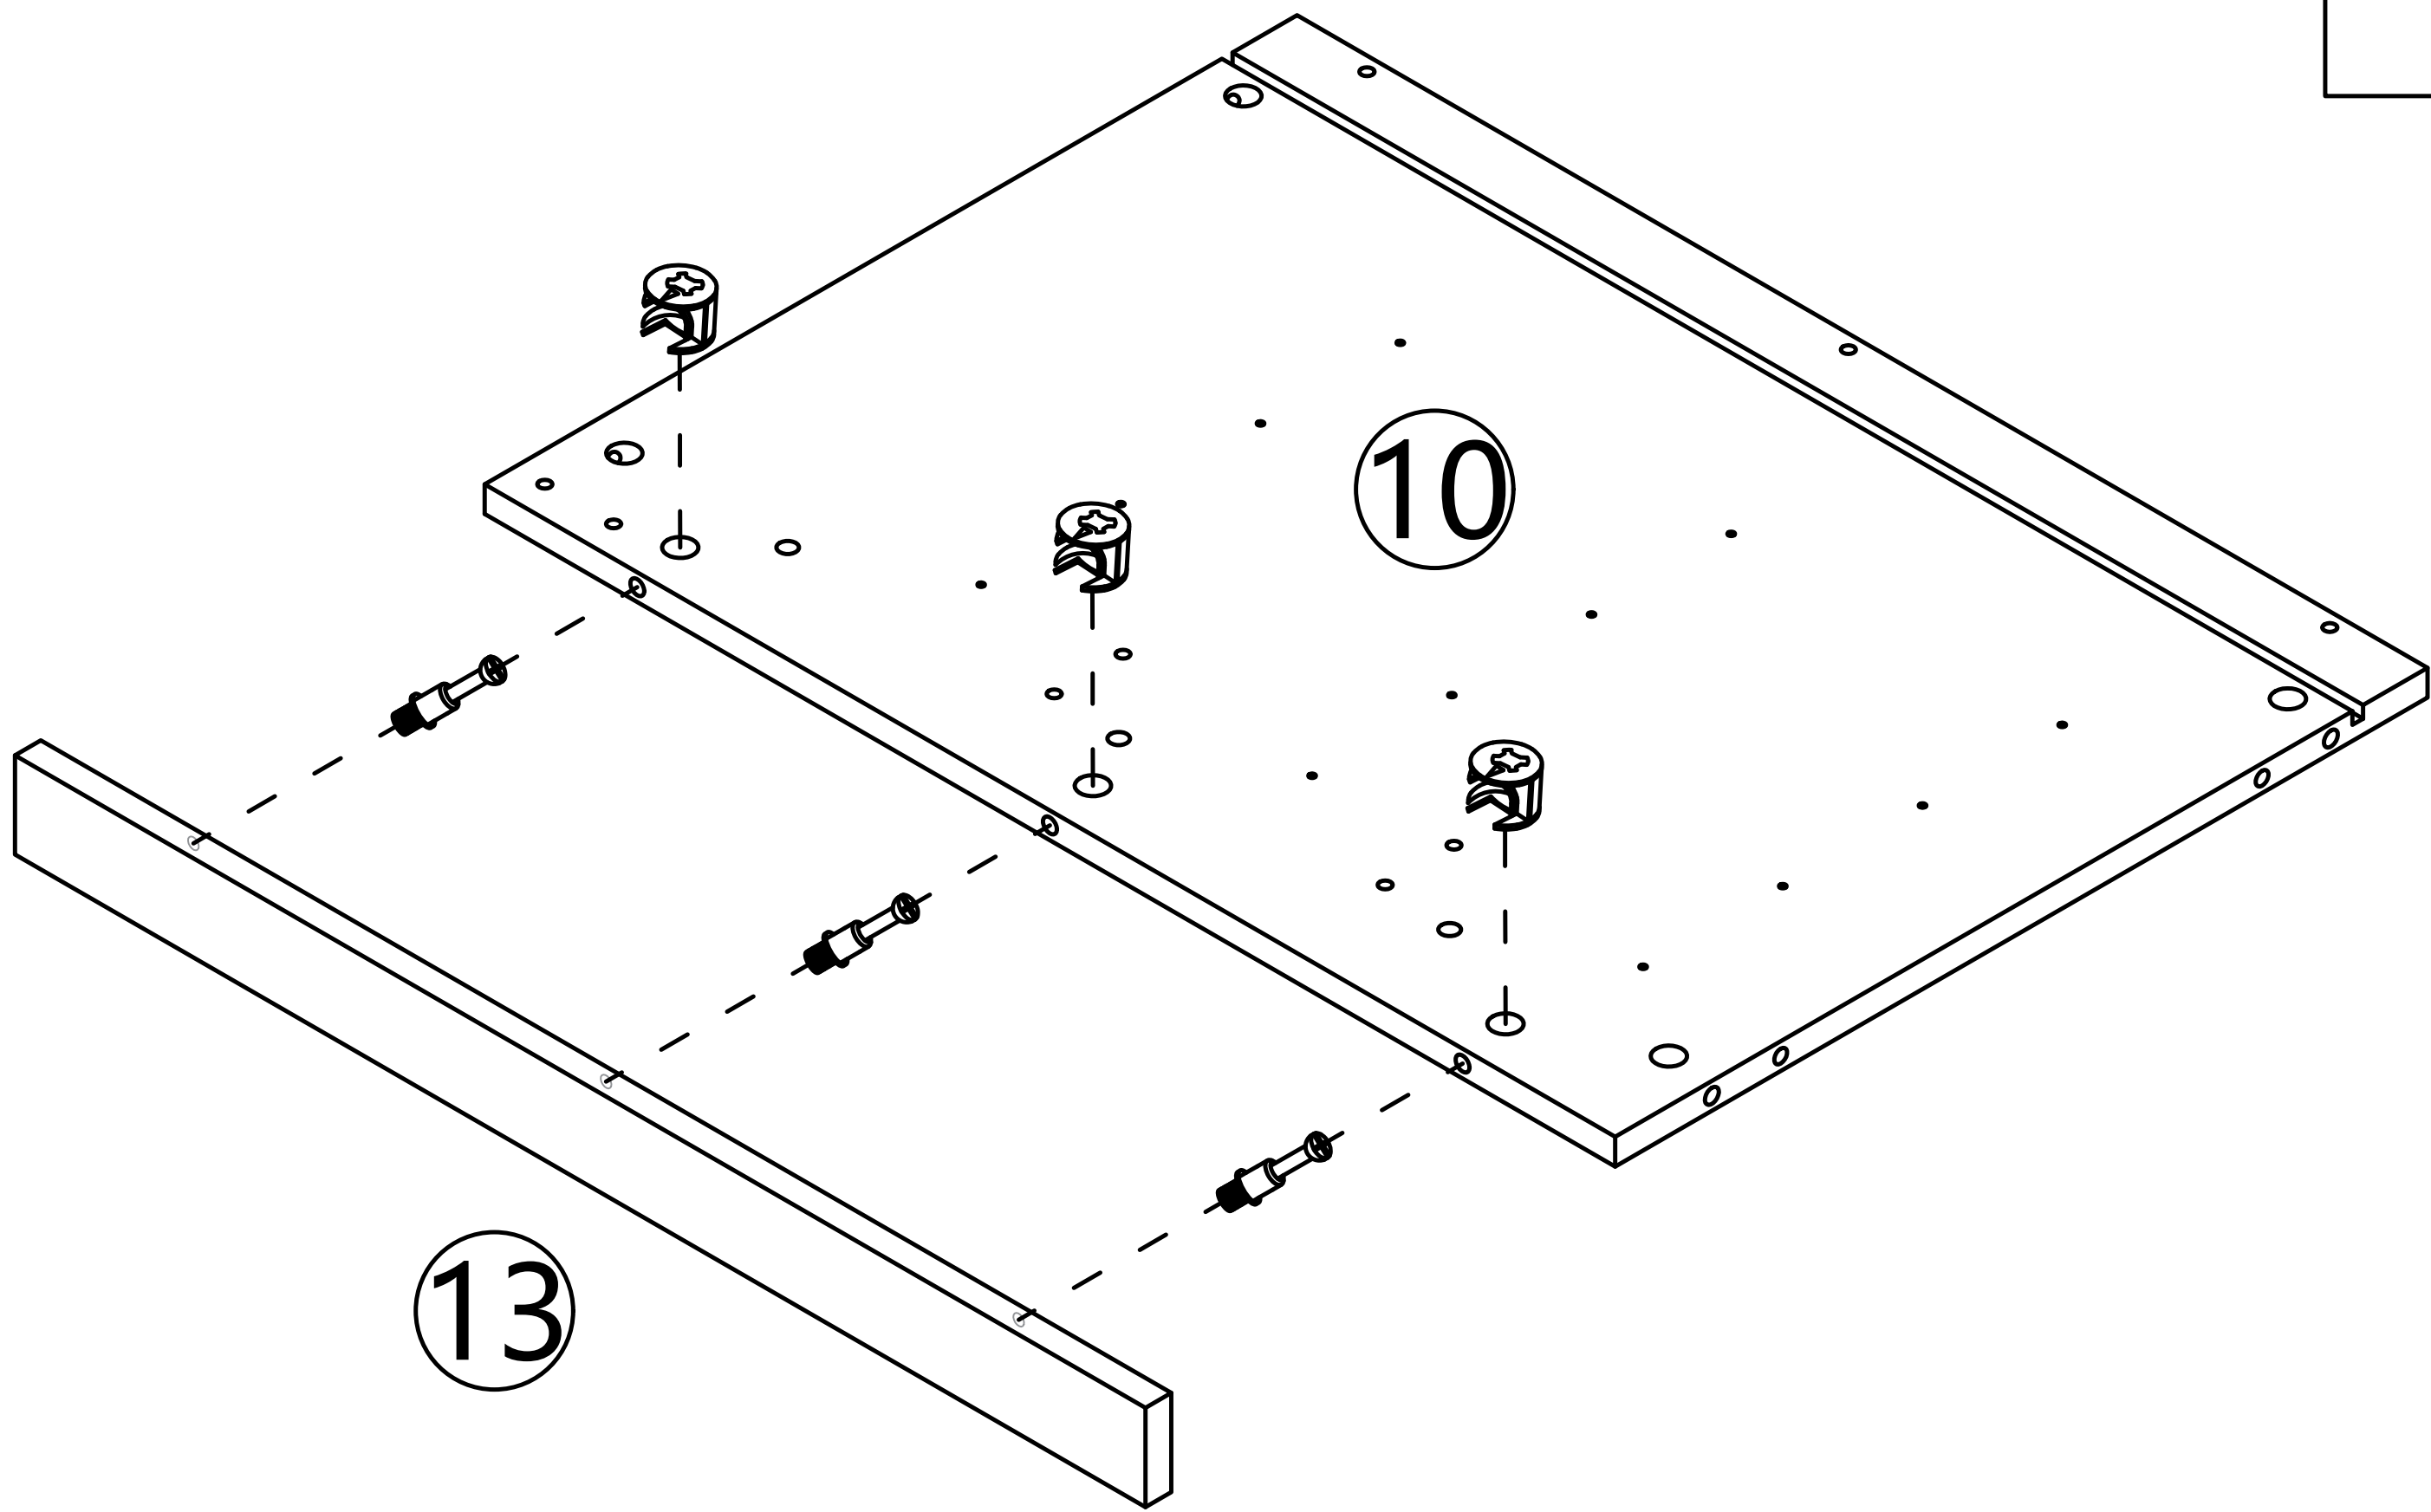



Step 12

- F


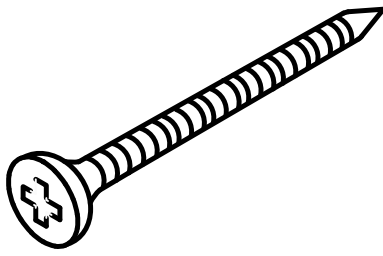
x3

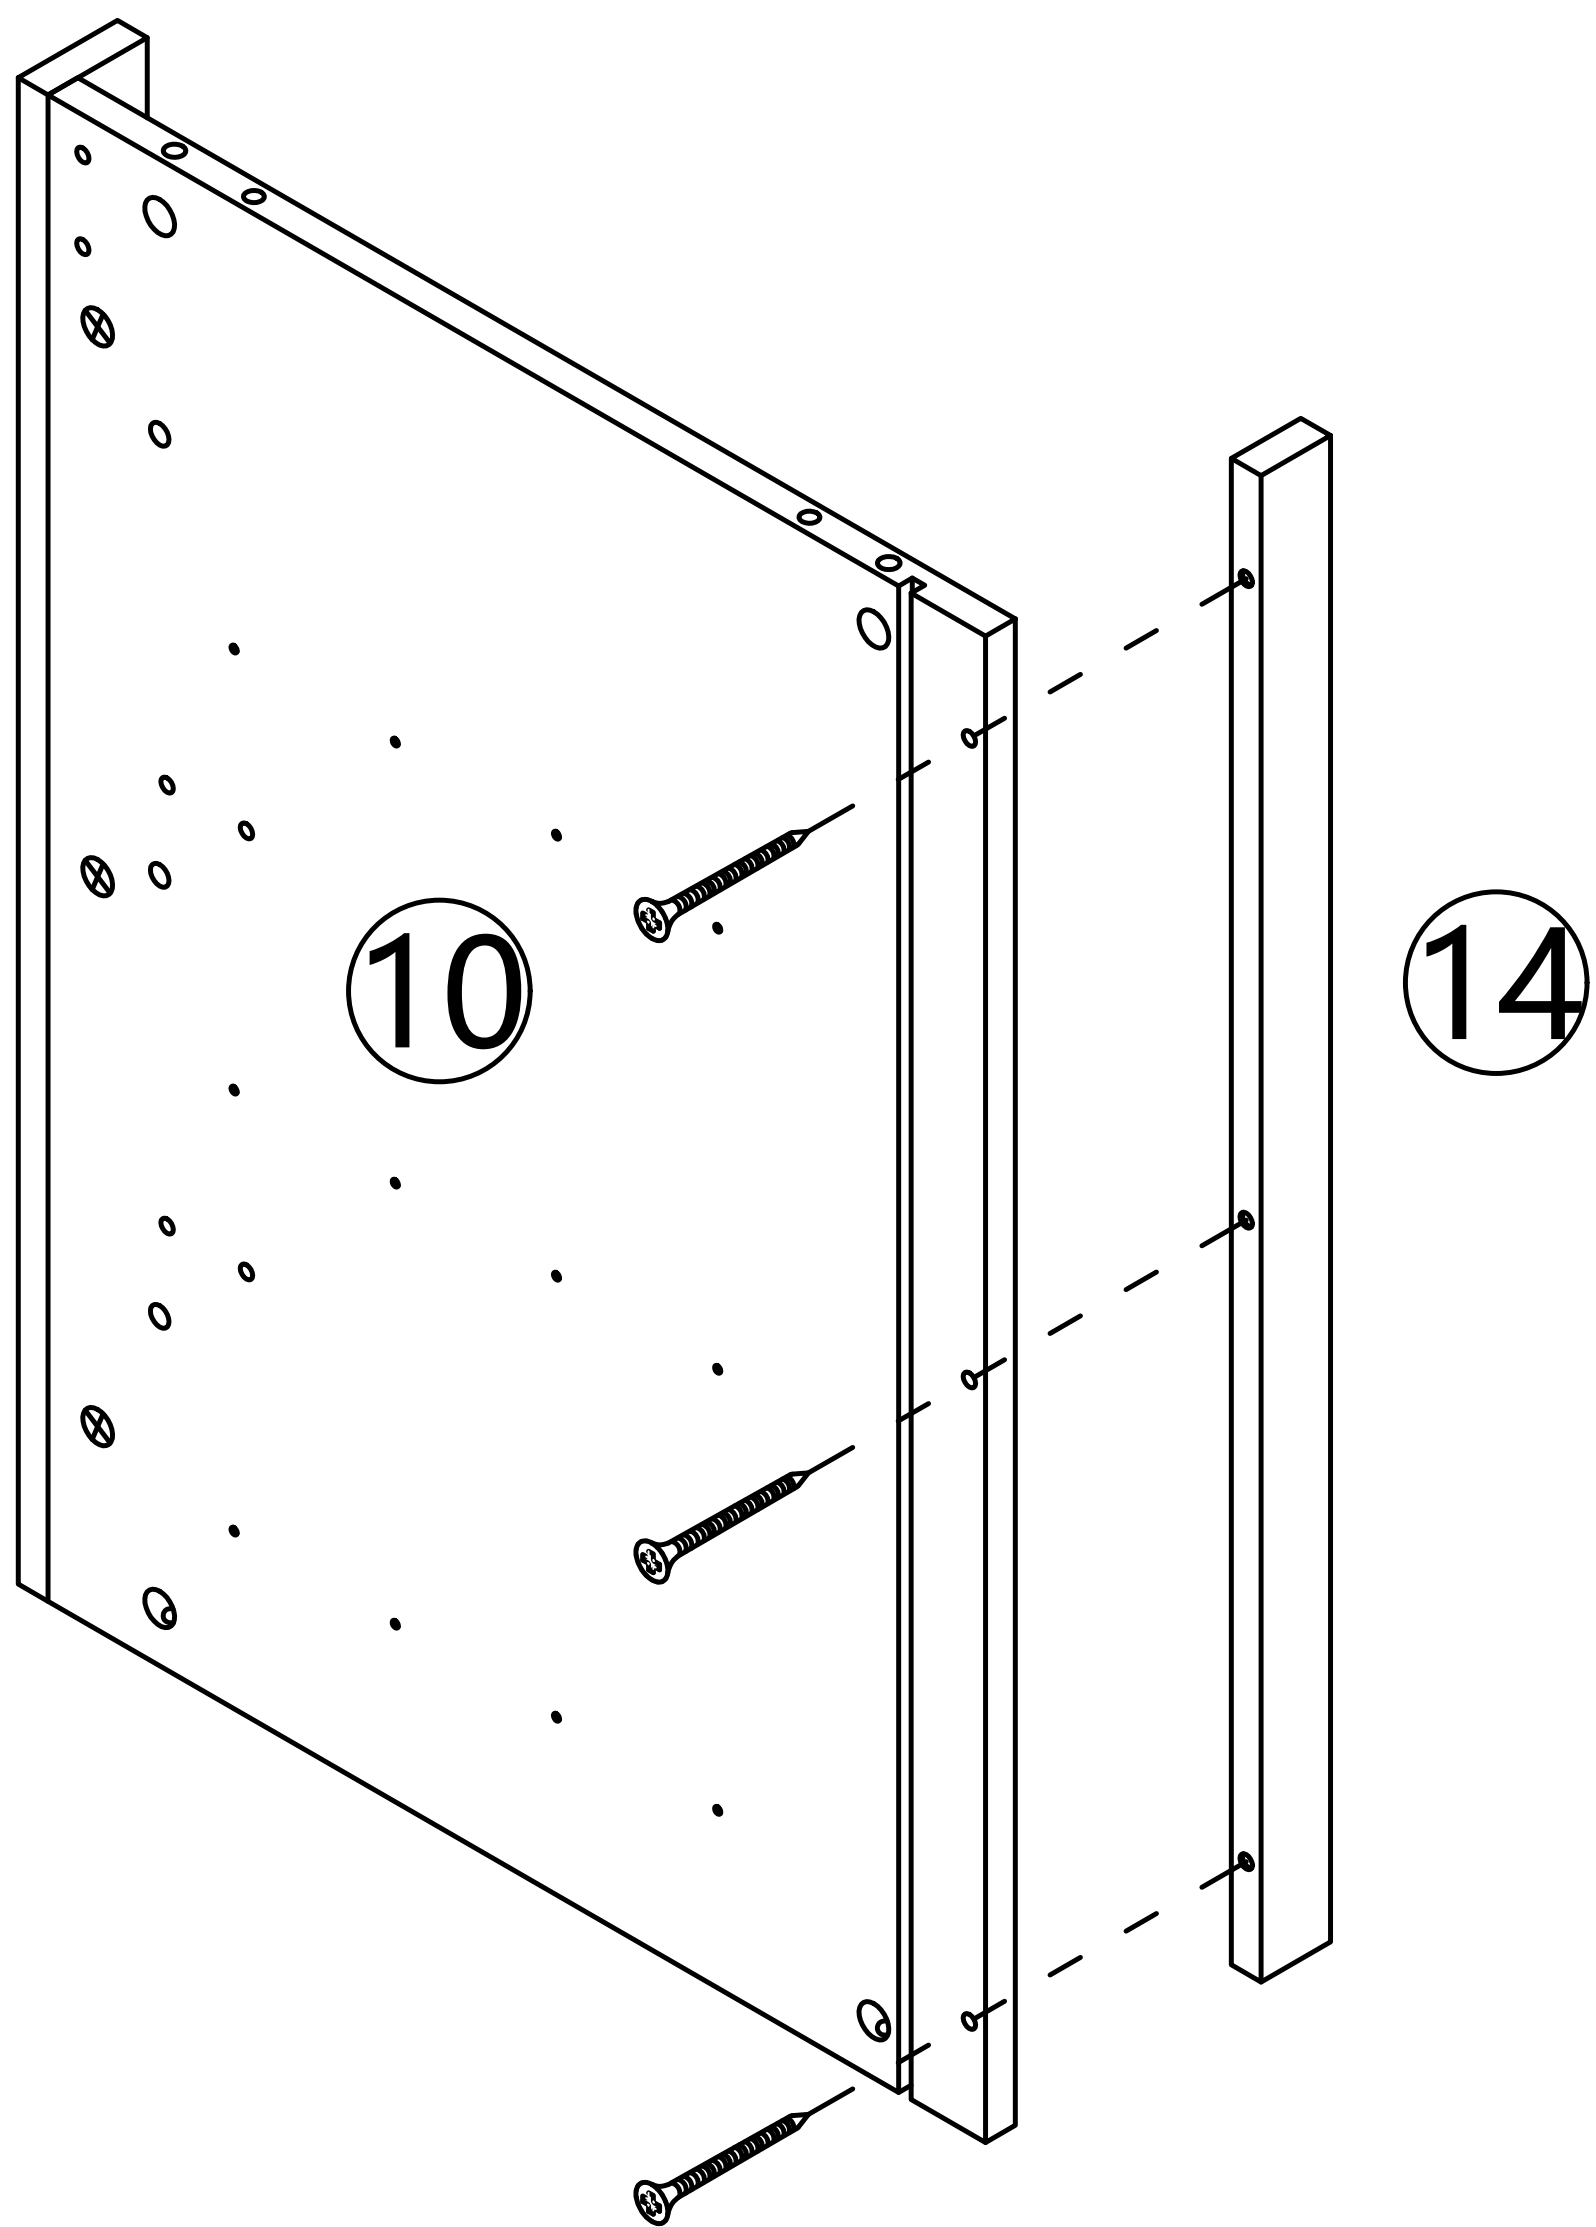

Step 13

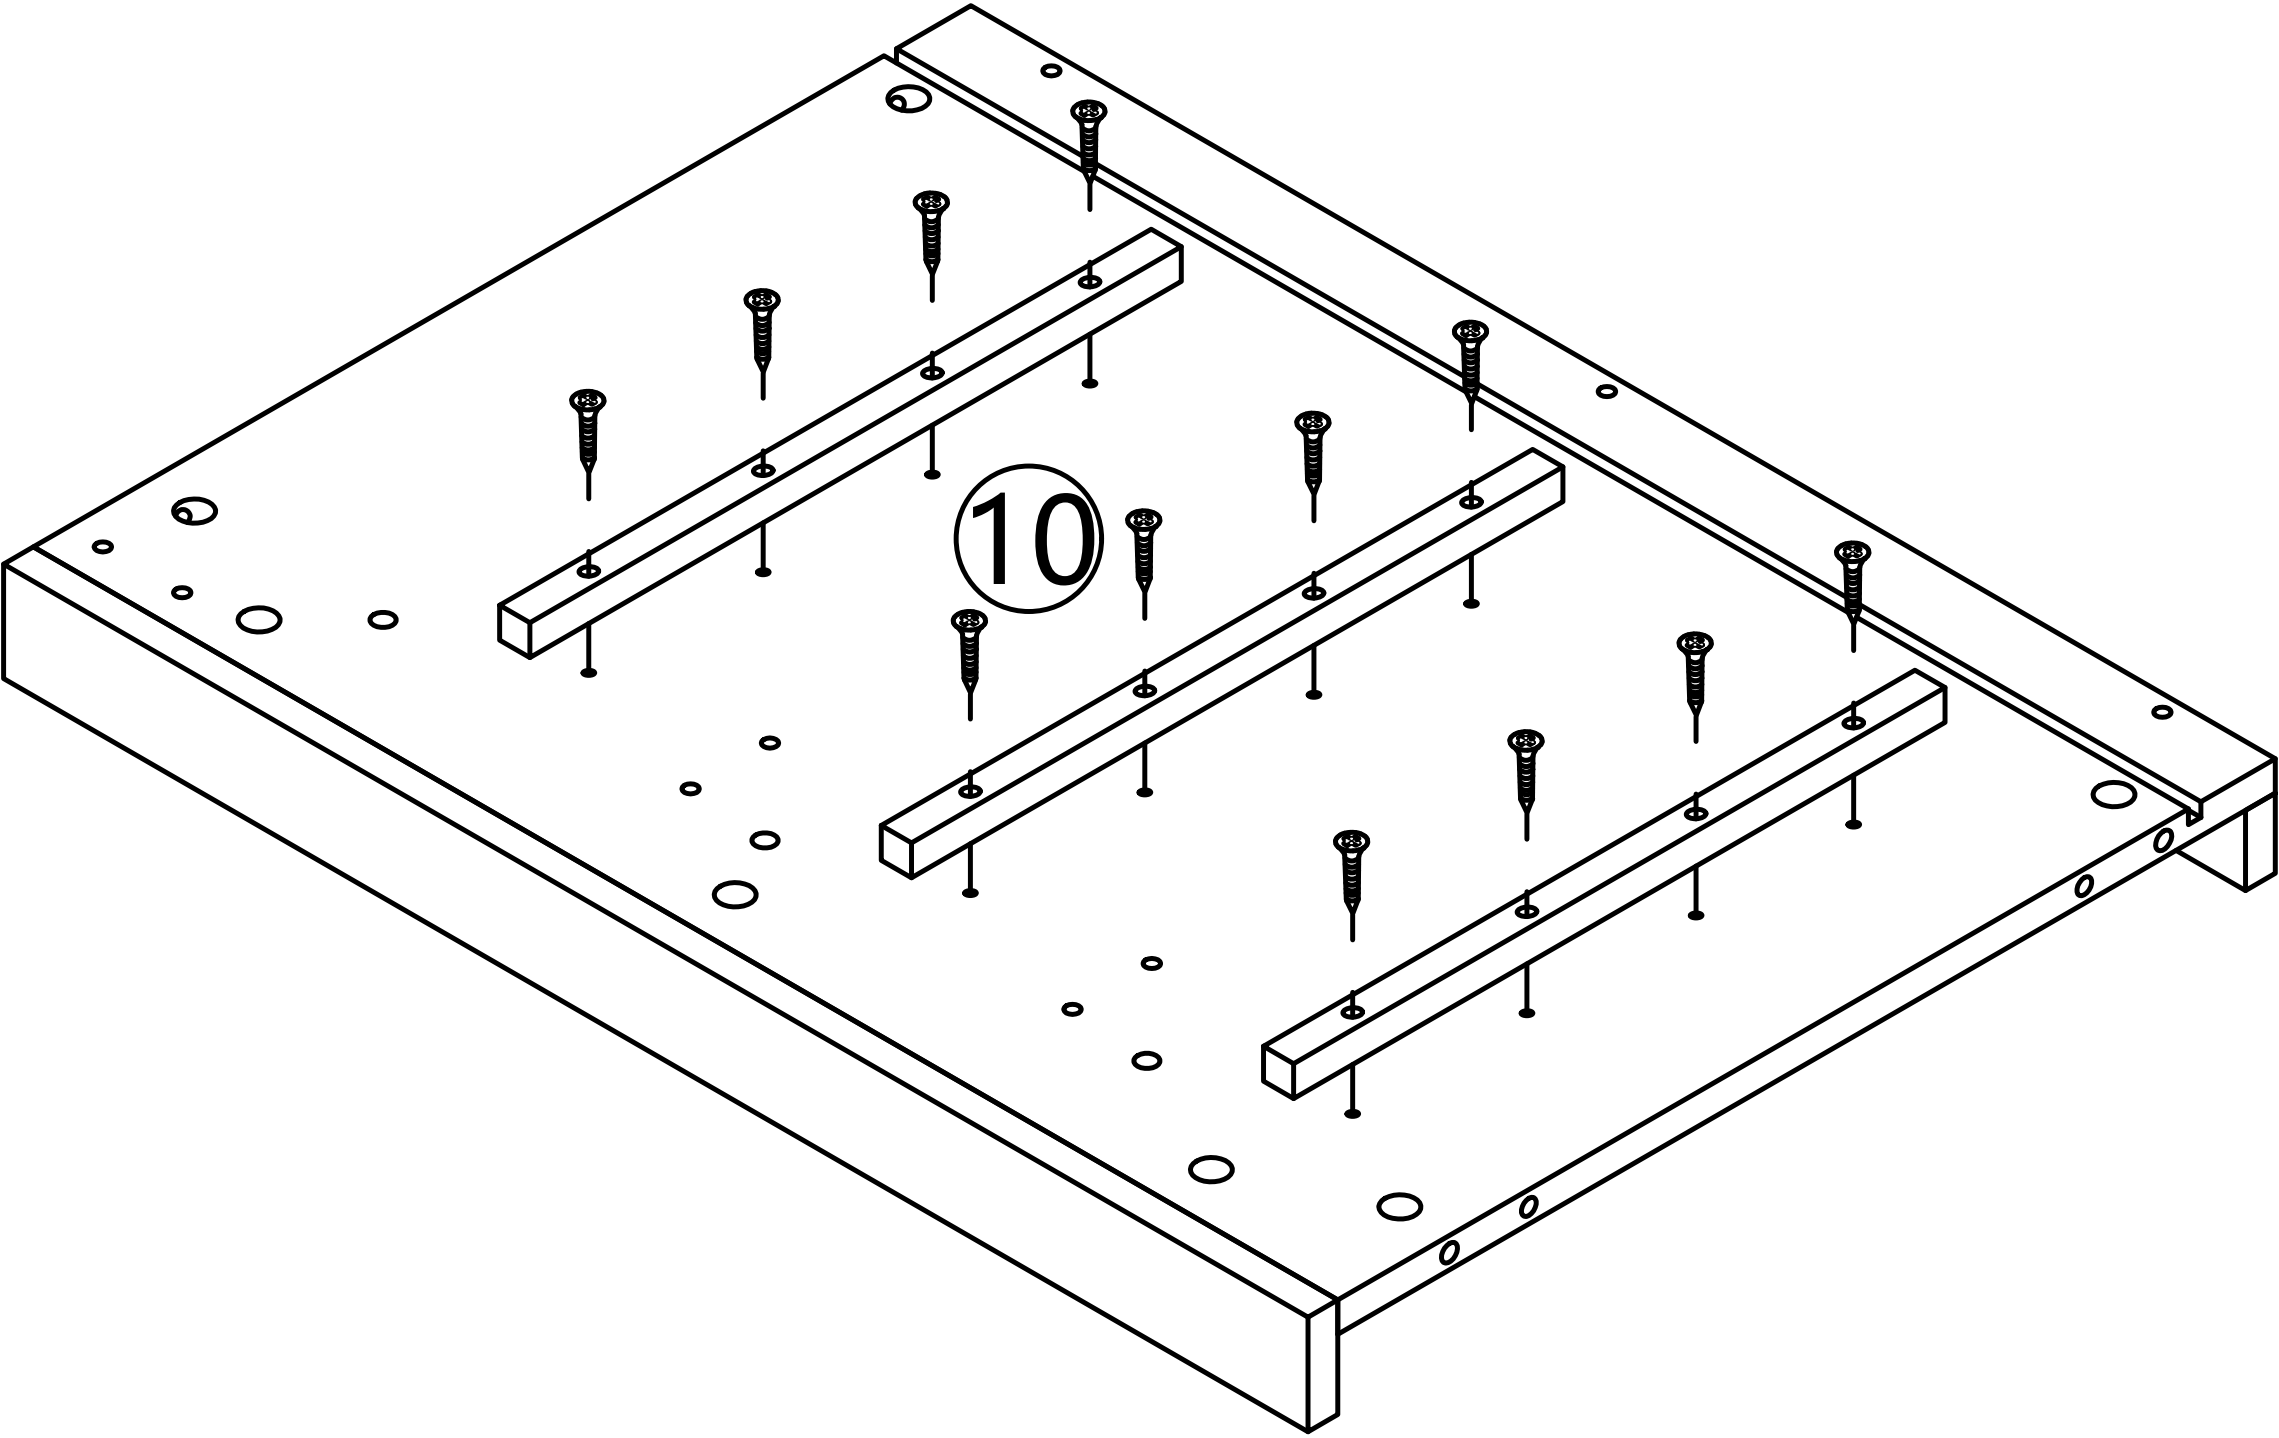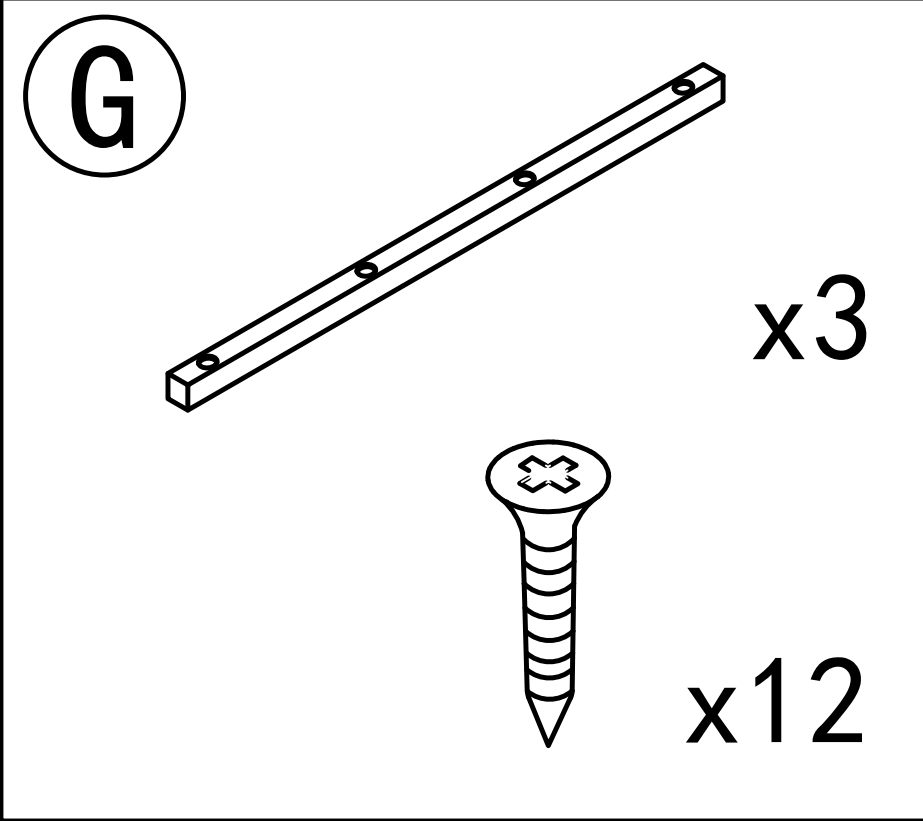


Step 14

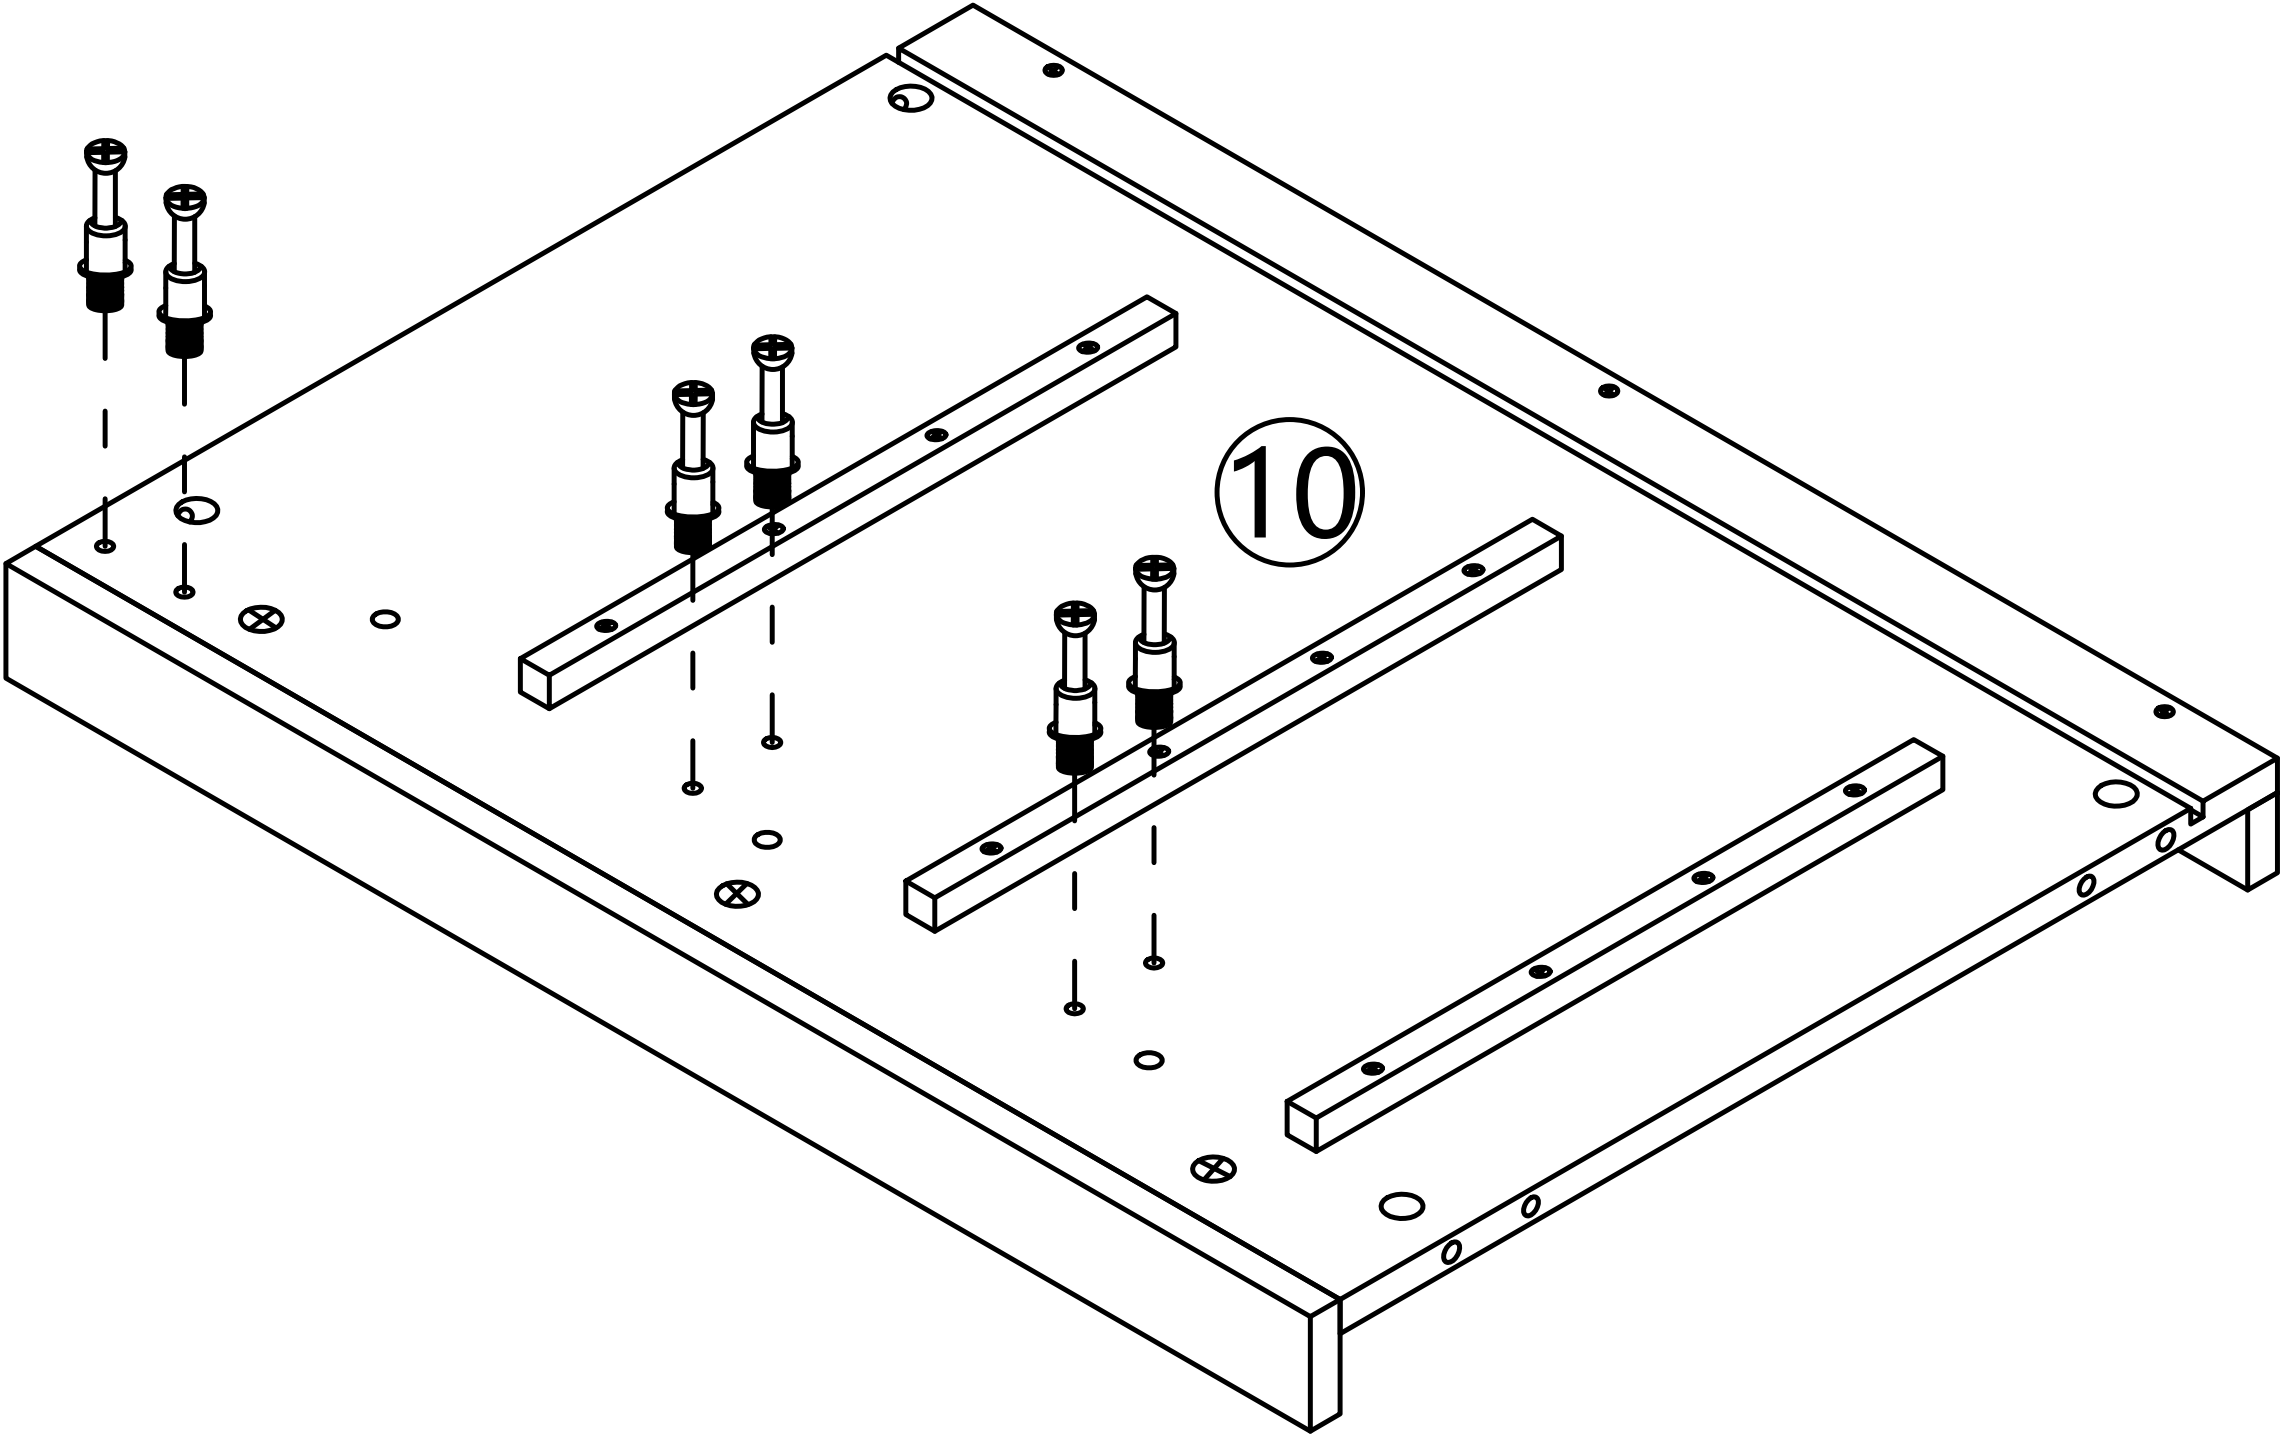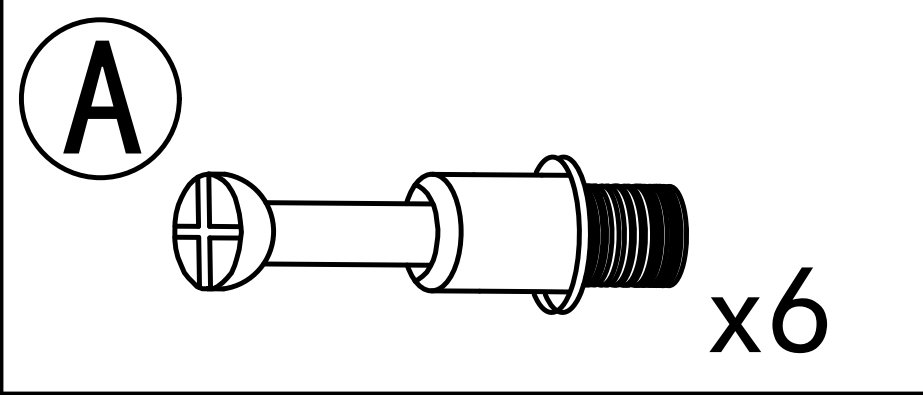


Step 15

B

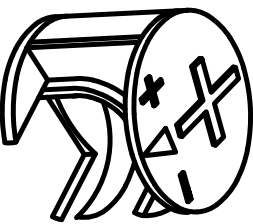


x4

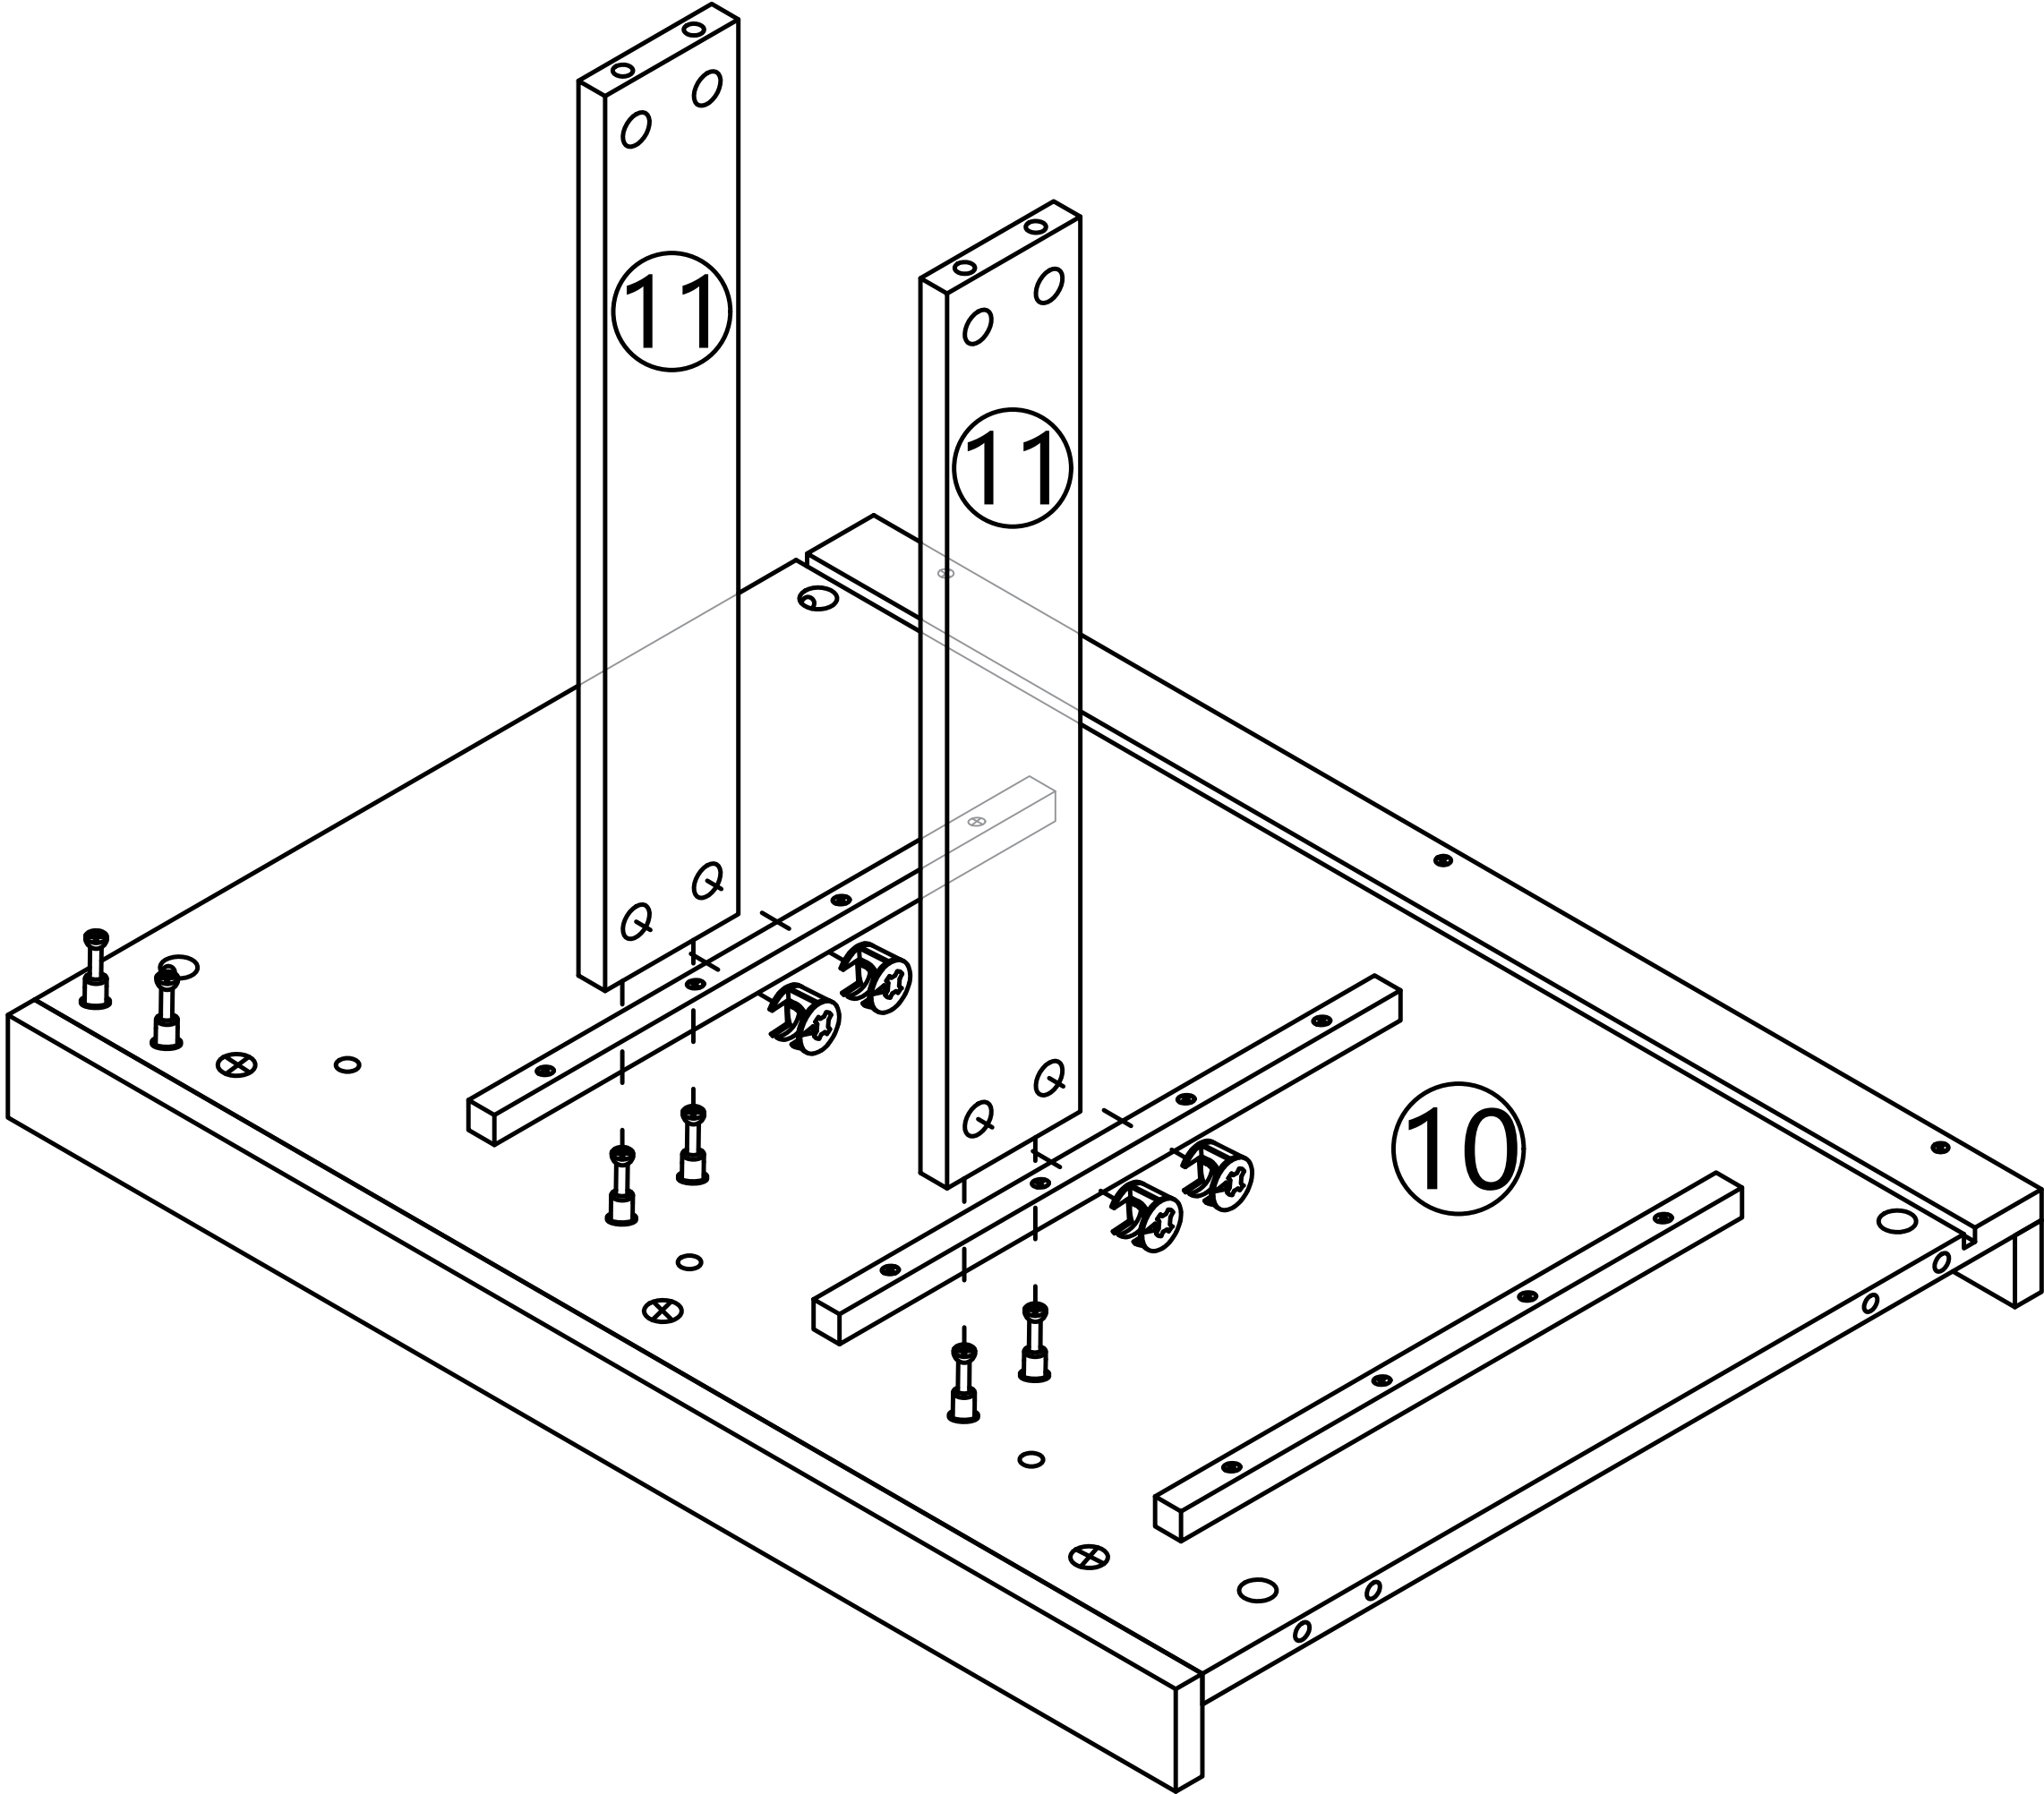


Step 16


G

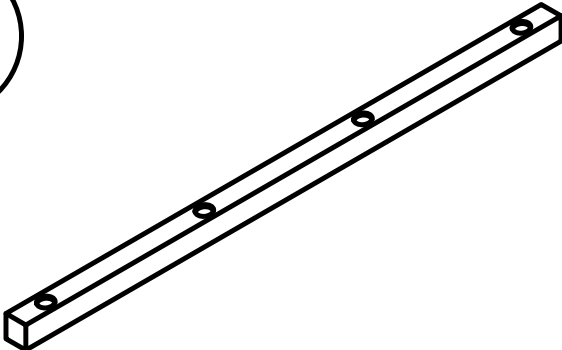



x3

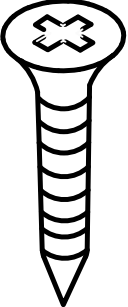



x12

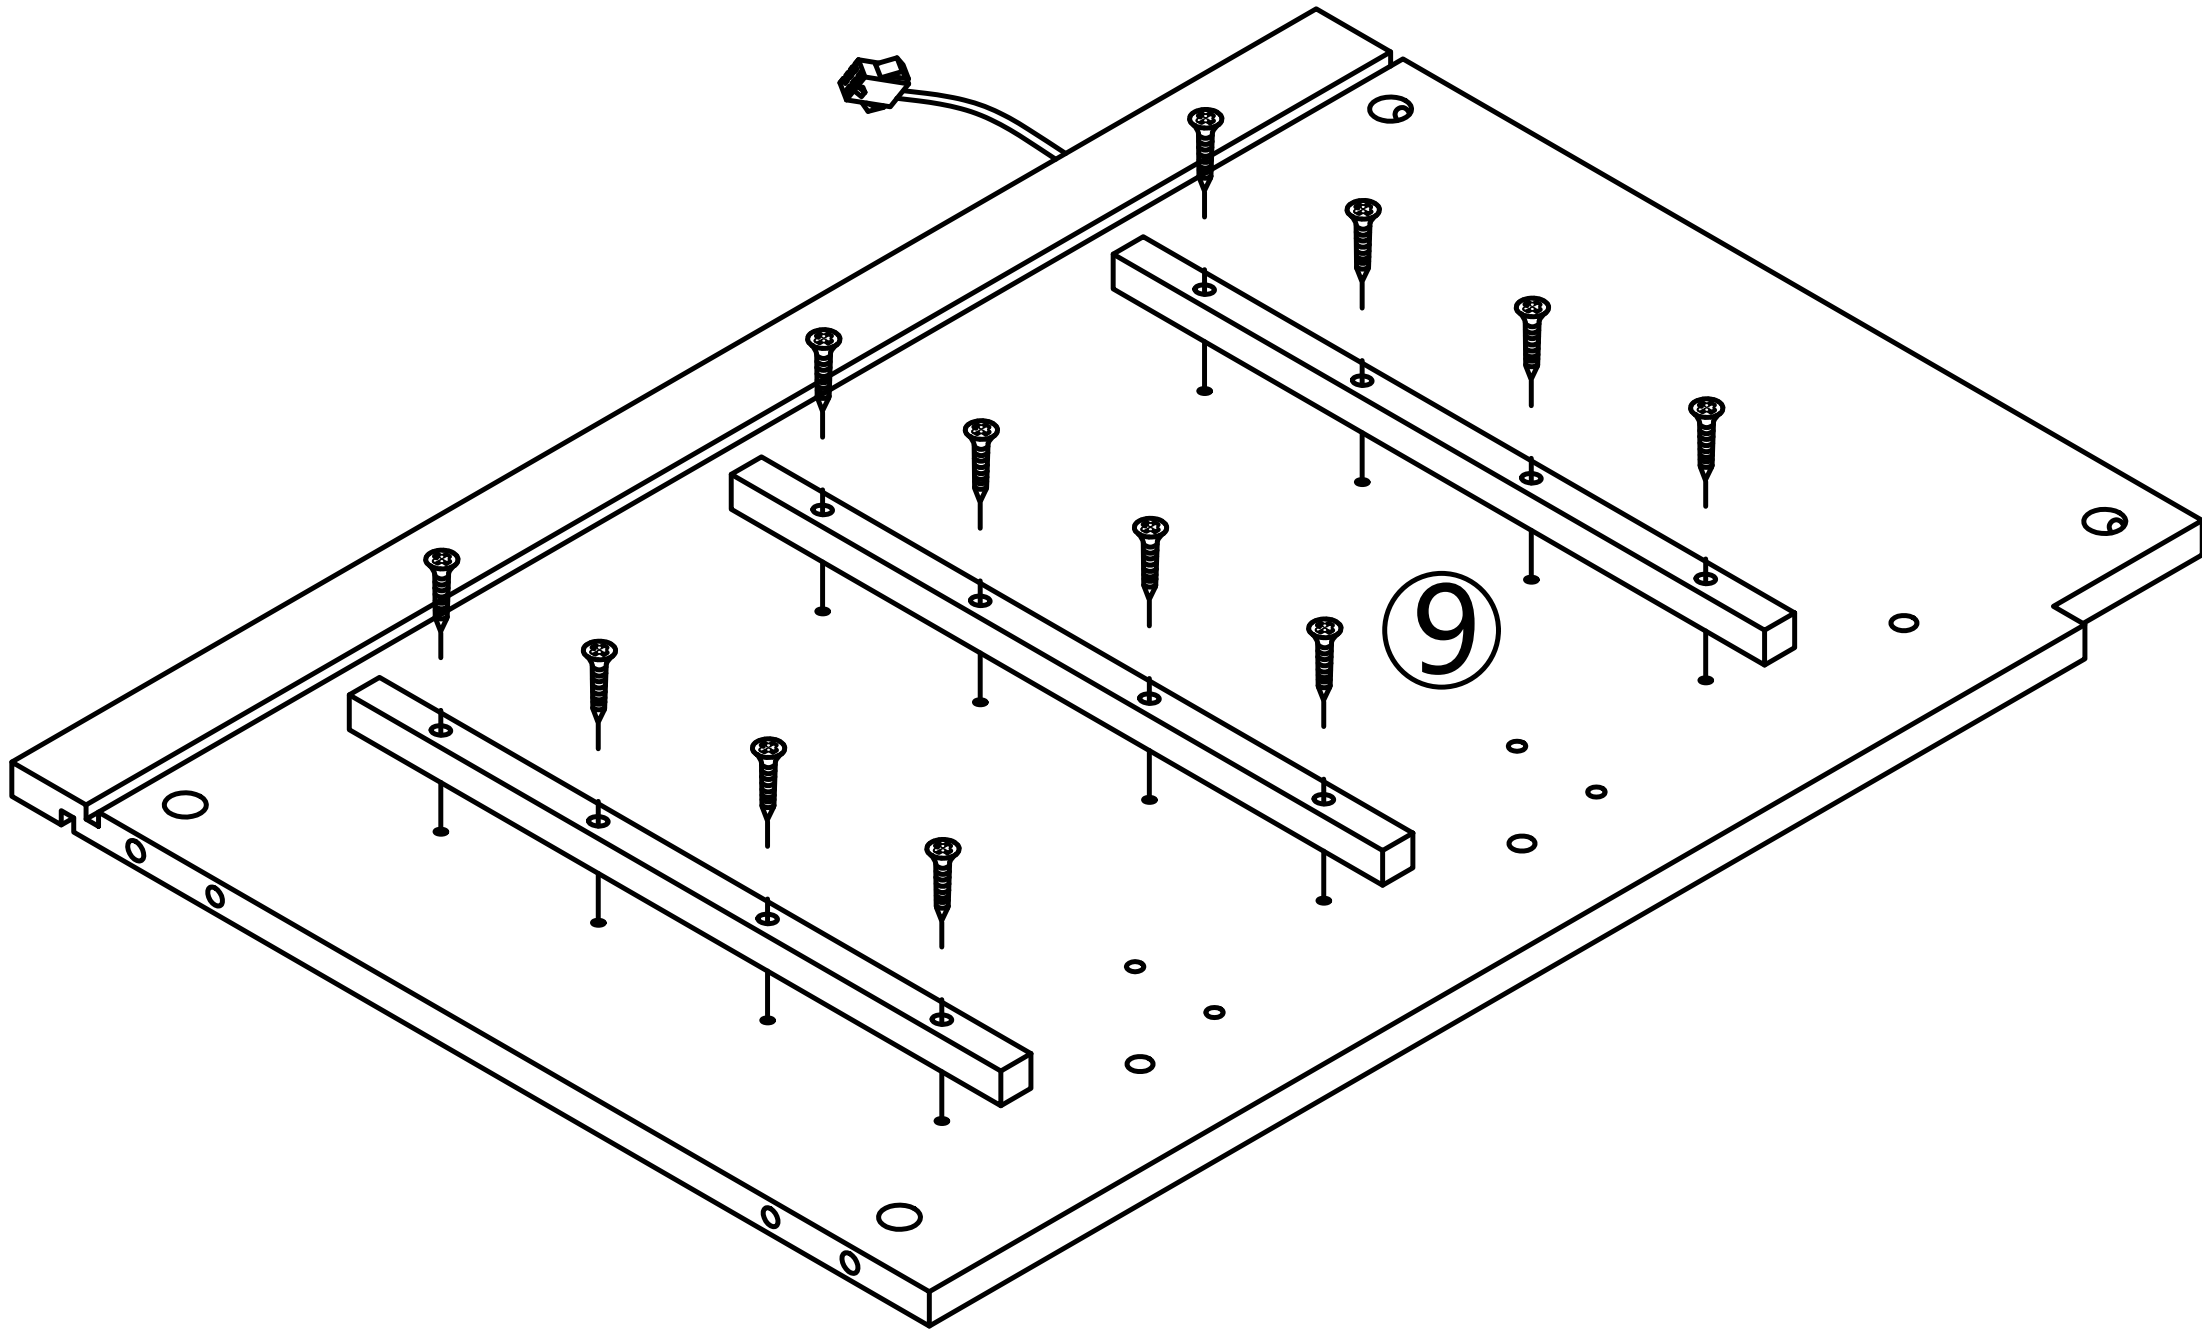

Step 17

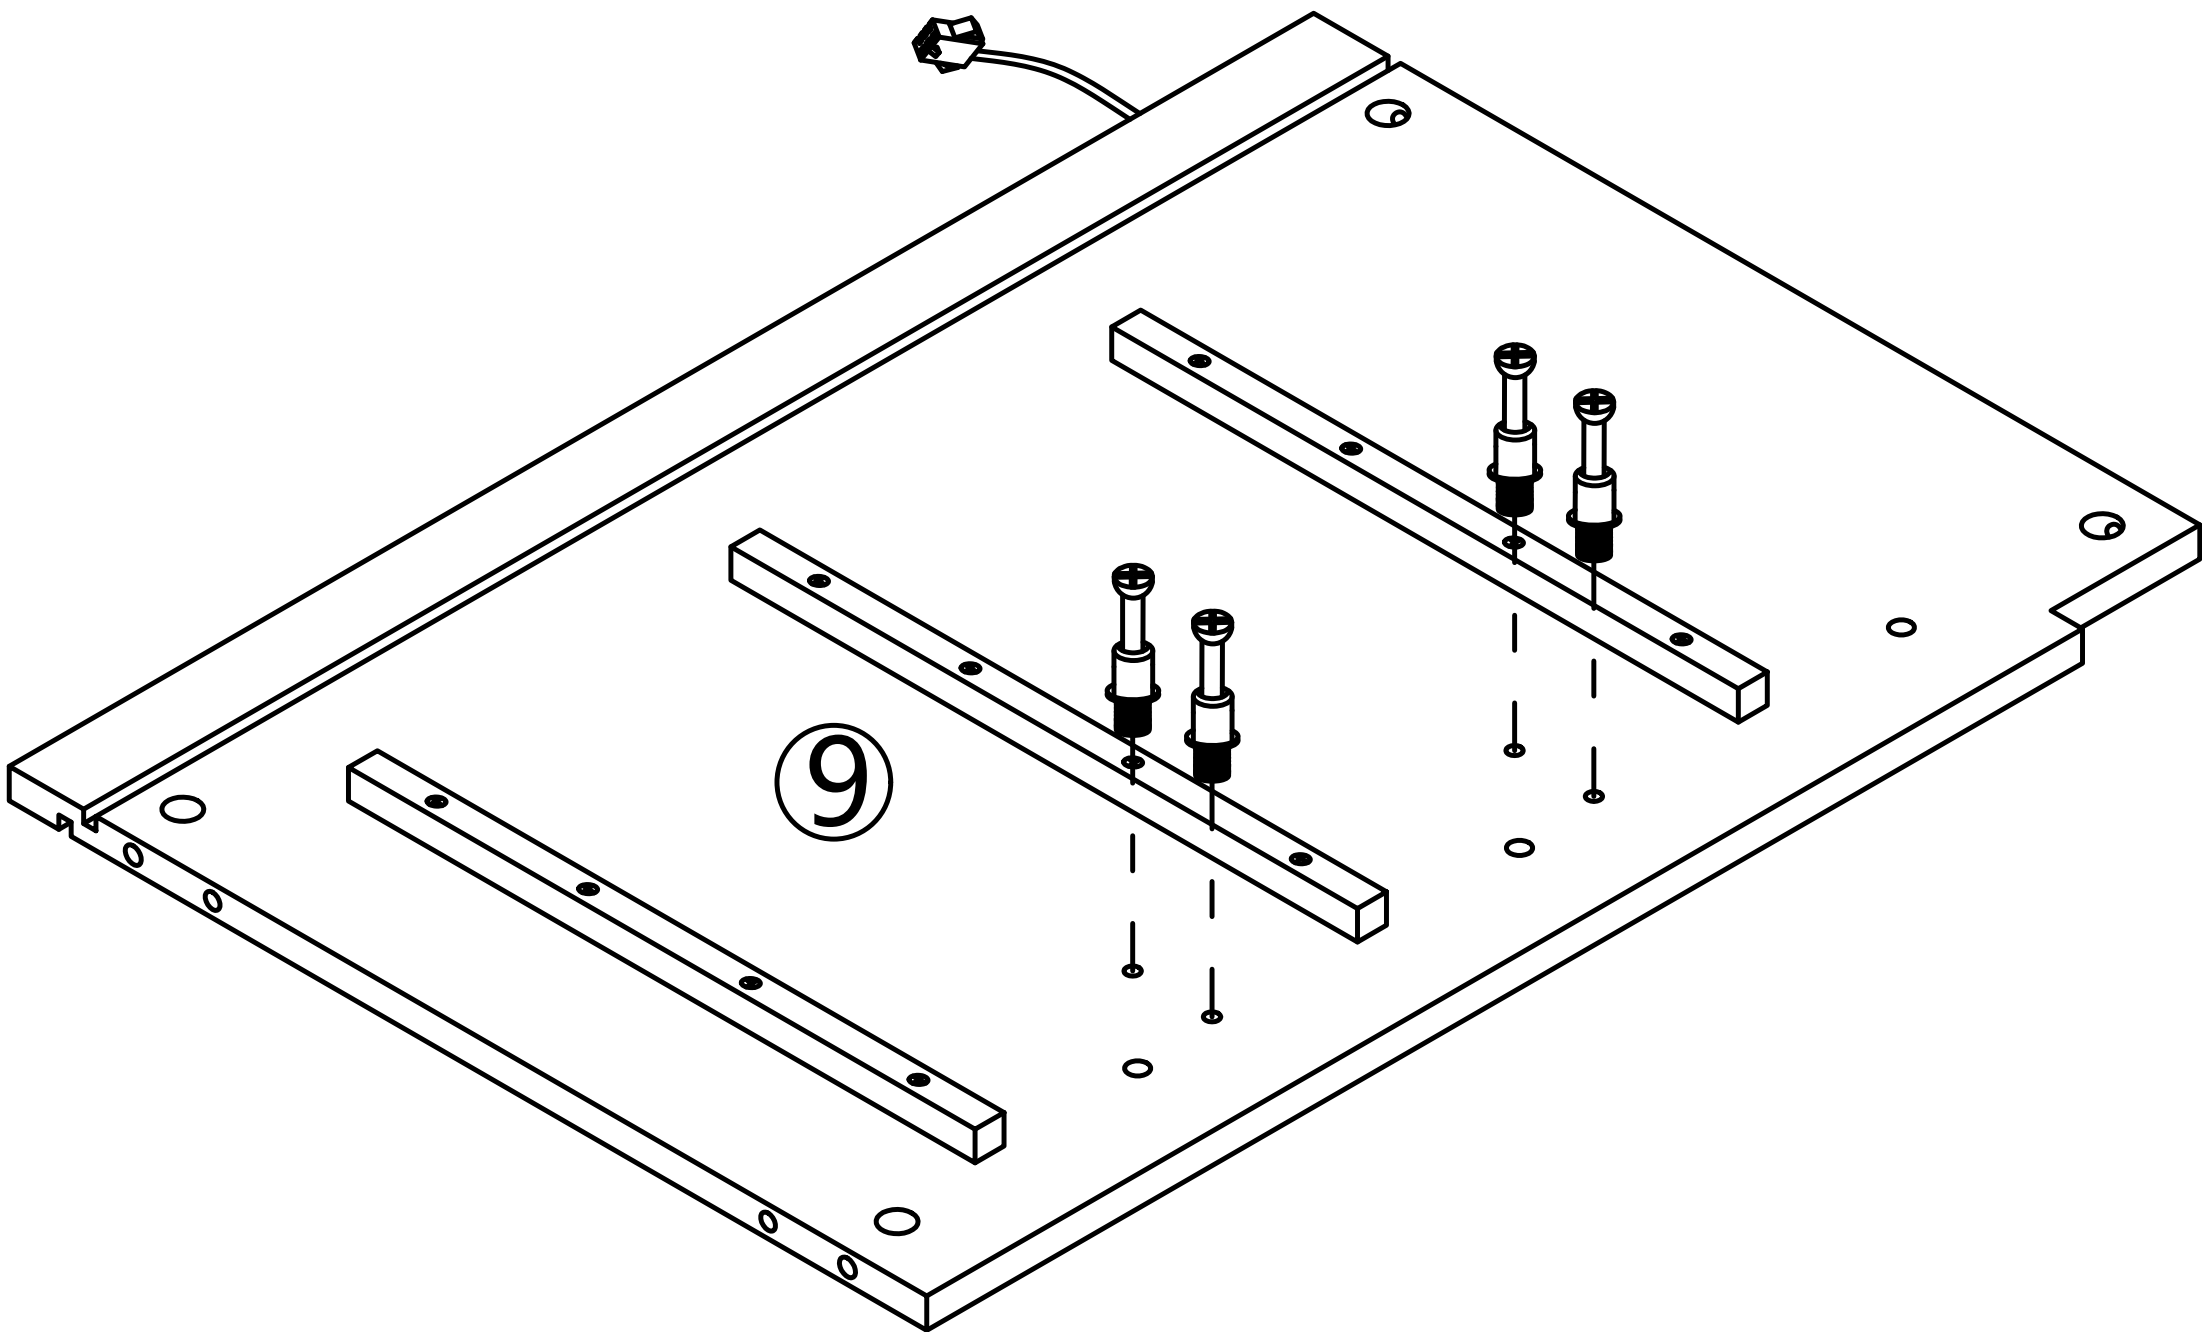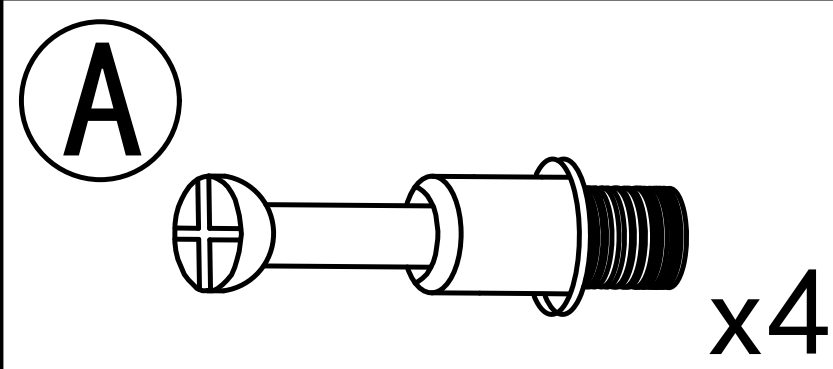


Step 18

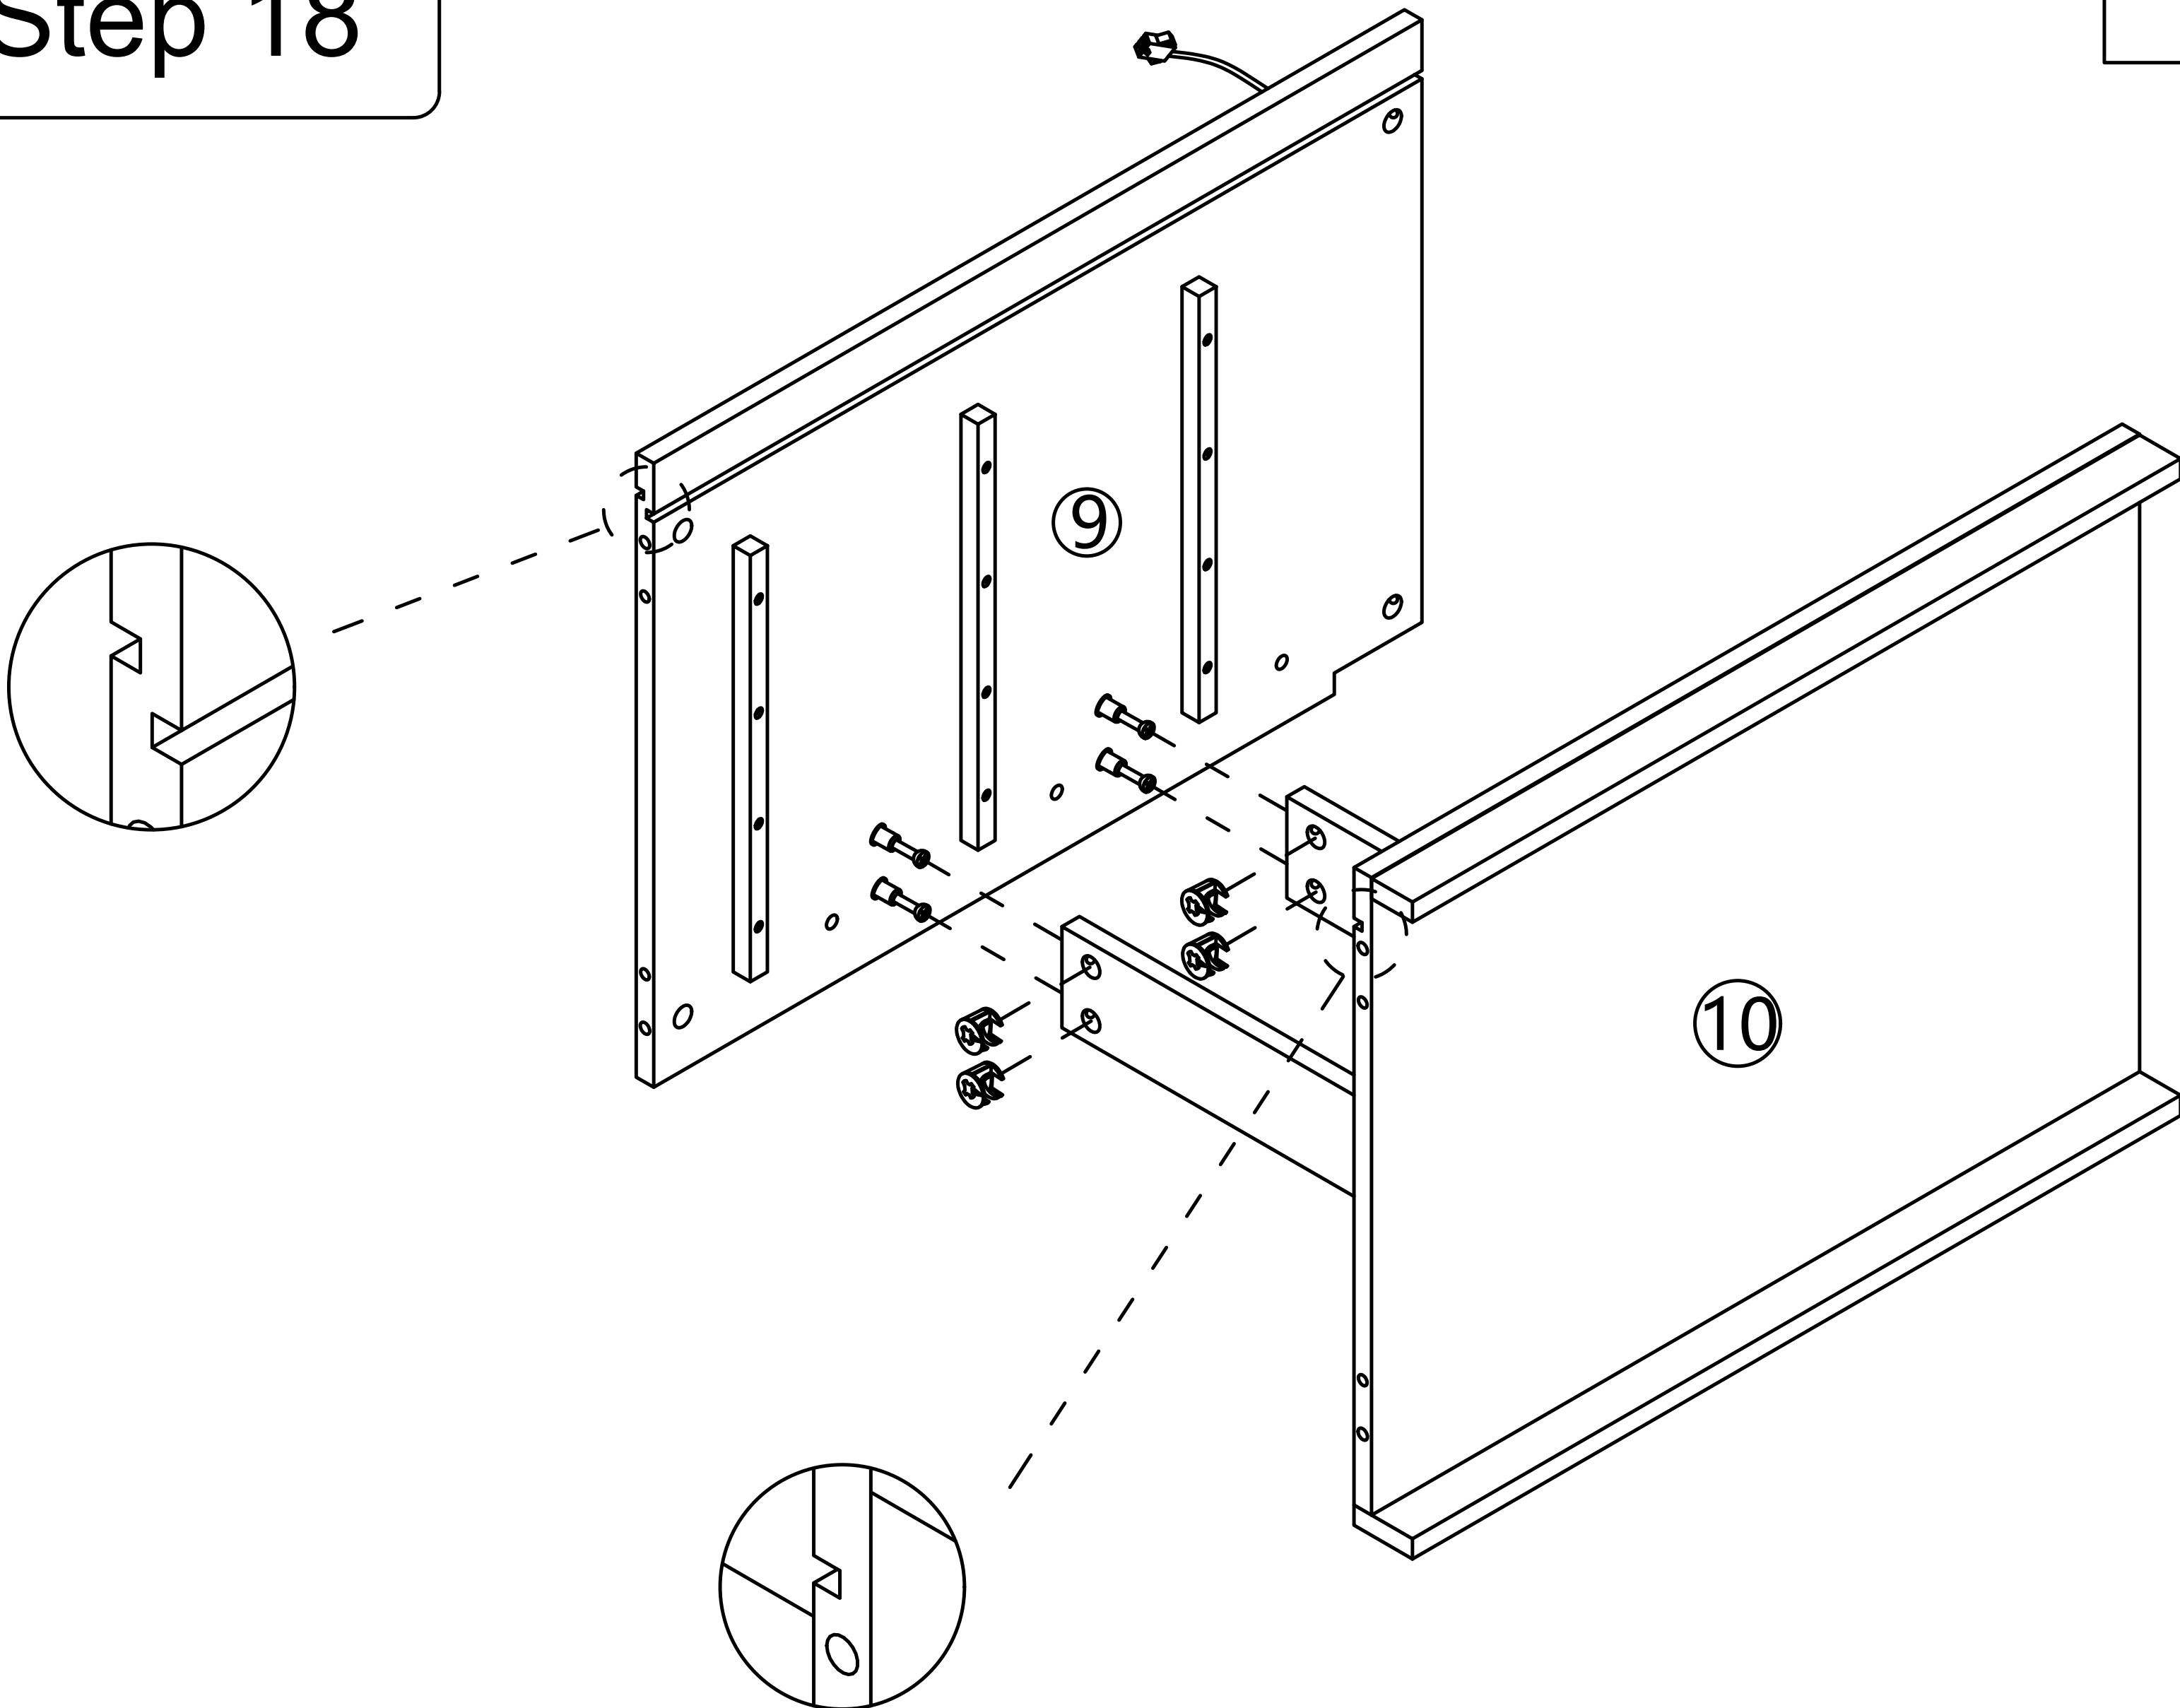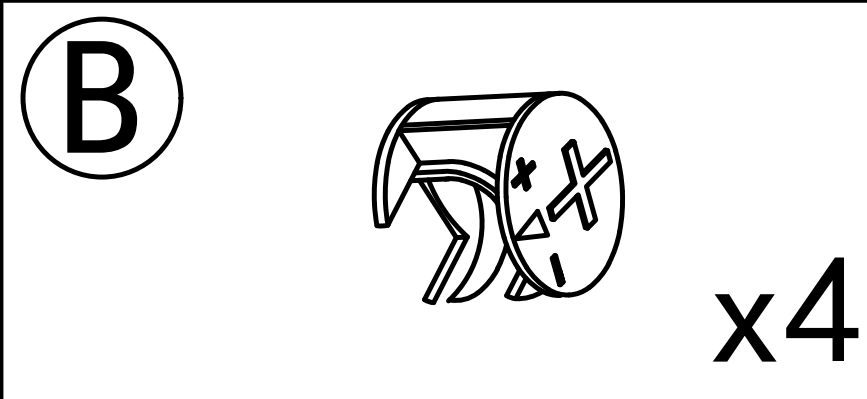


Step 19


- A

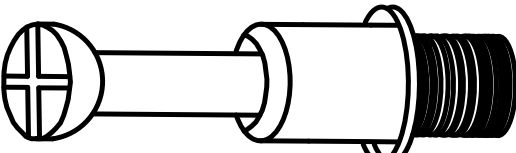

x3
- B

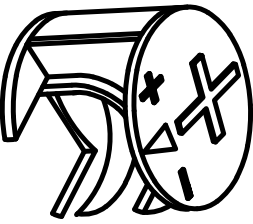


x3

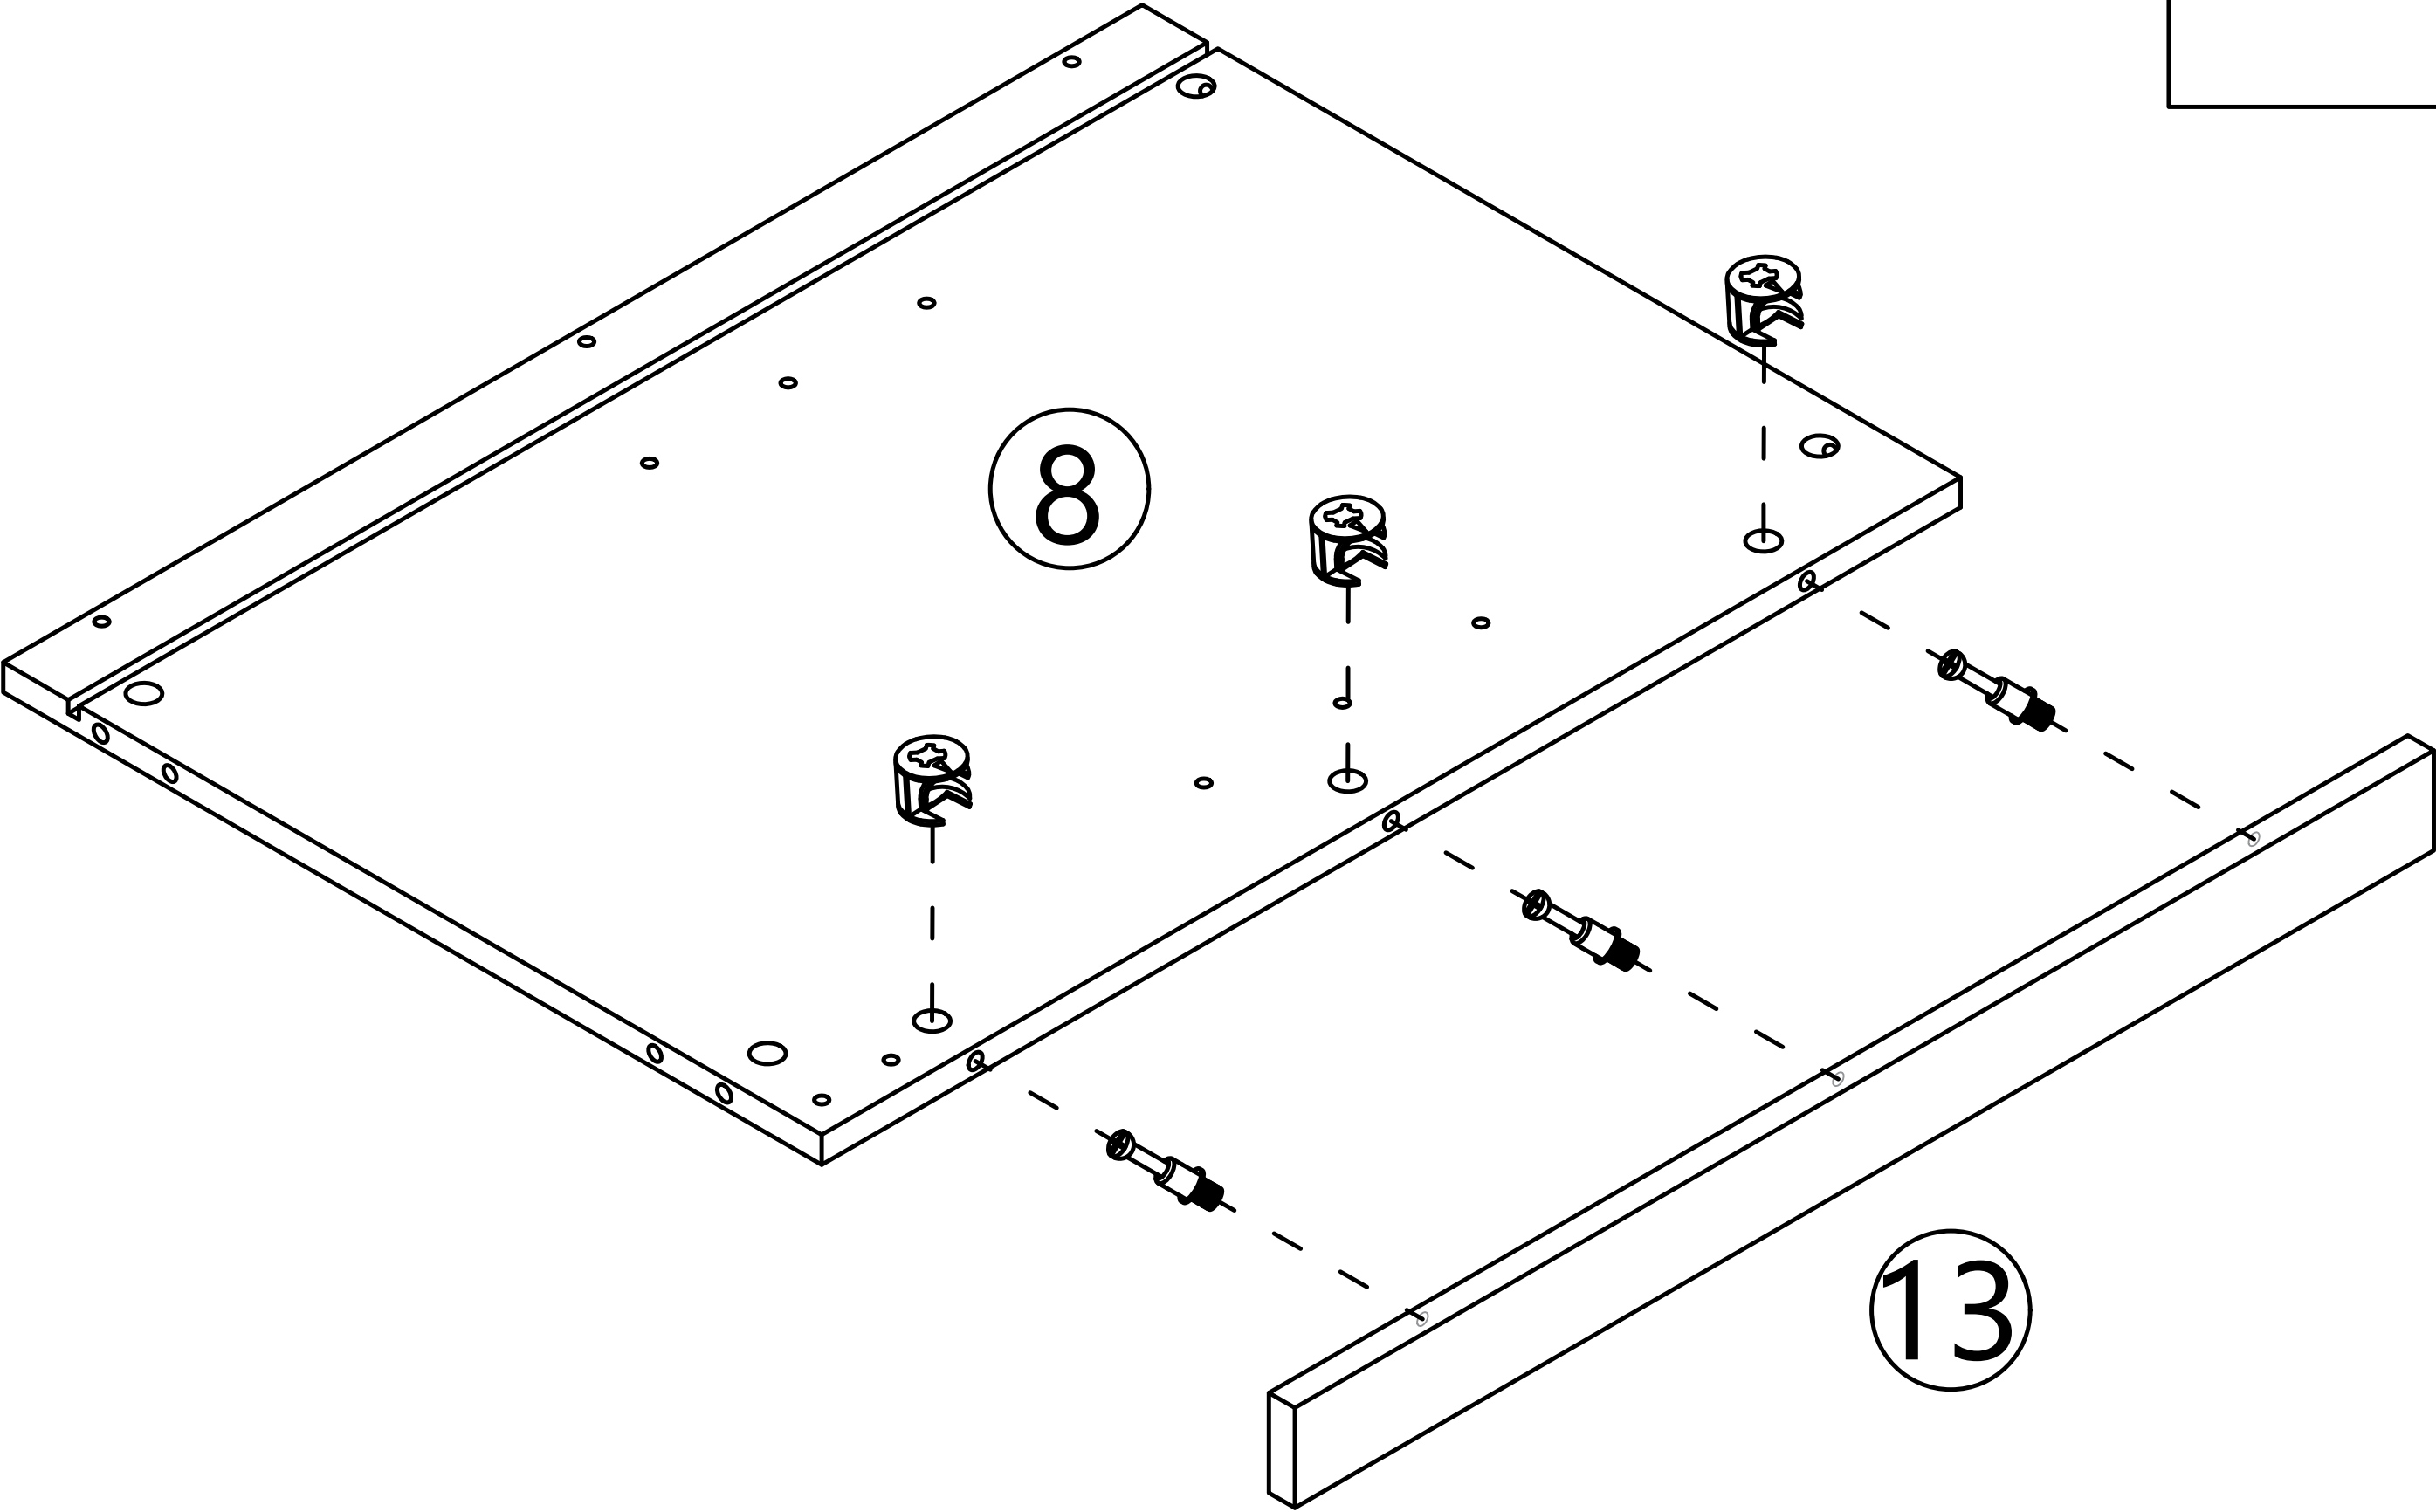


Step 20



- F

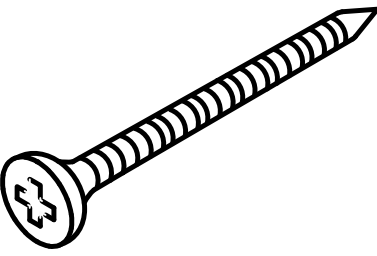



x3

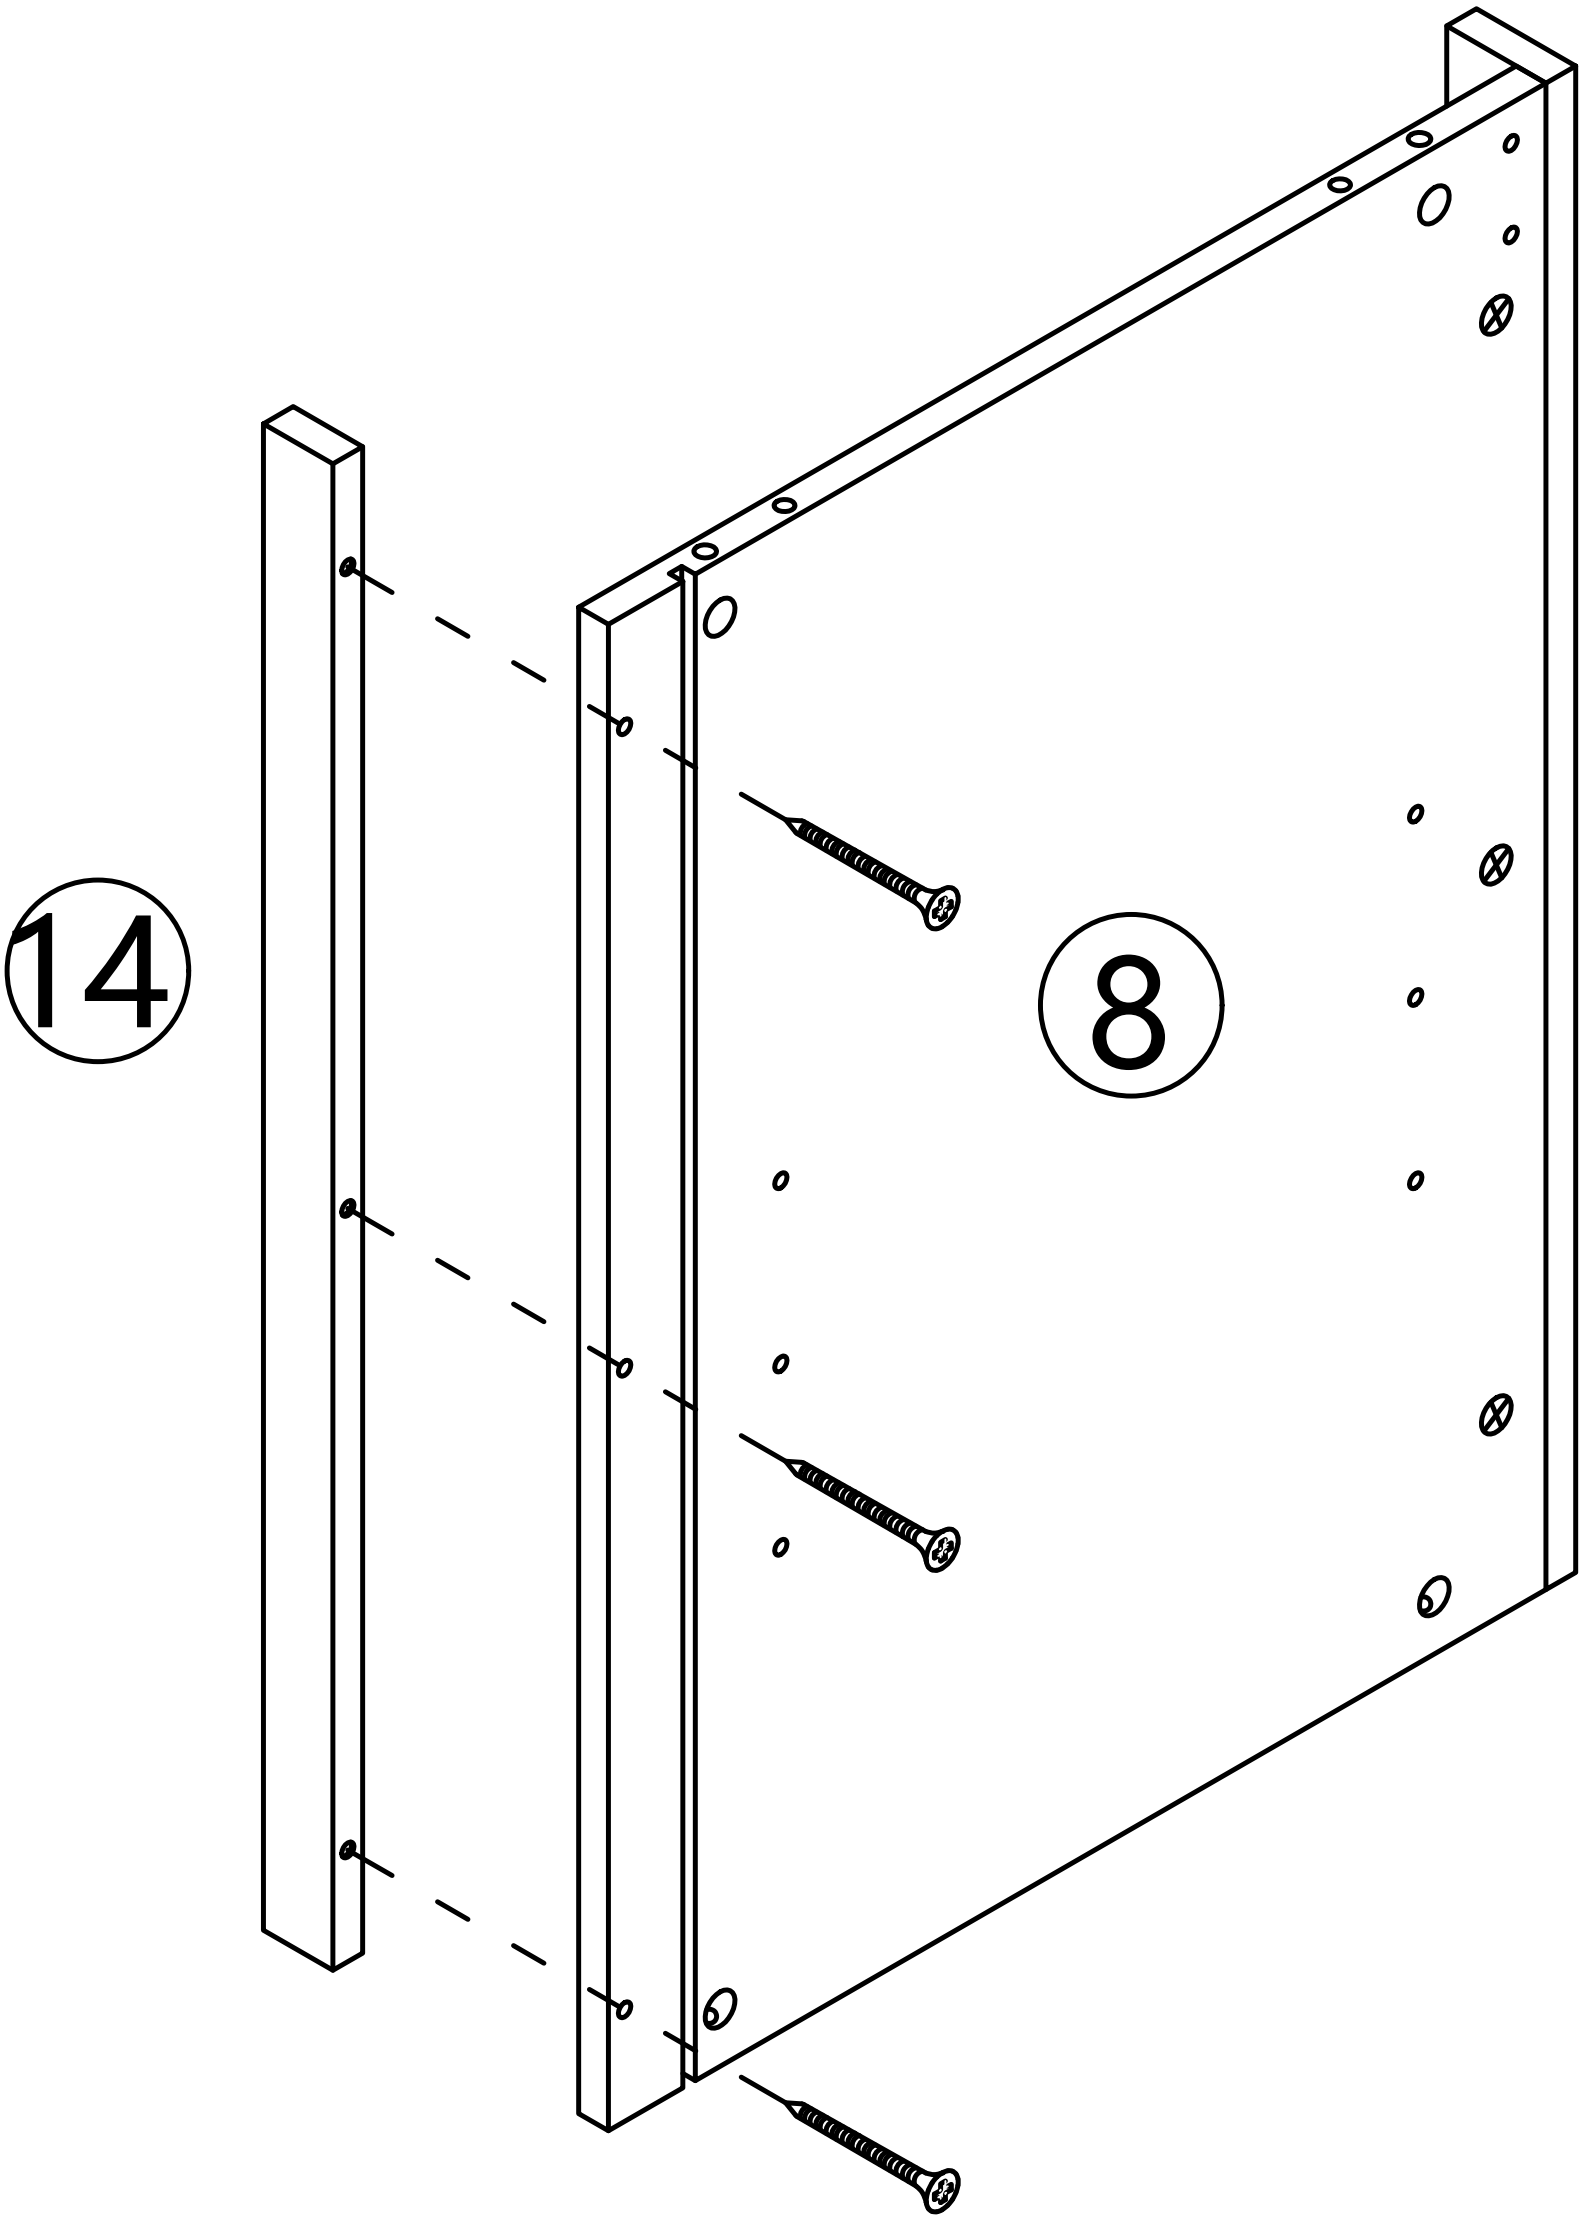

Step 21

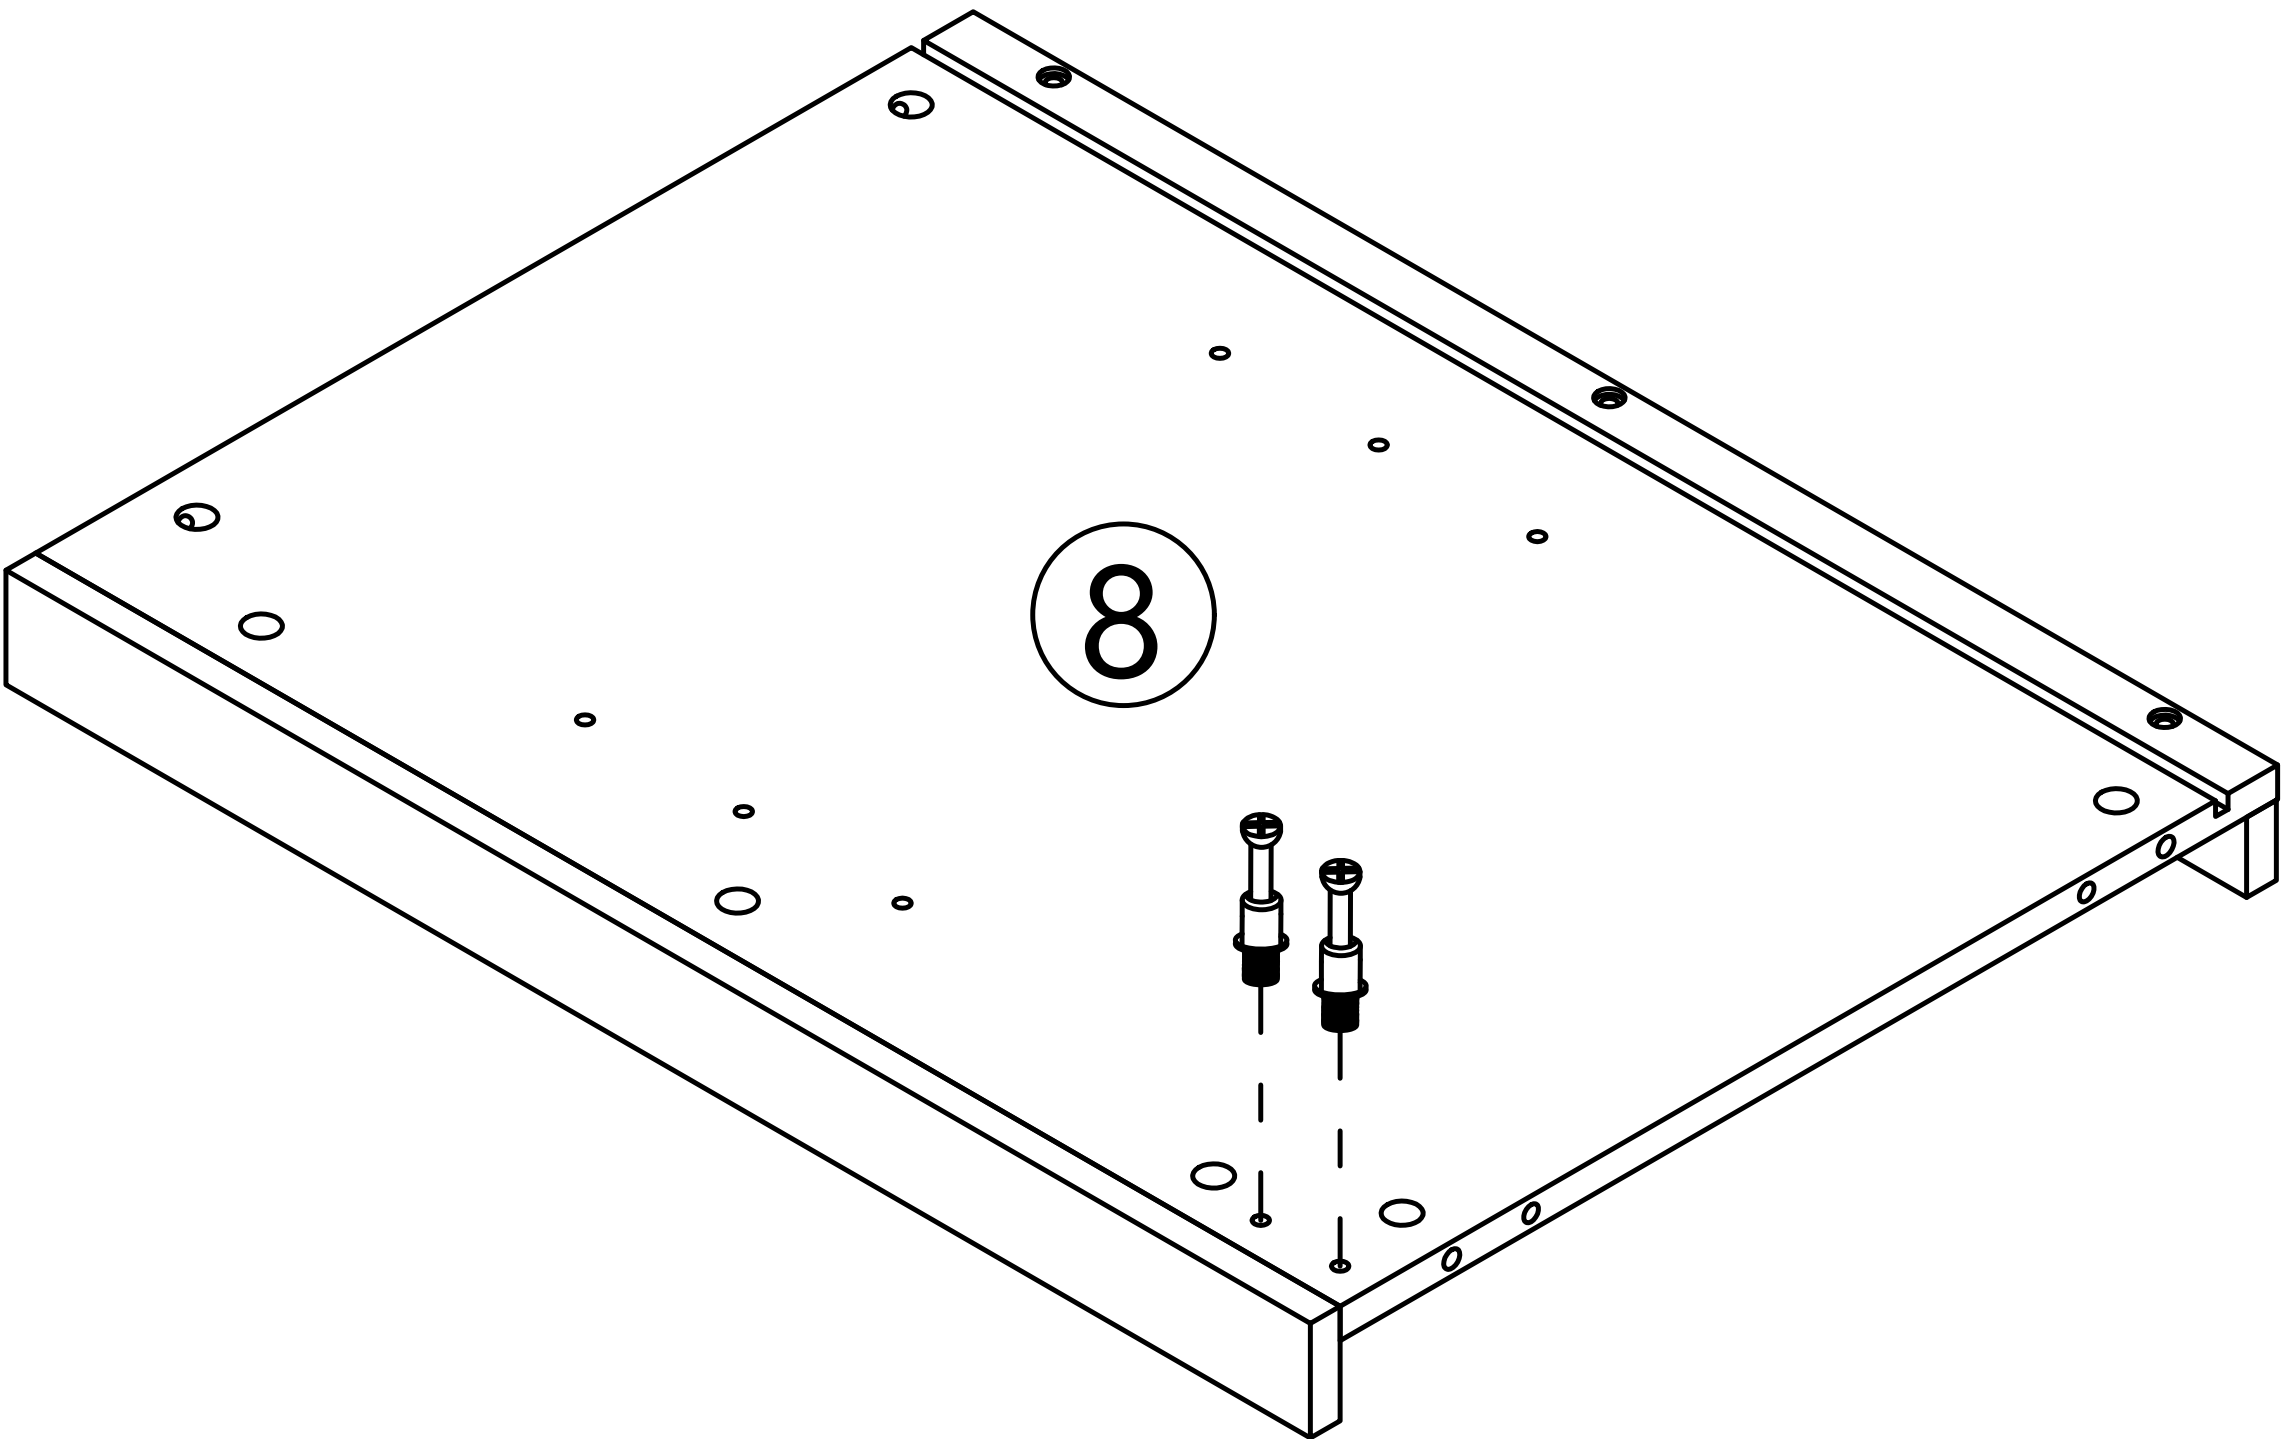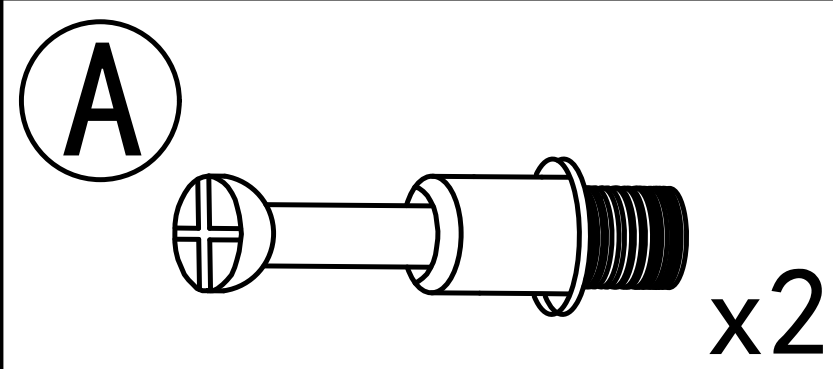


Step 22

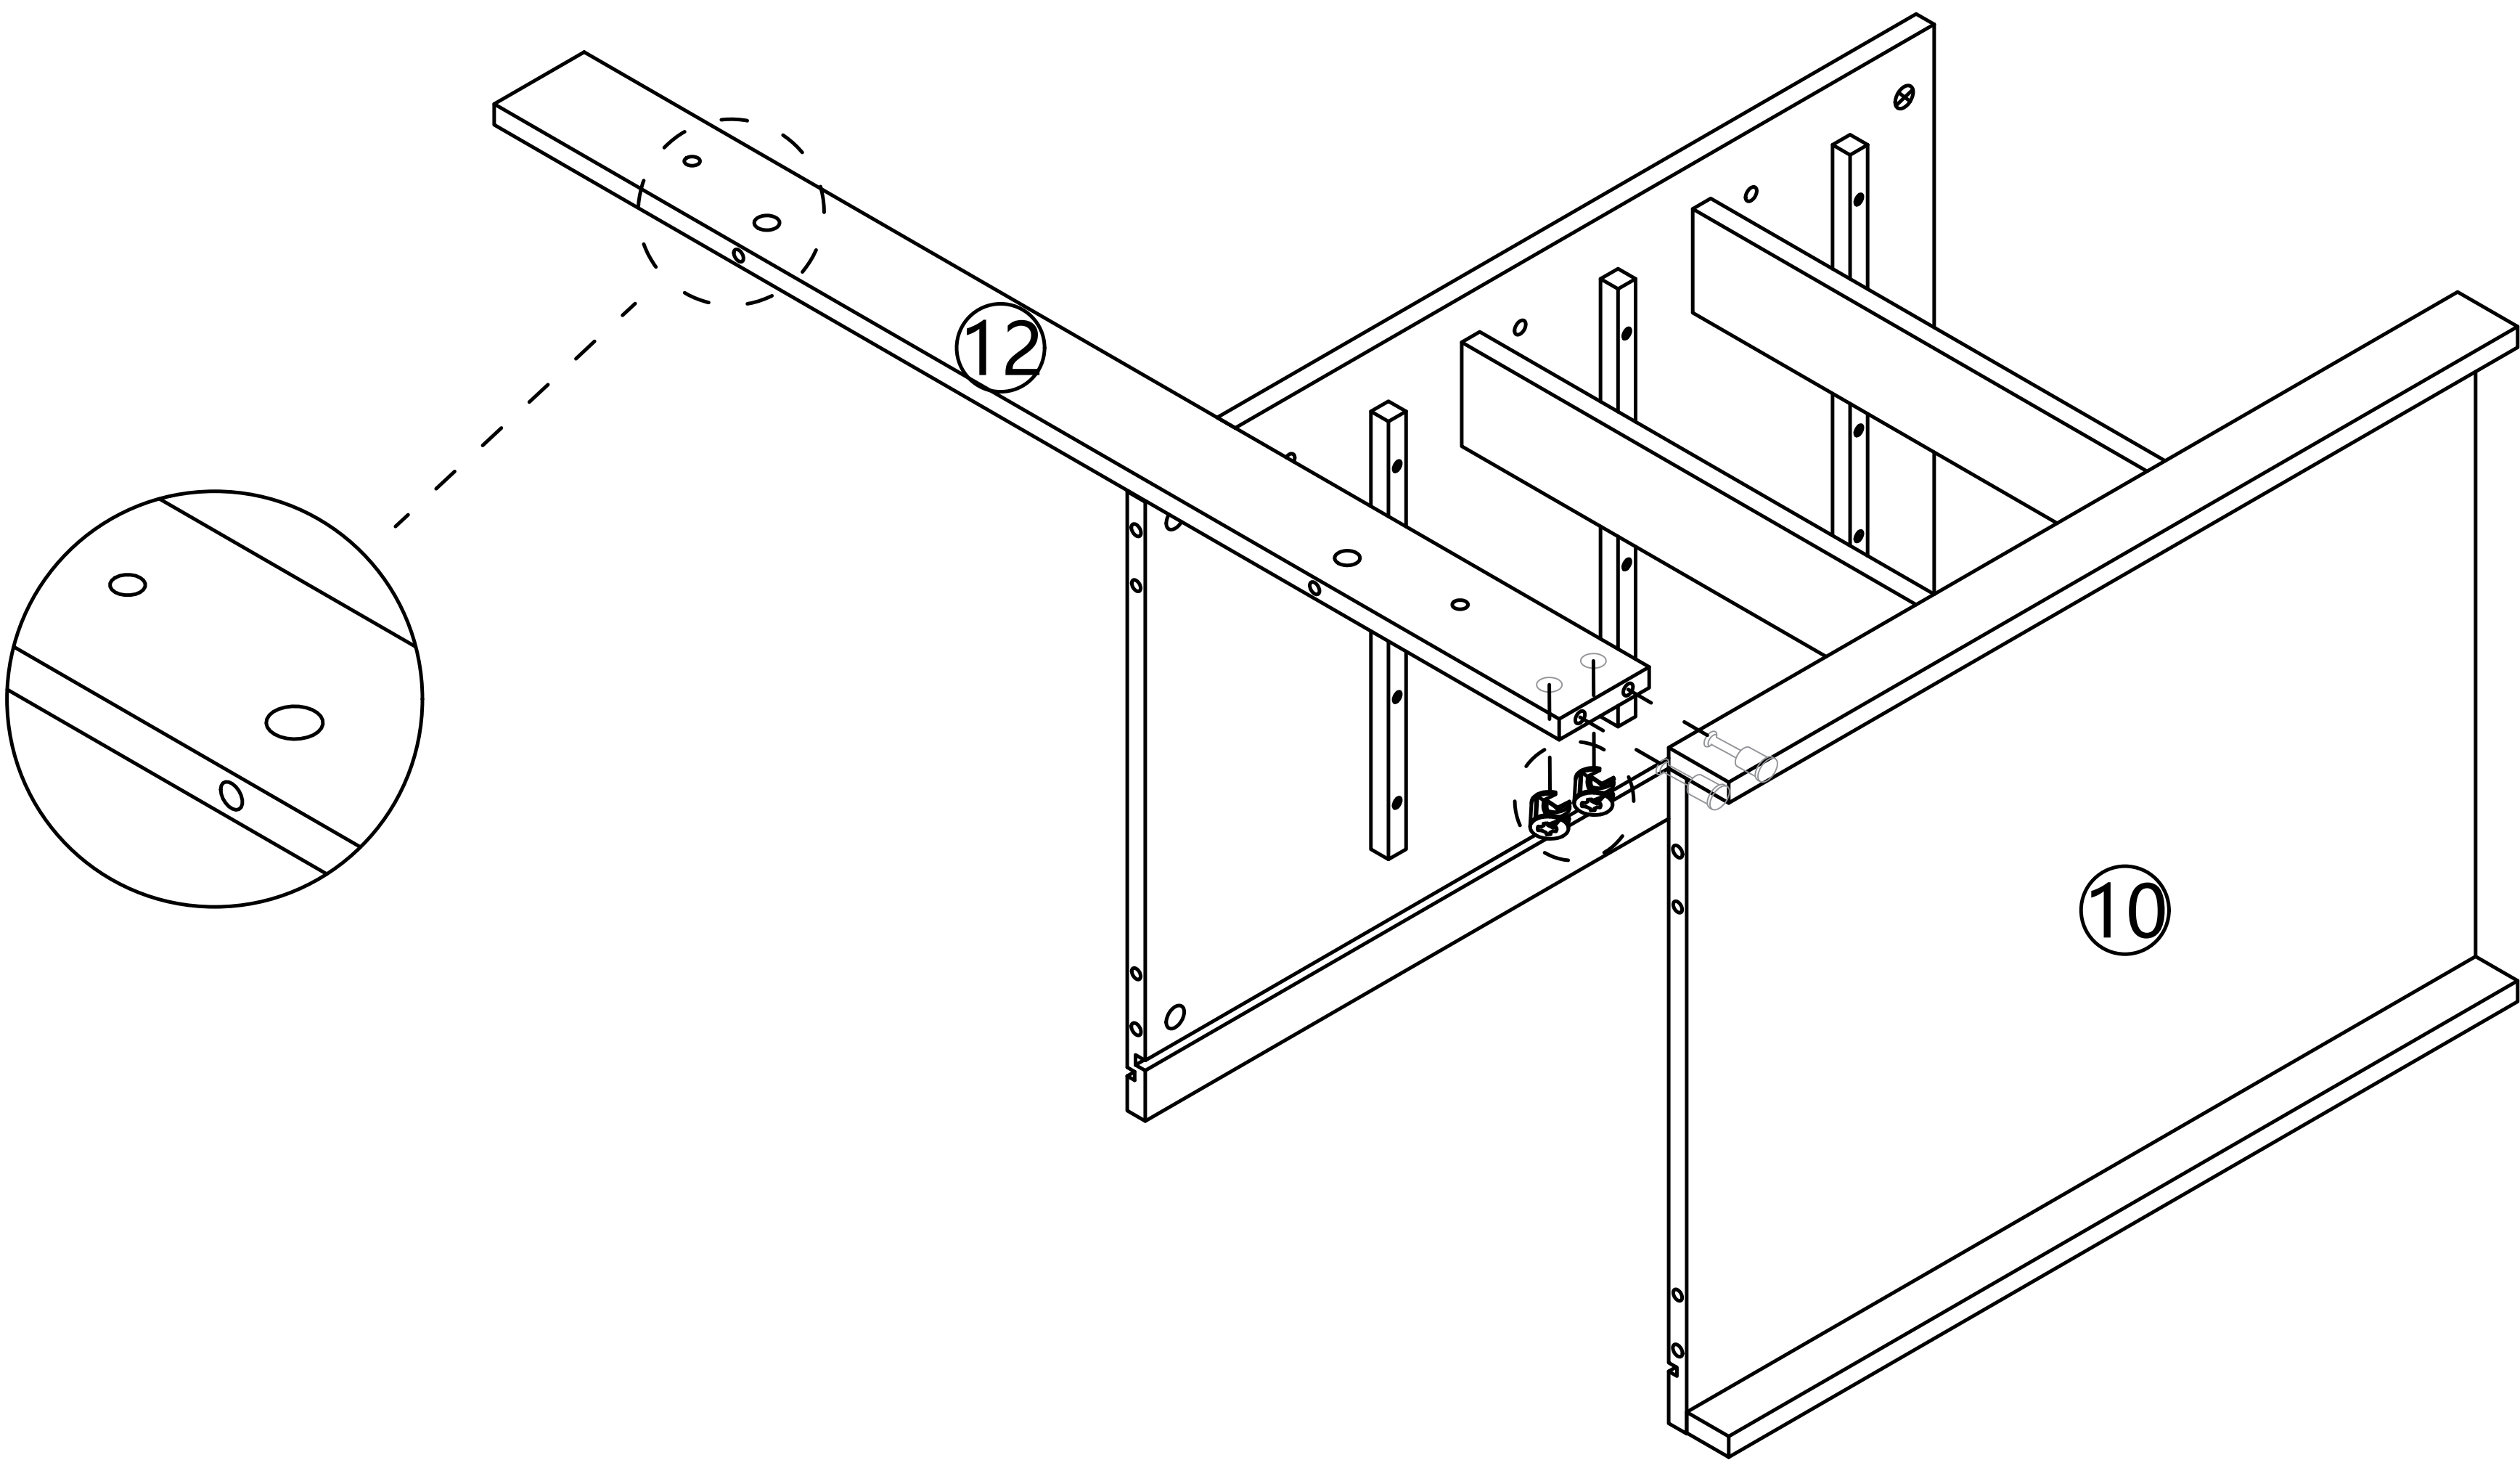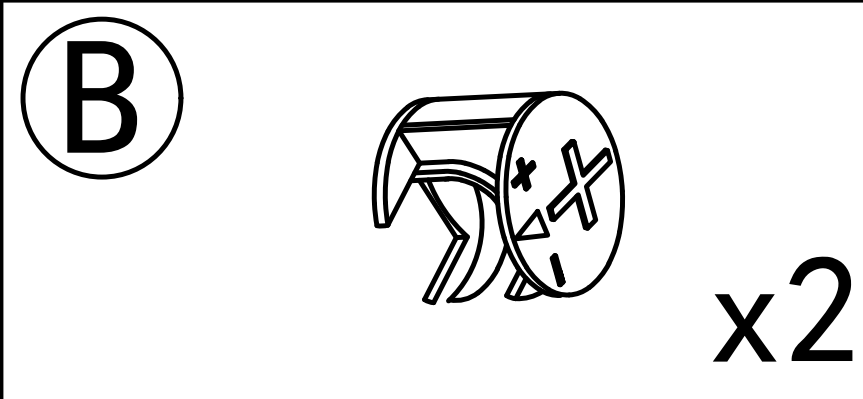


Attention: The hole on board 12 faces outward

Step 23

Ⓑ

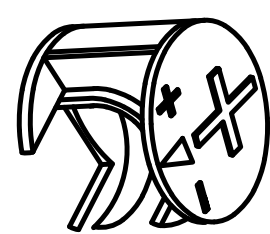


x2

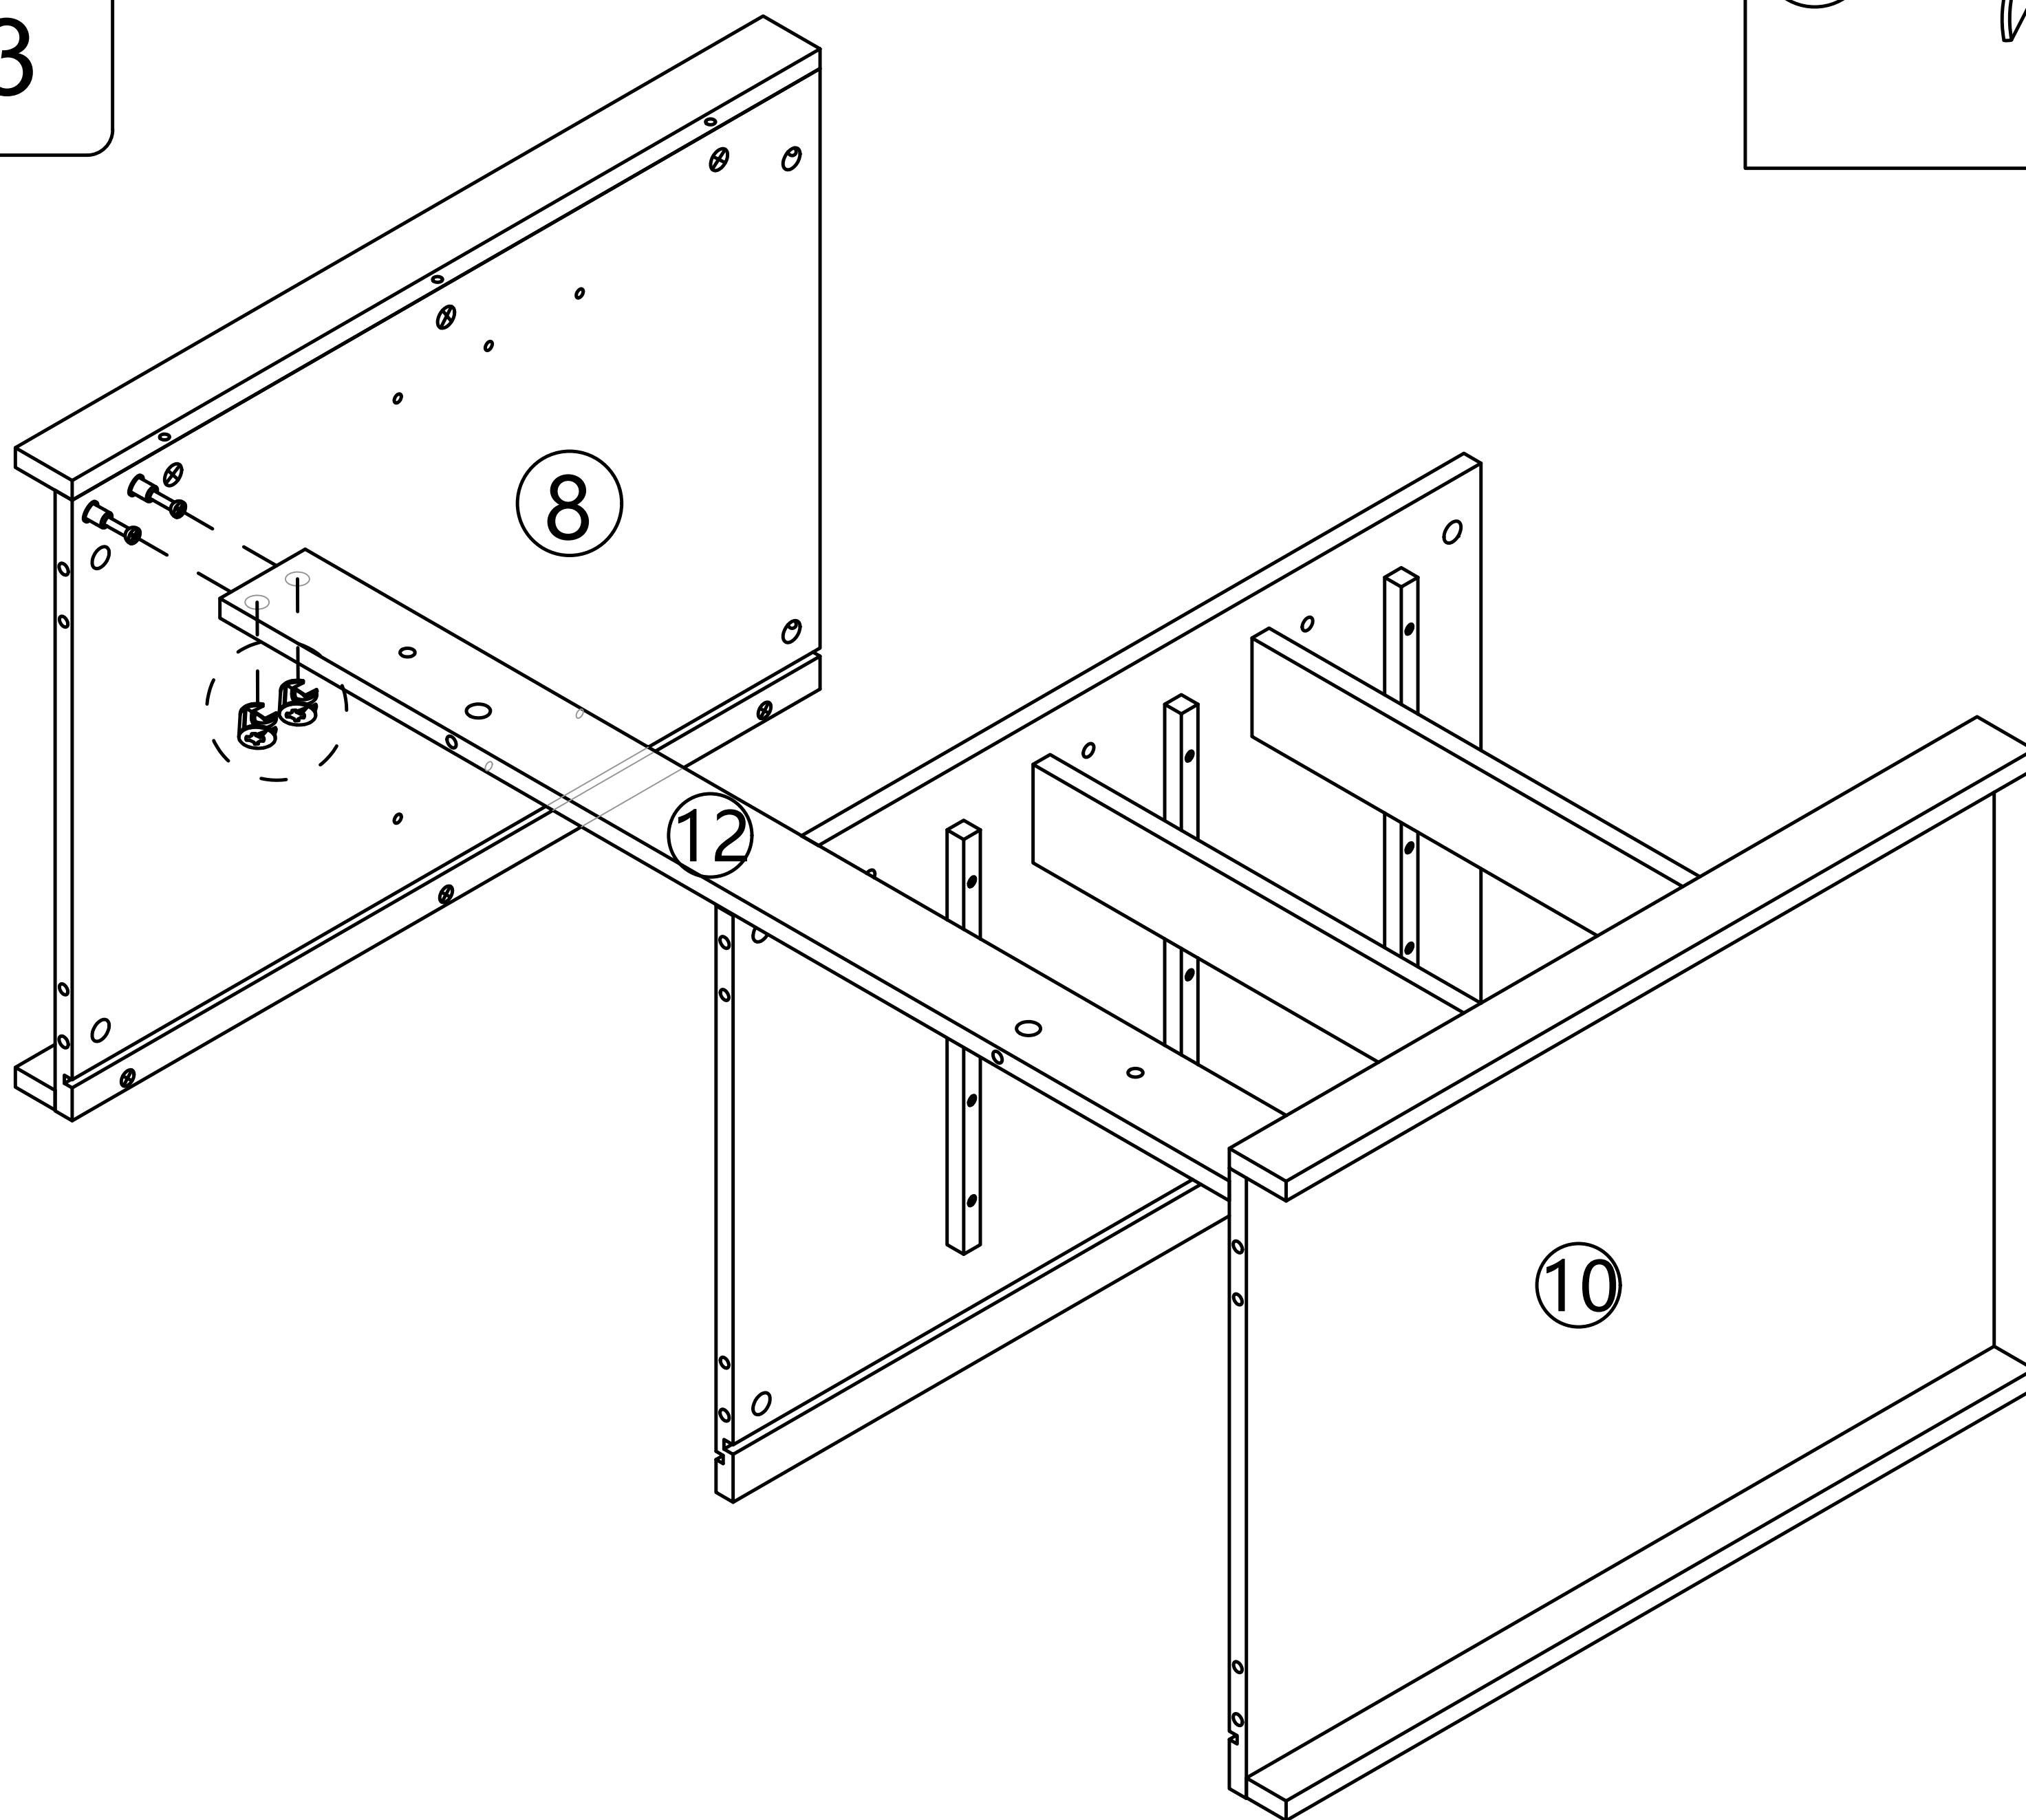


Step 24


Ⓑ

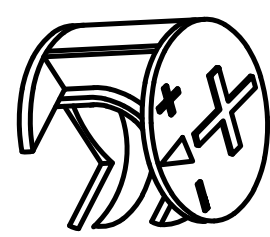


x6


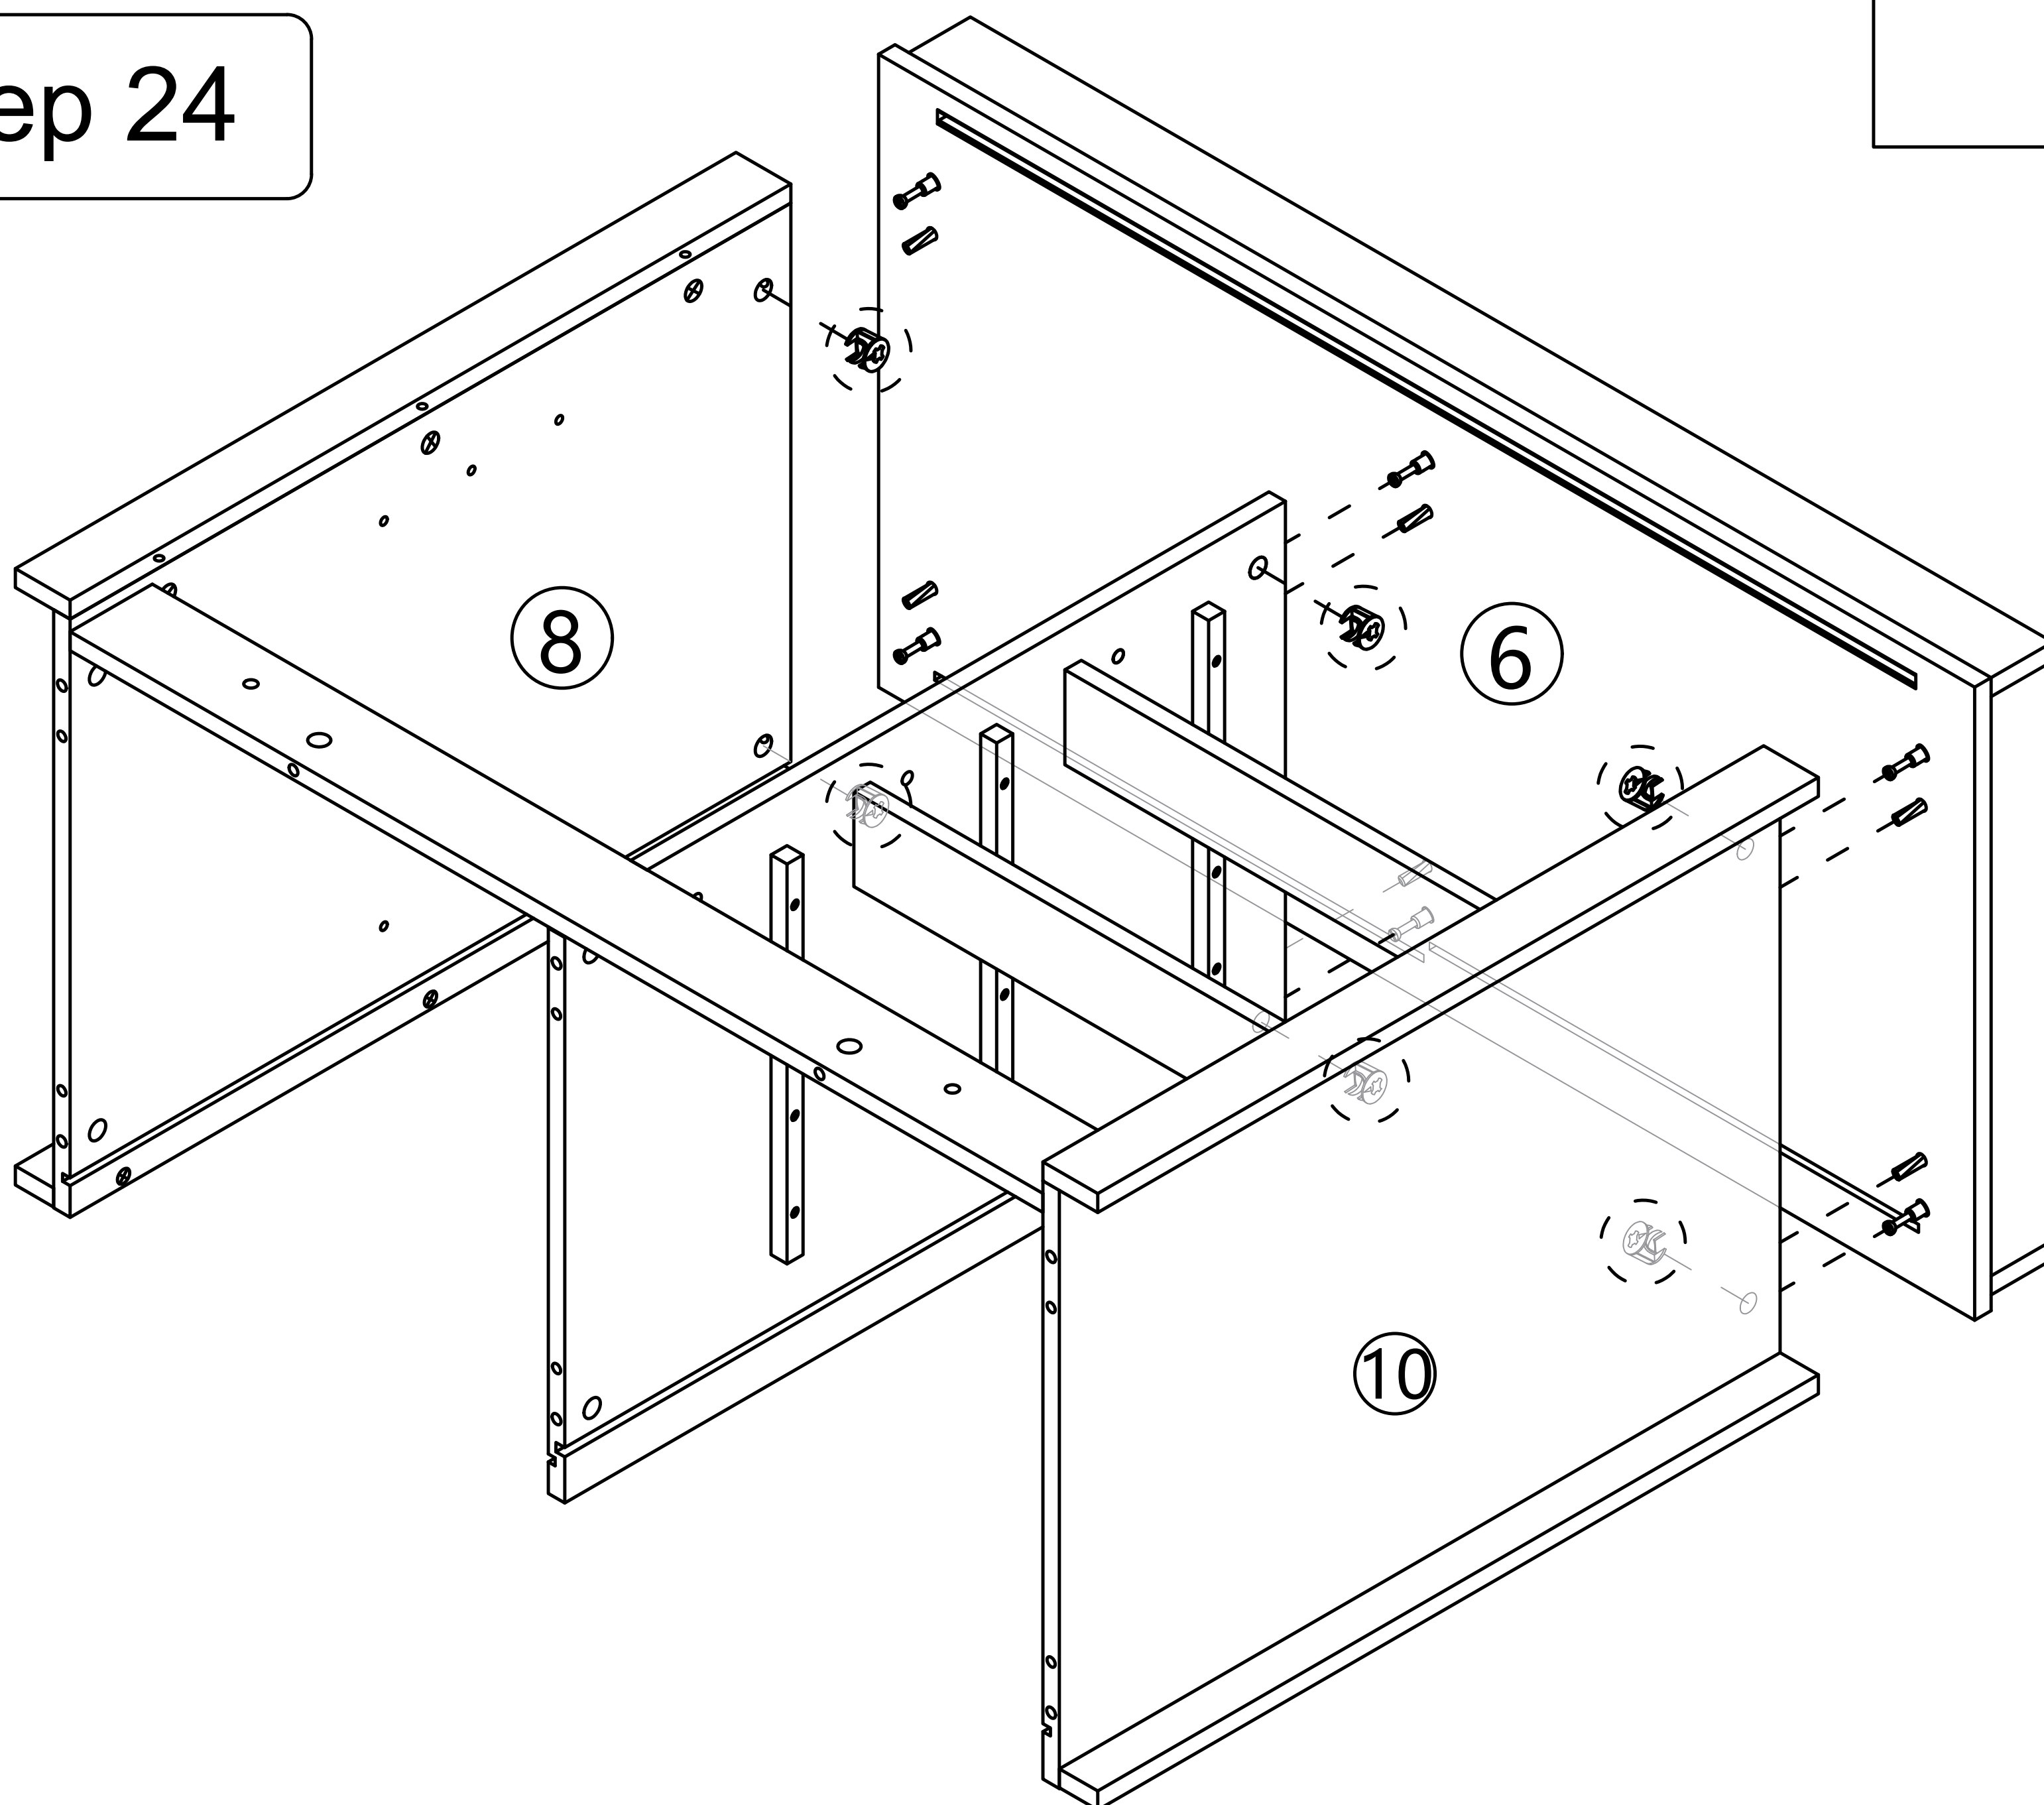


Step 25


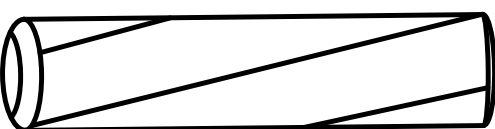
C  x6

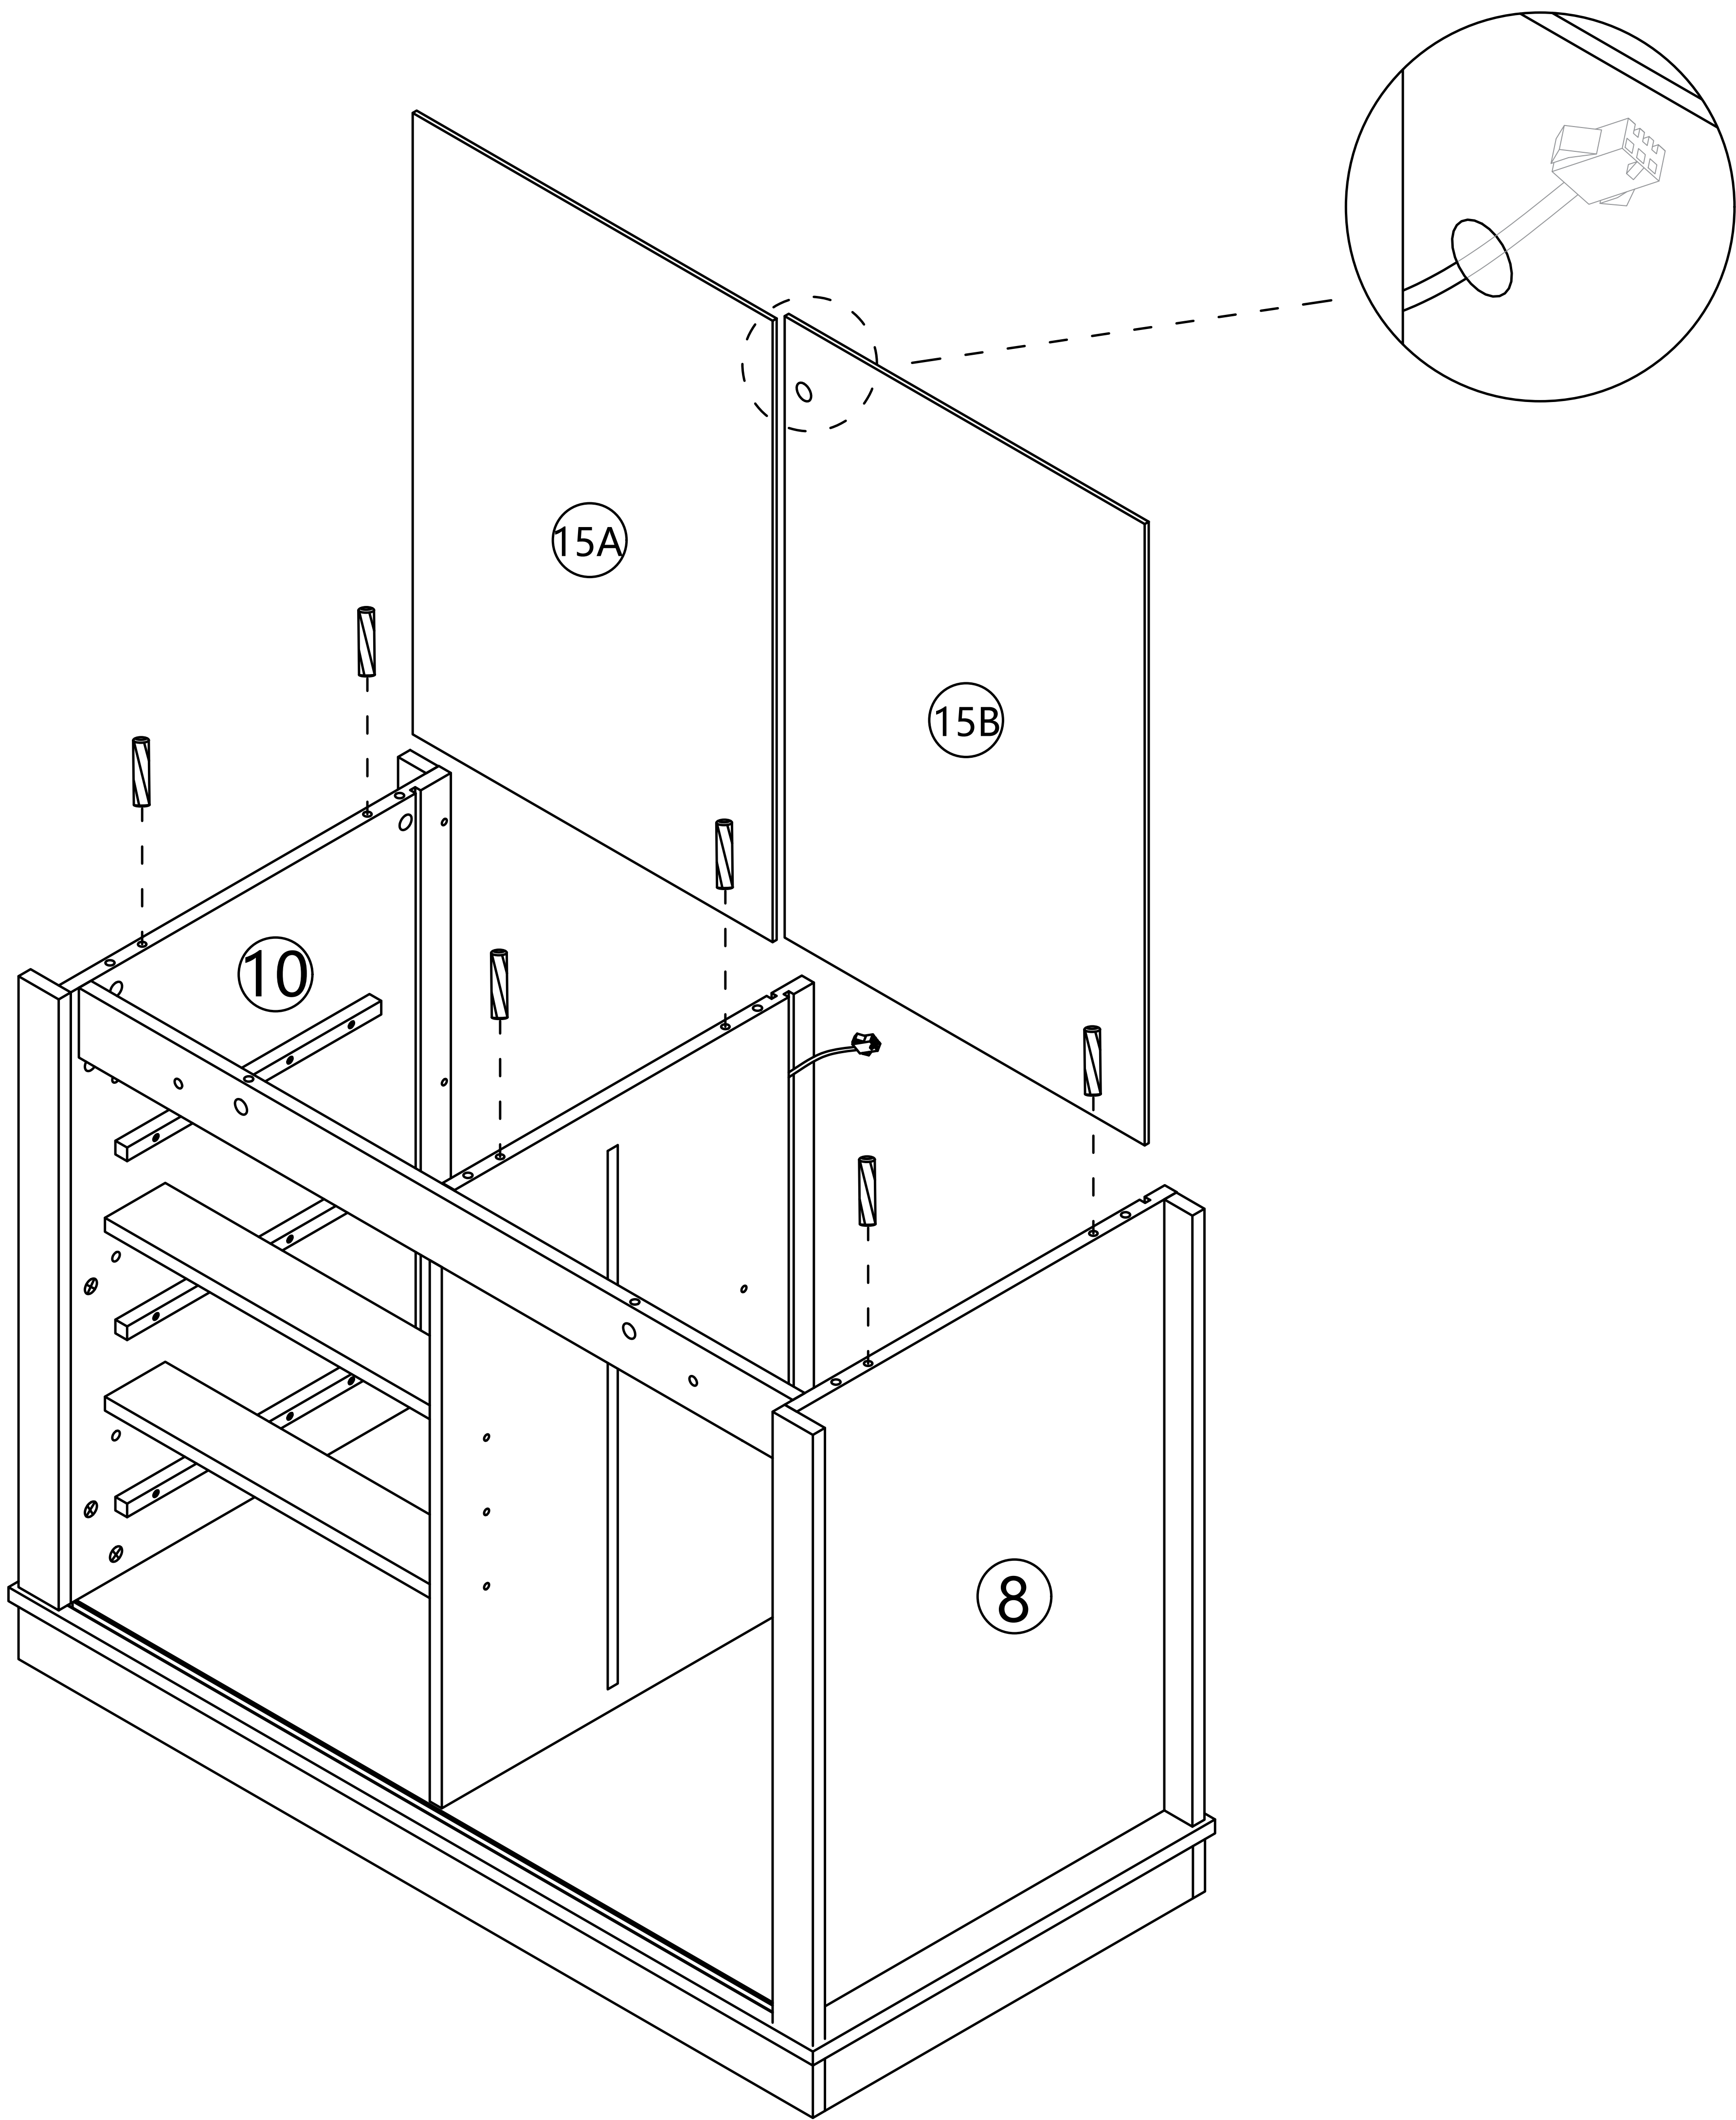




Step 26

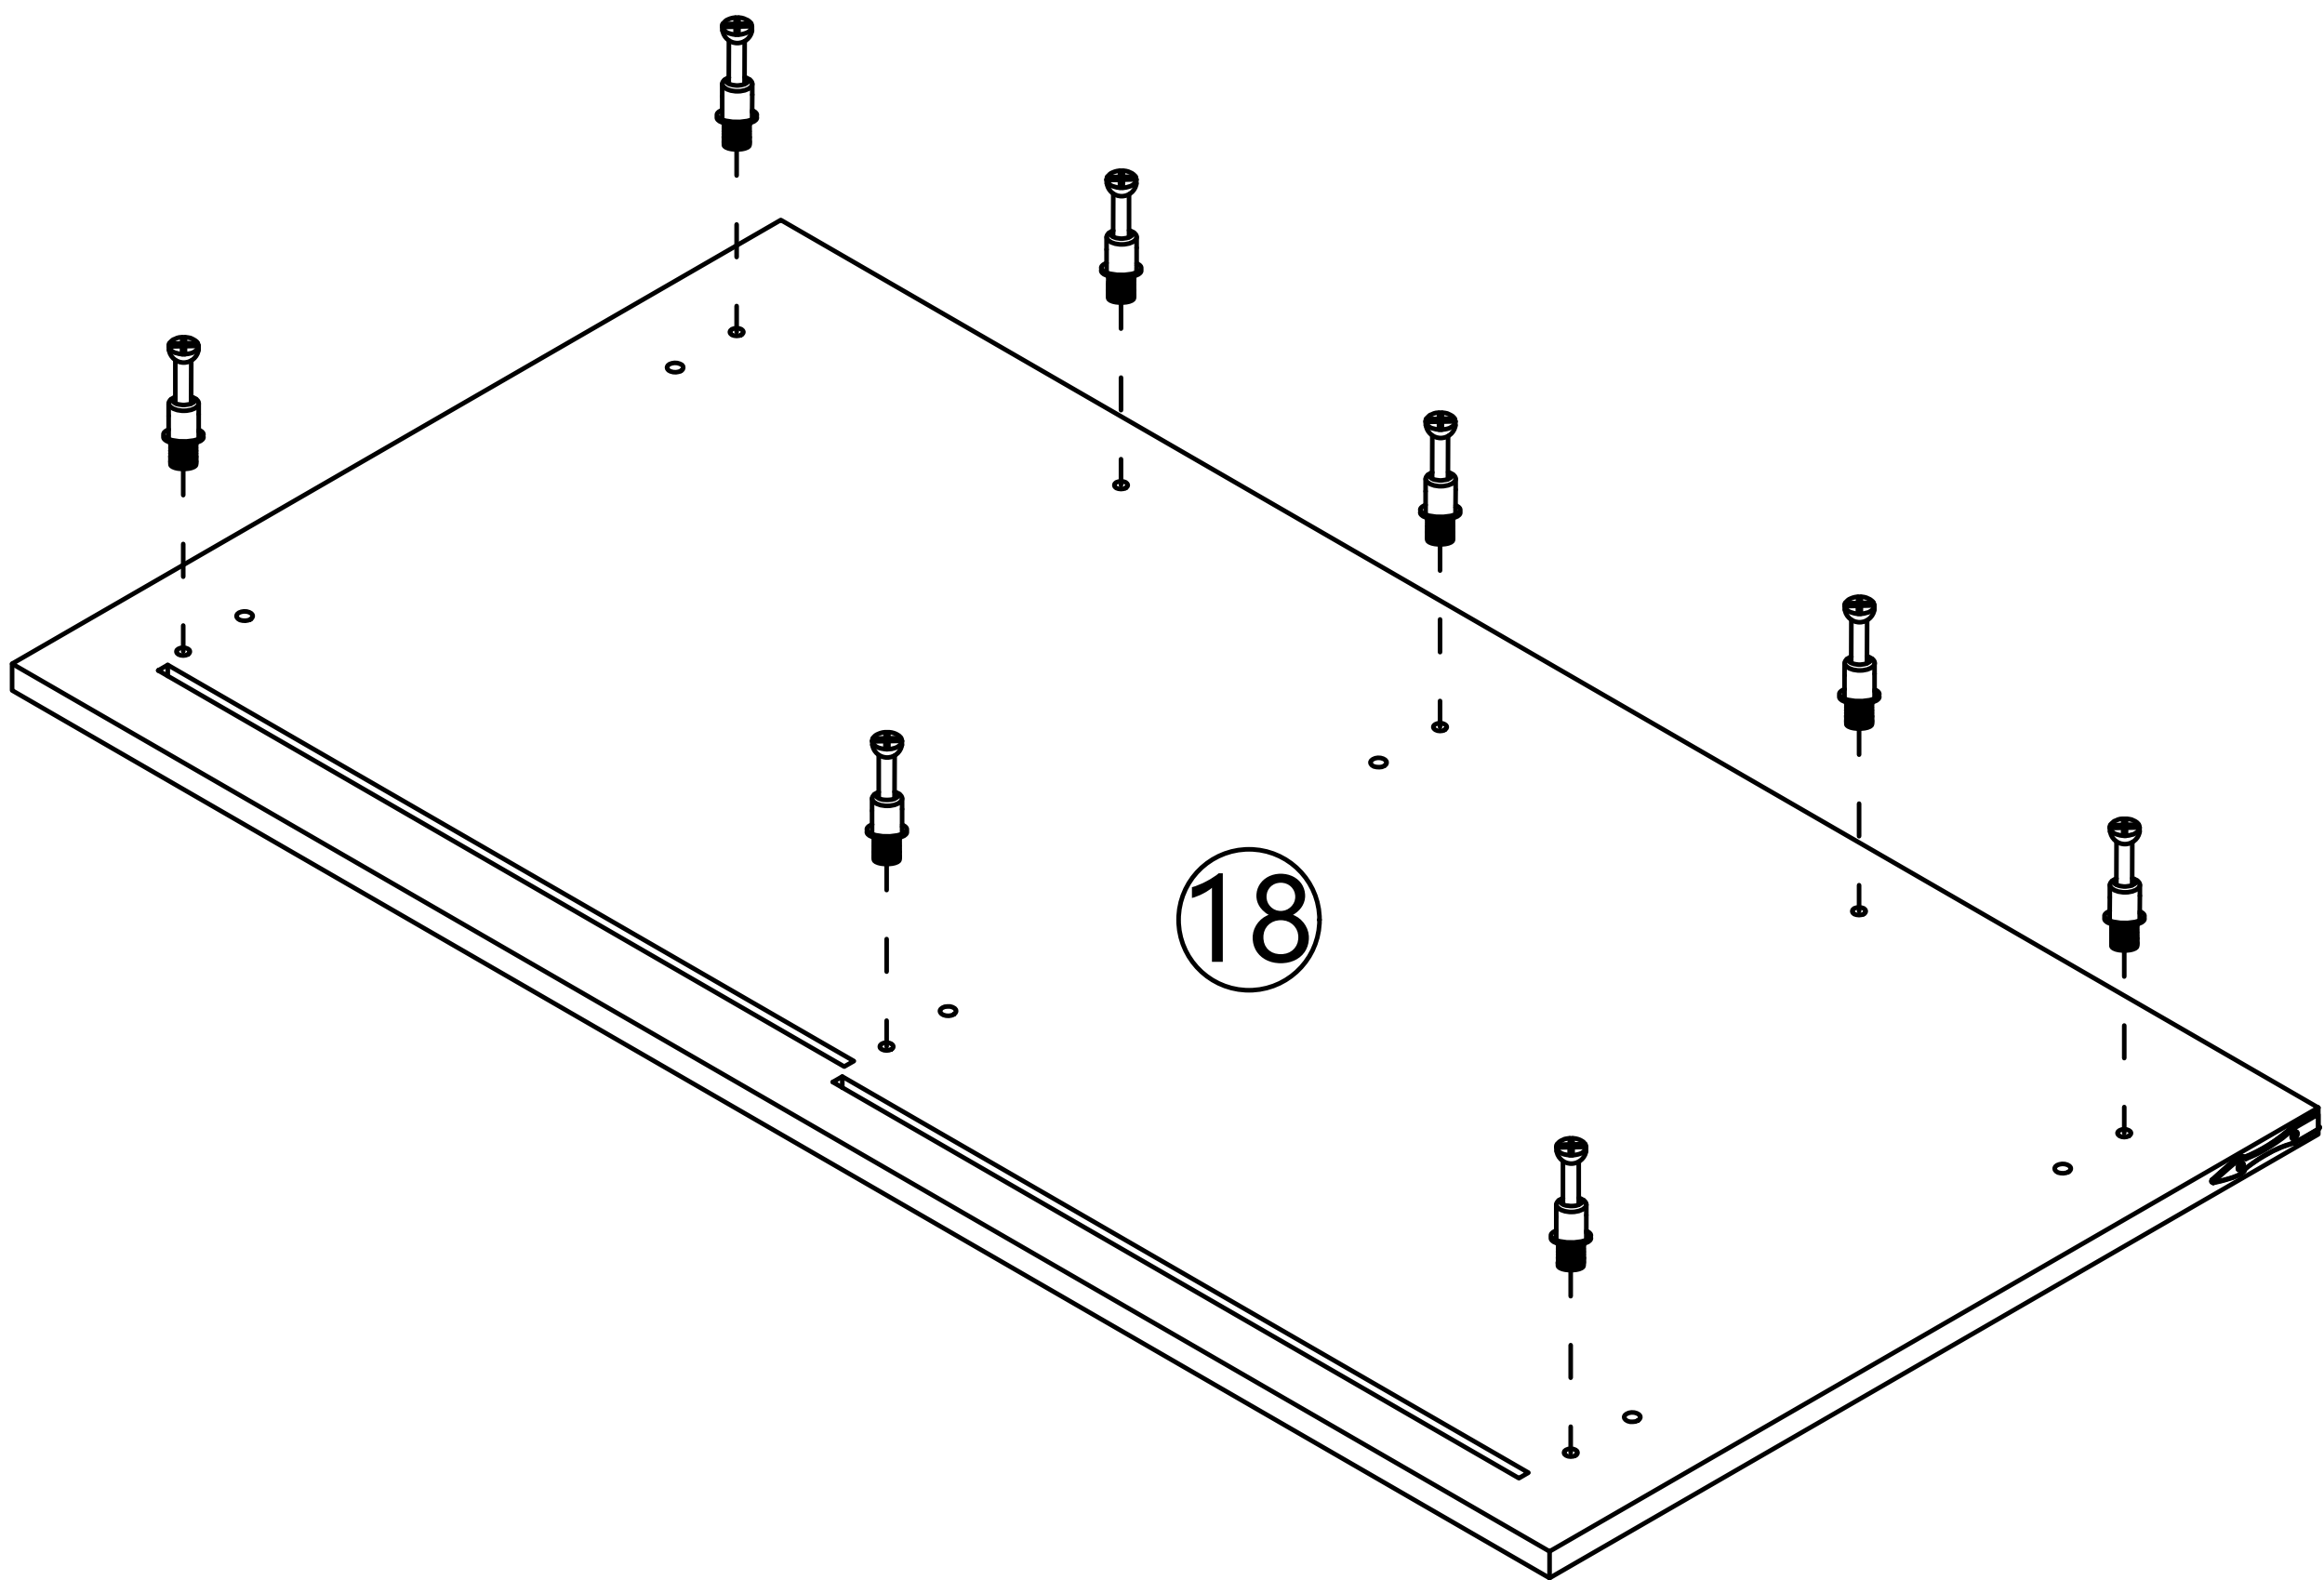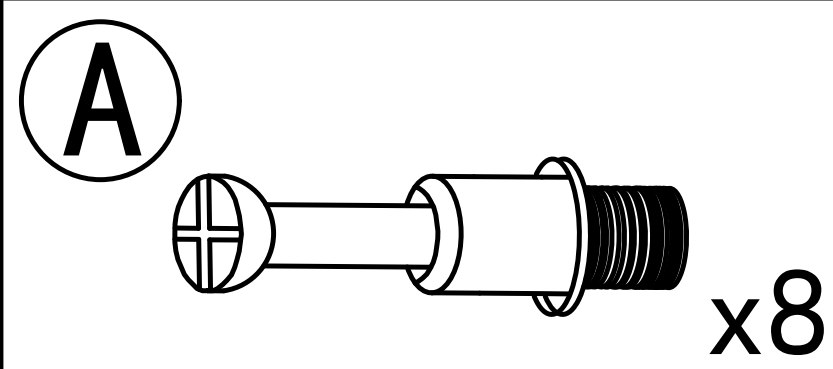


Step 27

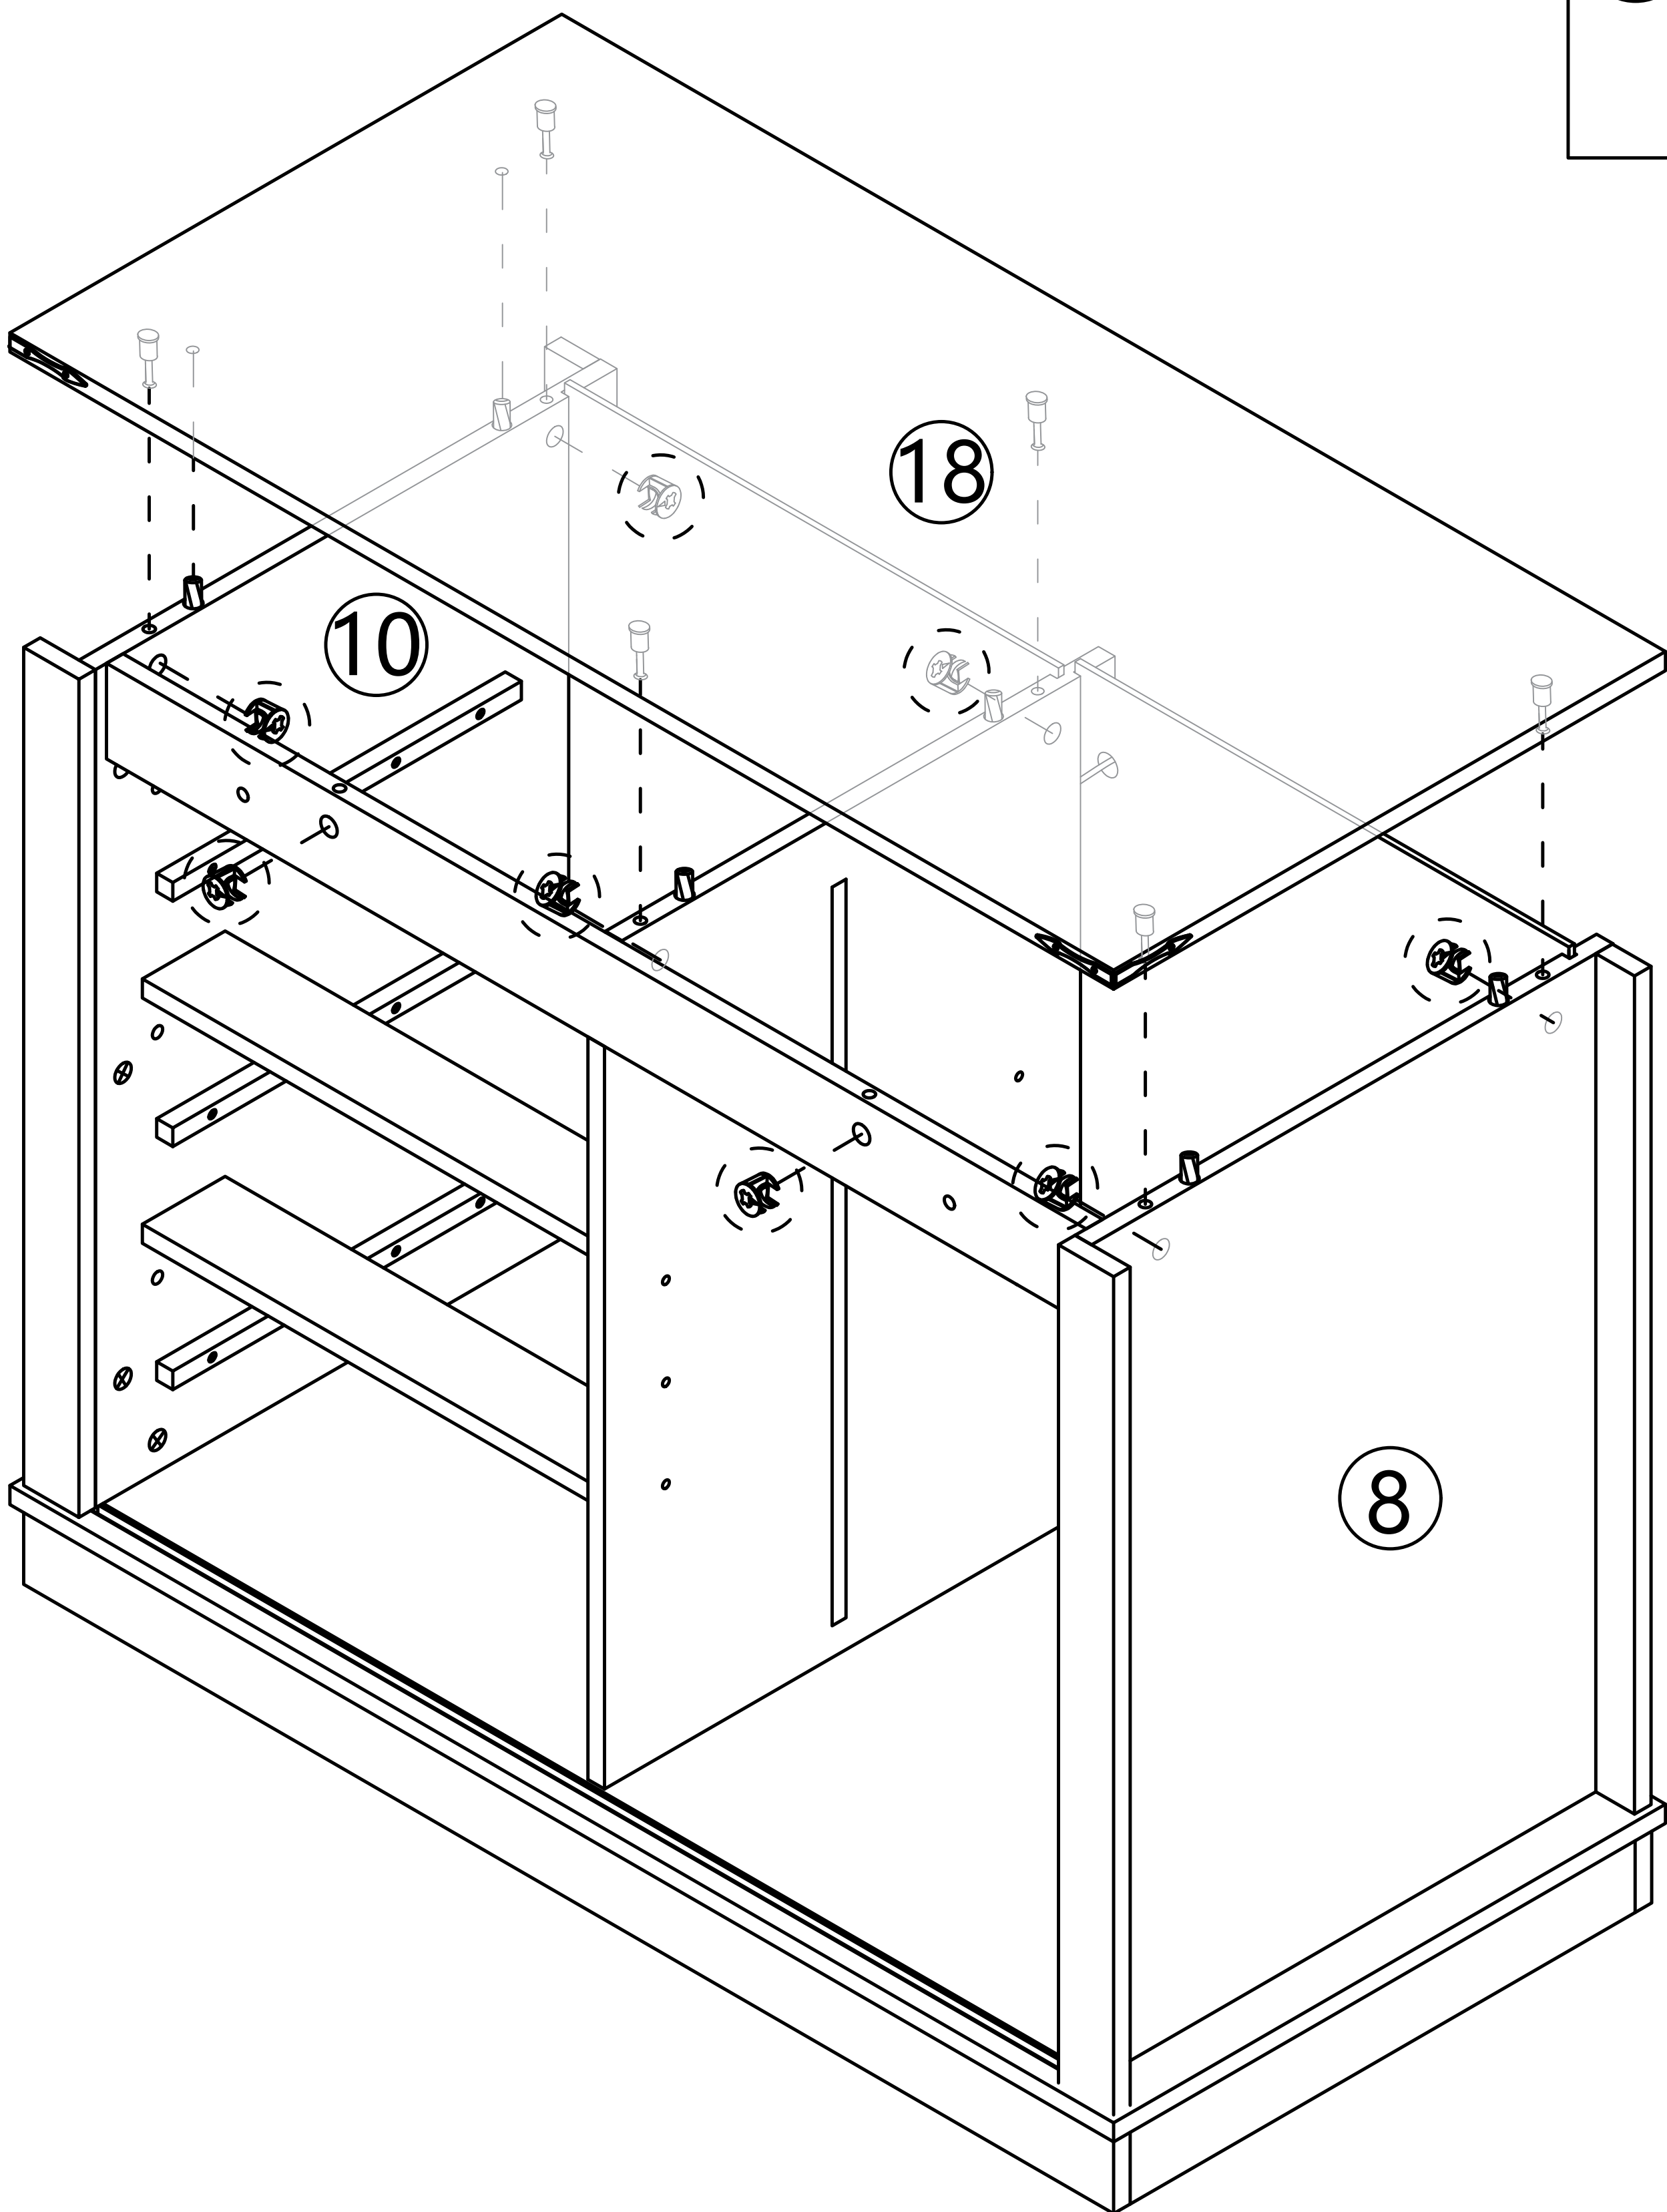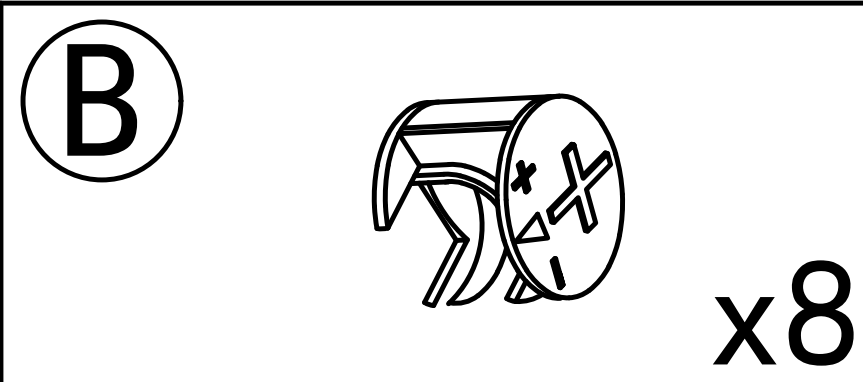


Step 28

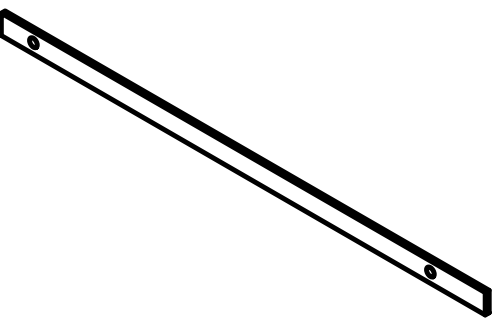
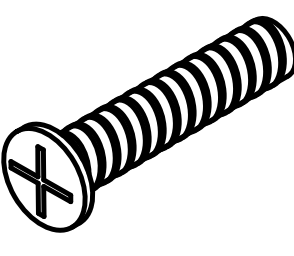
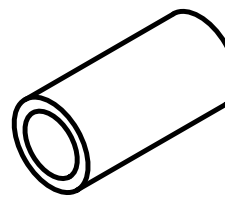
45	
H	 x2
I	 x2

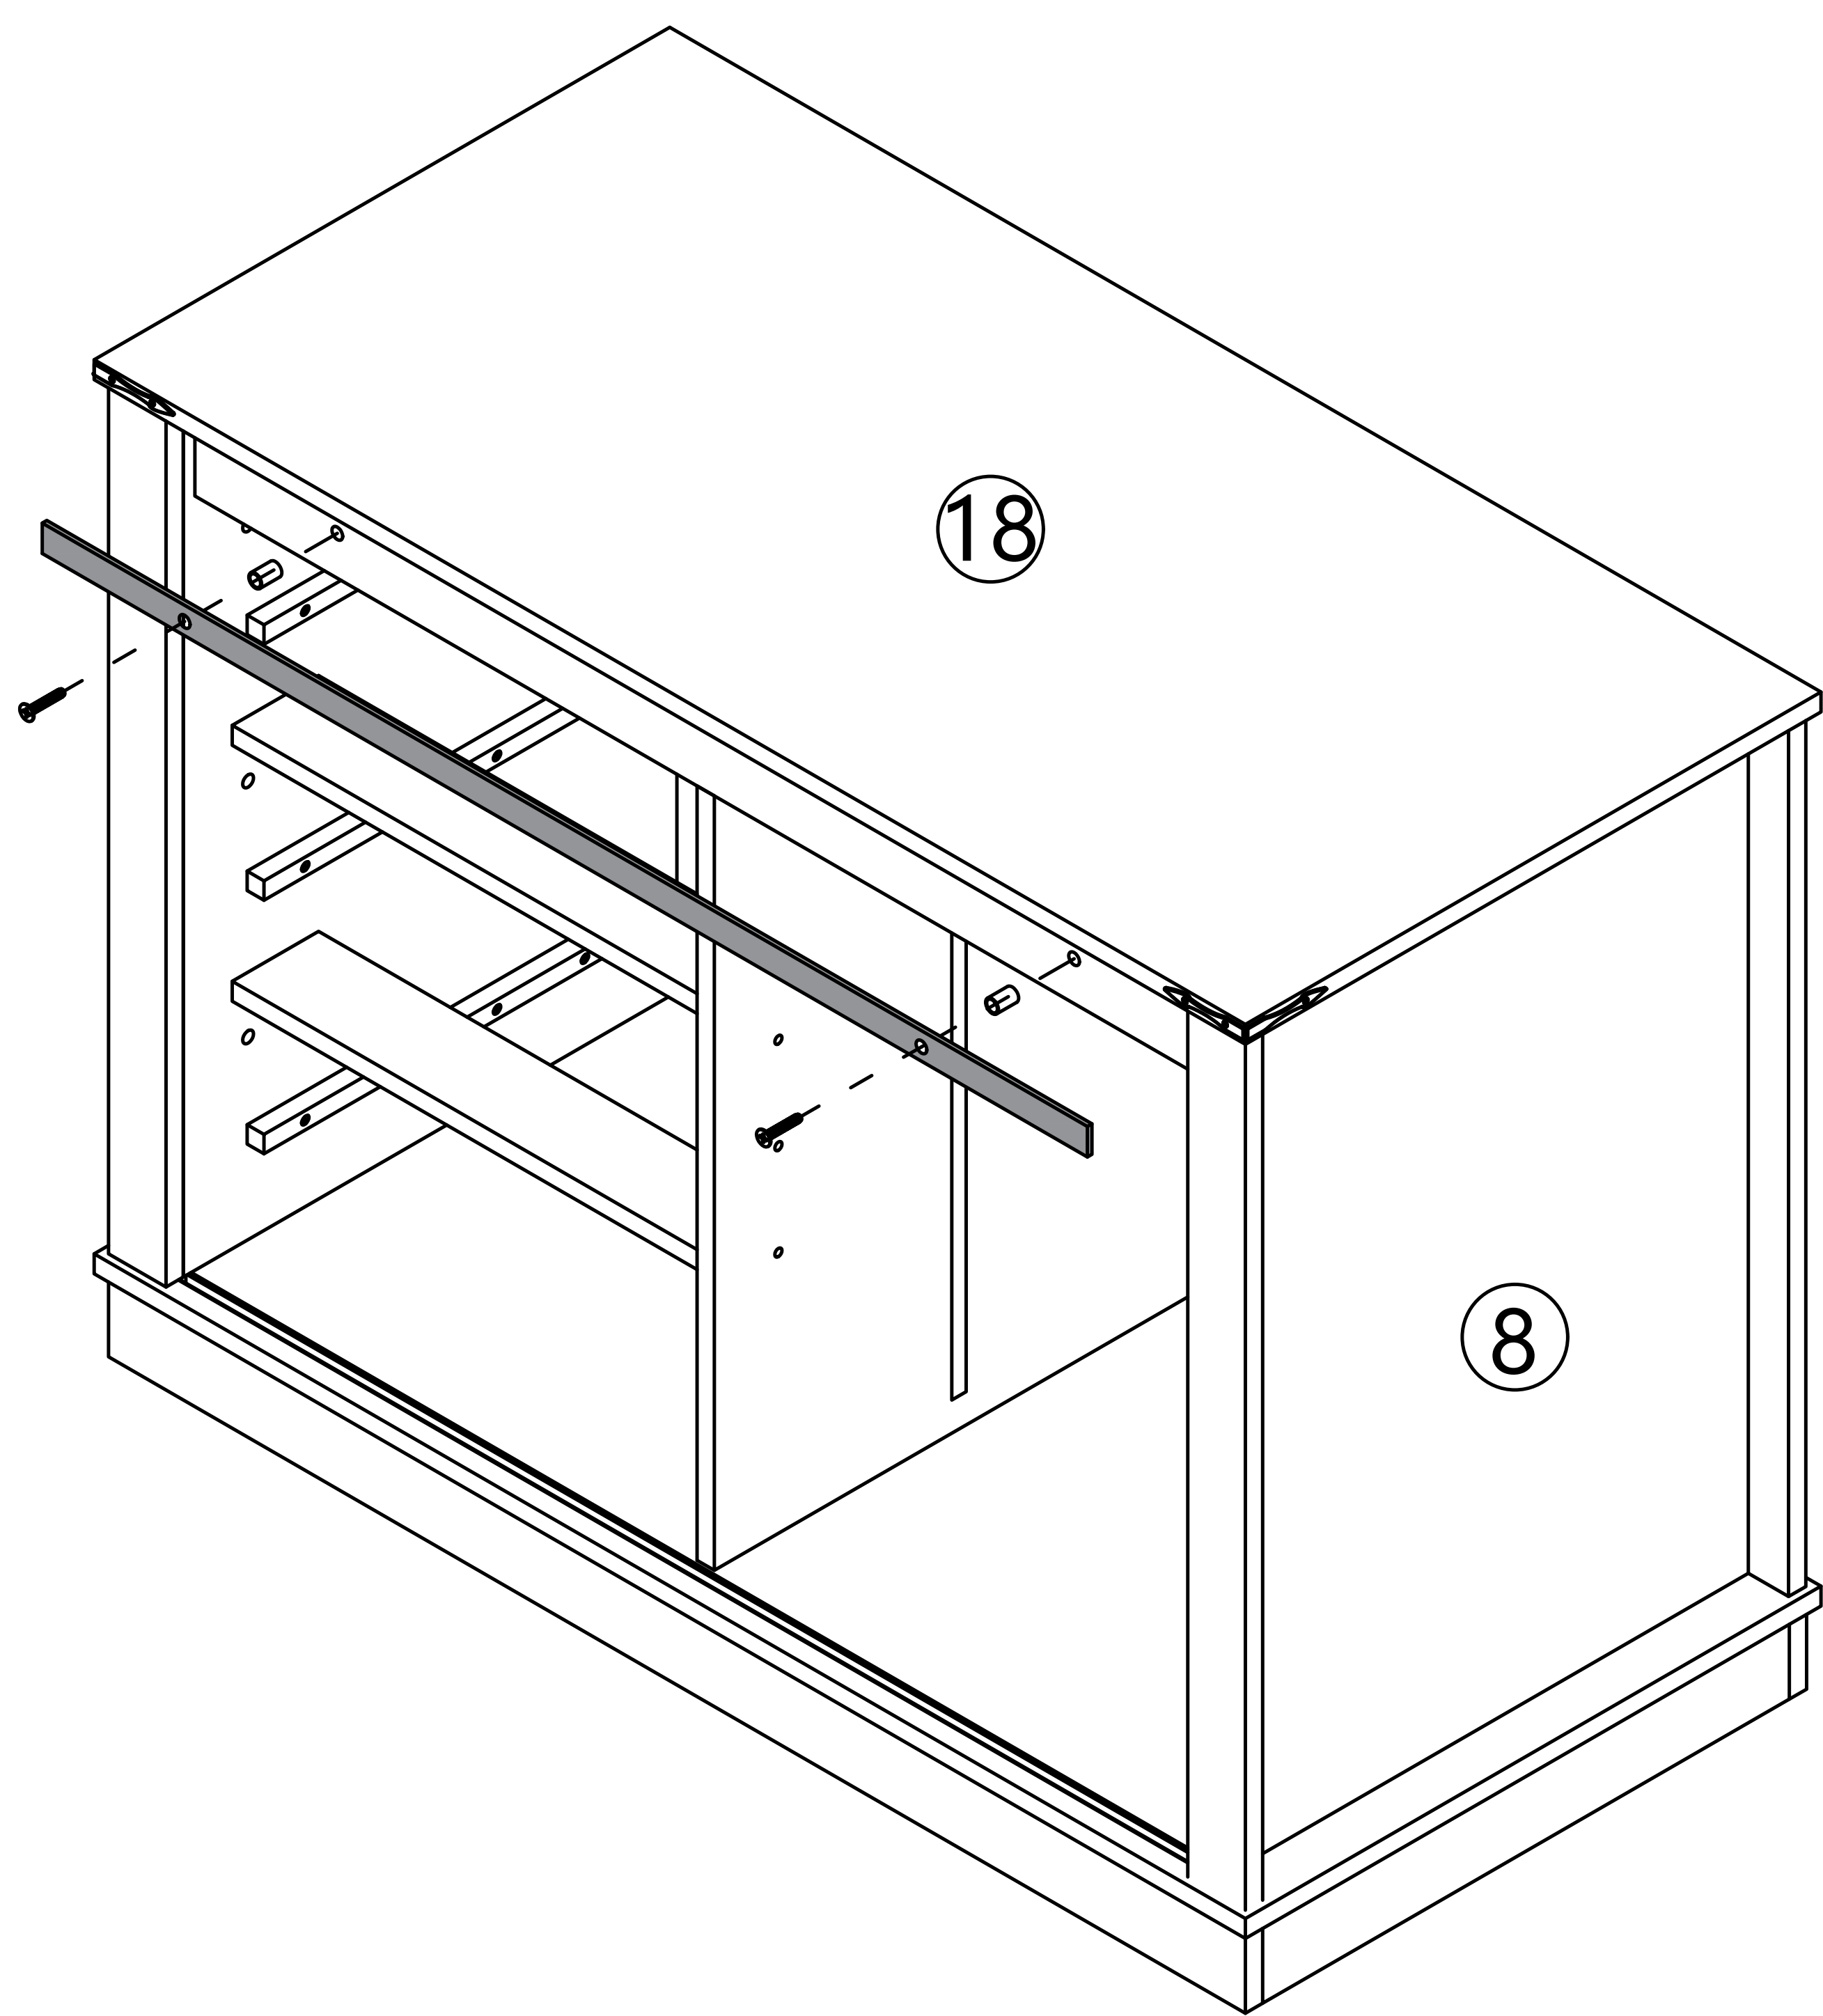


The screw is threaded through the iron guide rail, then through the iron pipe, and then installed in place


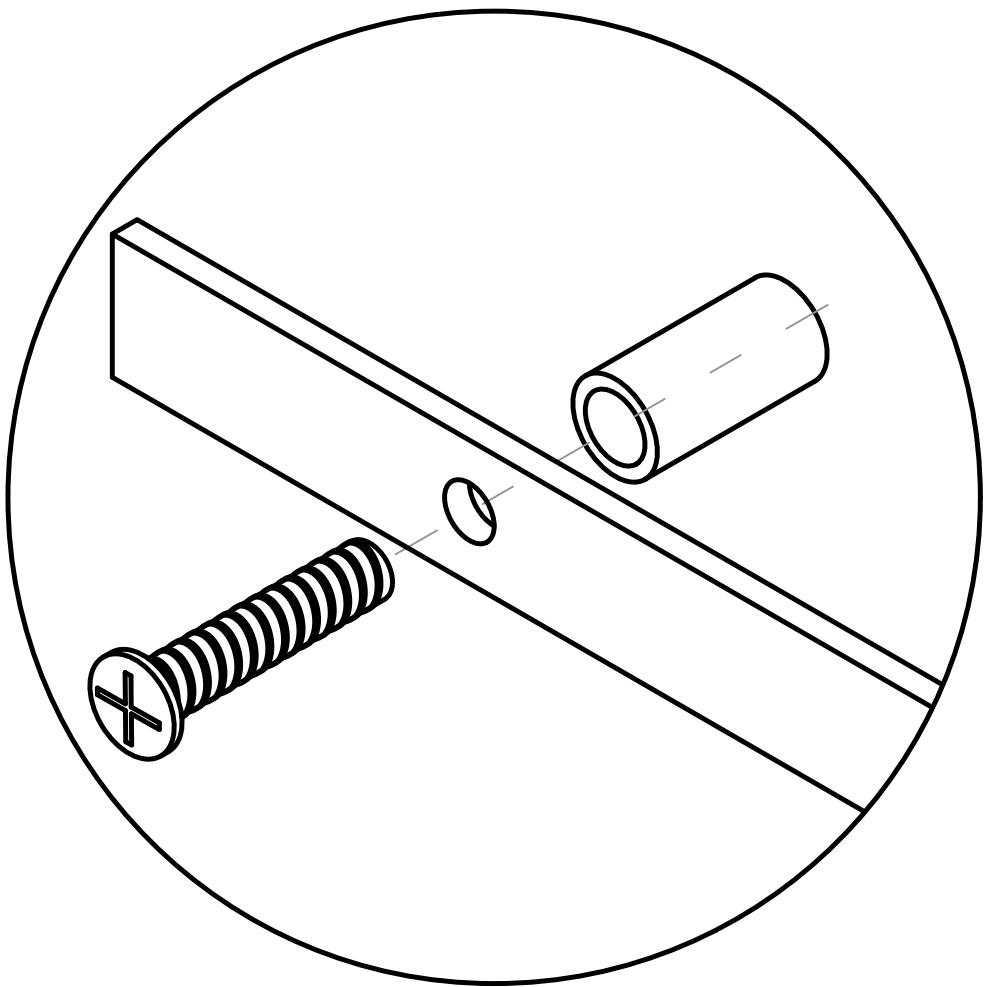


Step 29

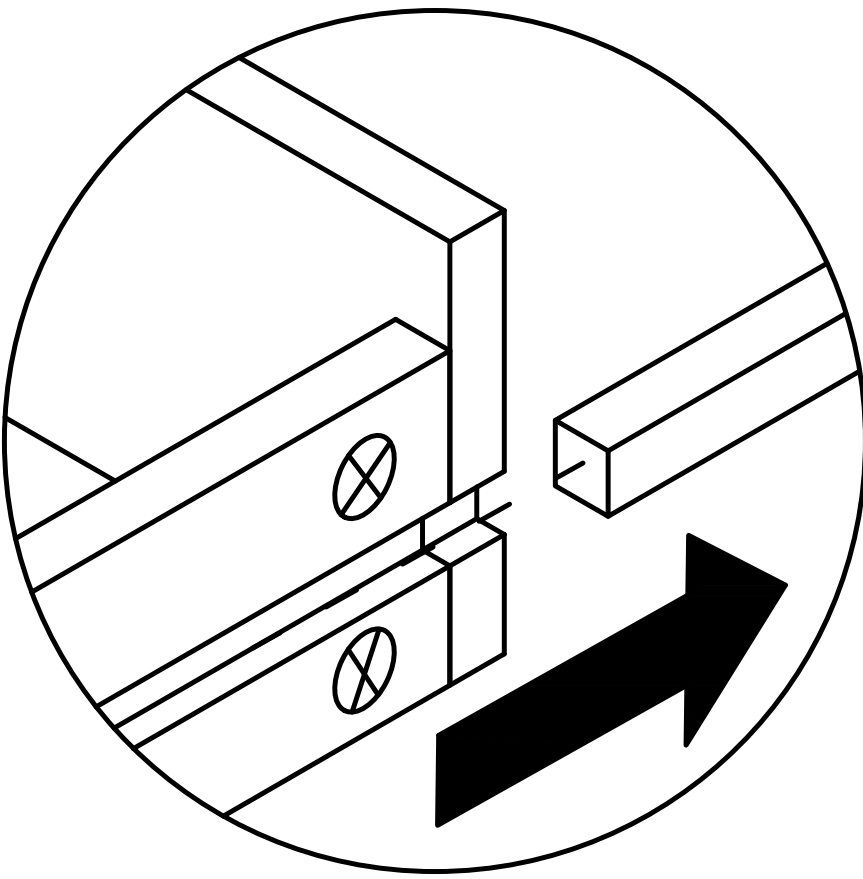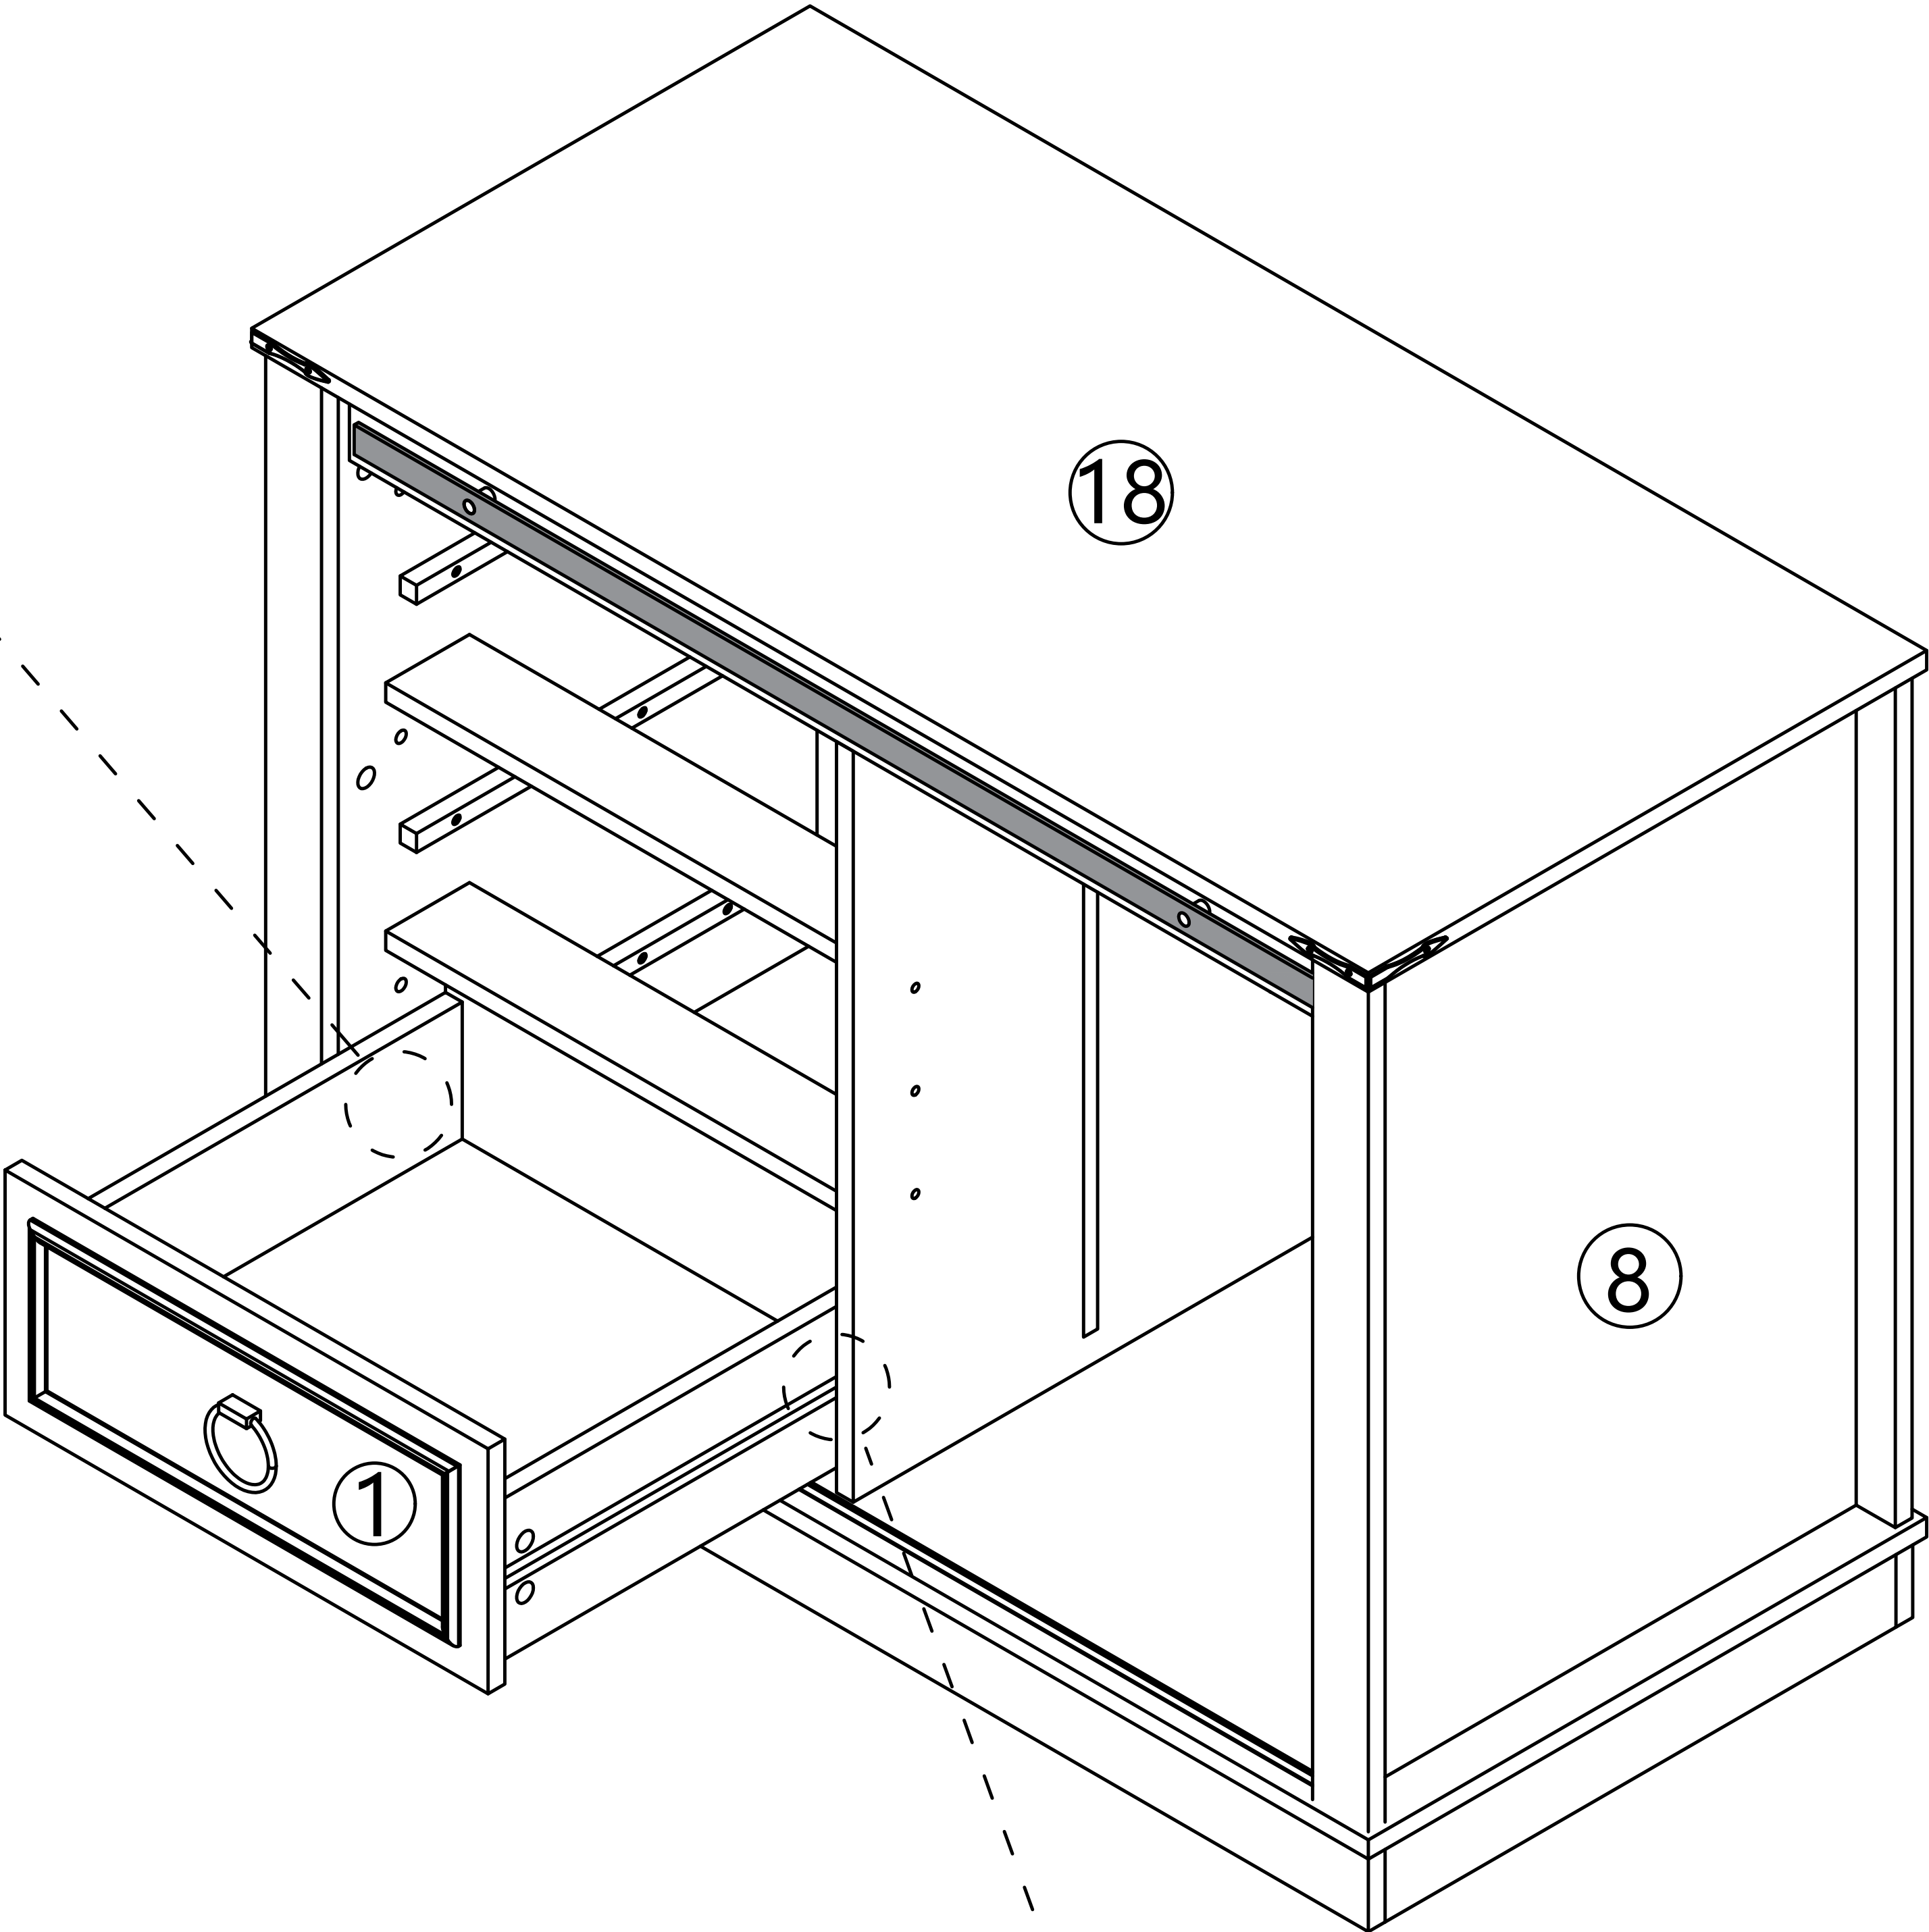
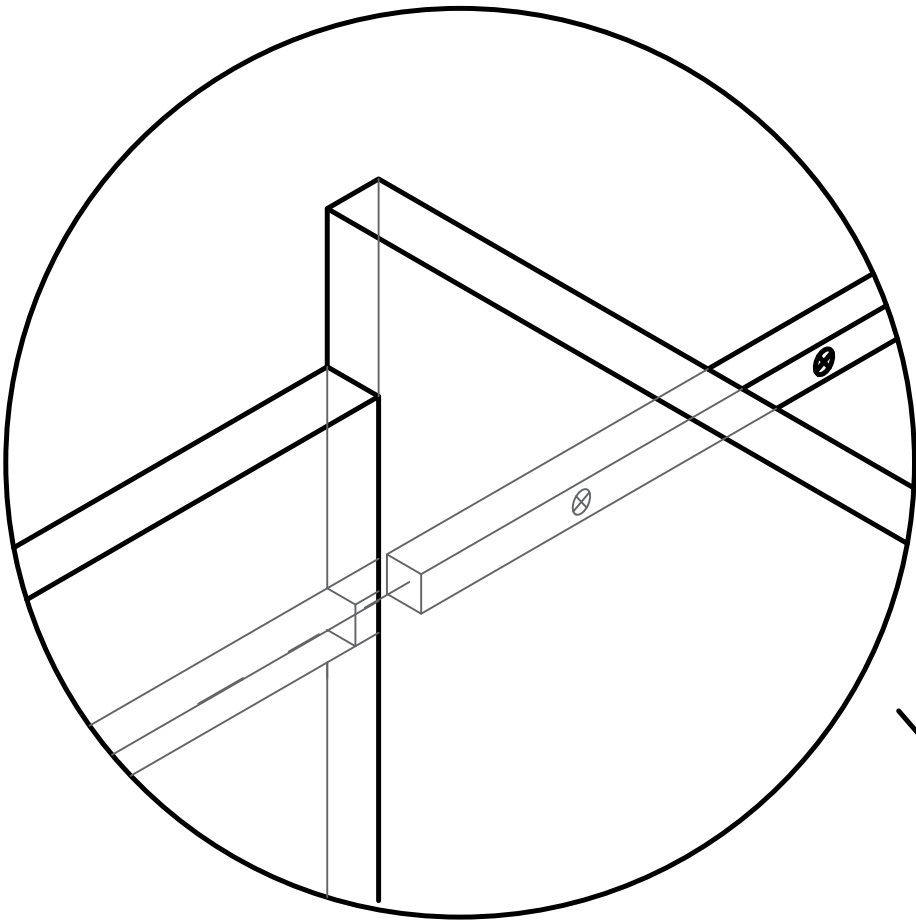


Step 30

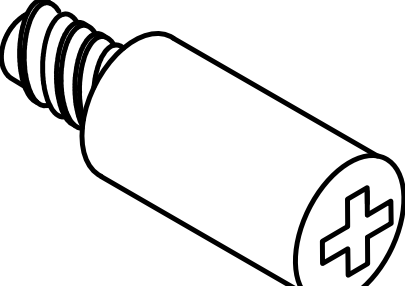L  x2

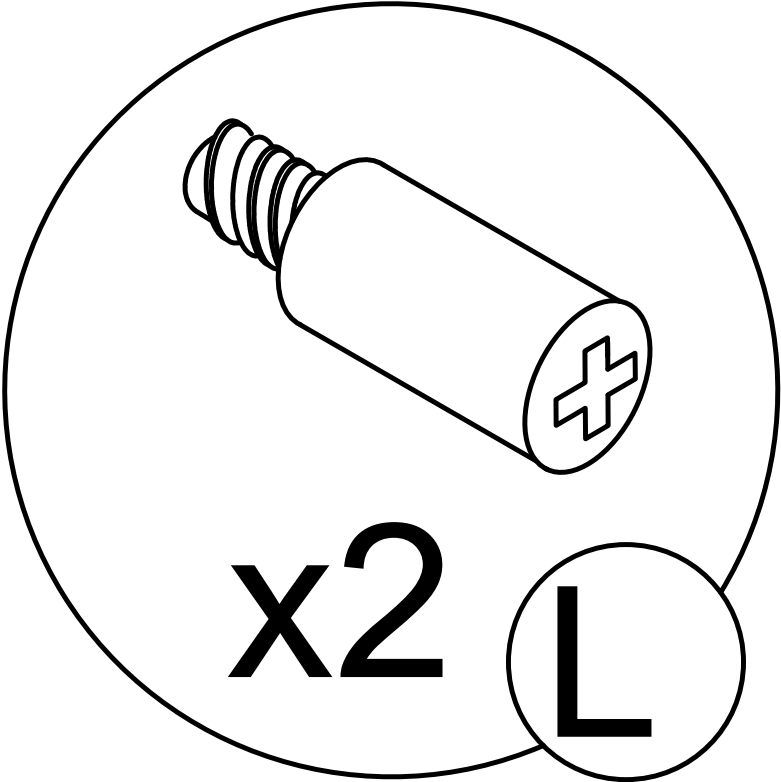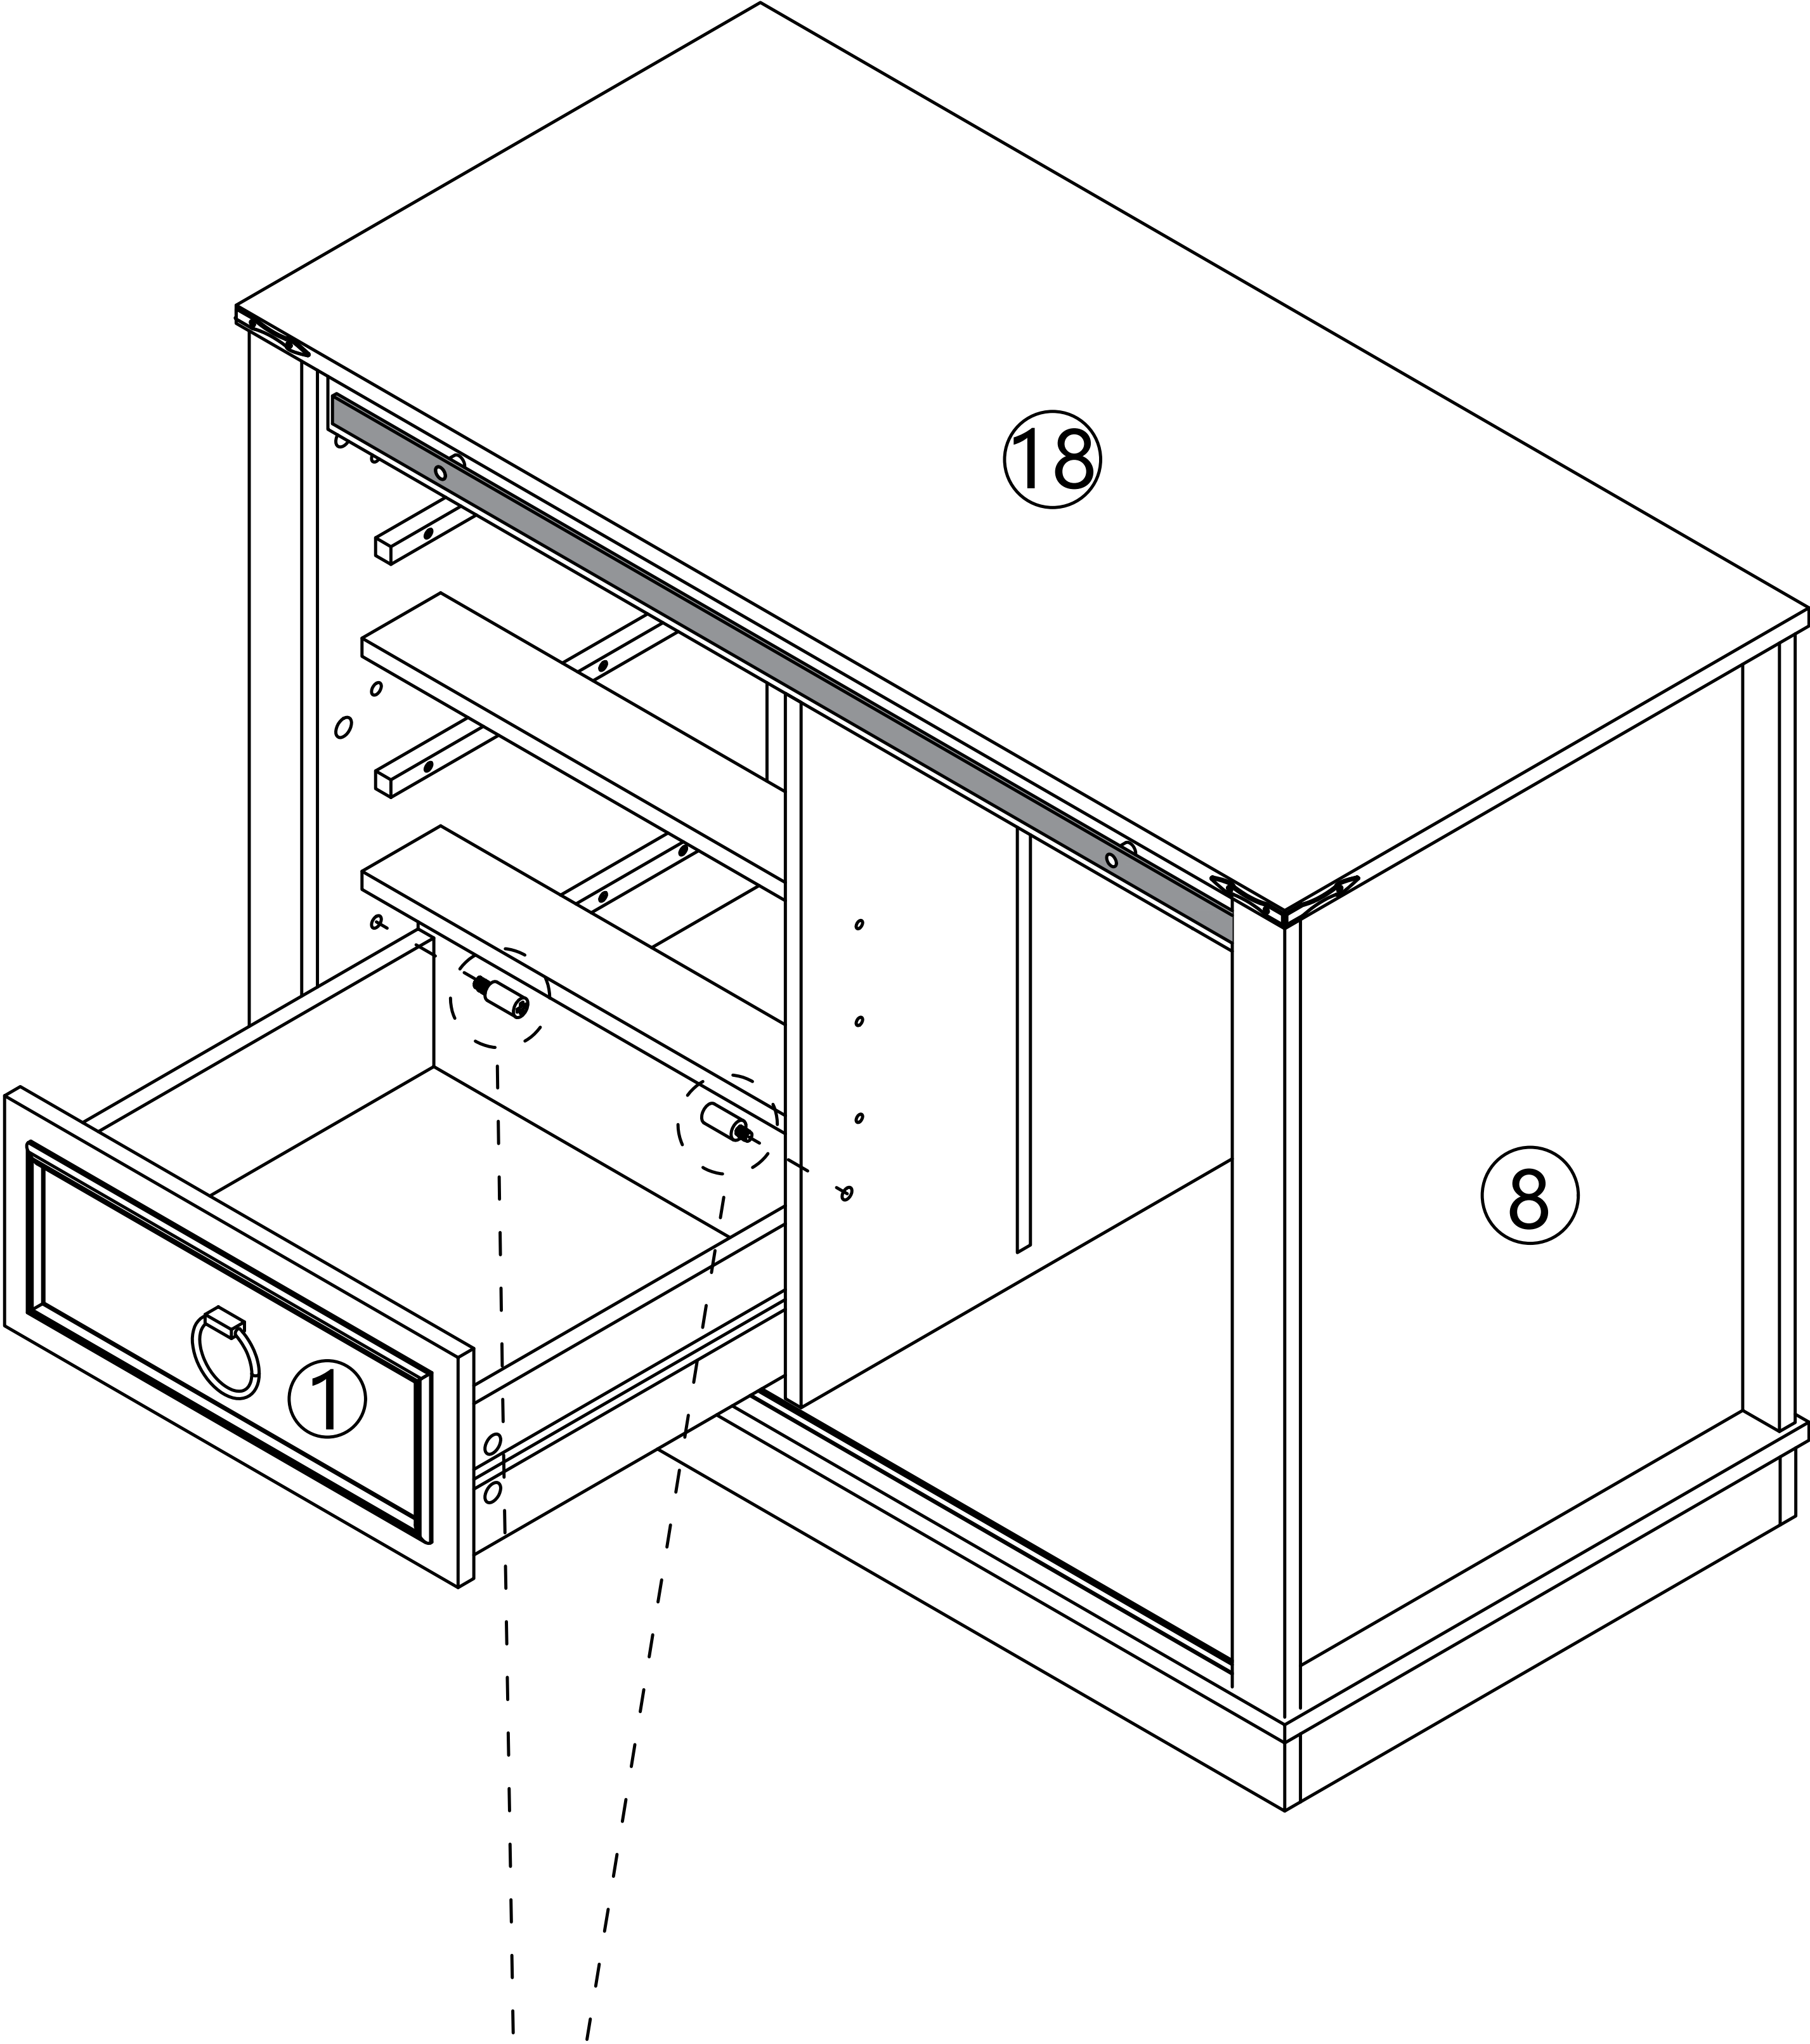



Step 31

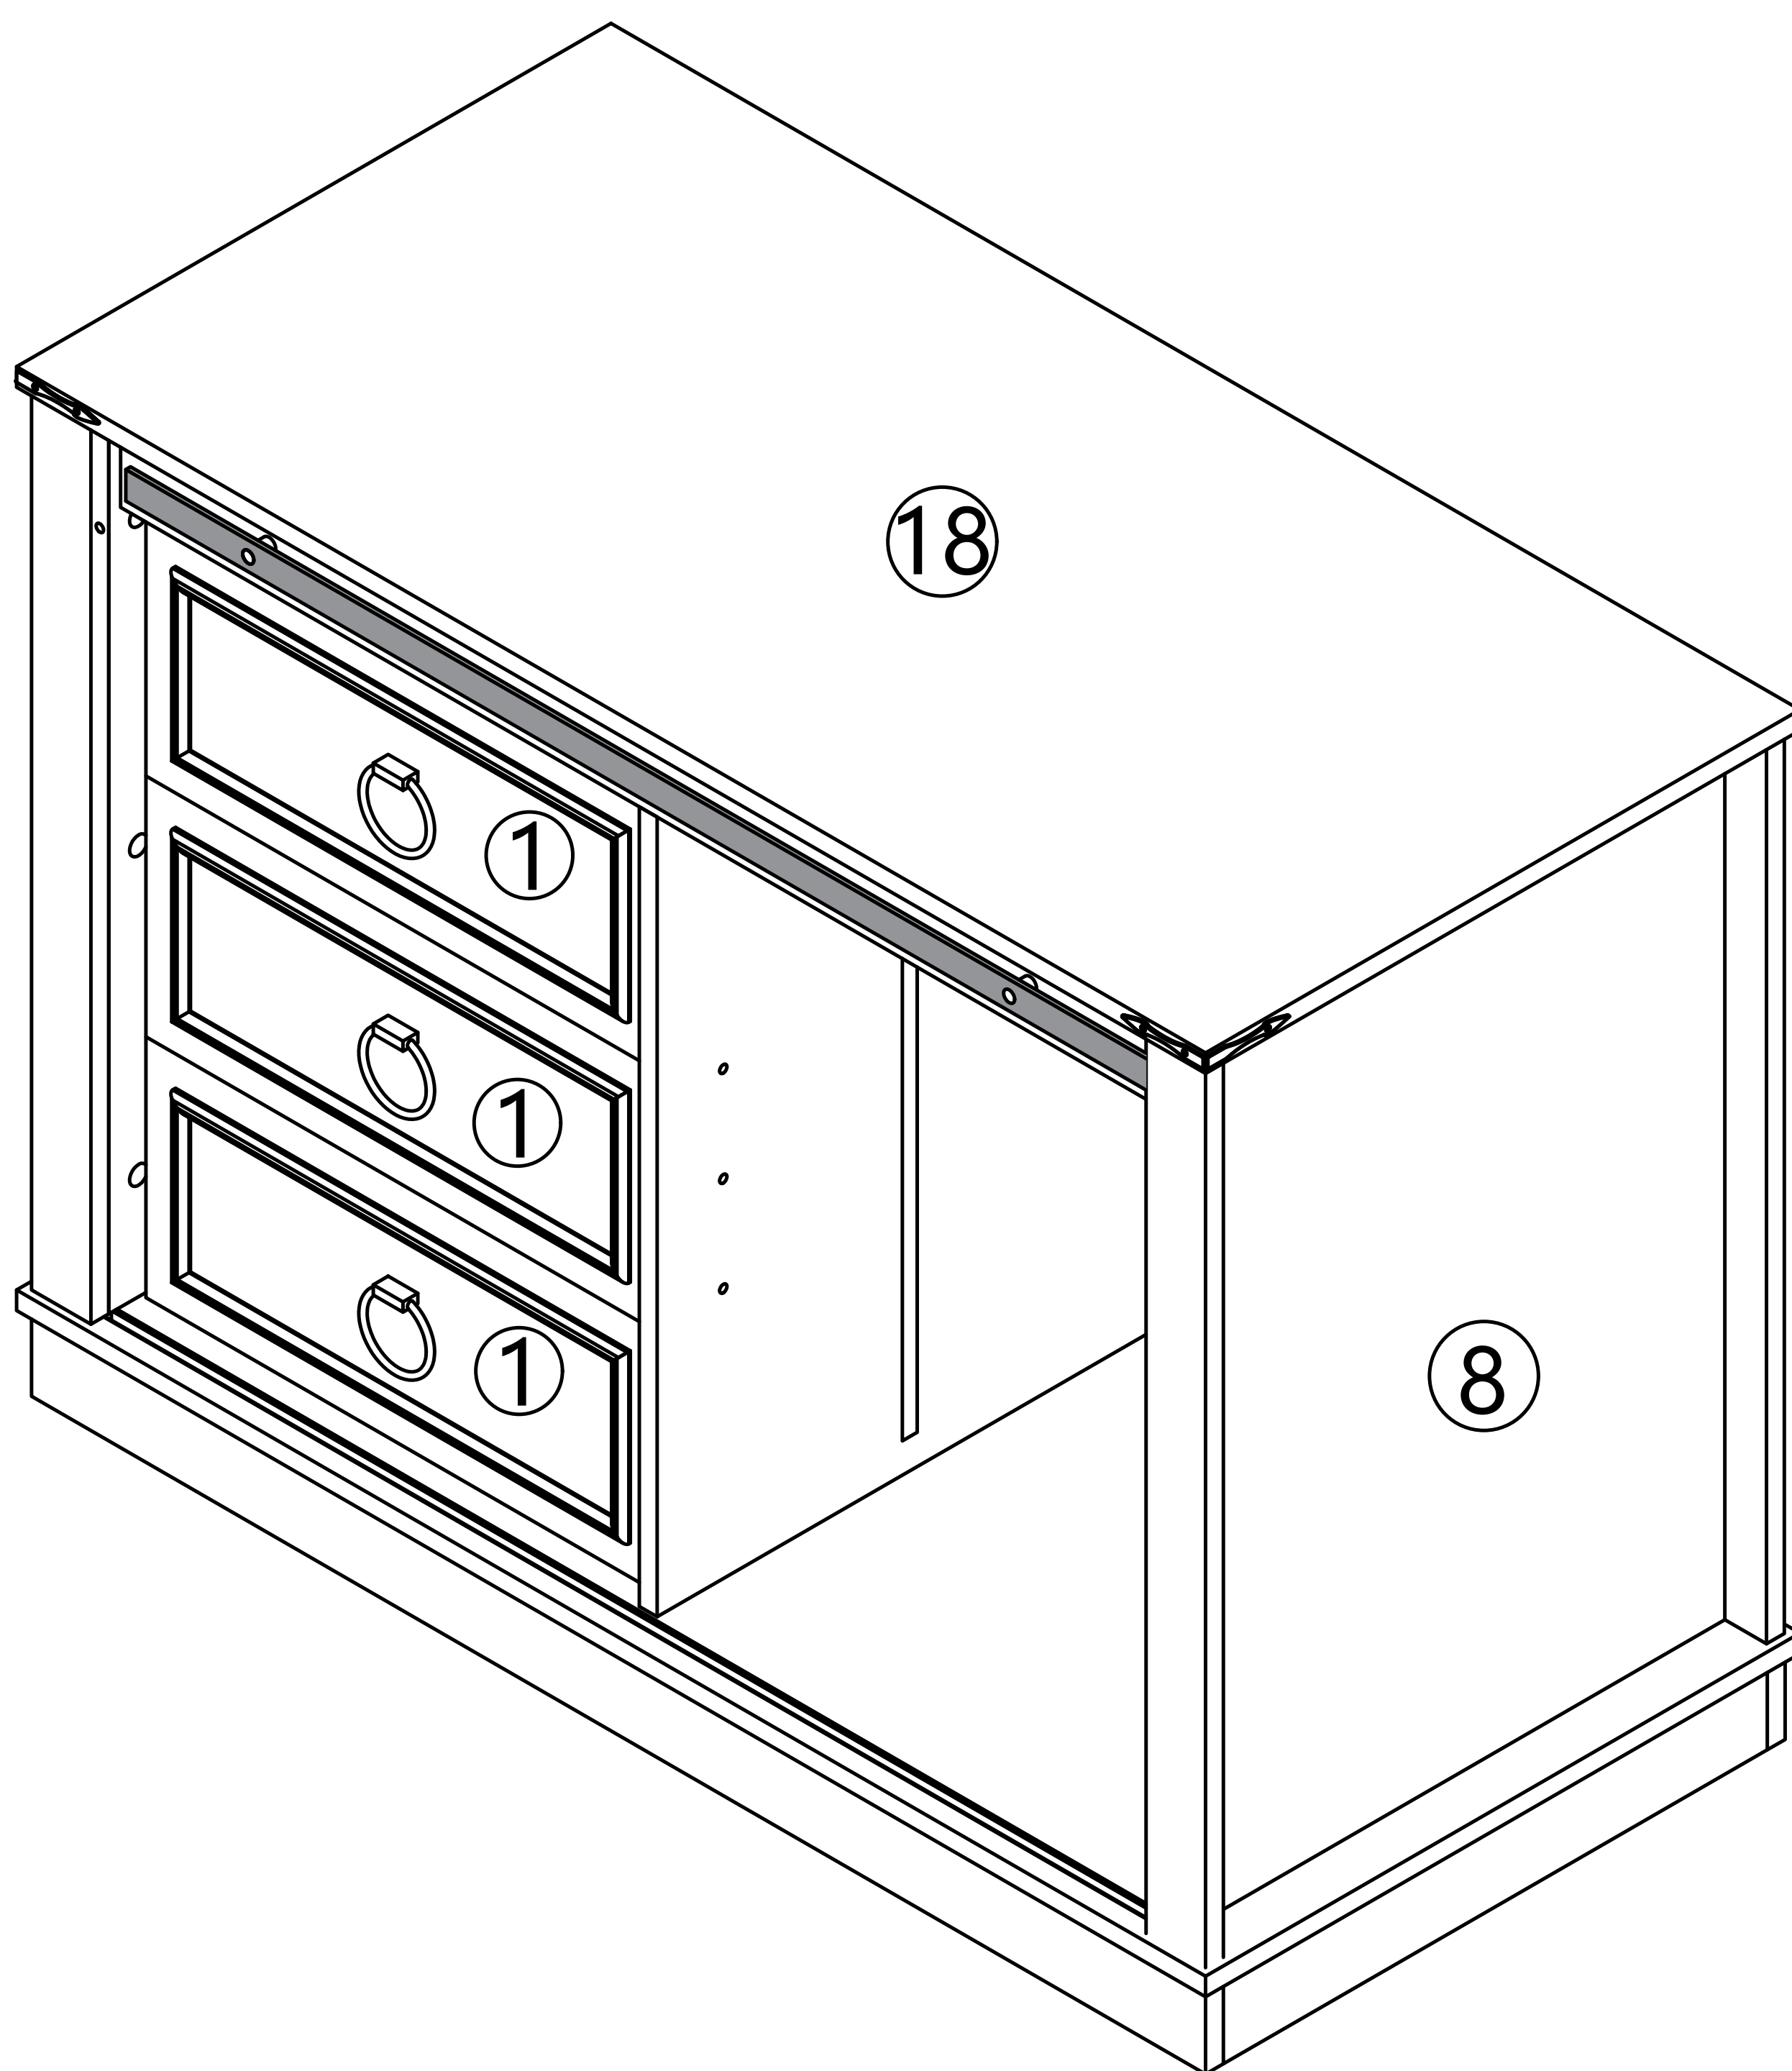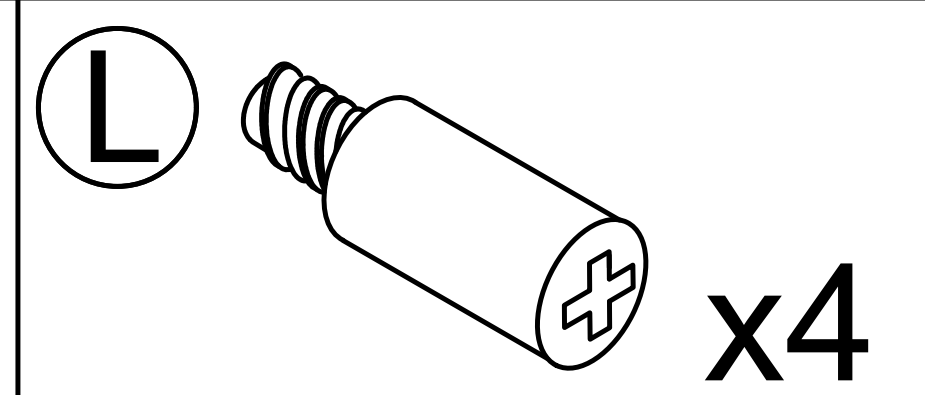


Repeat the drawer installation steps

Step 32

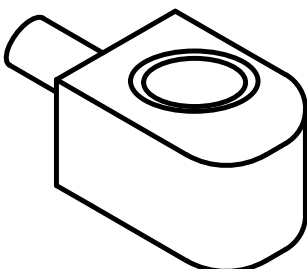M  x4

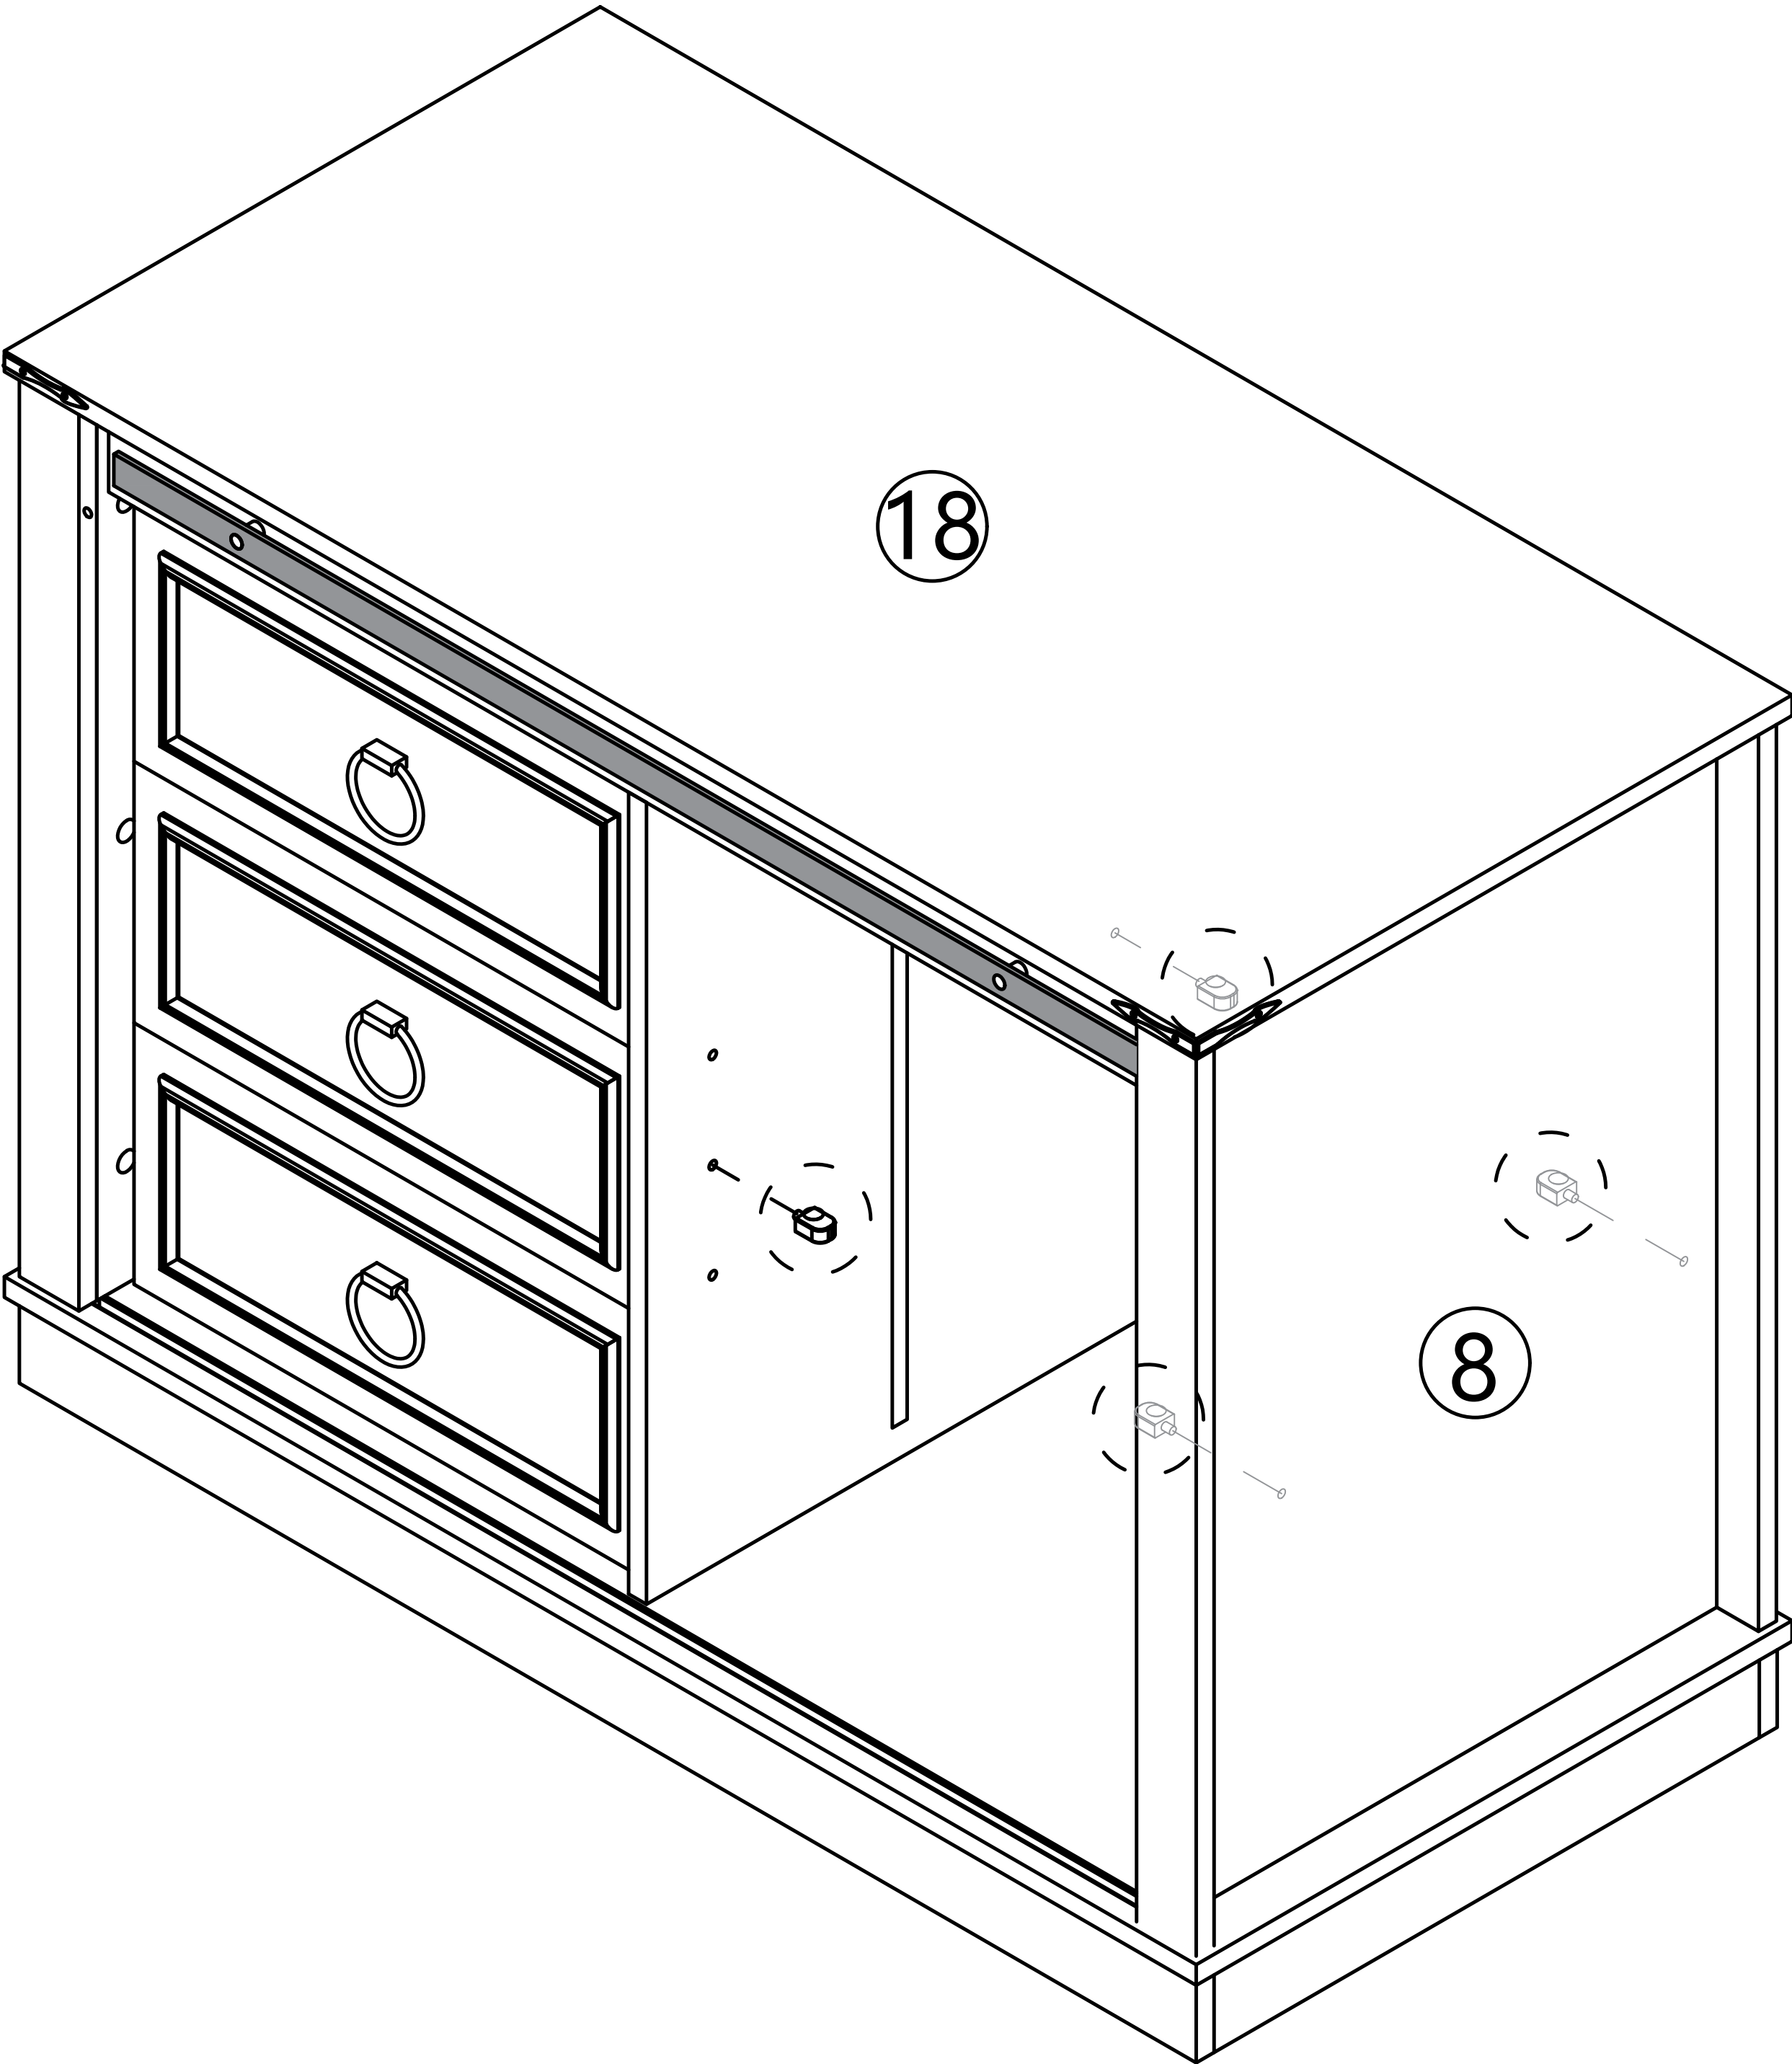




Step 33

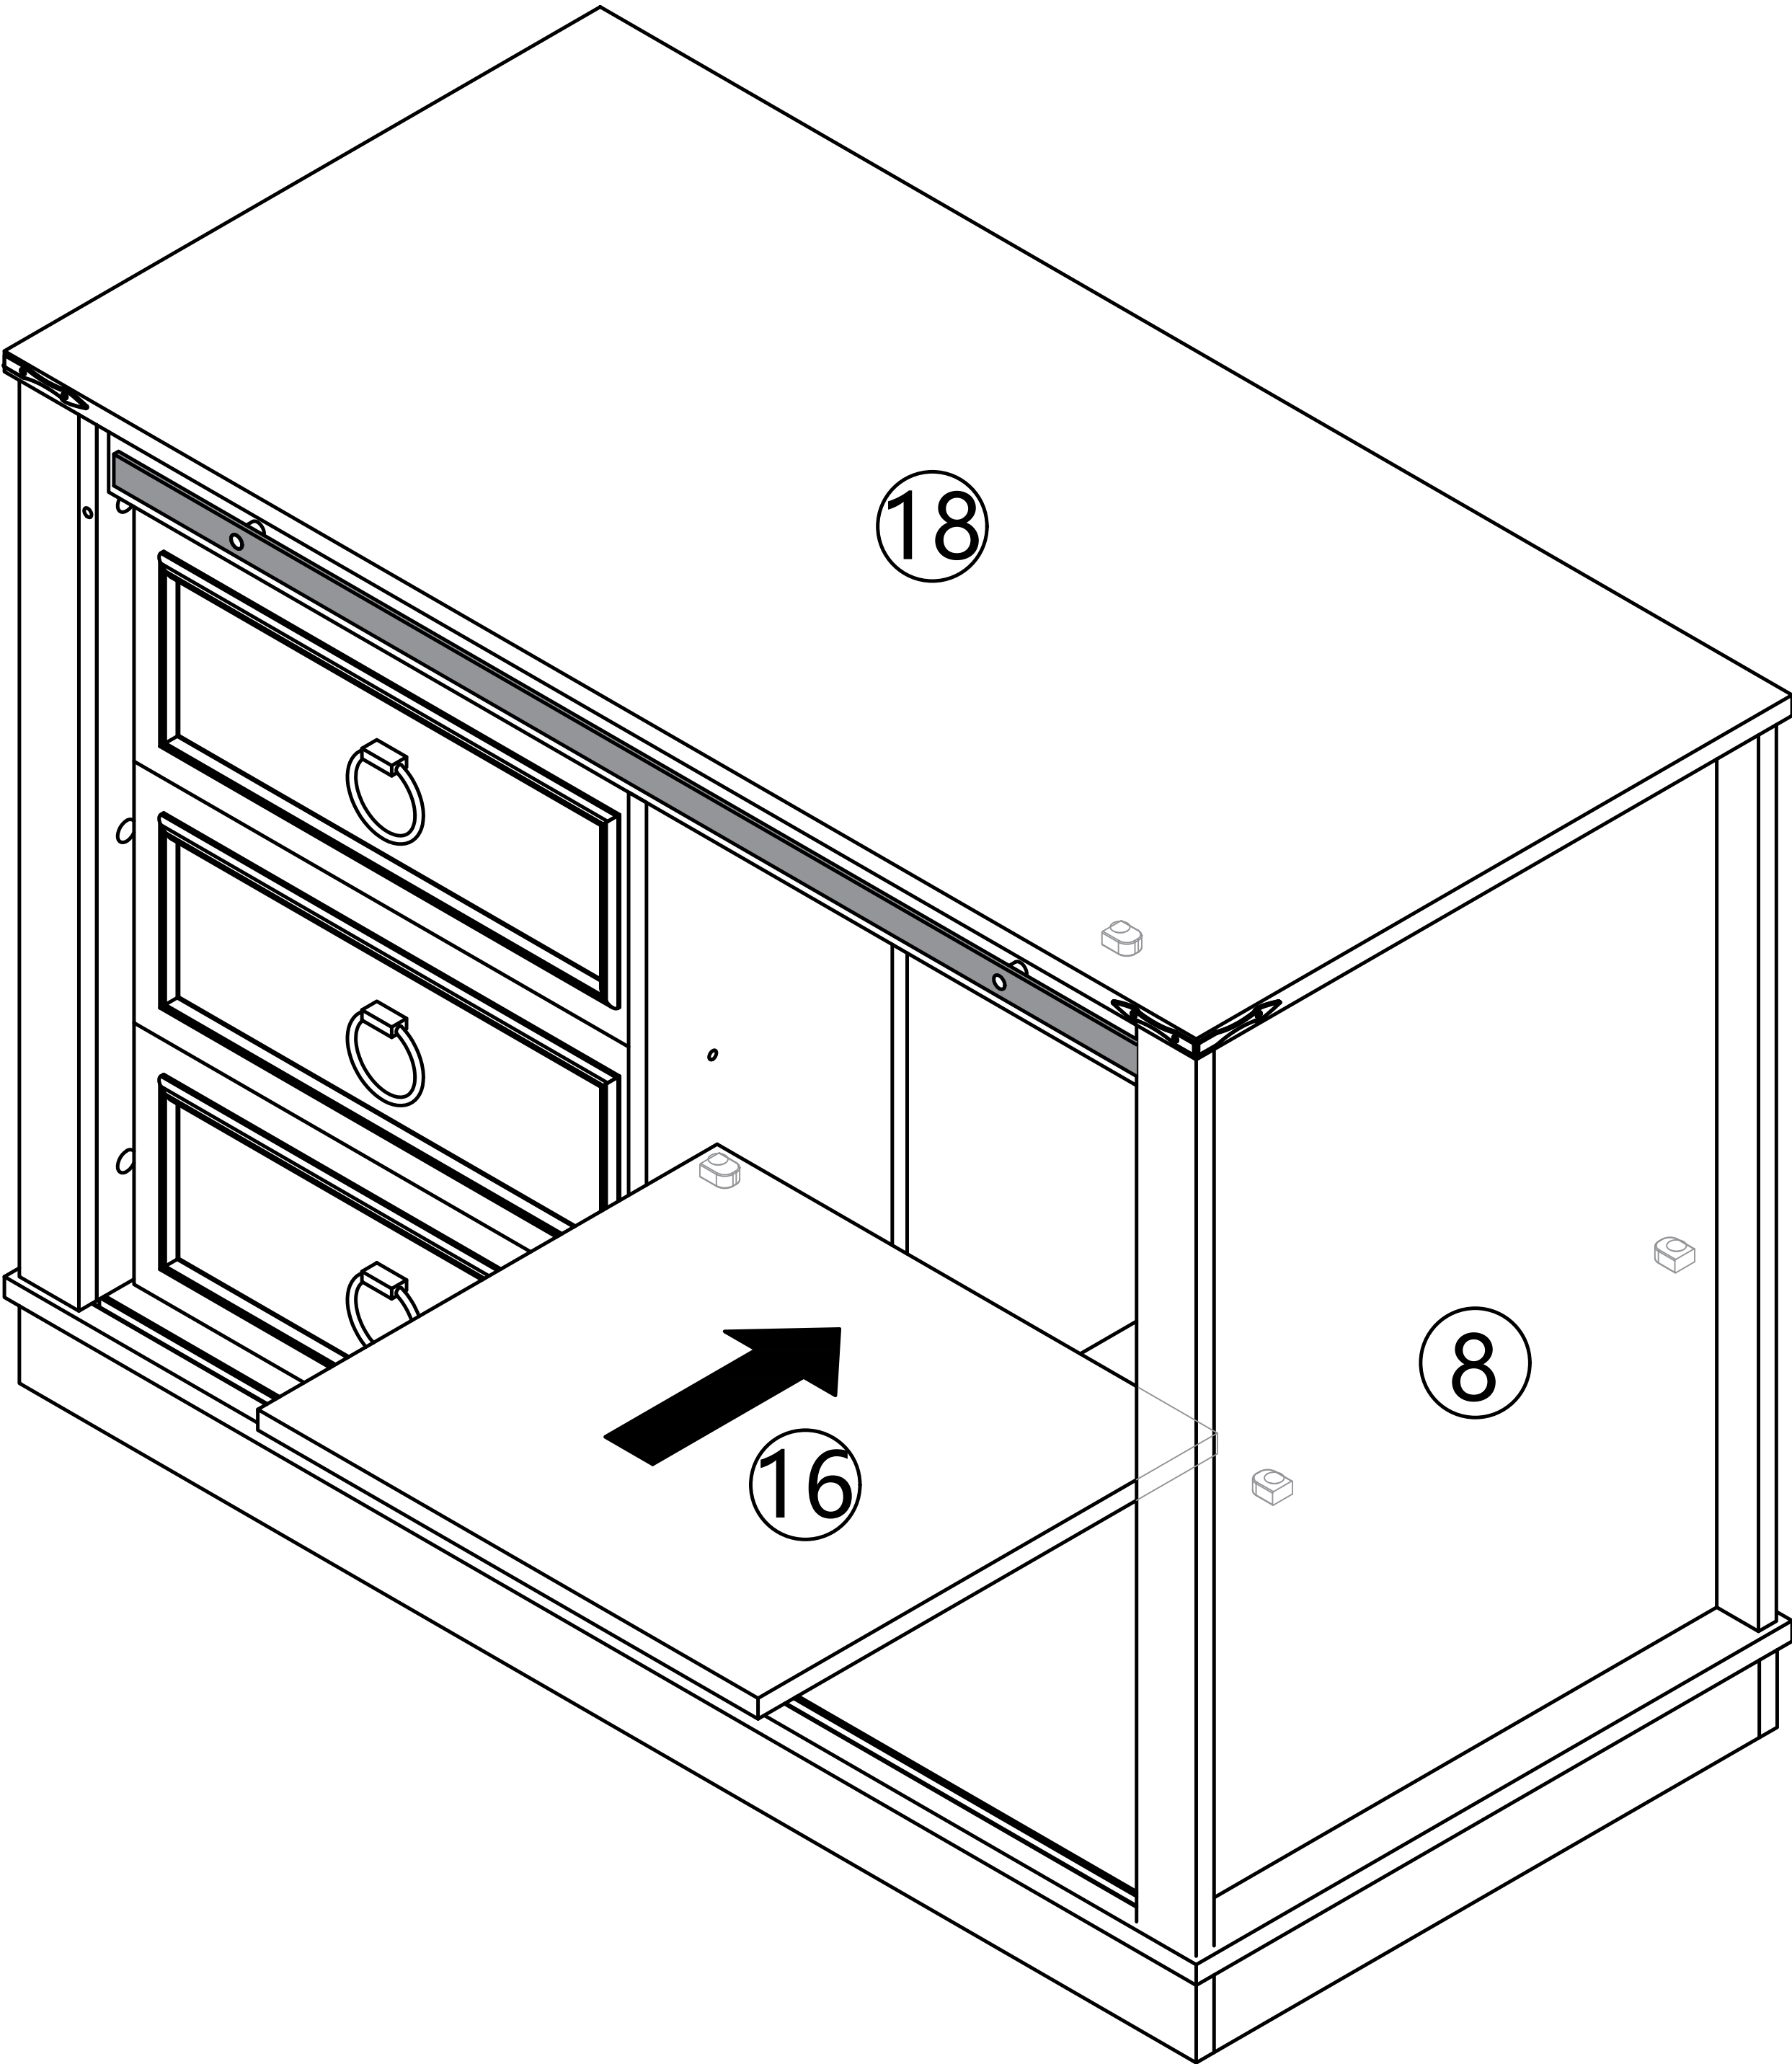




Step 34

1 x2


Hang the guide rail hook horizontally on the guide rail iron bar and make it vertical

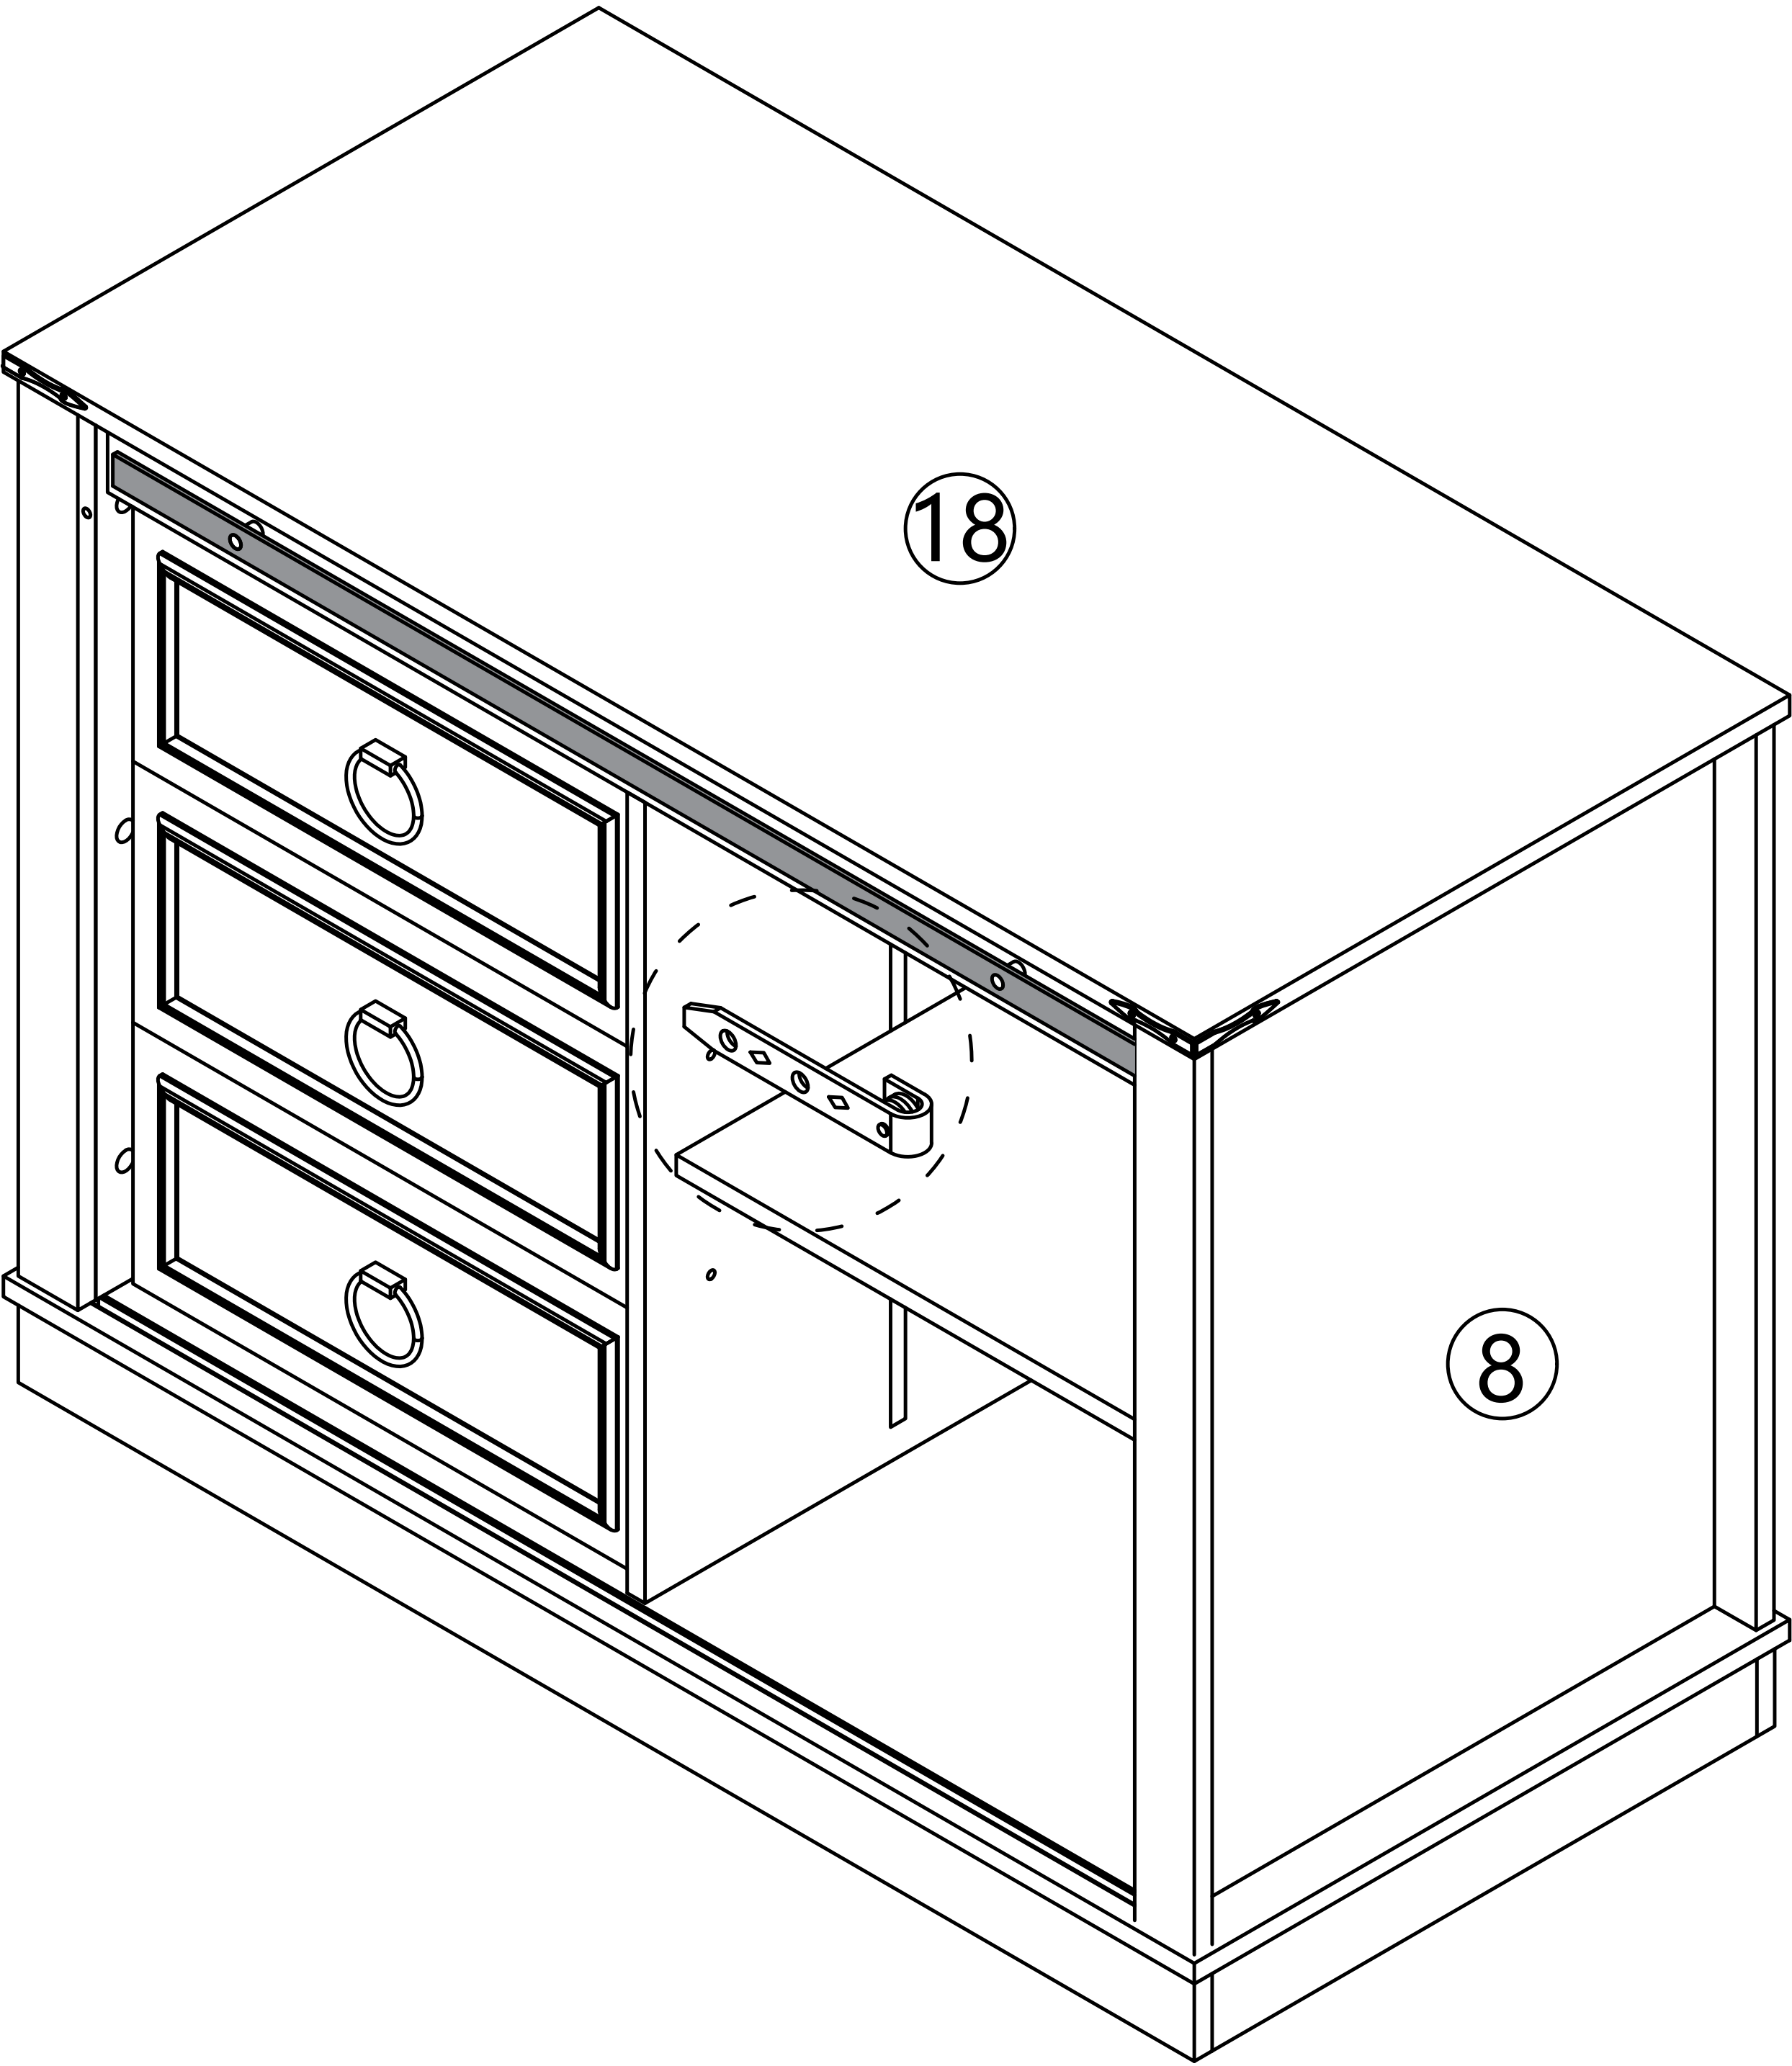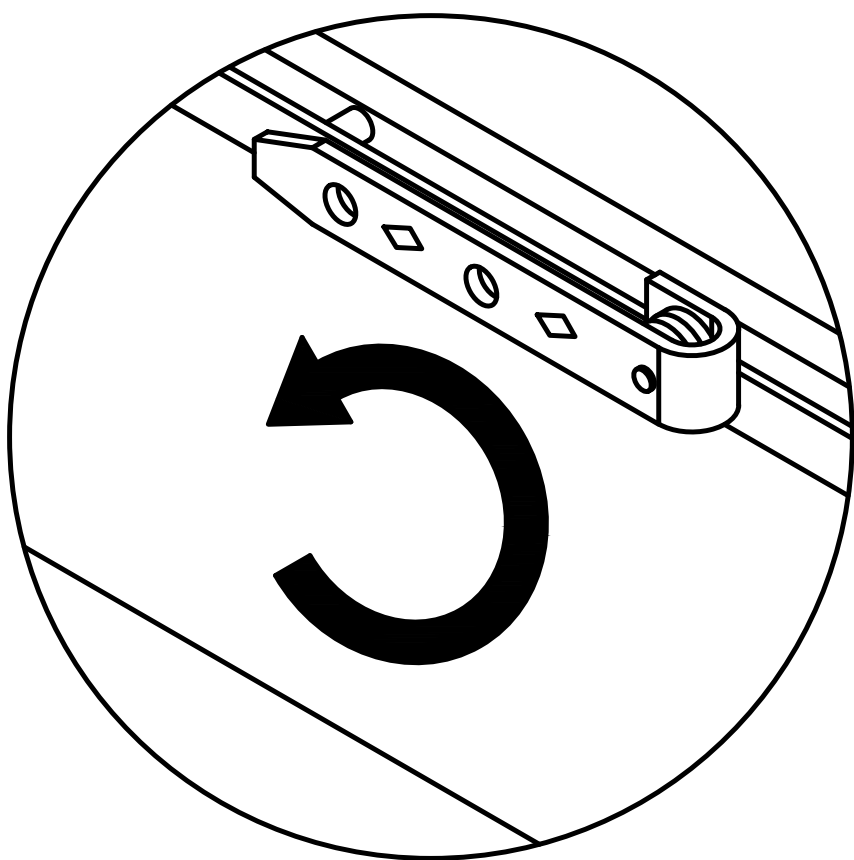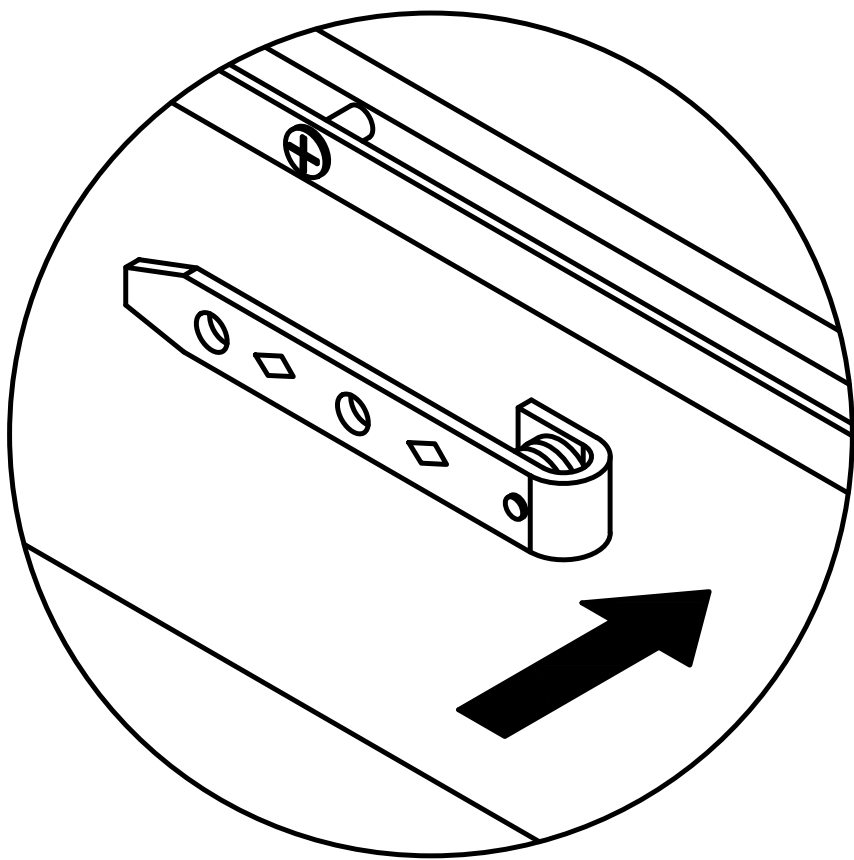

Step 35

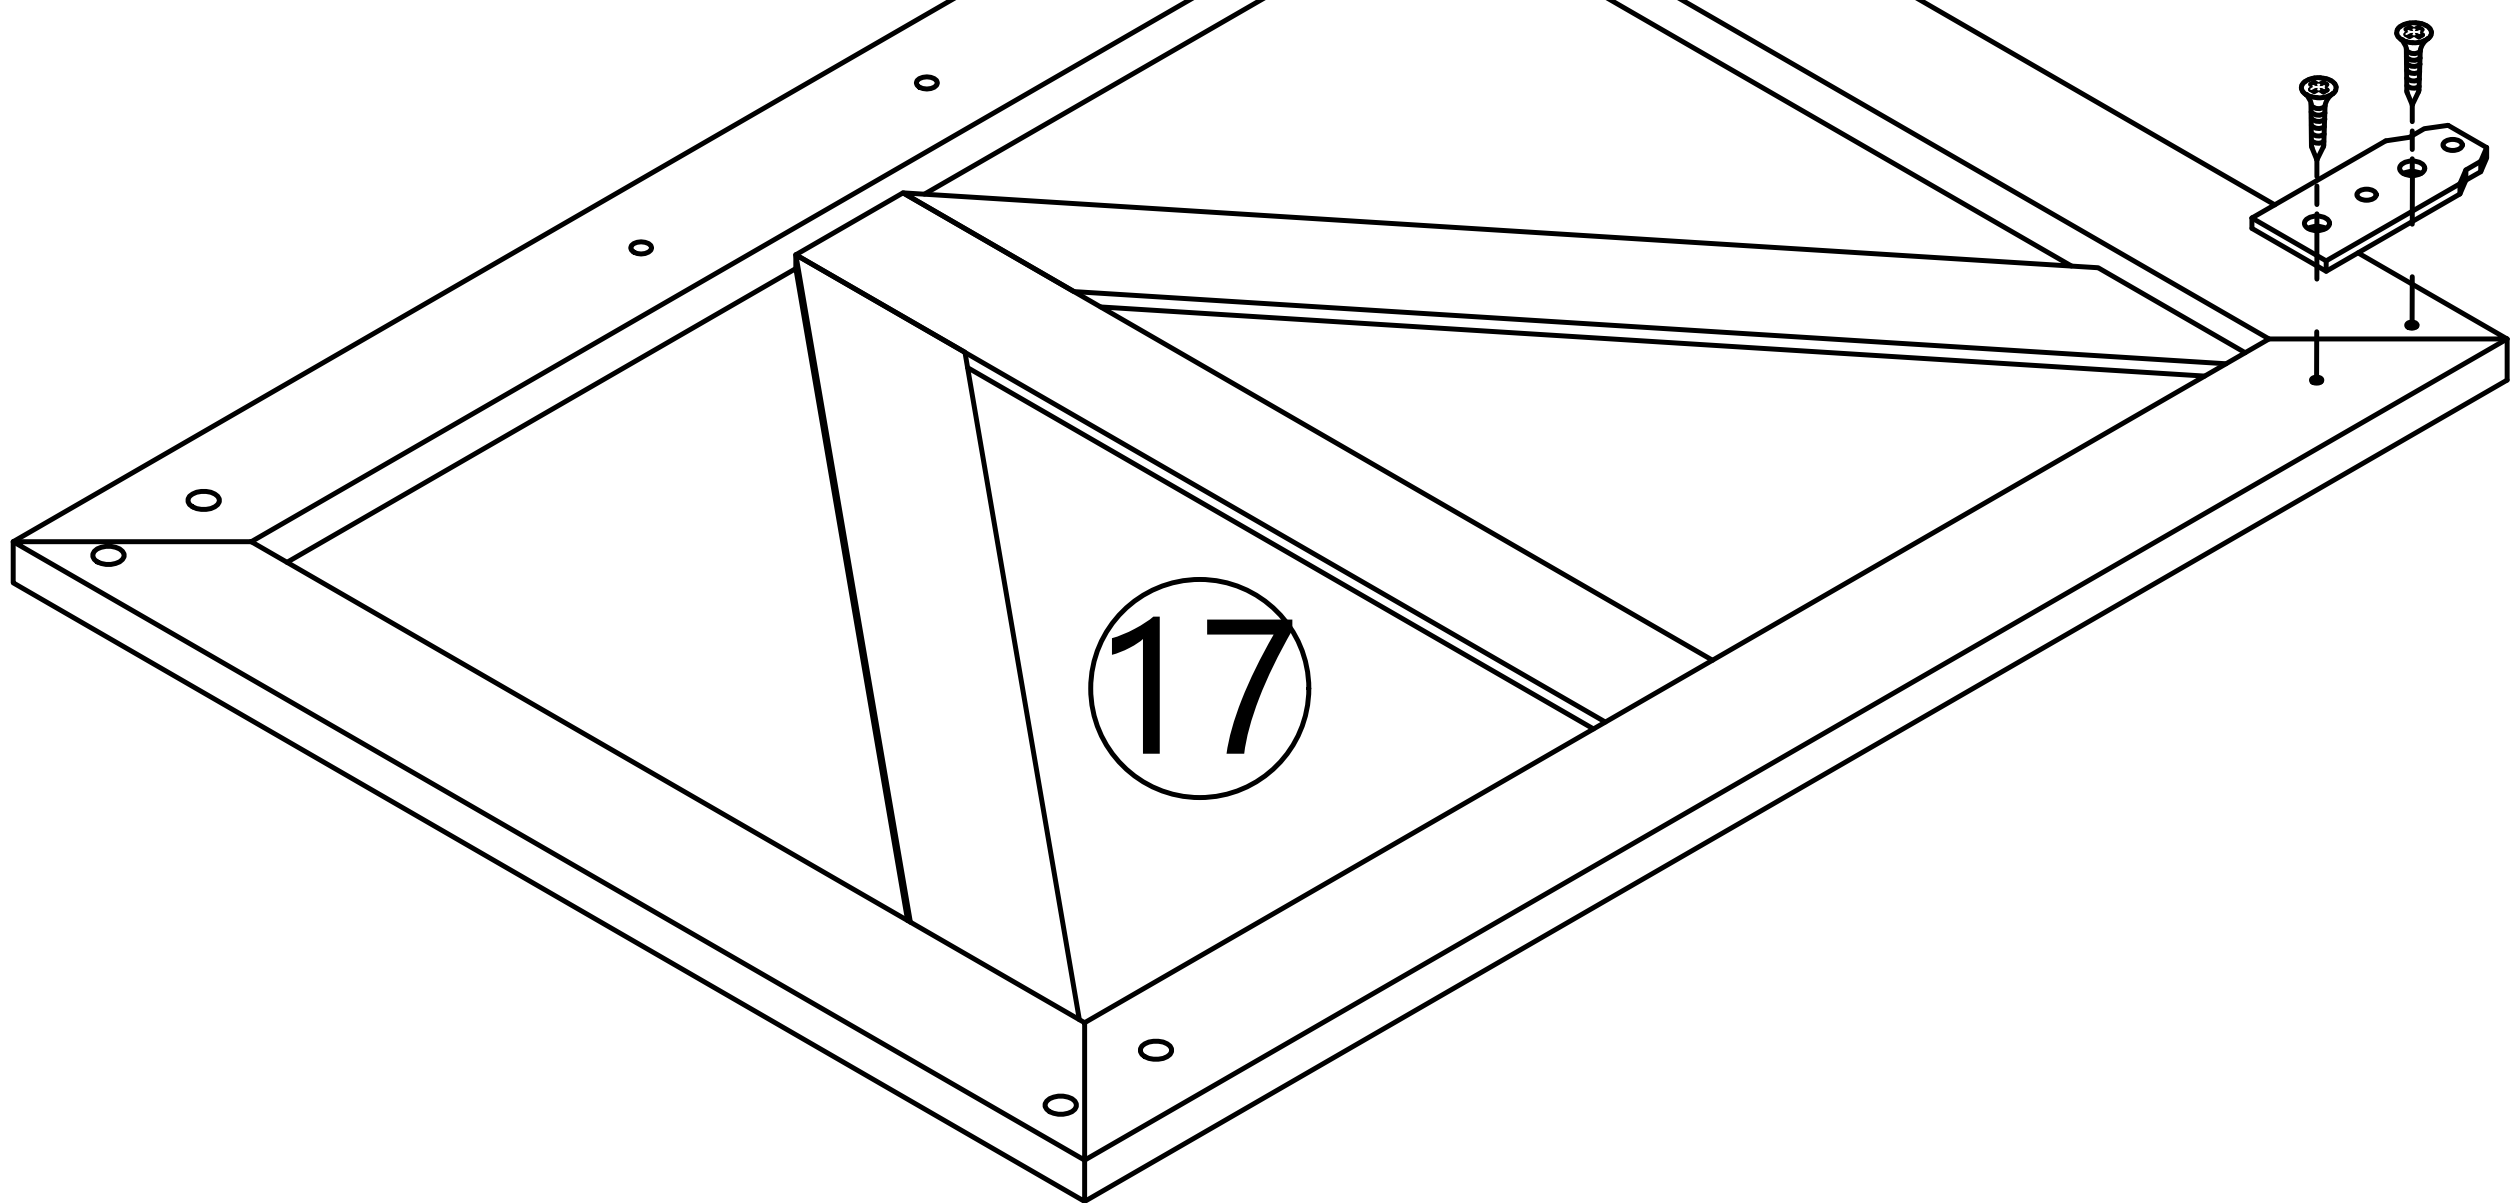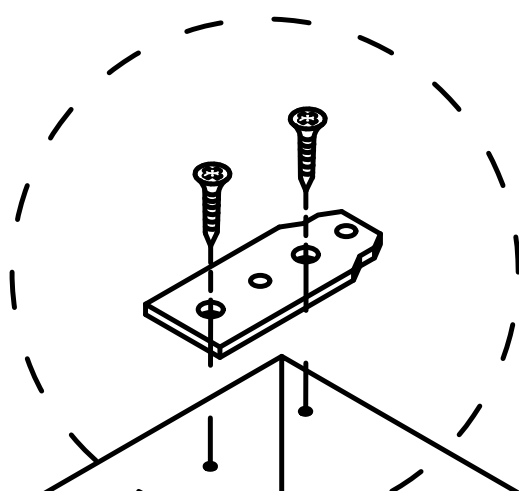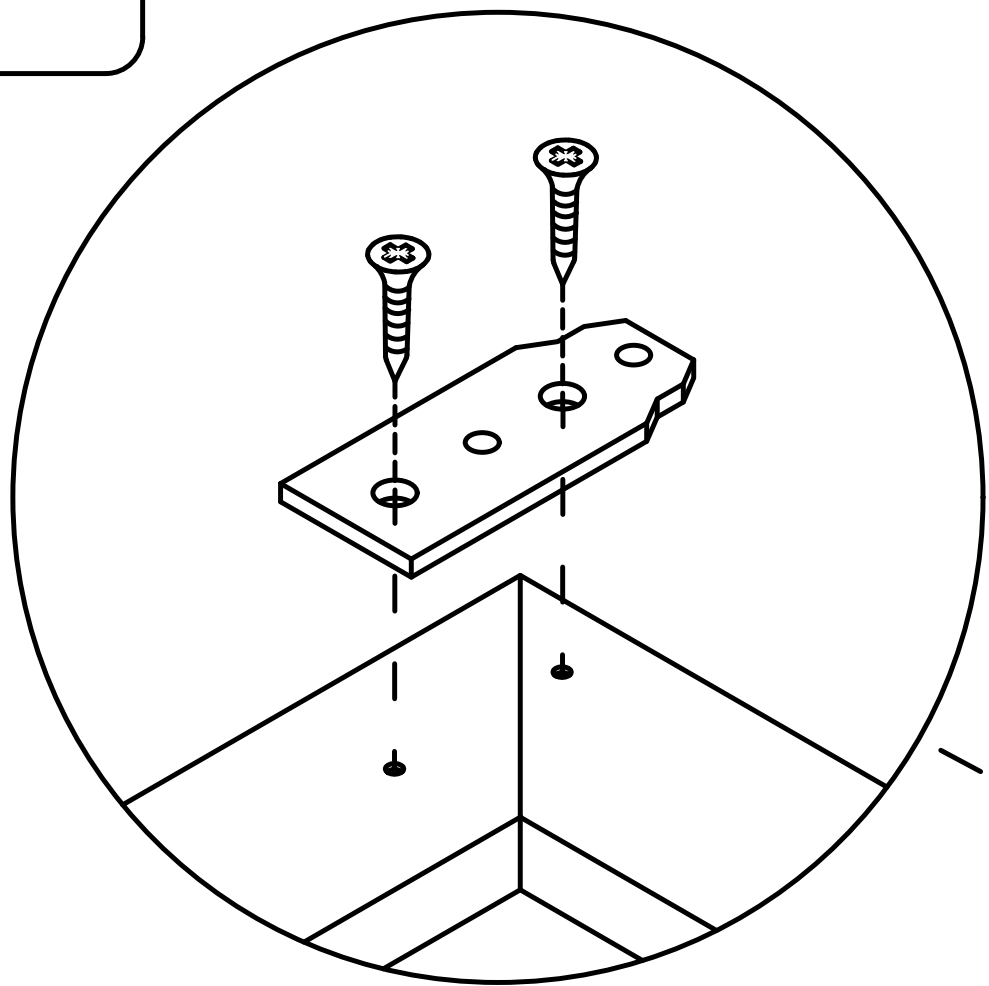

- | | | | | |
|---|--|----|--|----|
| I | | x2 | | |
| J | | x4 | | |
| N | | x1 | | x2 |

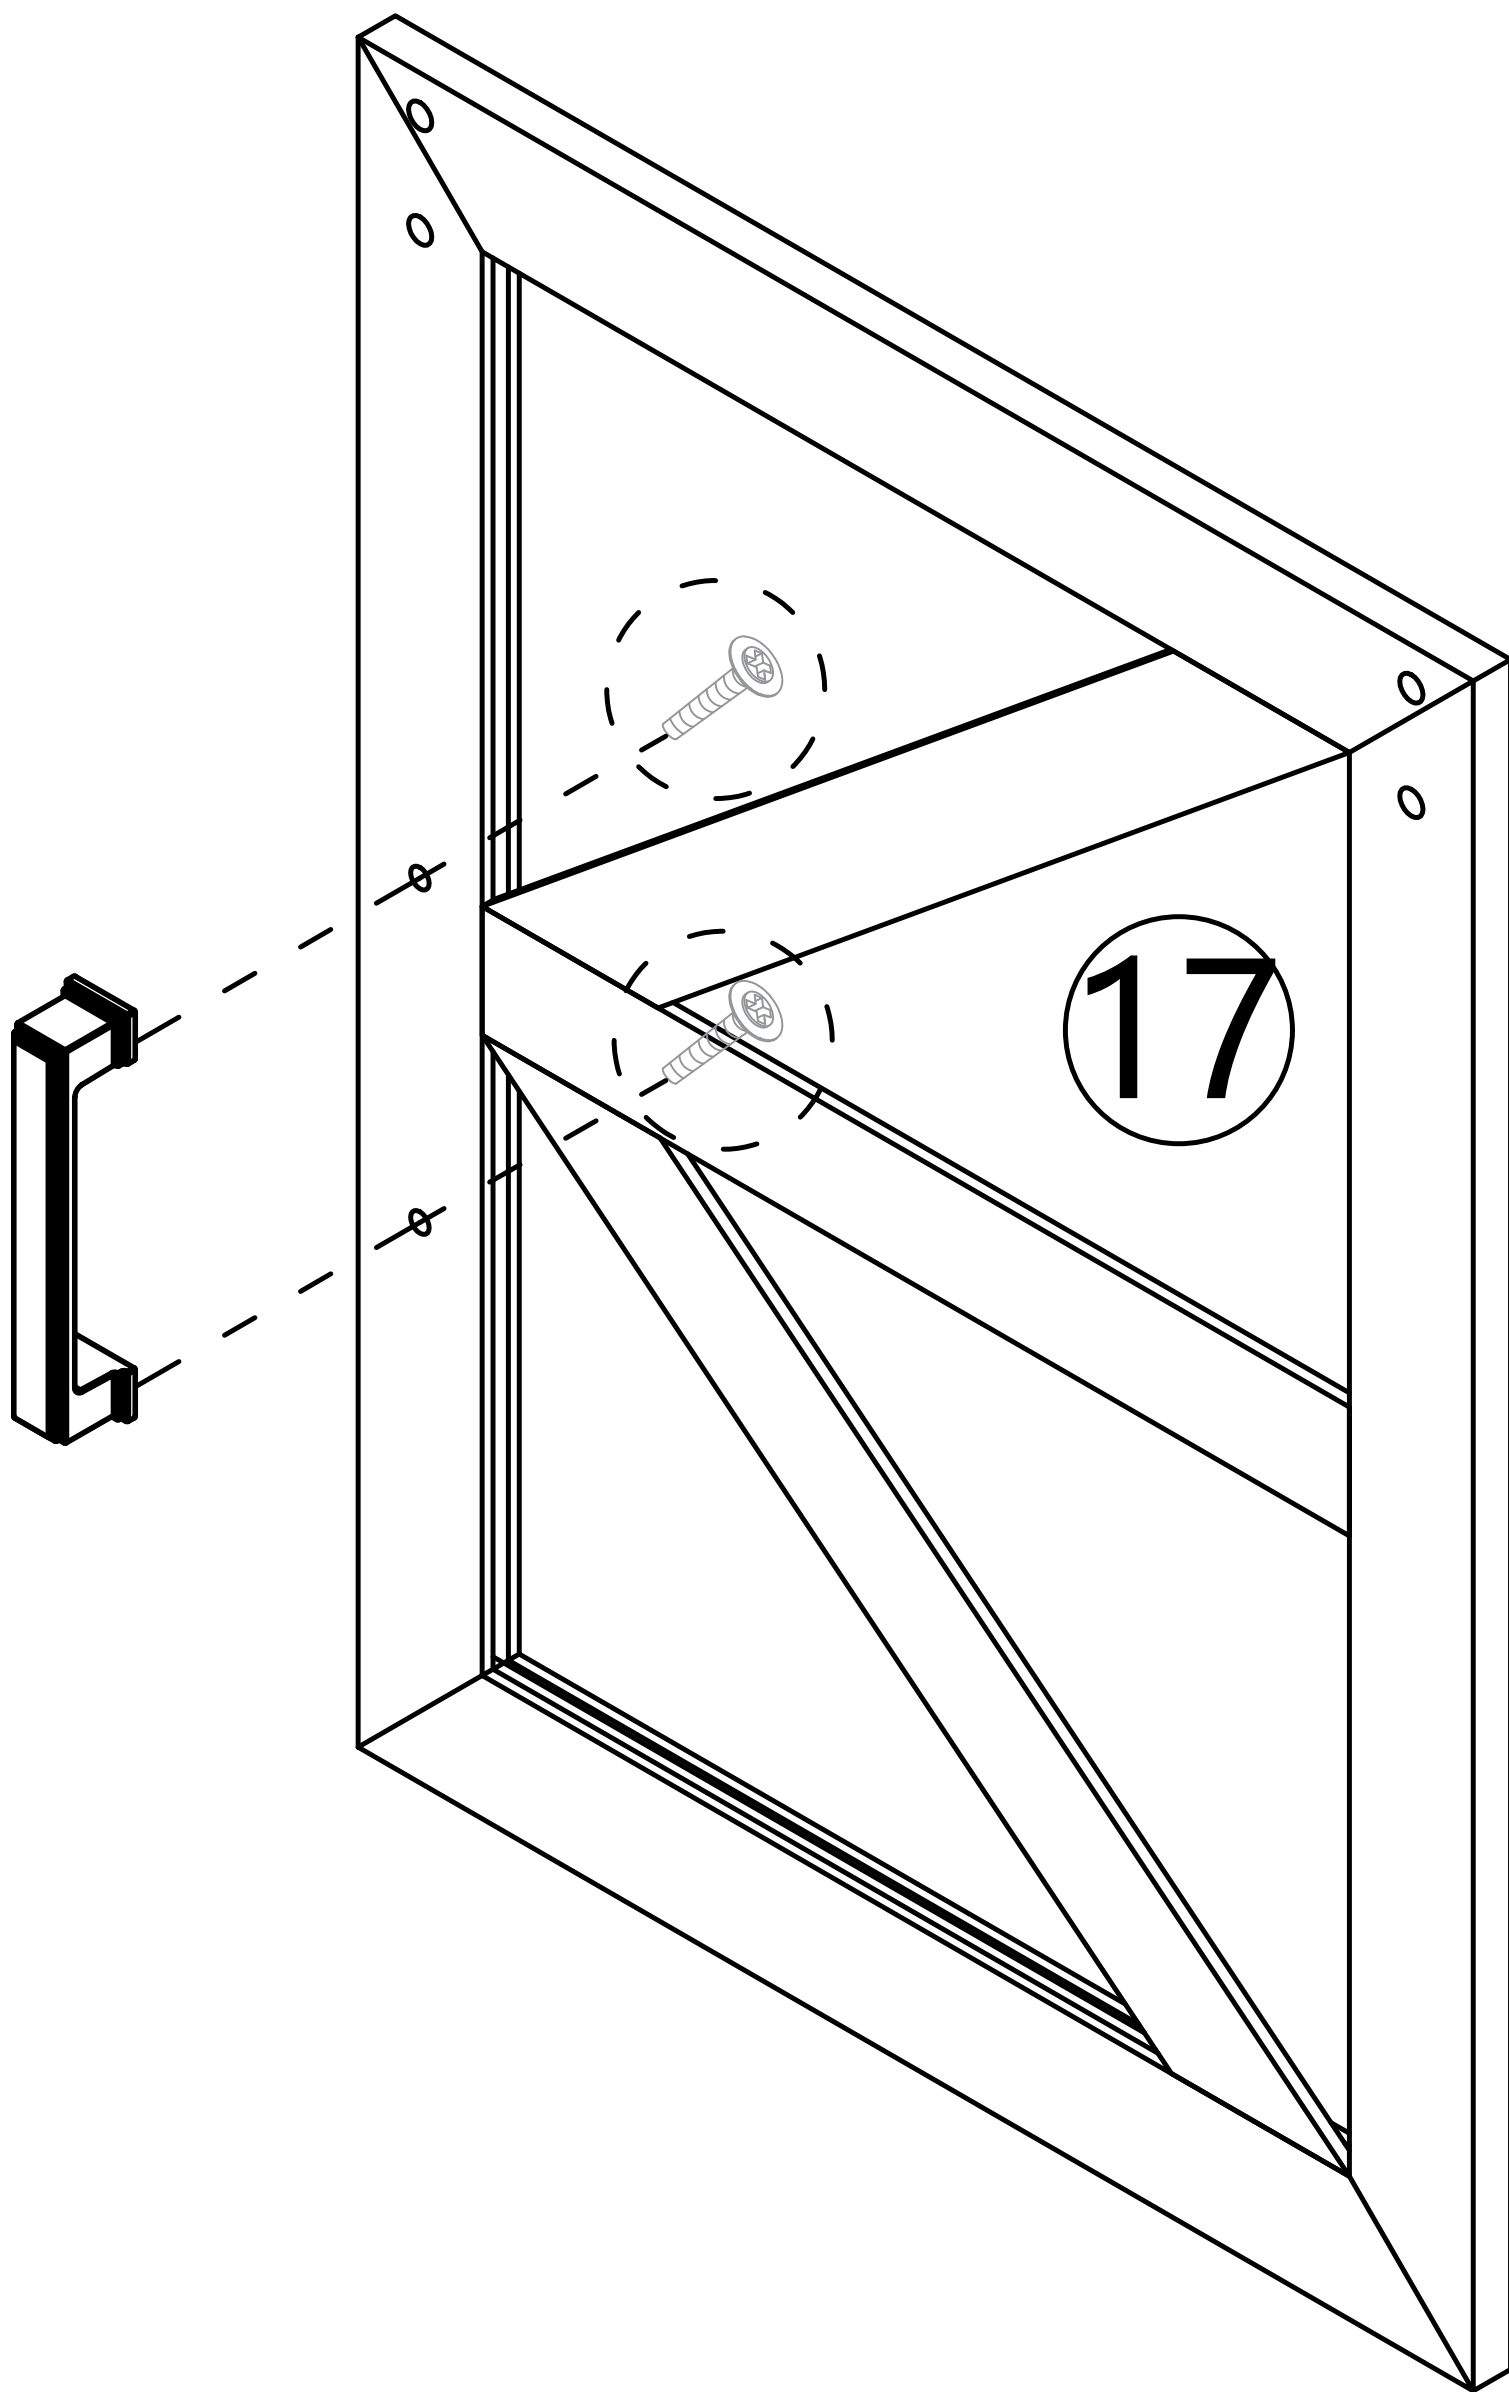


Step 36

K




x4

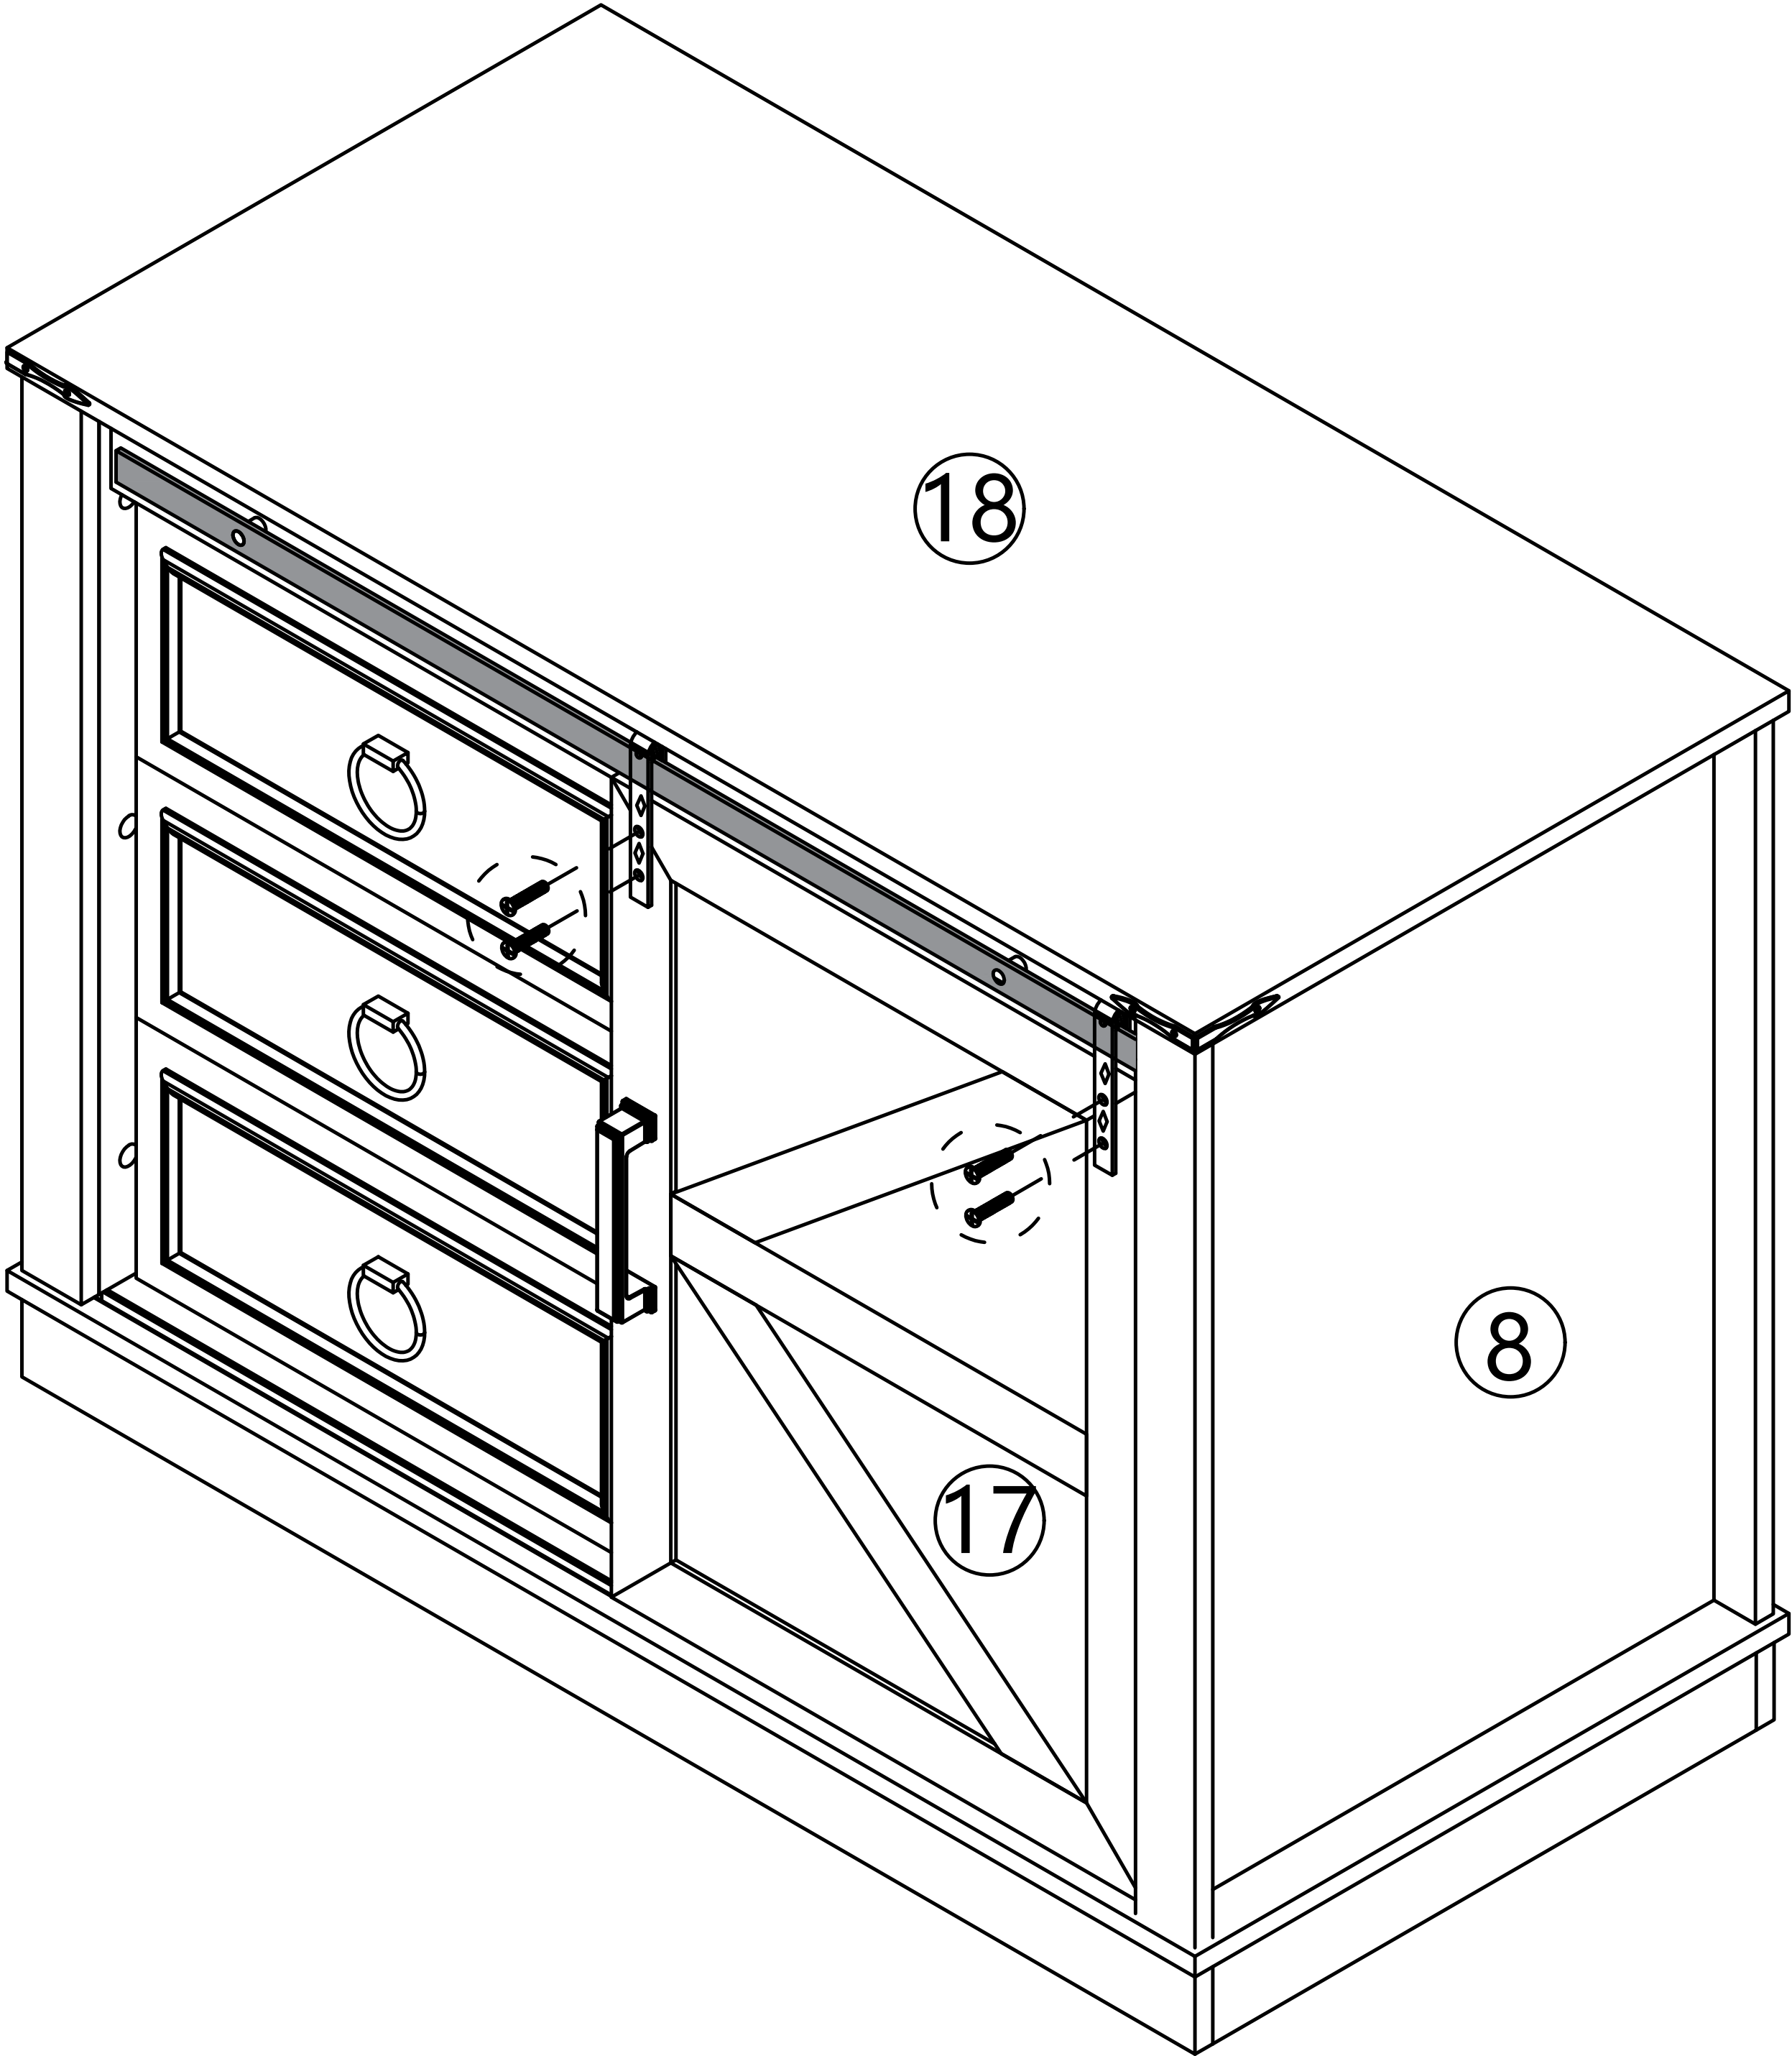





Step 37




0

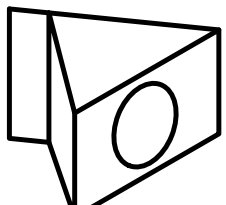
x12




x12

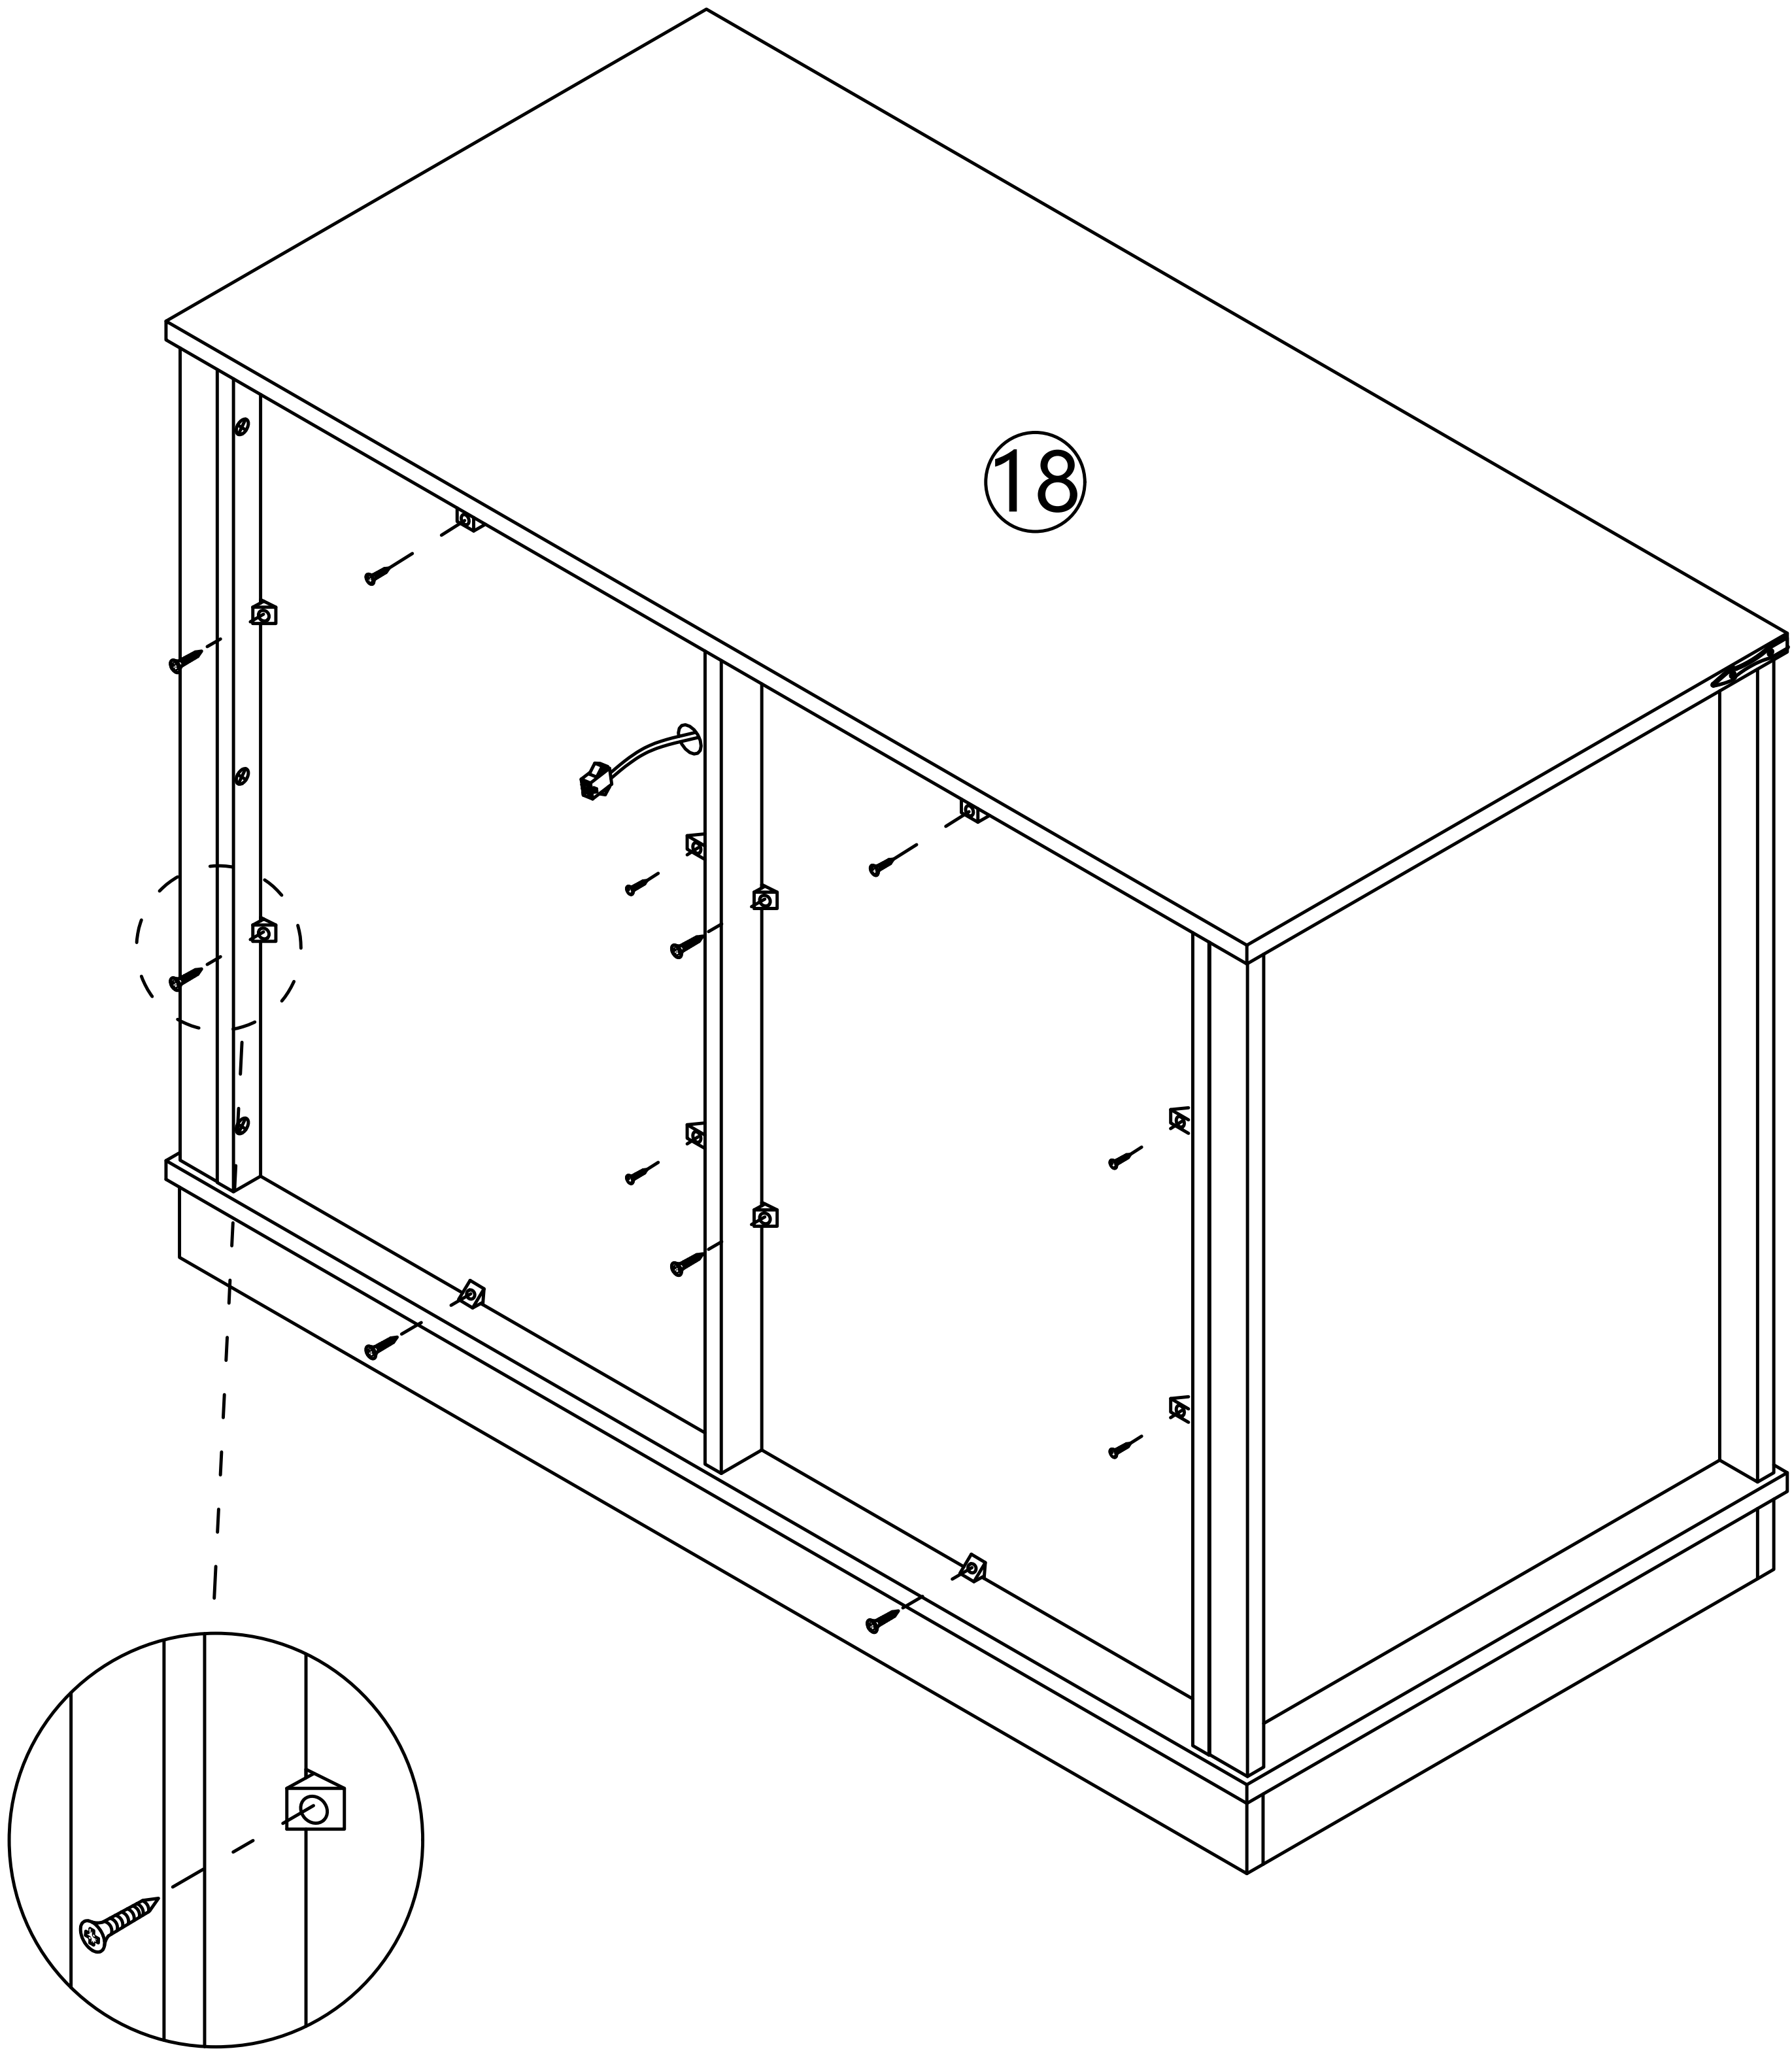

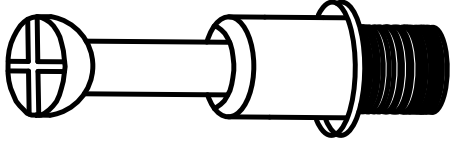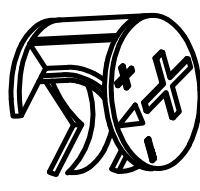
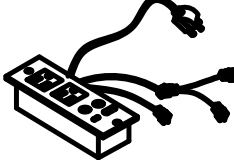
A		34pcs	B		26pcs	D	 	2pcs 2pcs		2pcs
E		4pcs	P		3pcs	Q		1pcs		2pcs

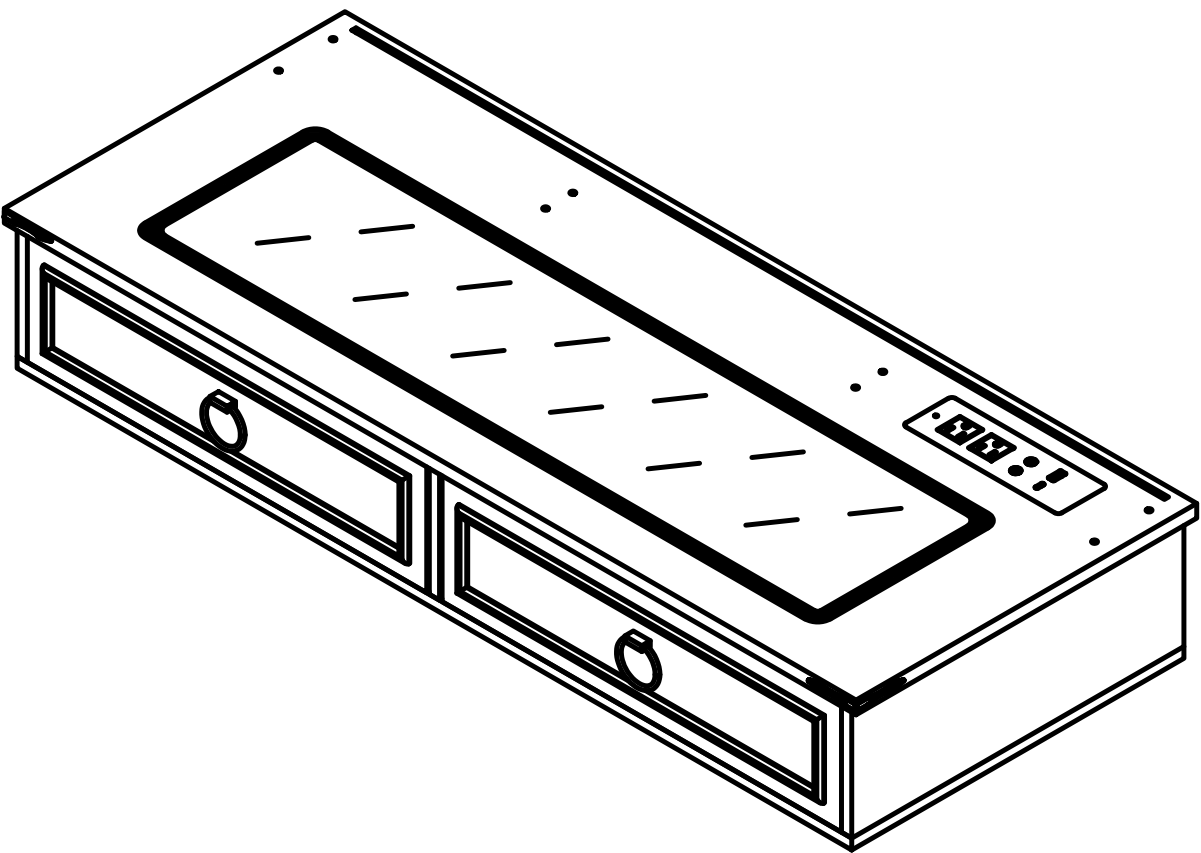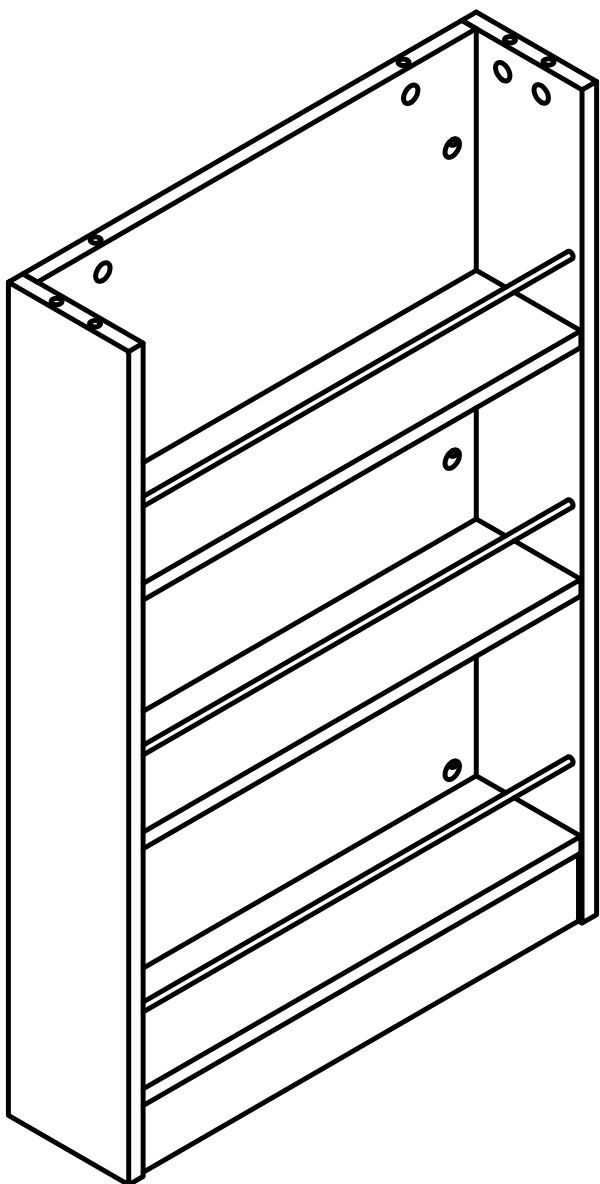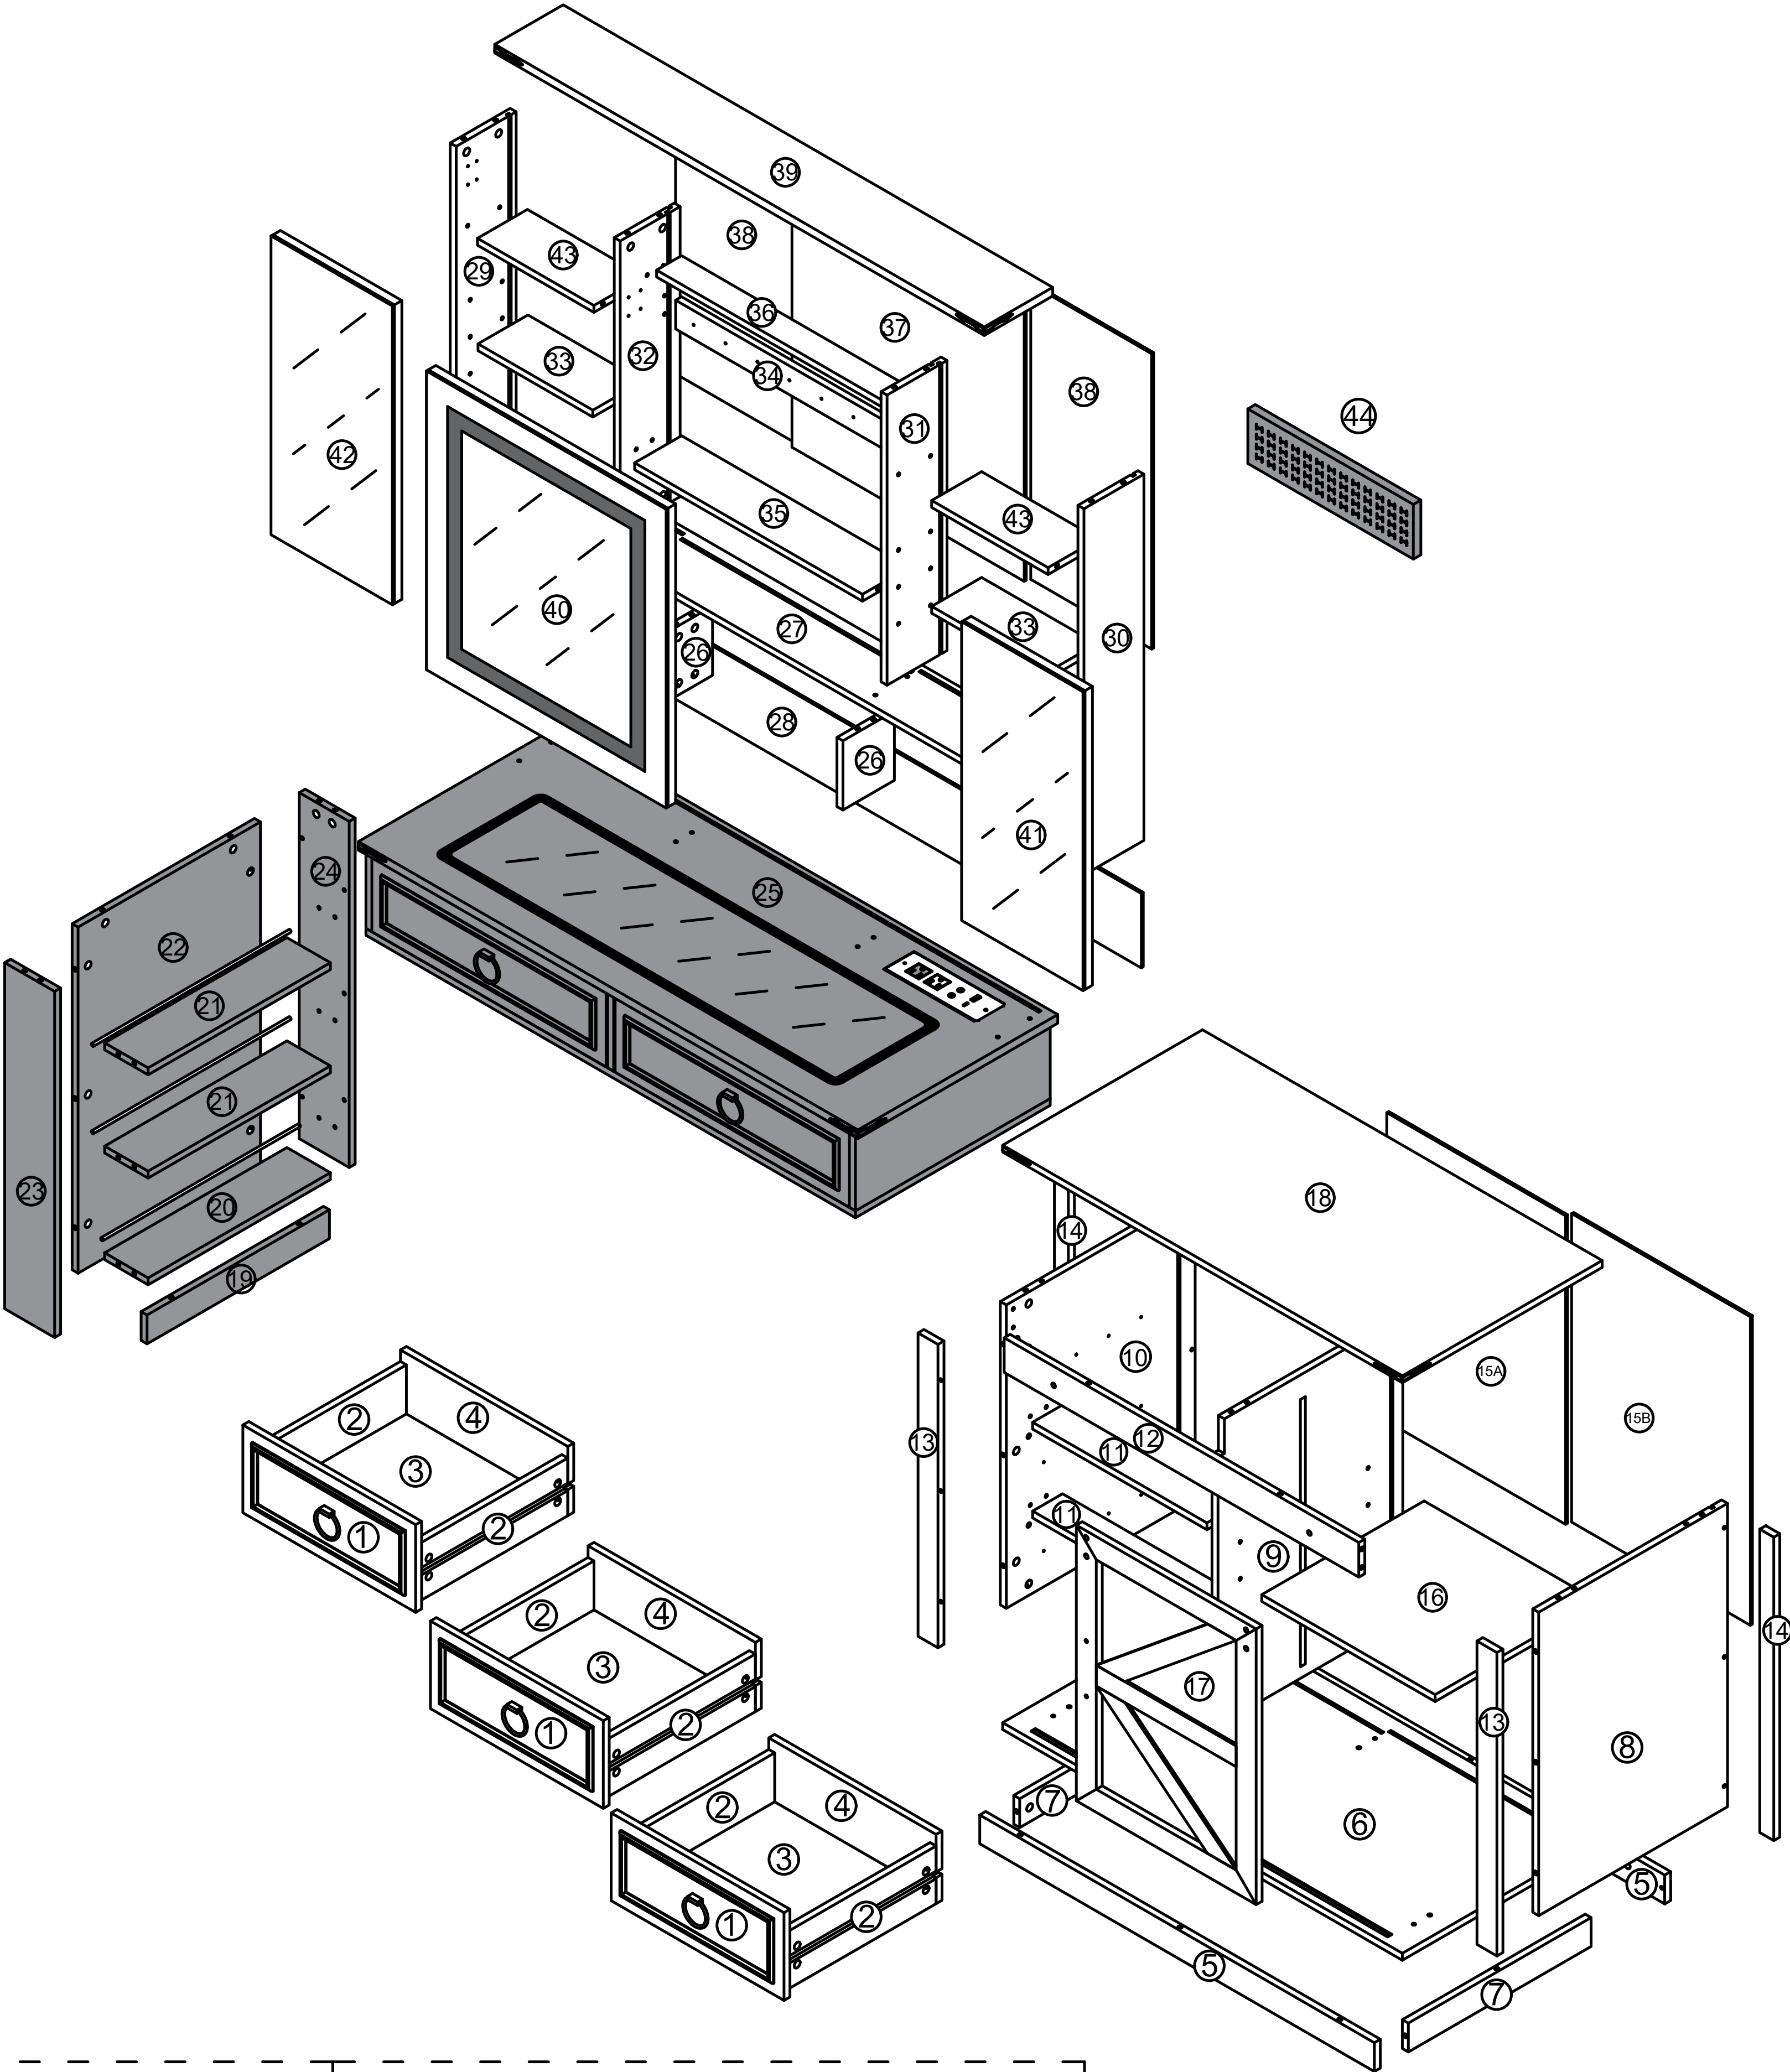



Step 38

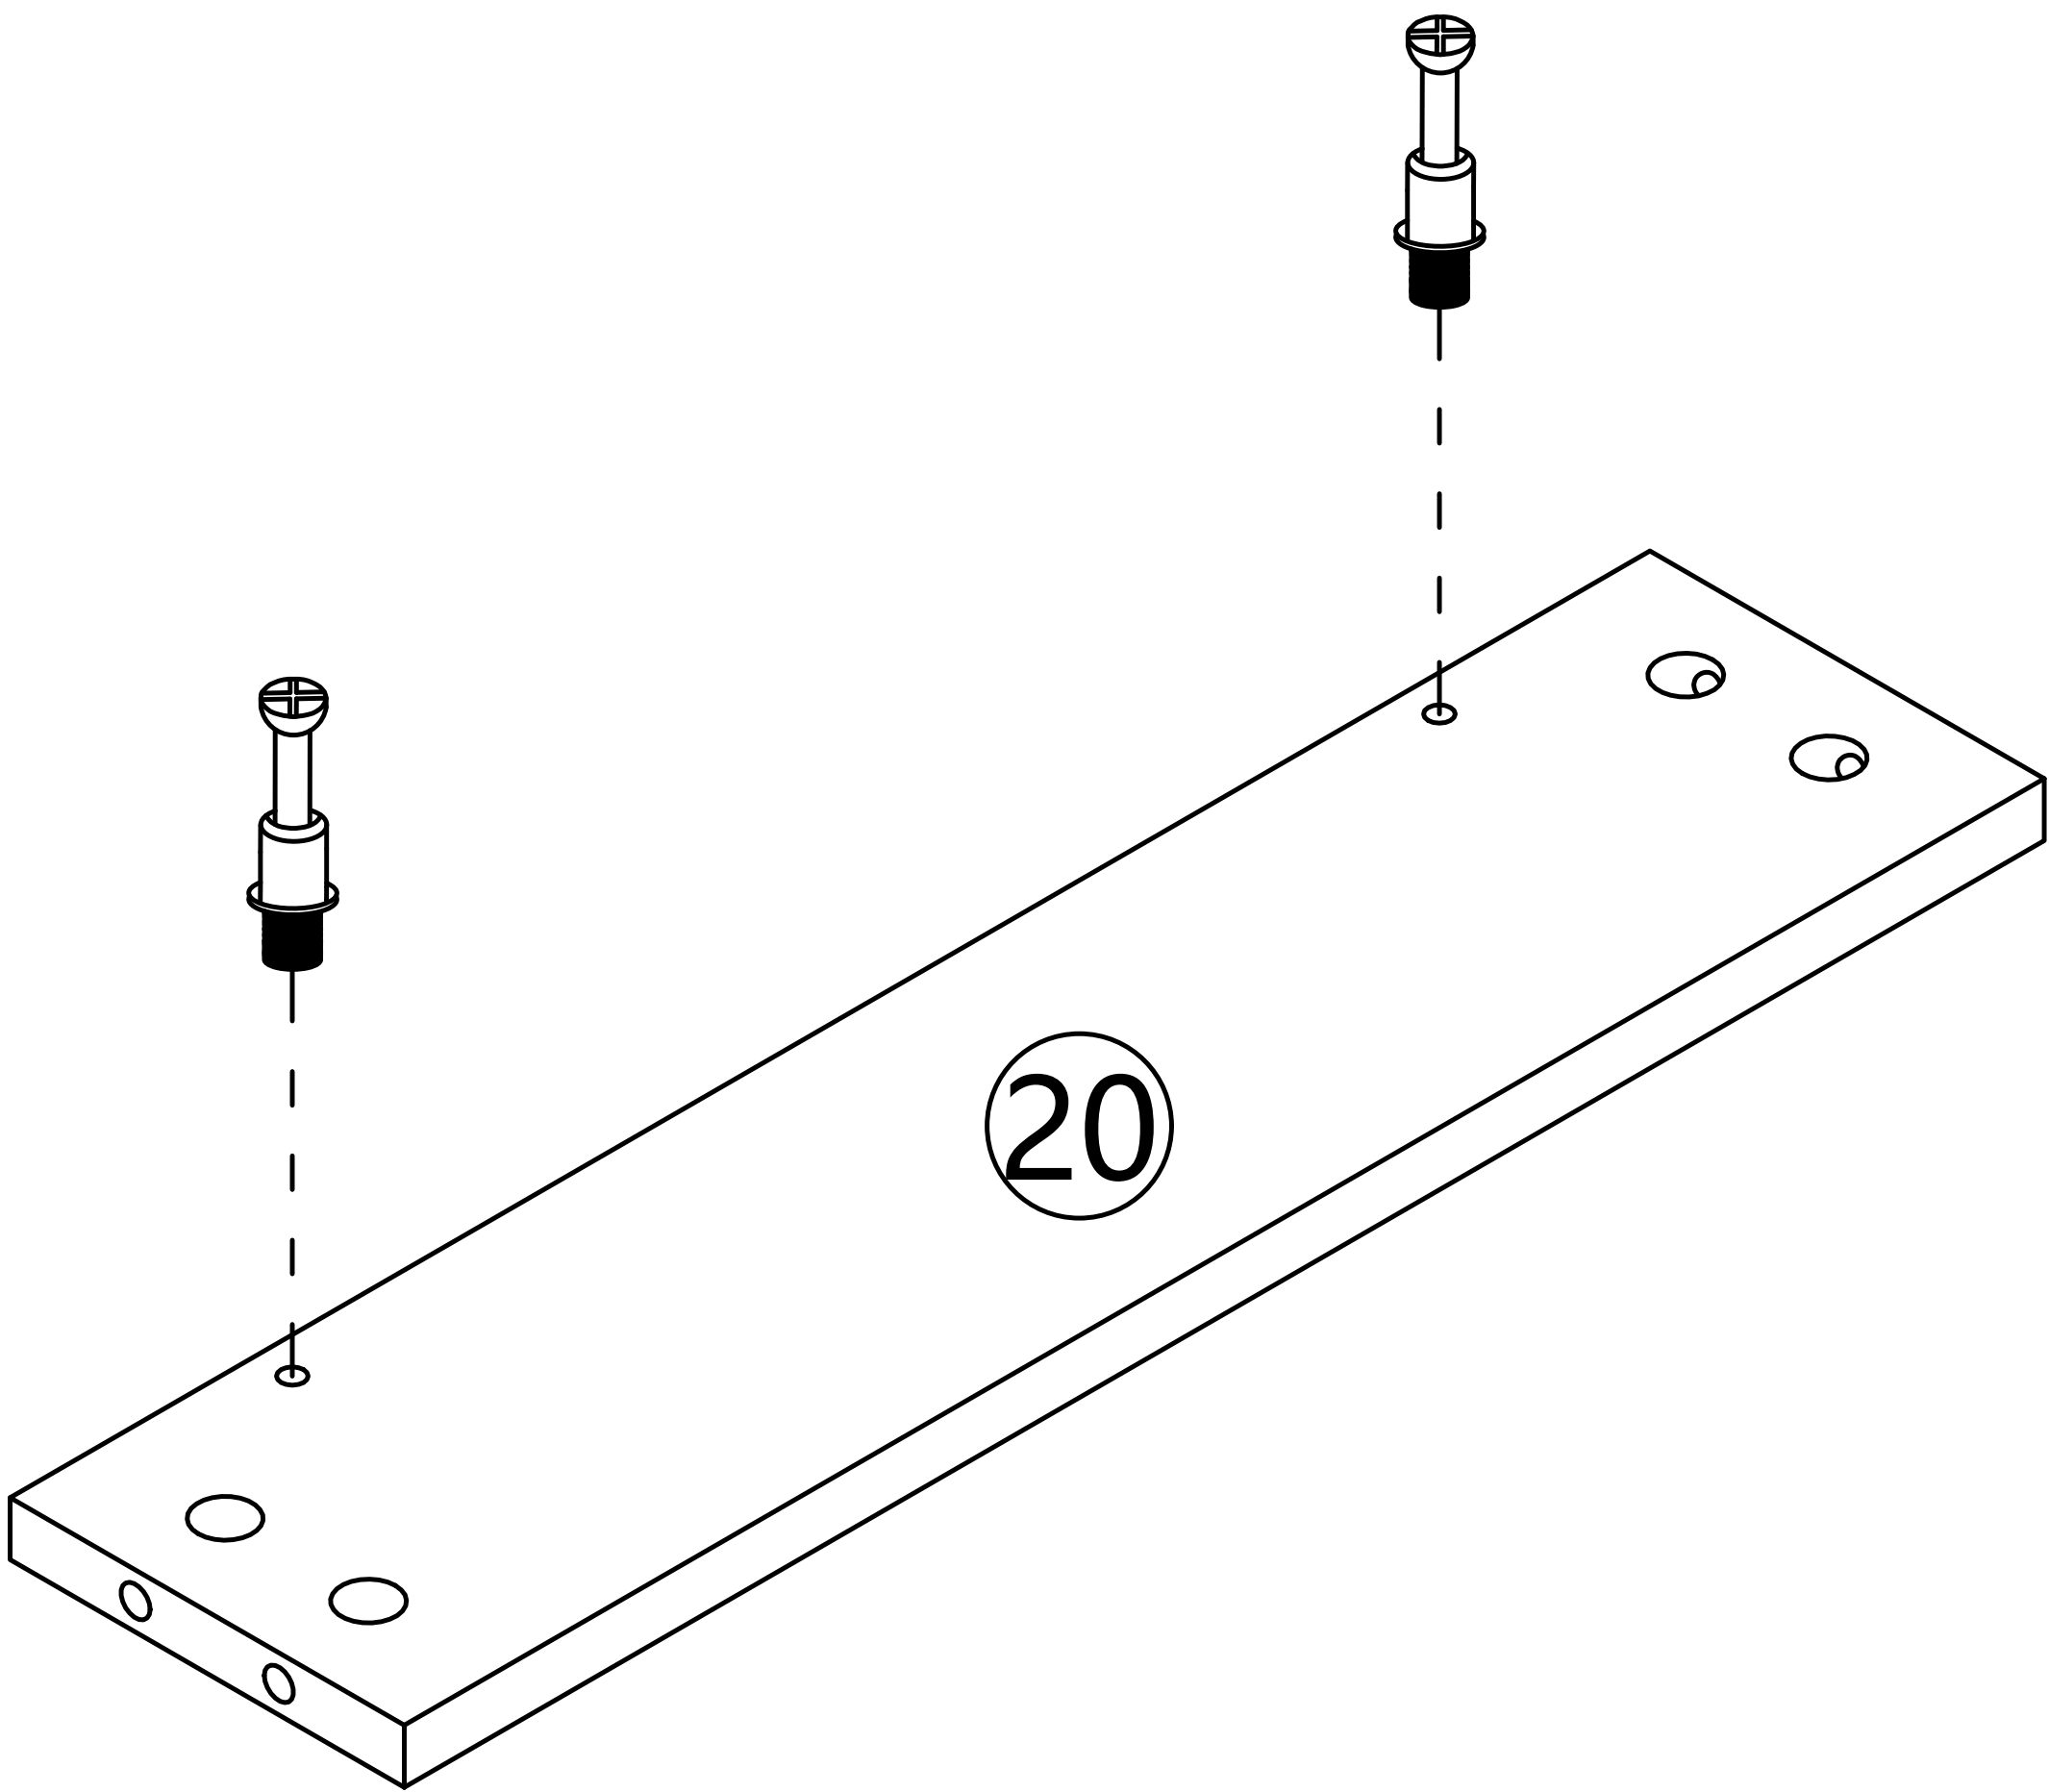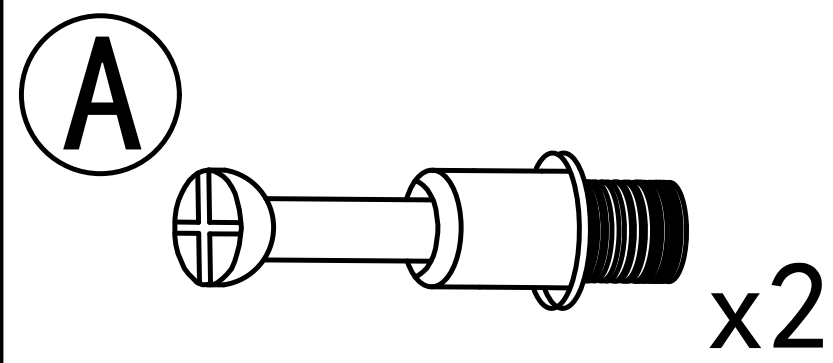



Step 39

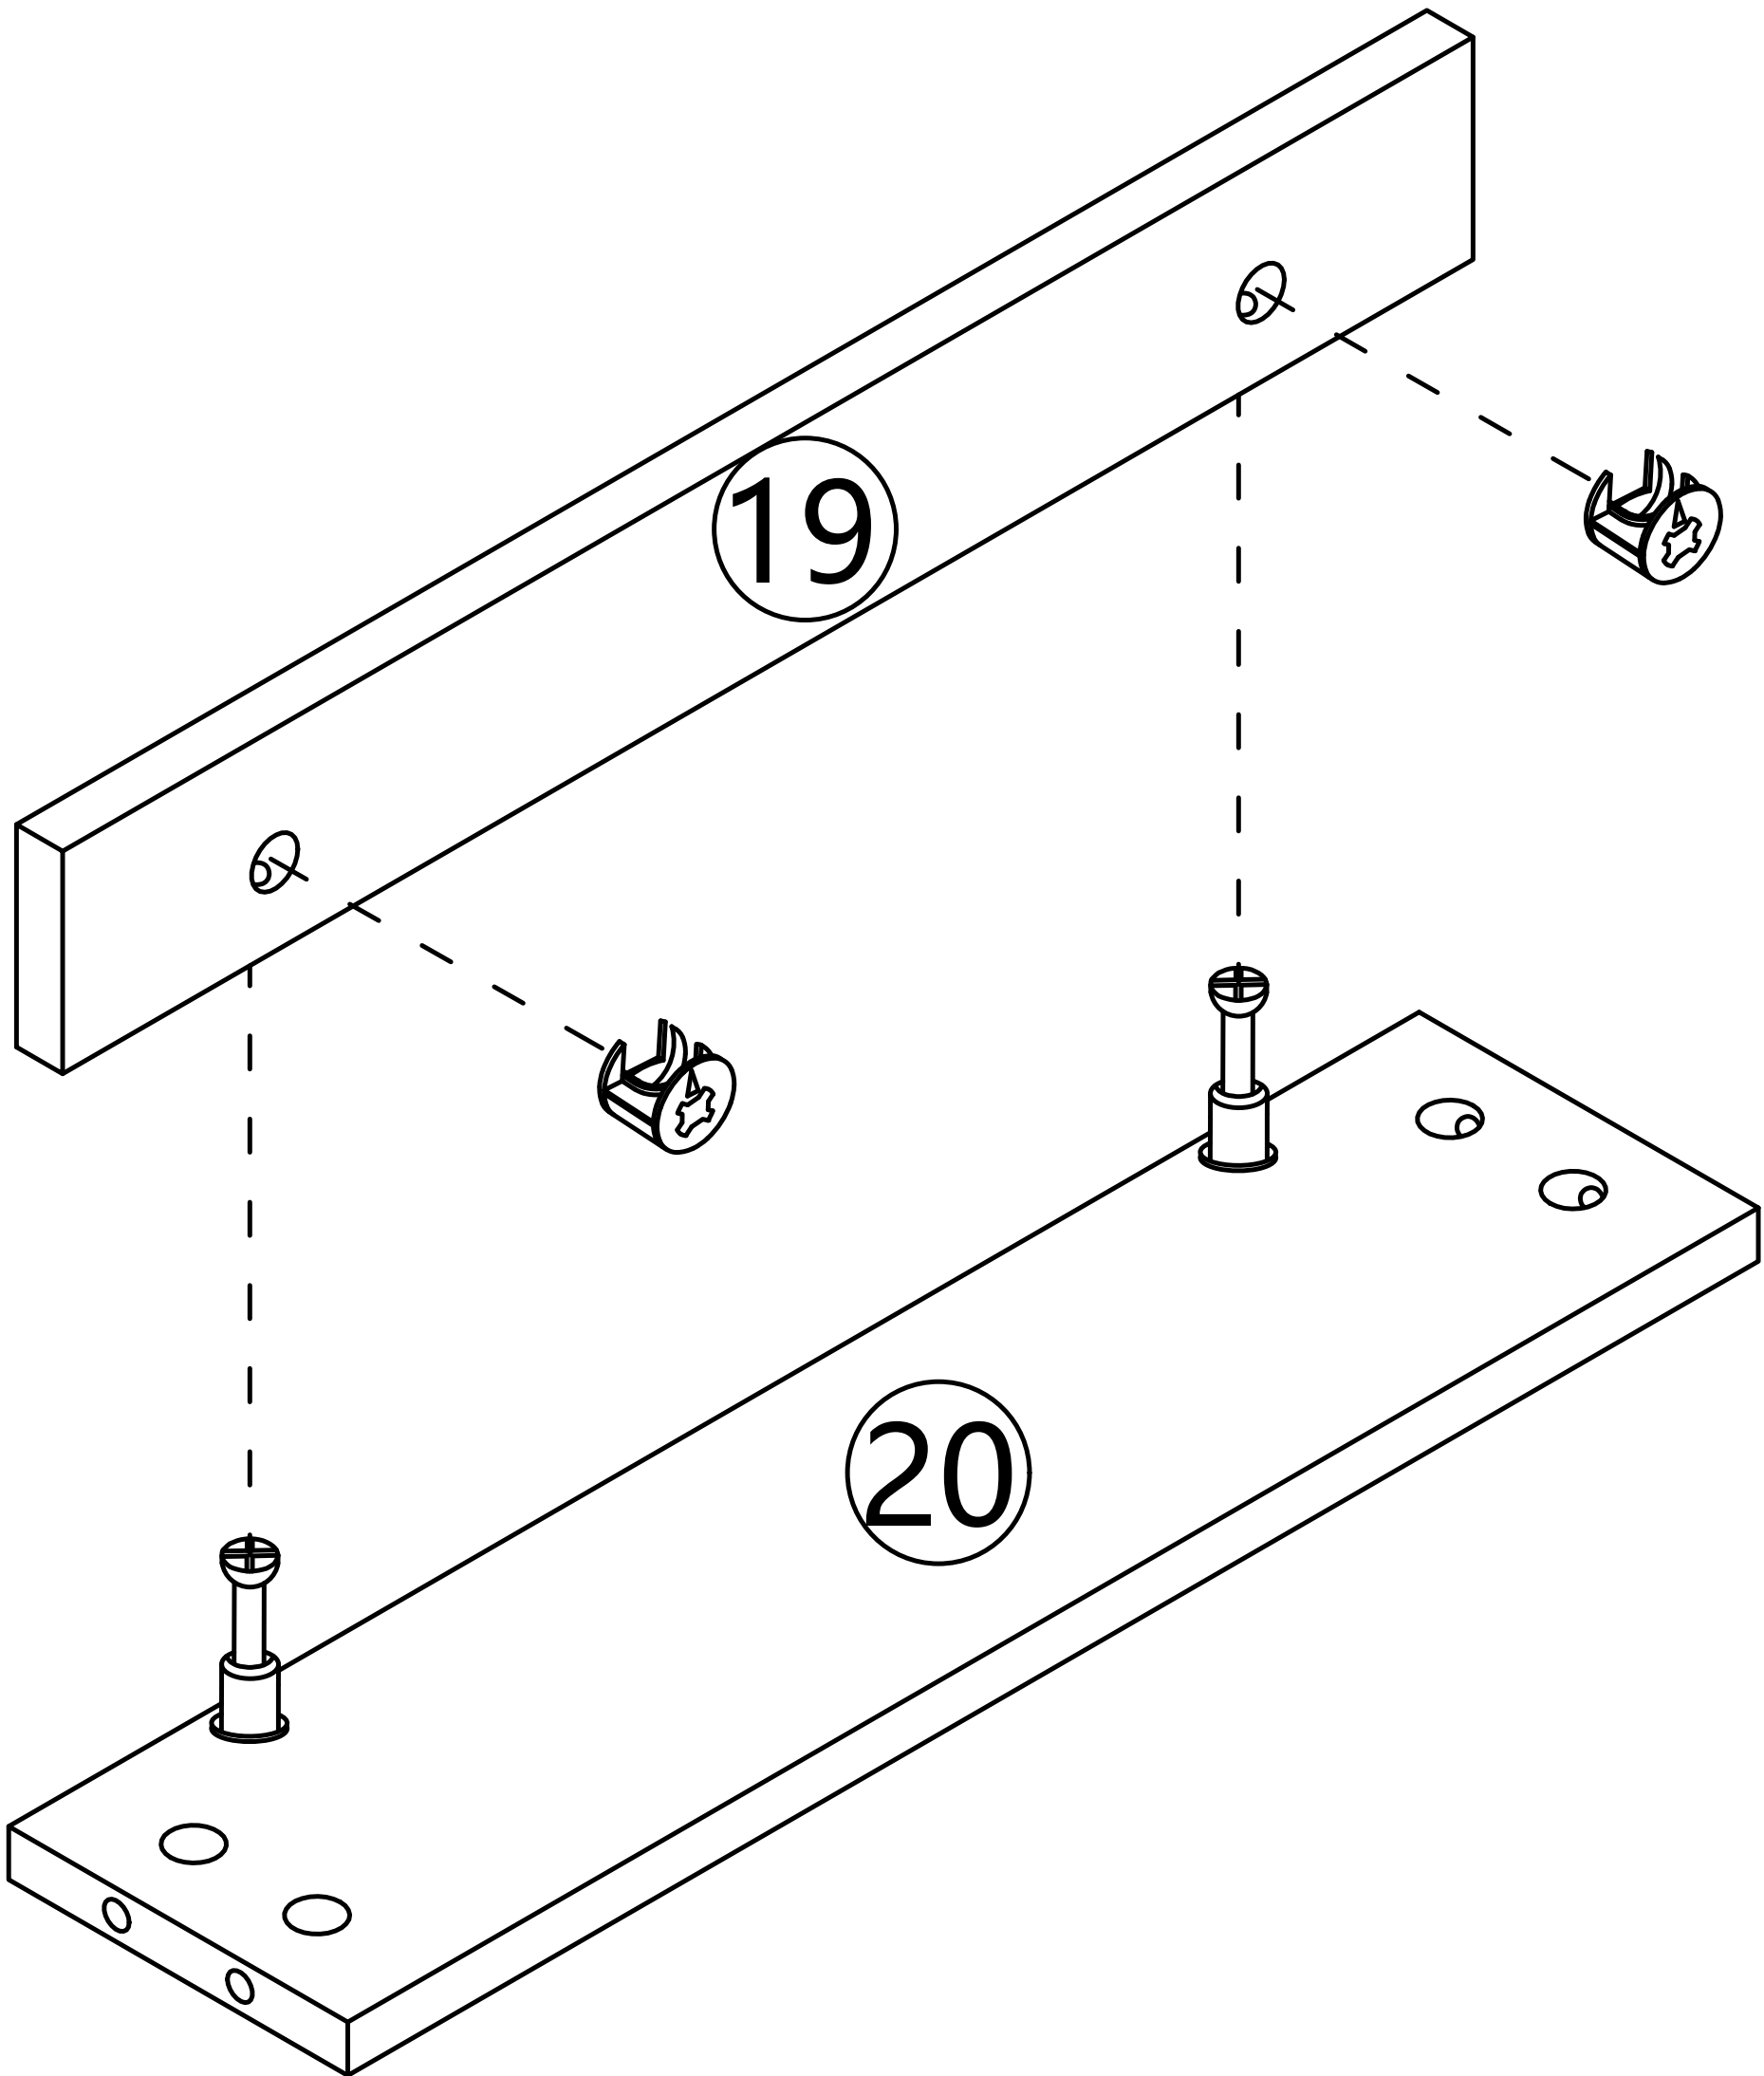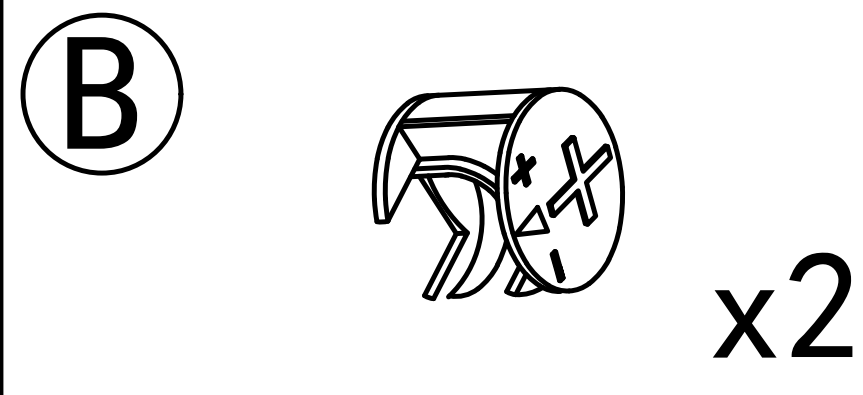

Step 40

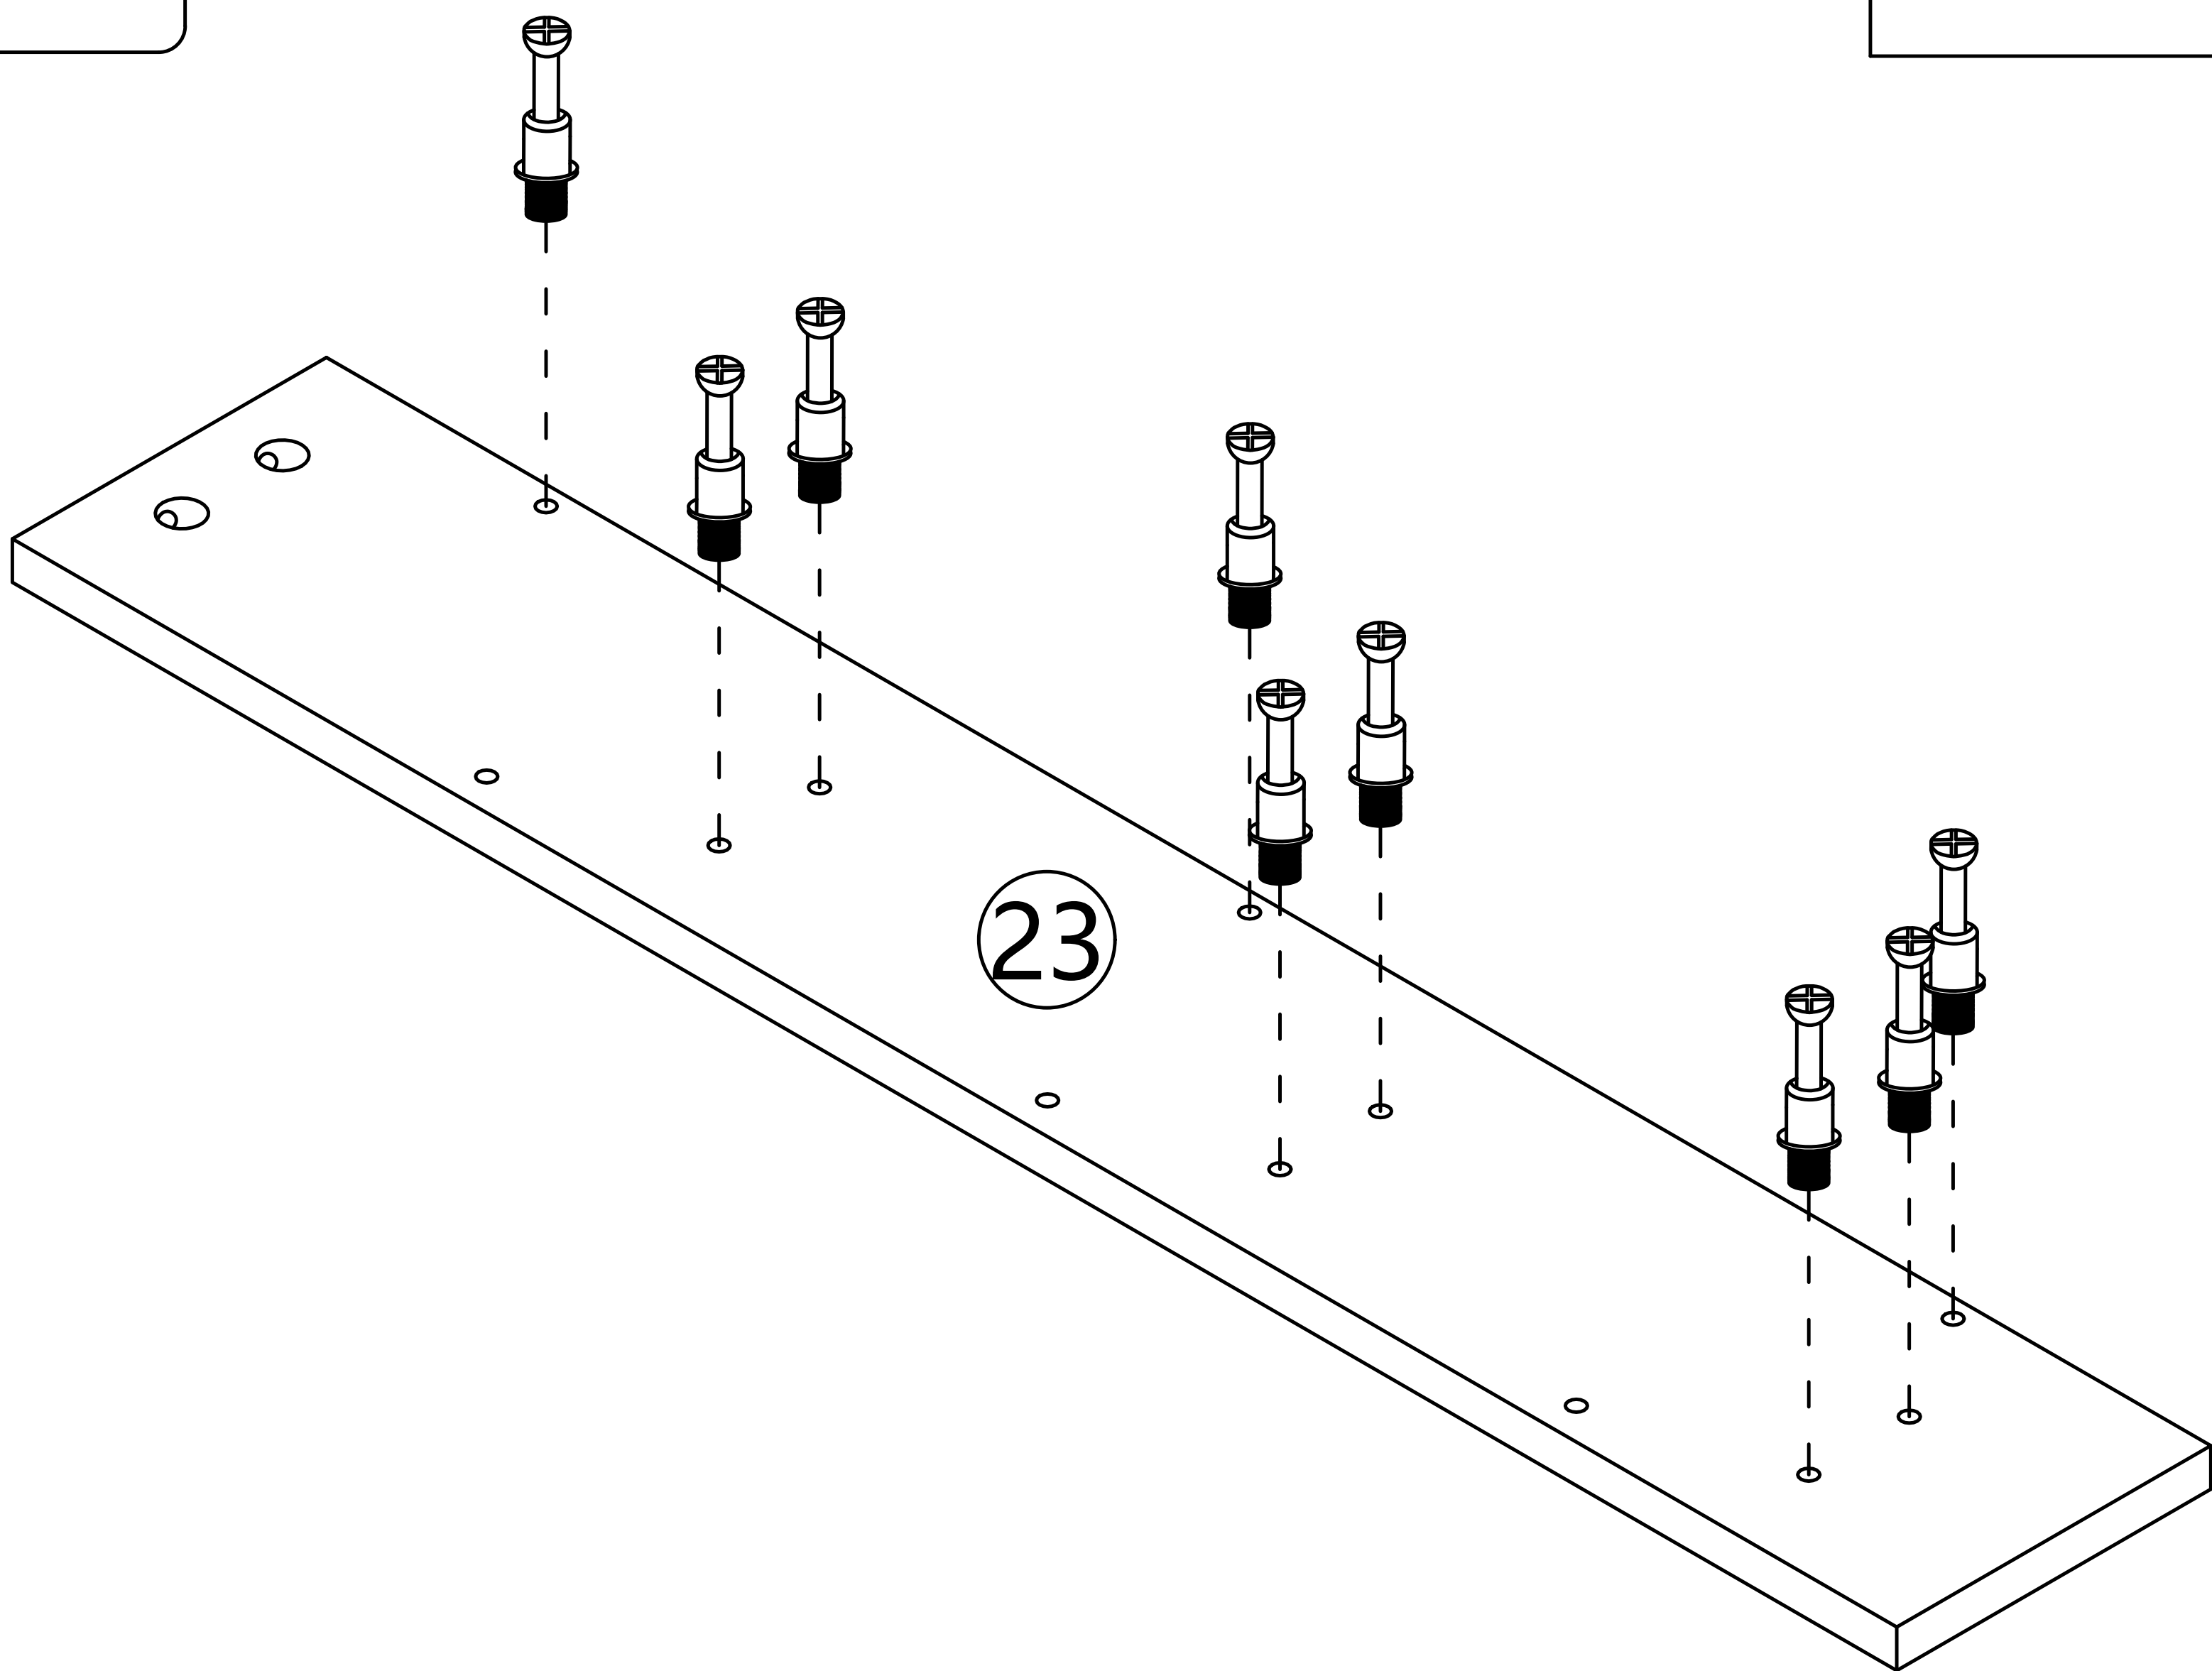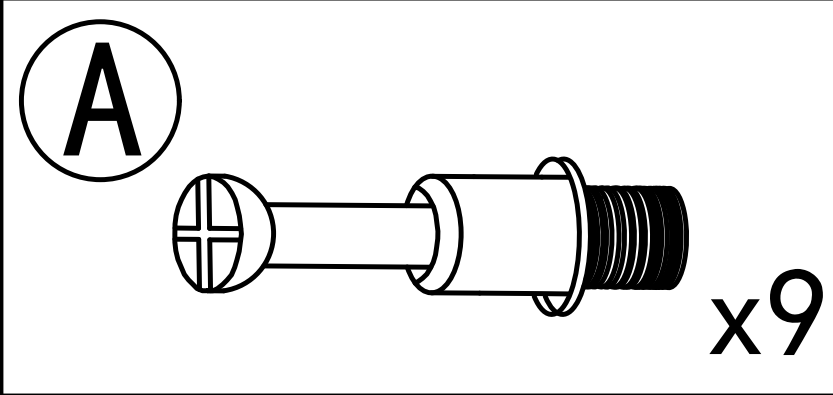


Step 41

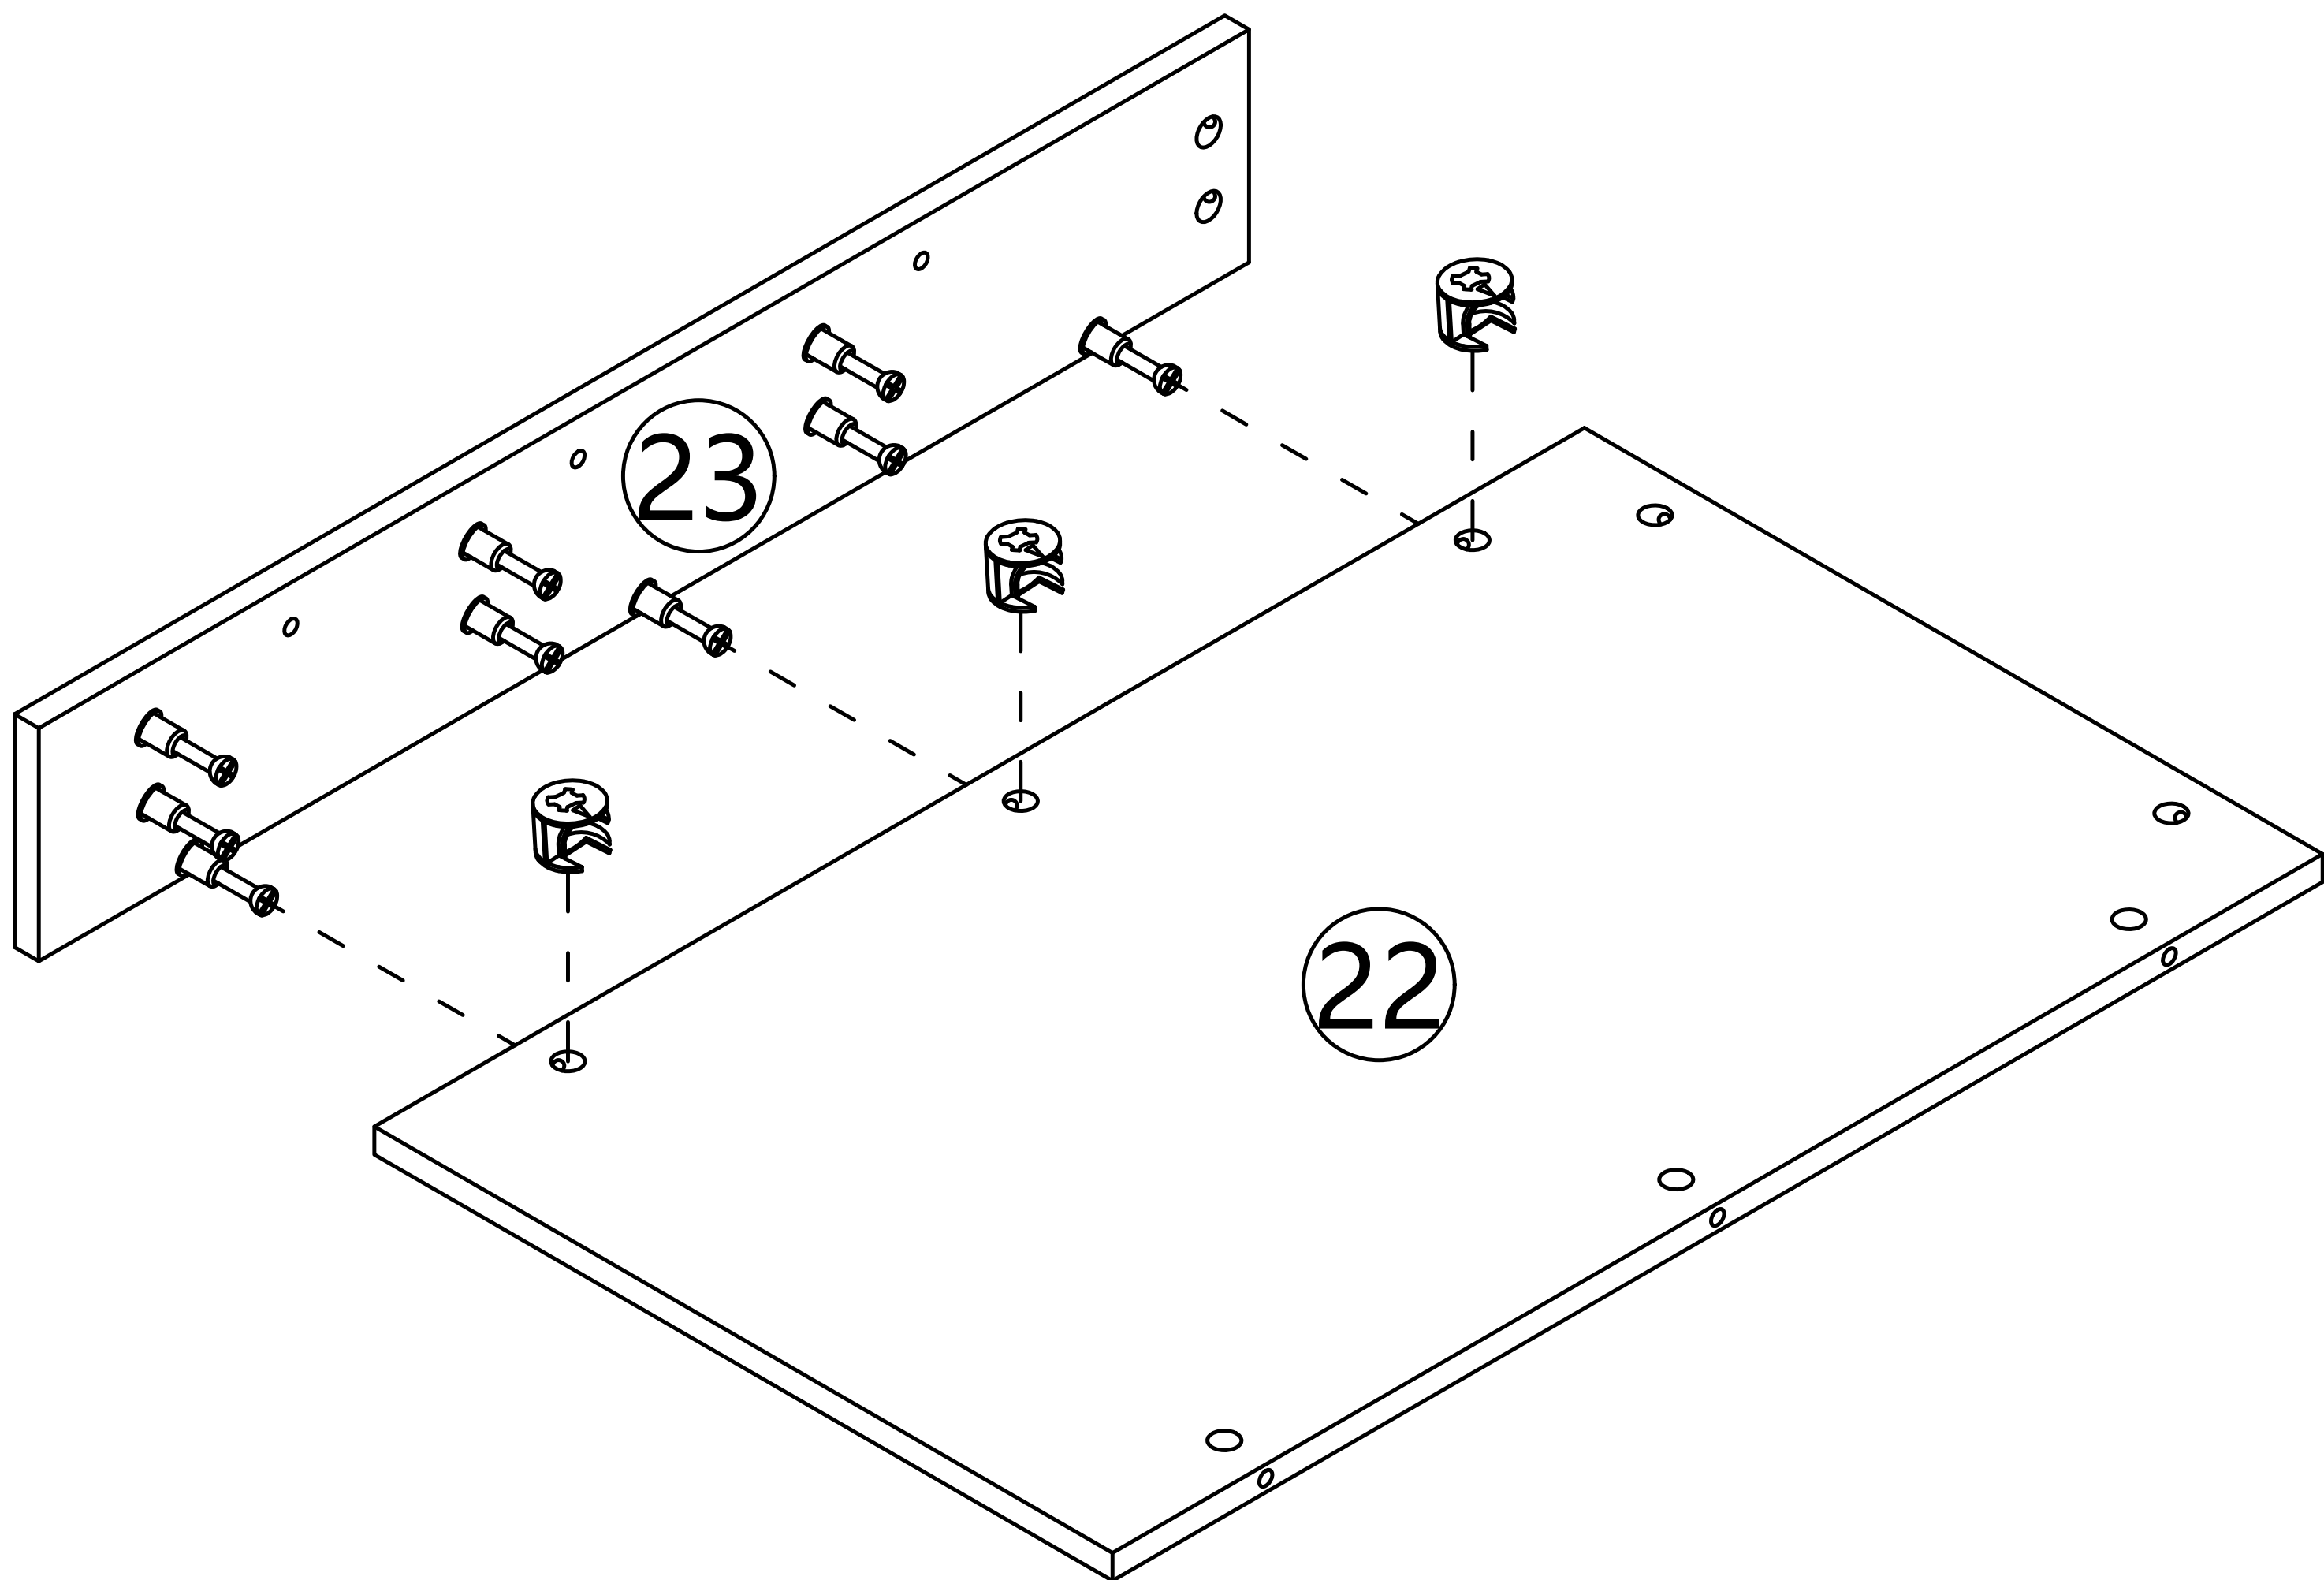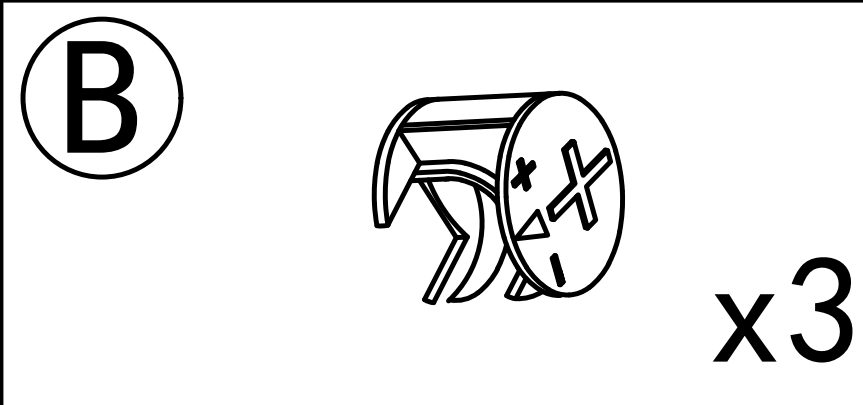


Step 42

B

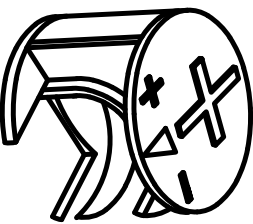


x4

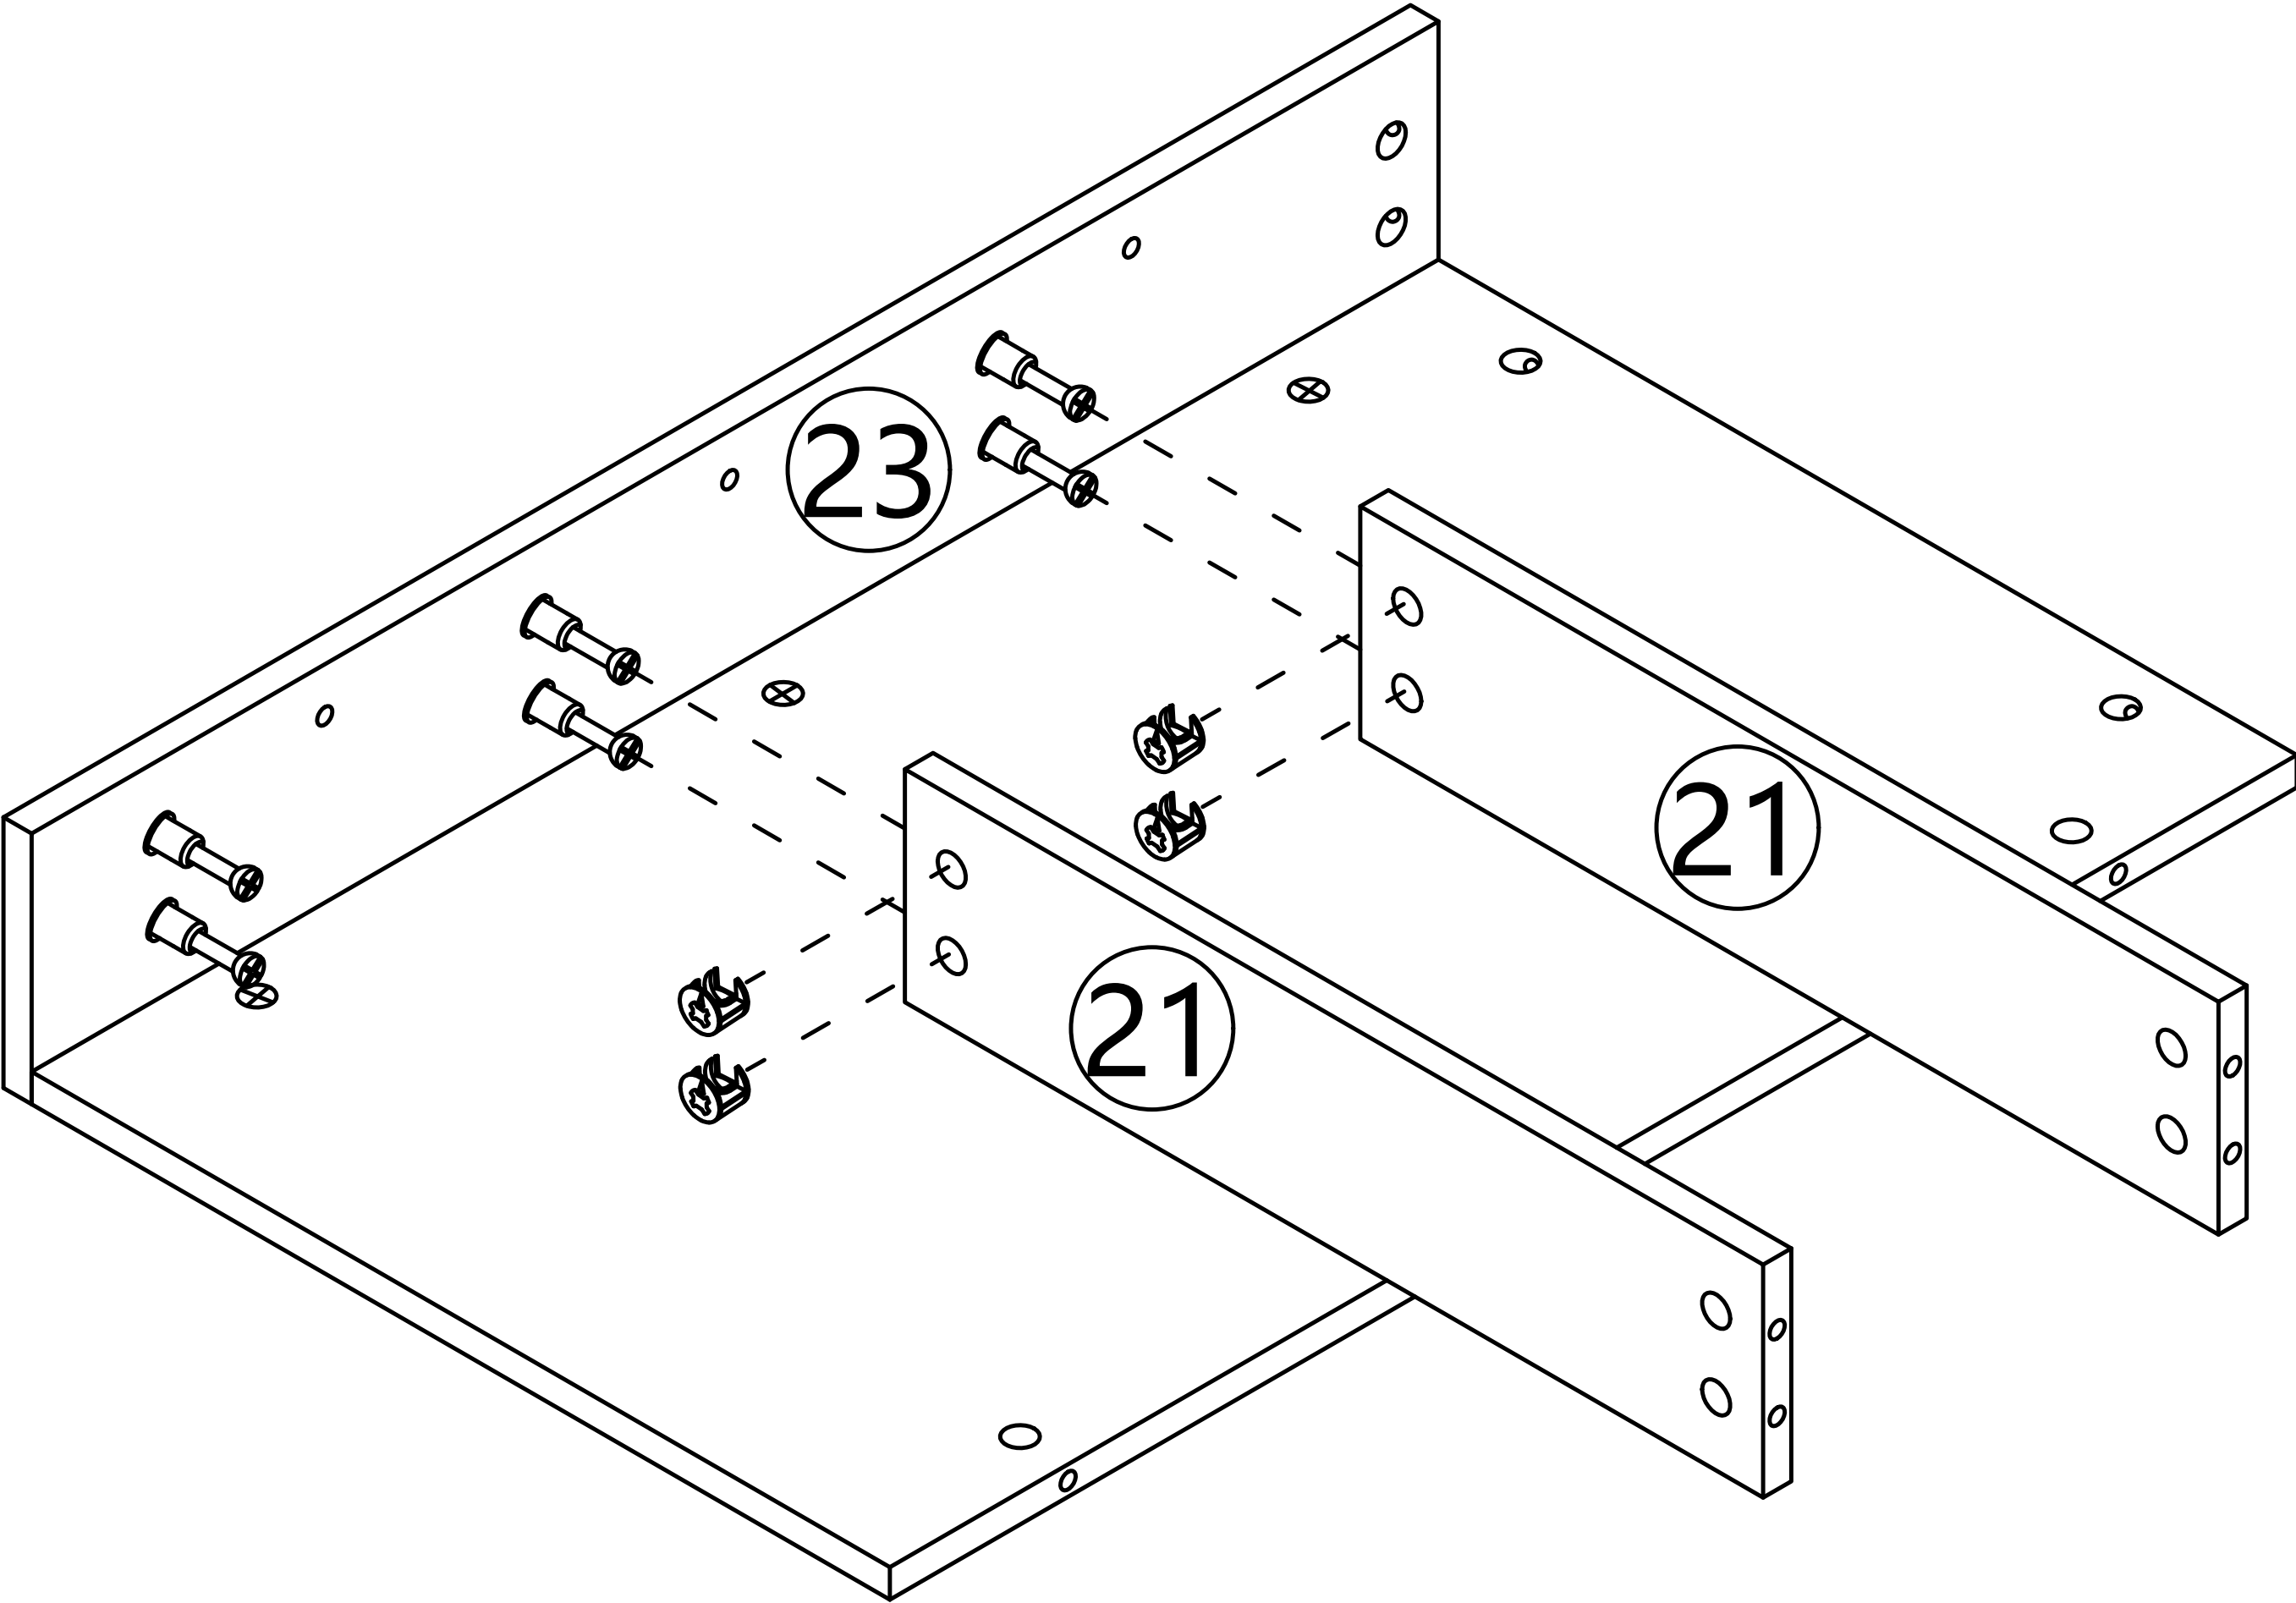


Step 43



B

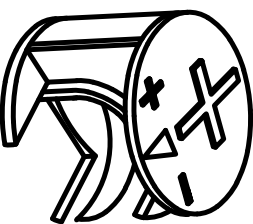



x2

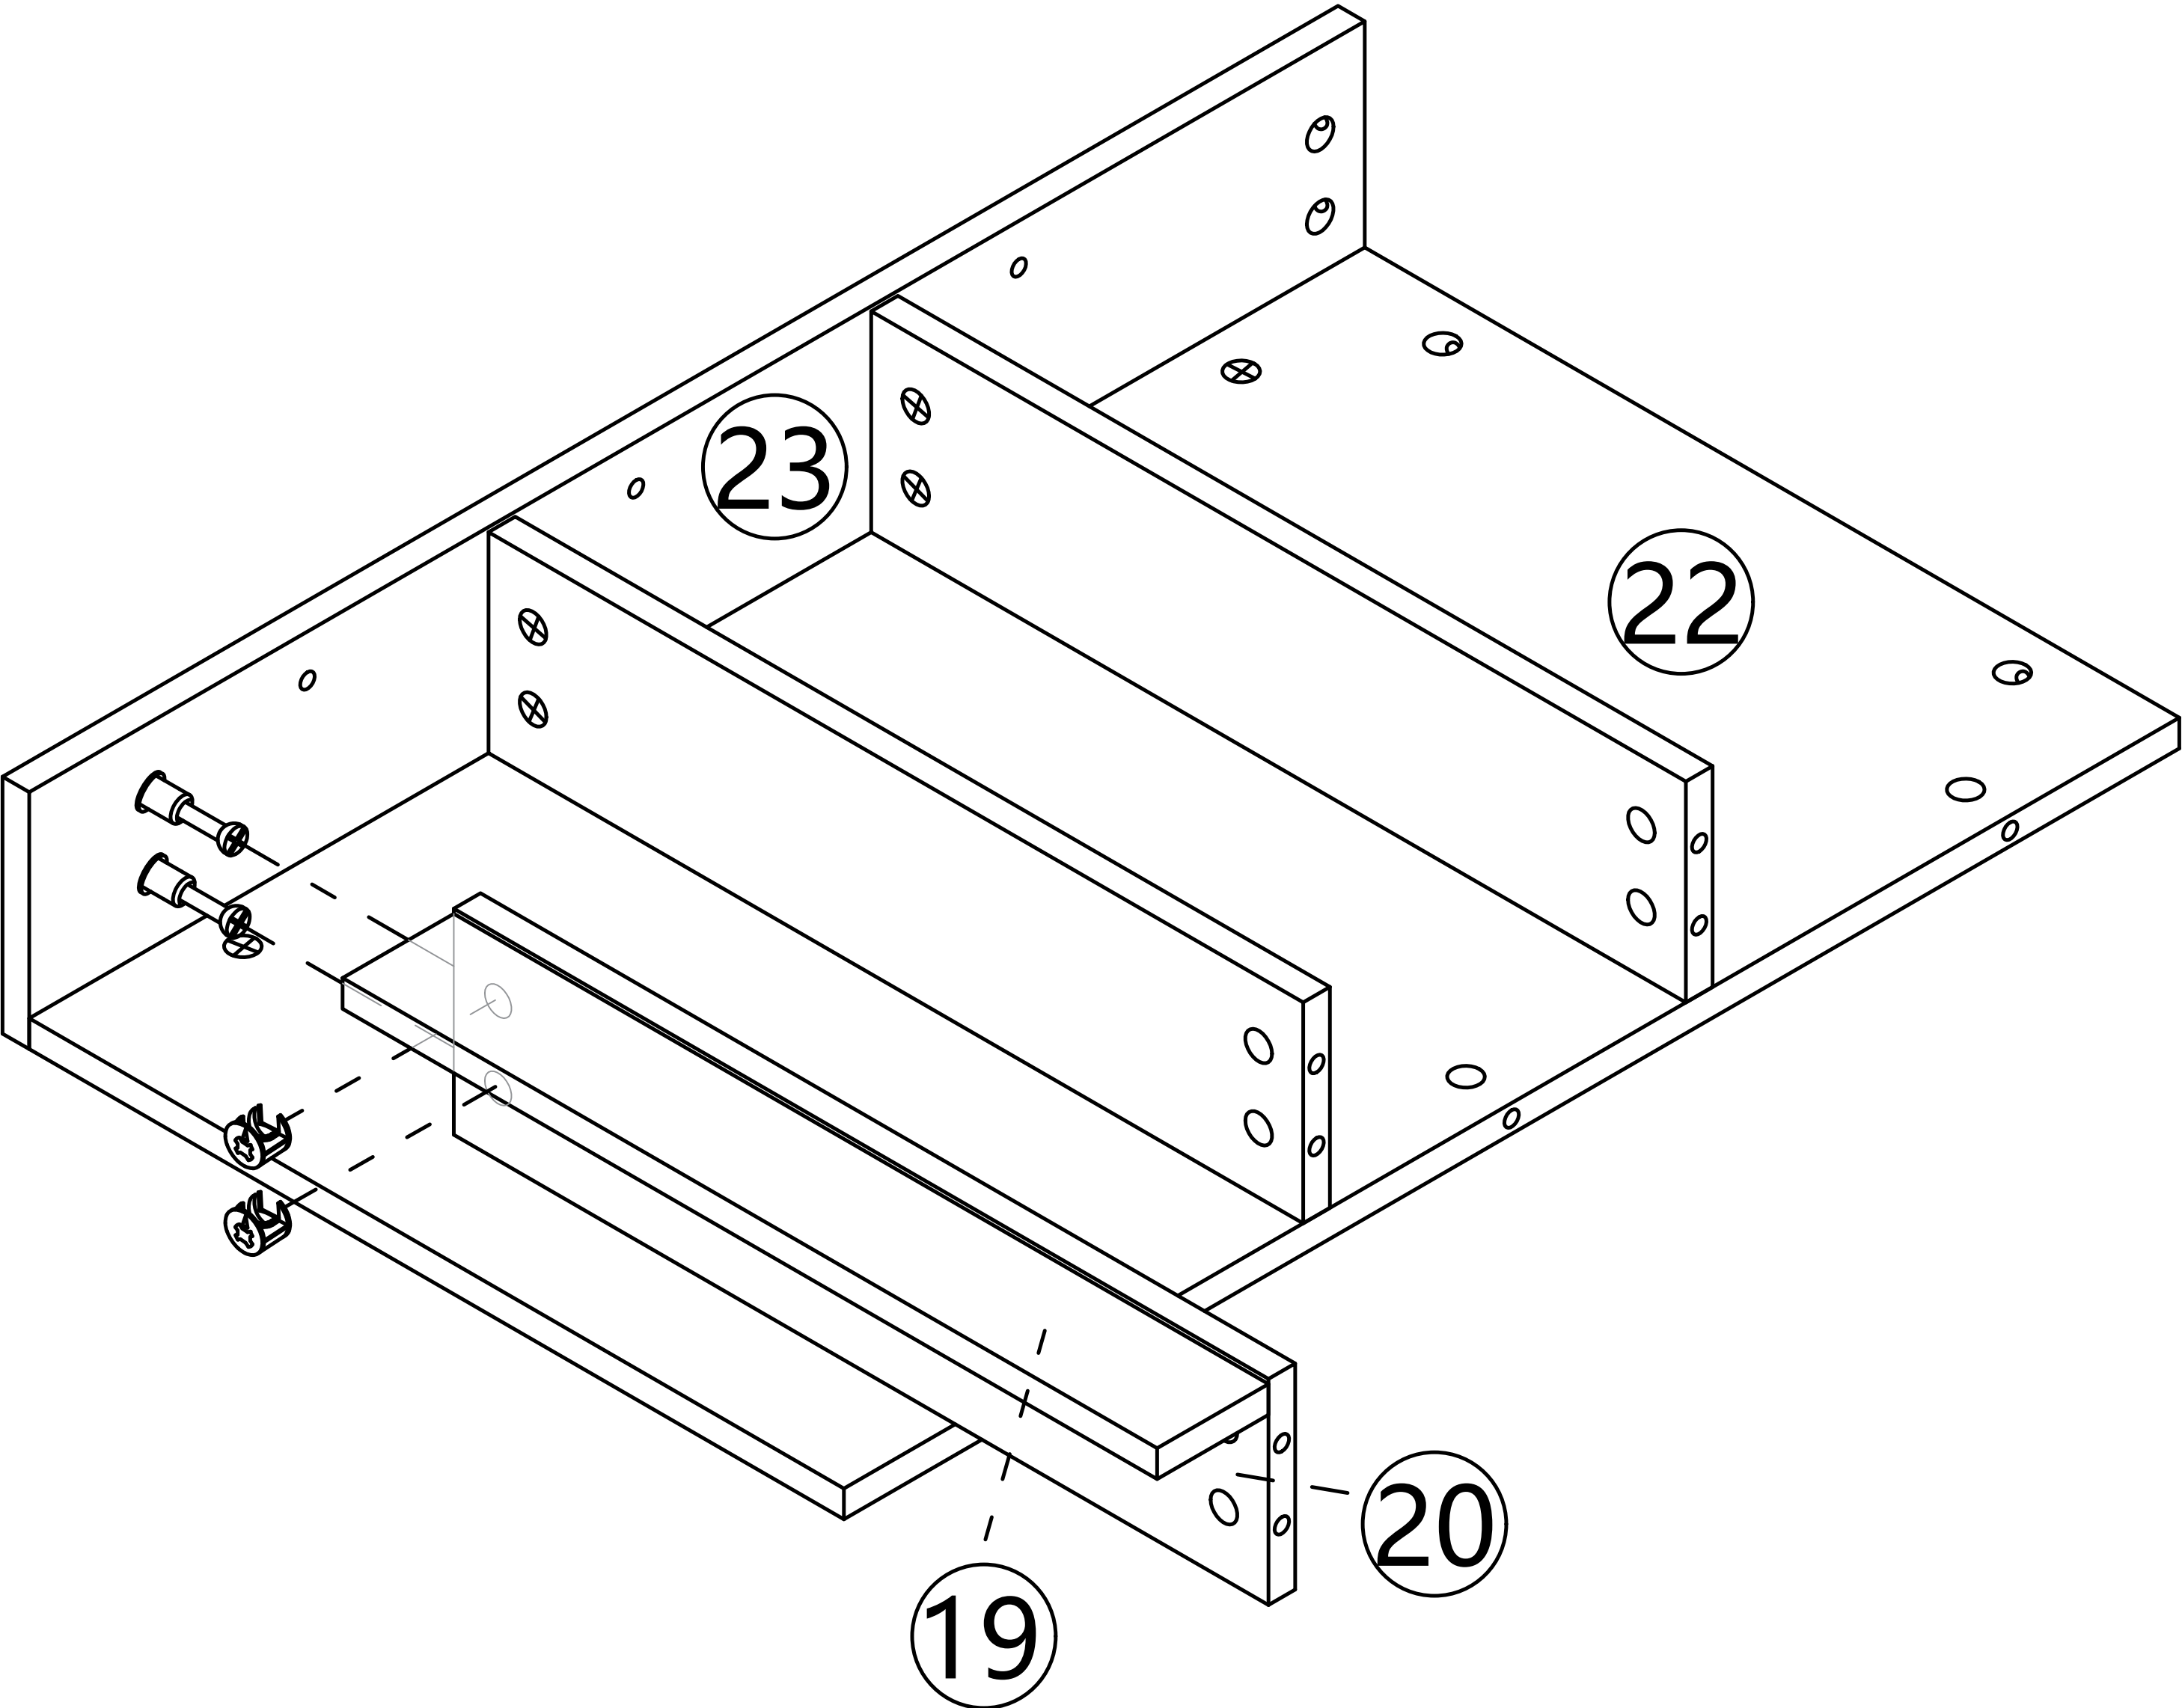

Step 44

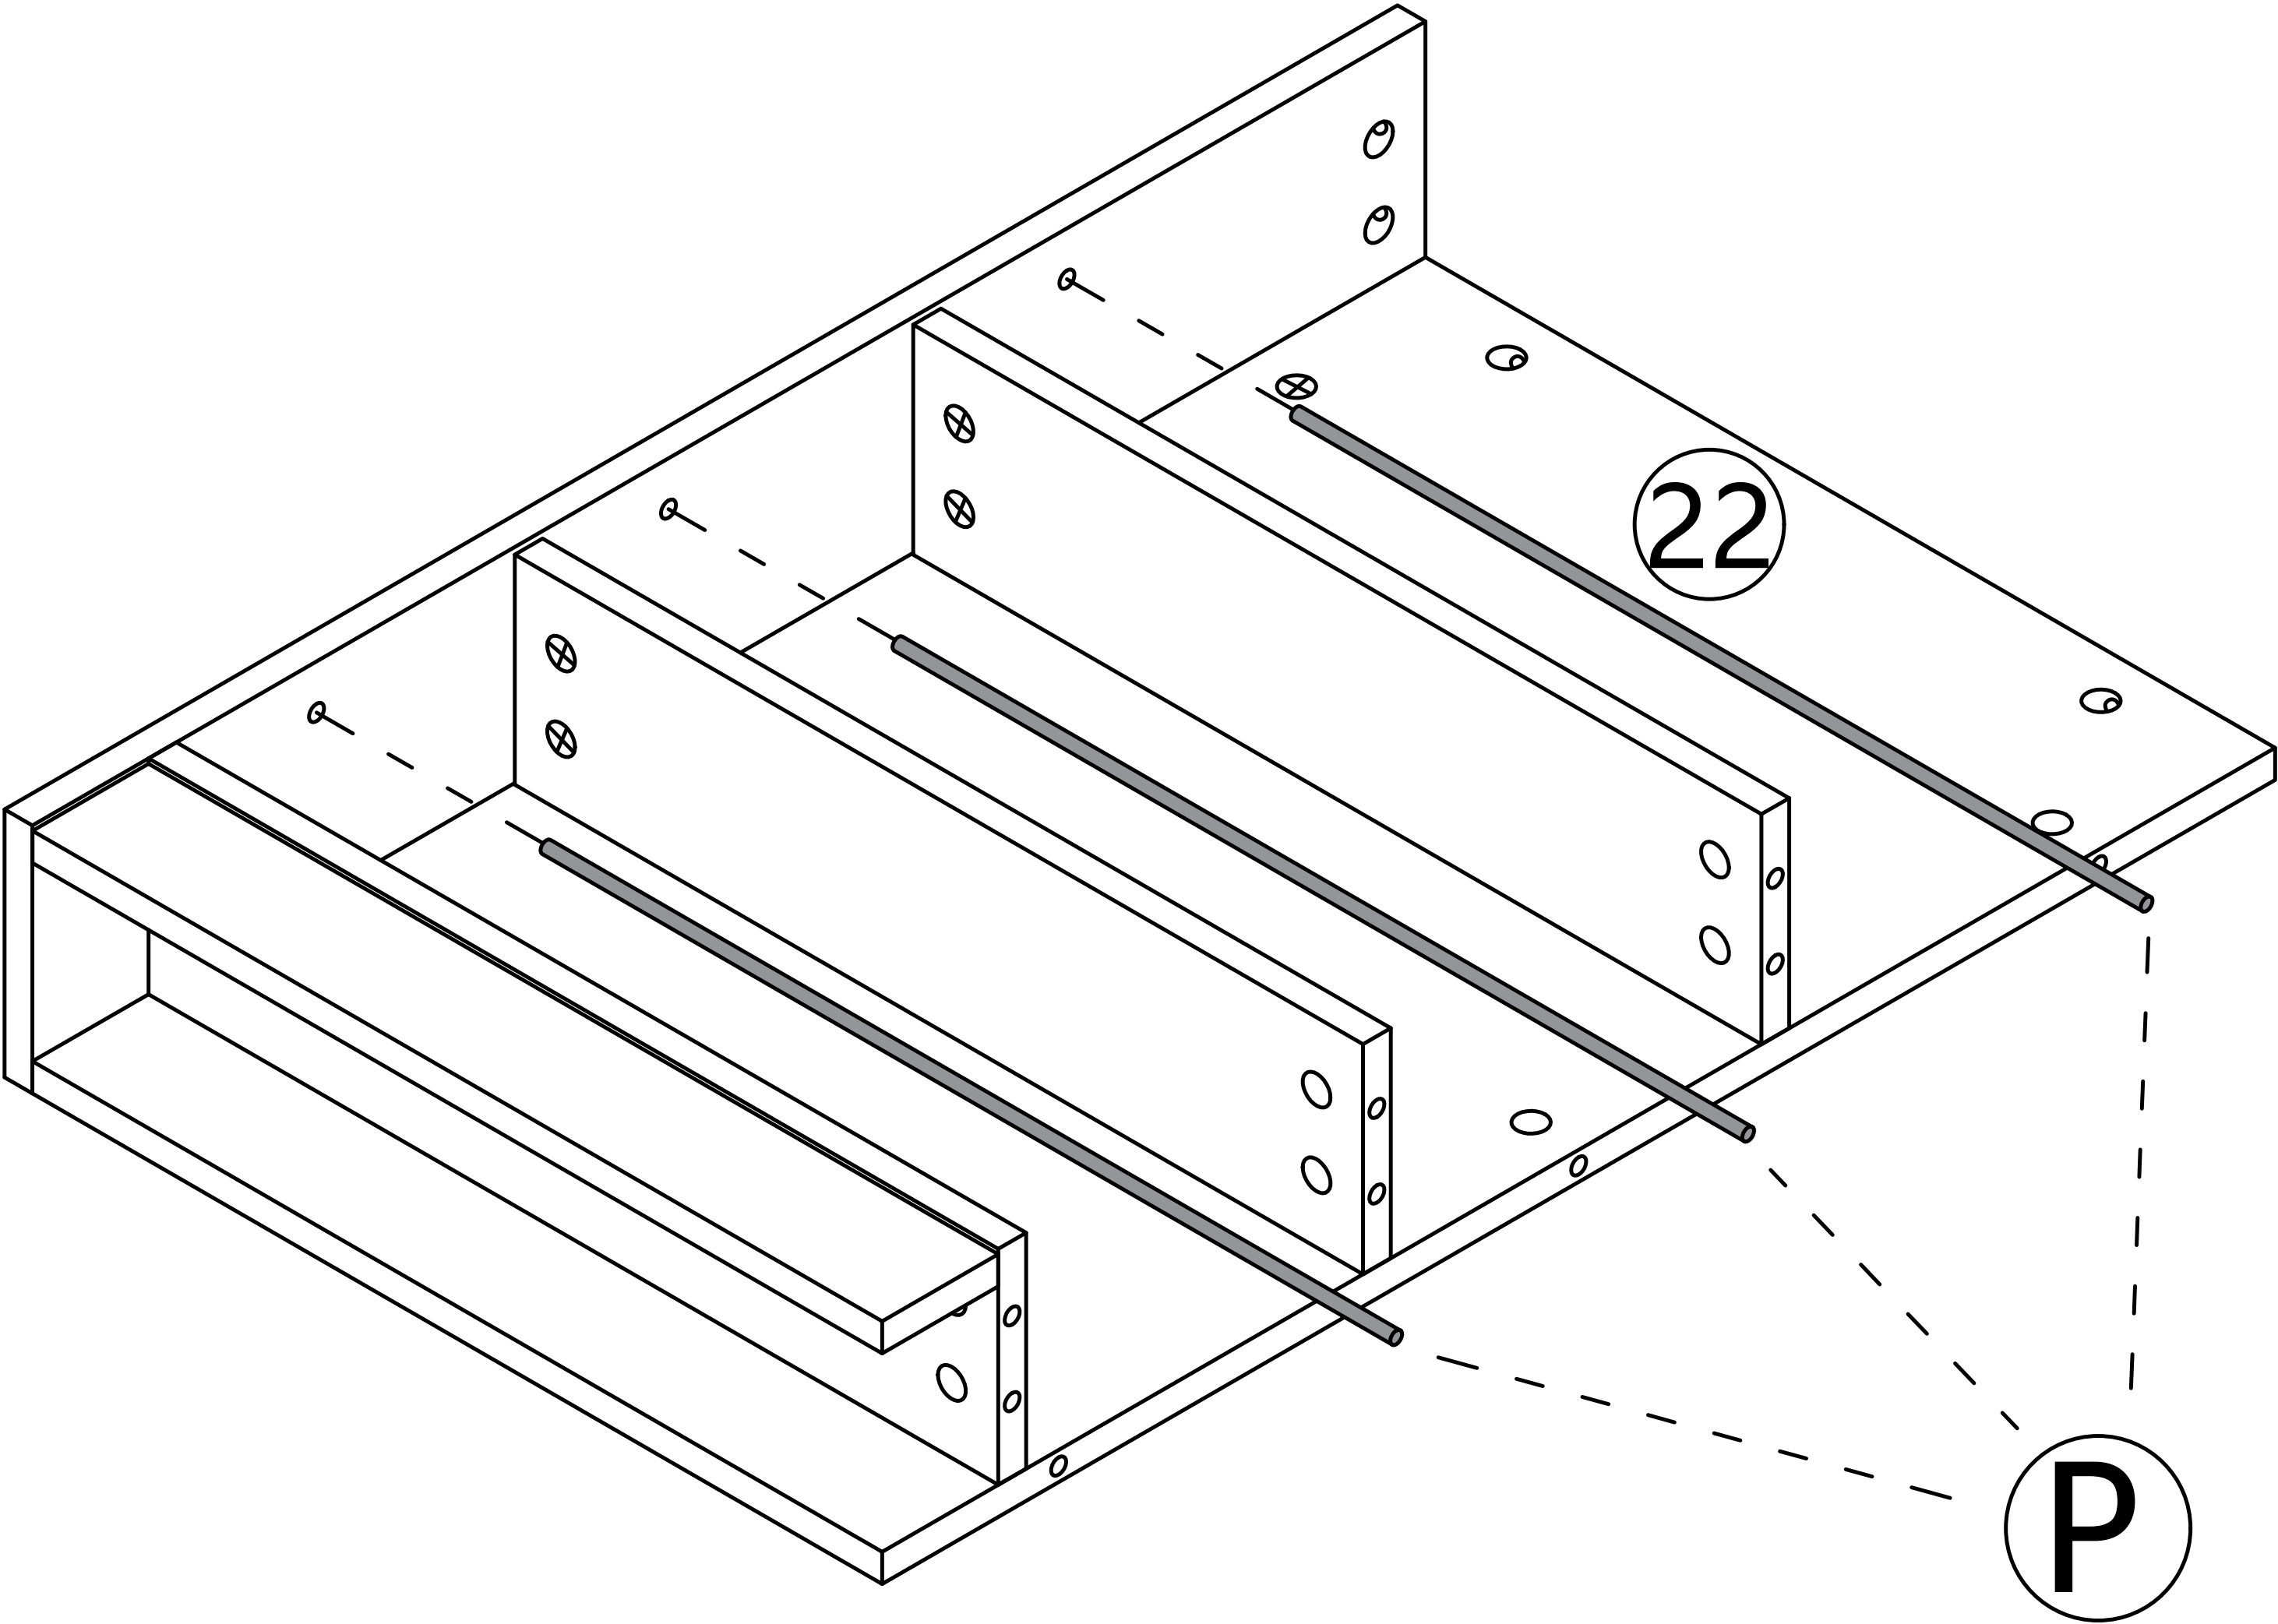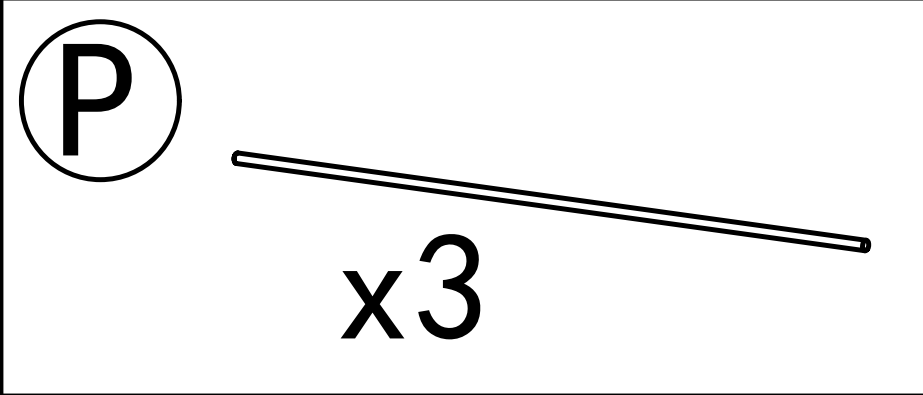


Step 45

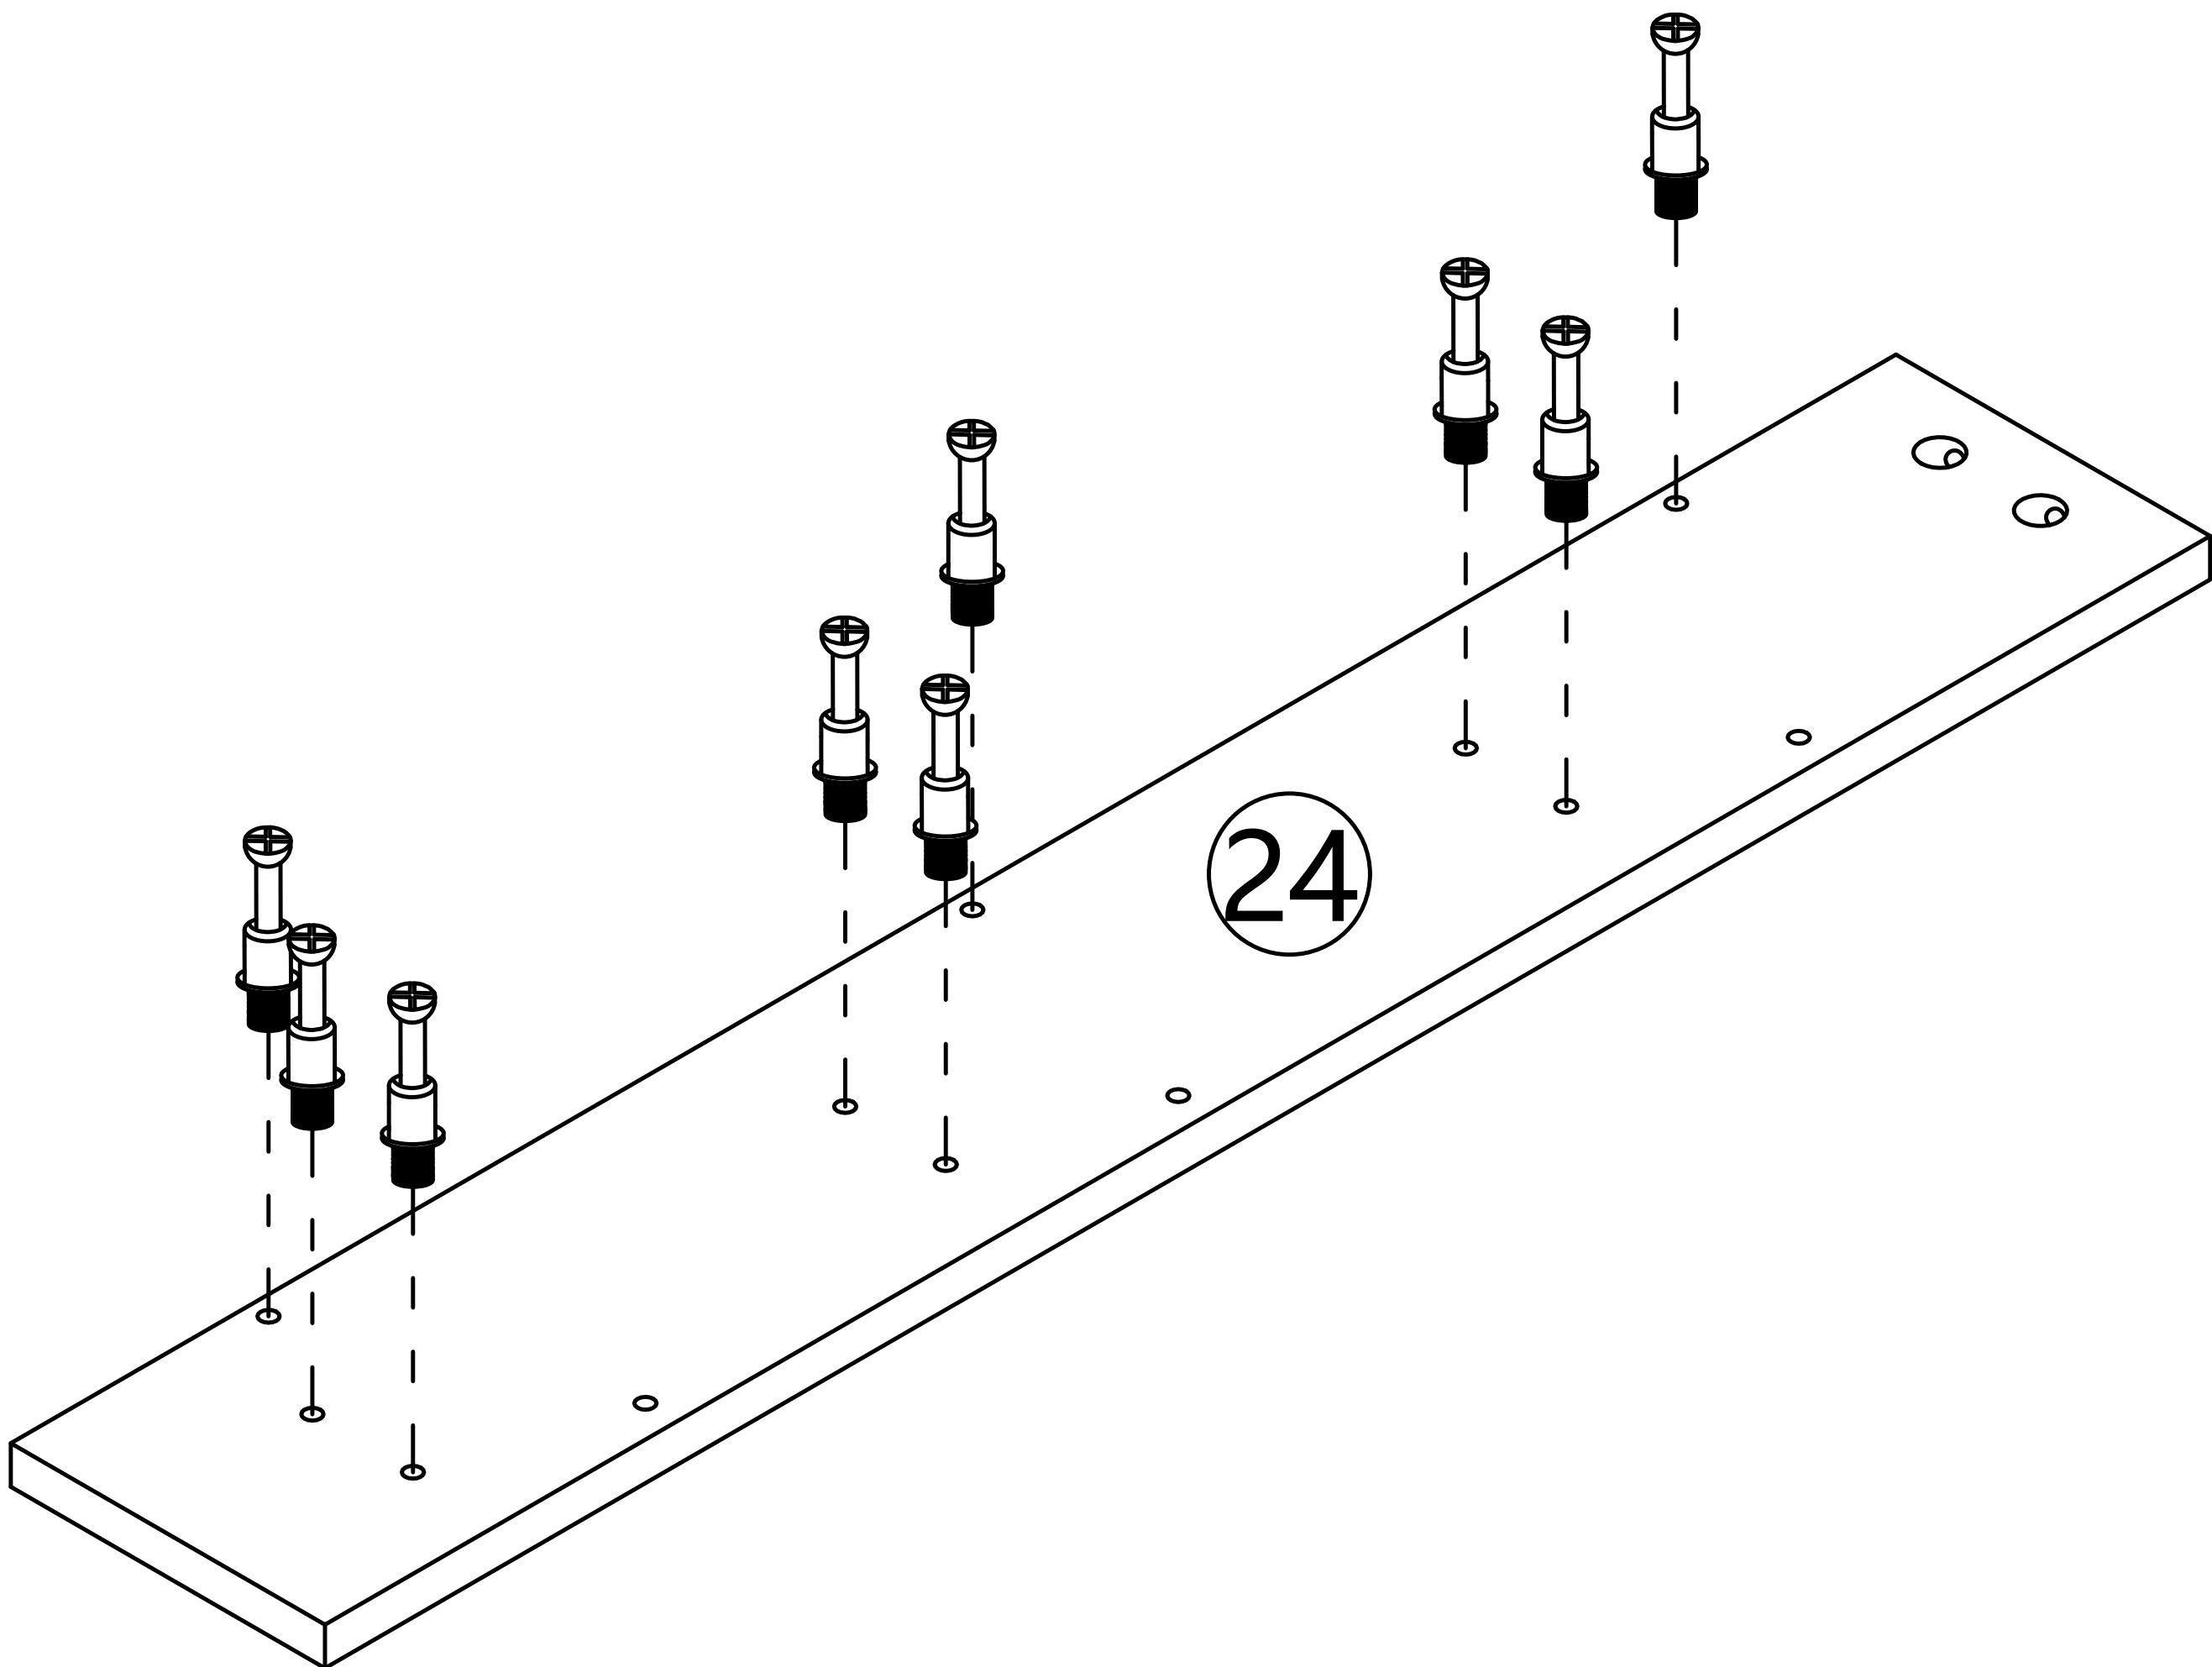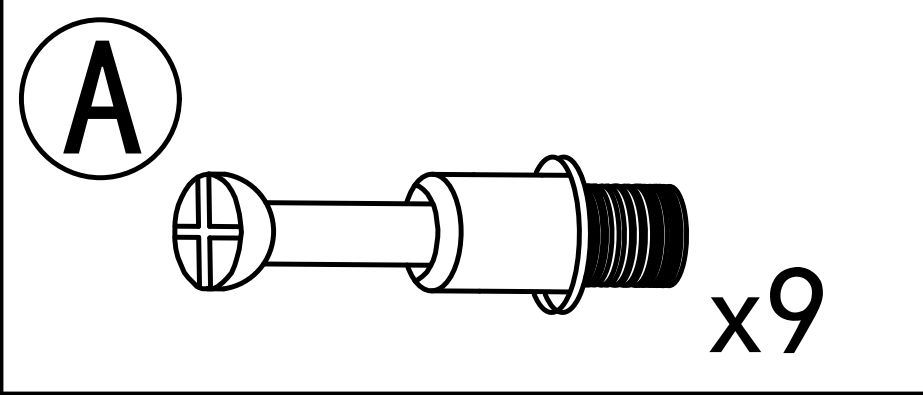


Step 46

B

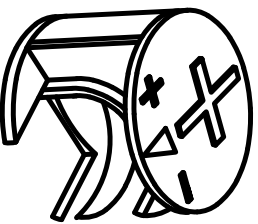


x9

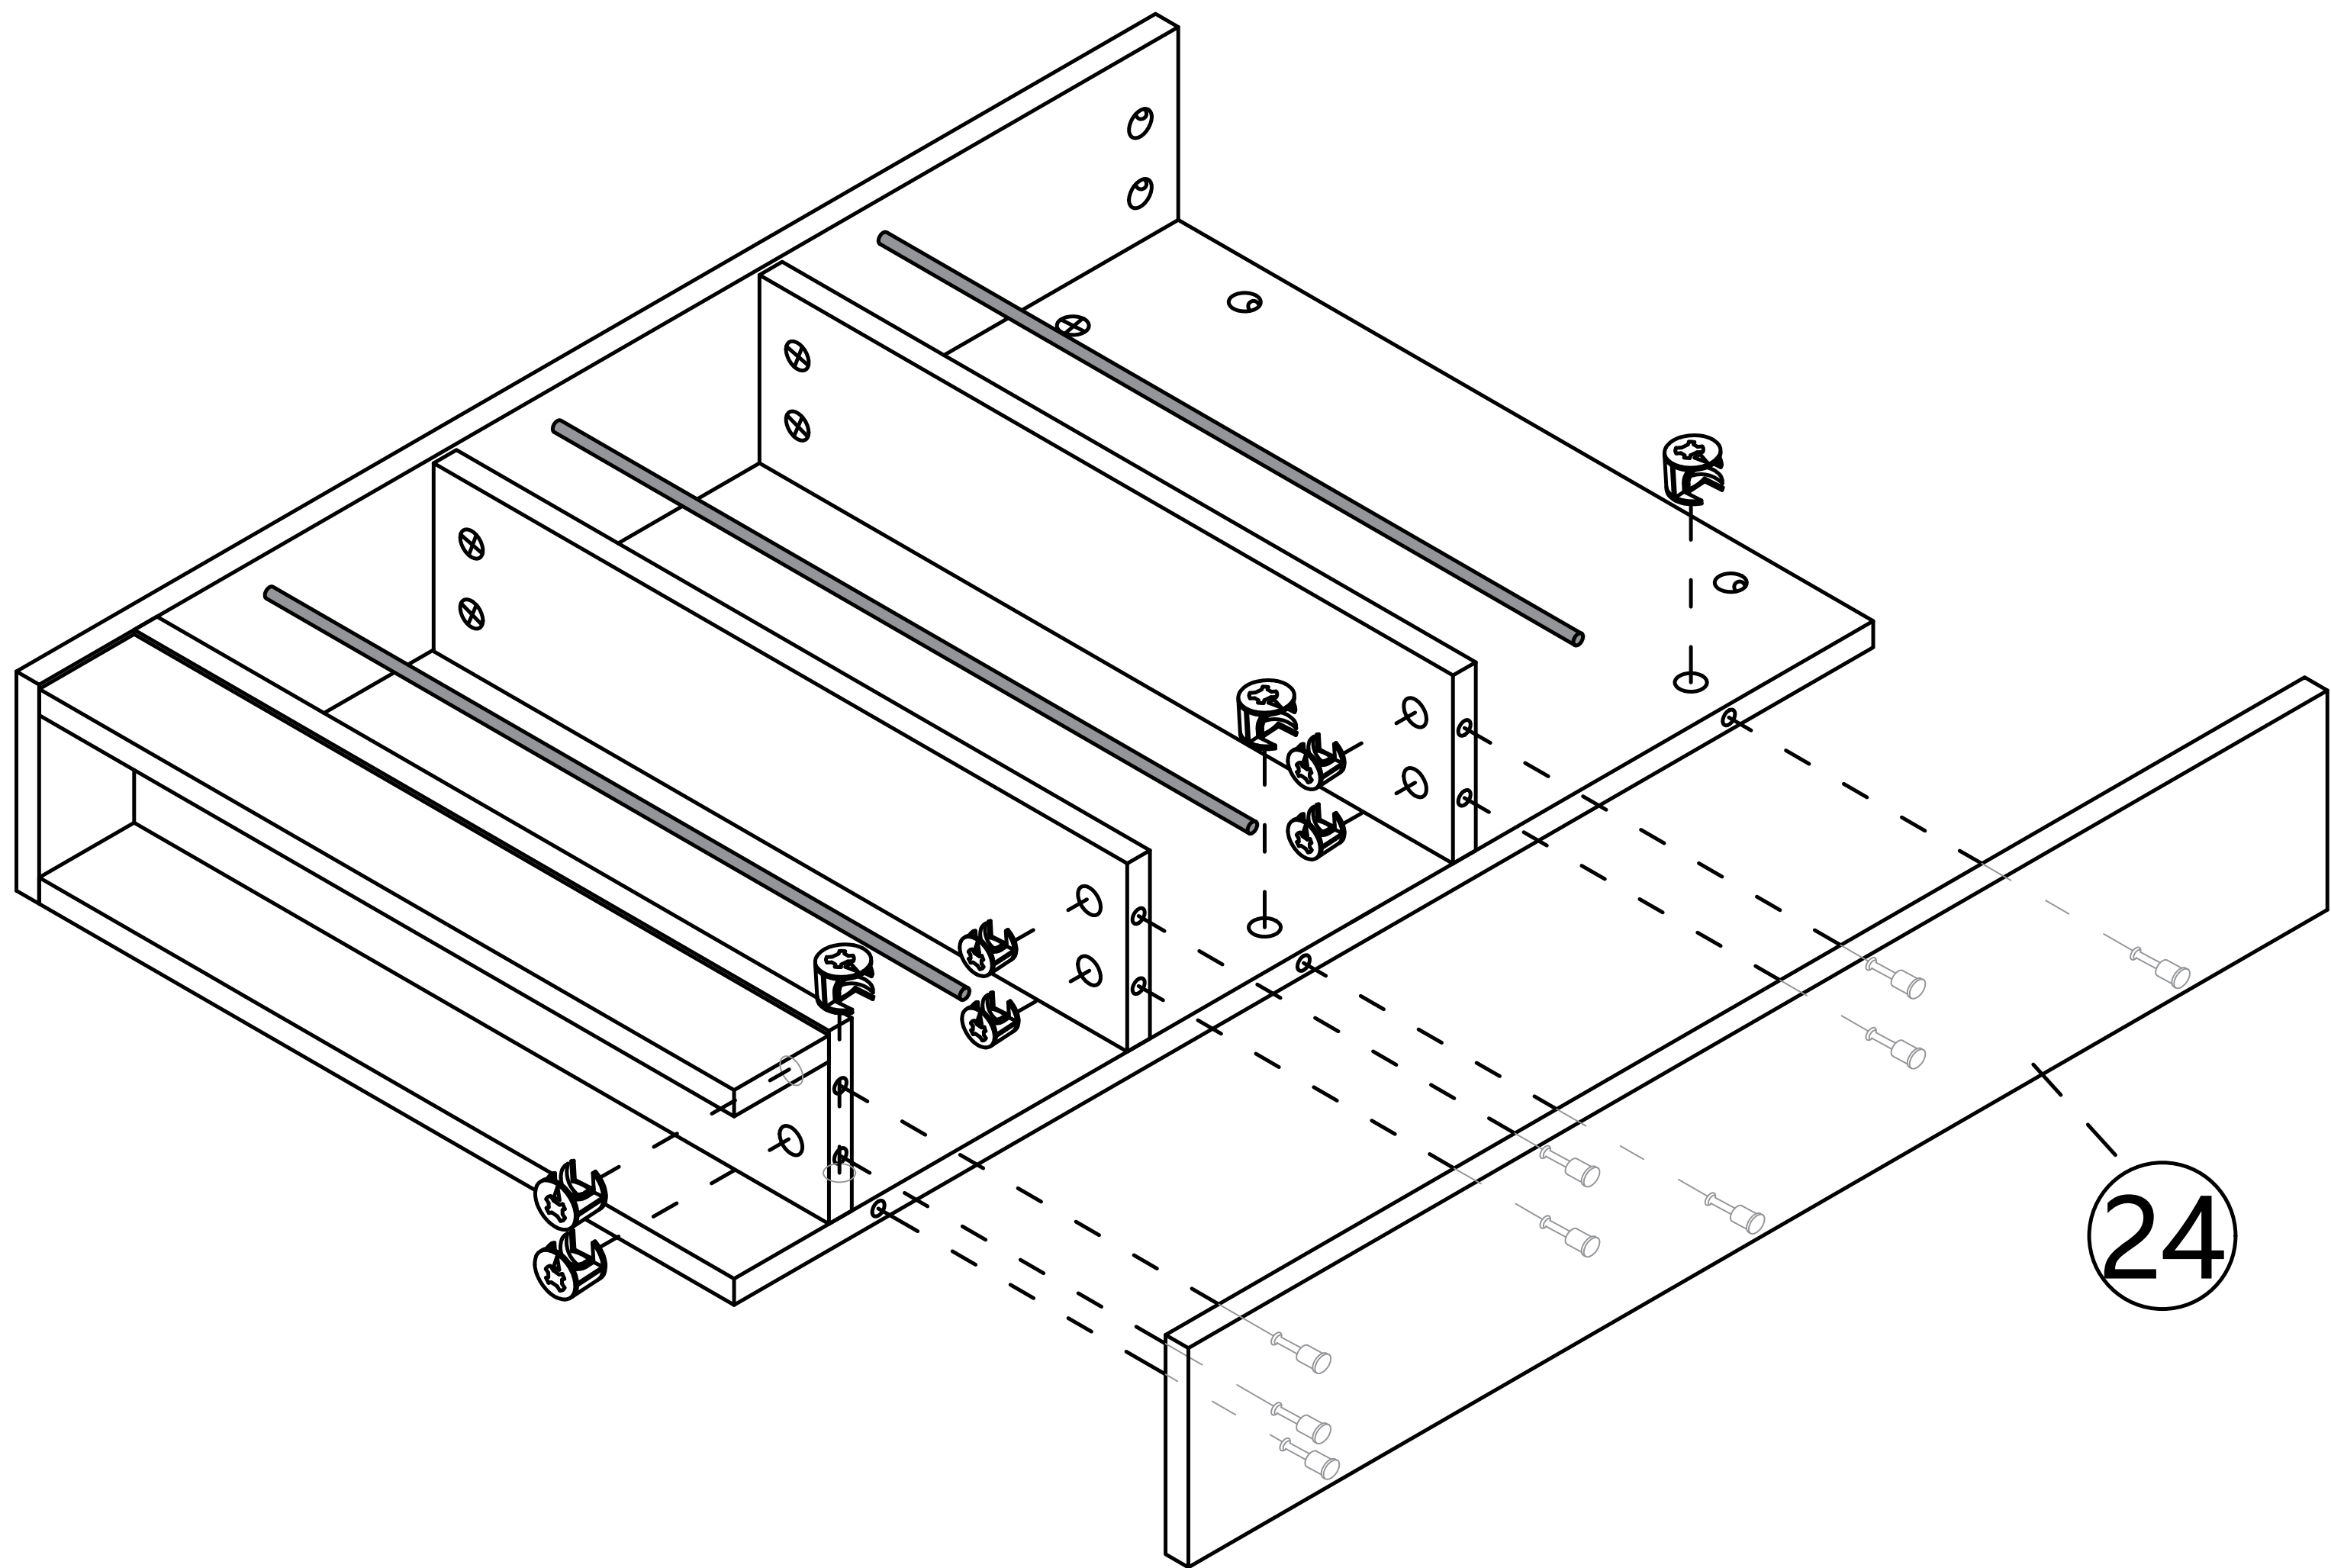


Step 47

E


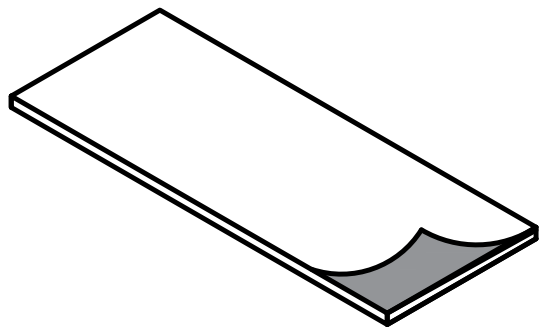


x4

Tear off release paper and stick the black foot pad on the board

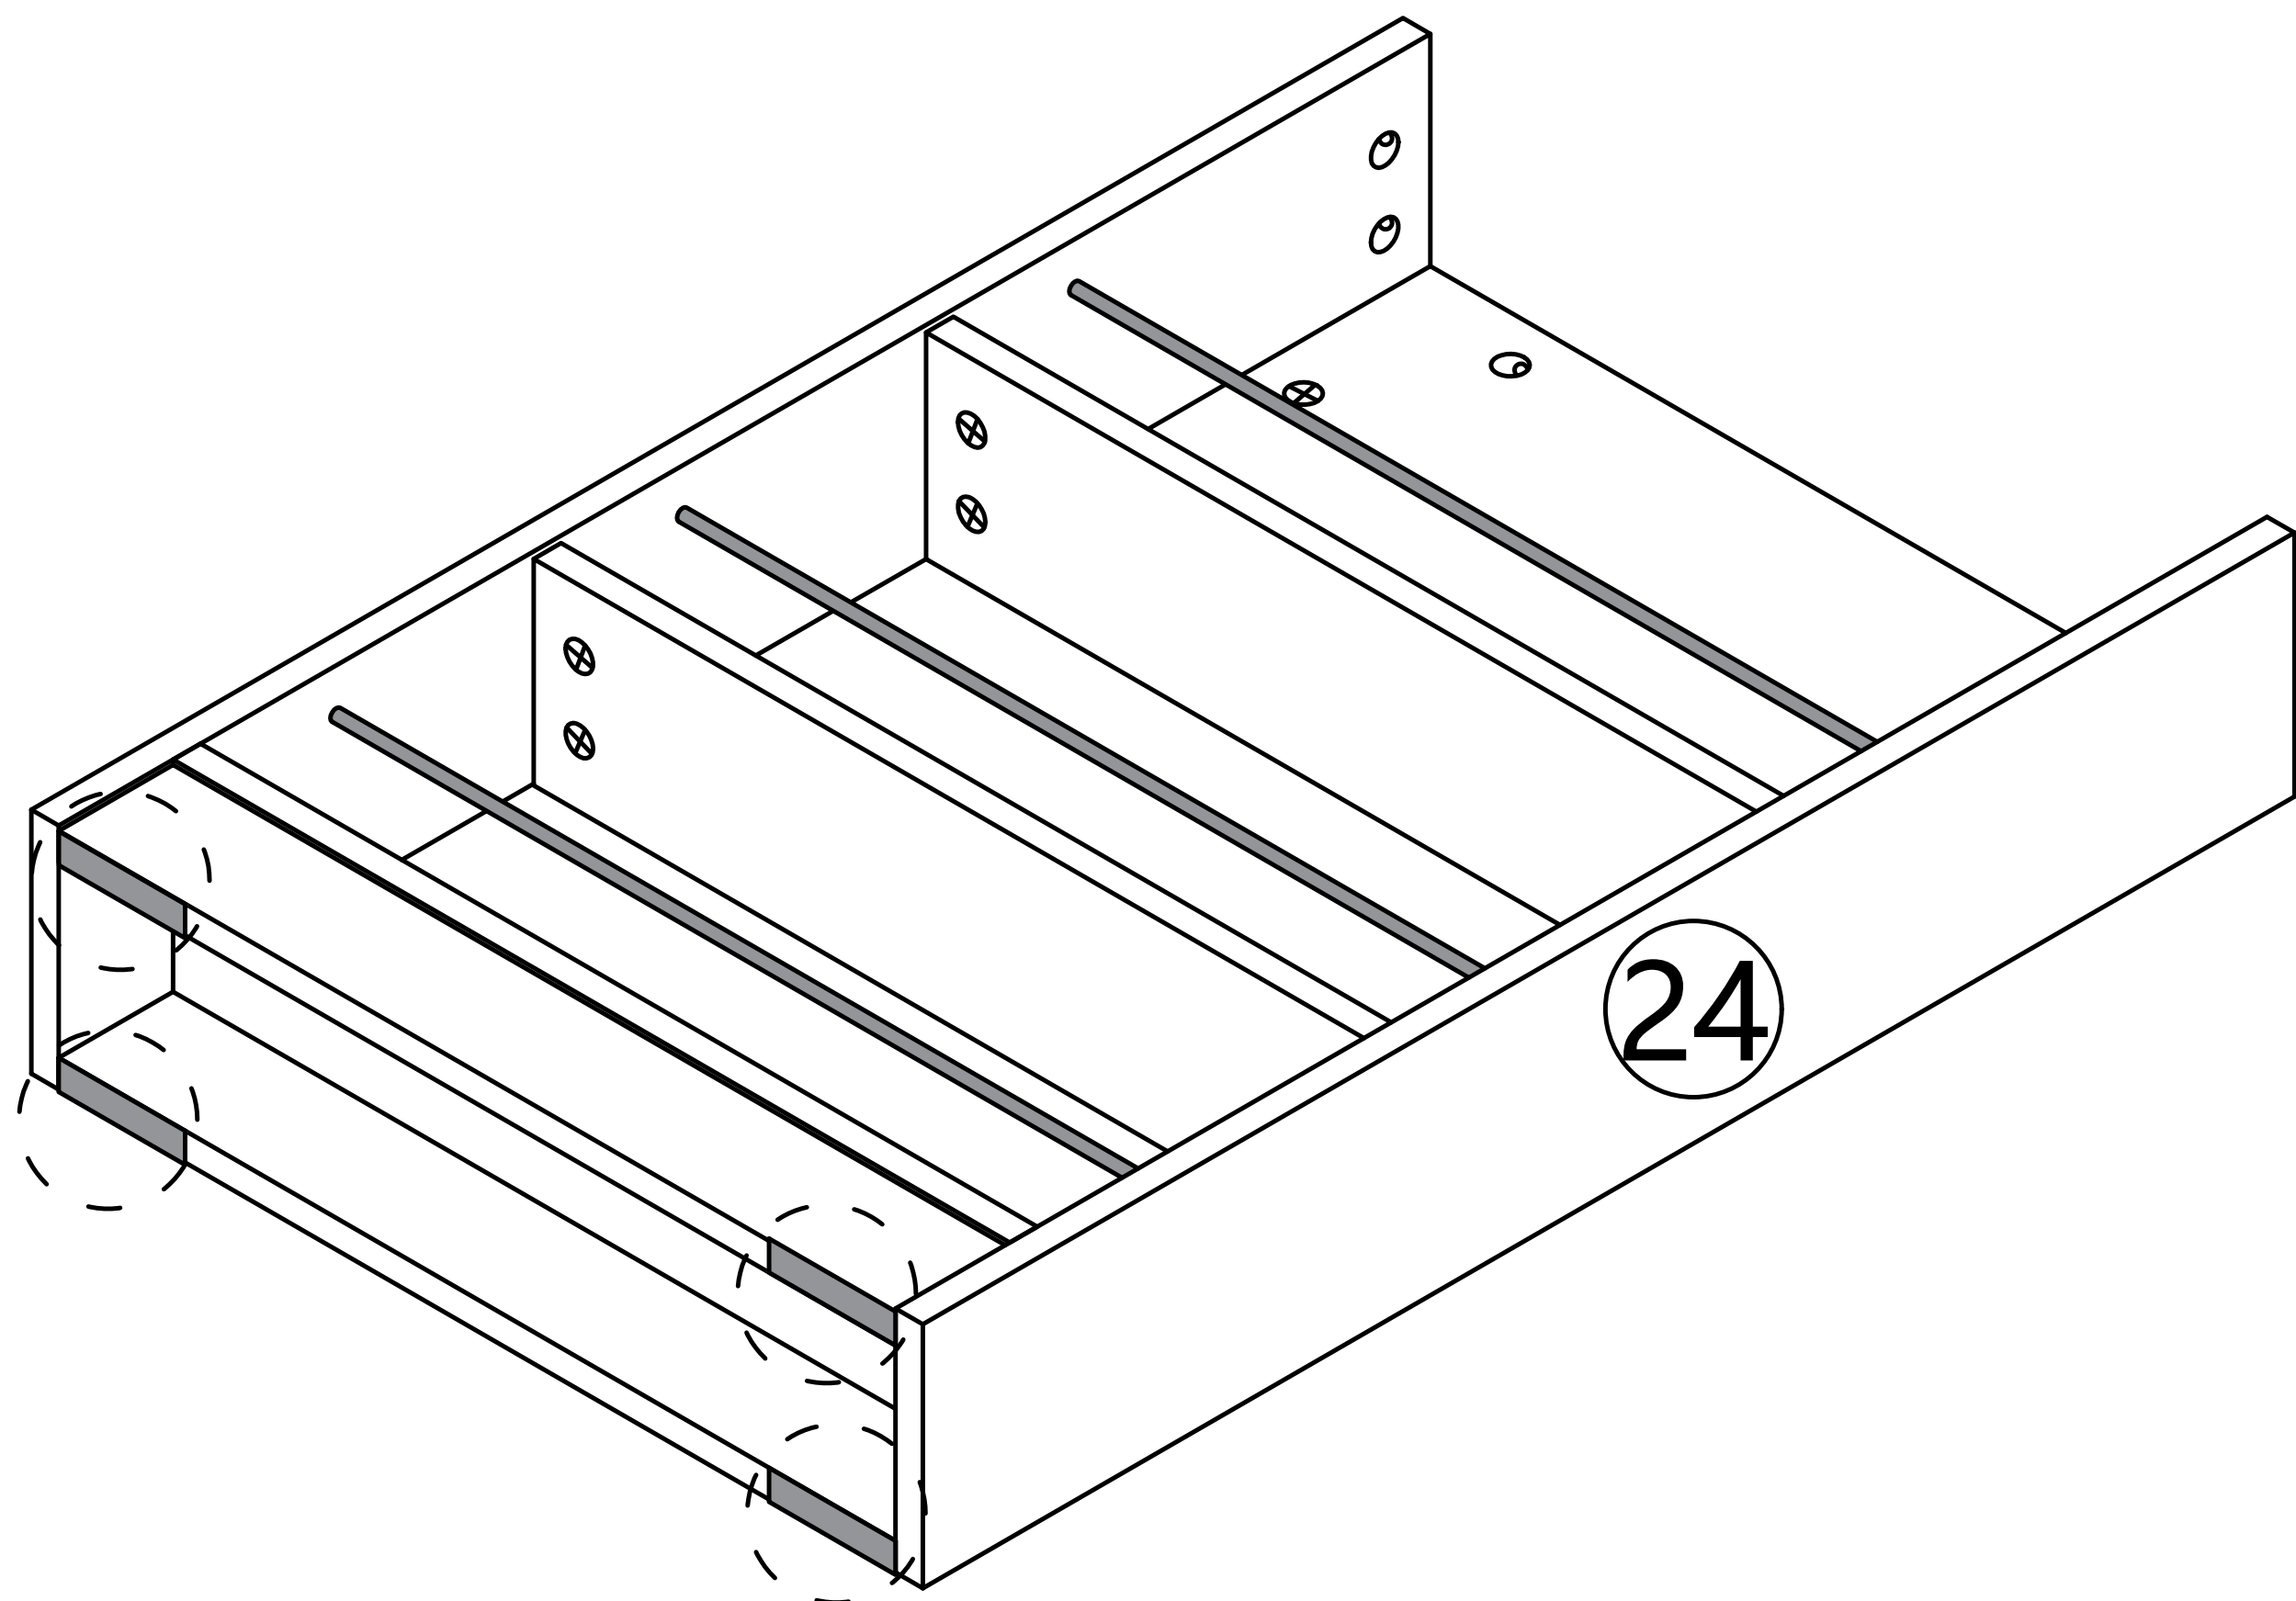


Step 48

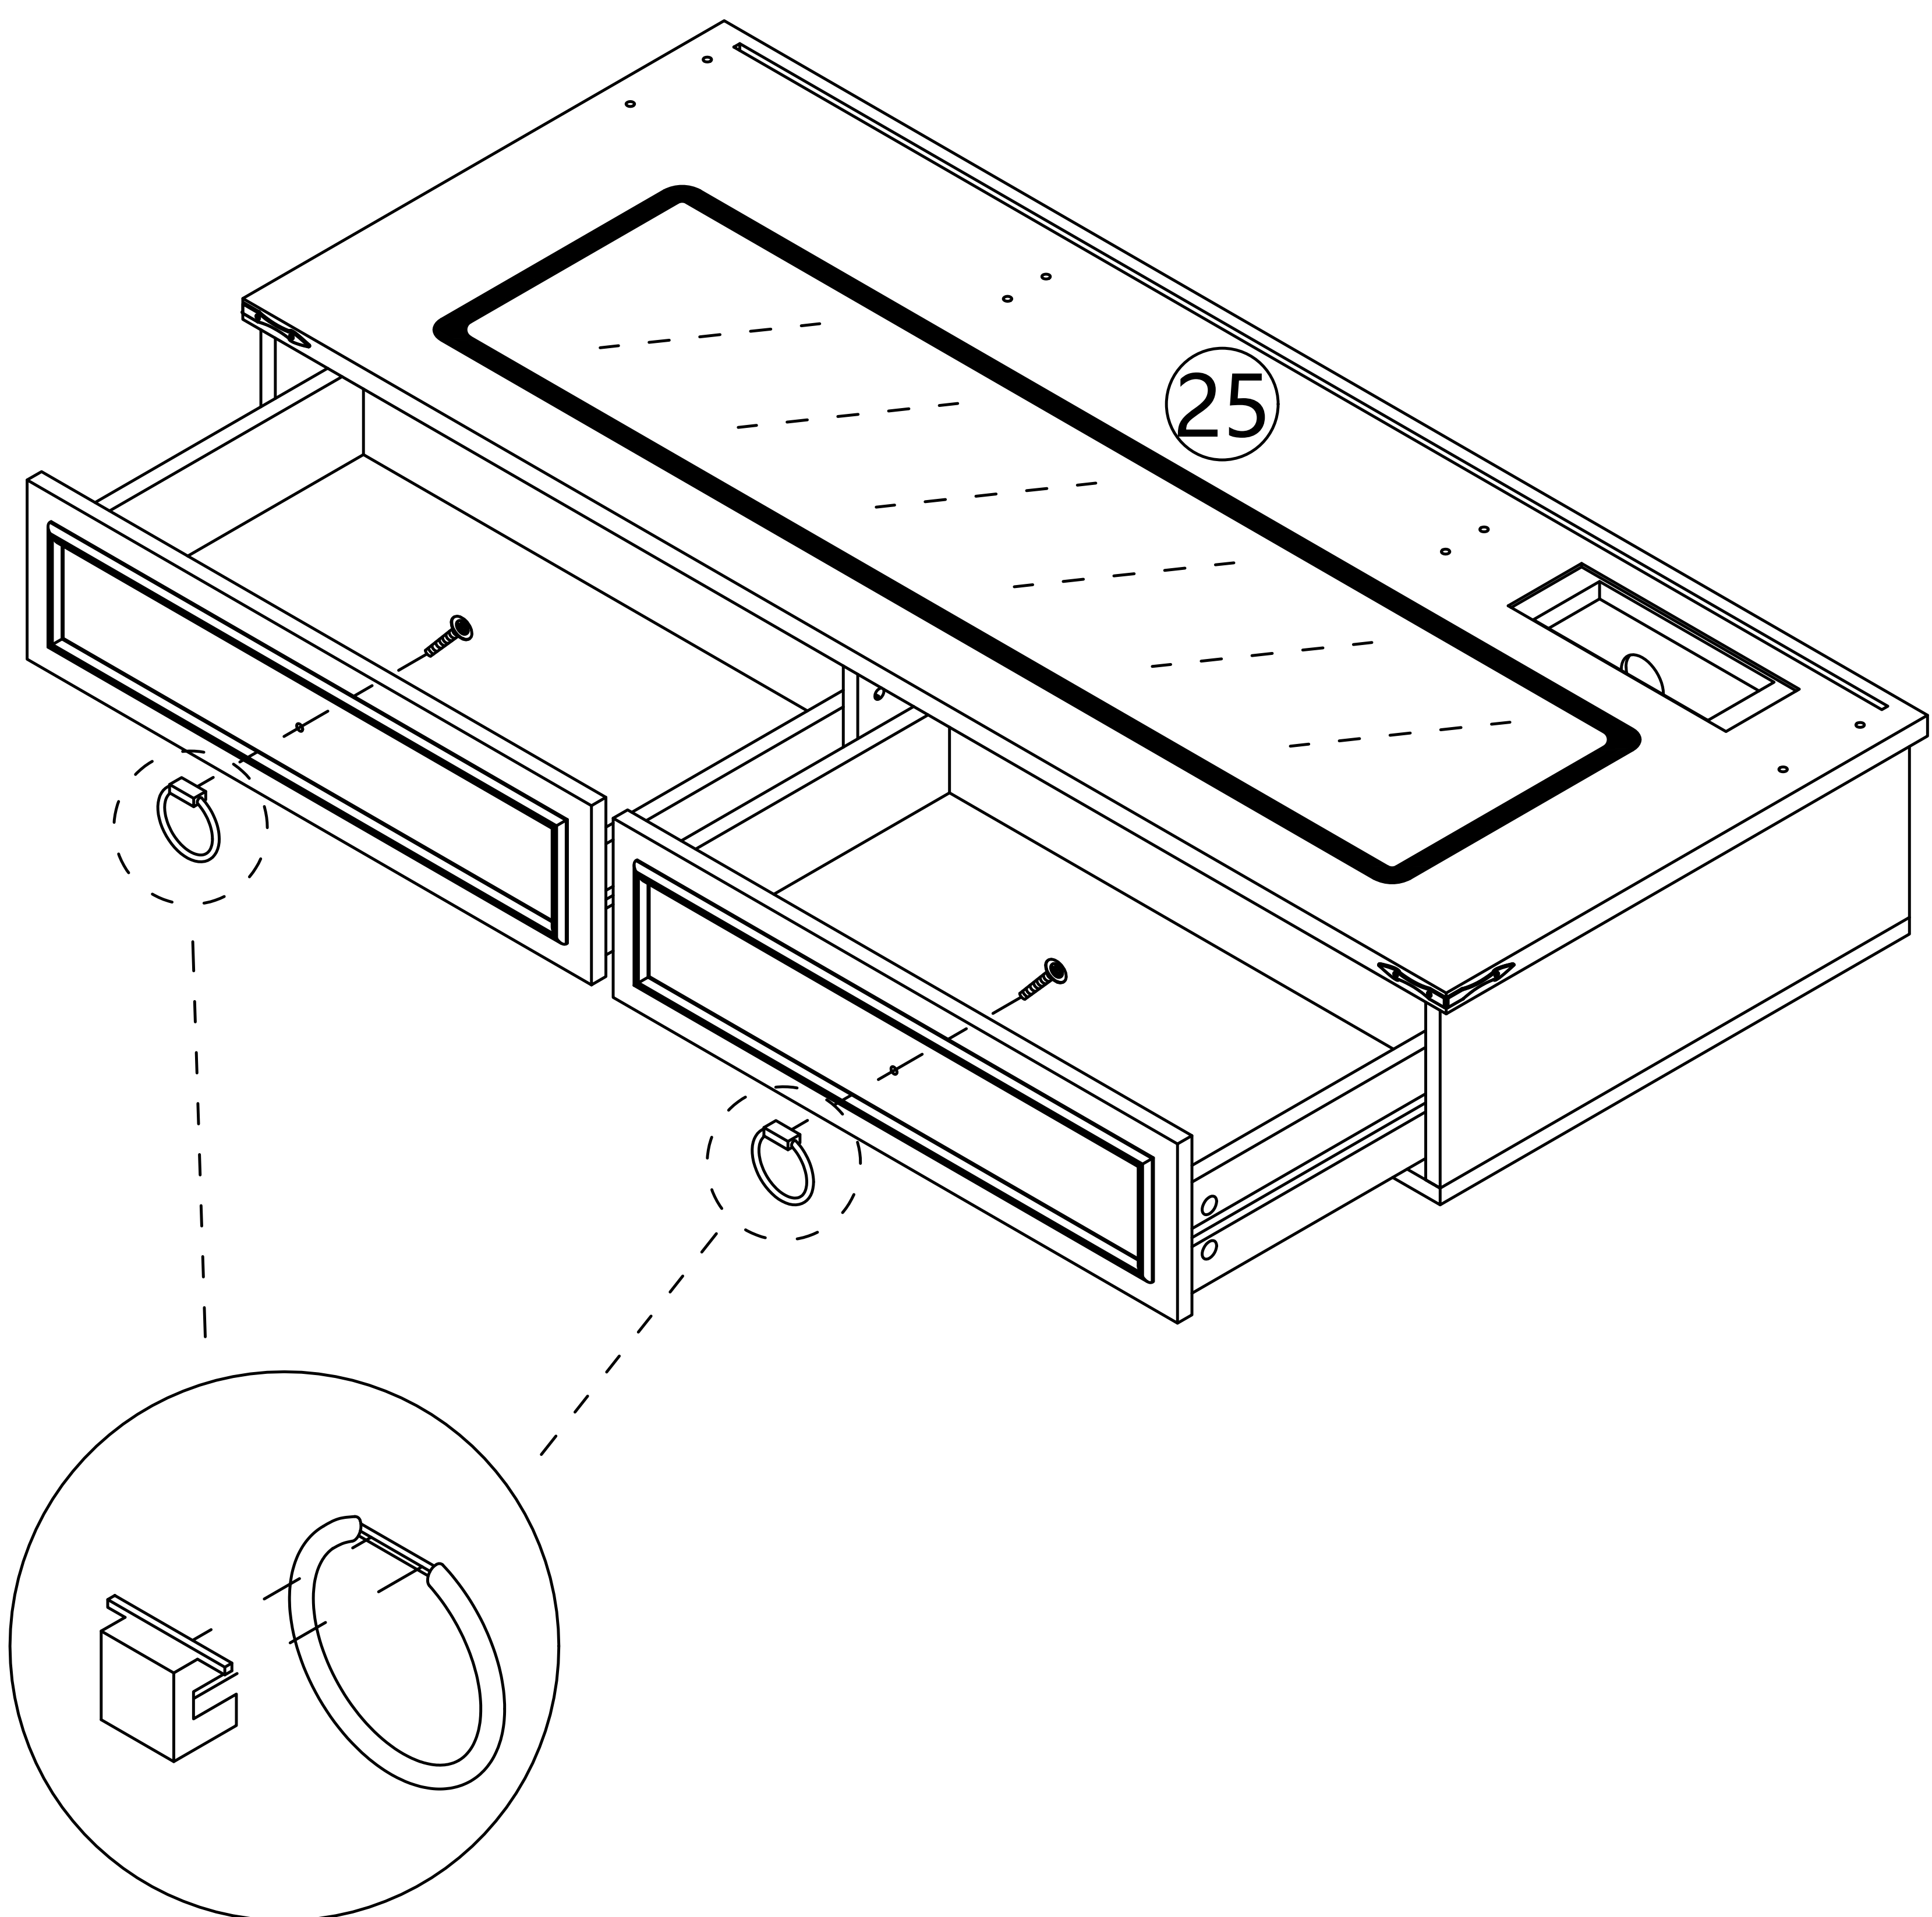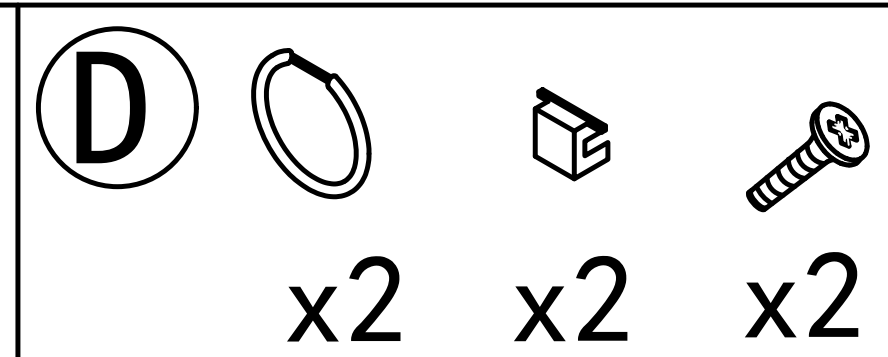

Attention: Remove the iron wire before installing the handle

Step 49

Q

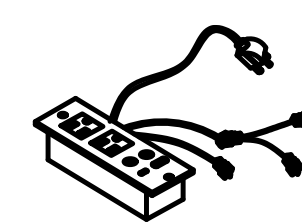




x1




x2


Attention: First, thread the plug and light wire through the holes on the back panel, and then install the power strip

Thread the light wire through the back panel hole

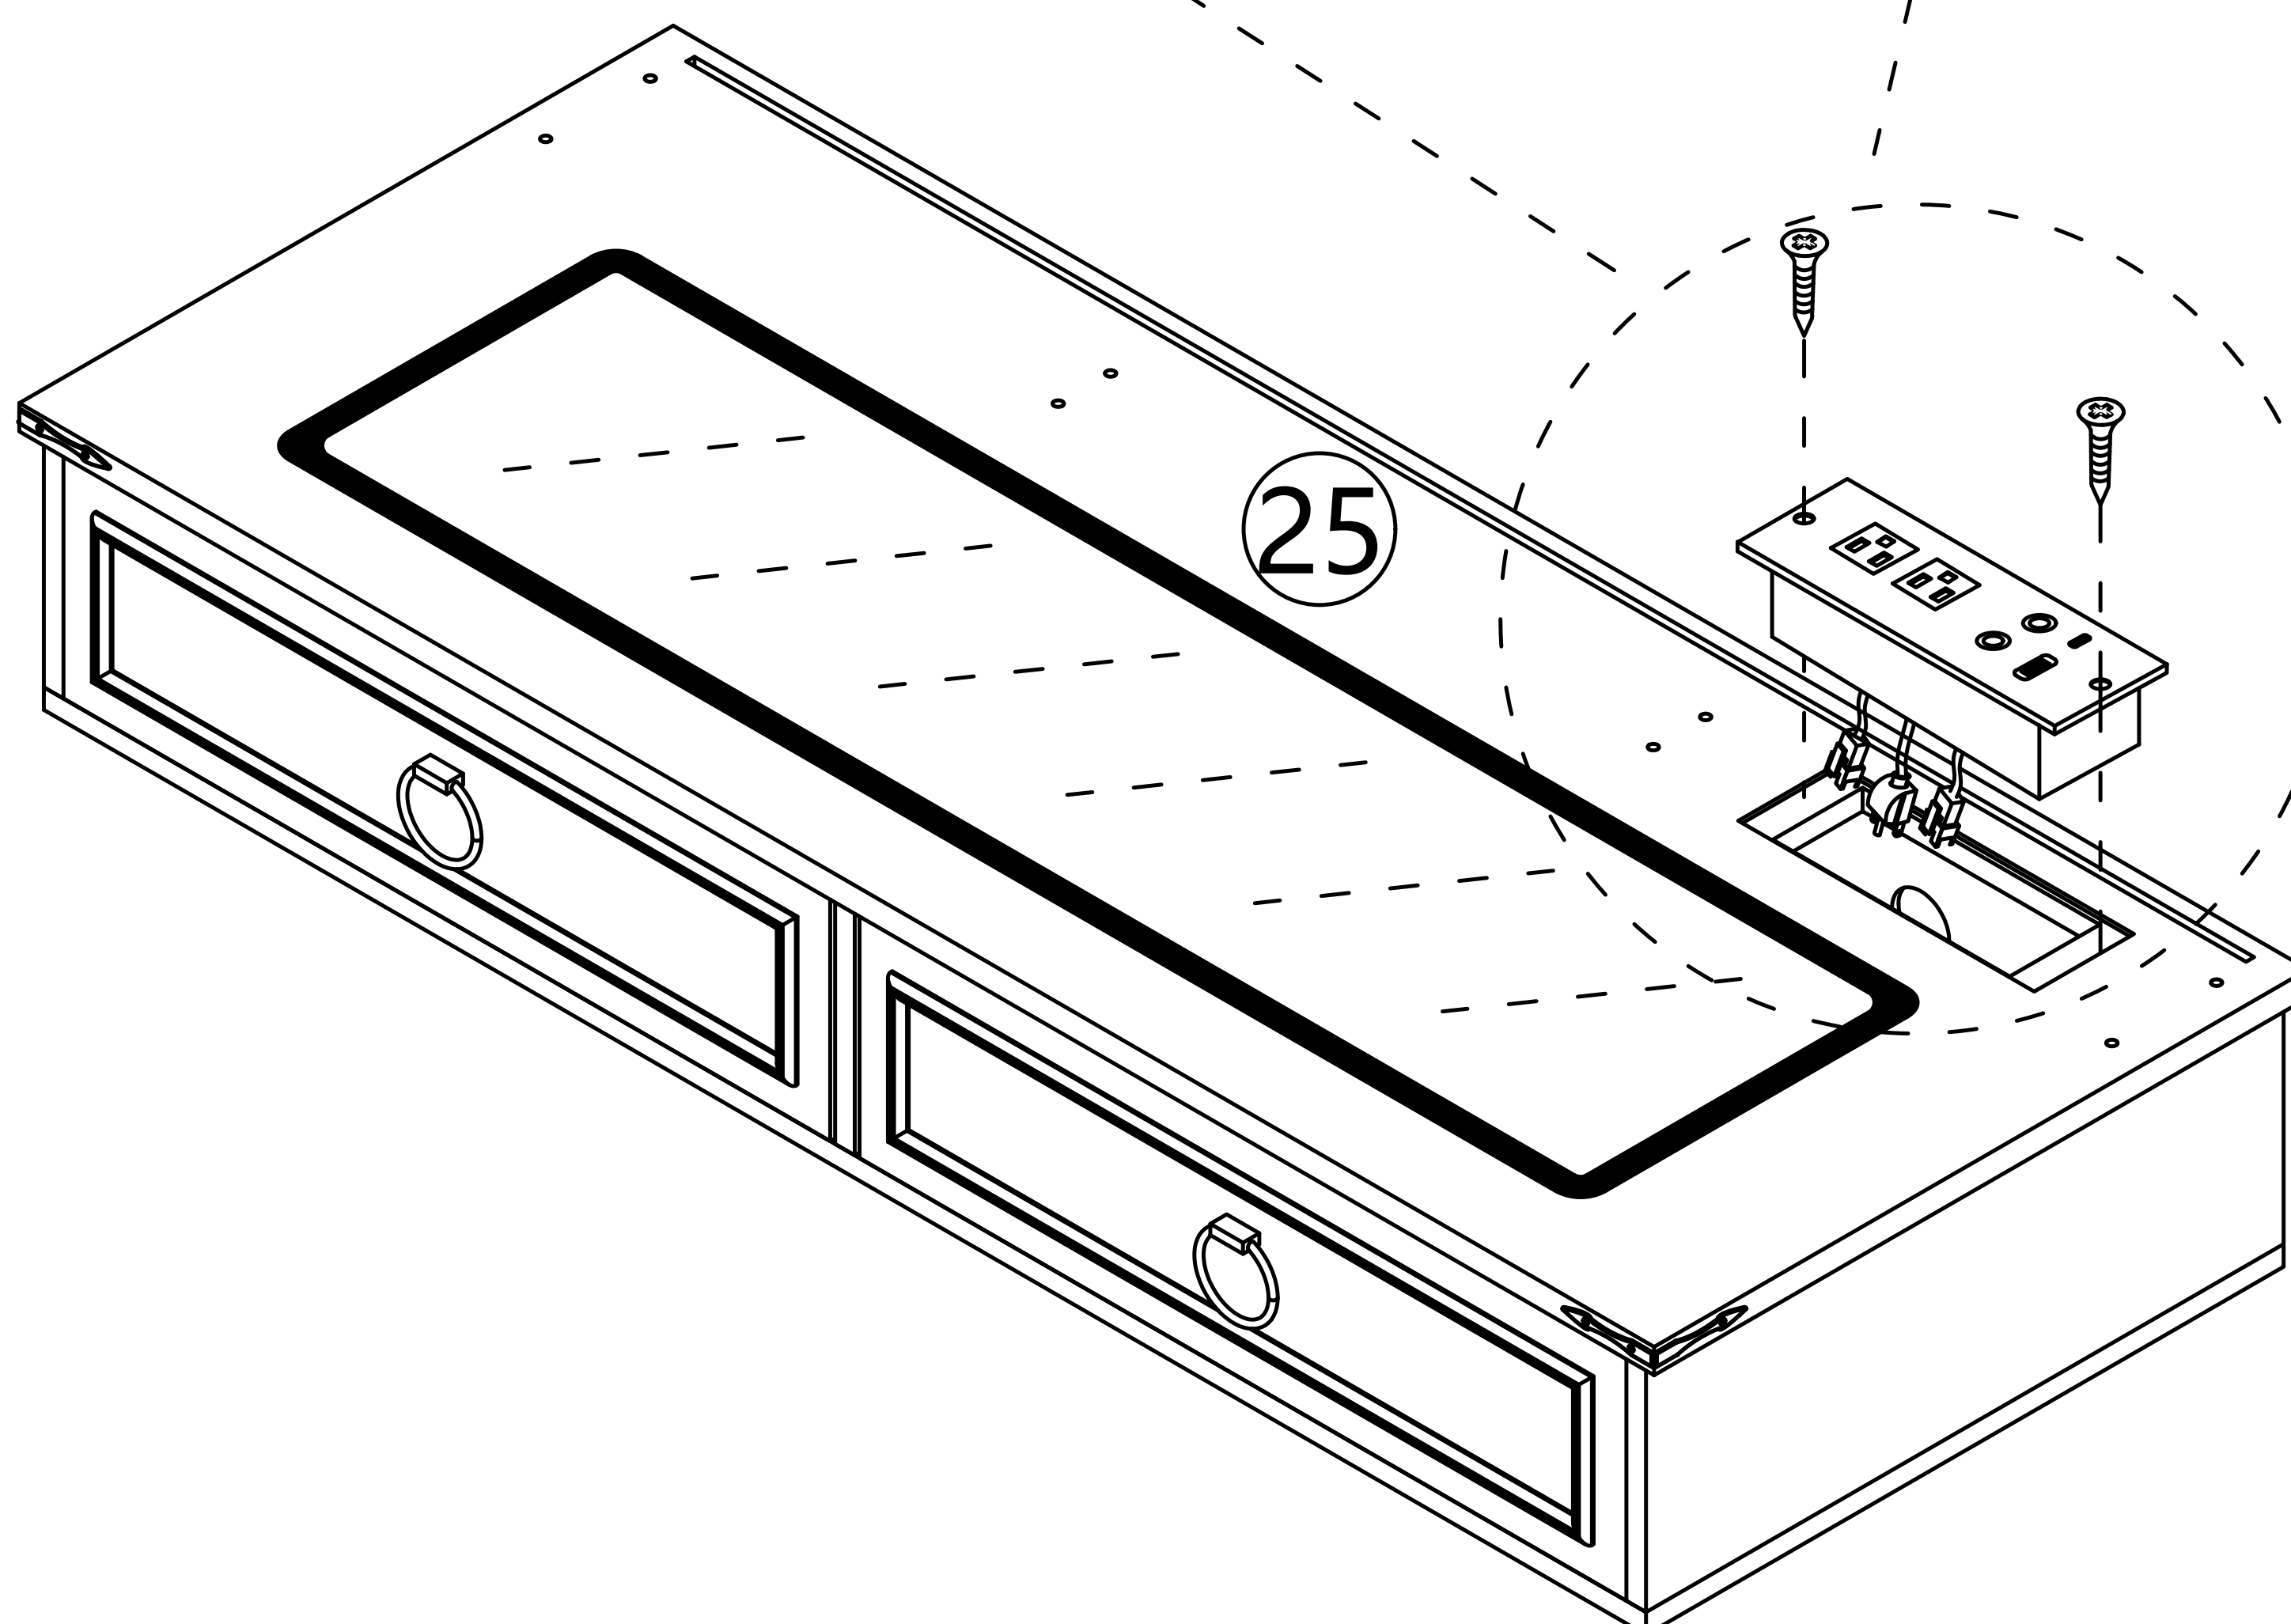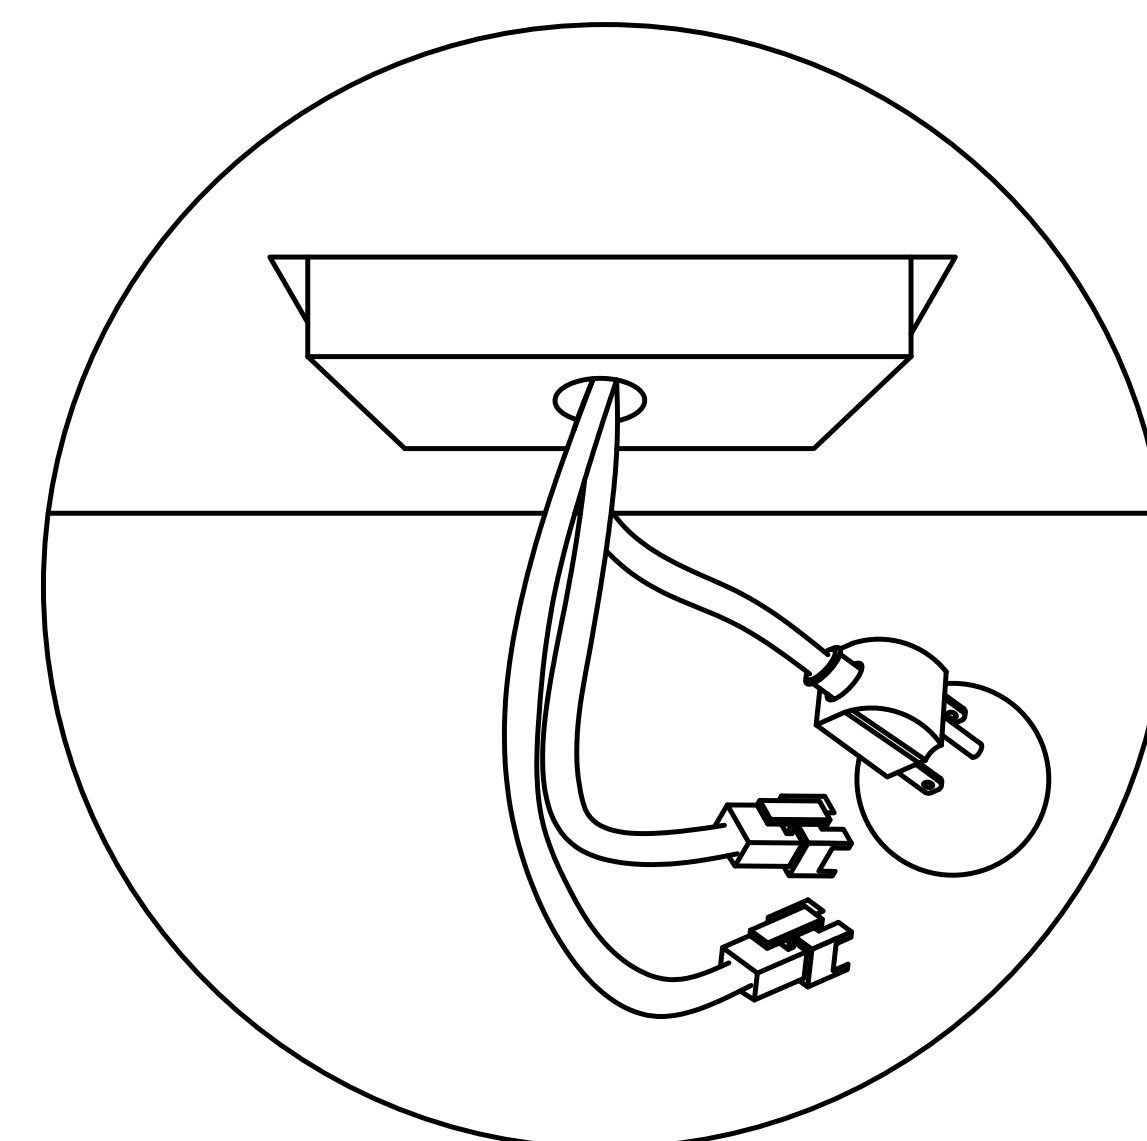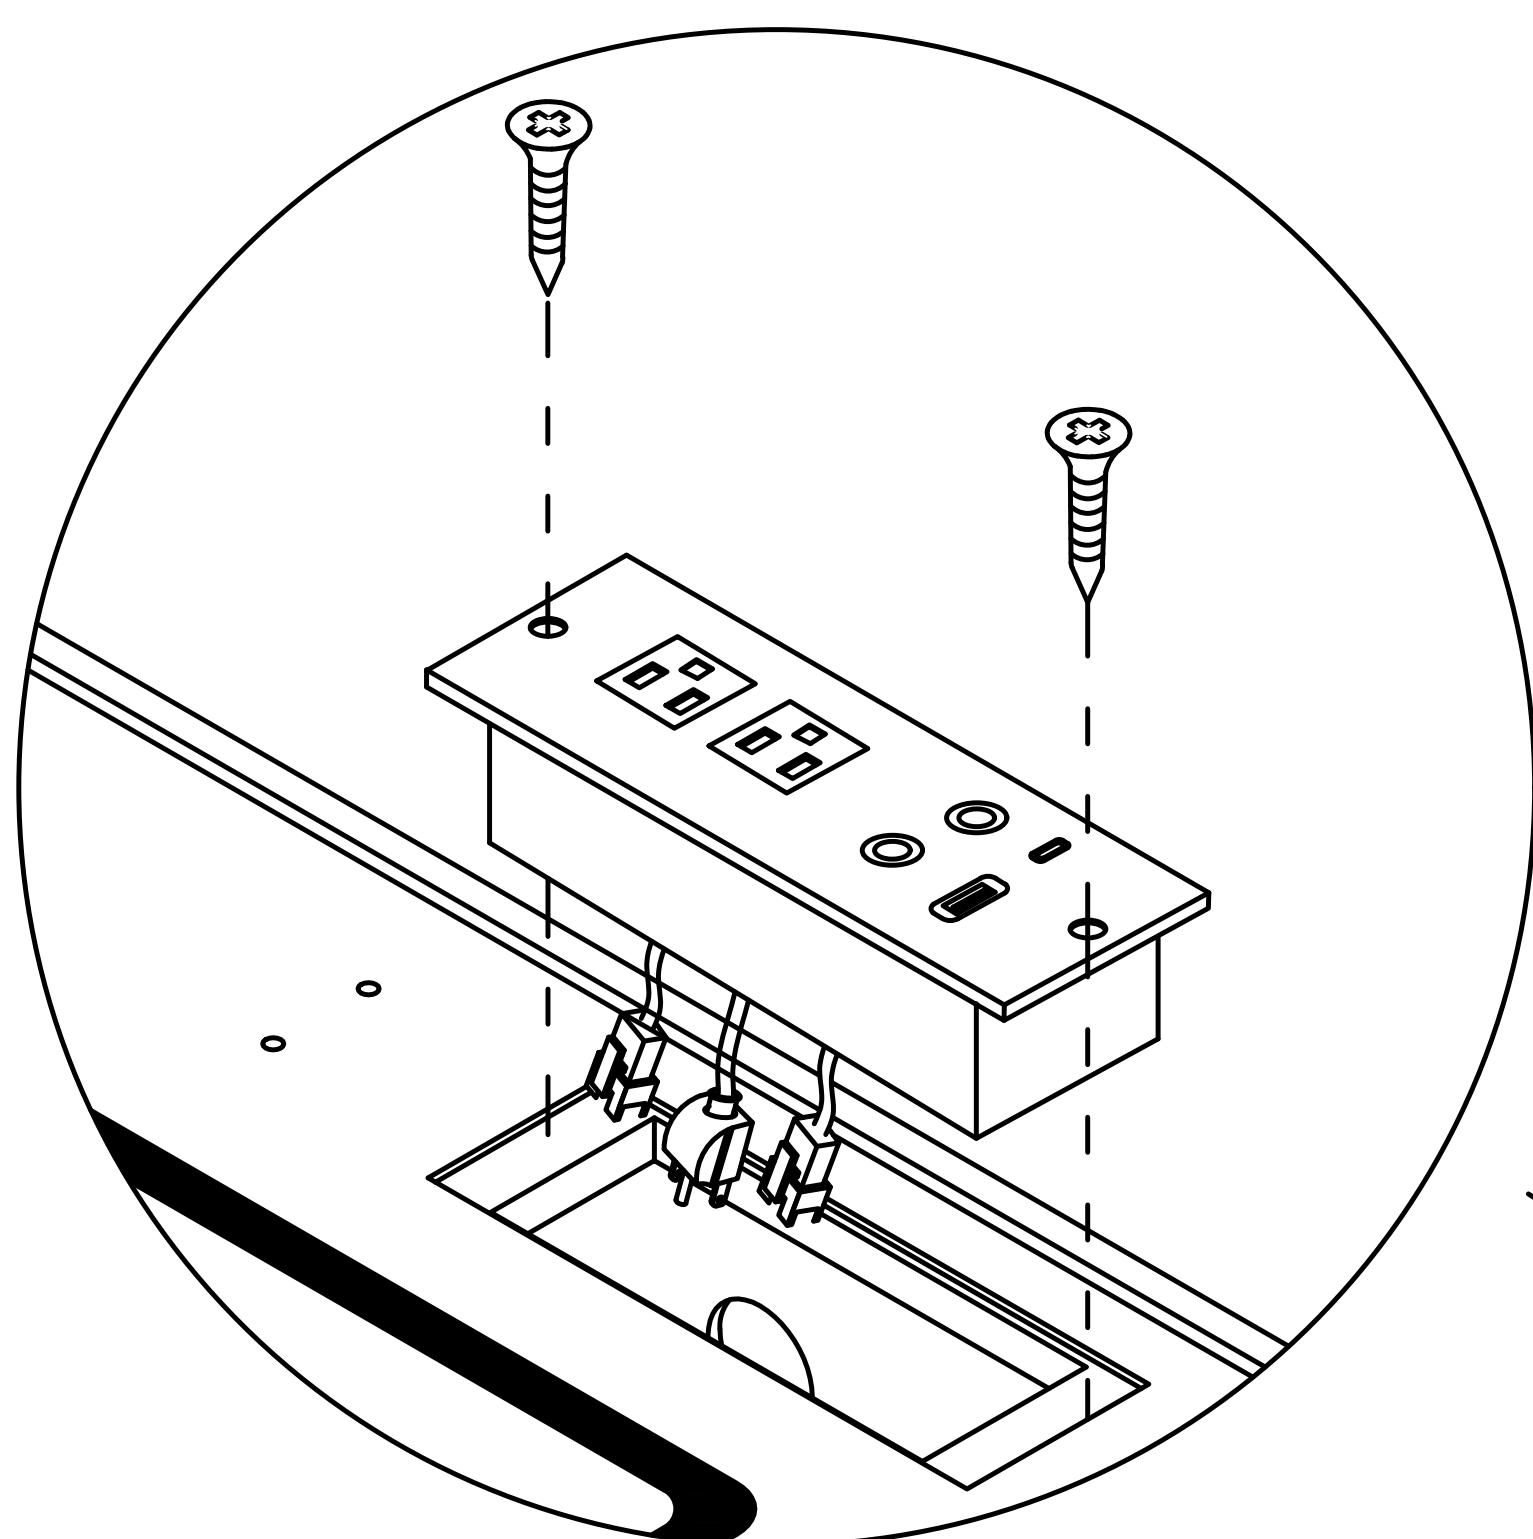

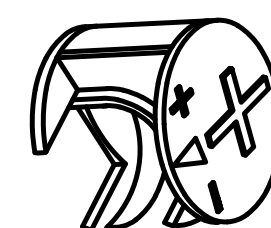



Effect 1

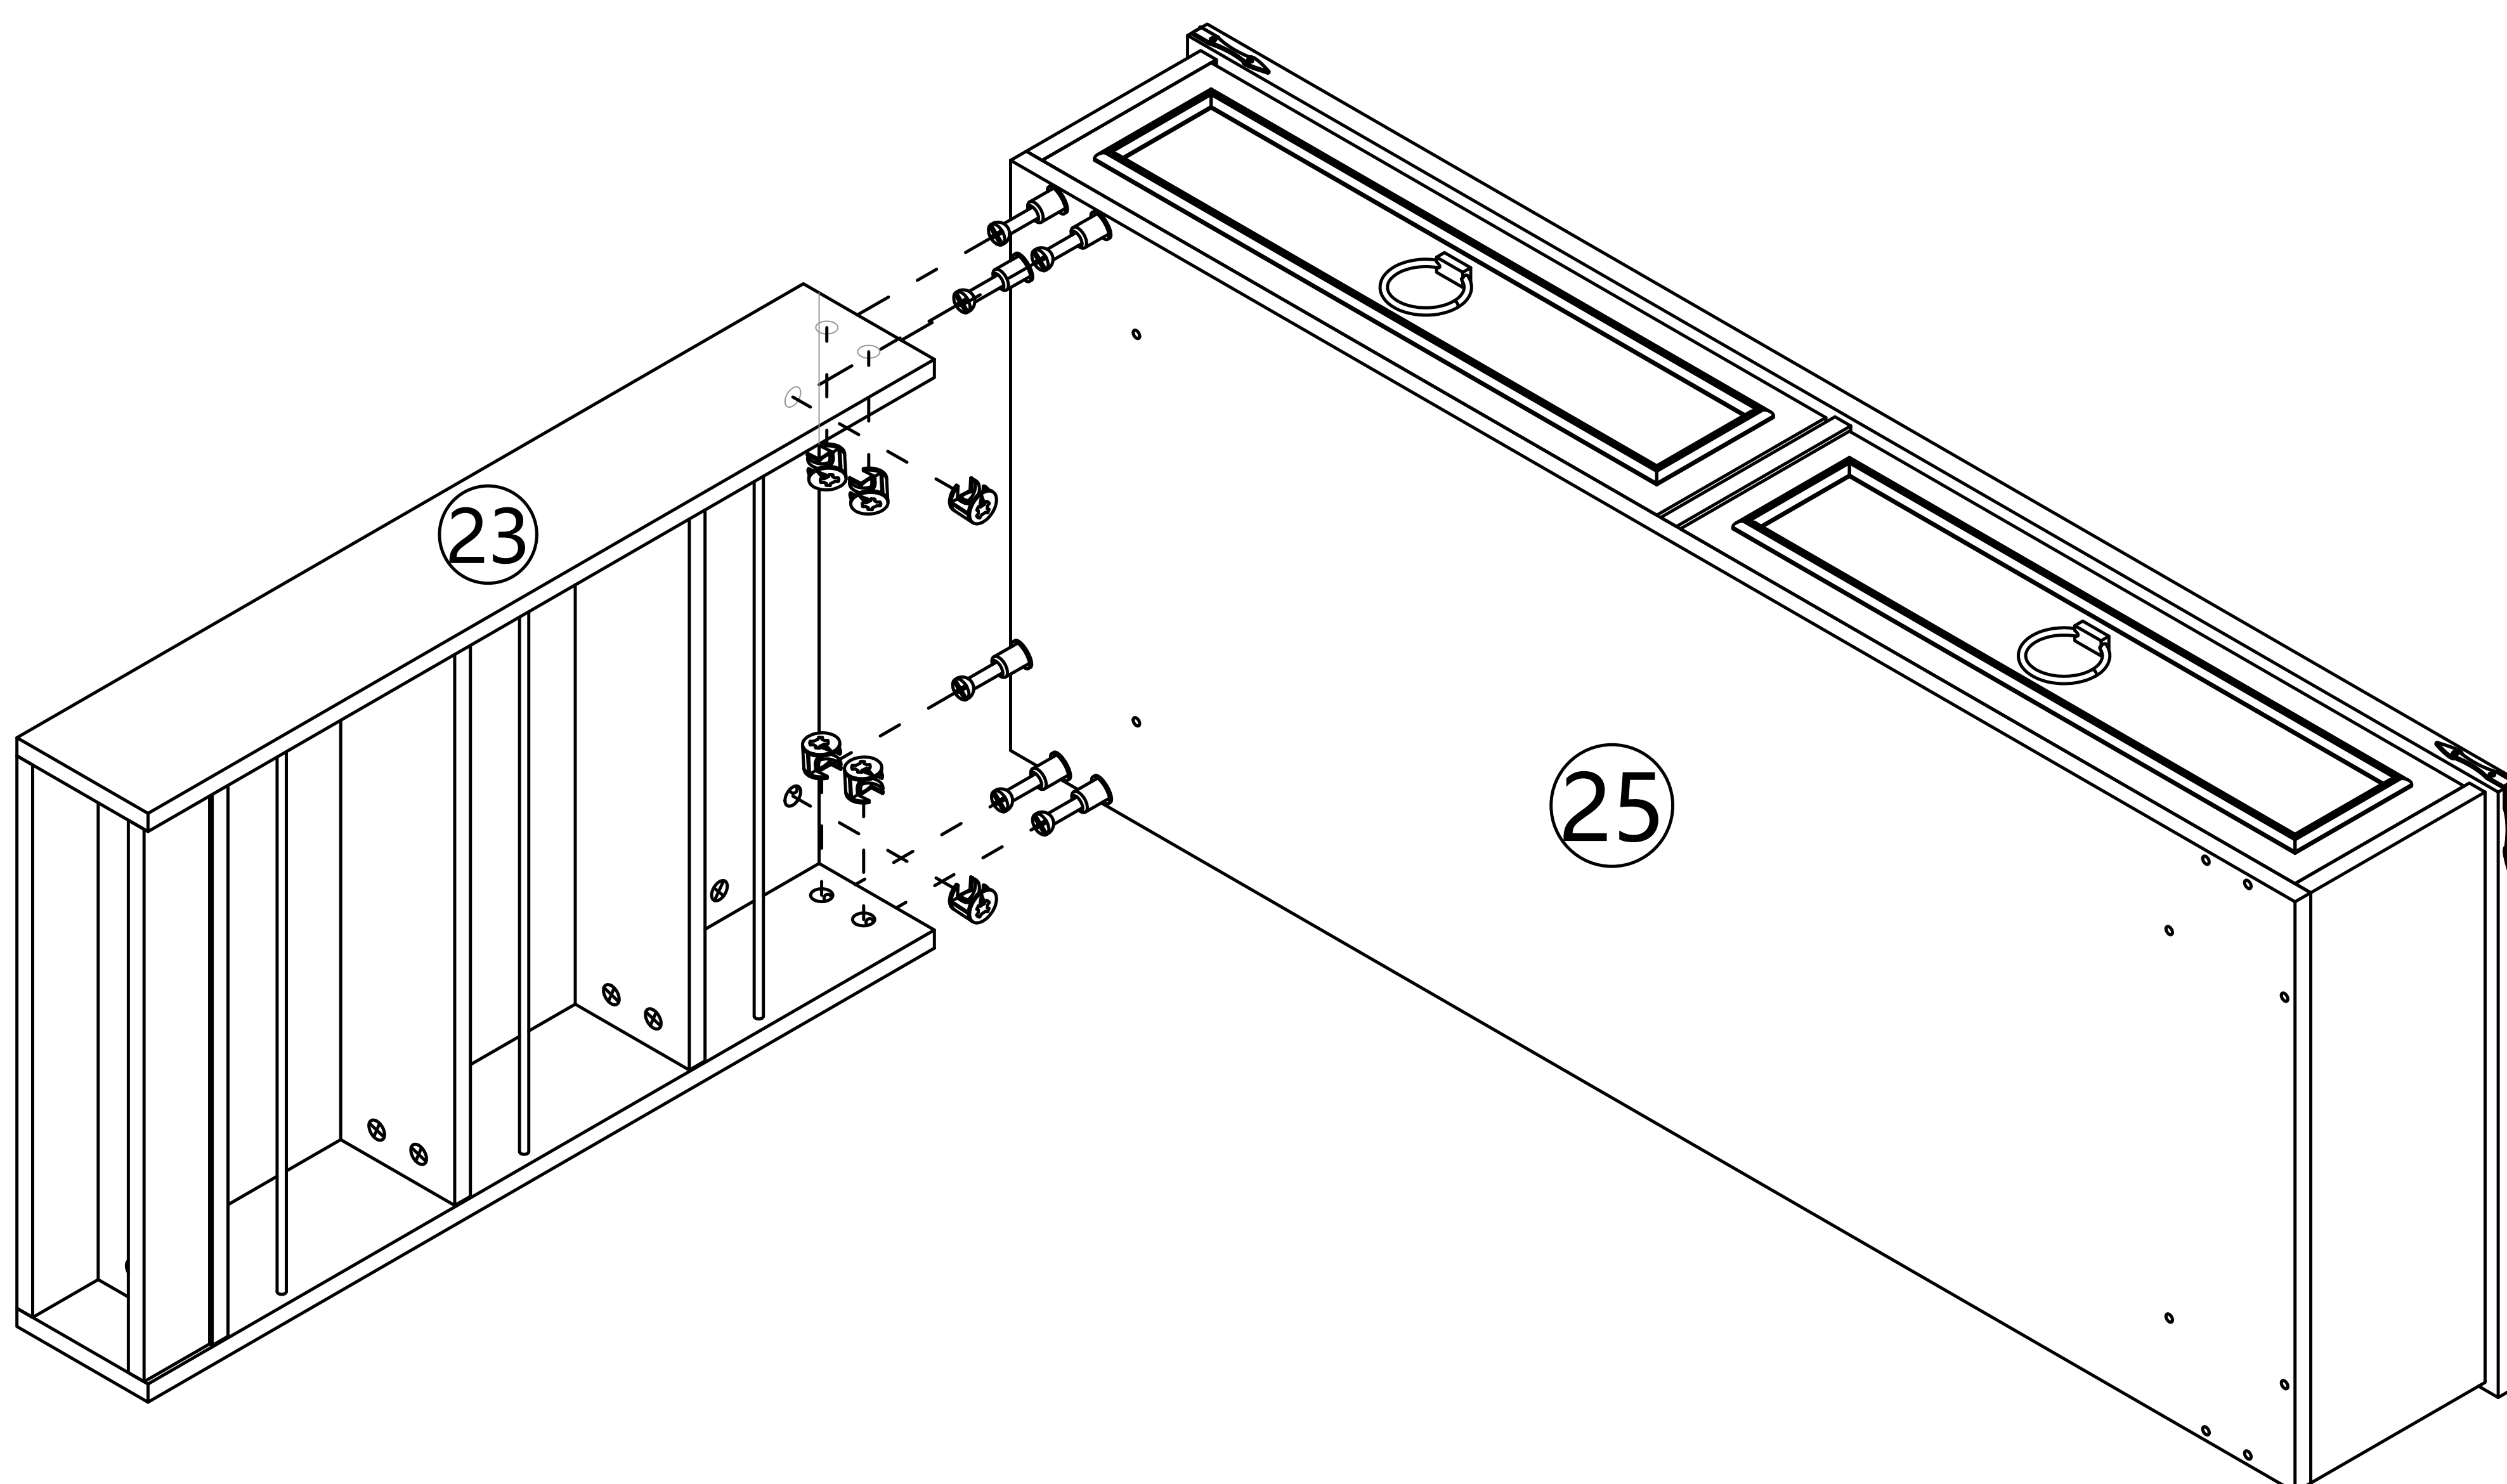


Attention: Please review the following four effects before selecting the location where you want to install

The placement effect of Effect 1

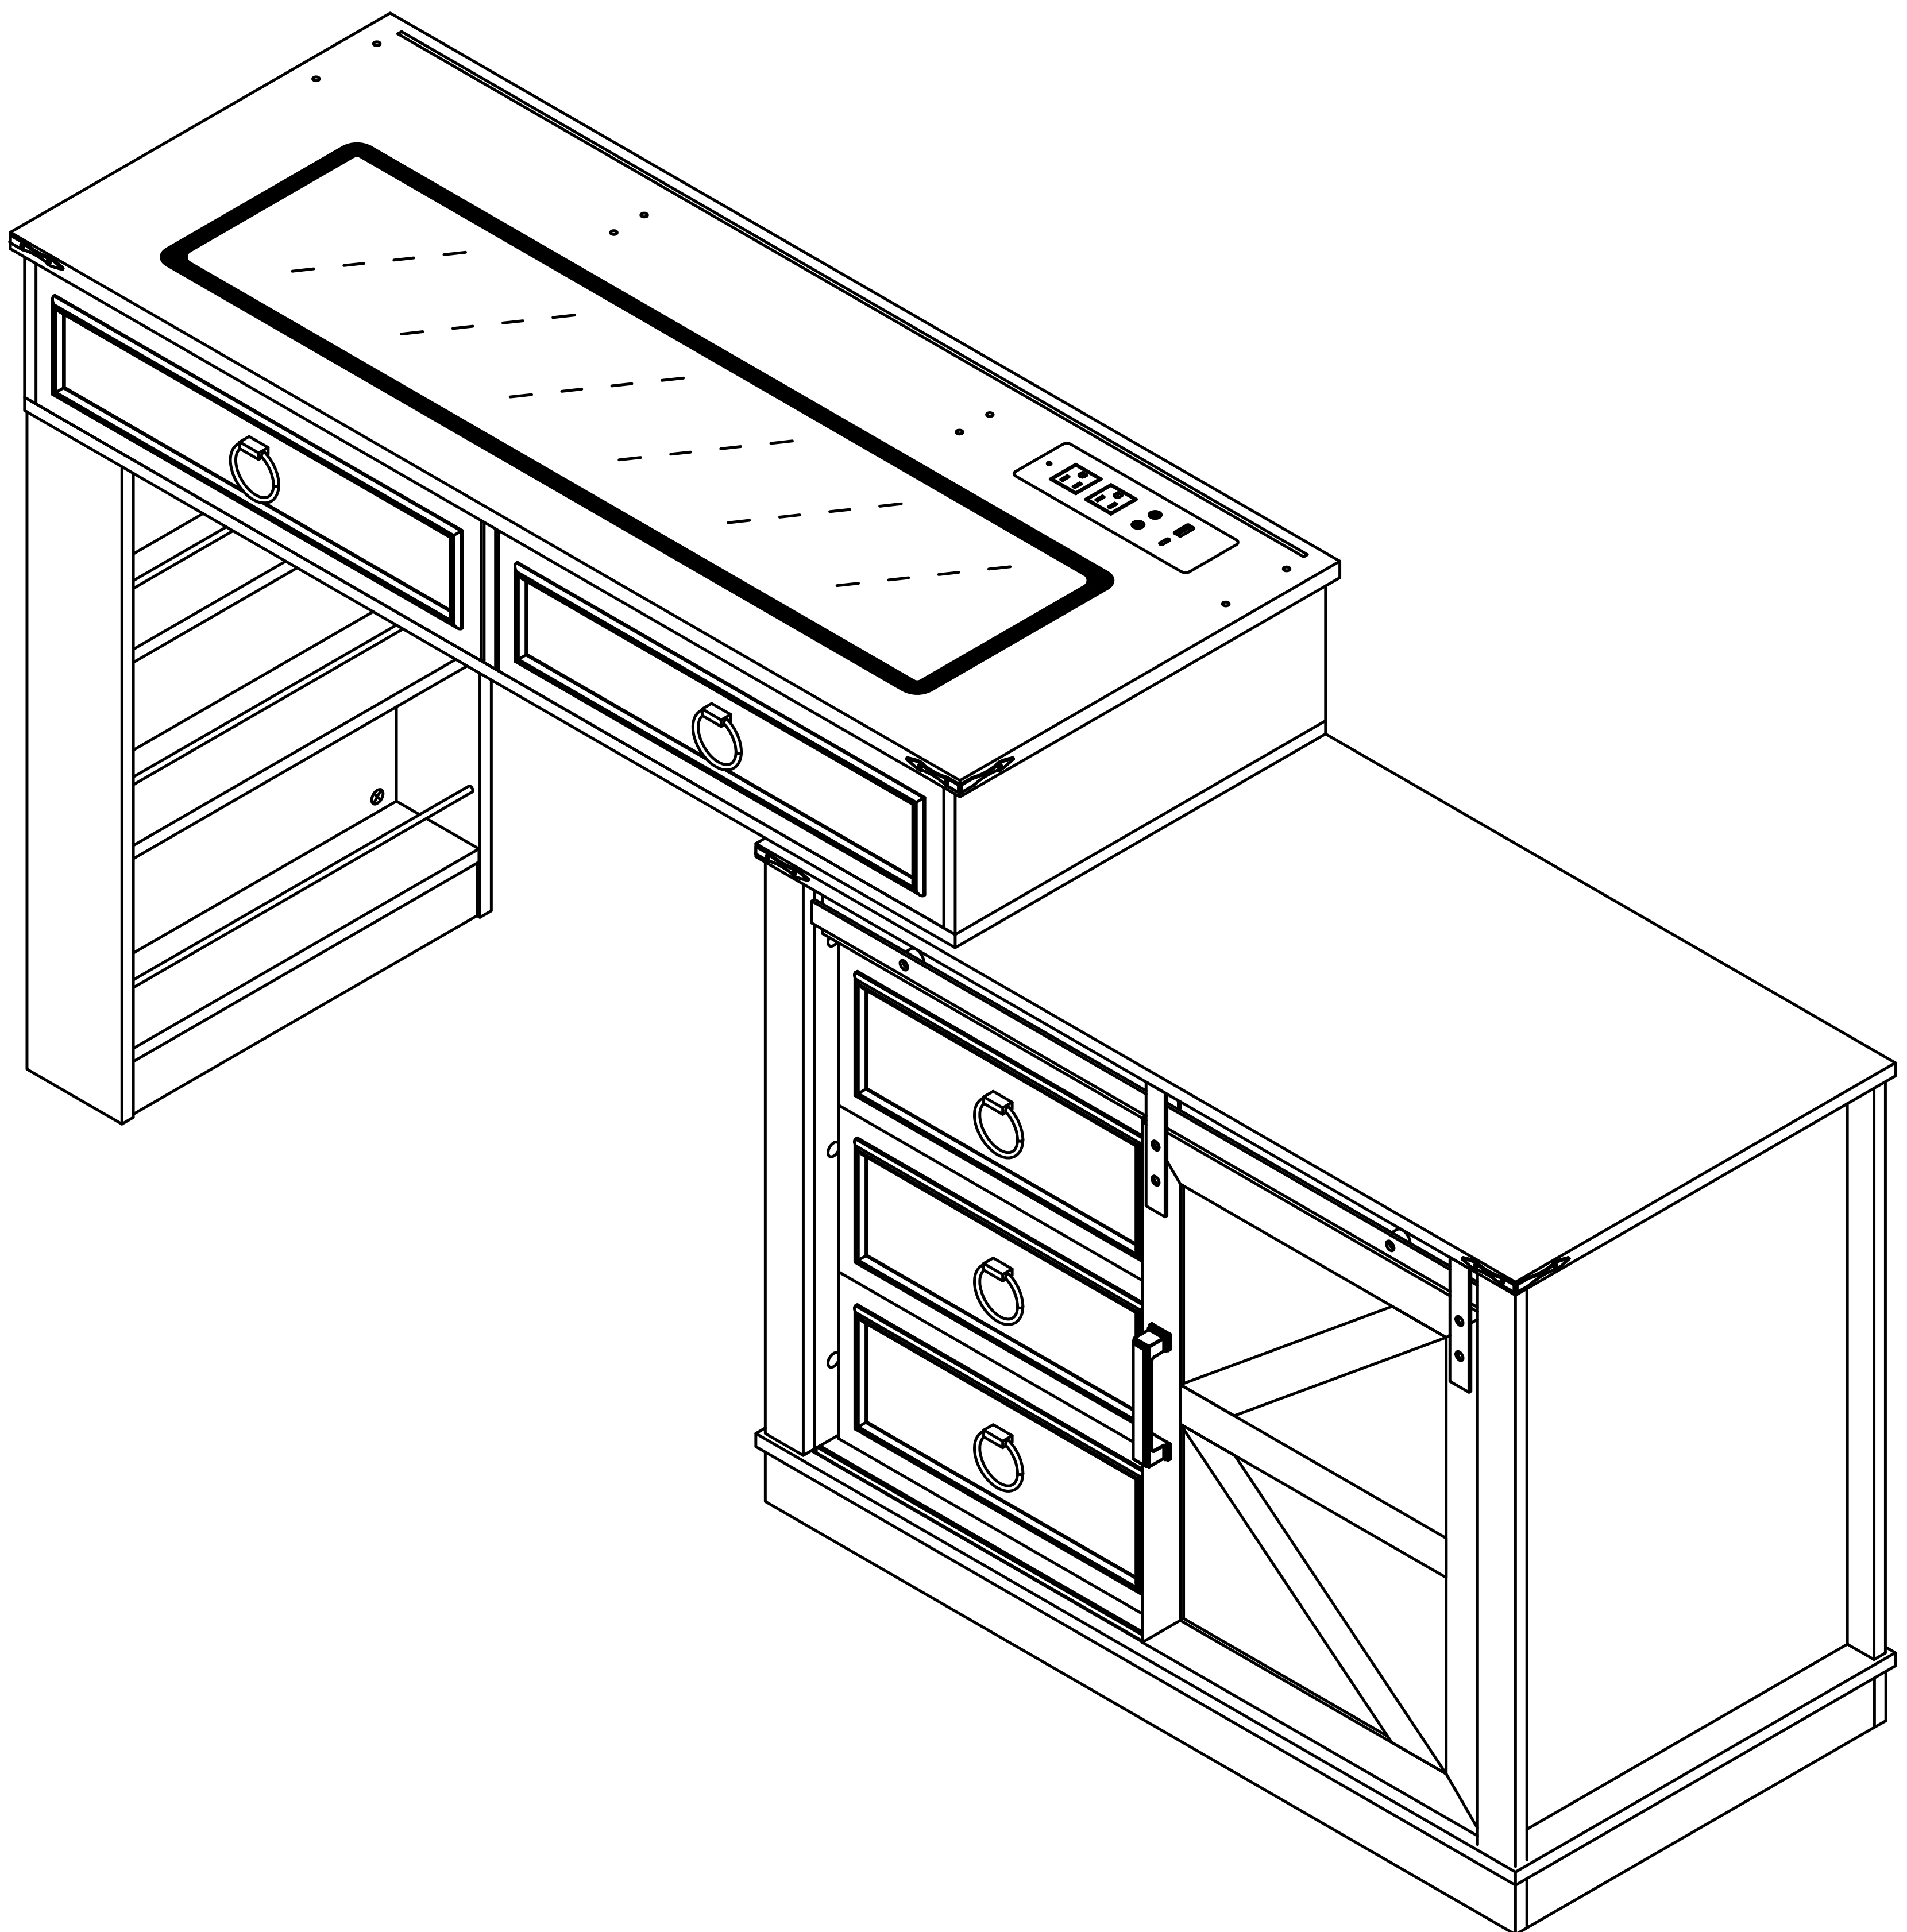


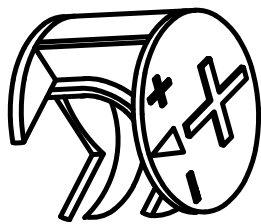


Effect 2

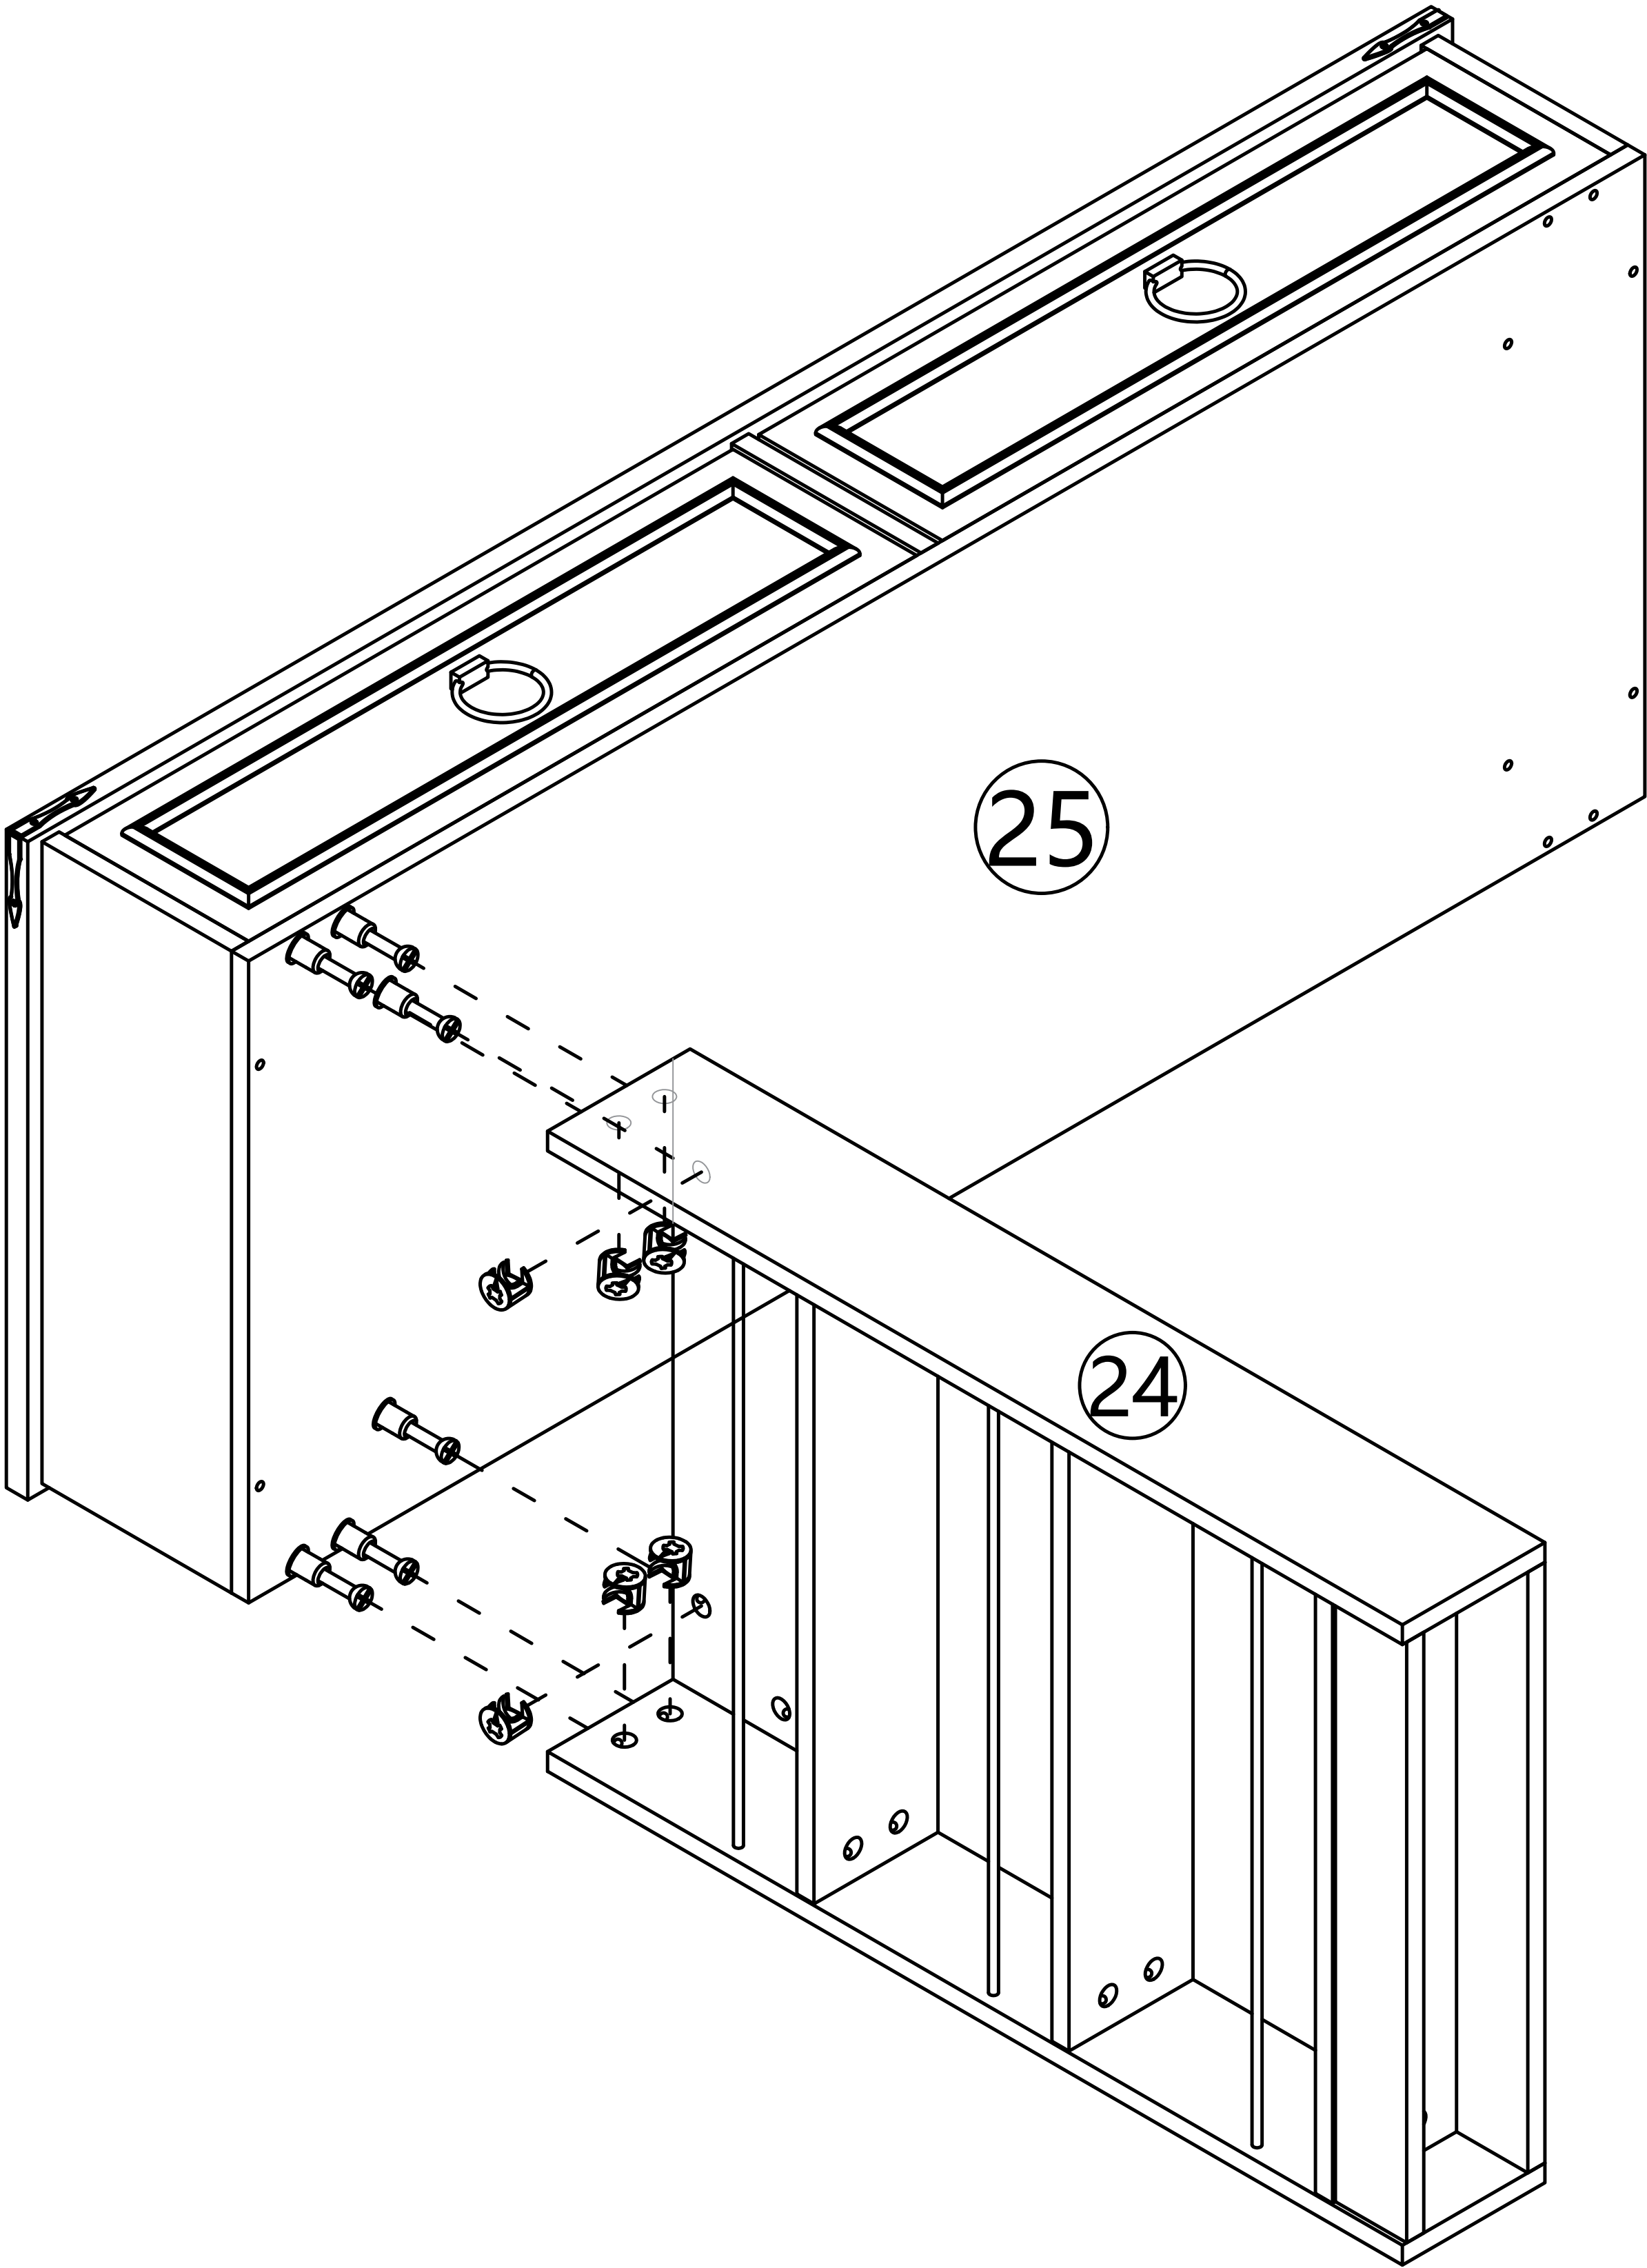


The placement effect of Effect 2

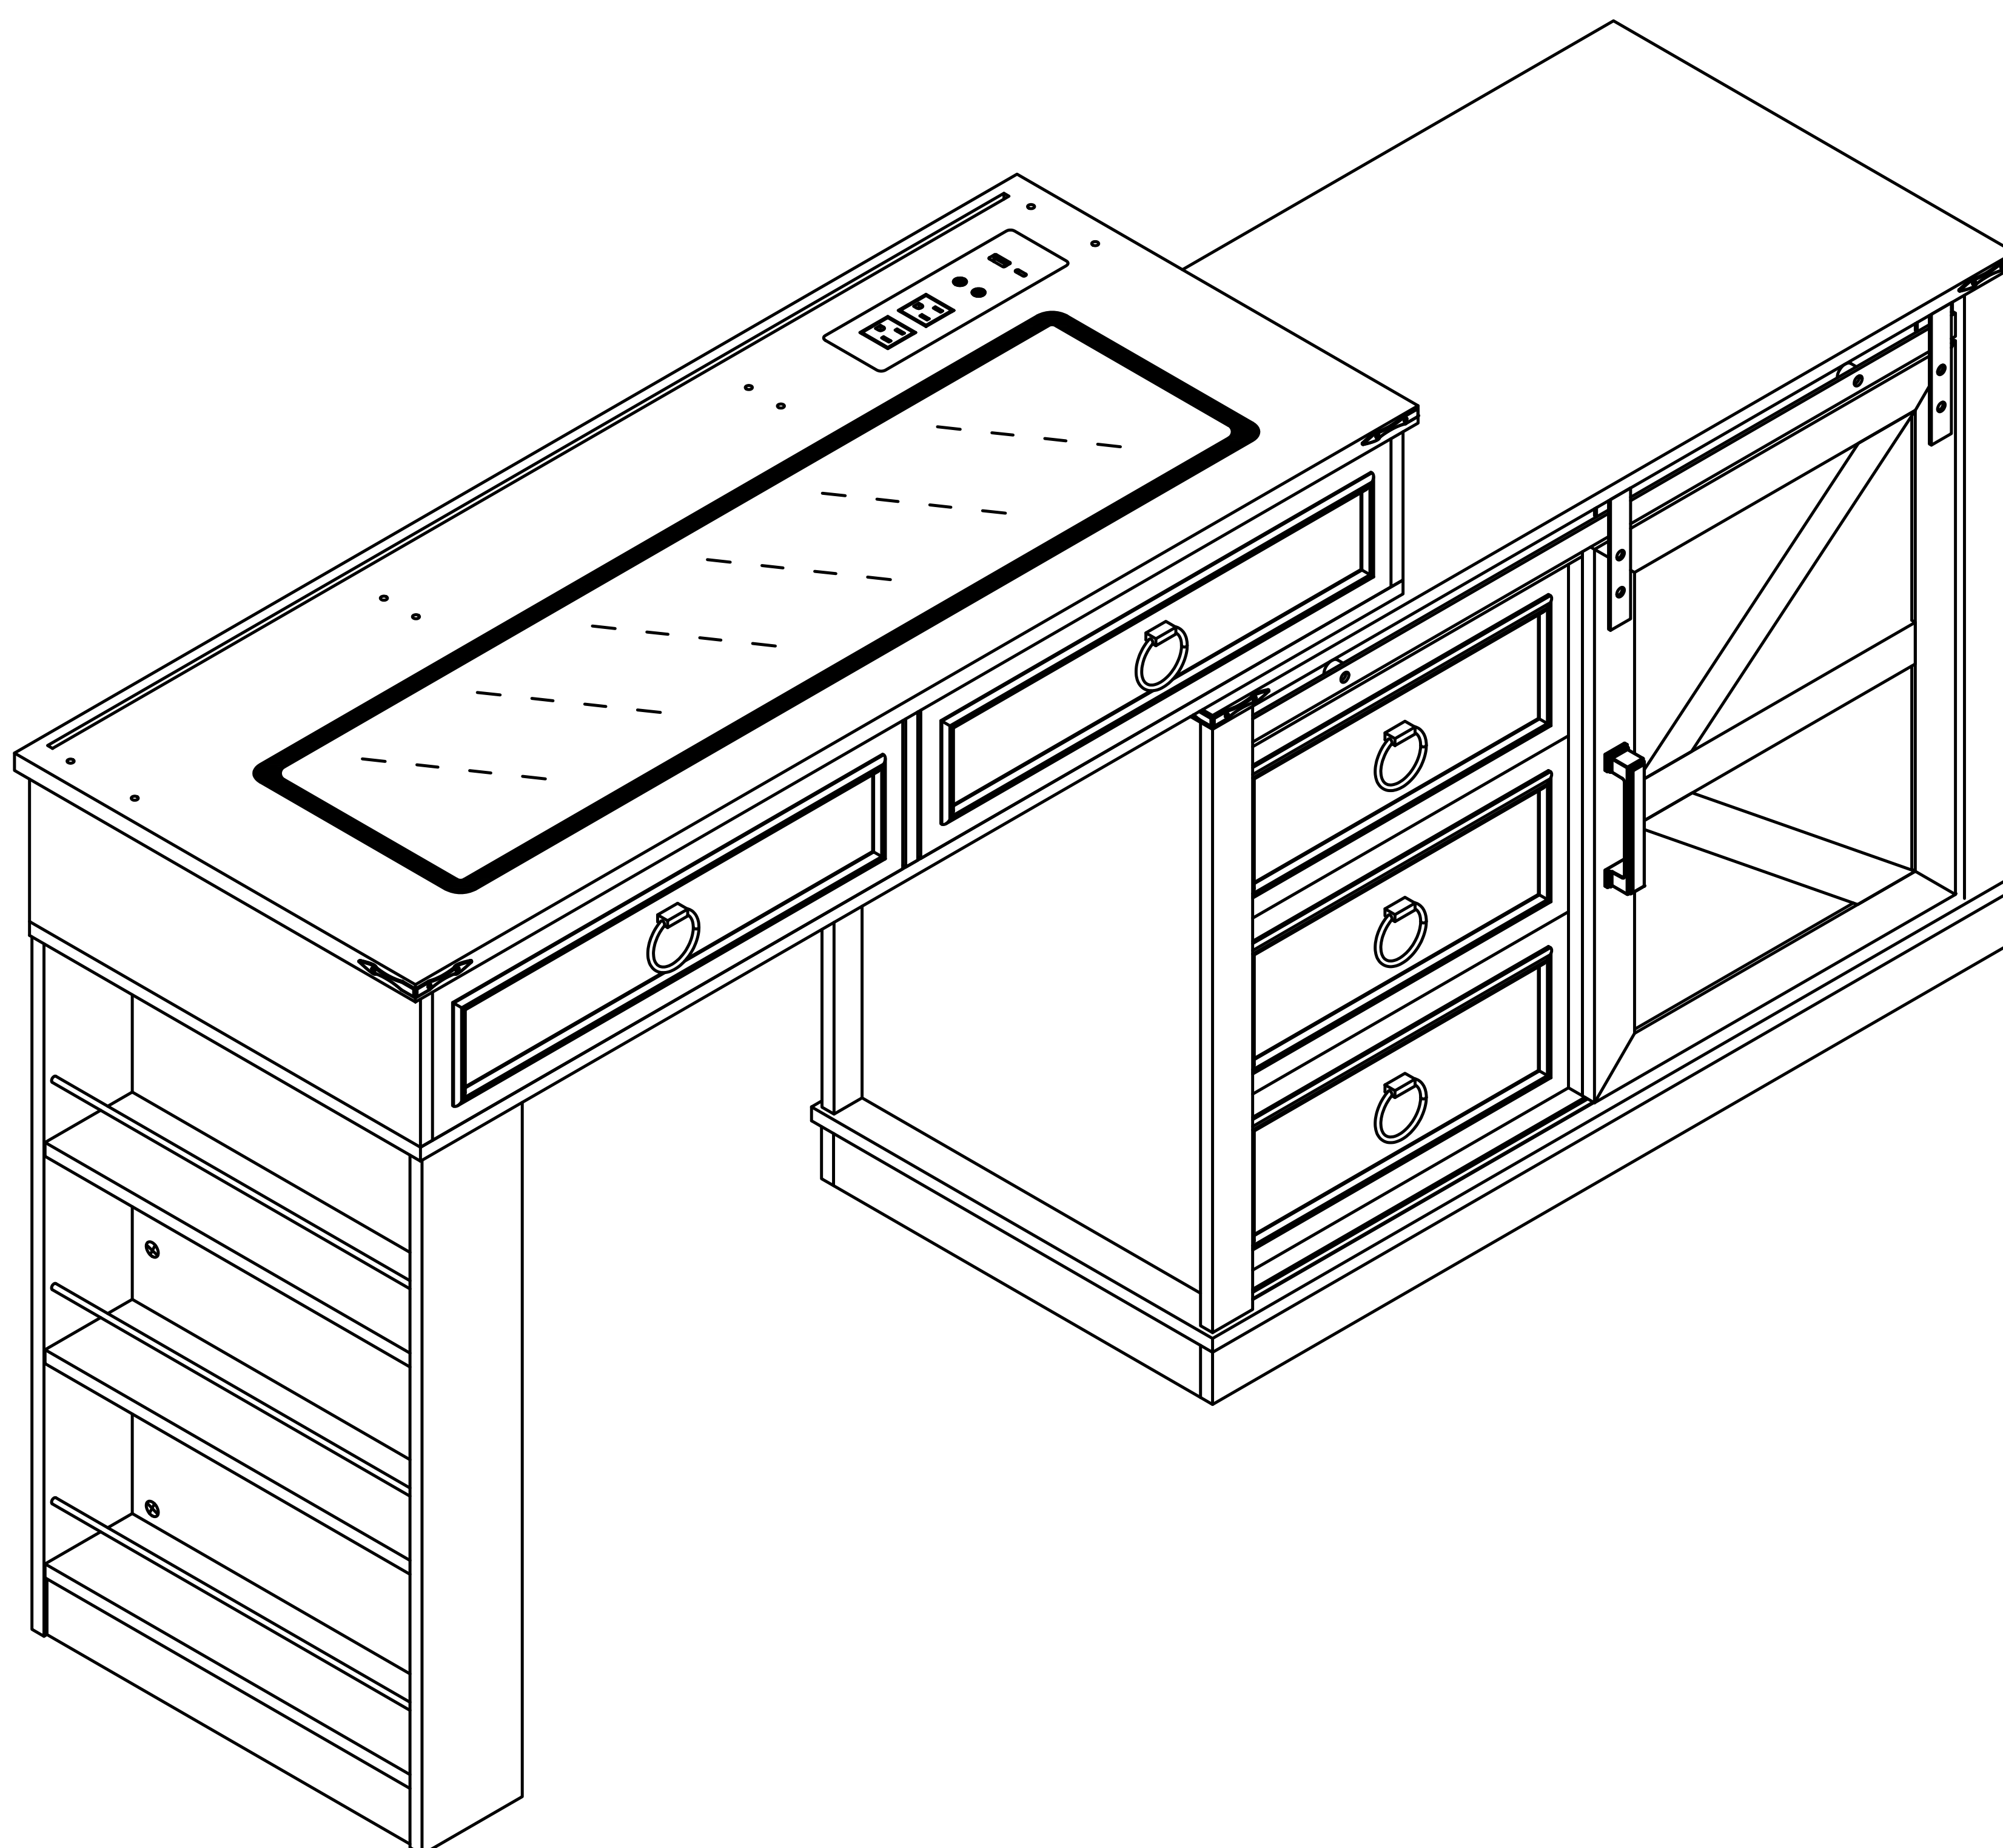


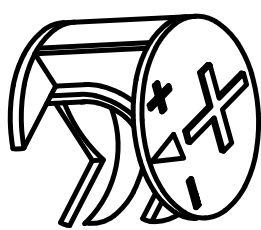


Effect 3

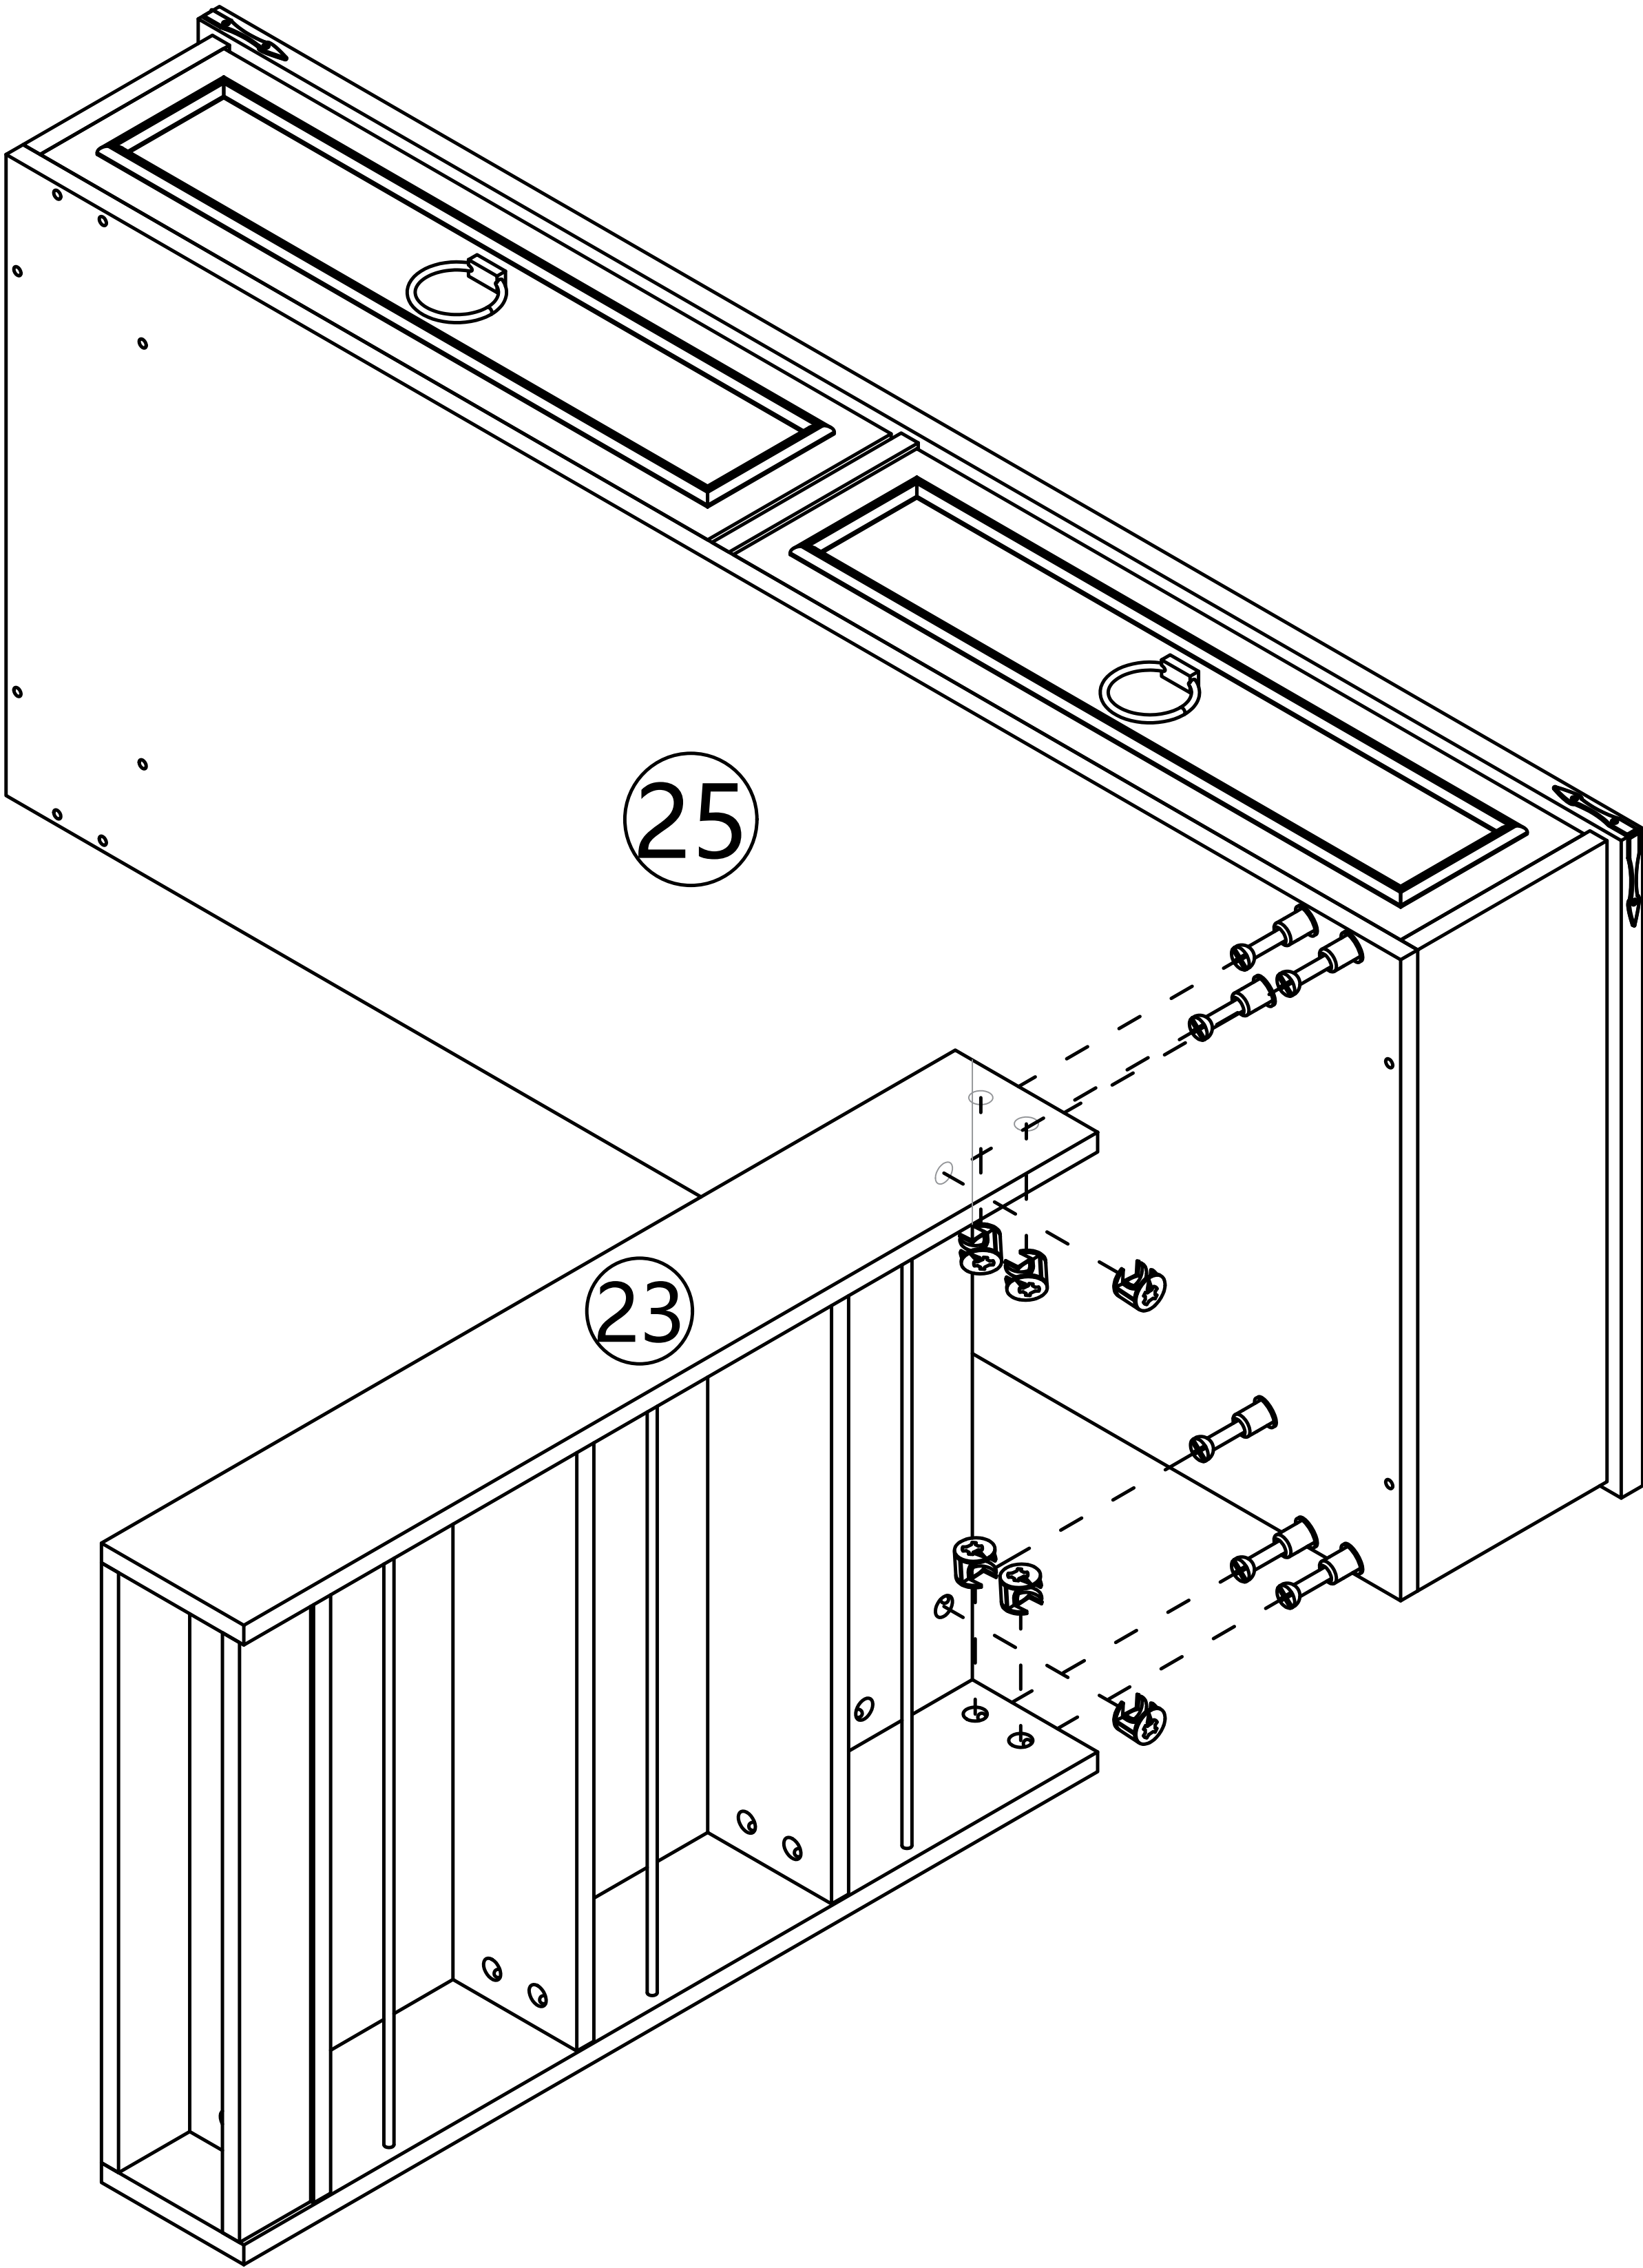


The placement effect of Effect 3

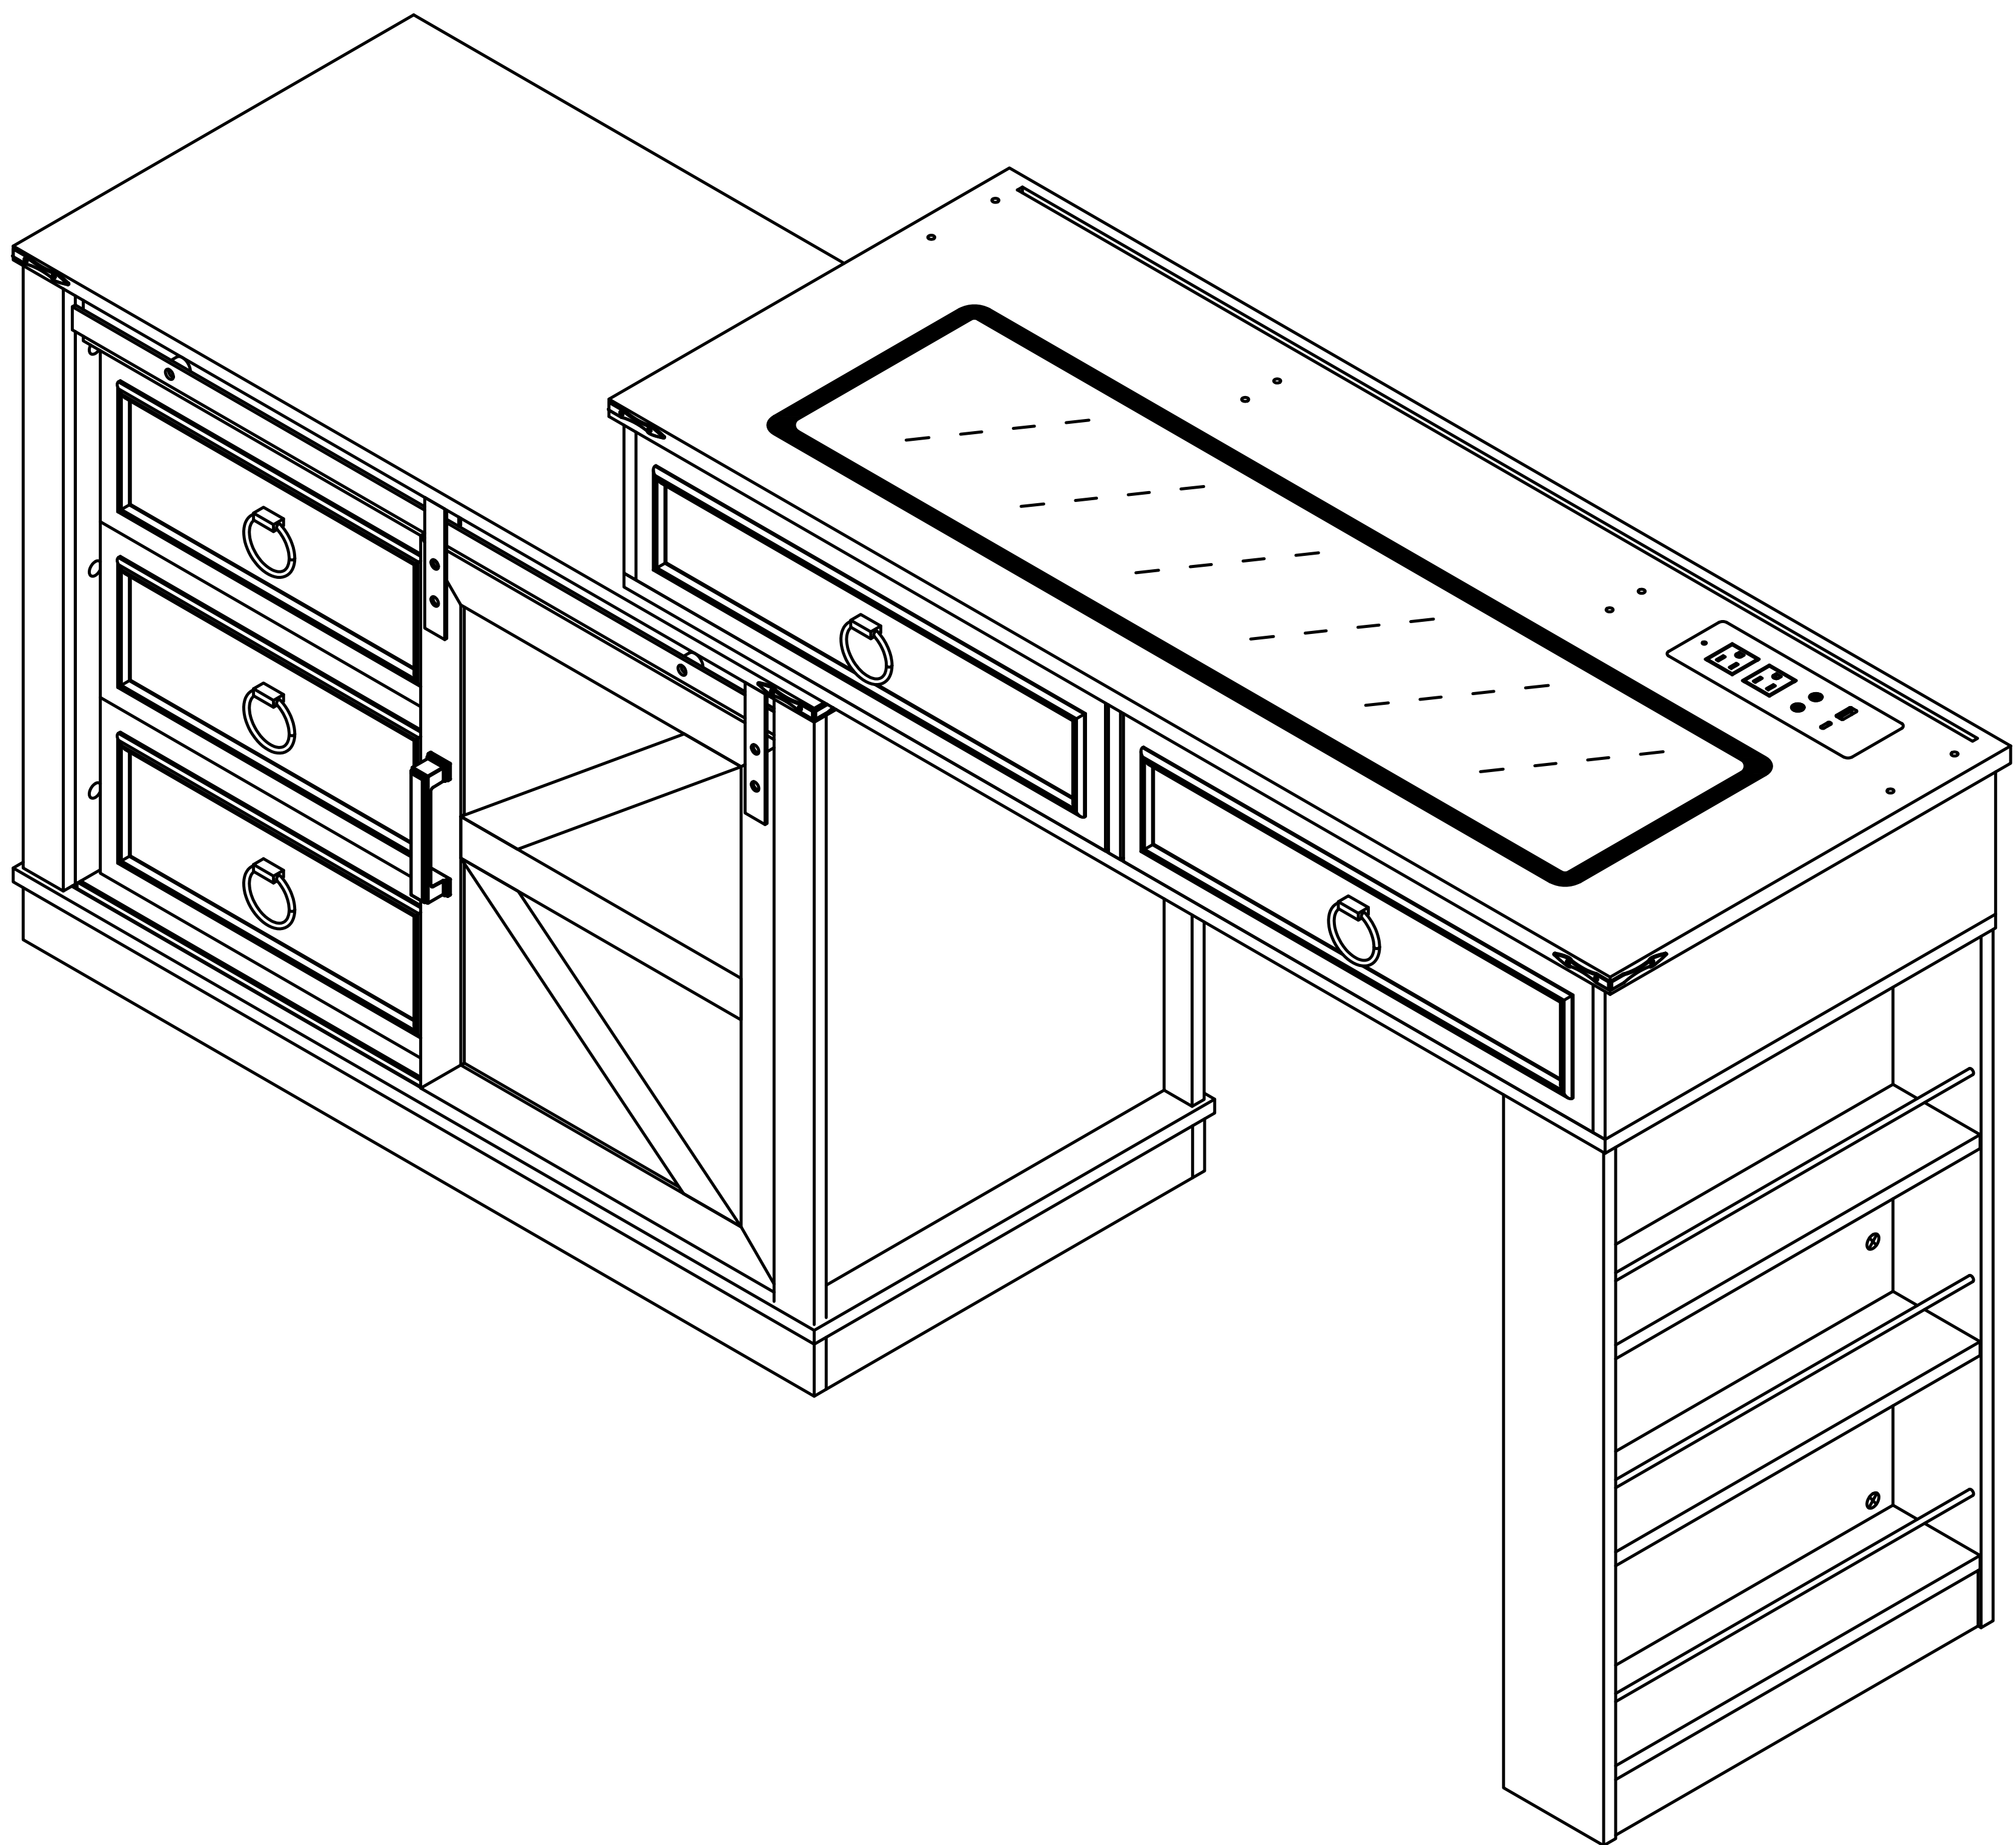


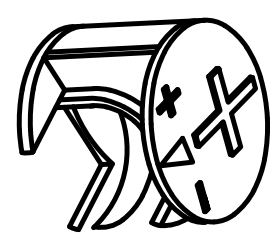



Effect 4

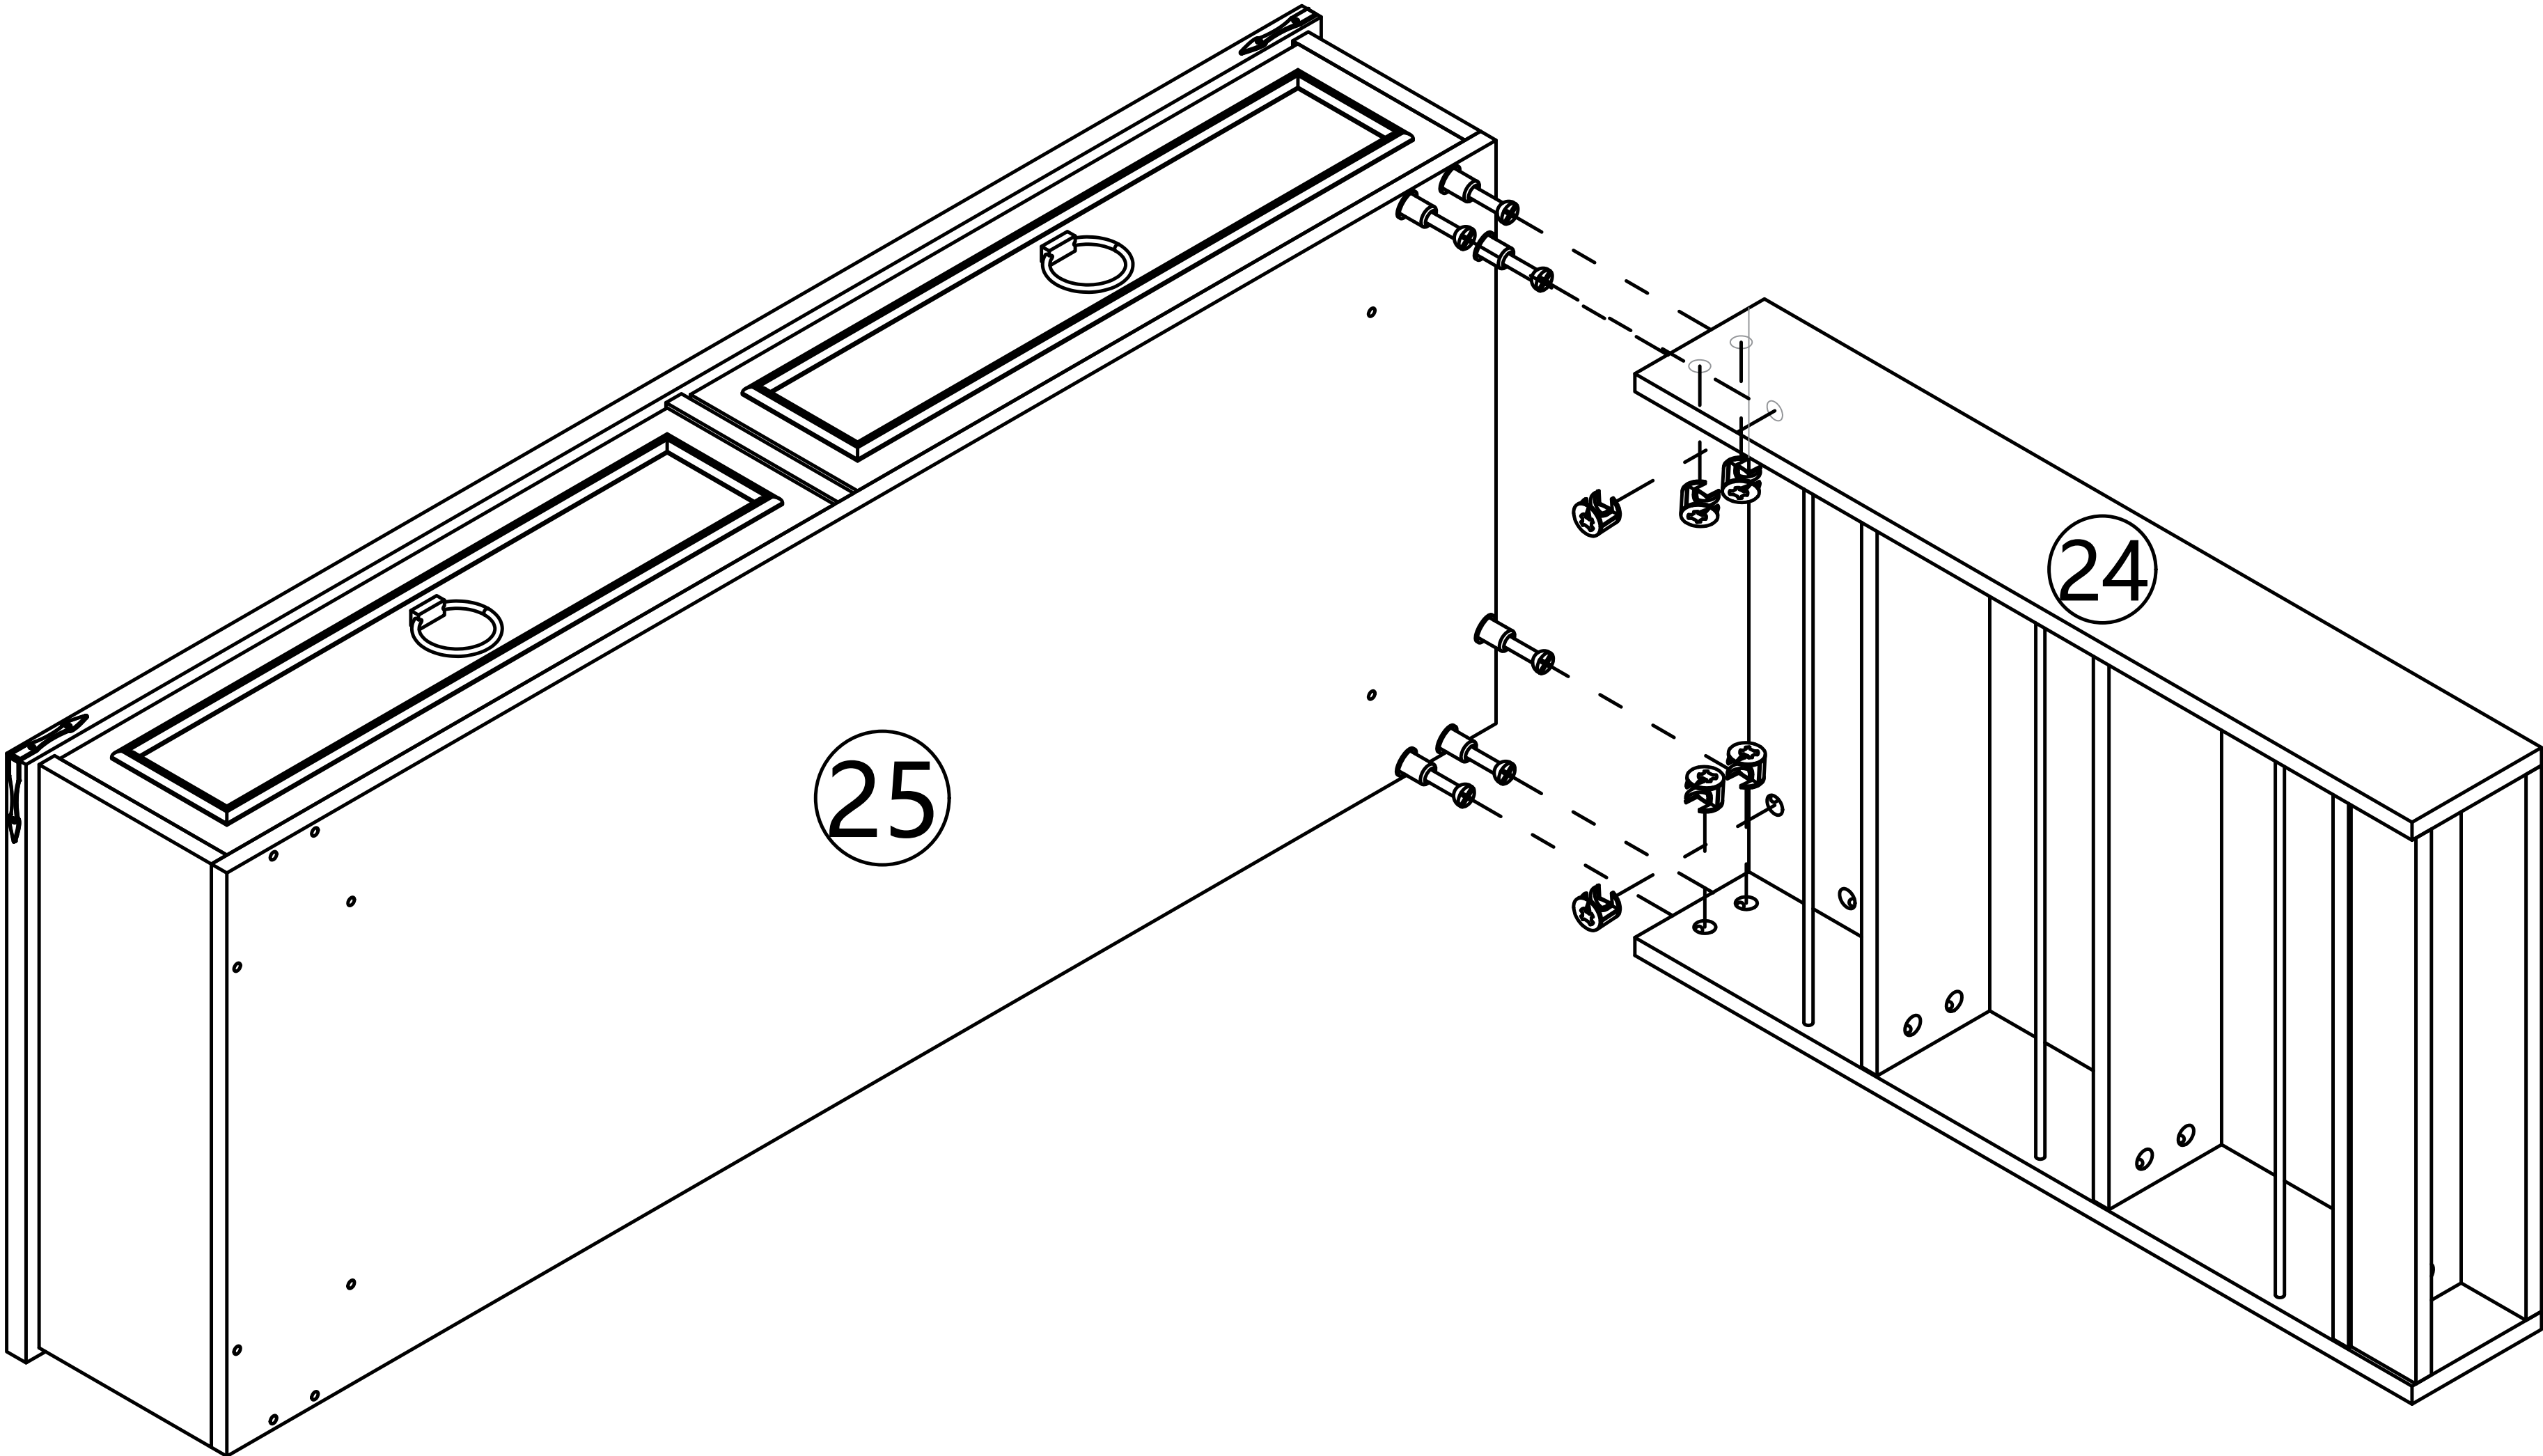


The placement effect of Effect 4

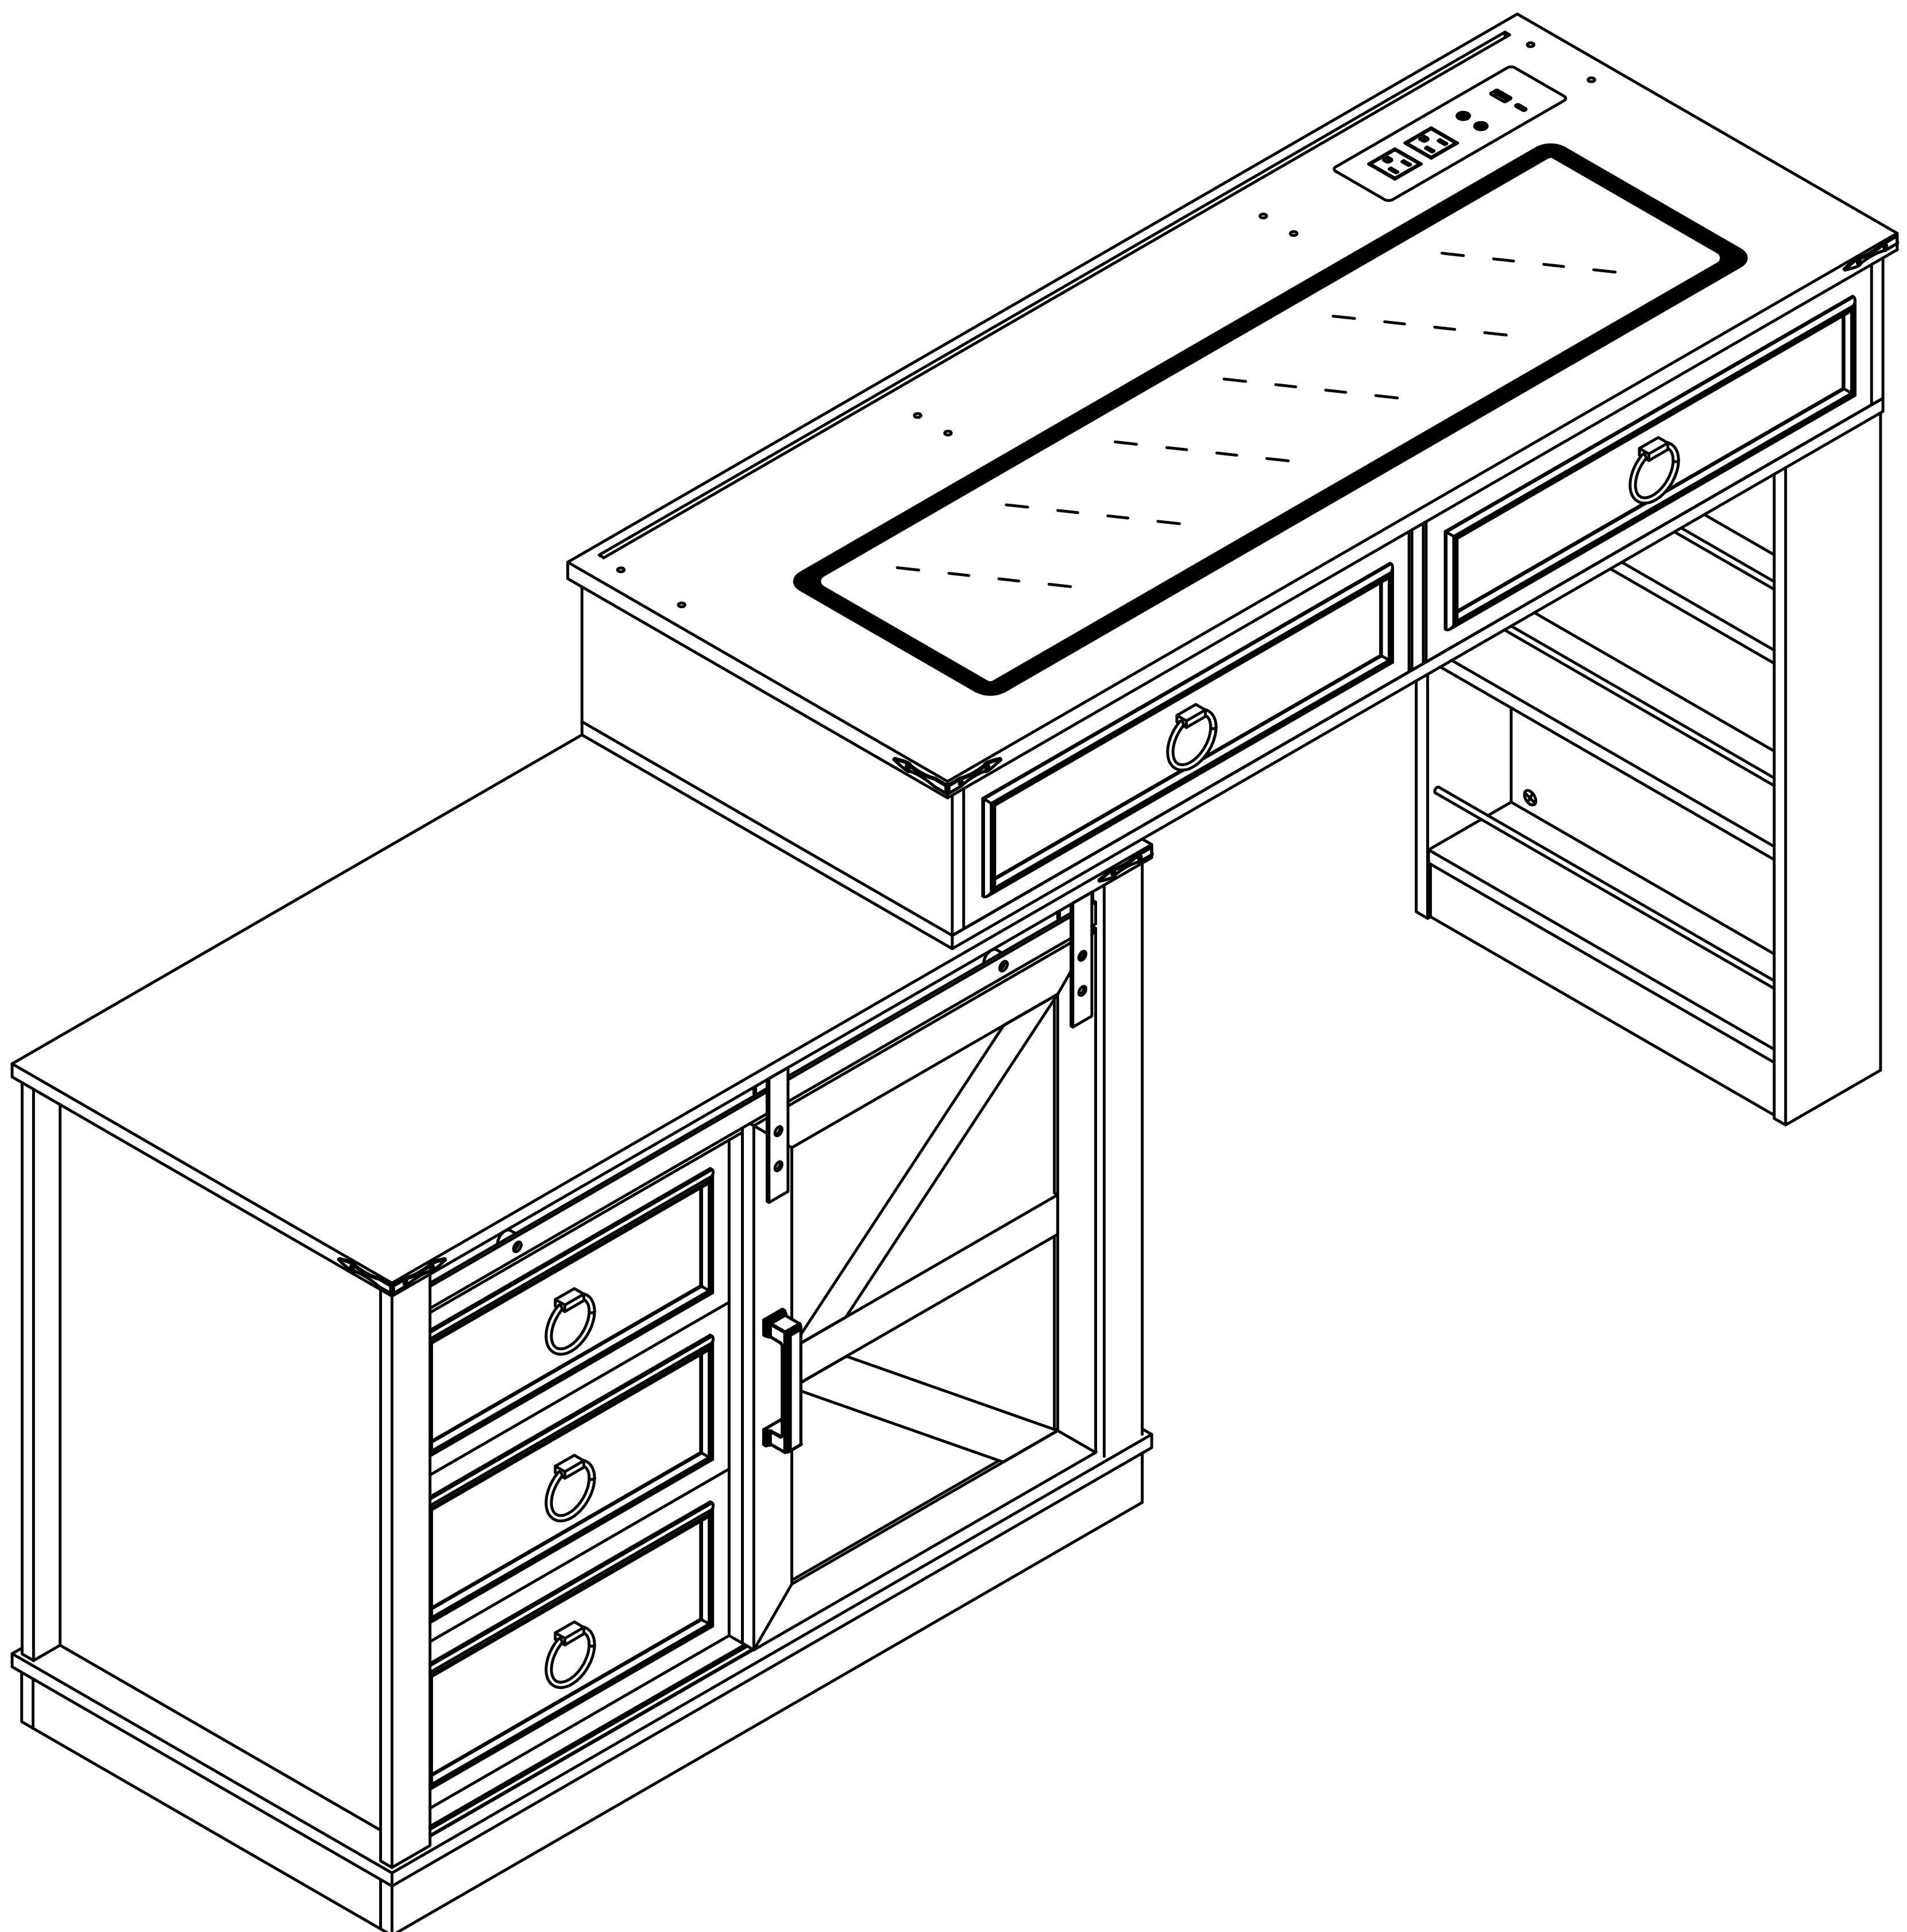

Step 54

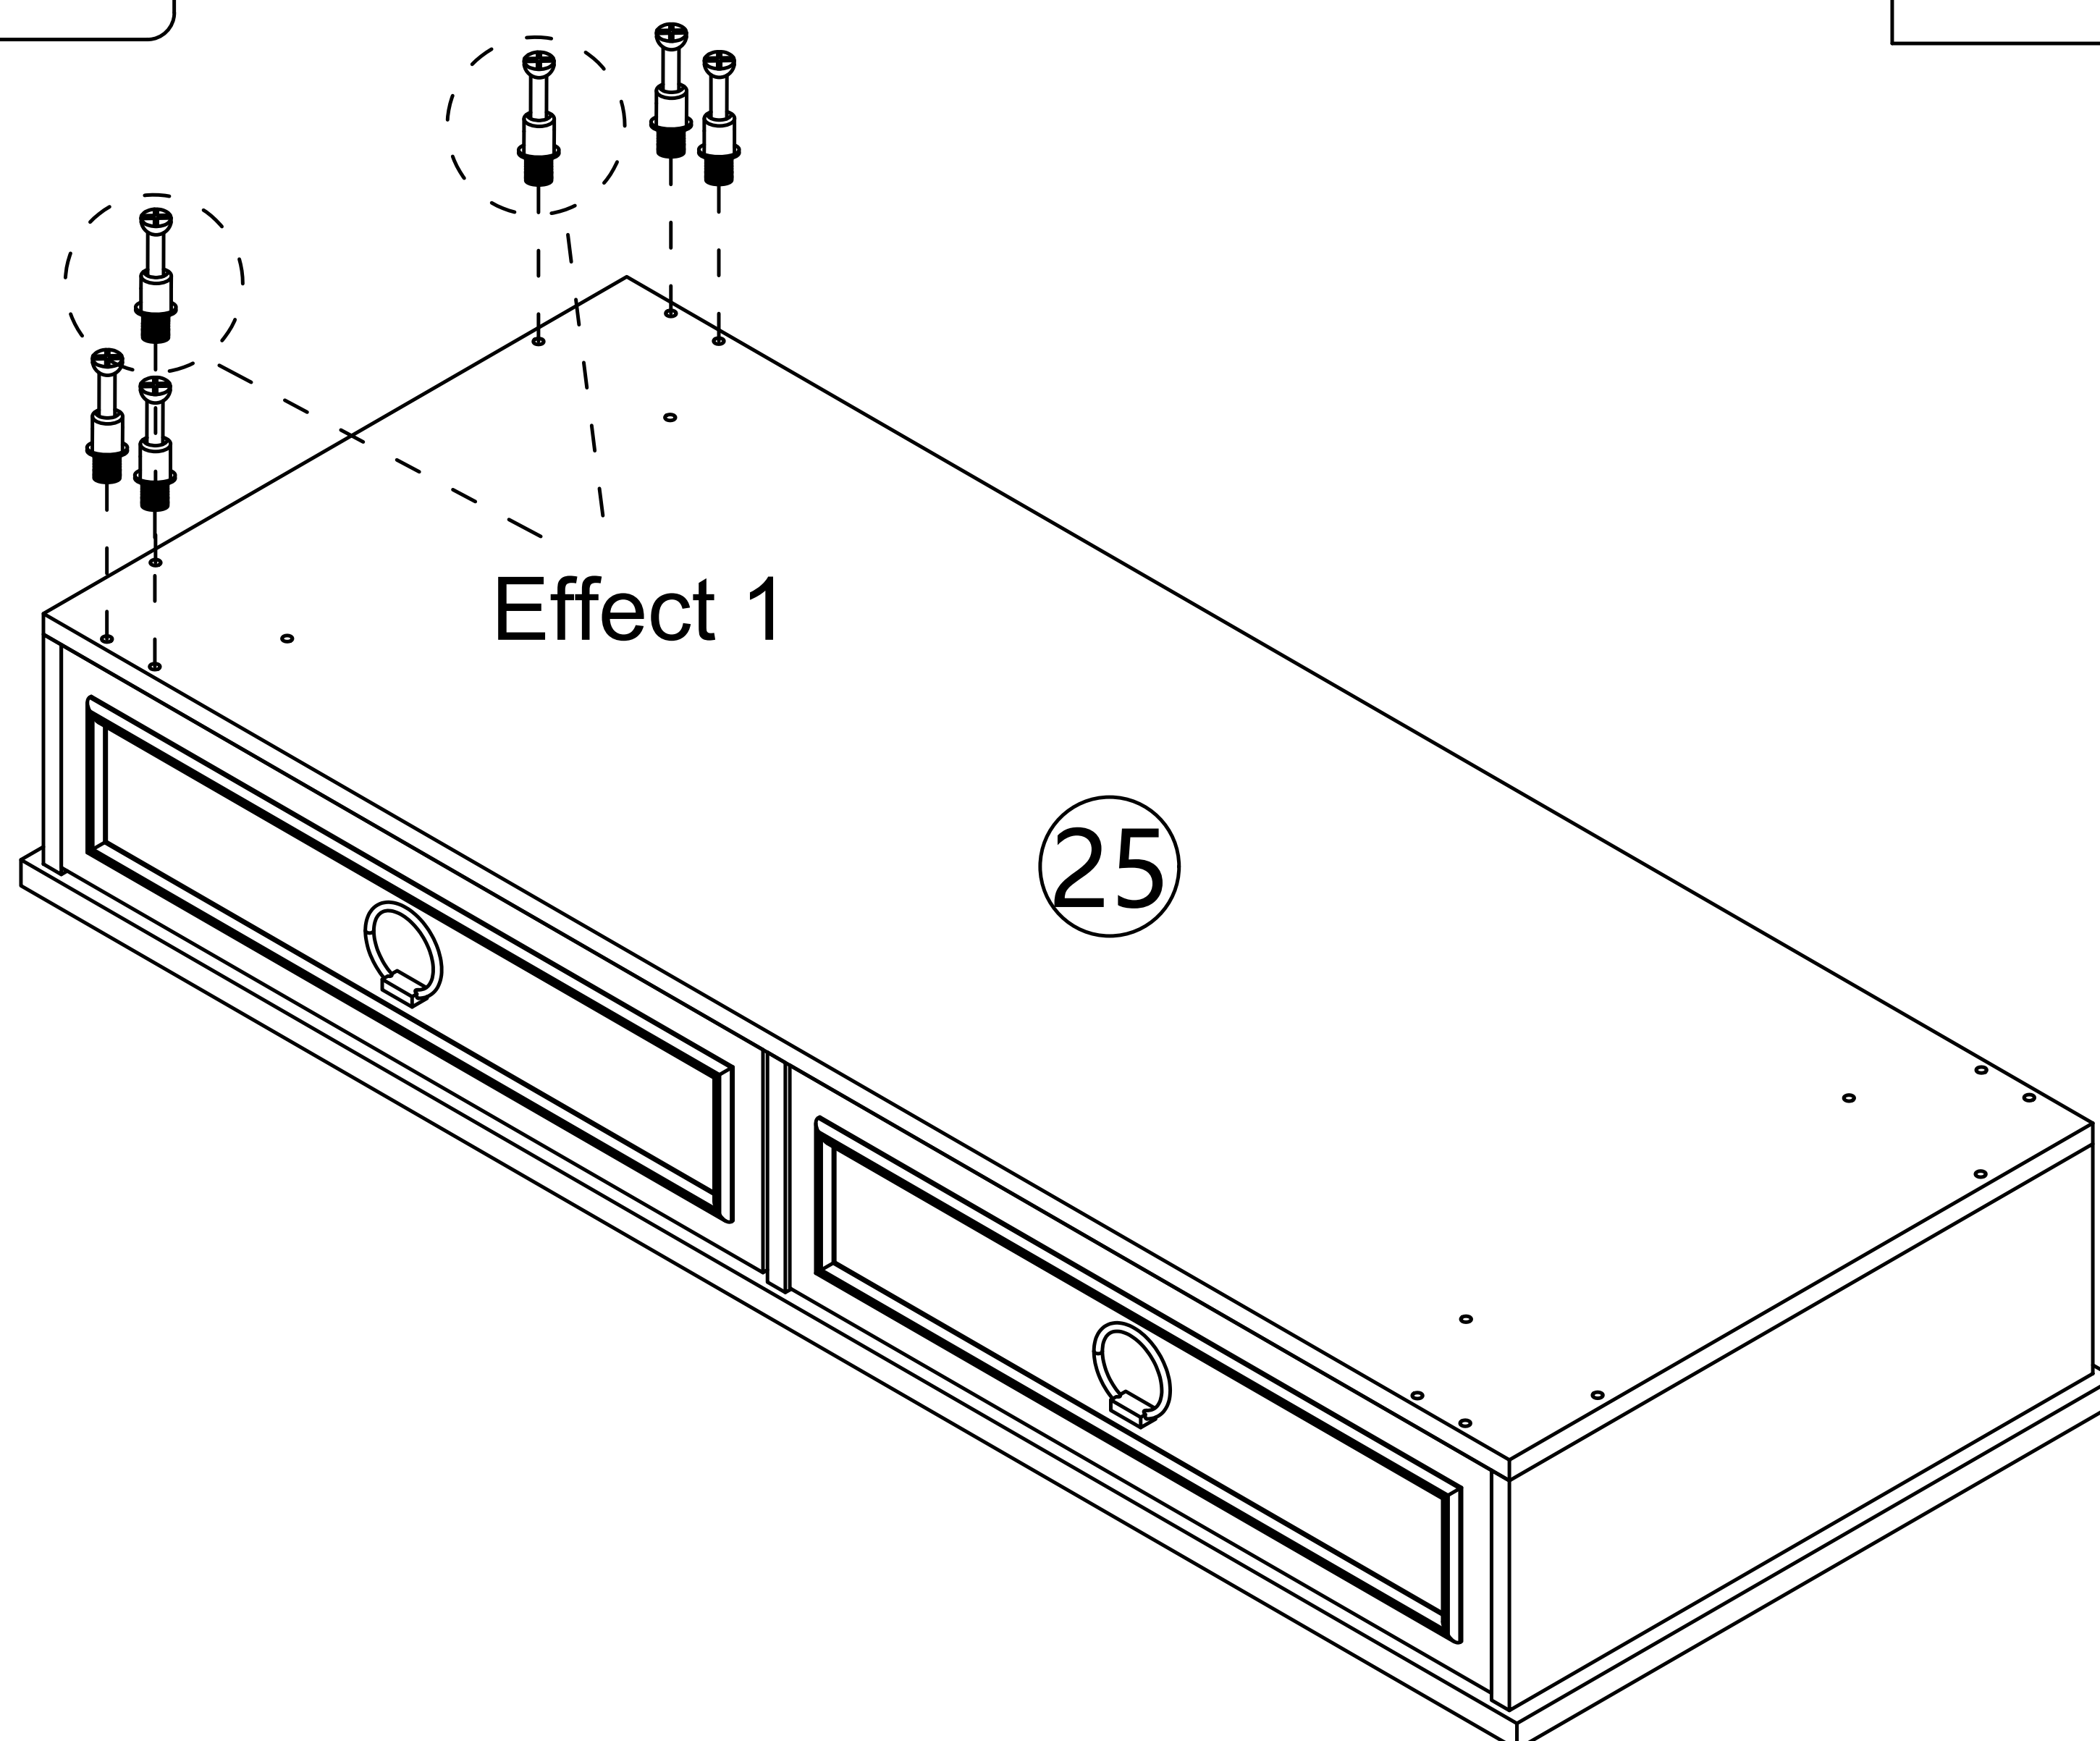
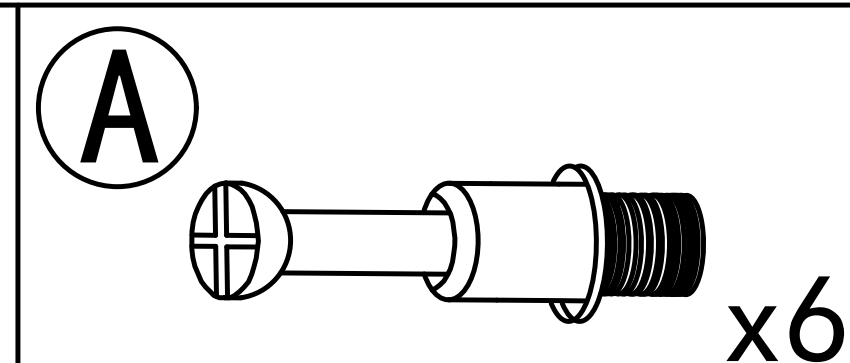


or

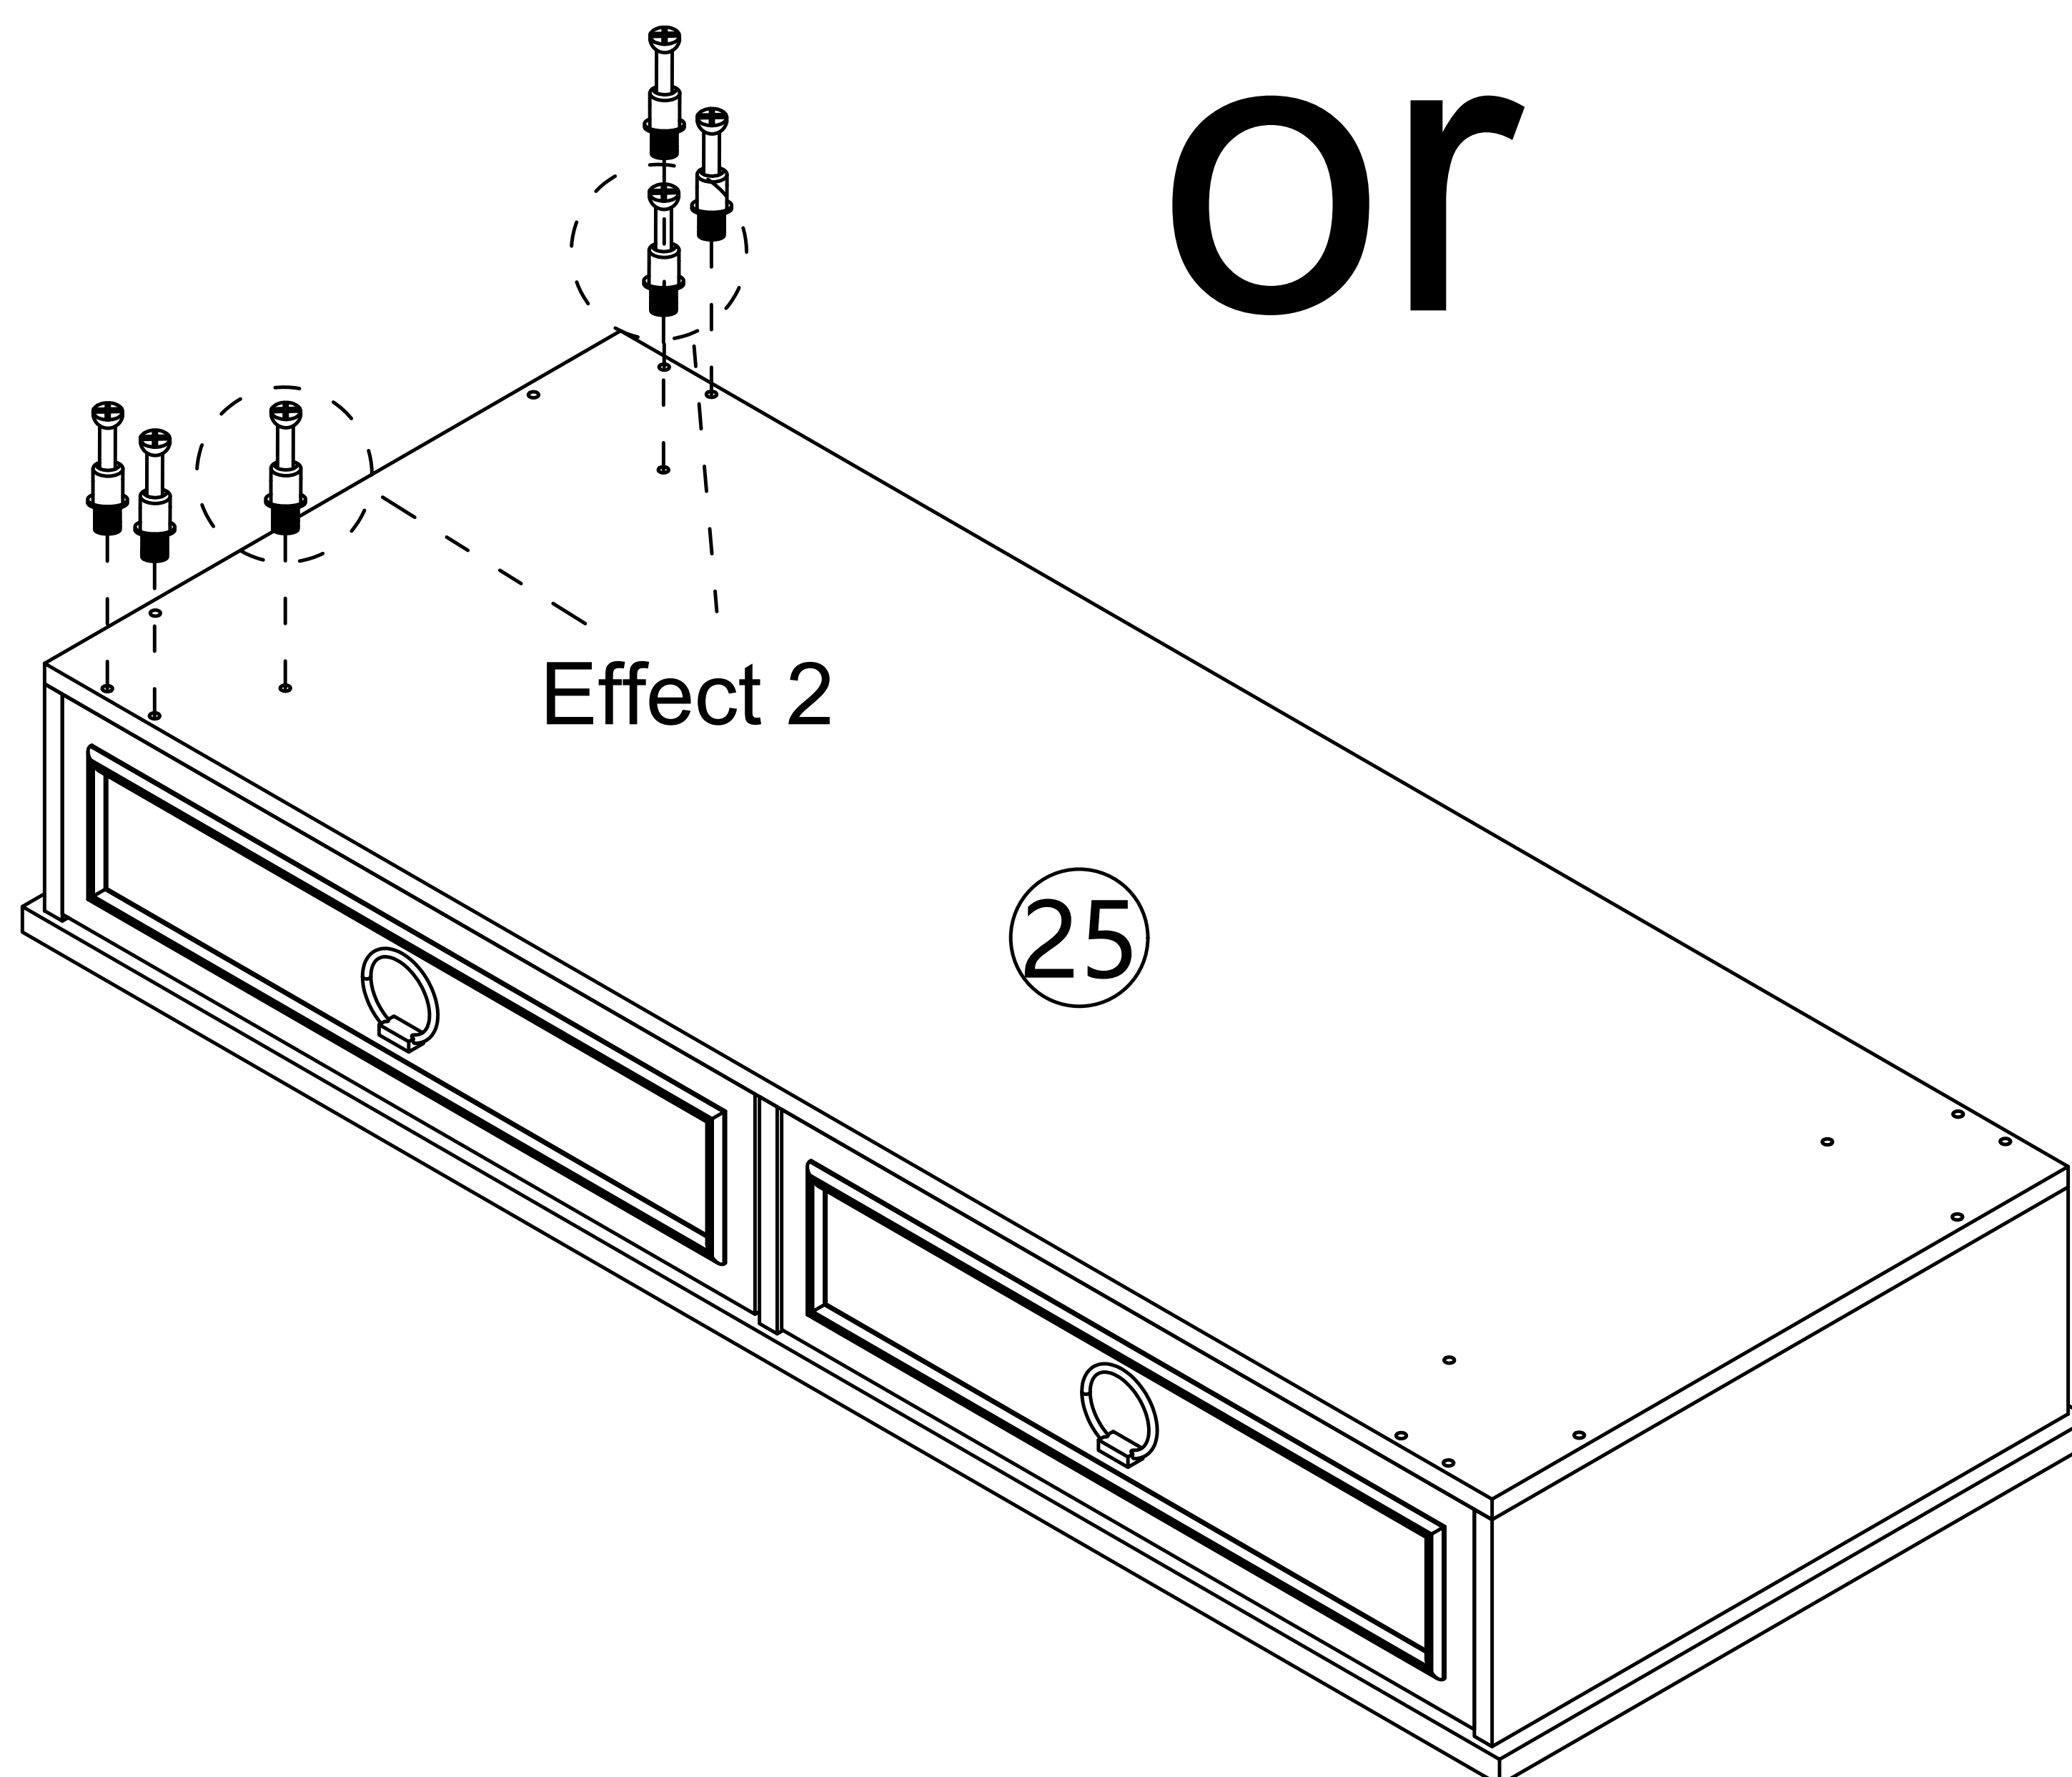


Attention: Before selecting the location to install, please review the four effects first

Step 55

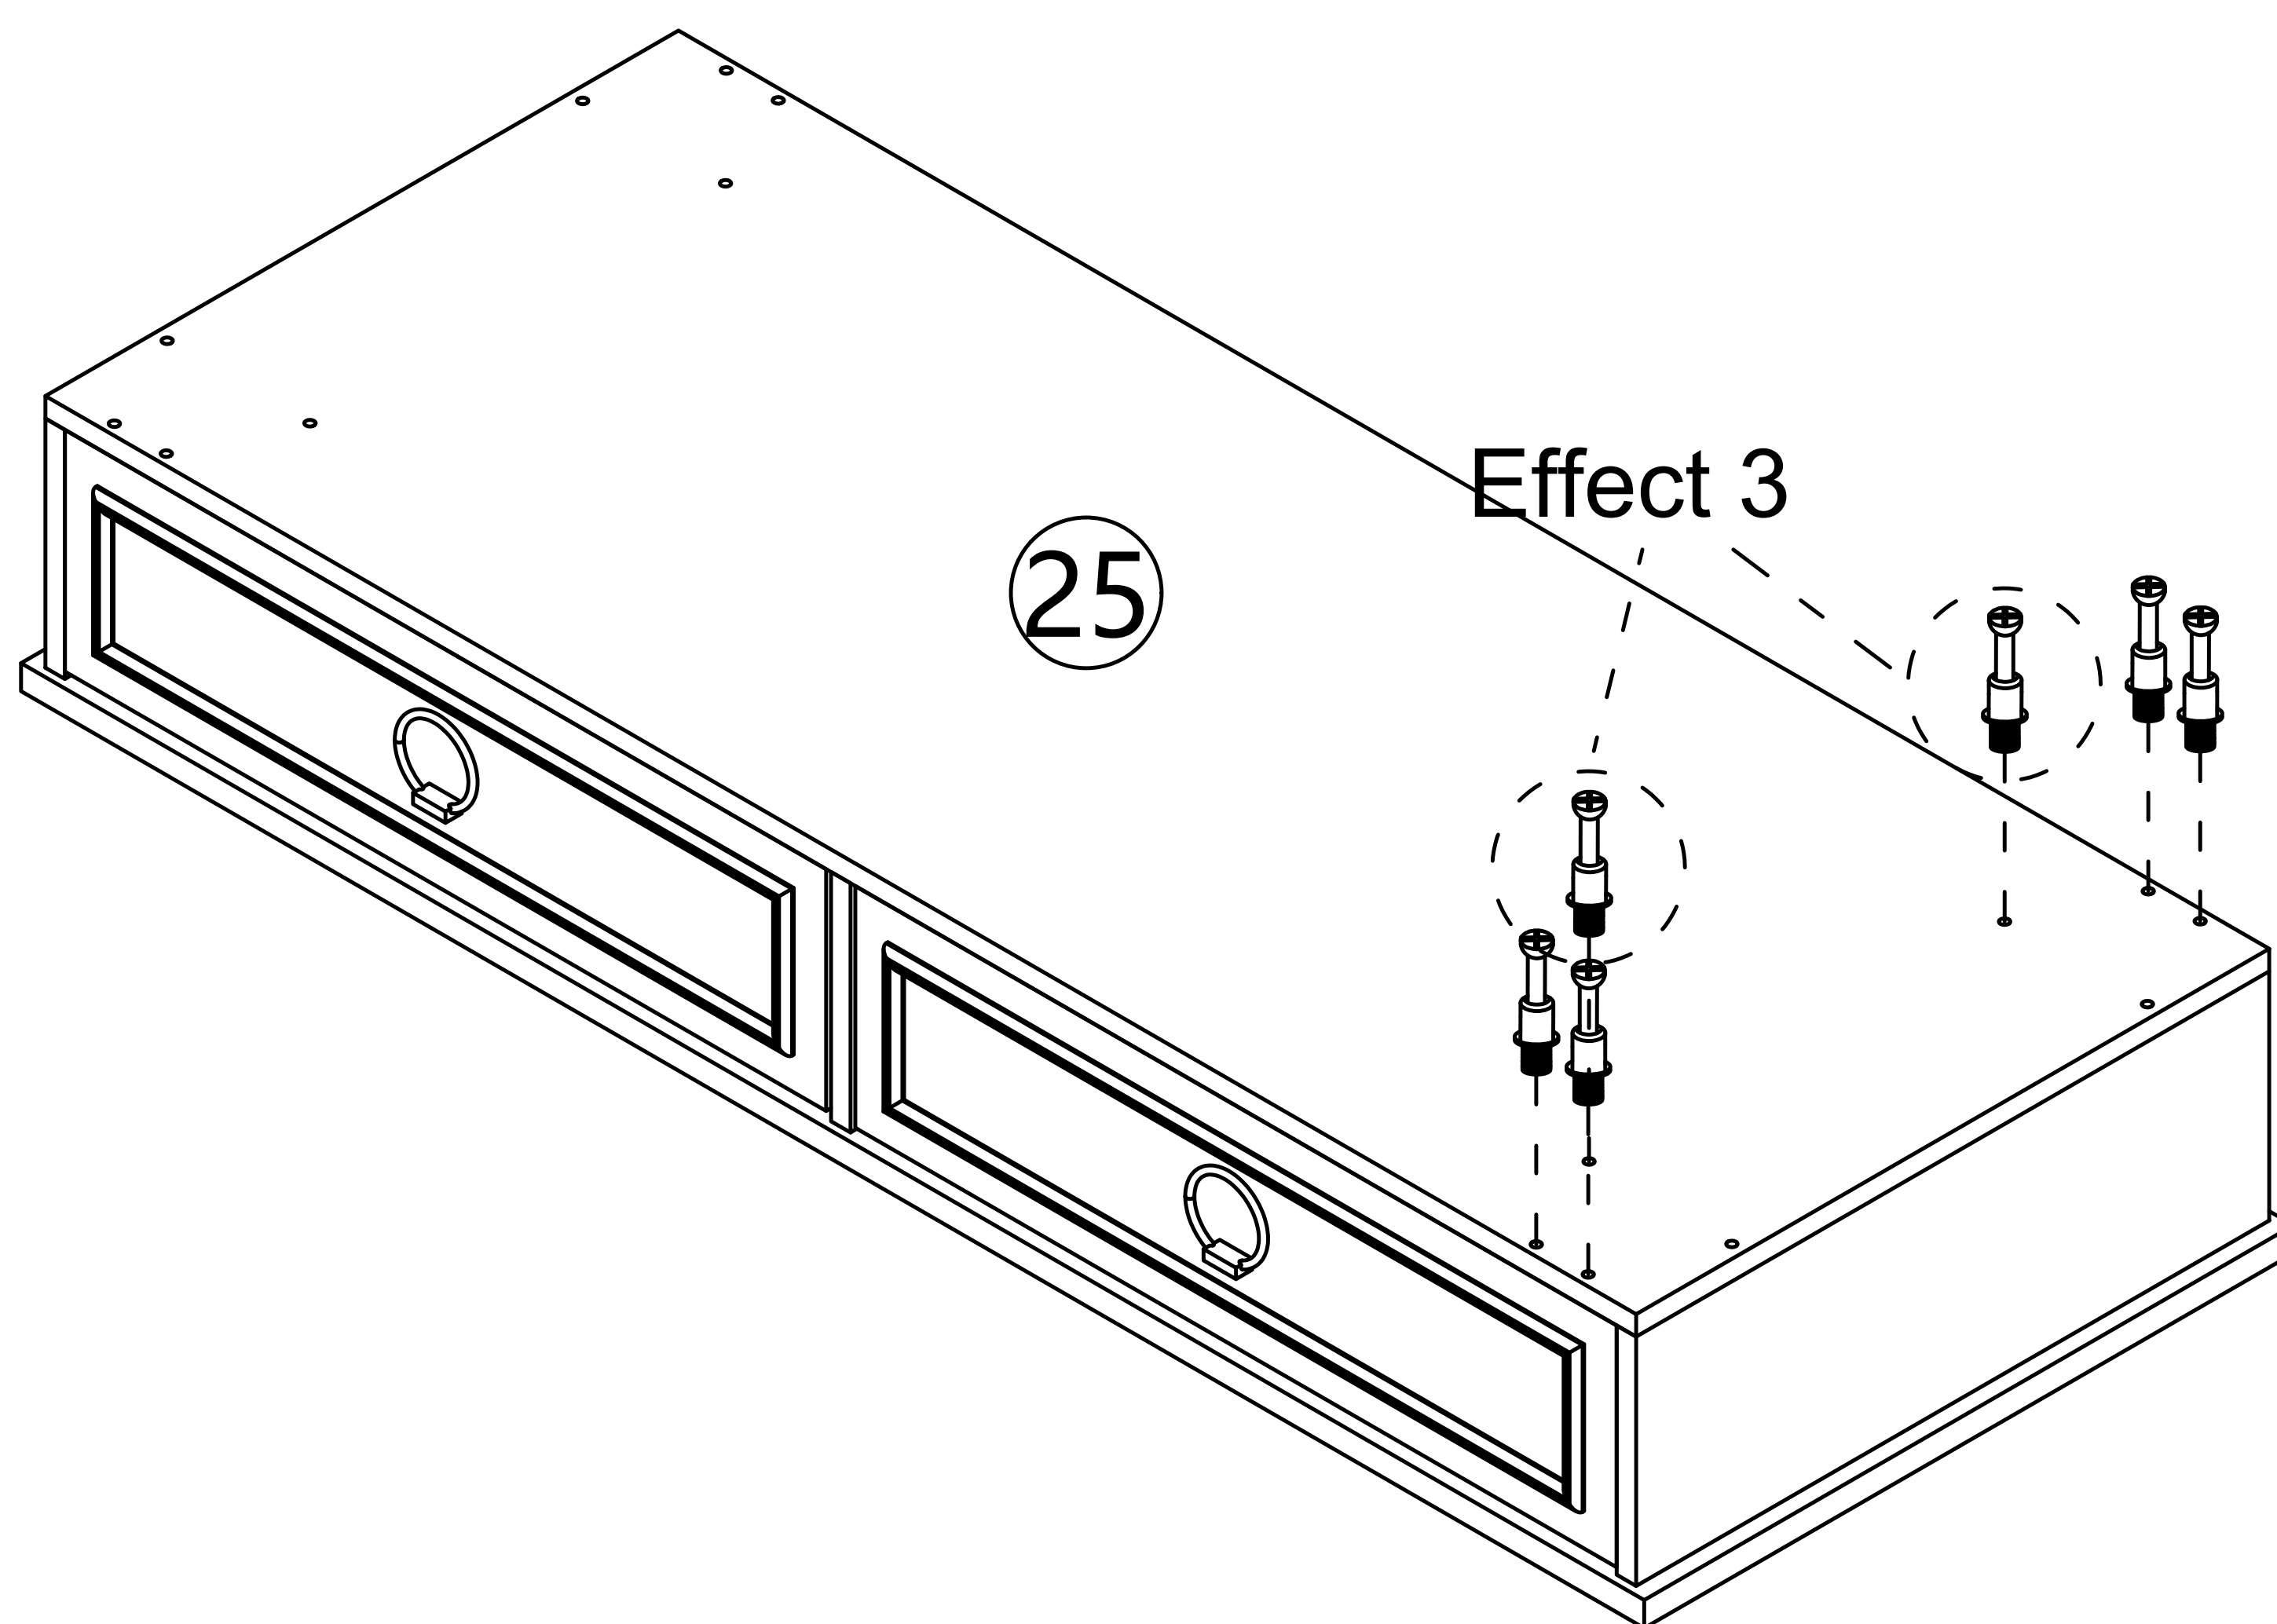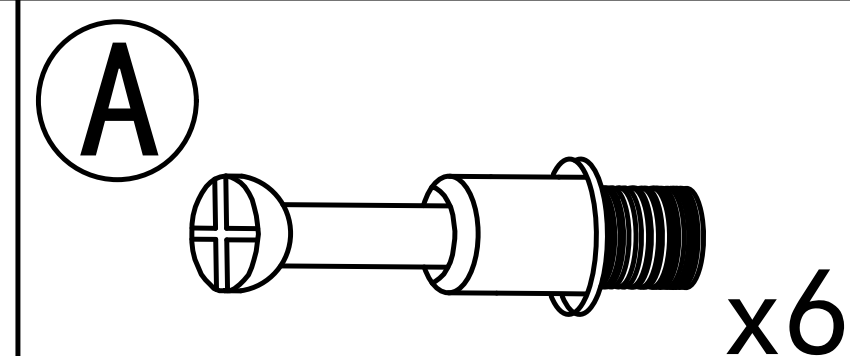


or

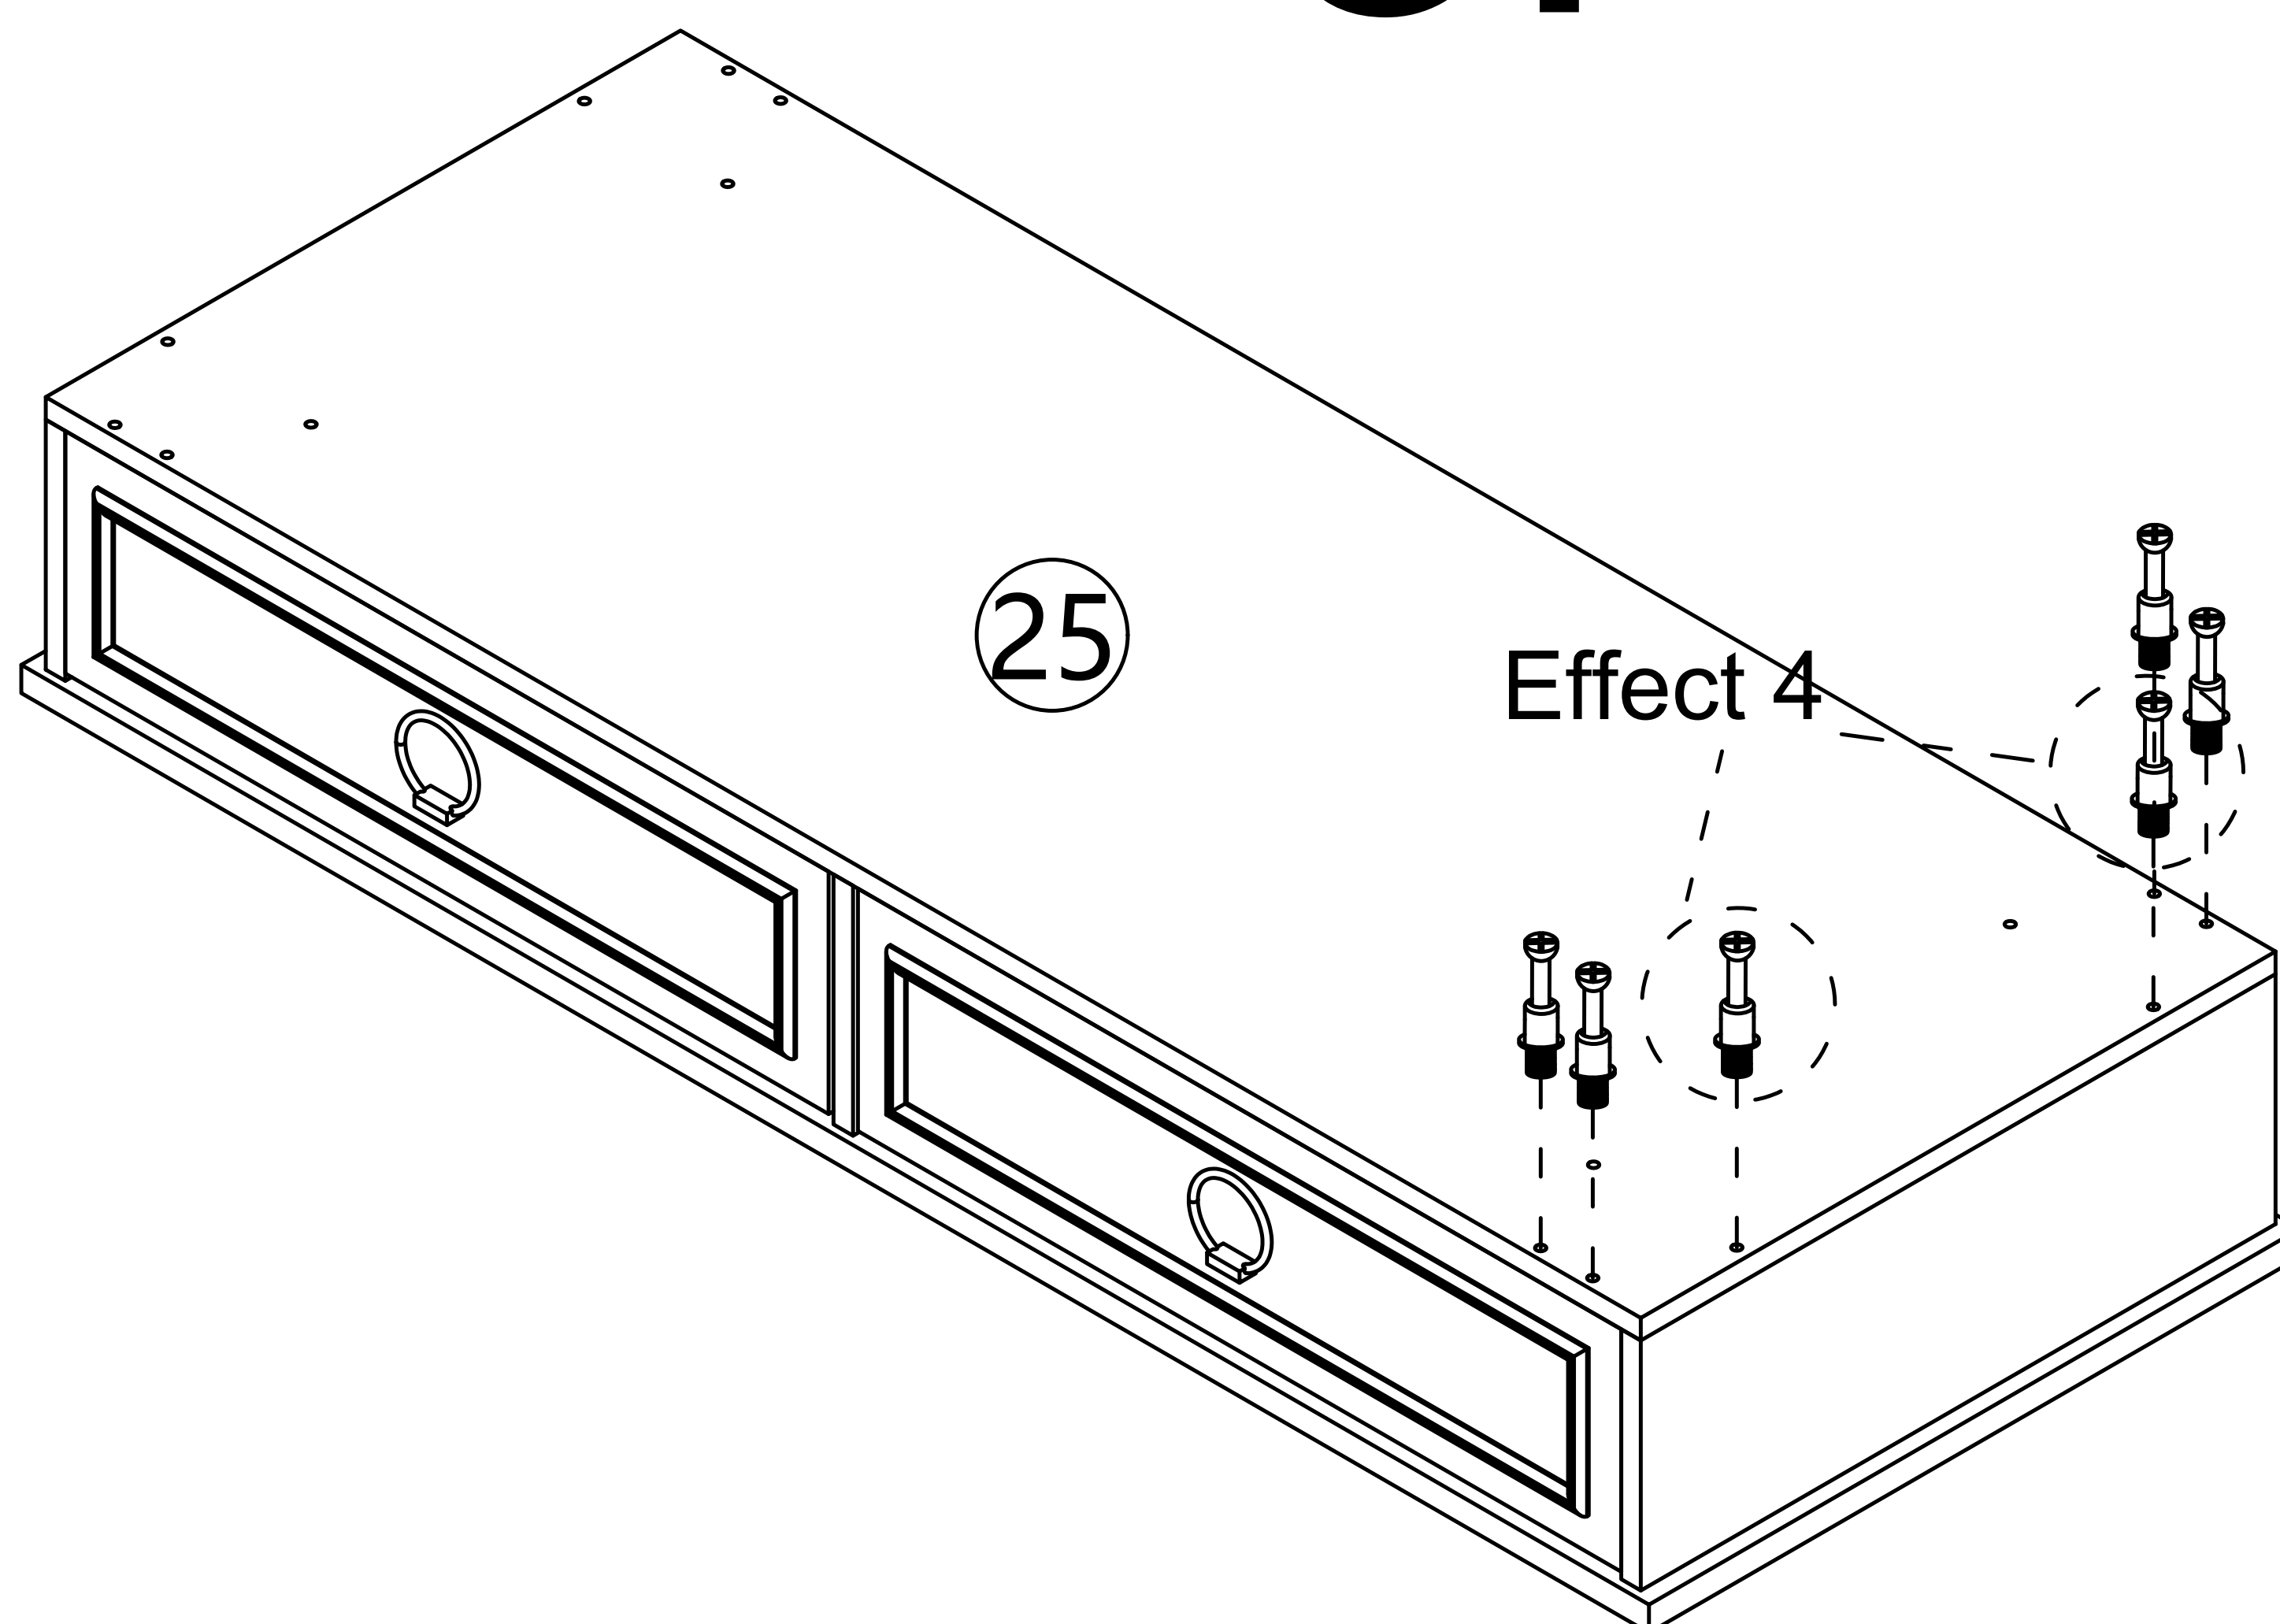


Attention: Before selecting the location to install, please review the four effects first


Effect 1

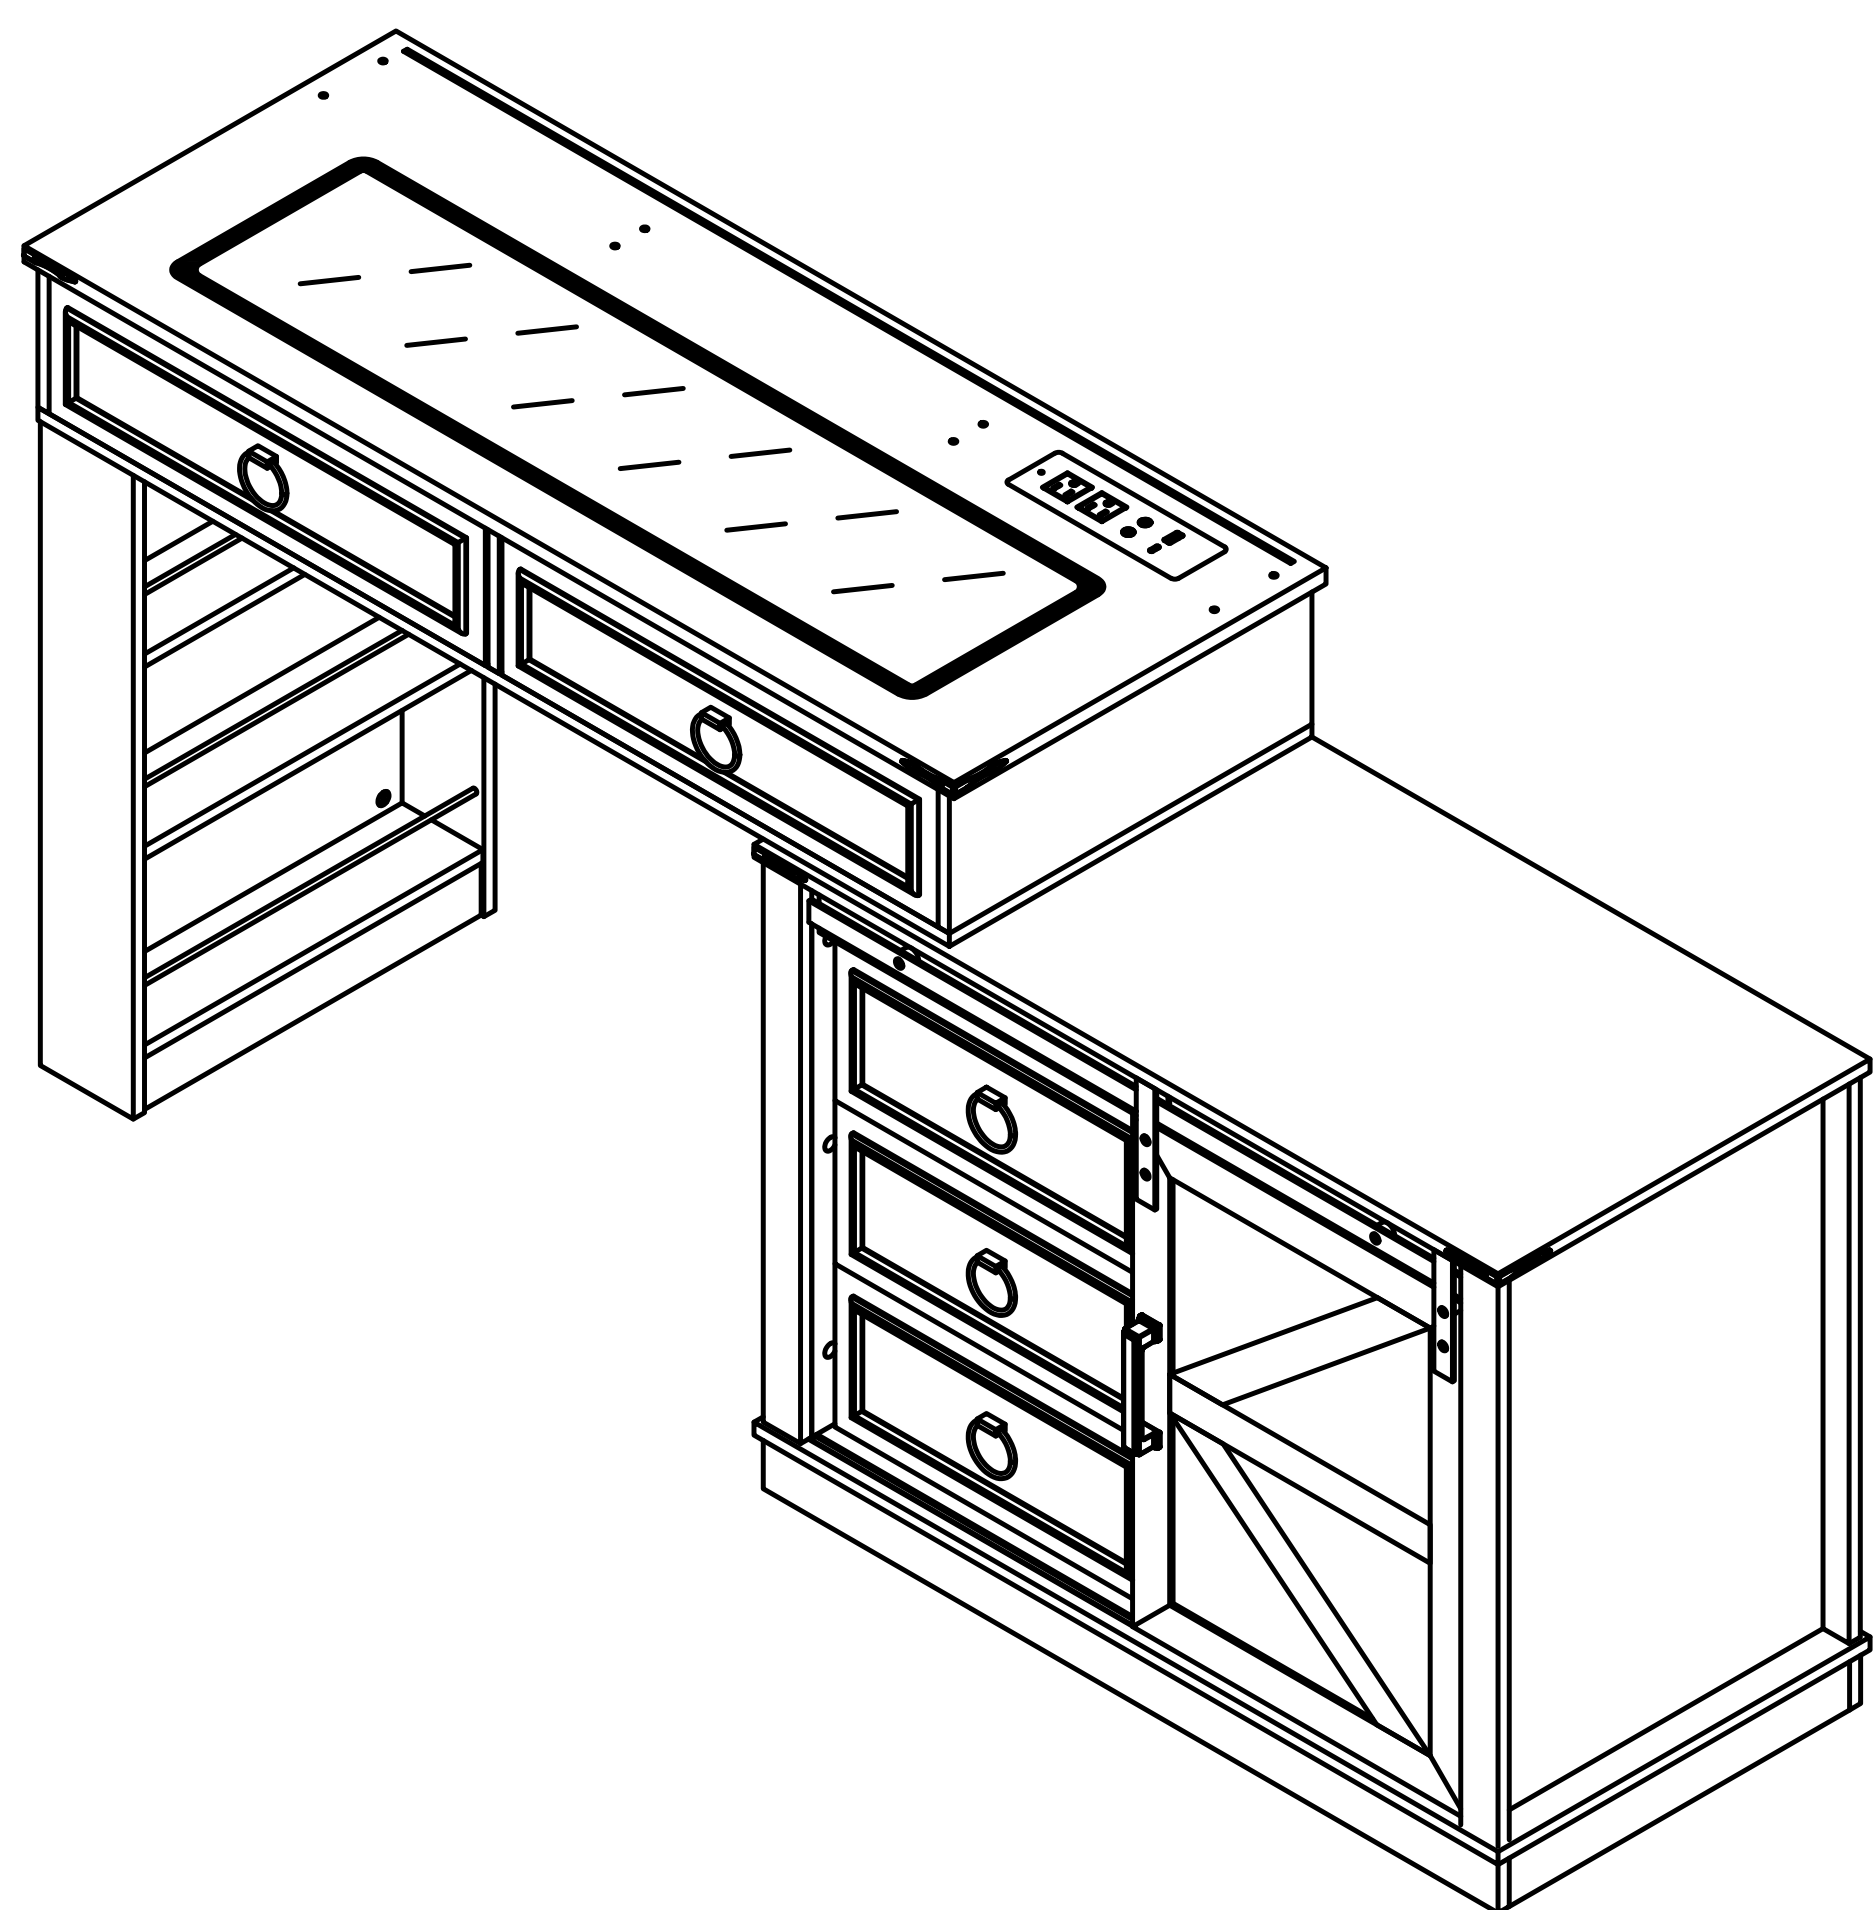


Effect 2

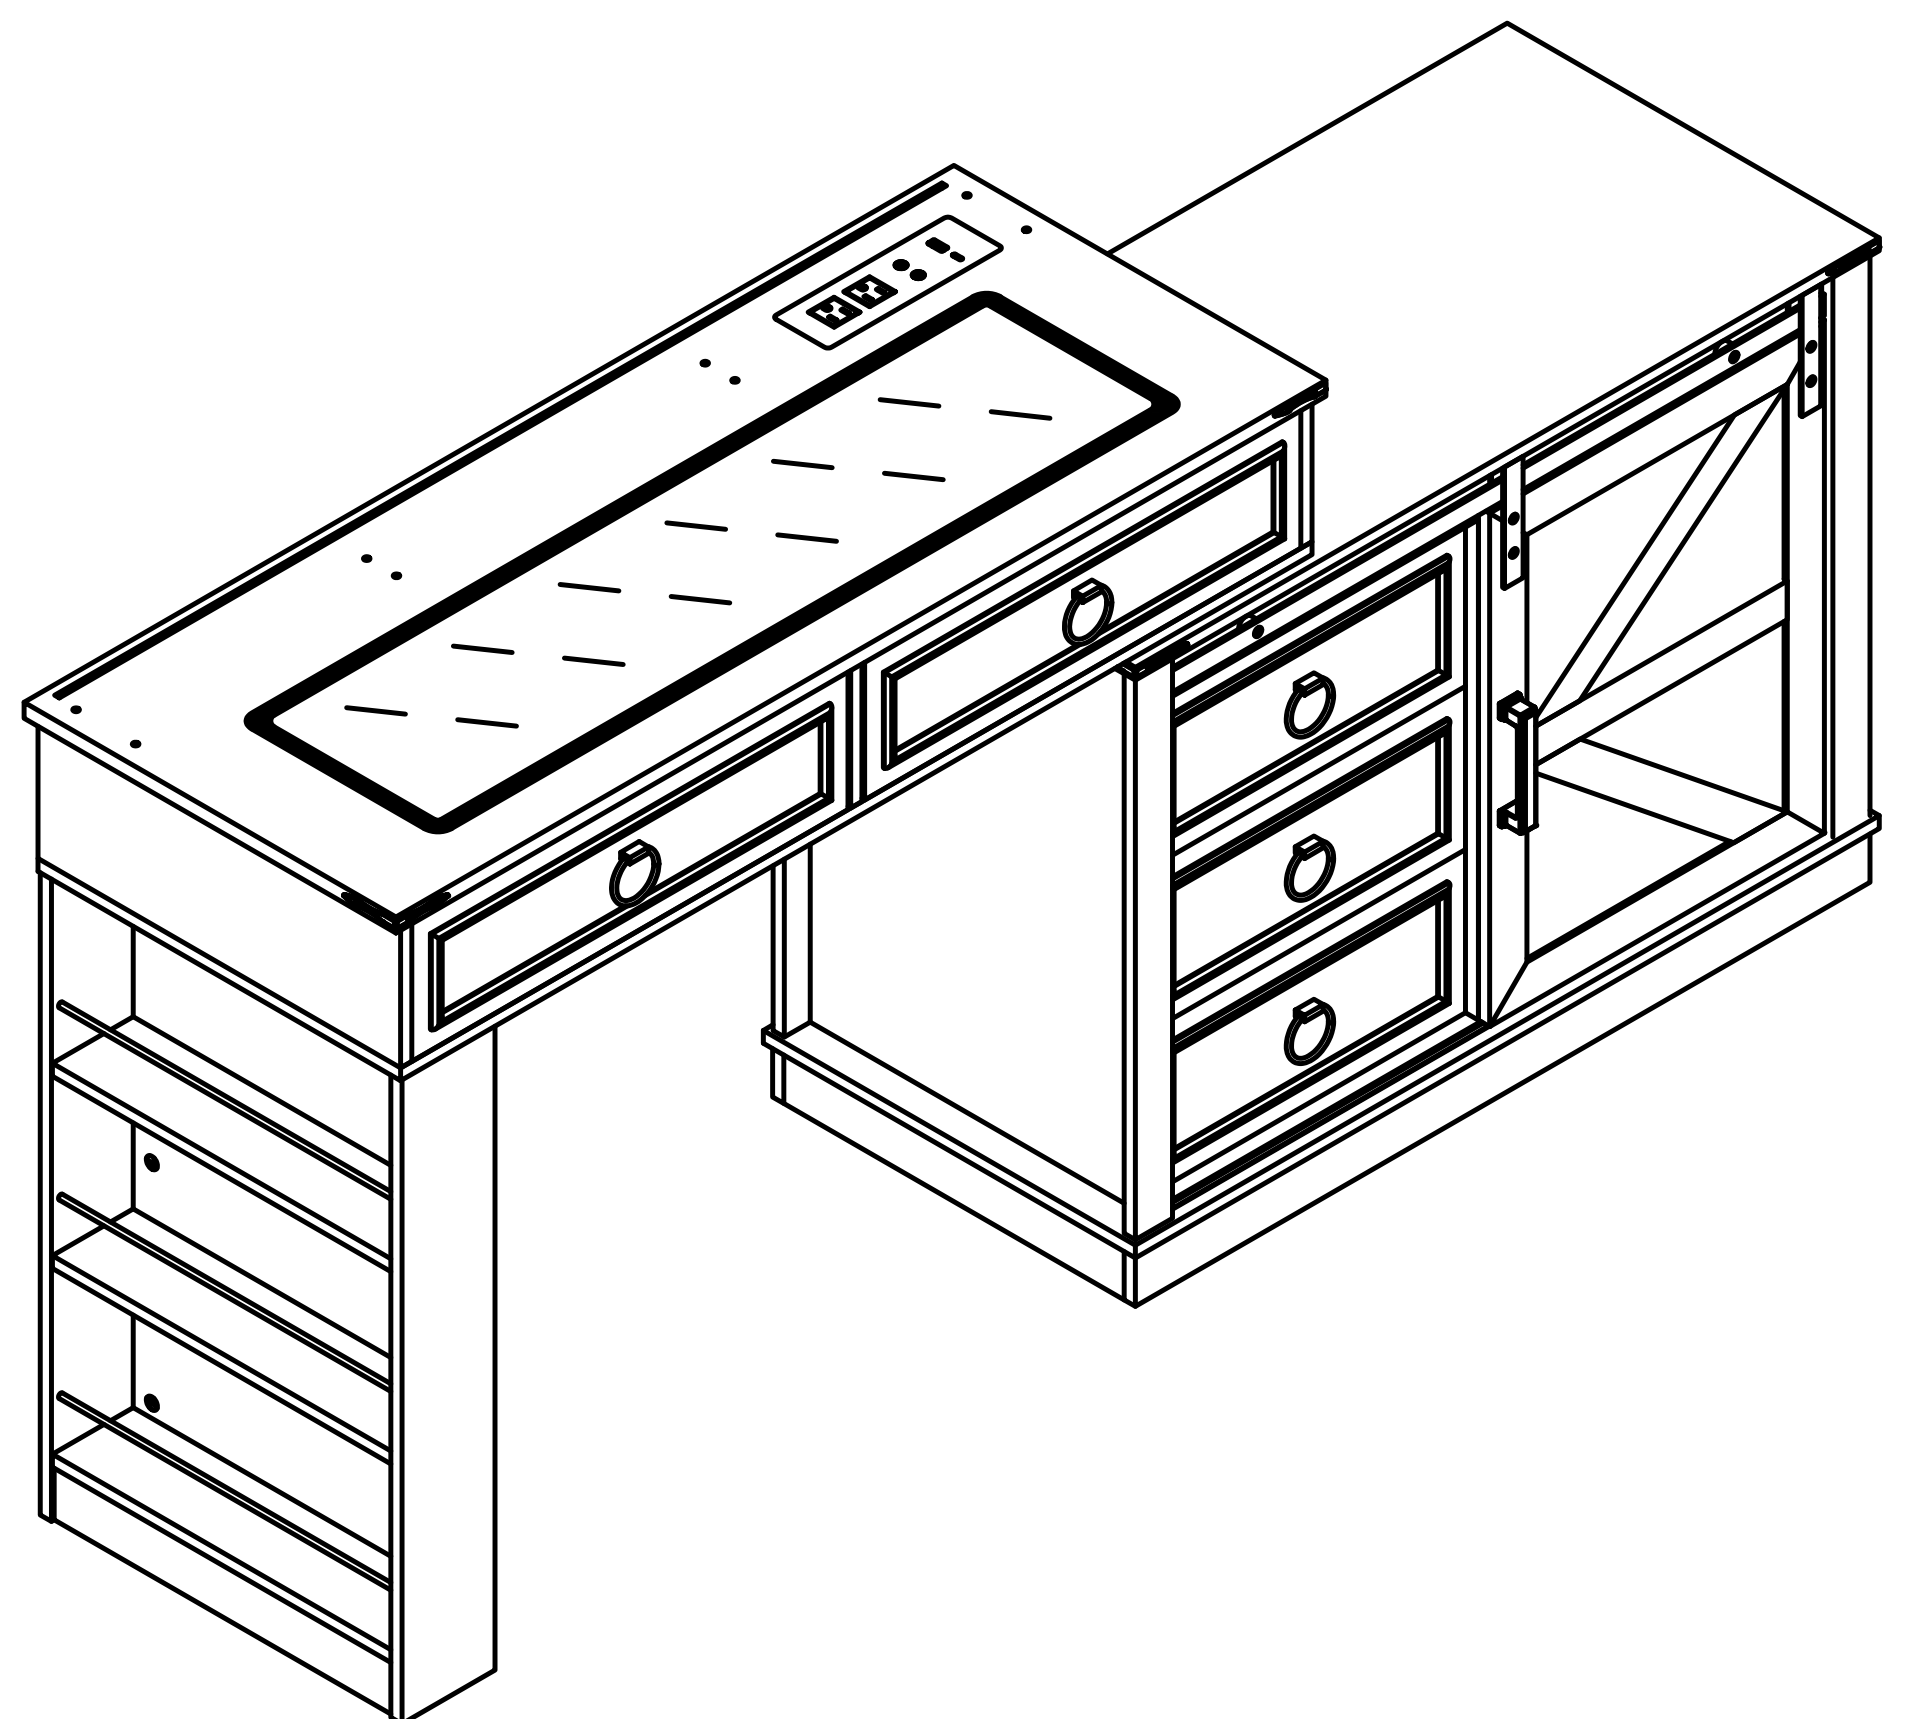



Effect 3











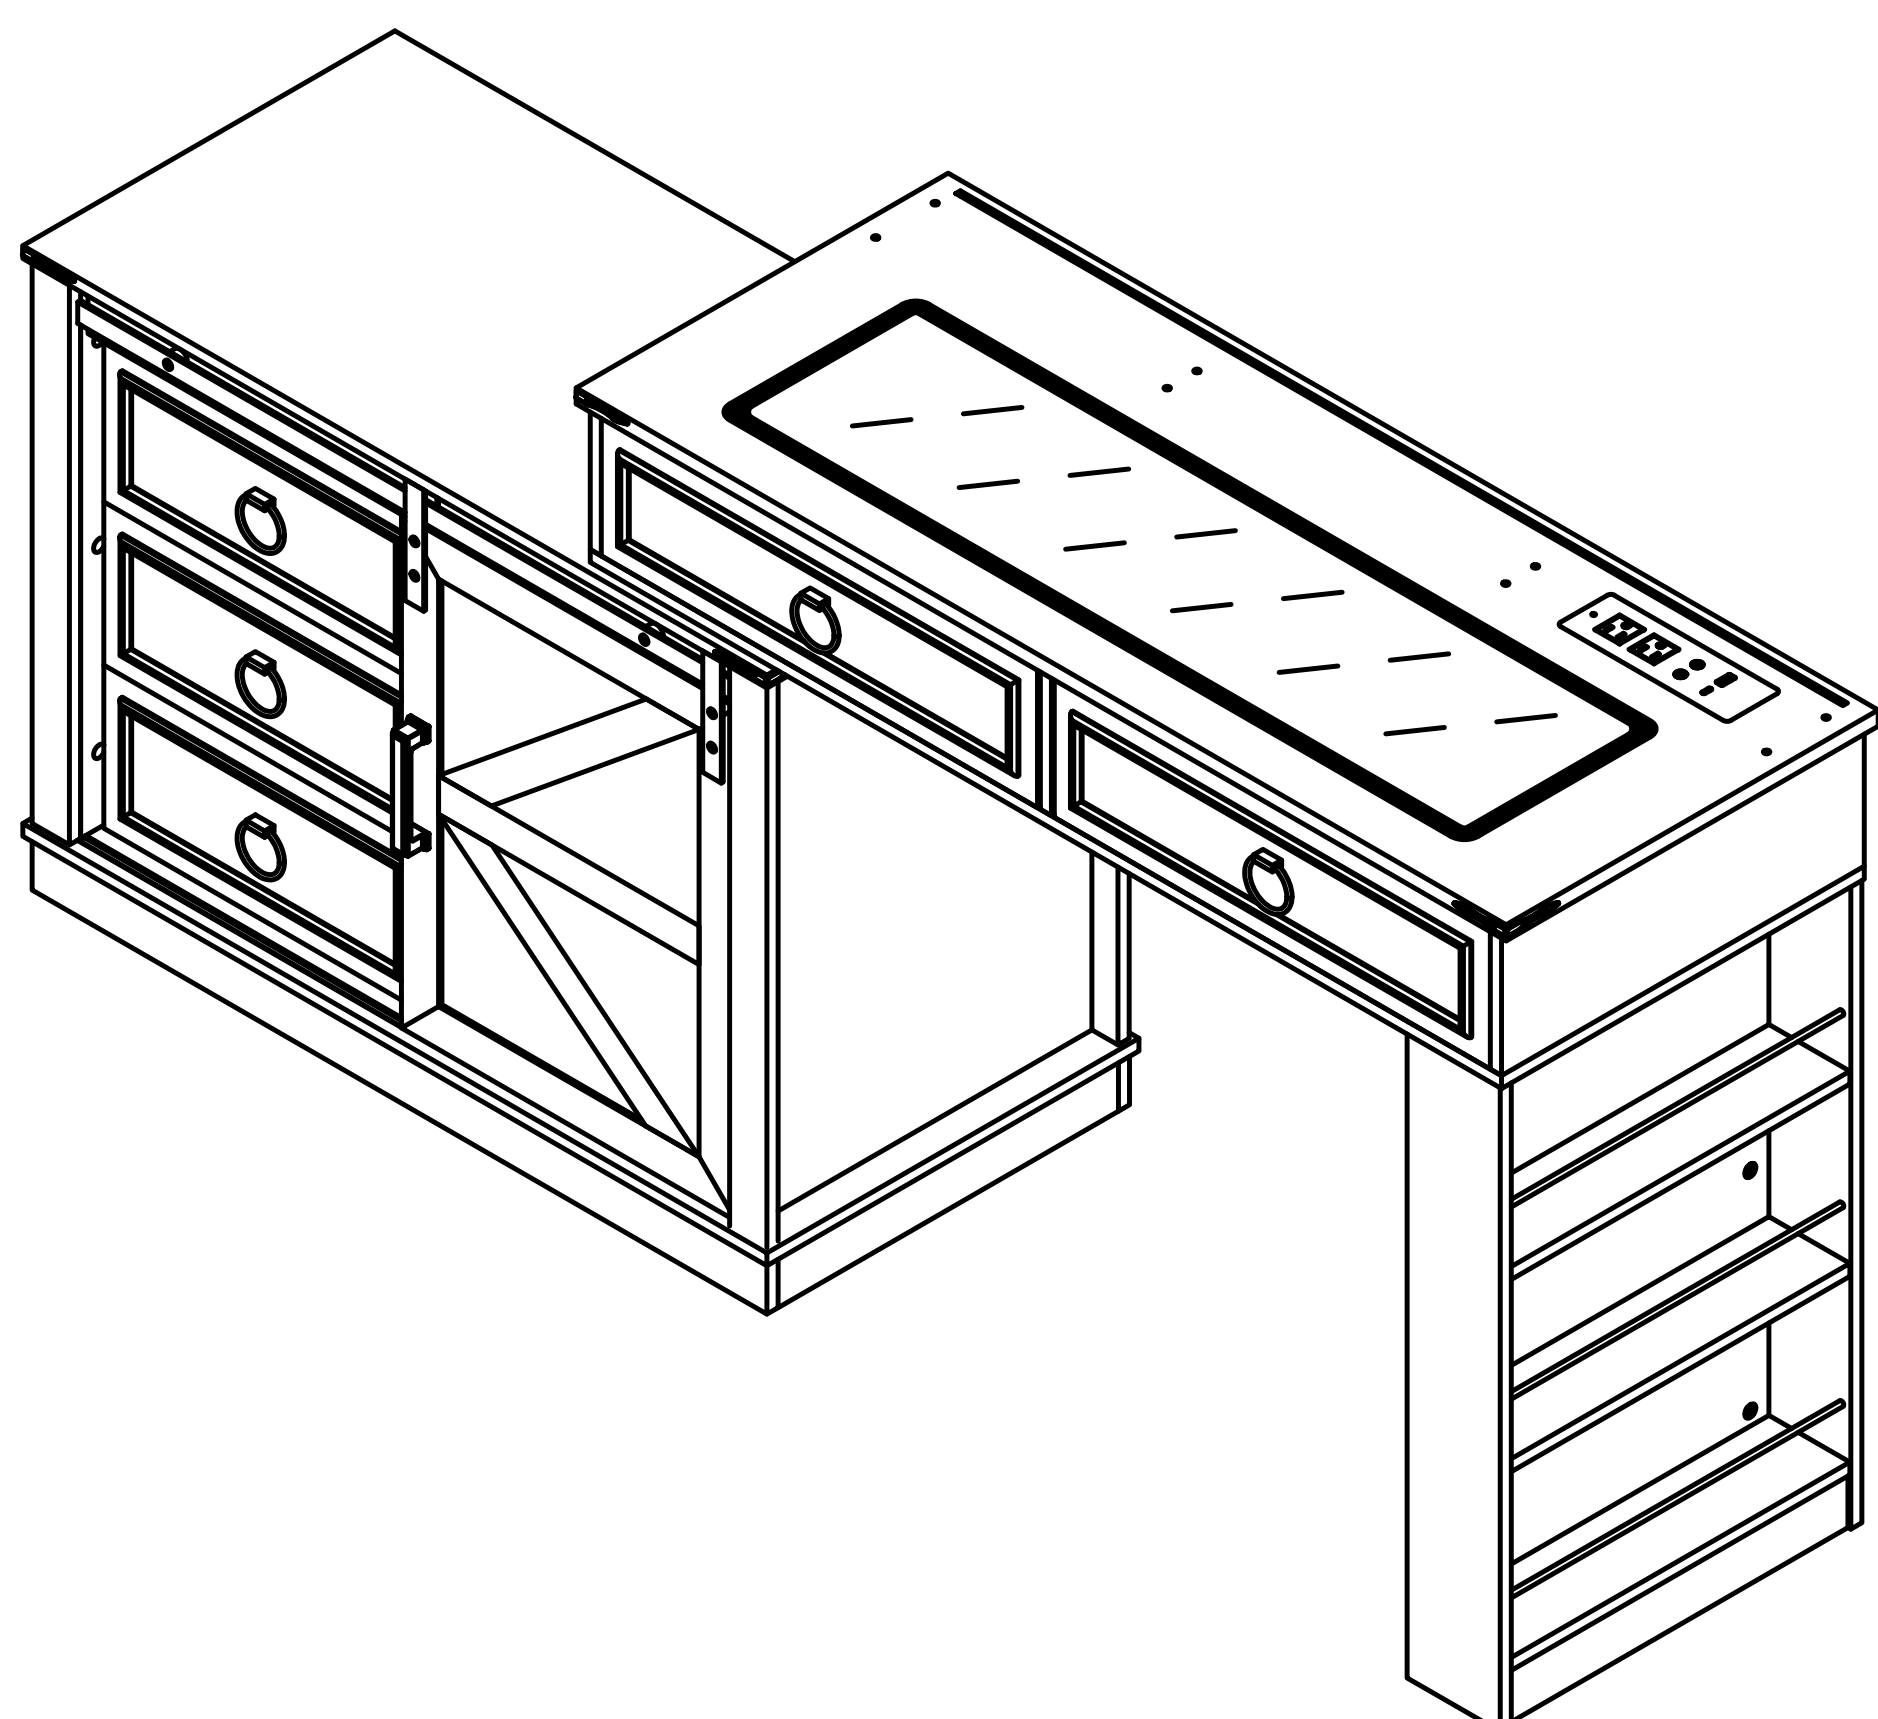



Effect 4

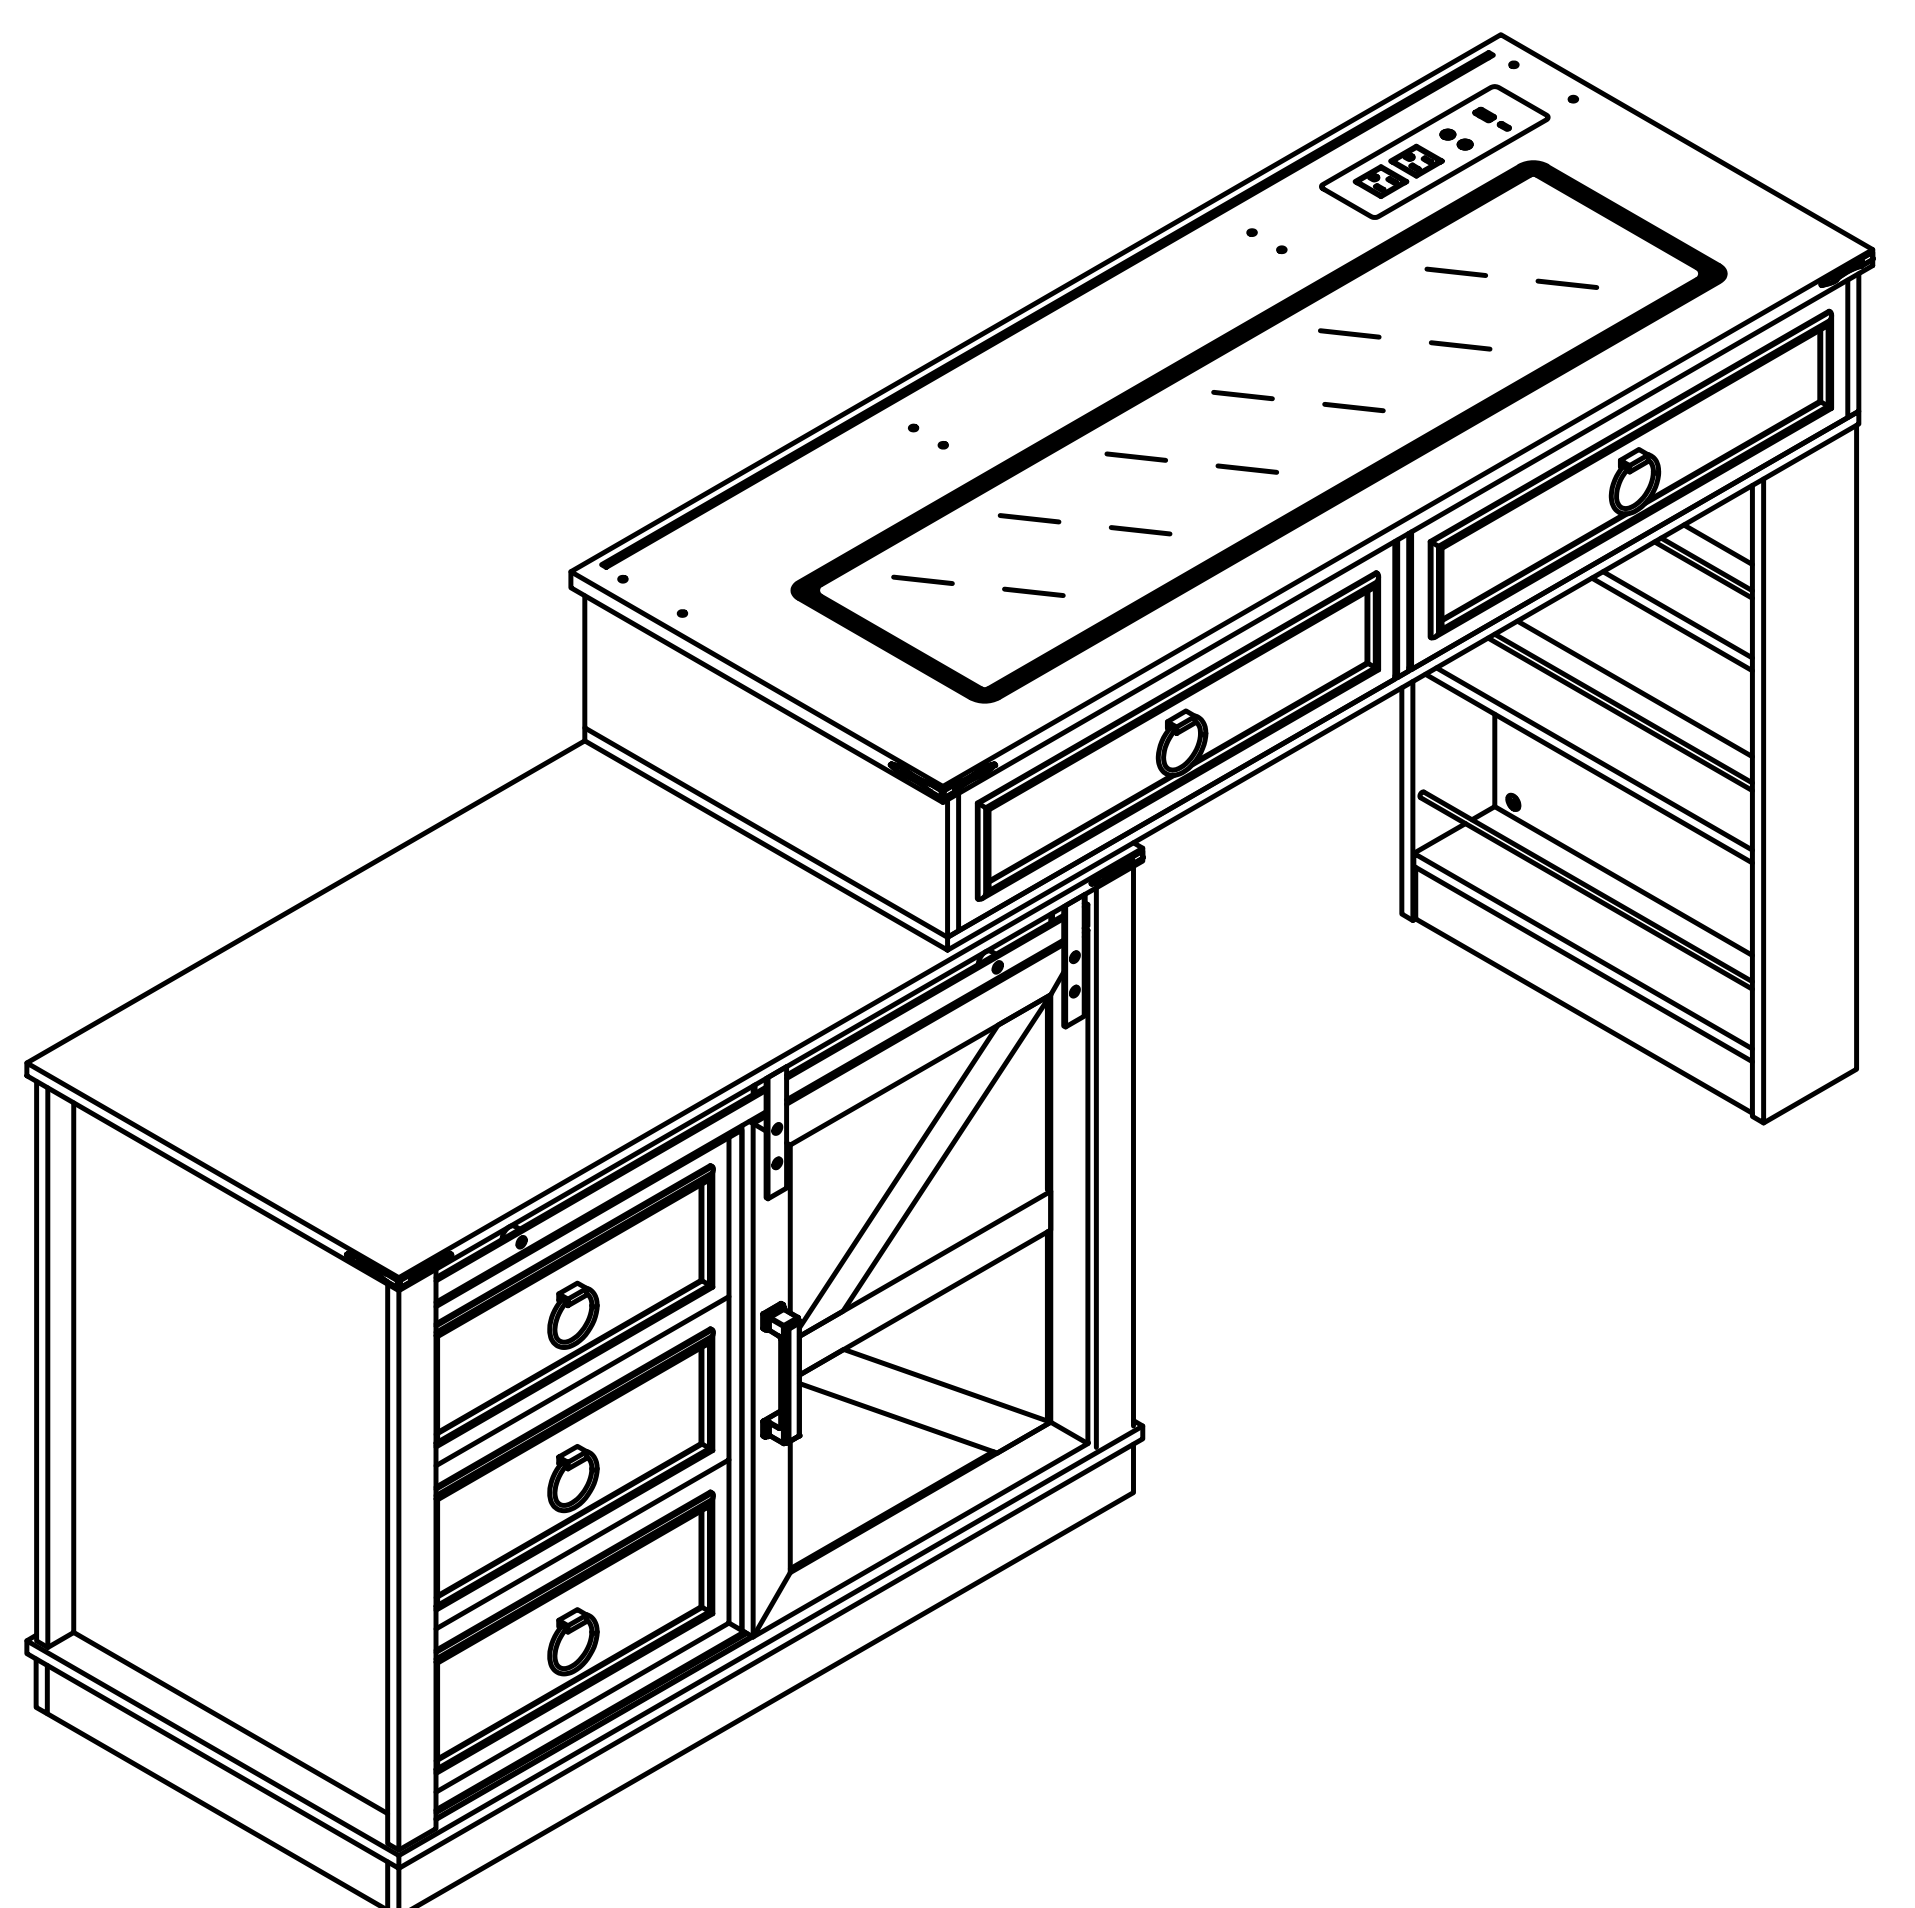



Step 56

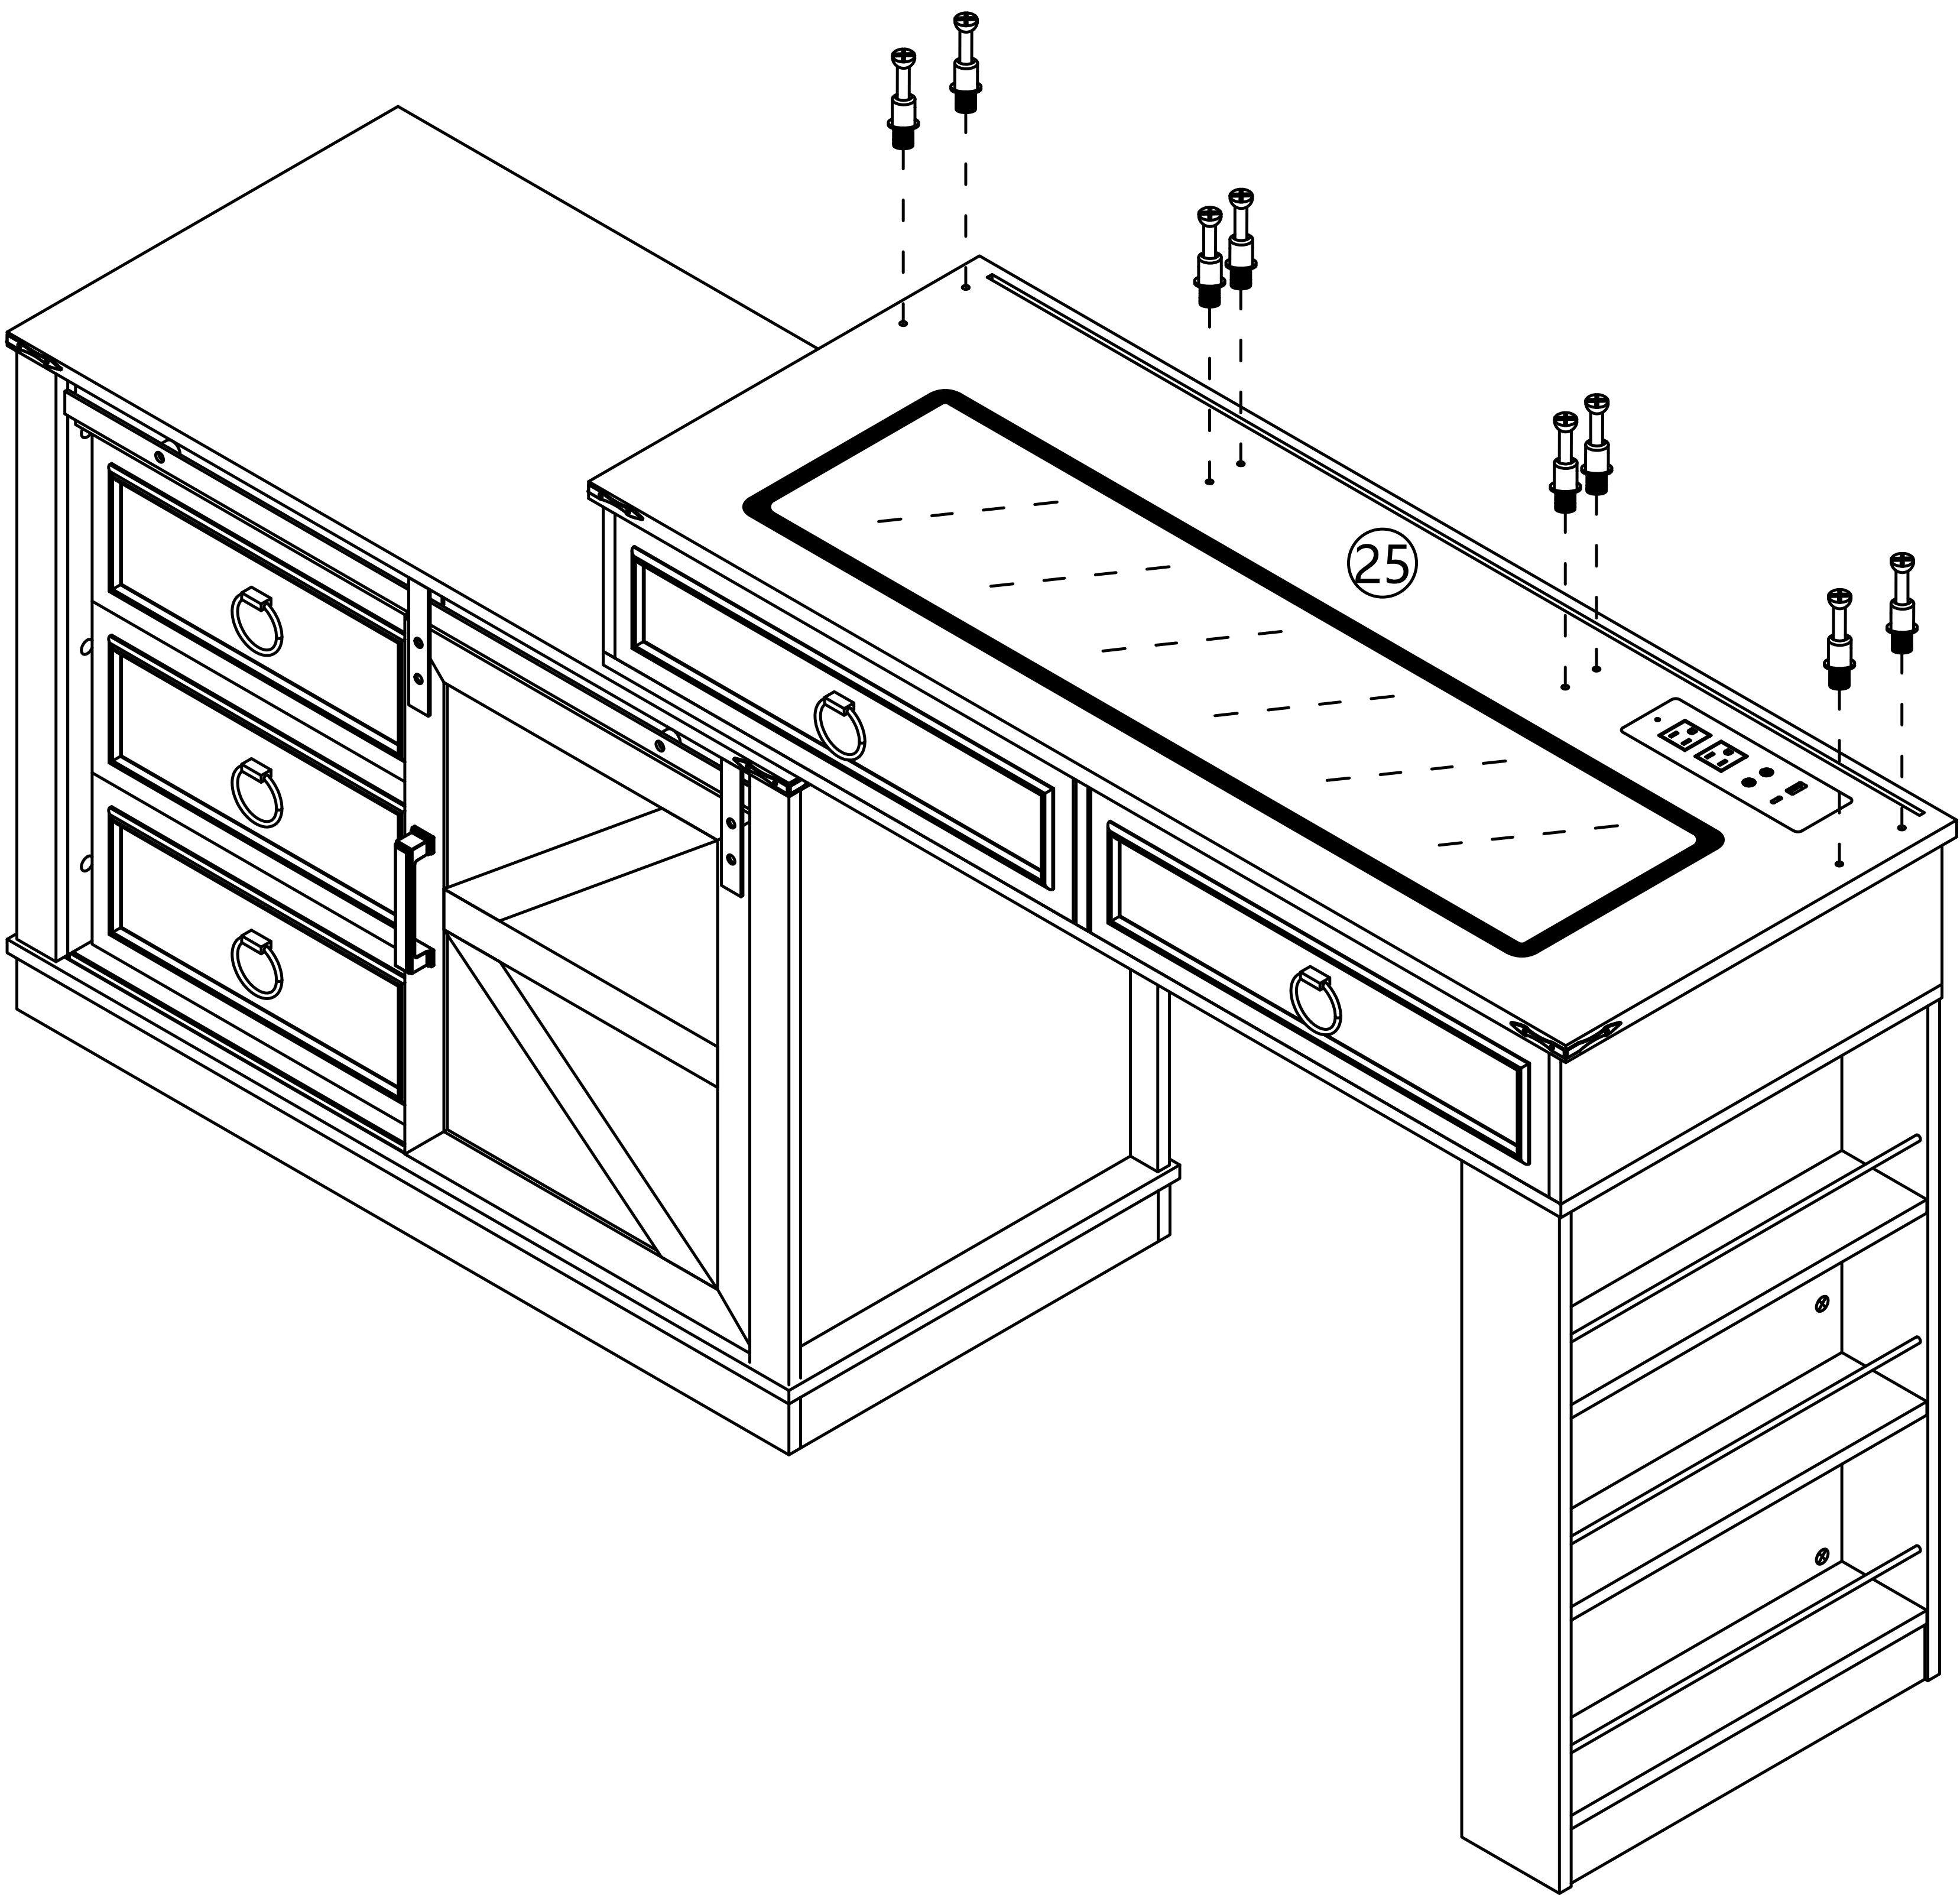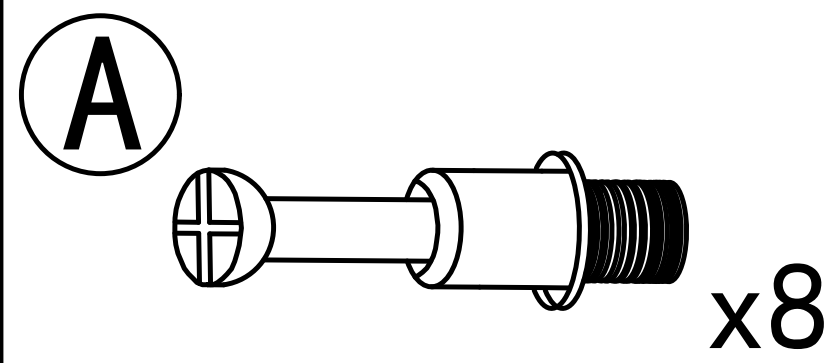

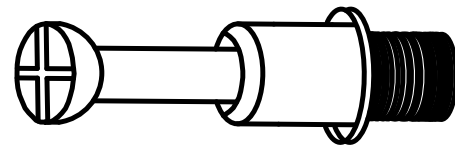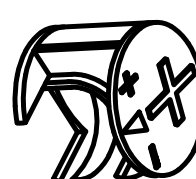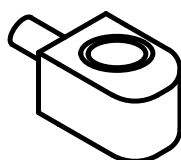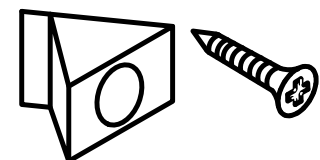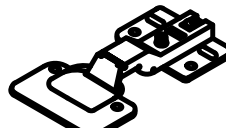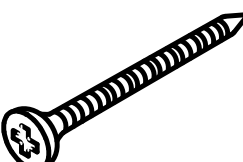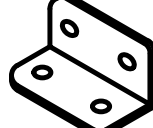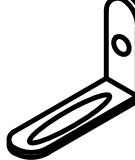
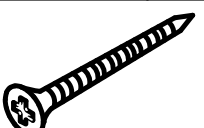
A		40pcs	B		48pcs	M		8pcs	
O		18pcs	R	 7pcs	 7pcs	S	 2pcs	 2pcs	 8pcs
T	 6pcs	 36pcs	U	 4pcs		V	 5pcs		
W	 2pcs	 8pcs	X	 2pcs	 4pcs	 2pcs	 (3. 5x14mm) 2pcs	 (4x45mm) 2pcs	

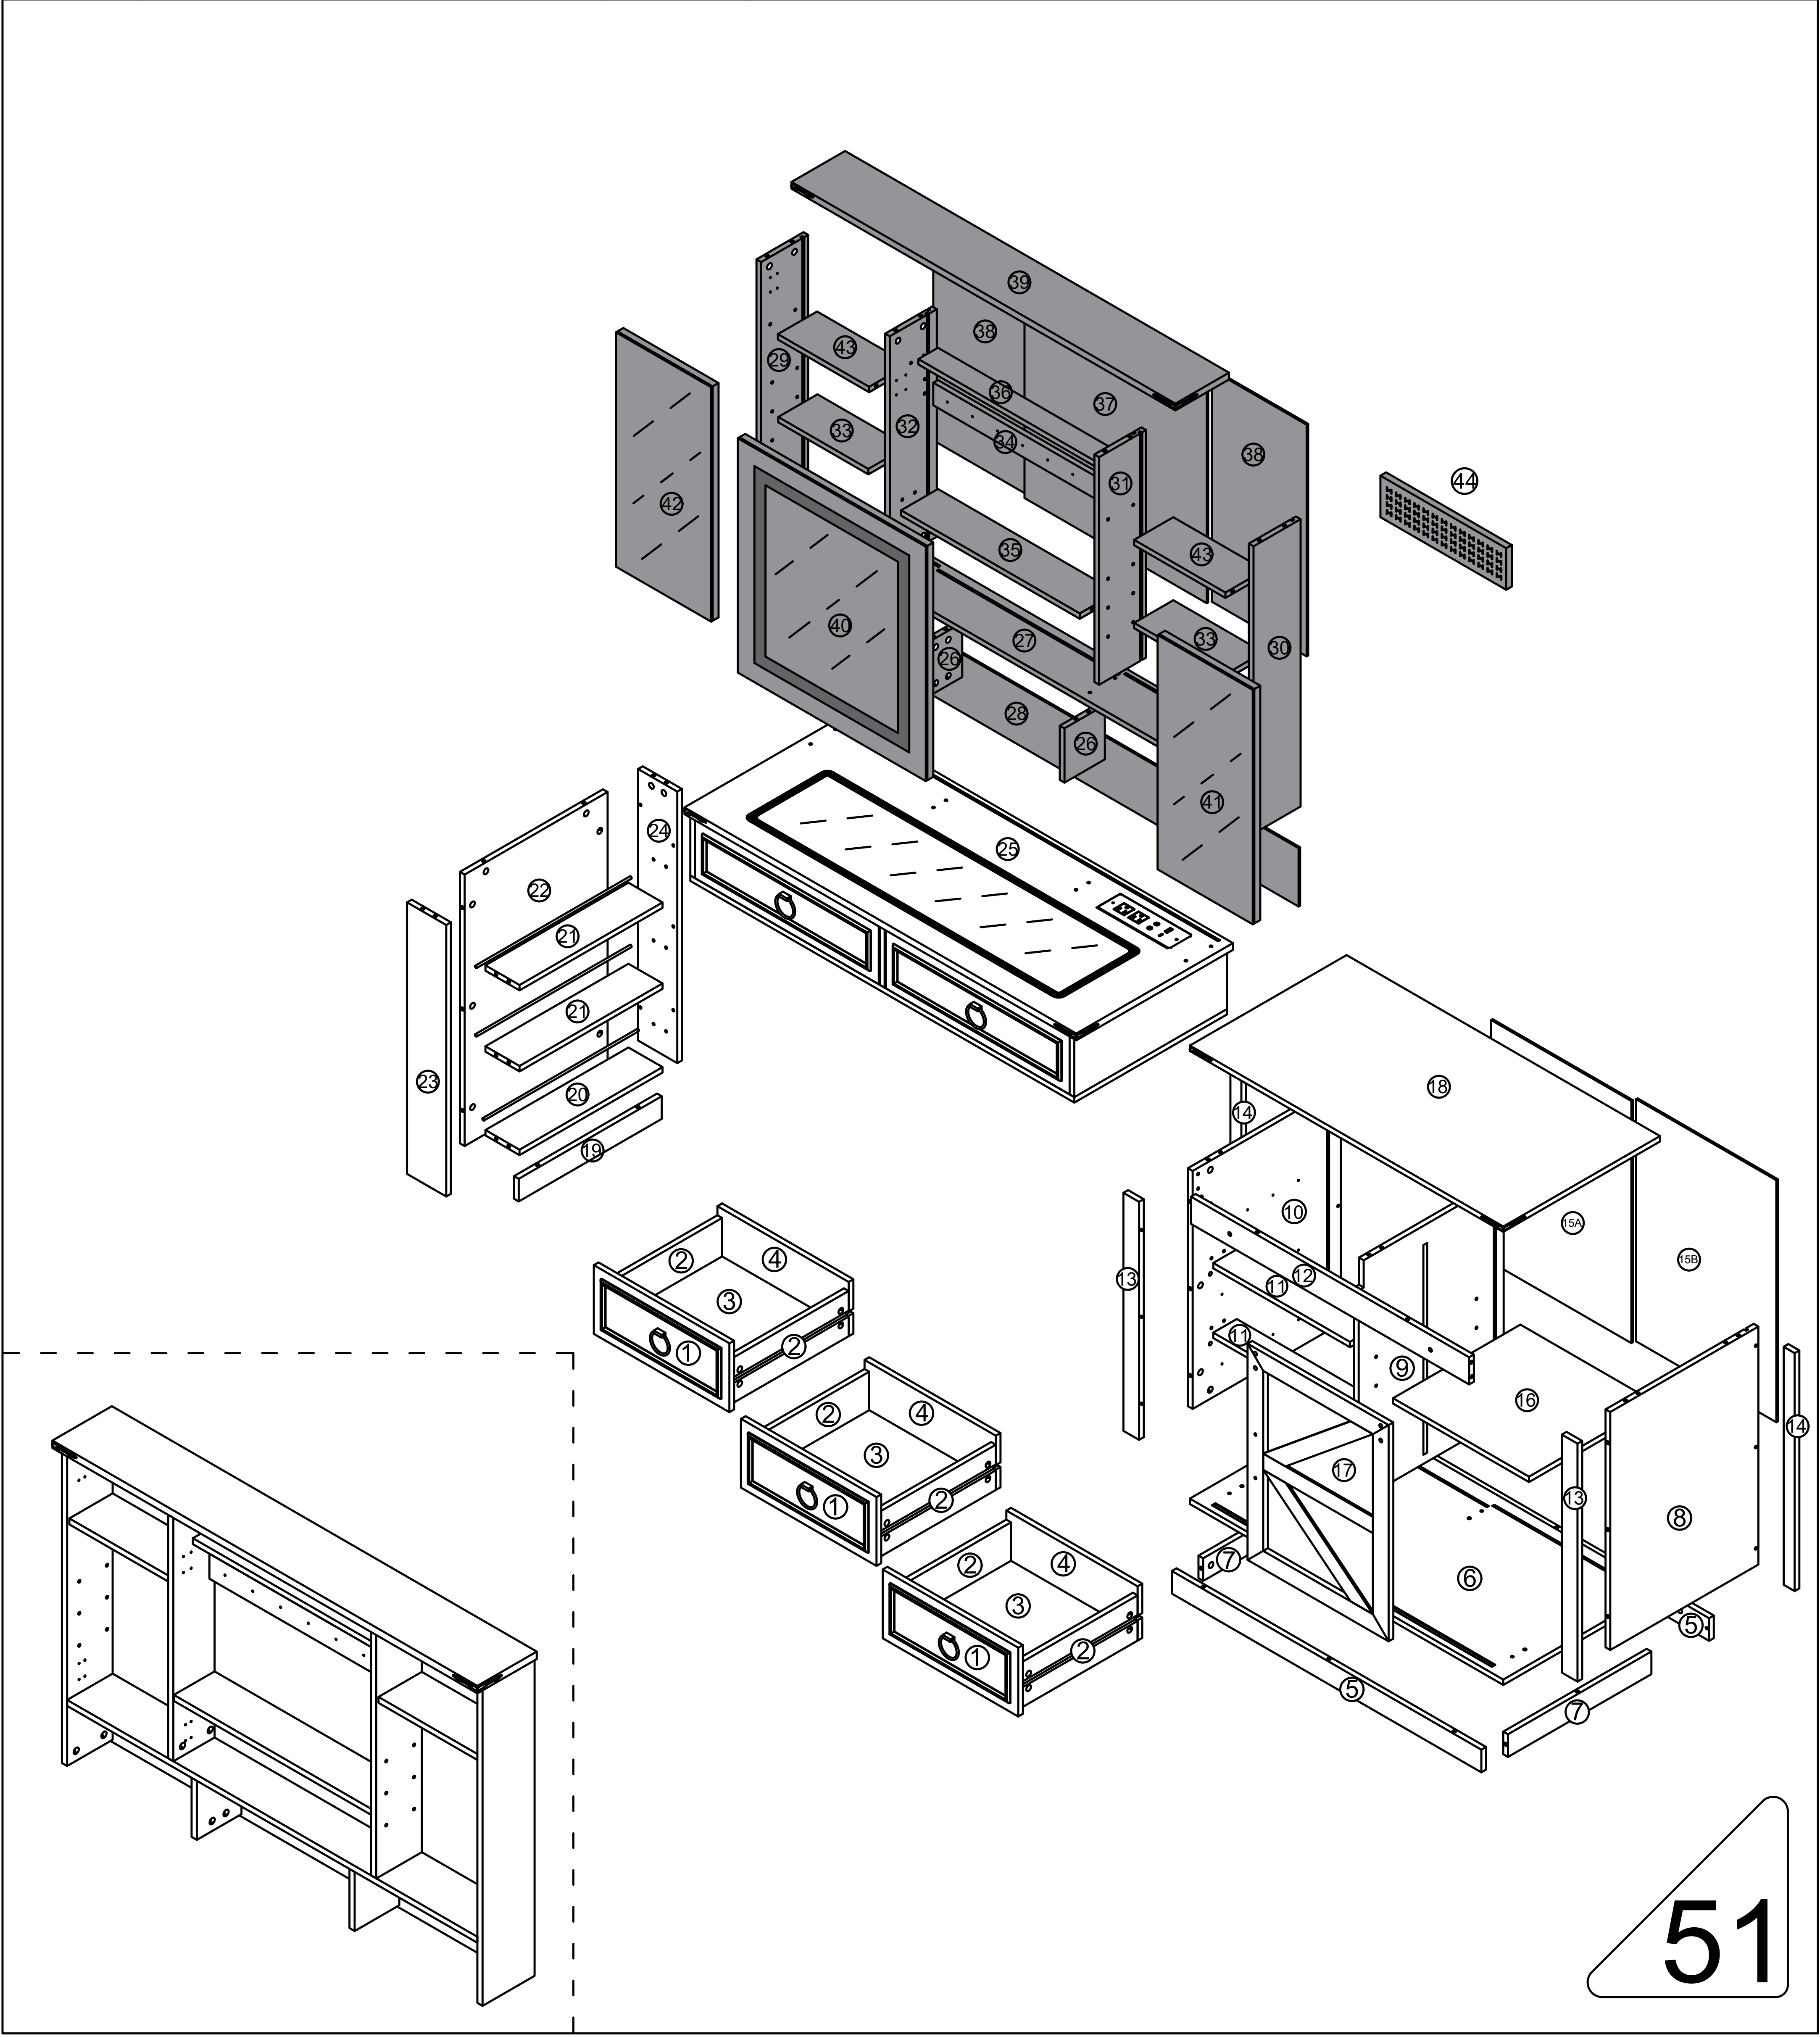

Step 57

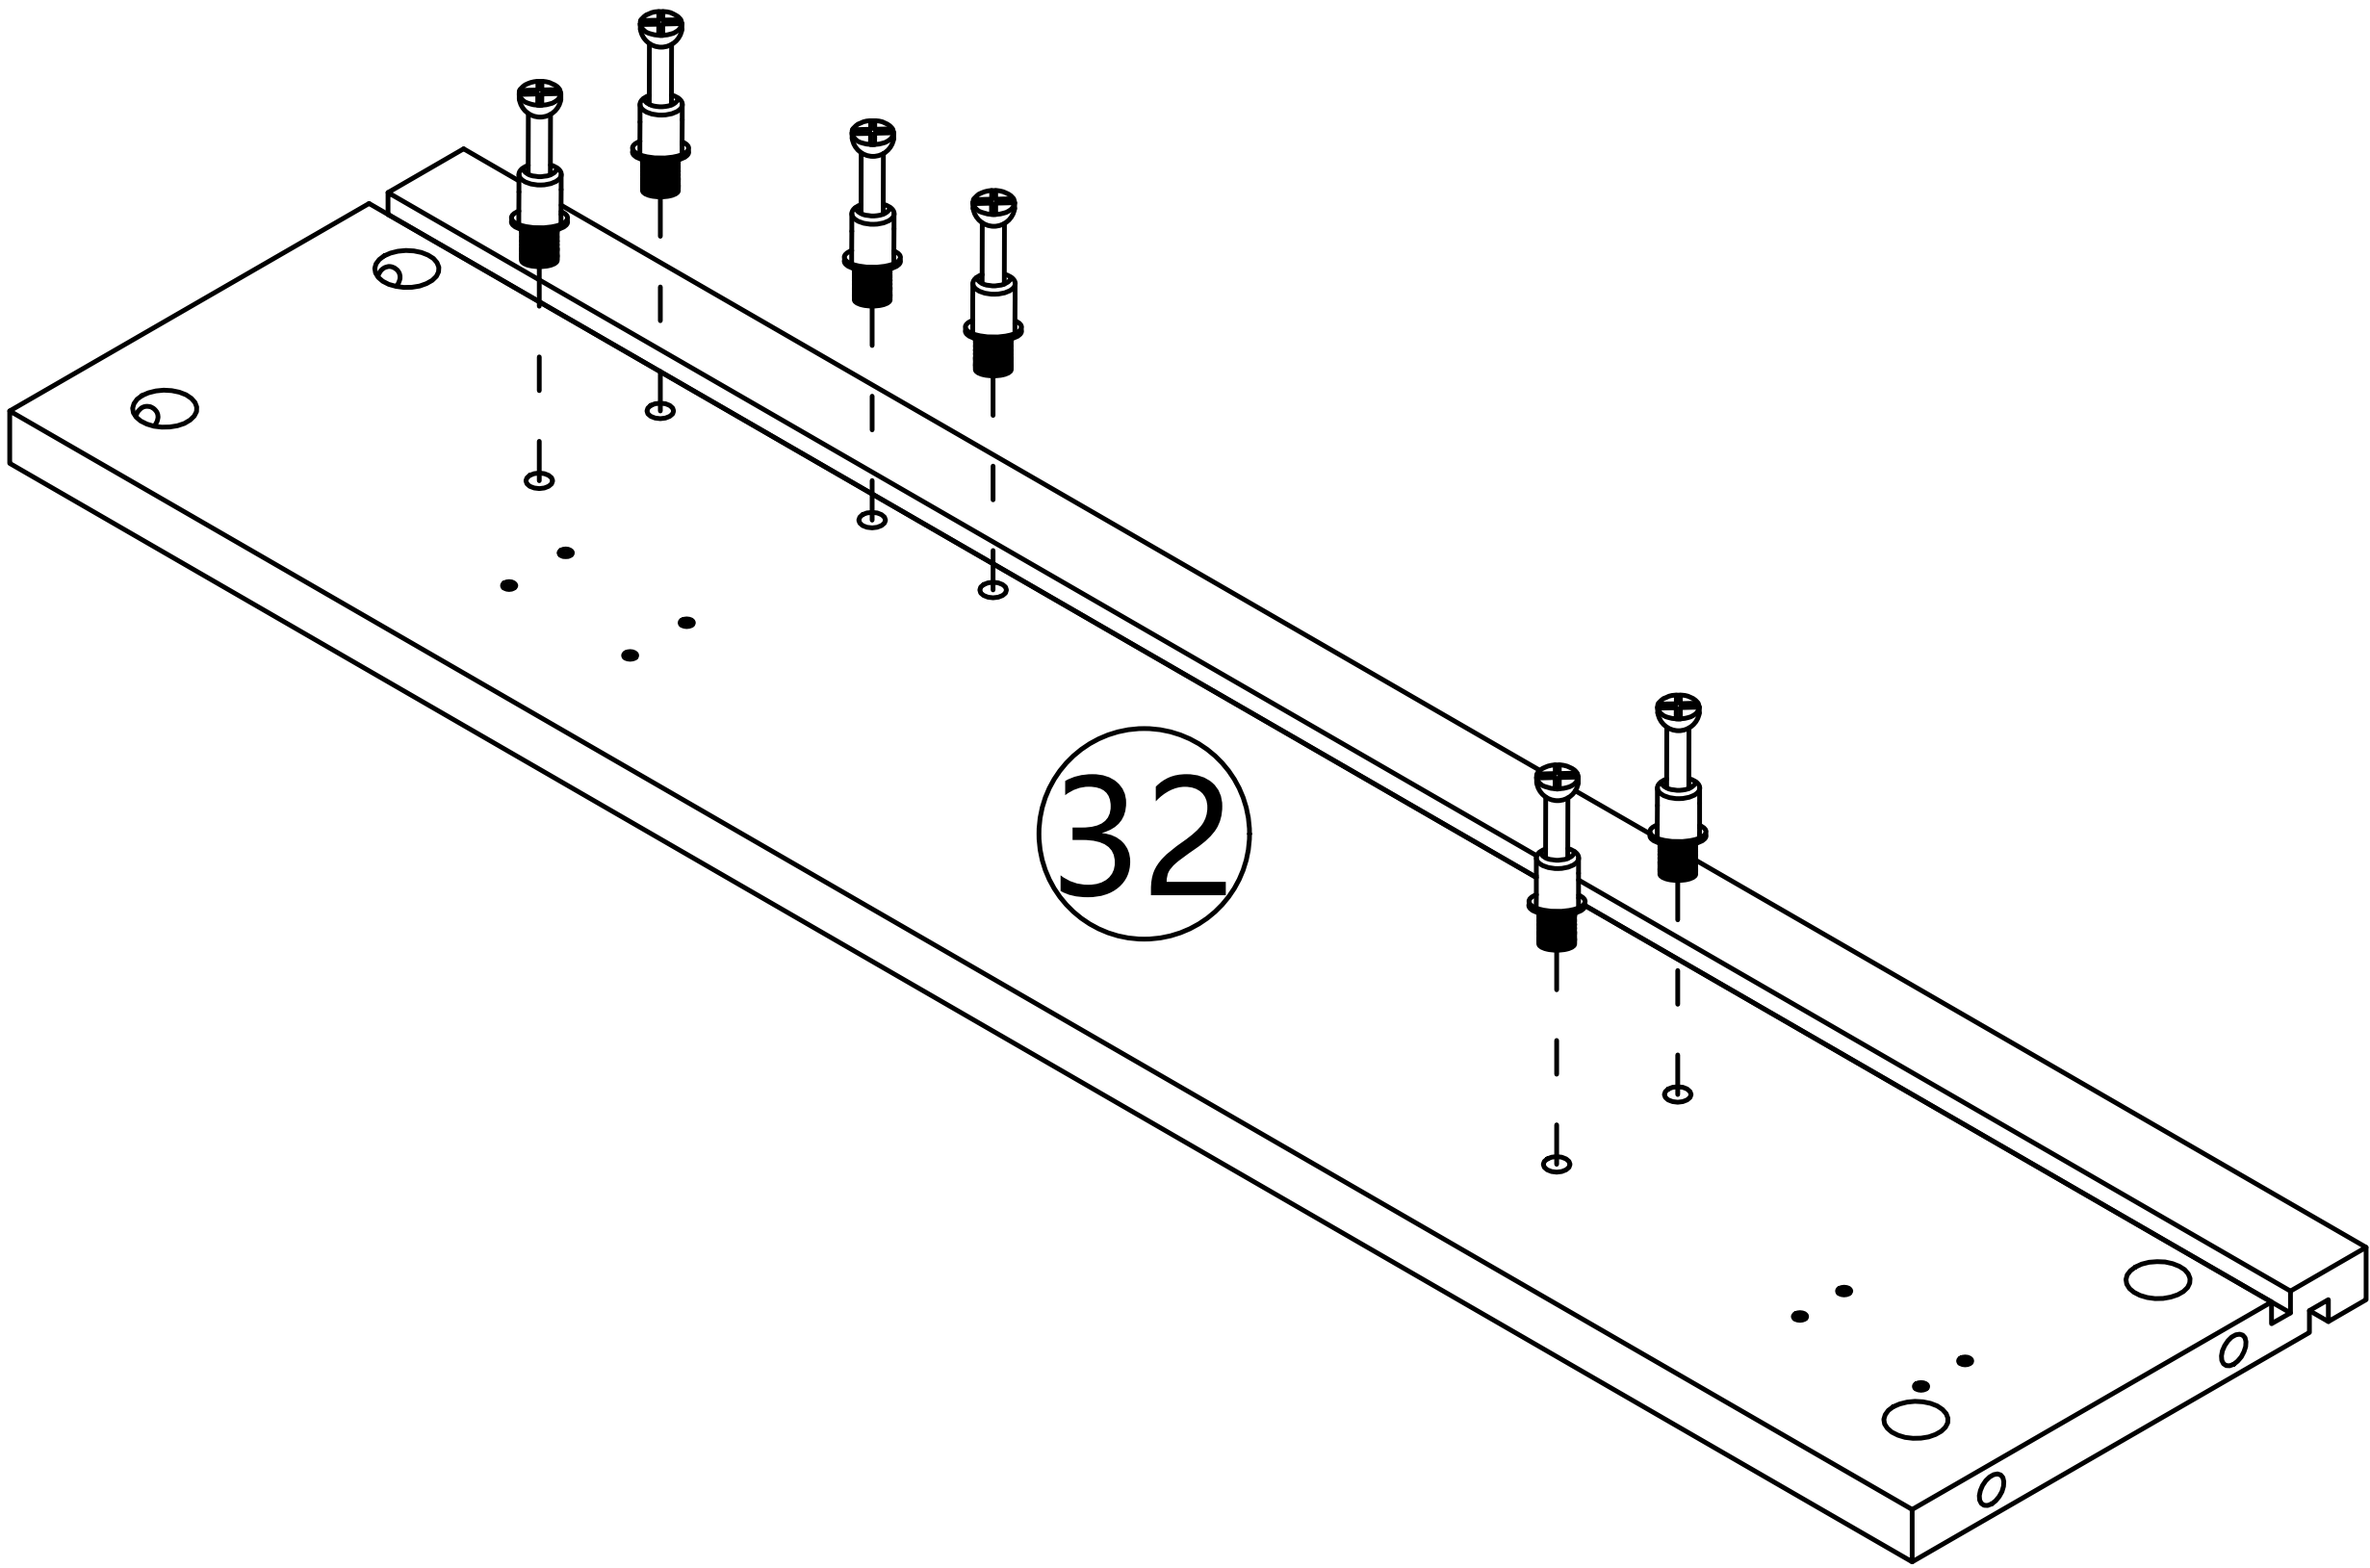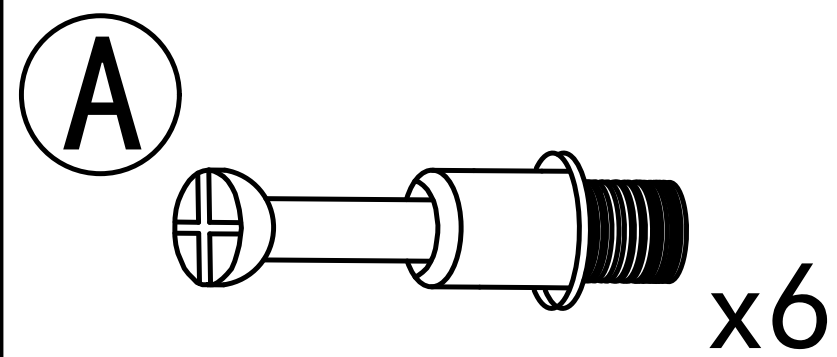


Step 58

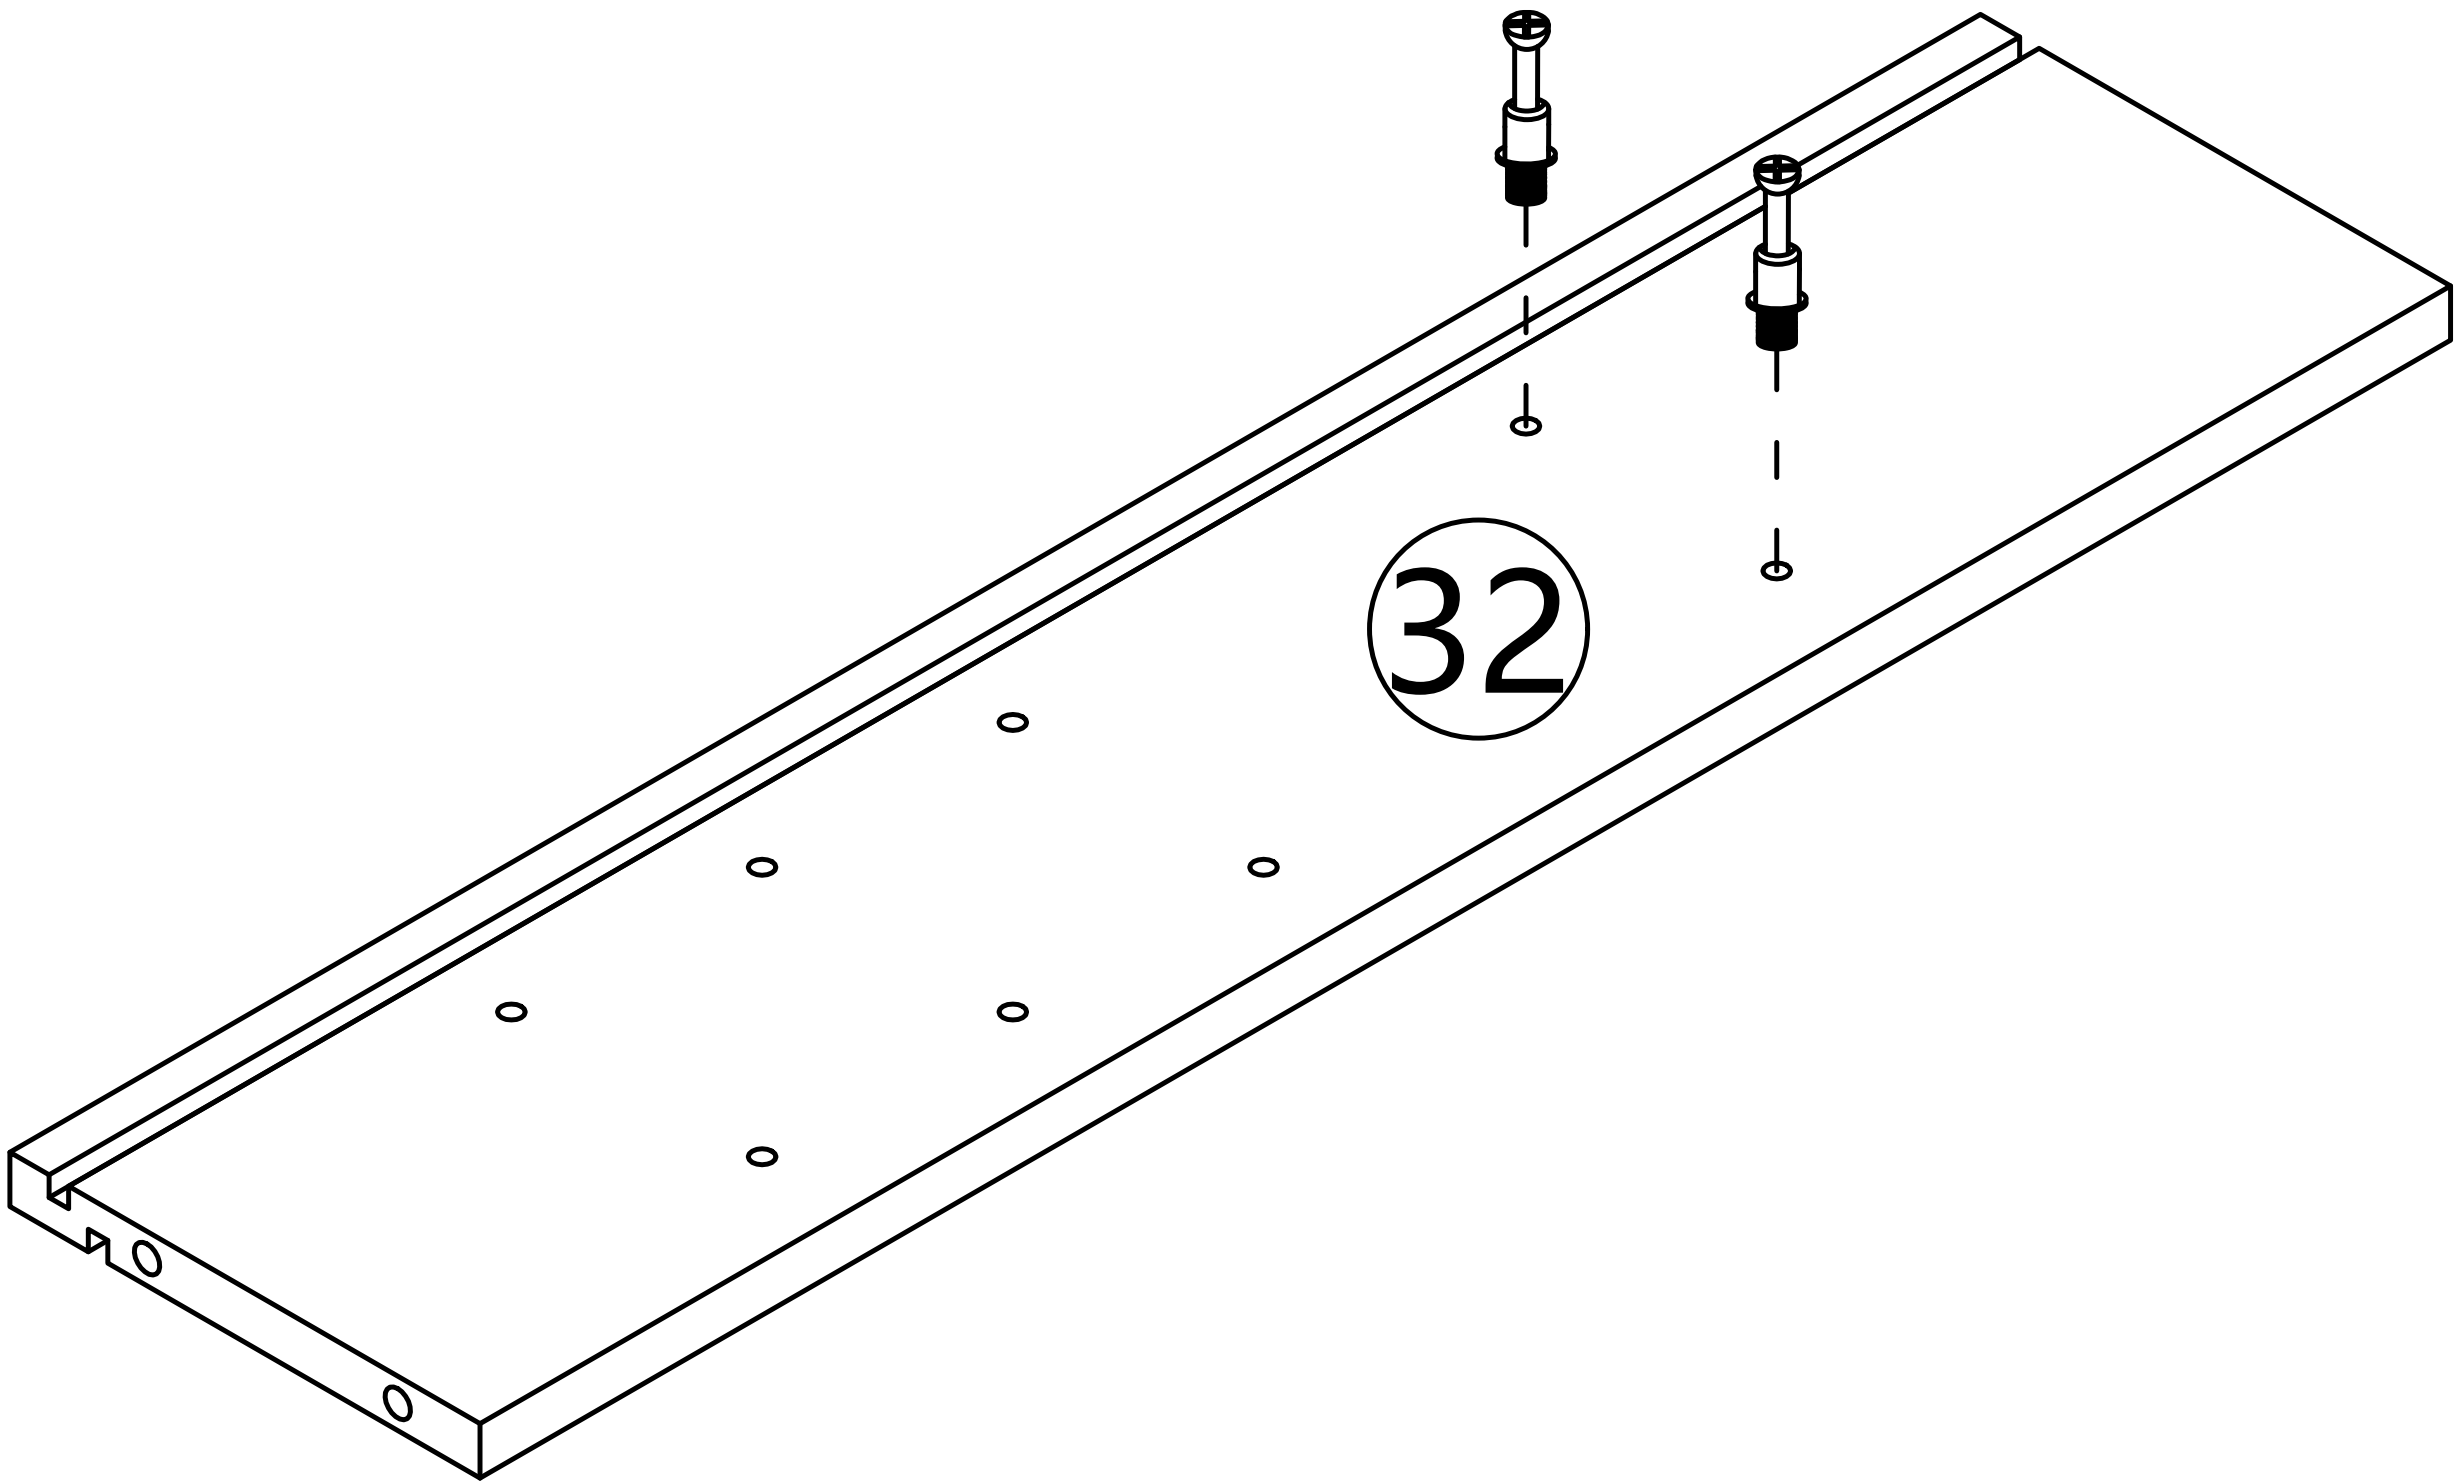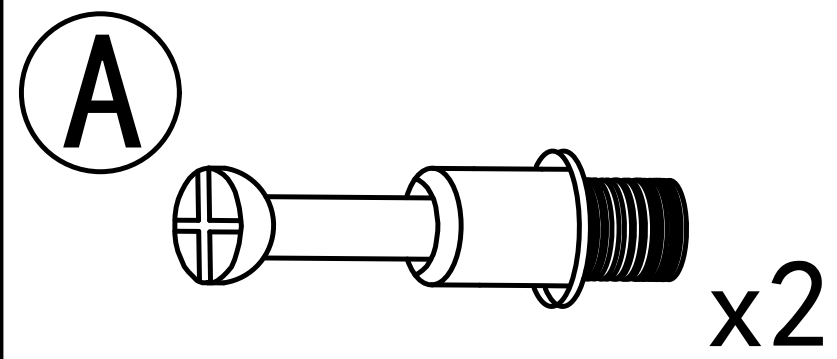


Step 59

B

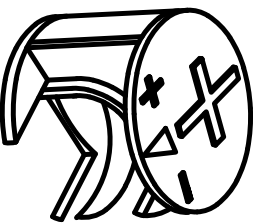


x2

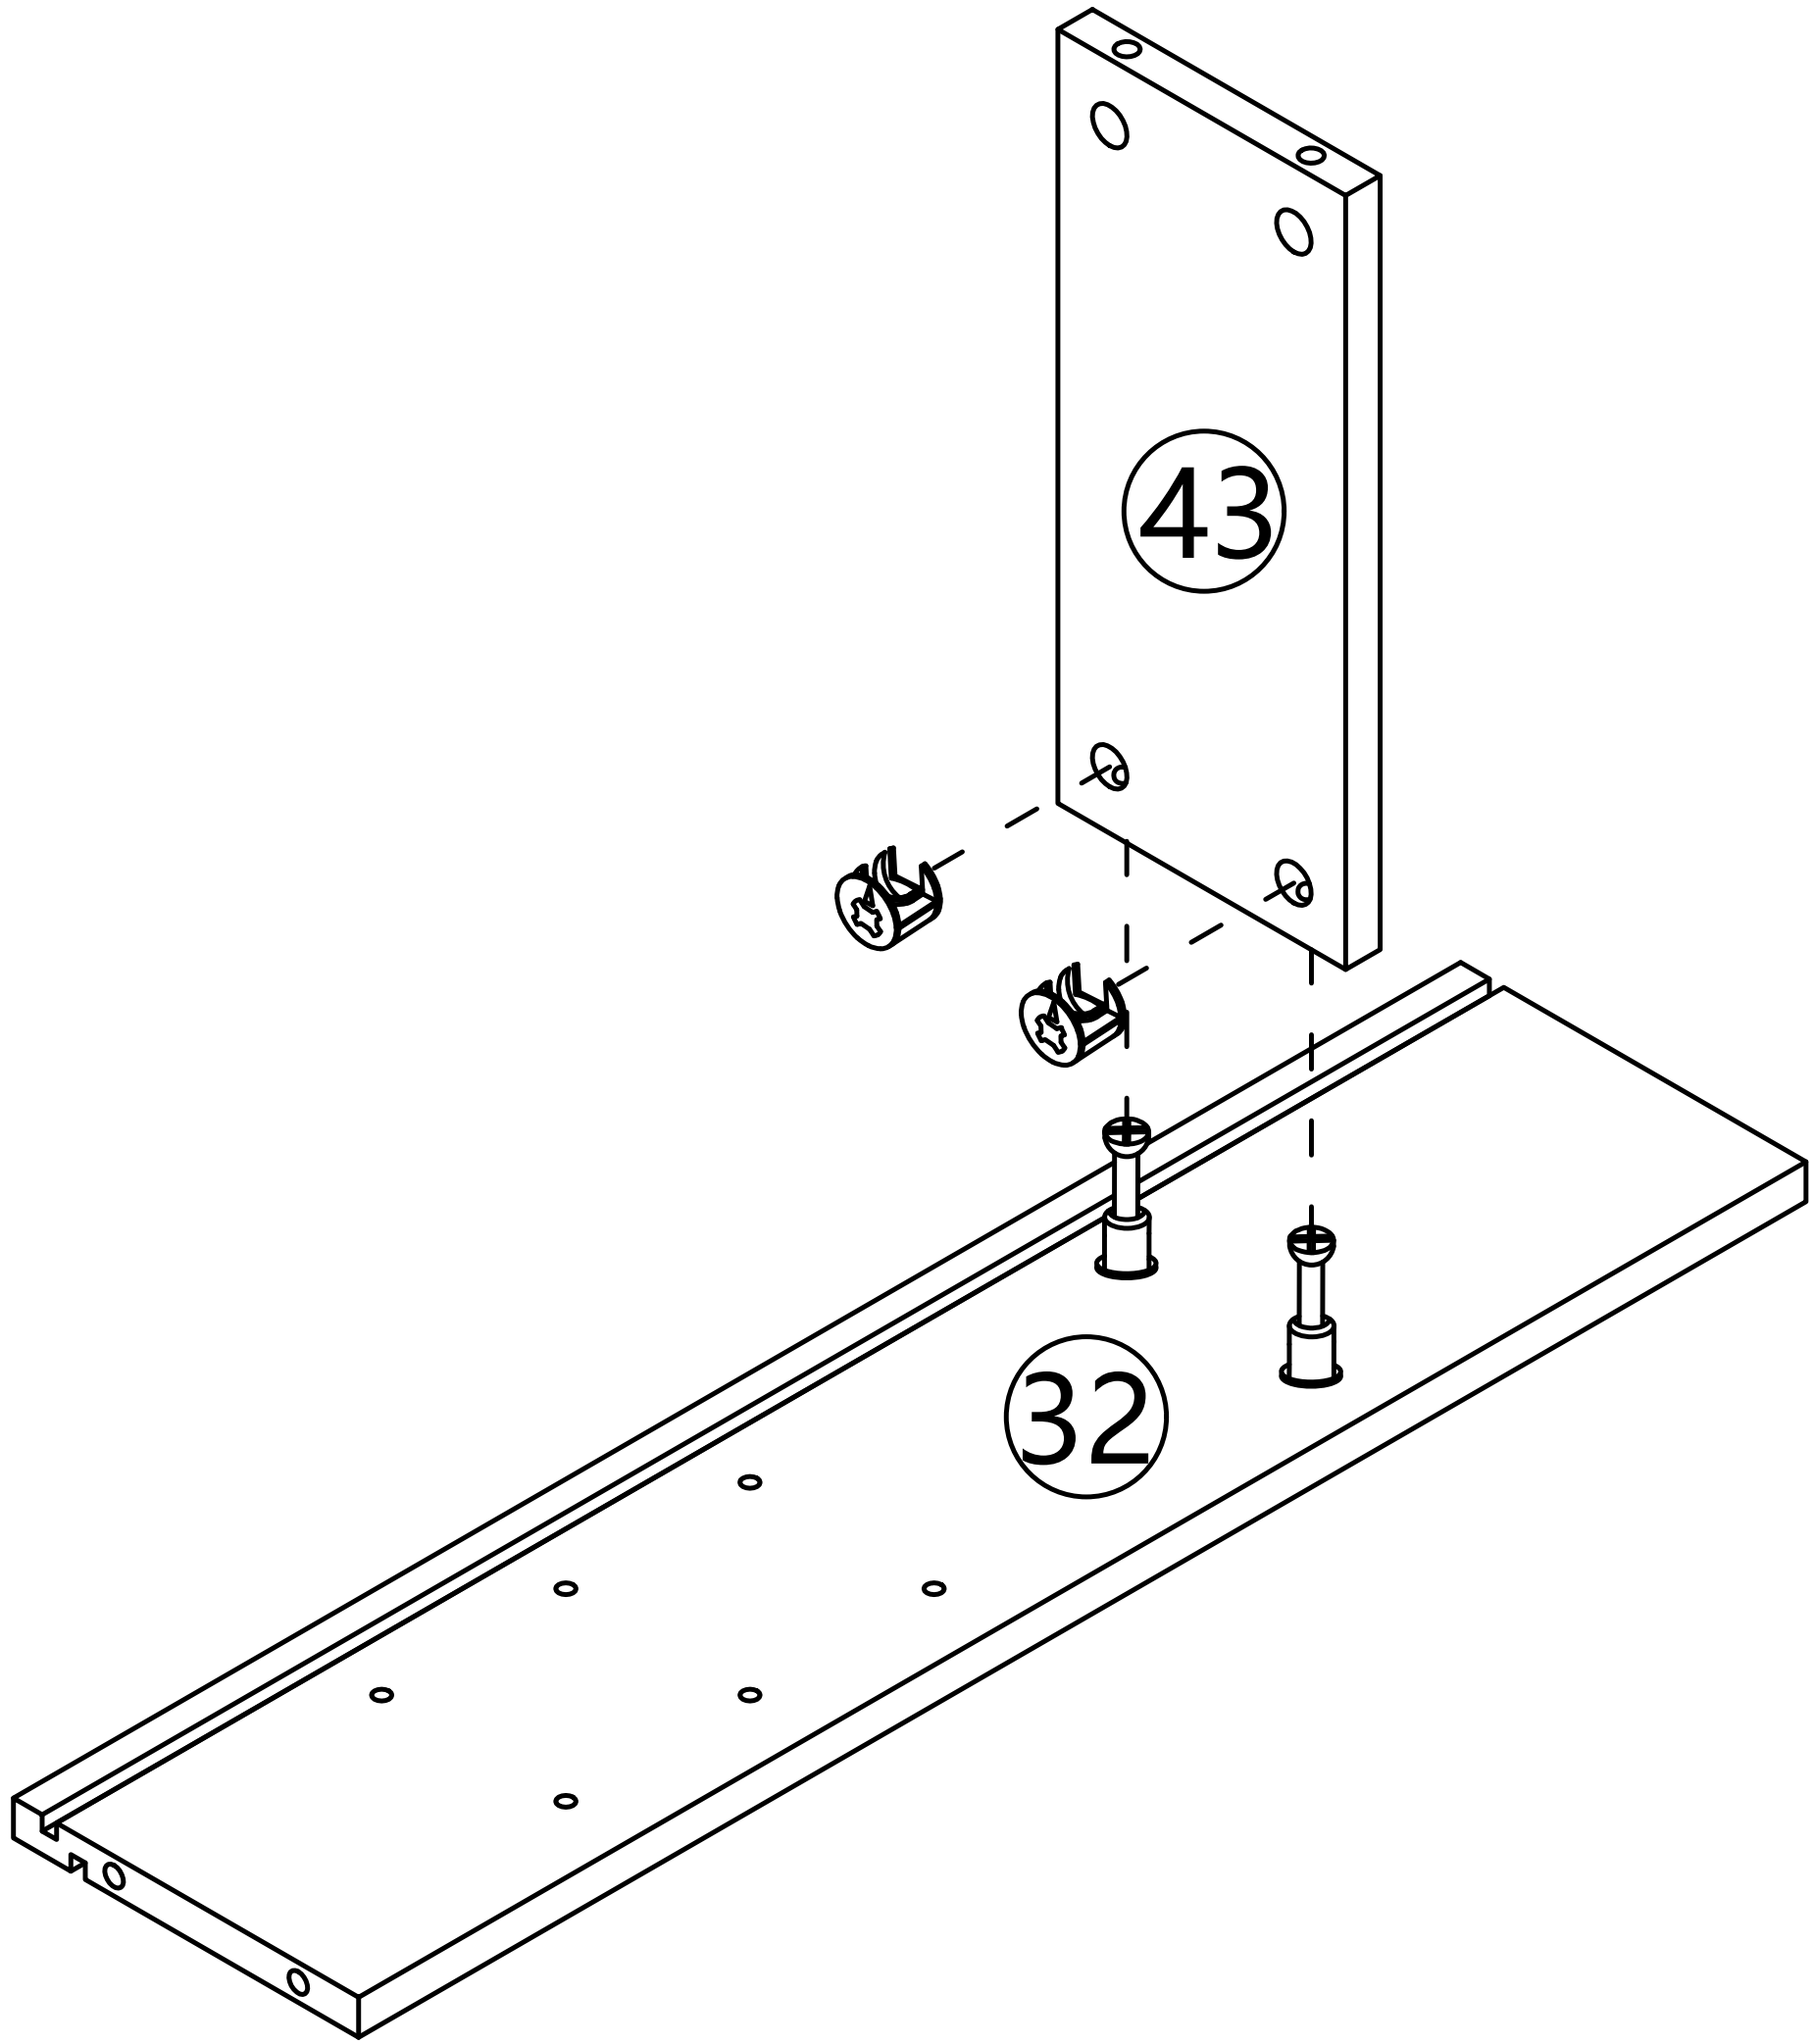


Step 60



B

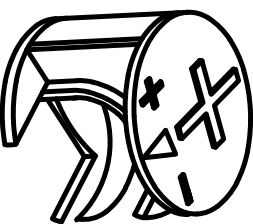



x2

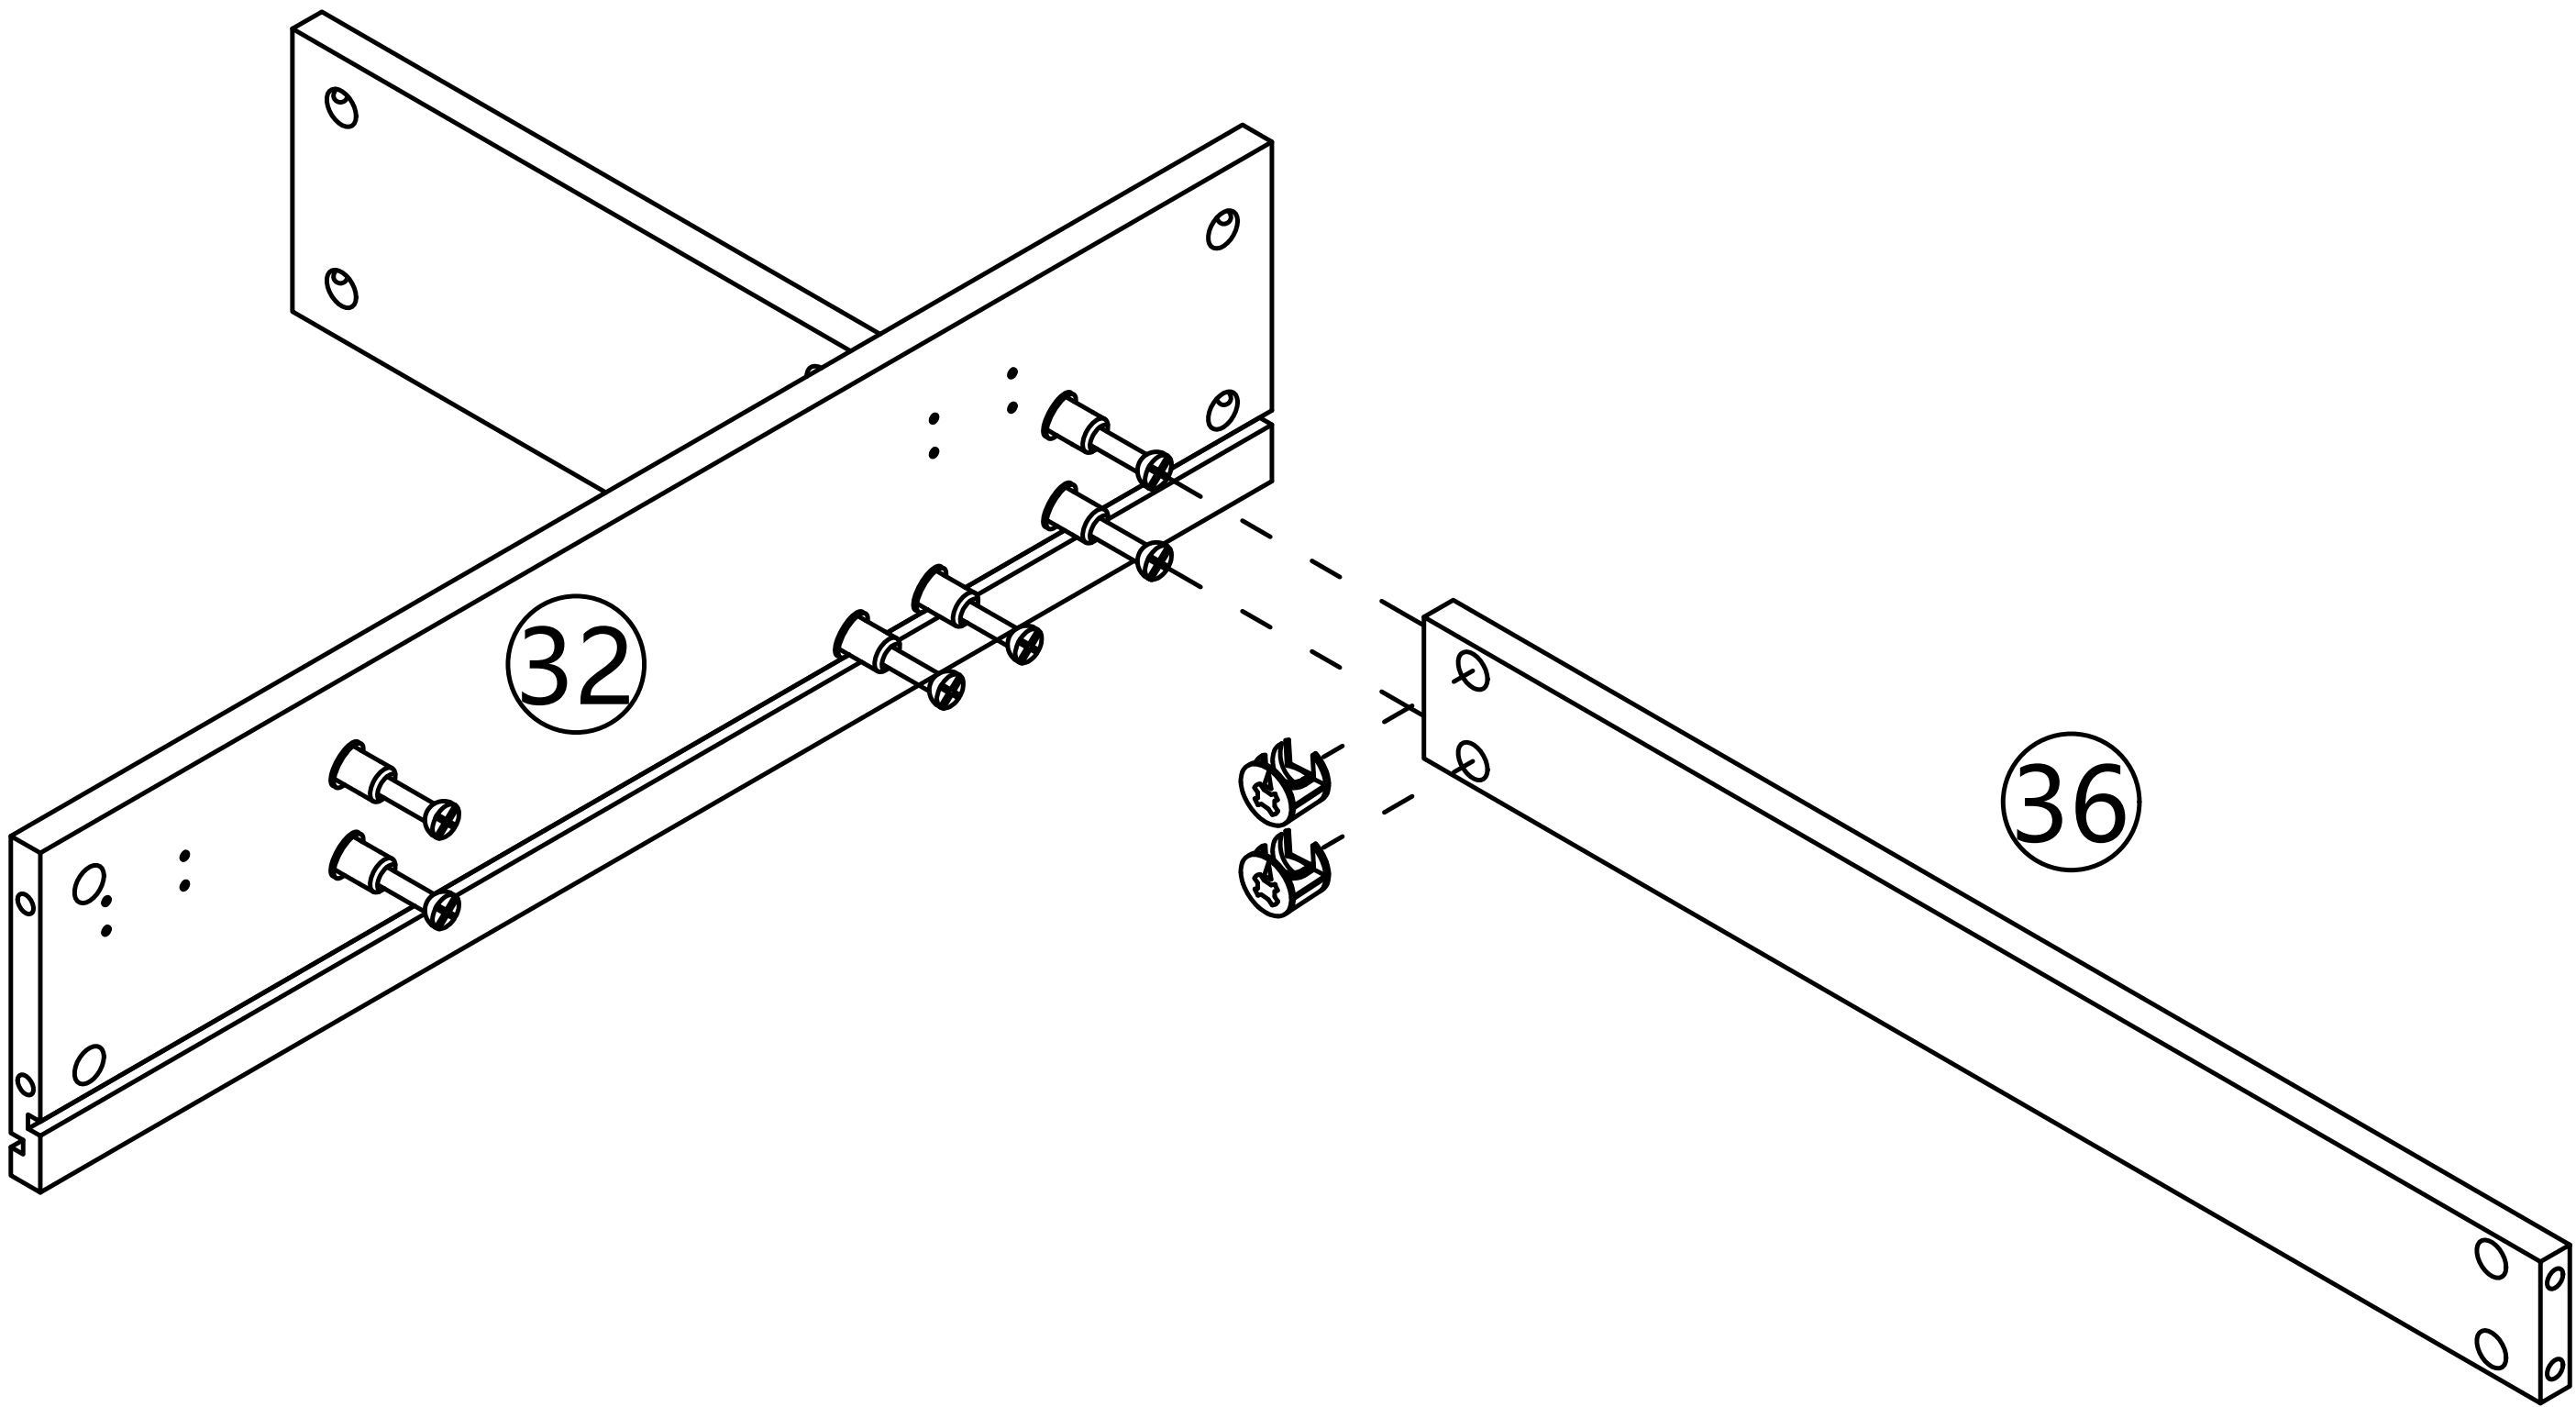

Step 61

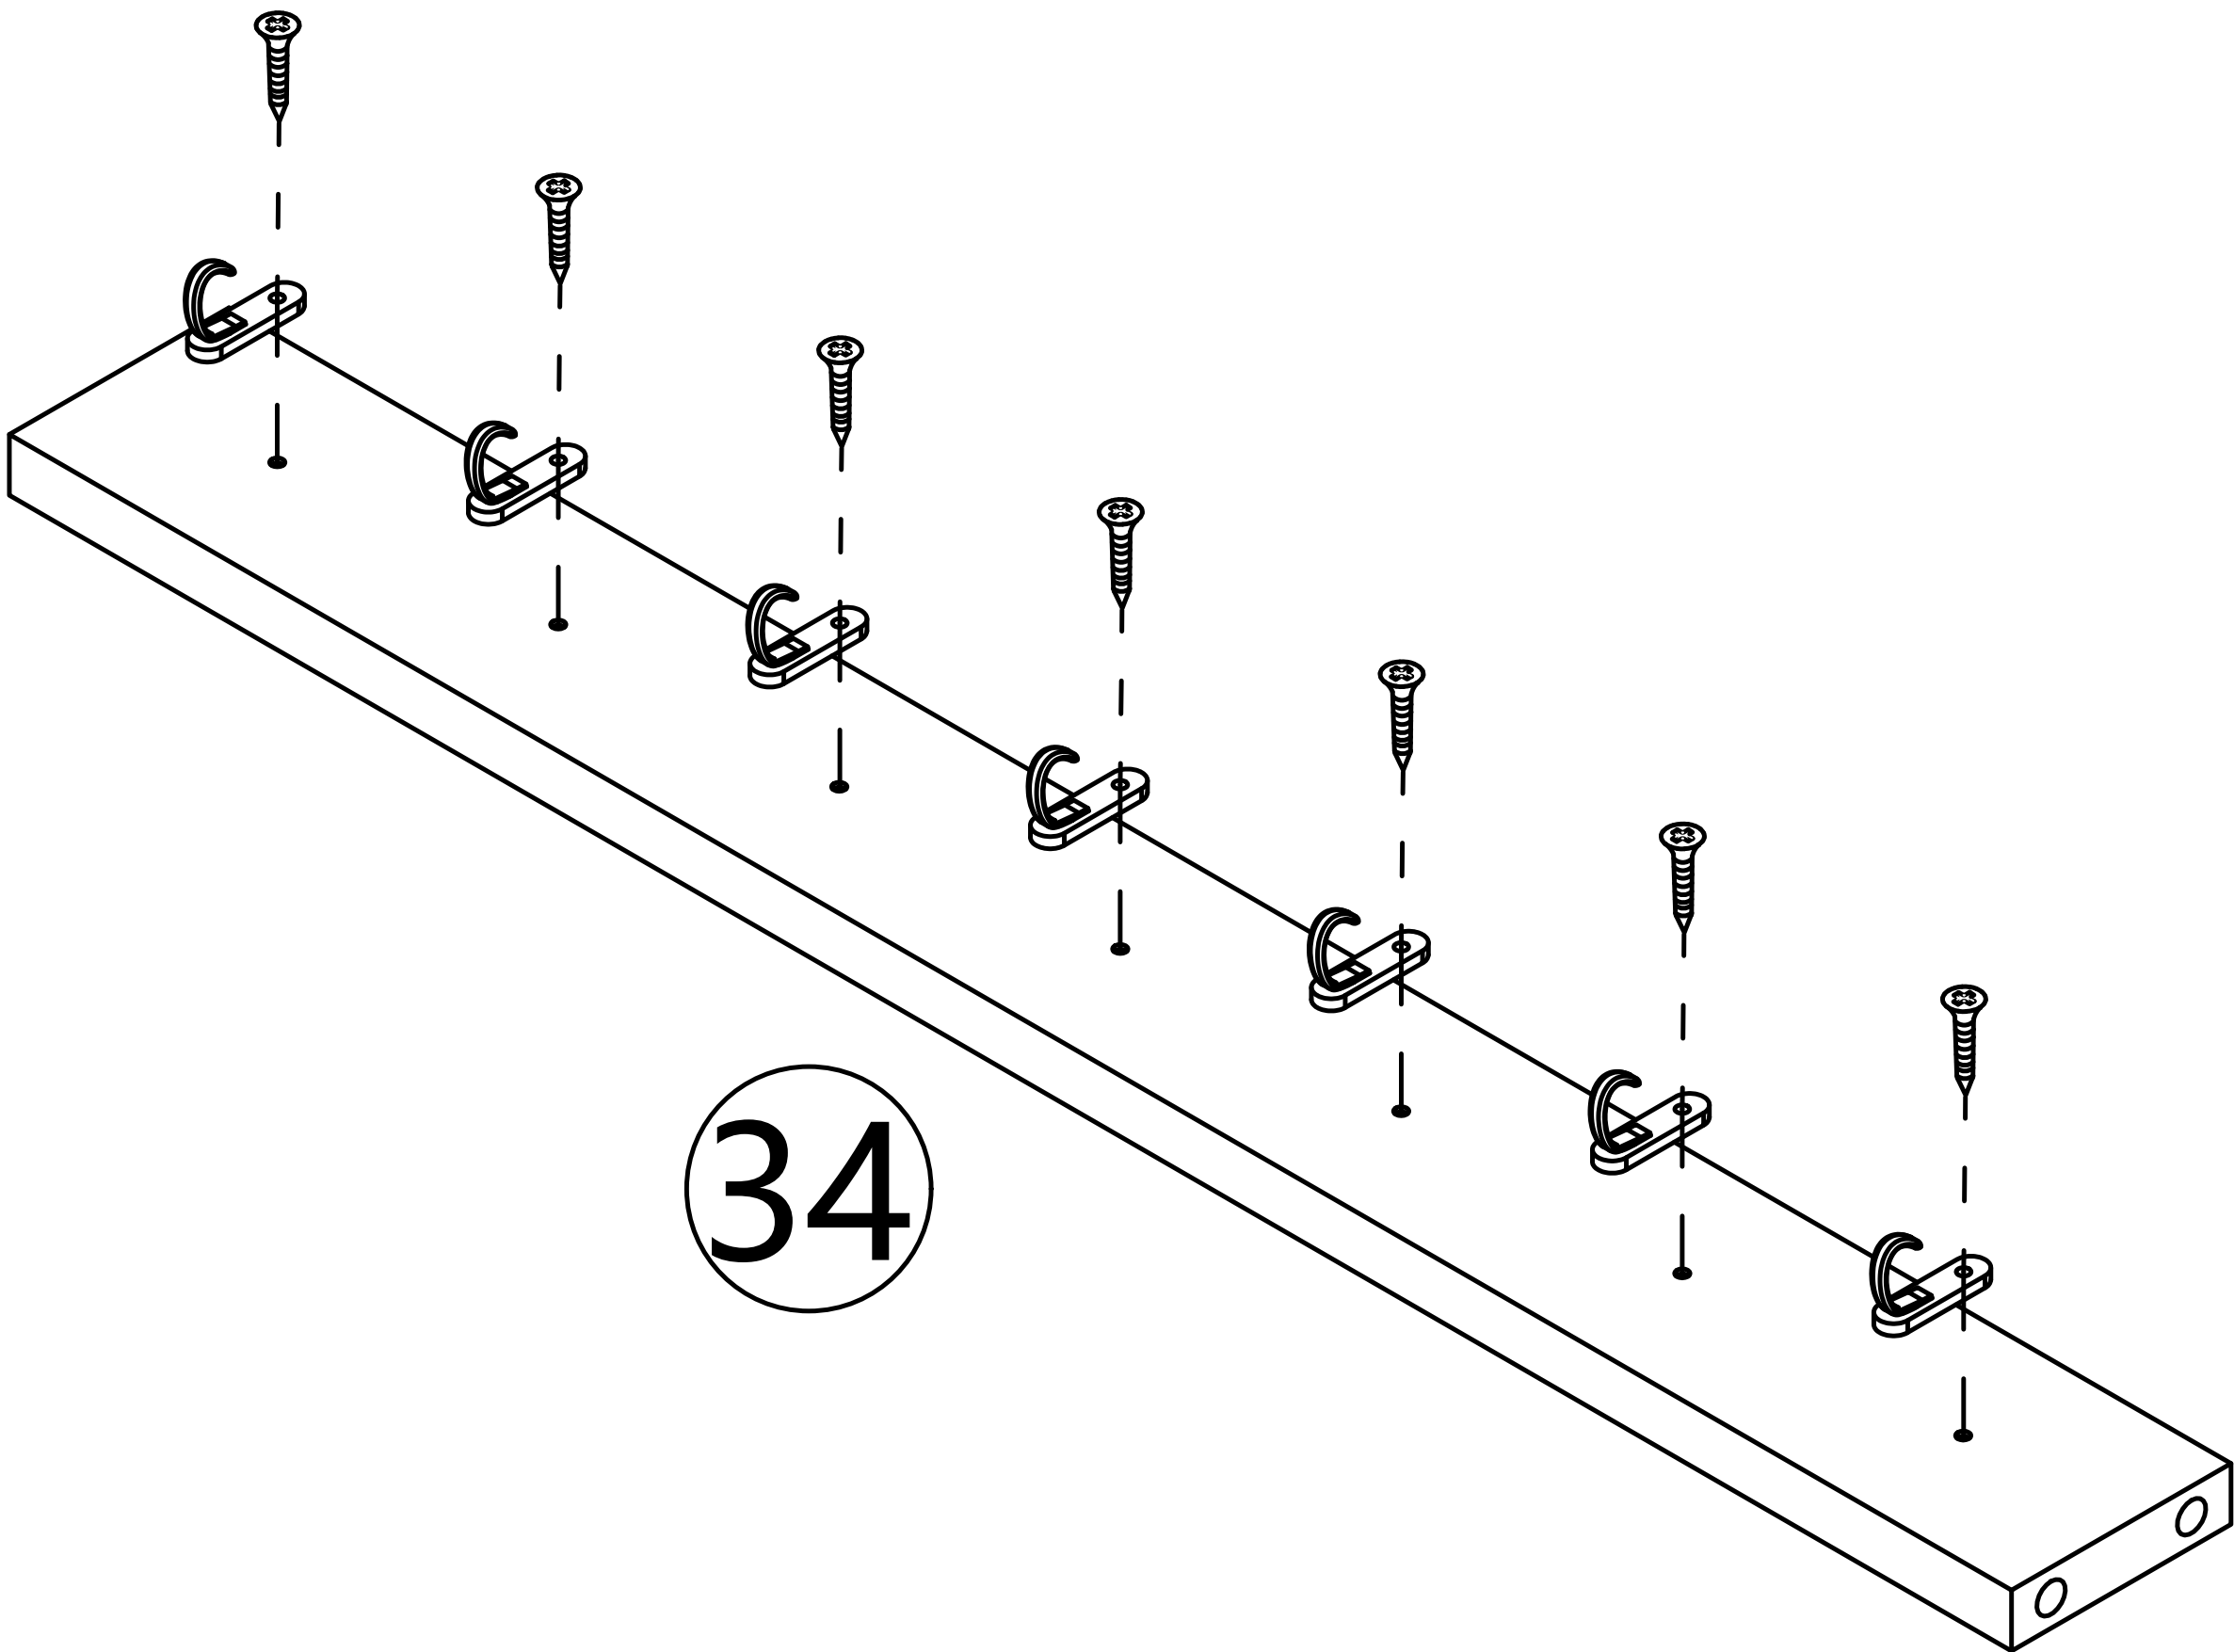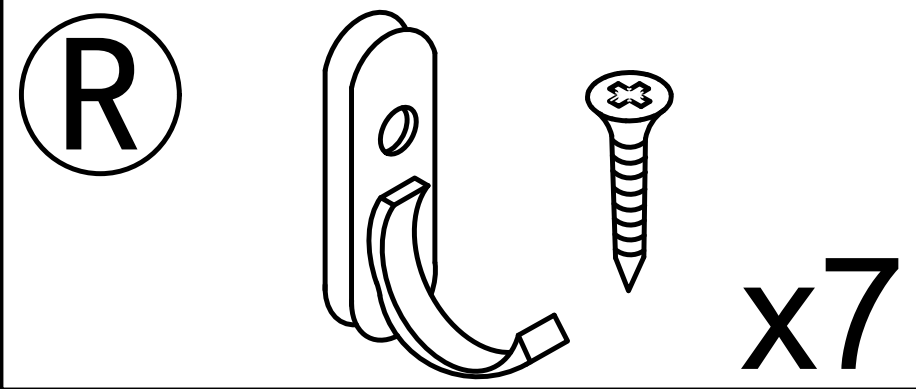


Step 62

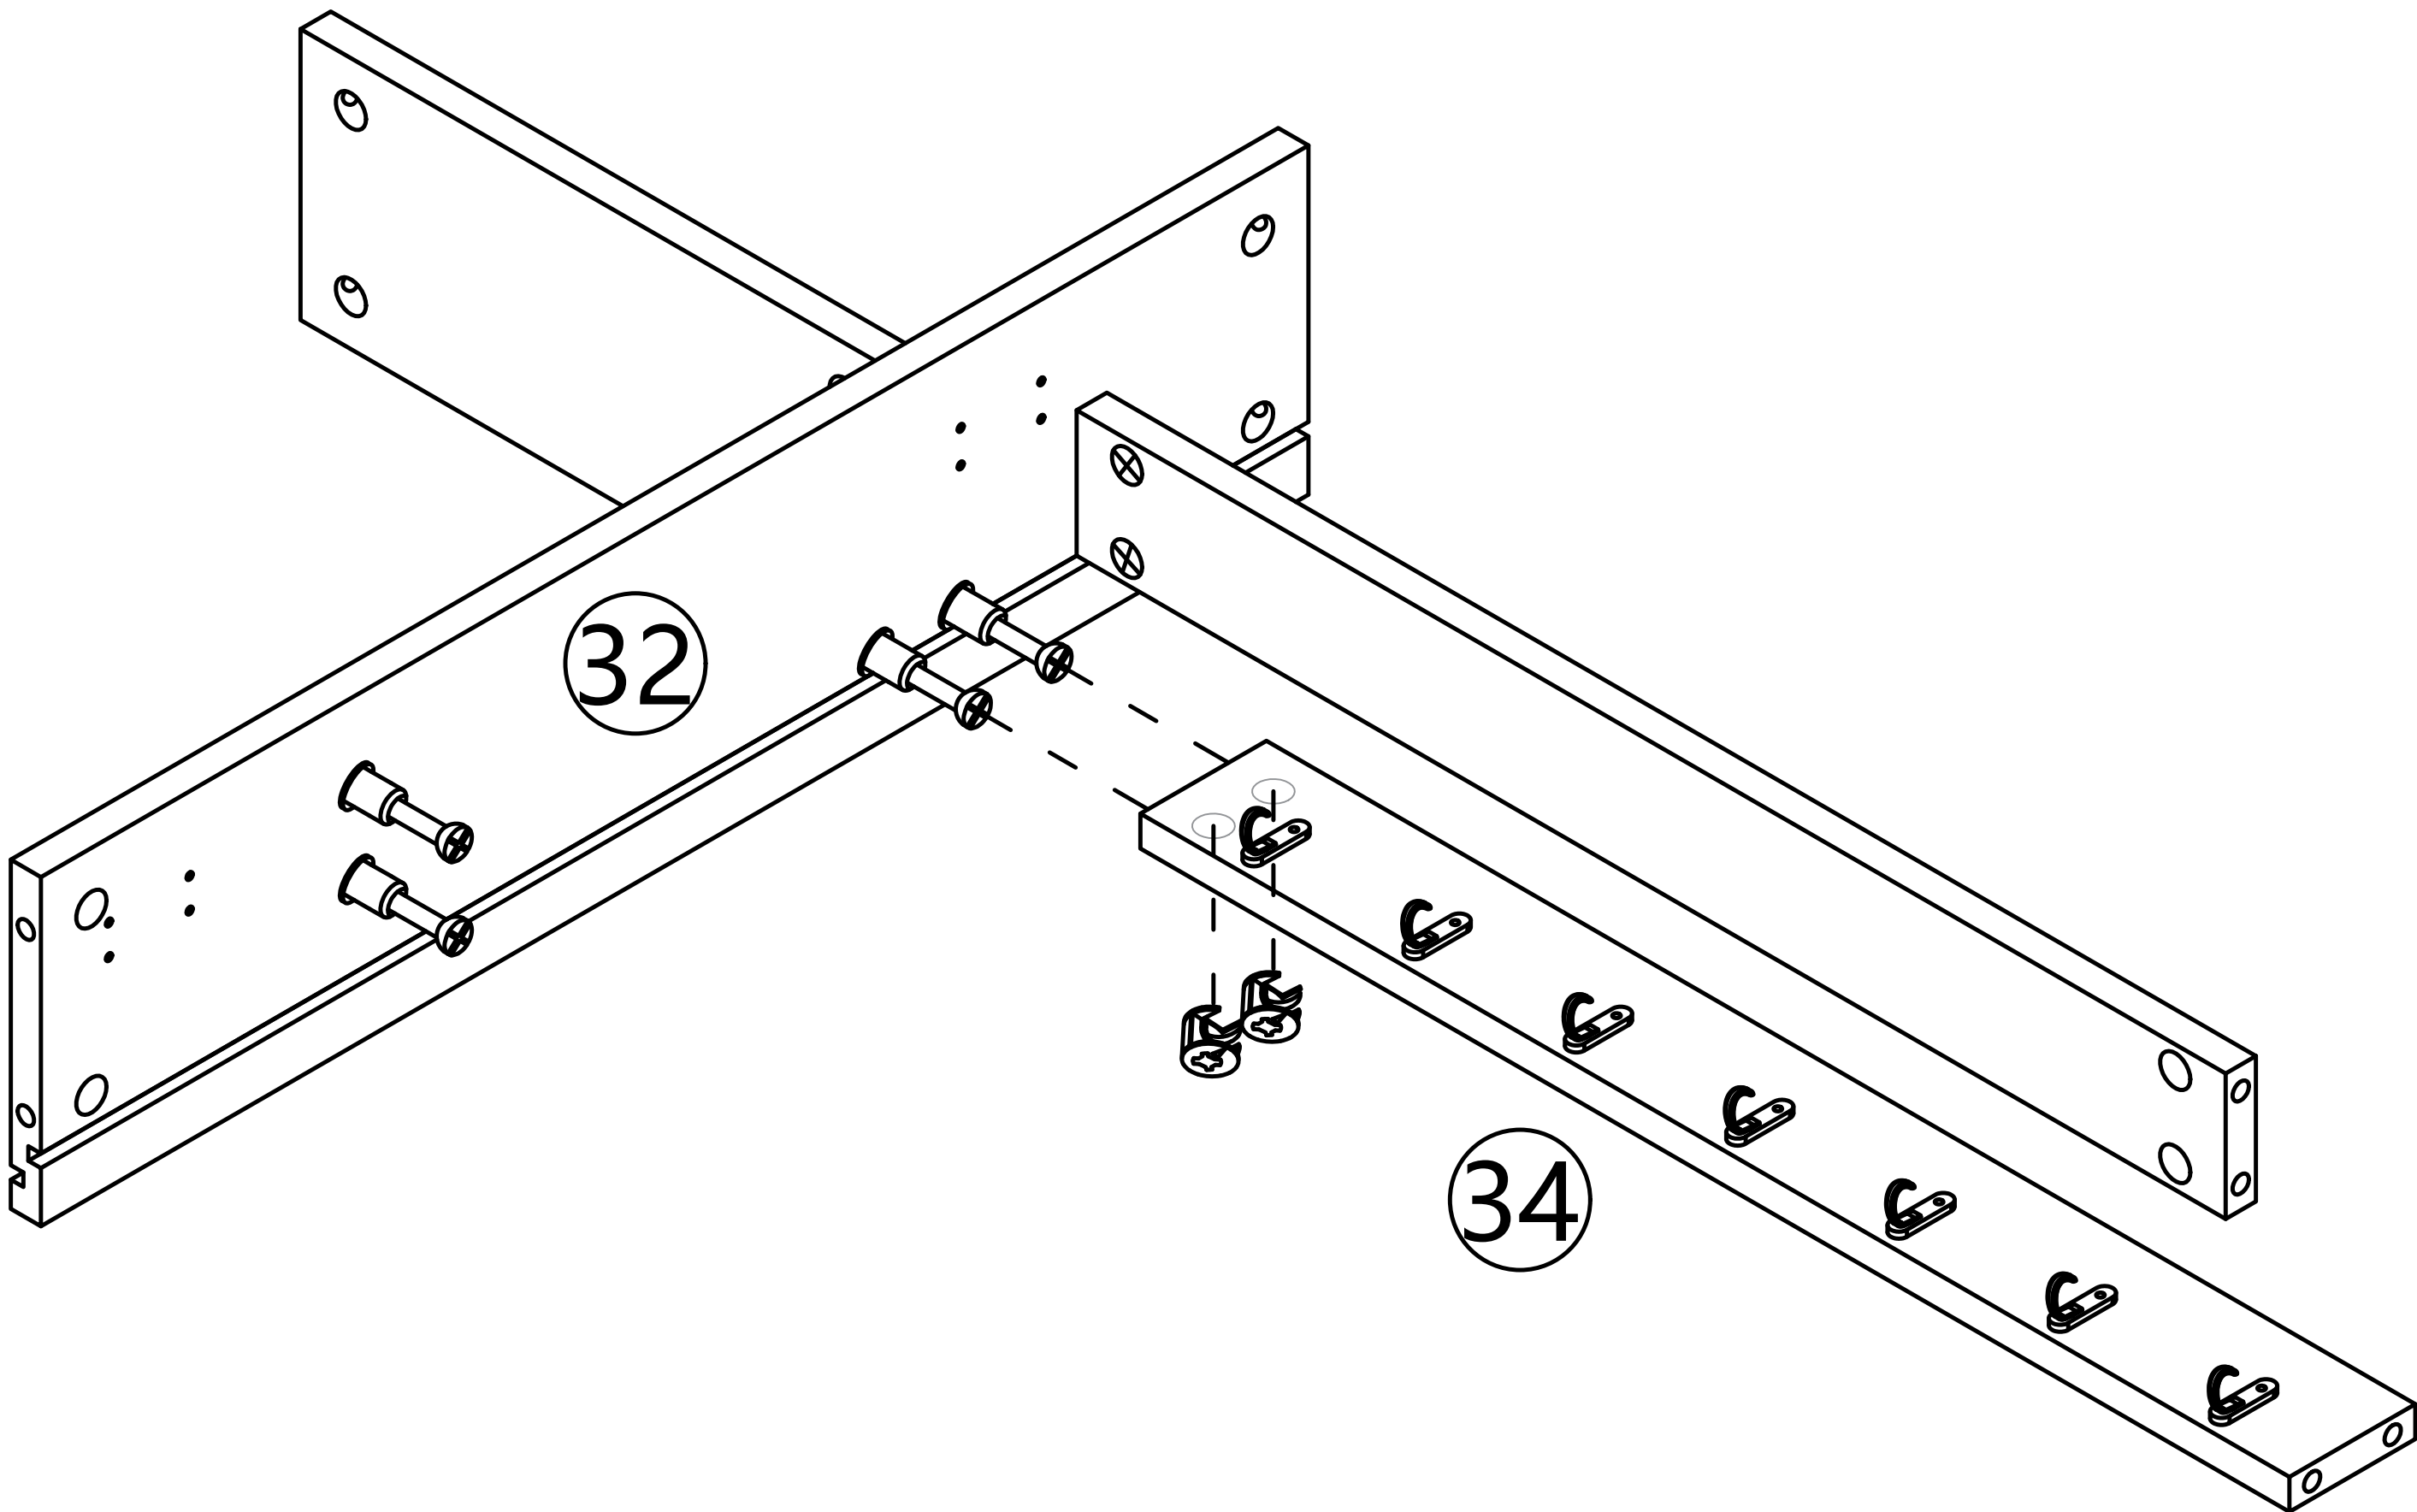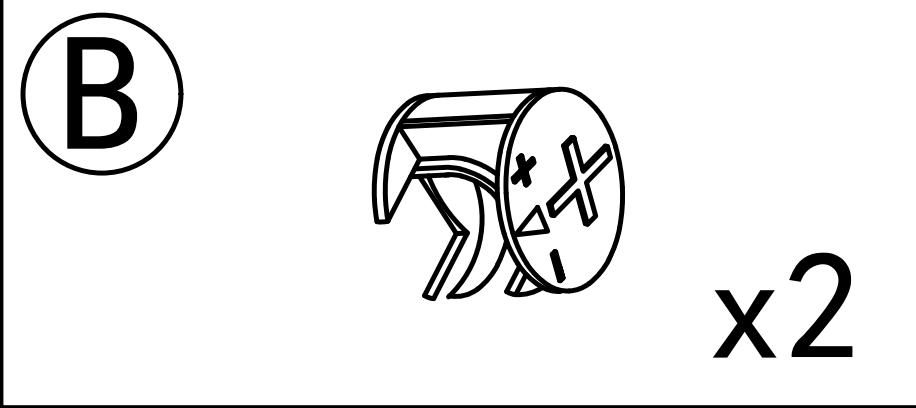


Step 63

B

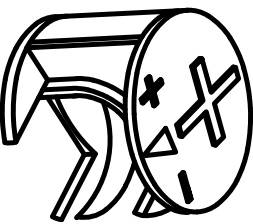


x2

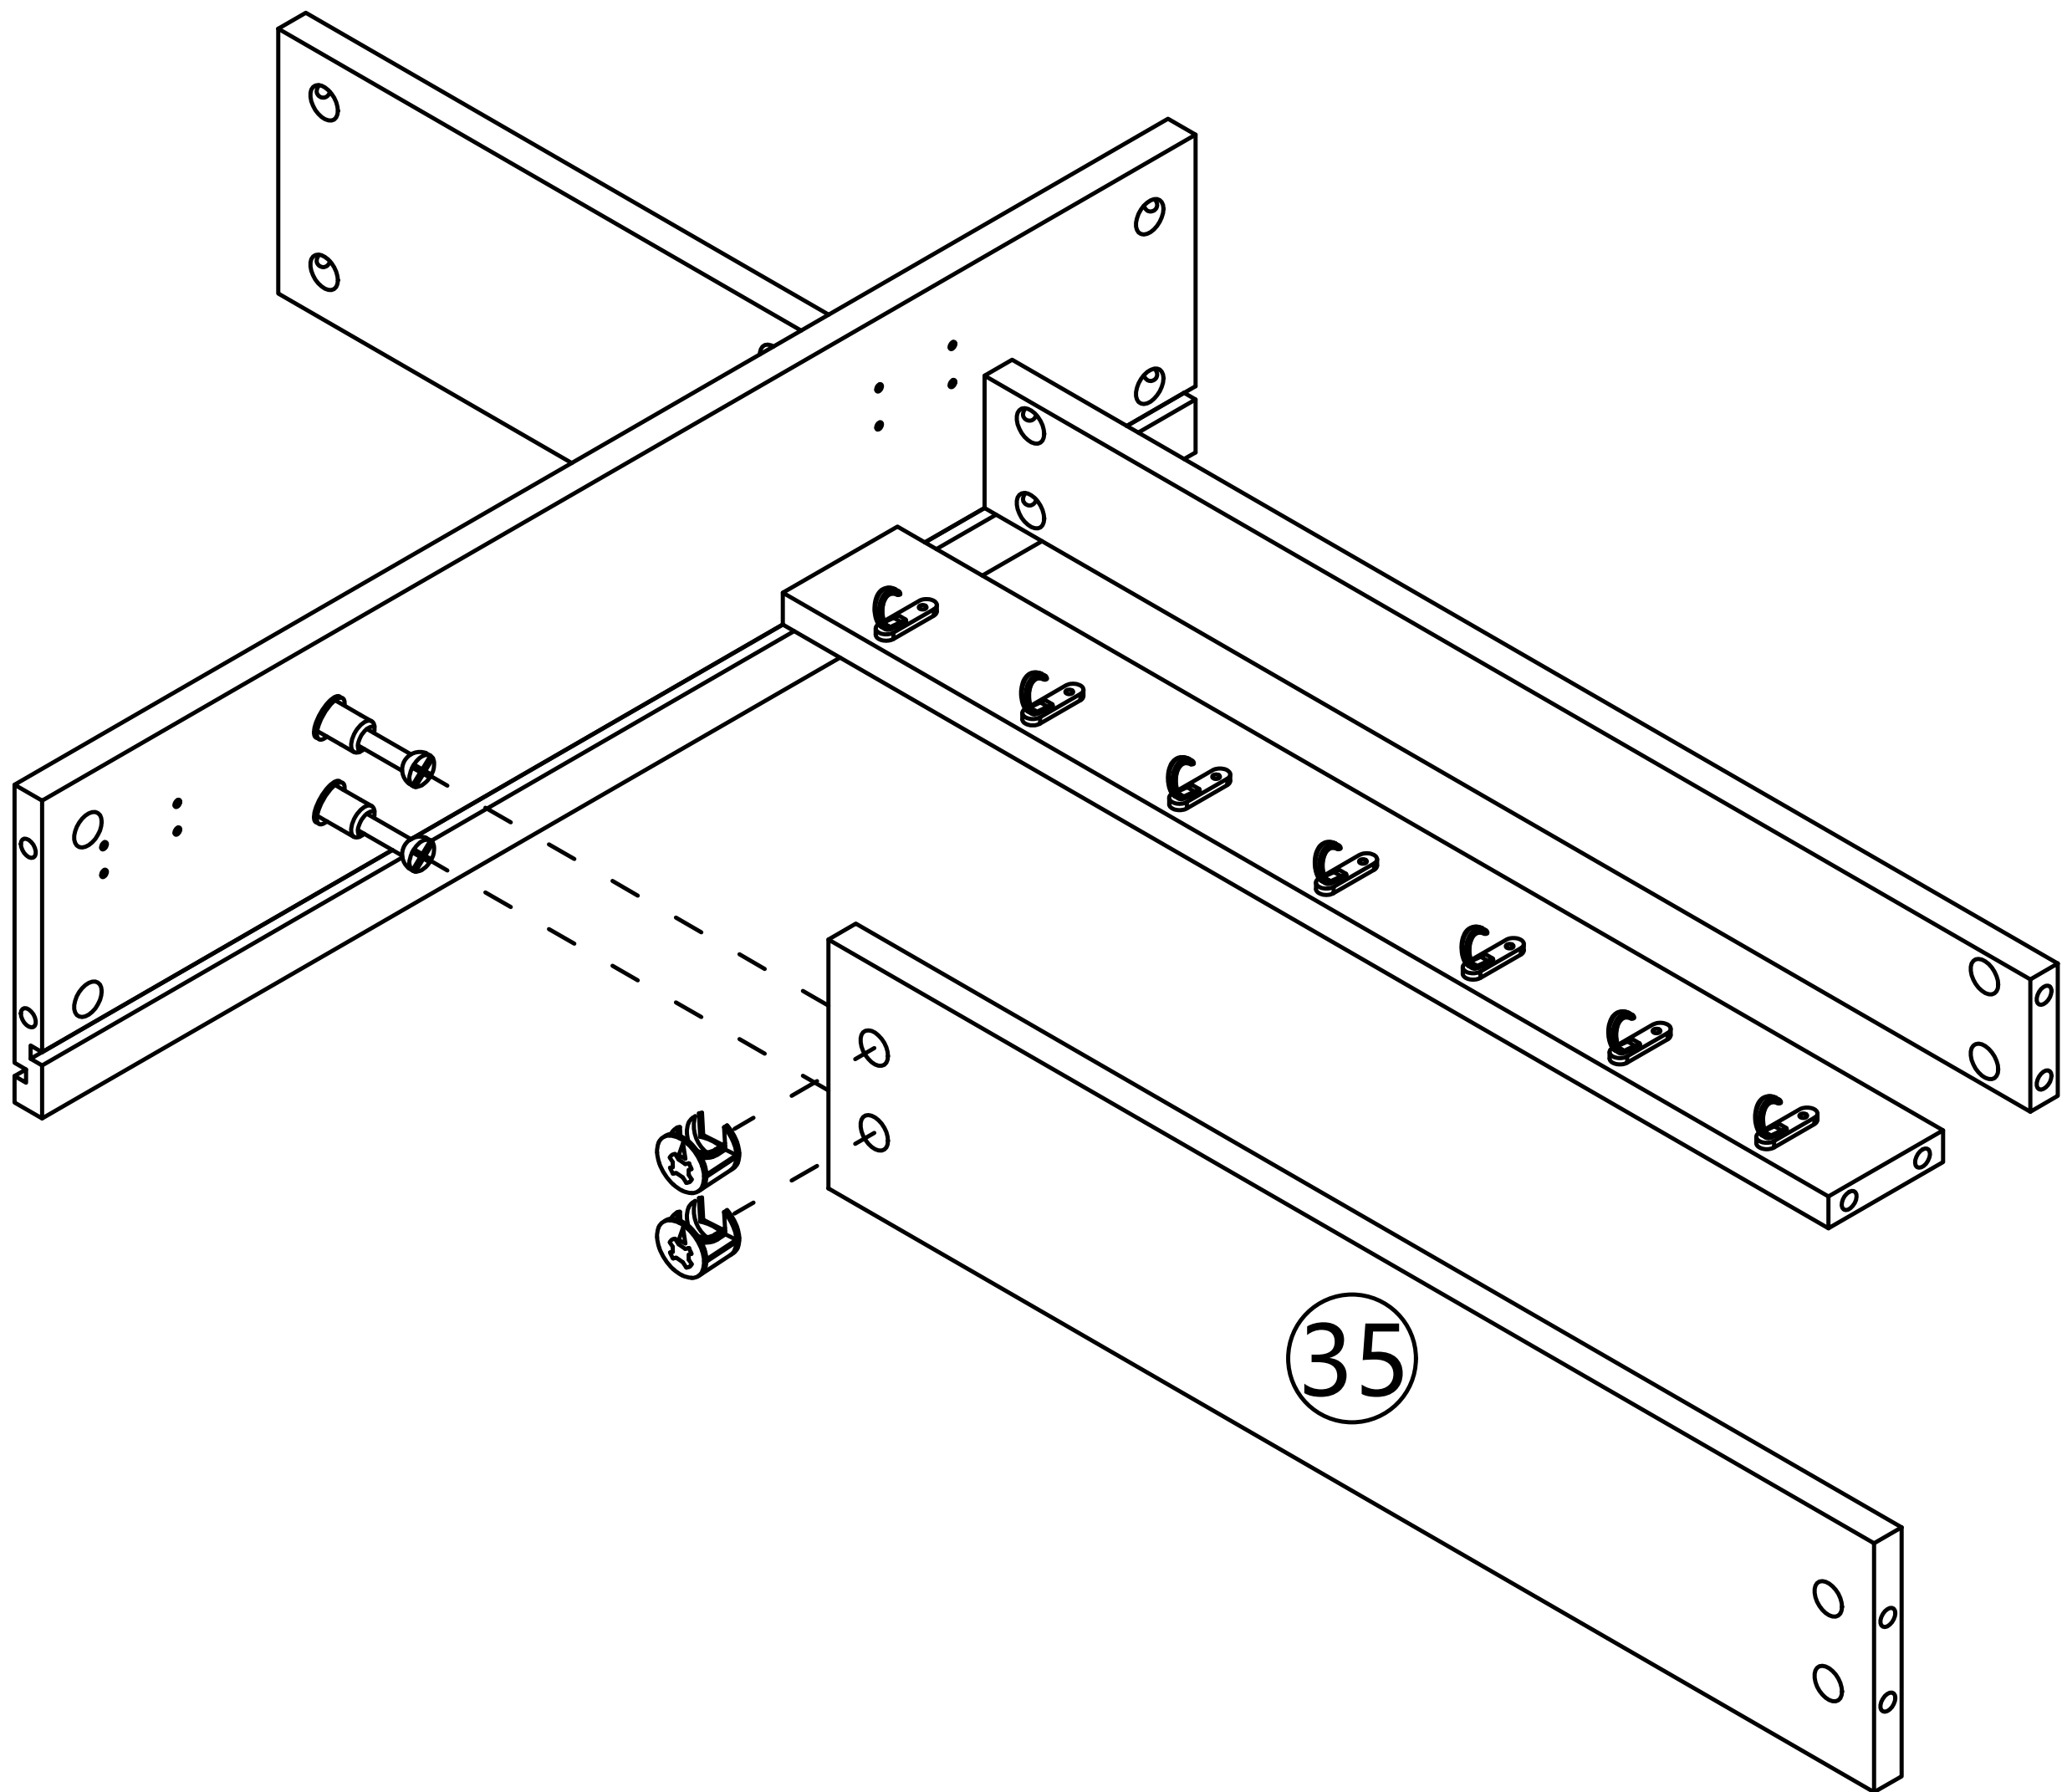


Step 64



A

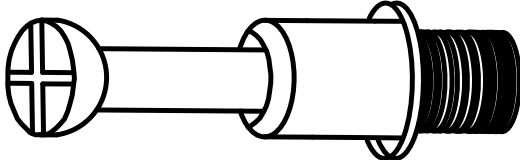



x6

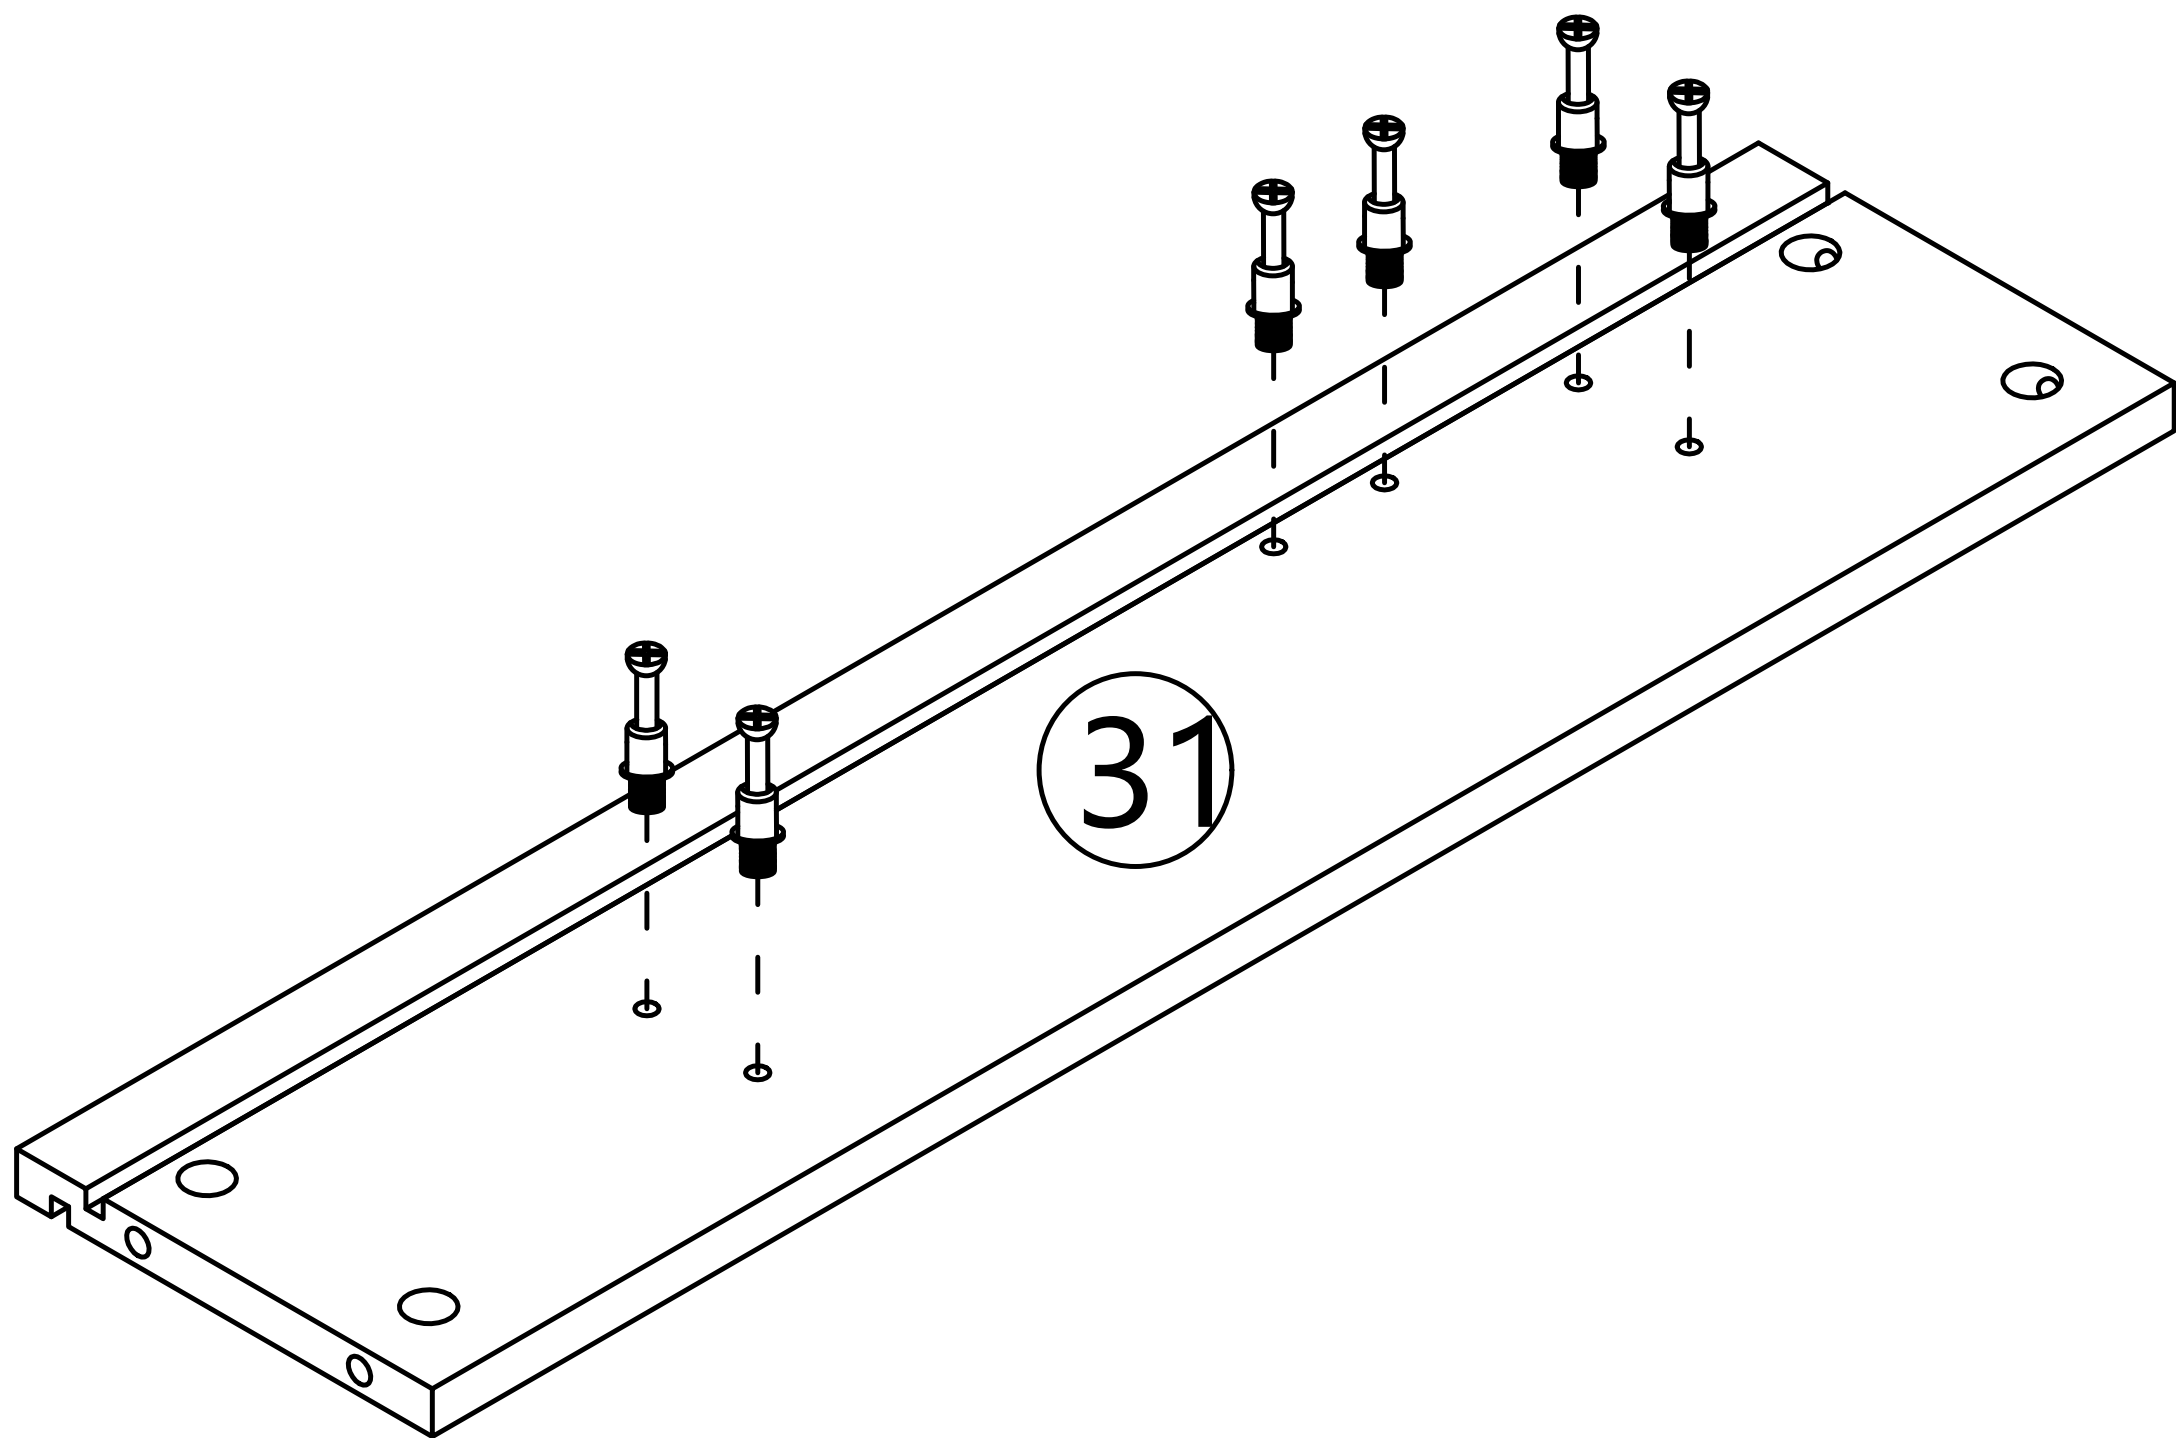

Step 65

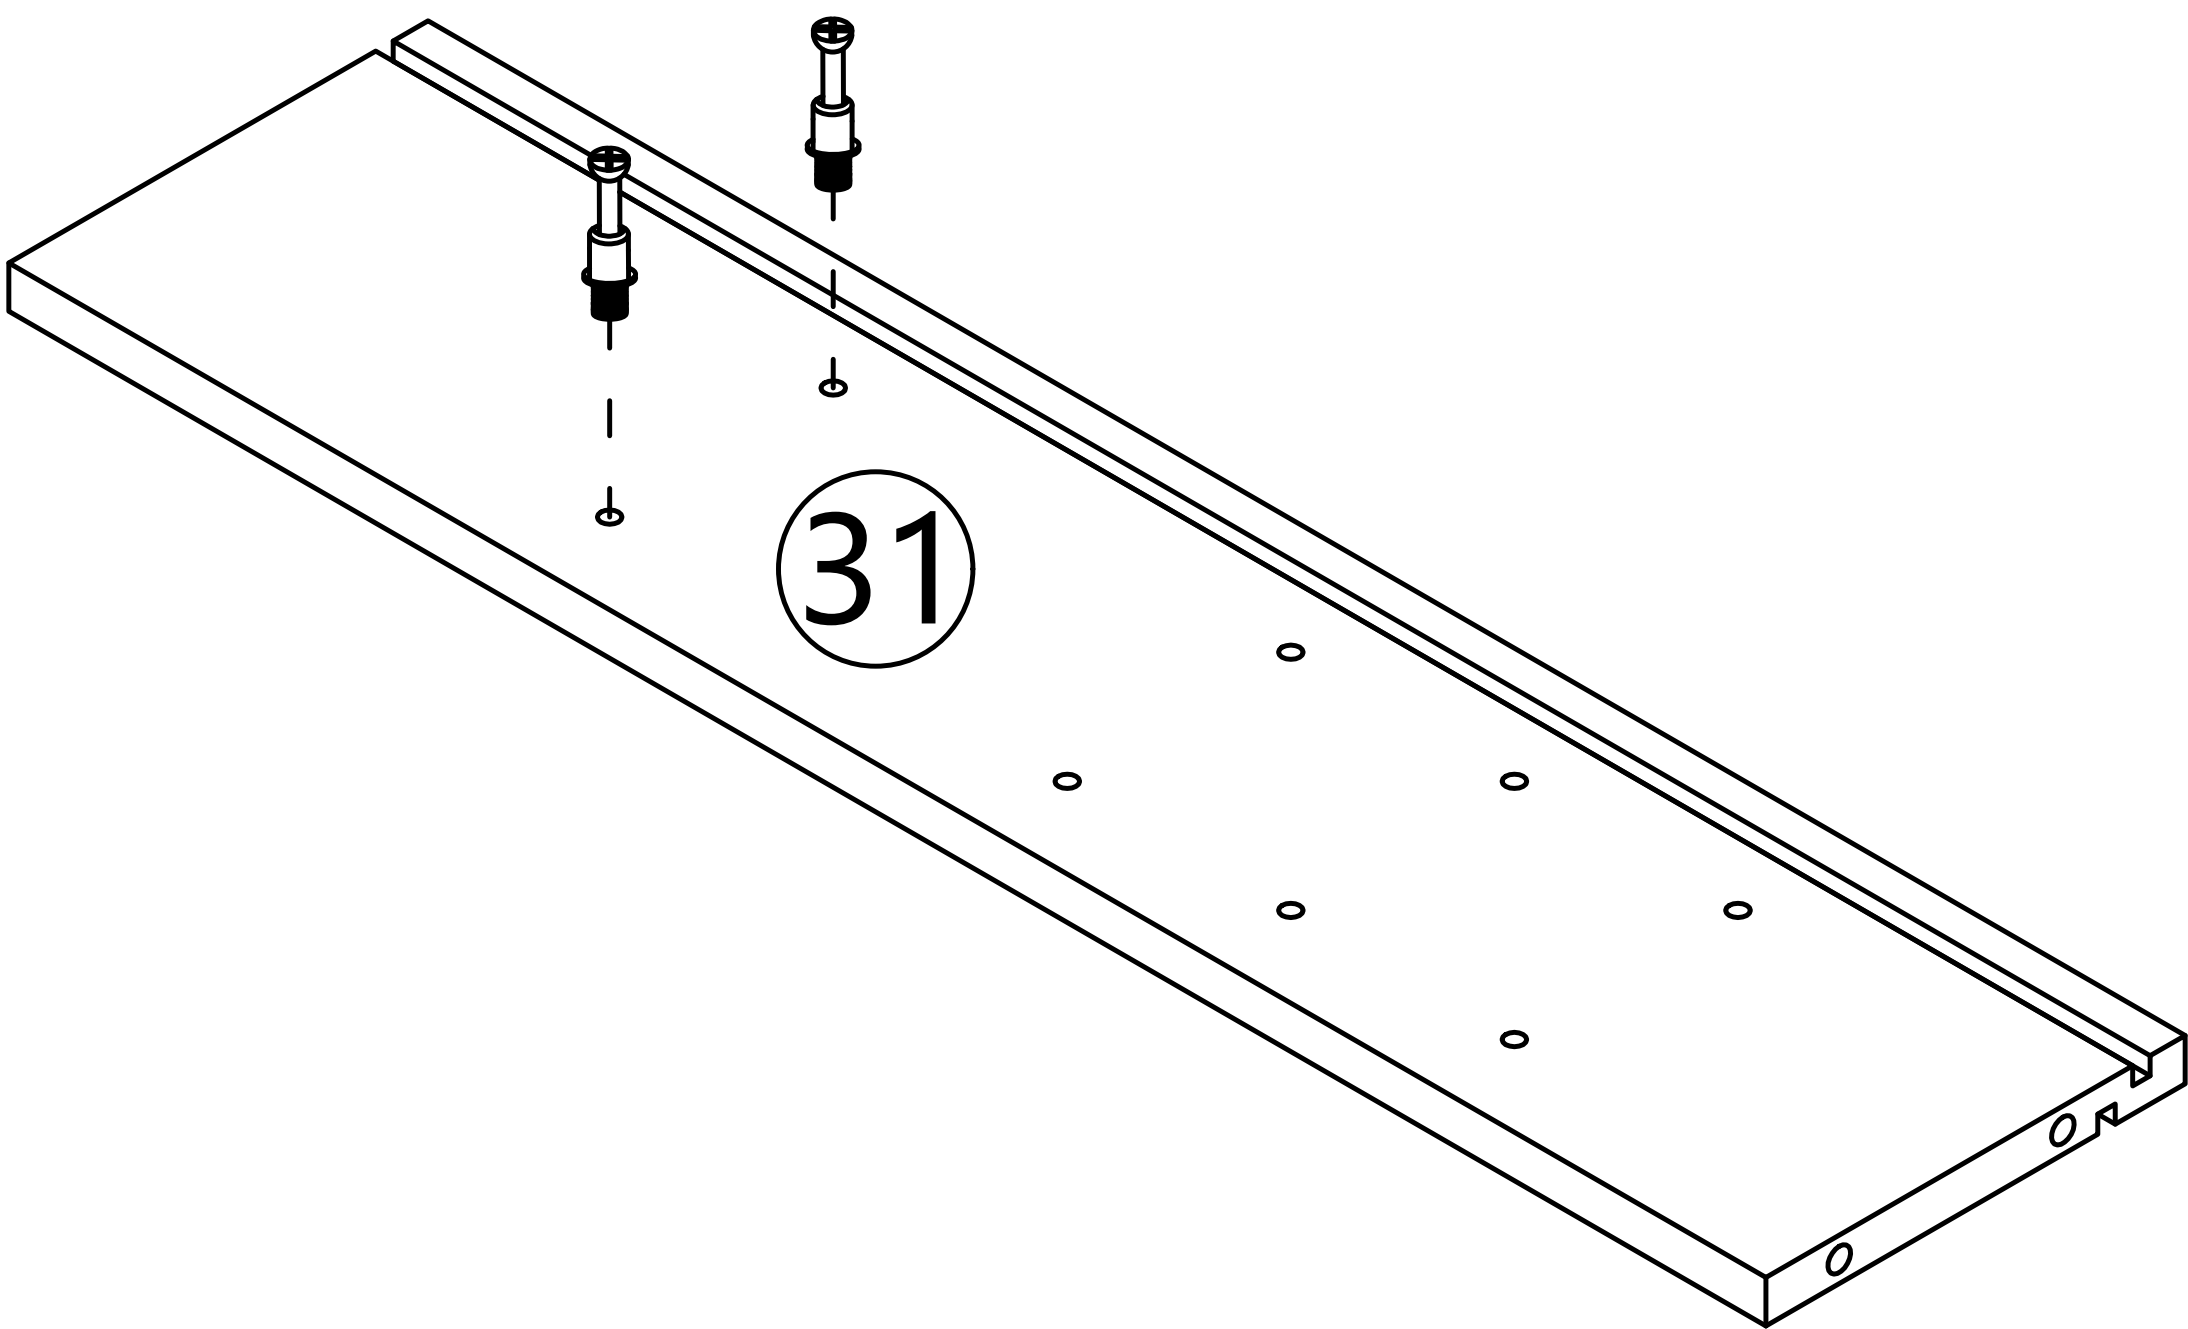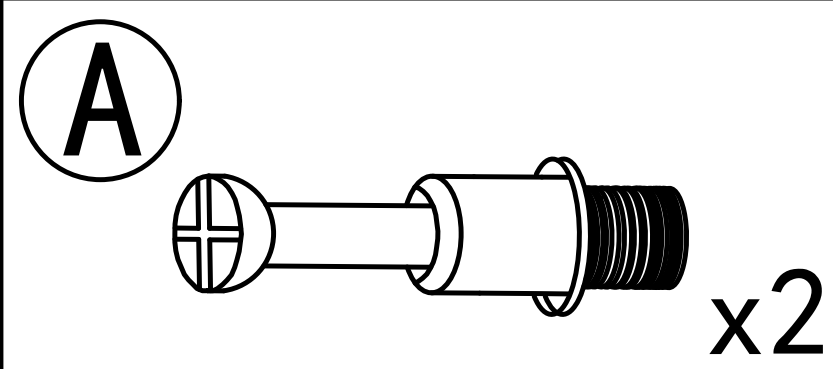


Step 66

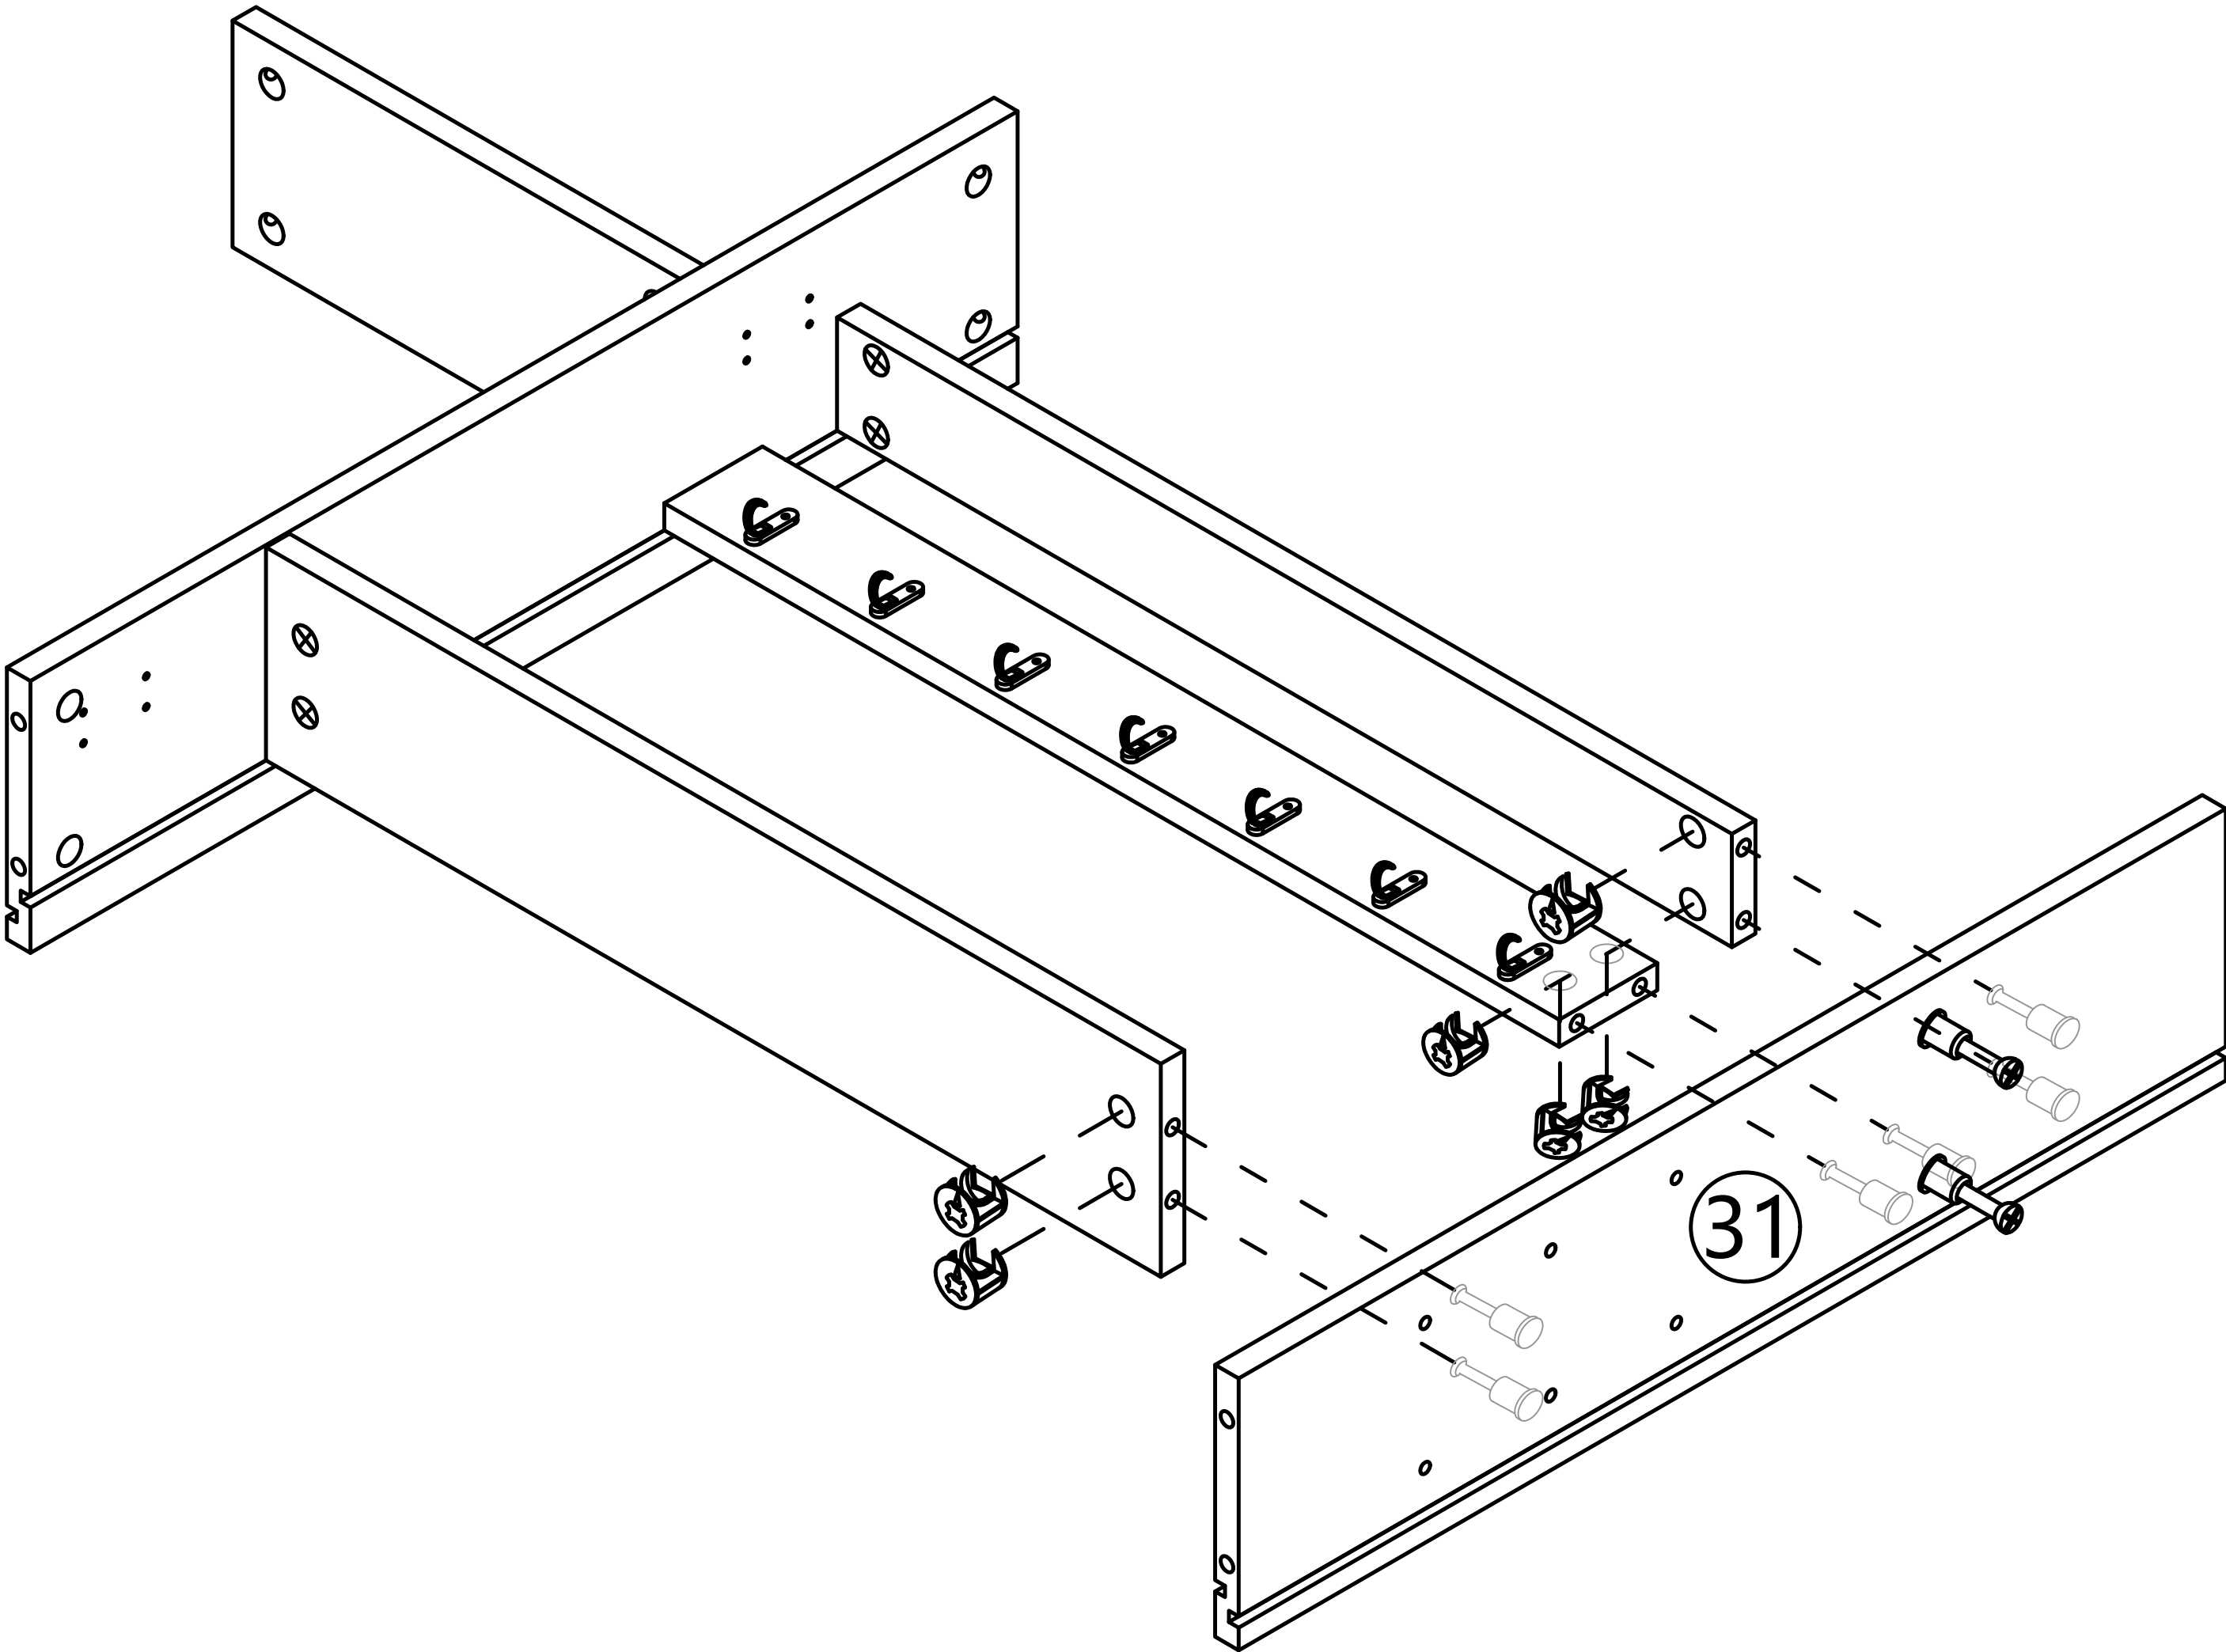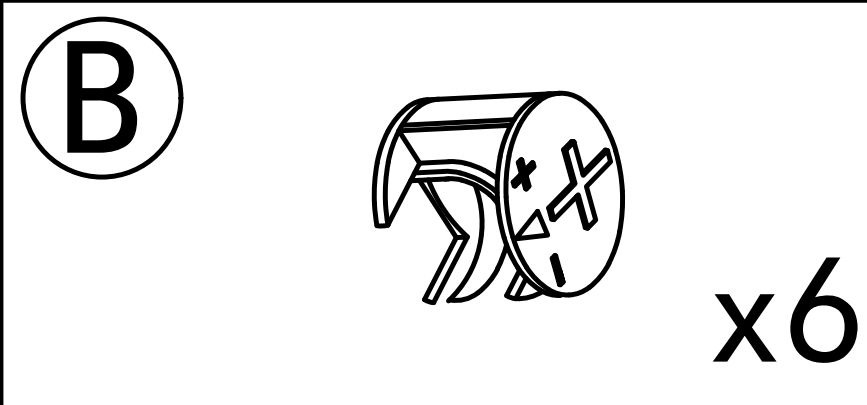


Step 67

B

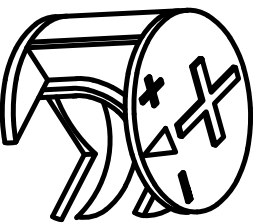


x2

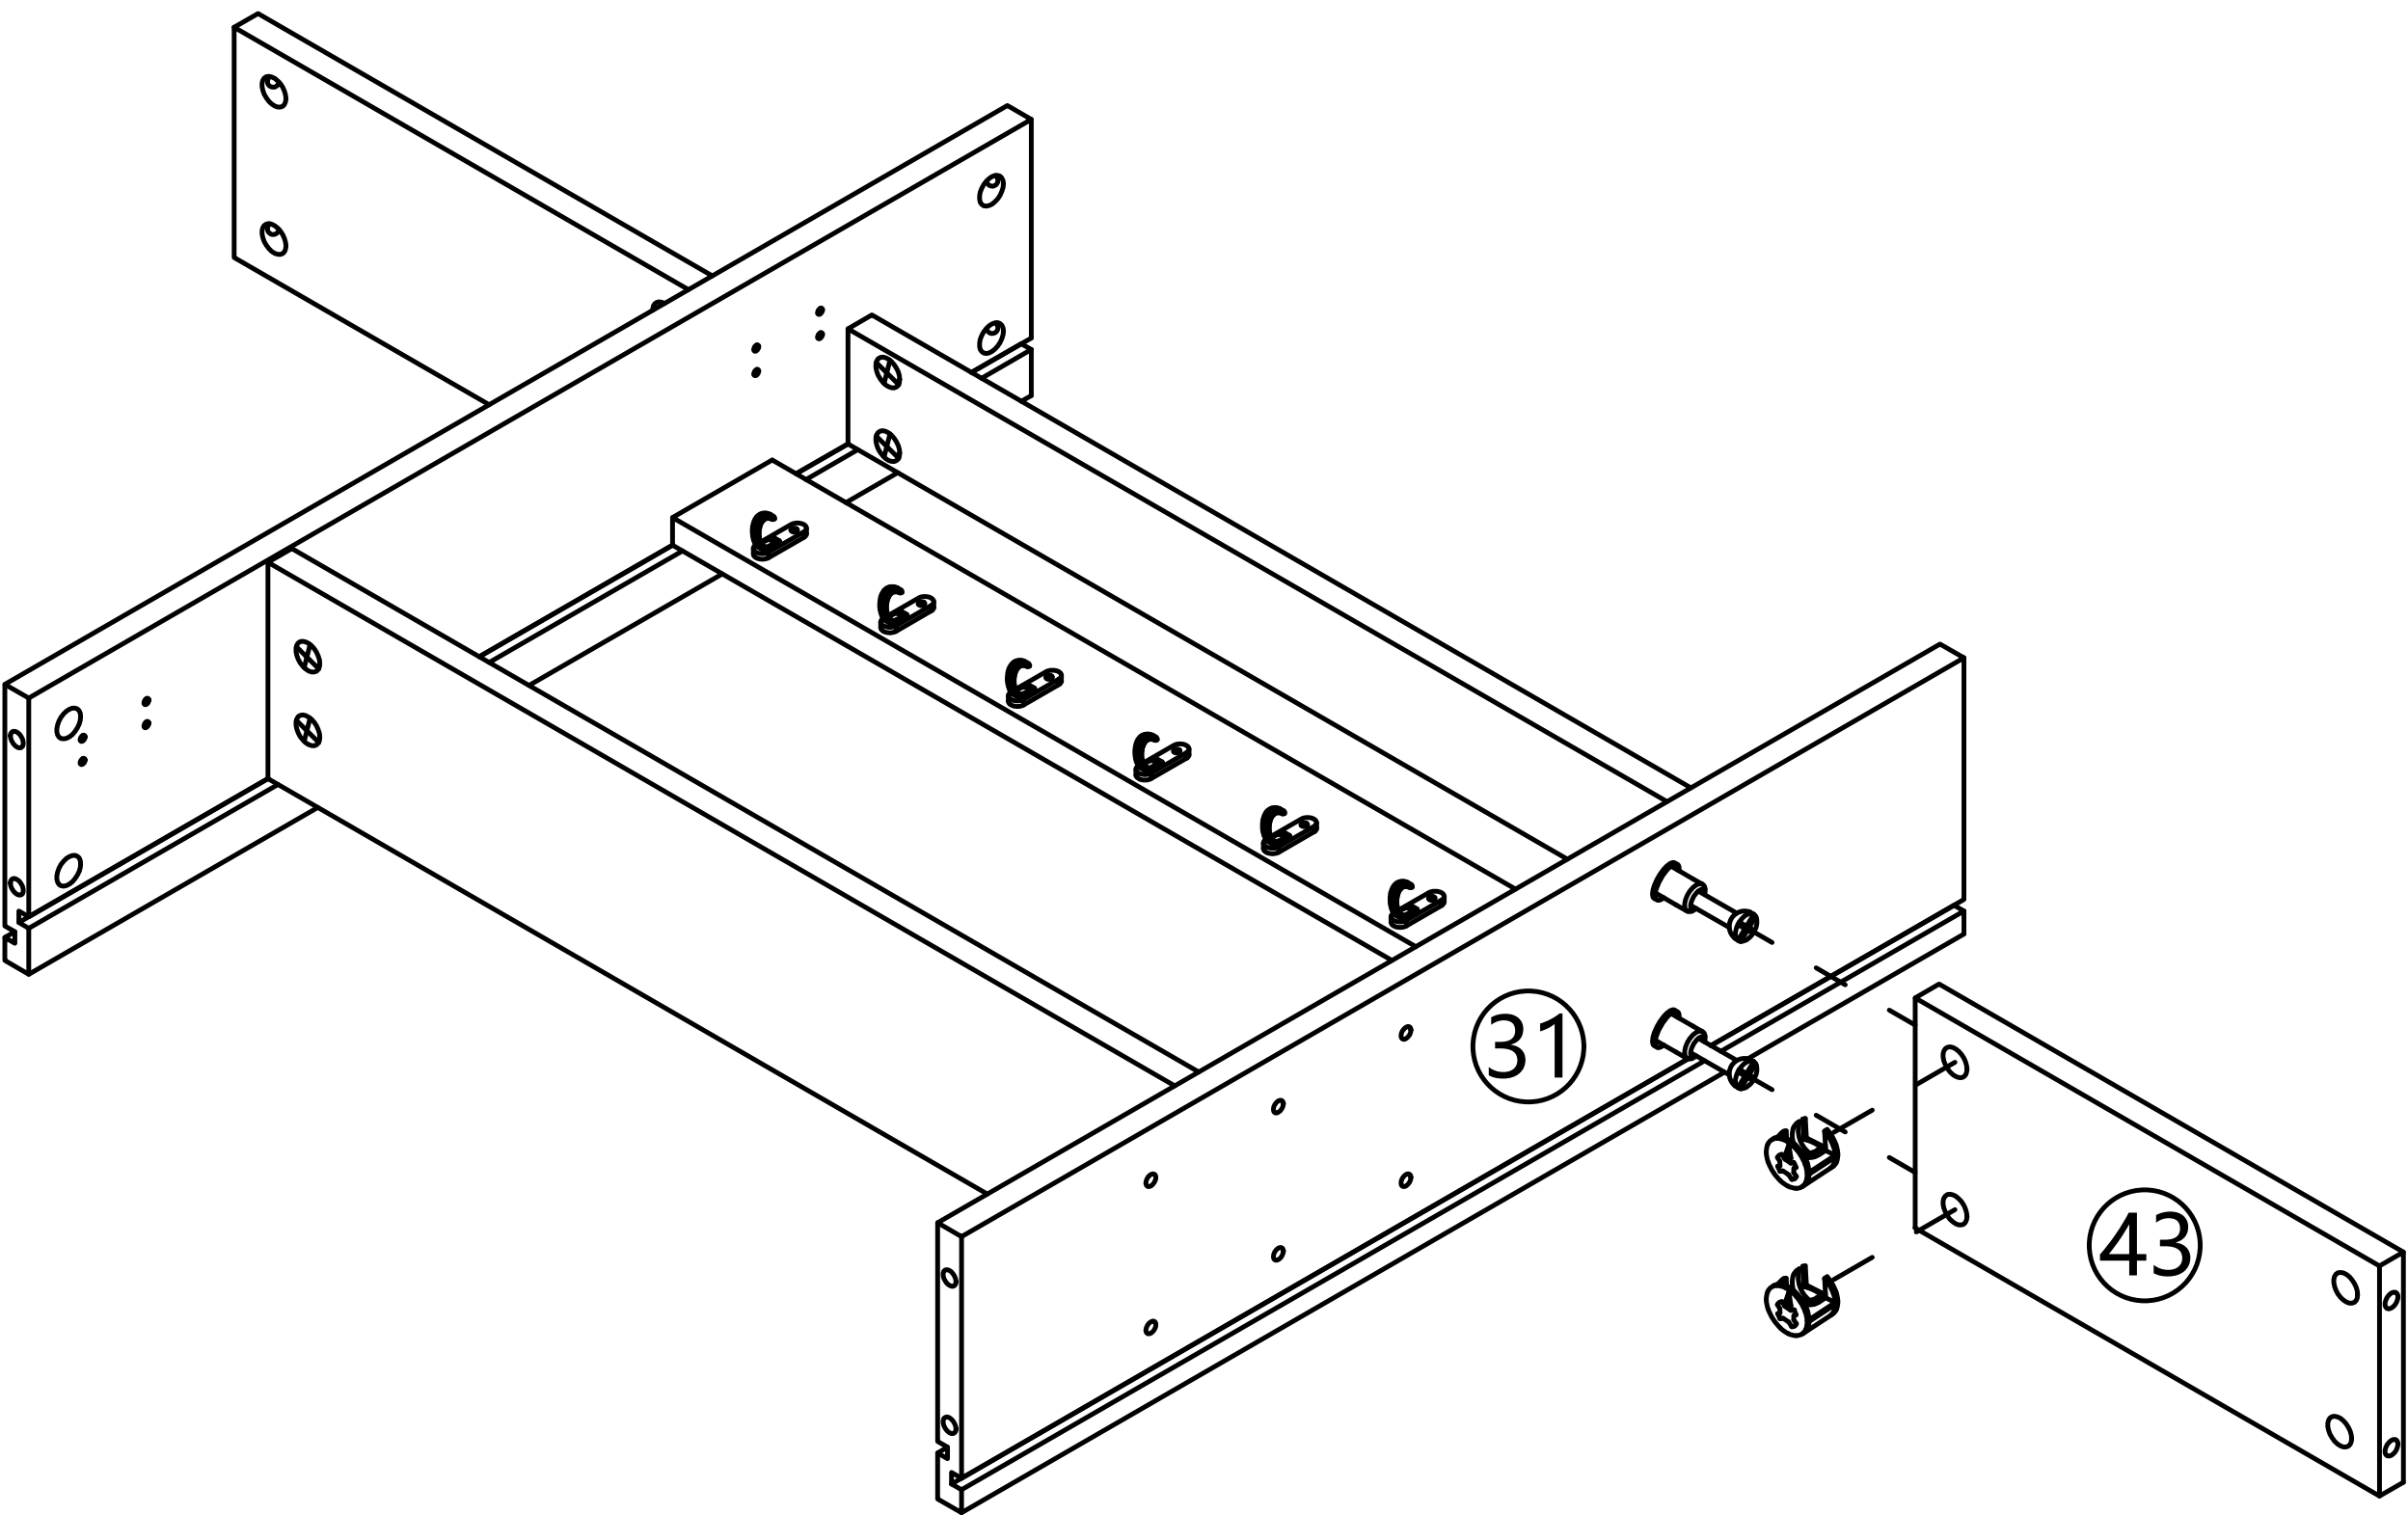


Step 68



A

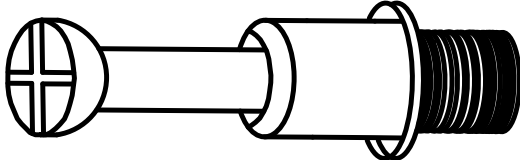



x4

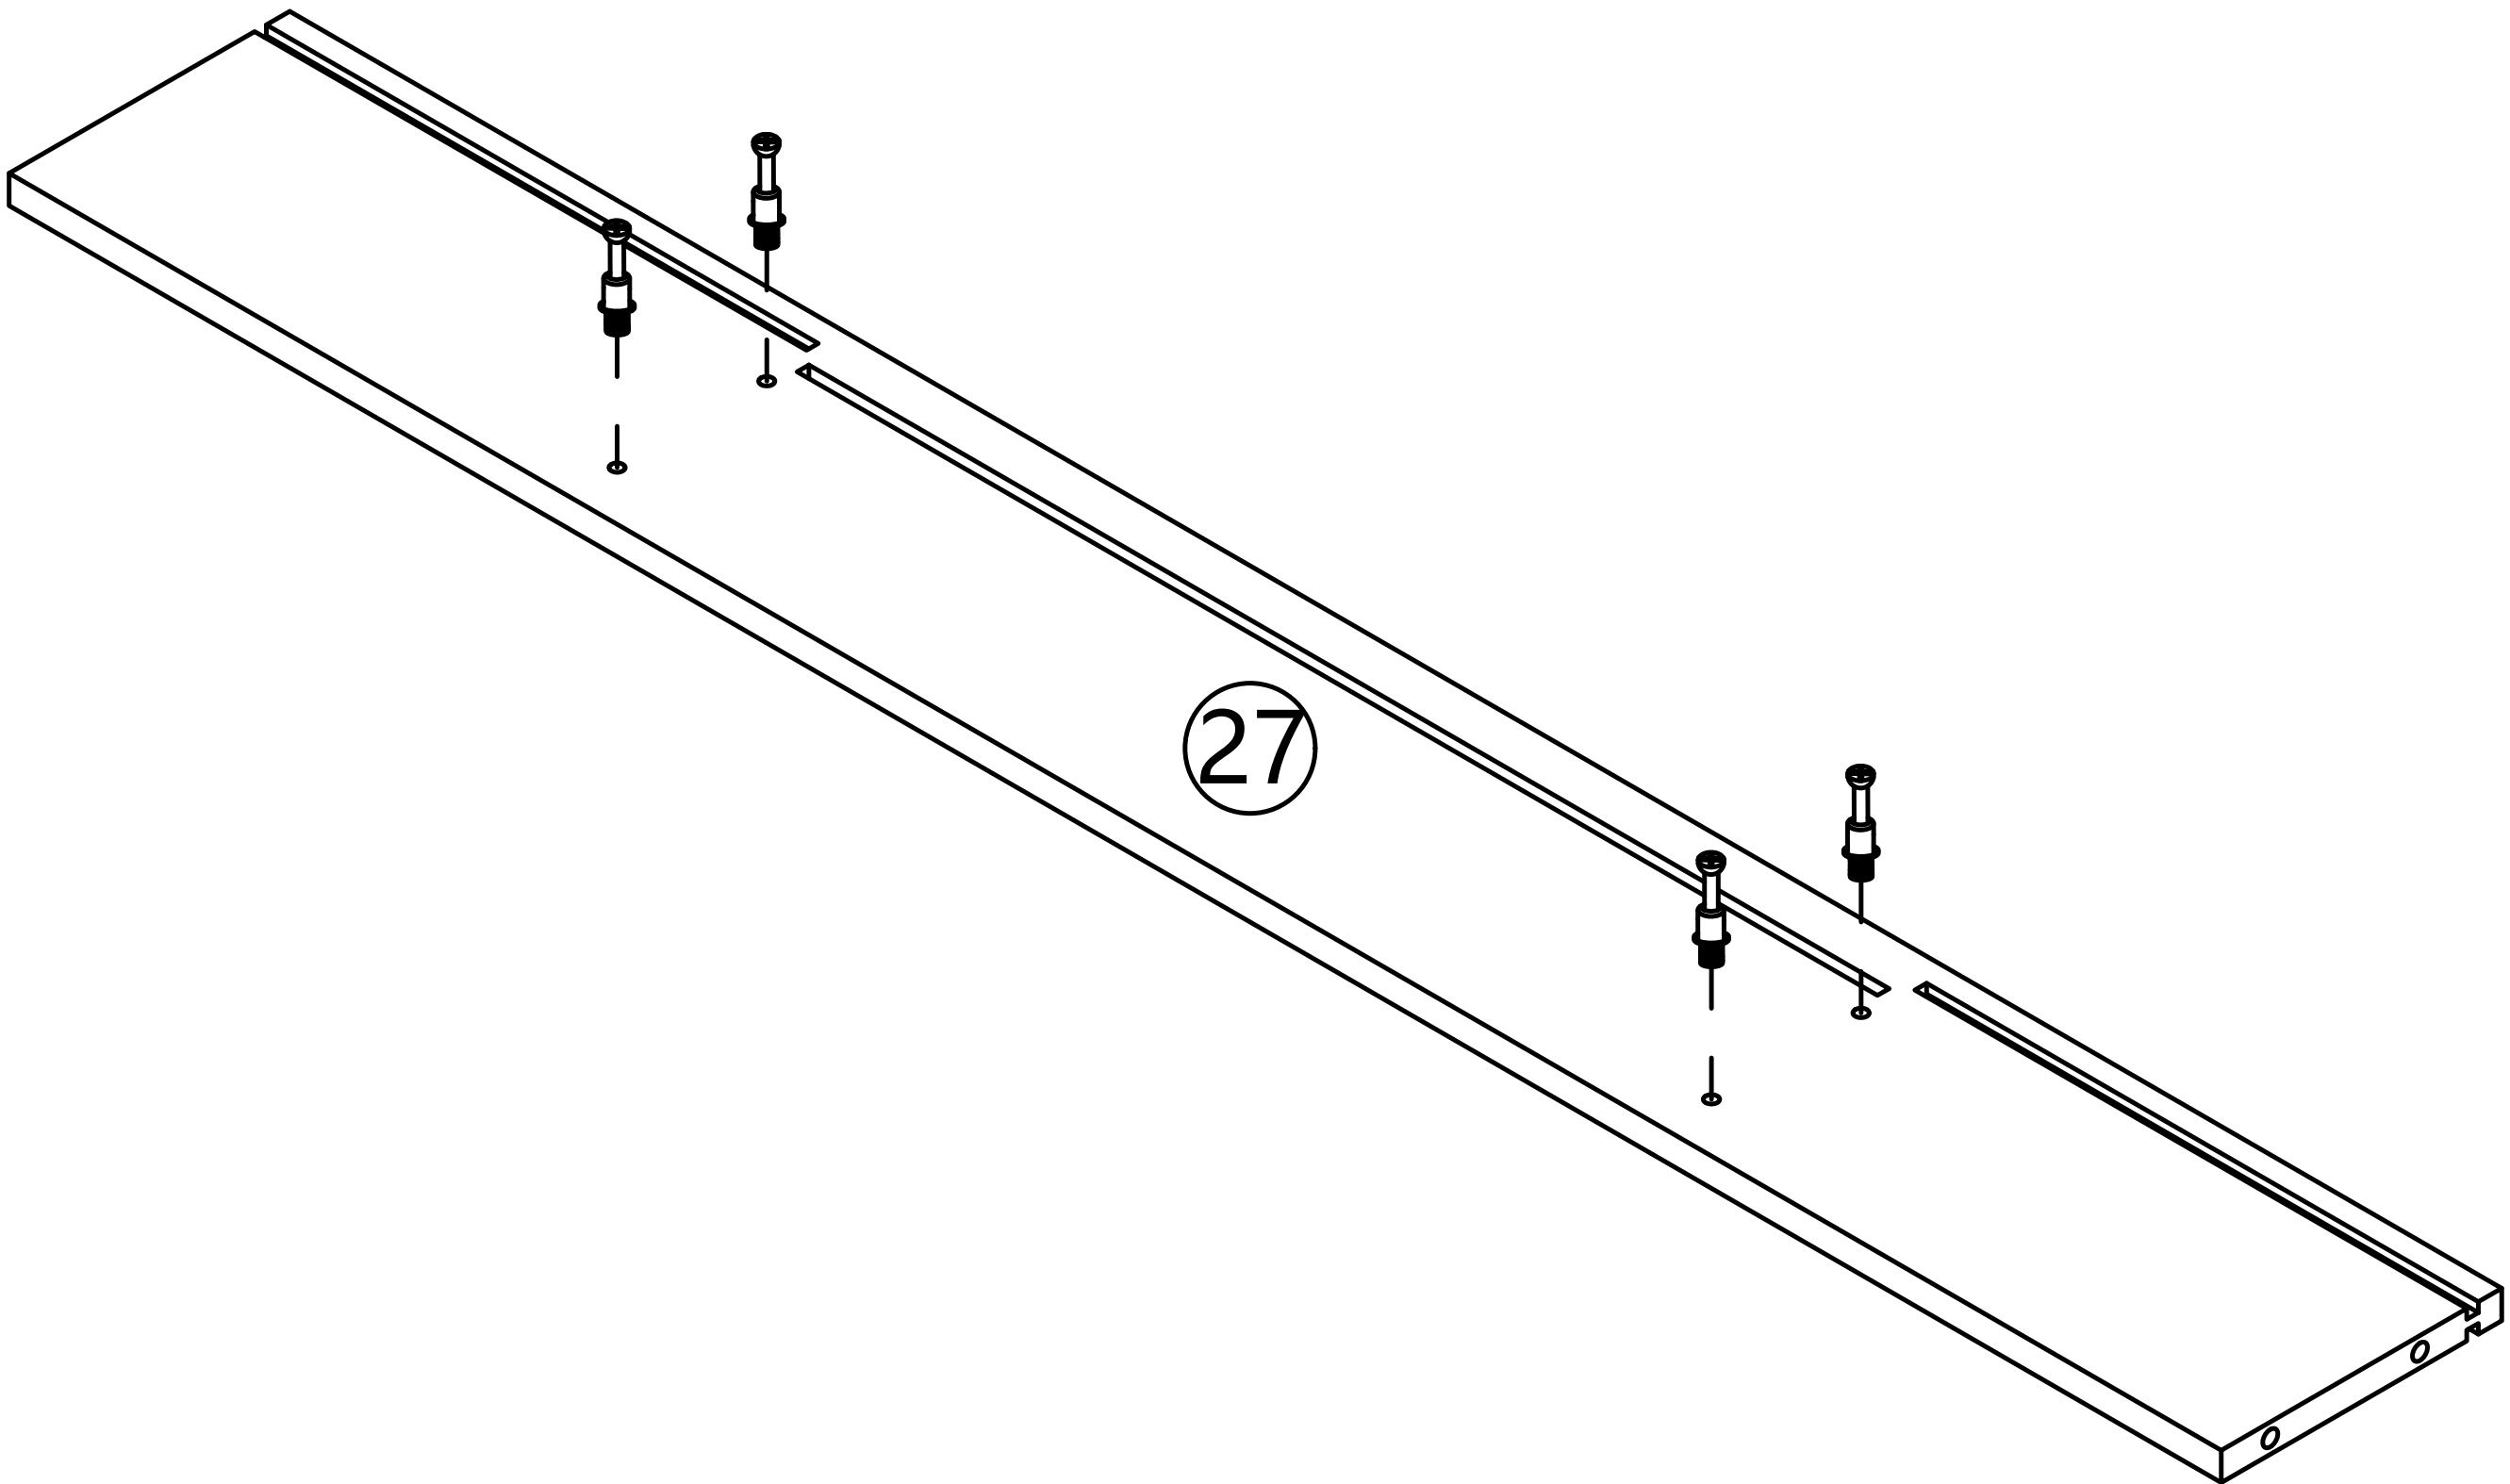



Step 69

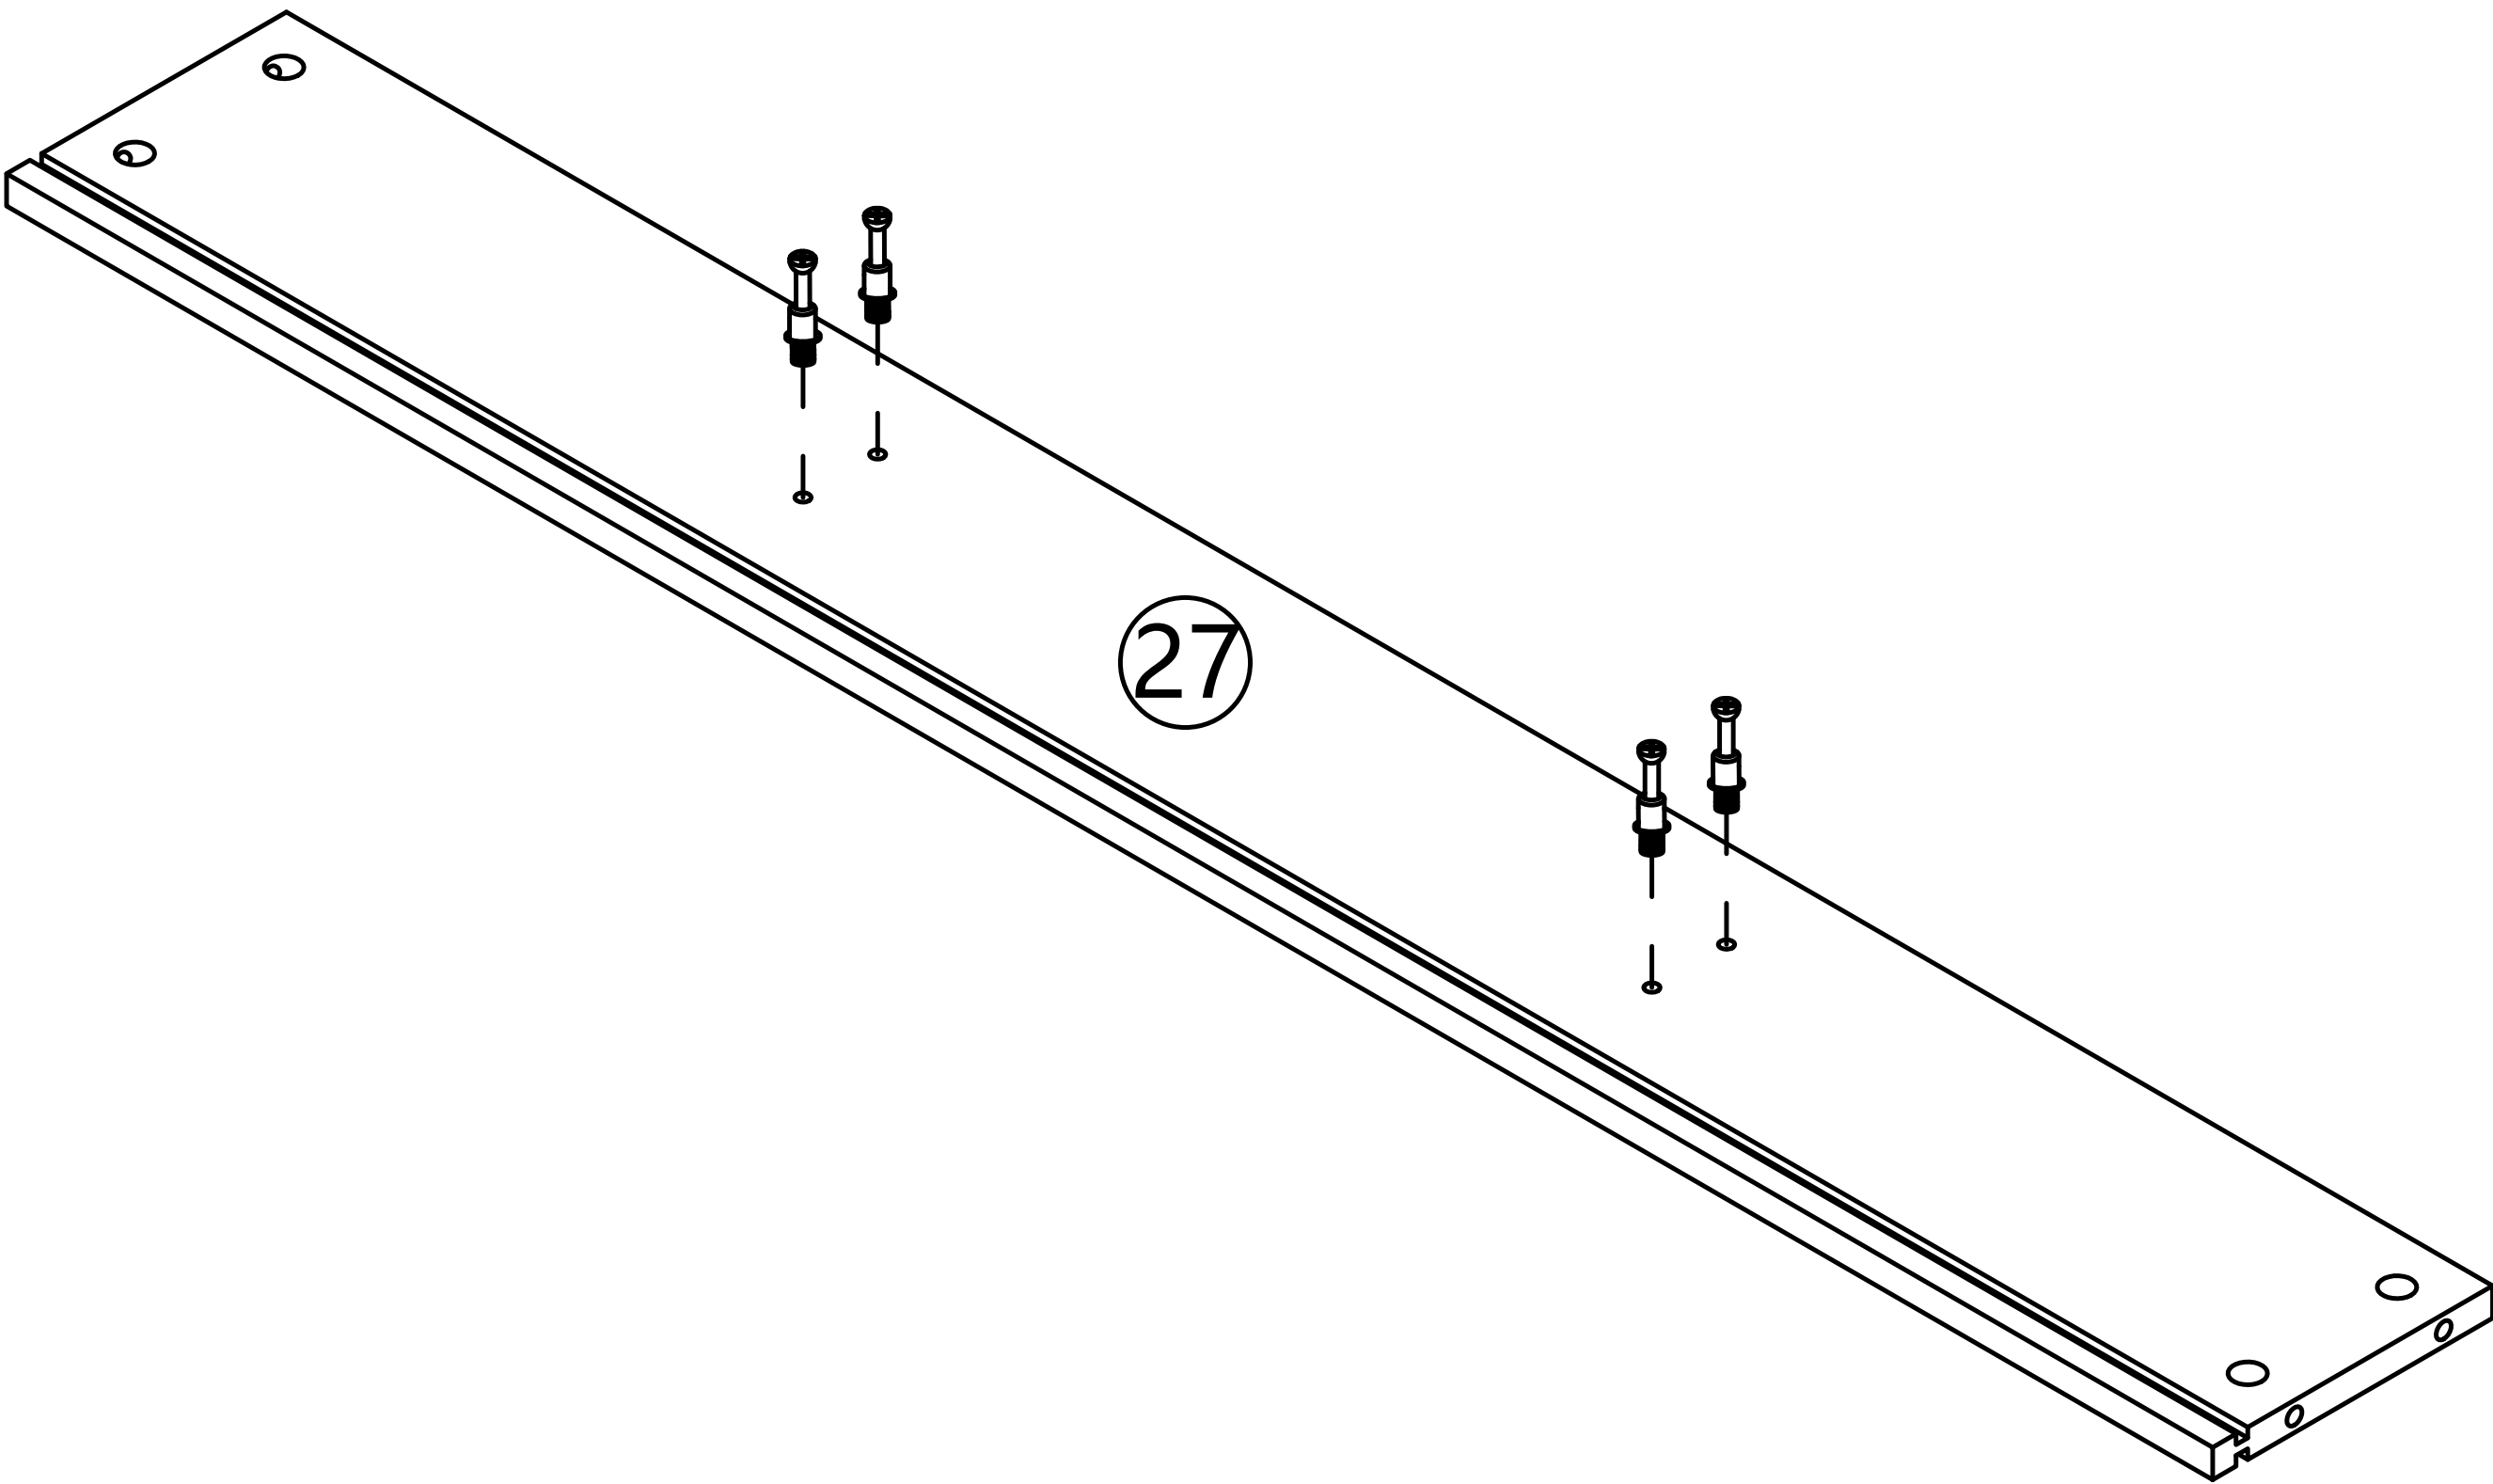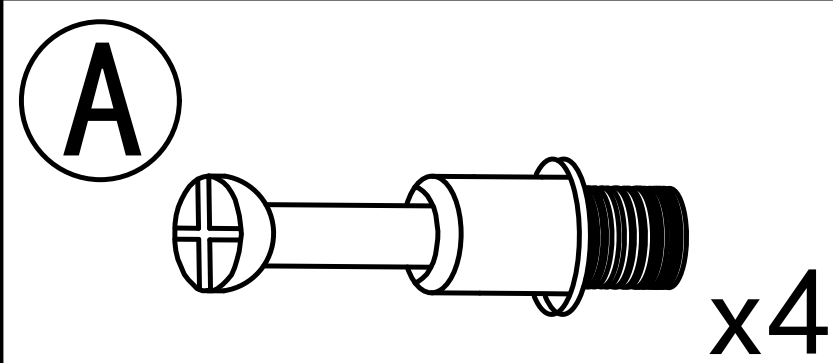



Step 70

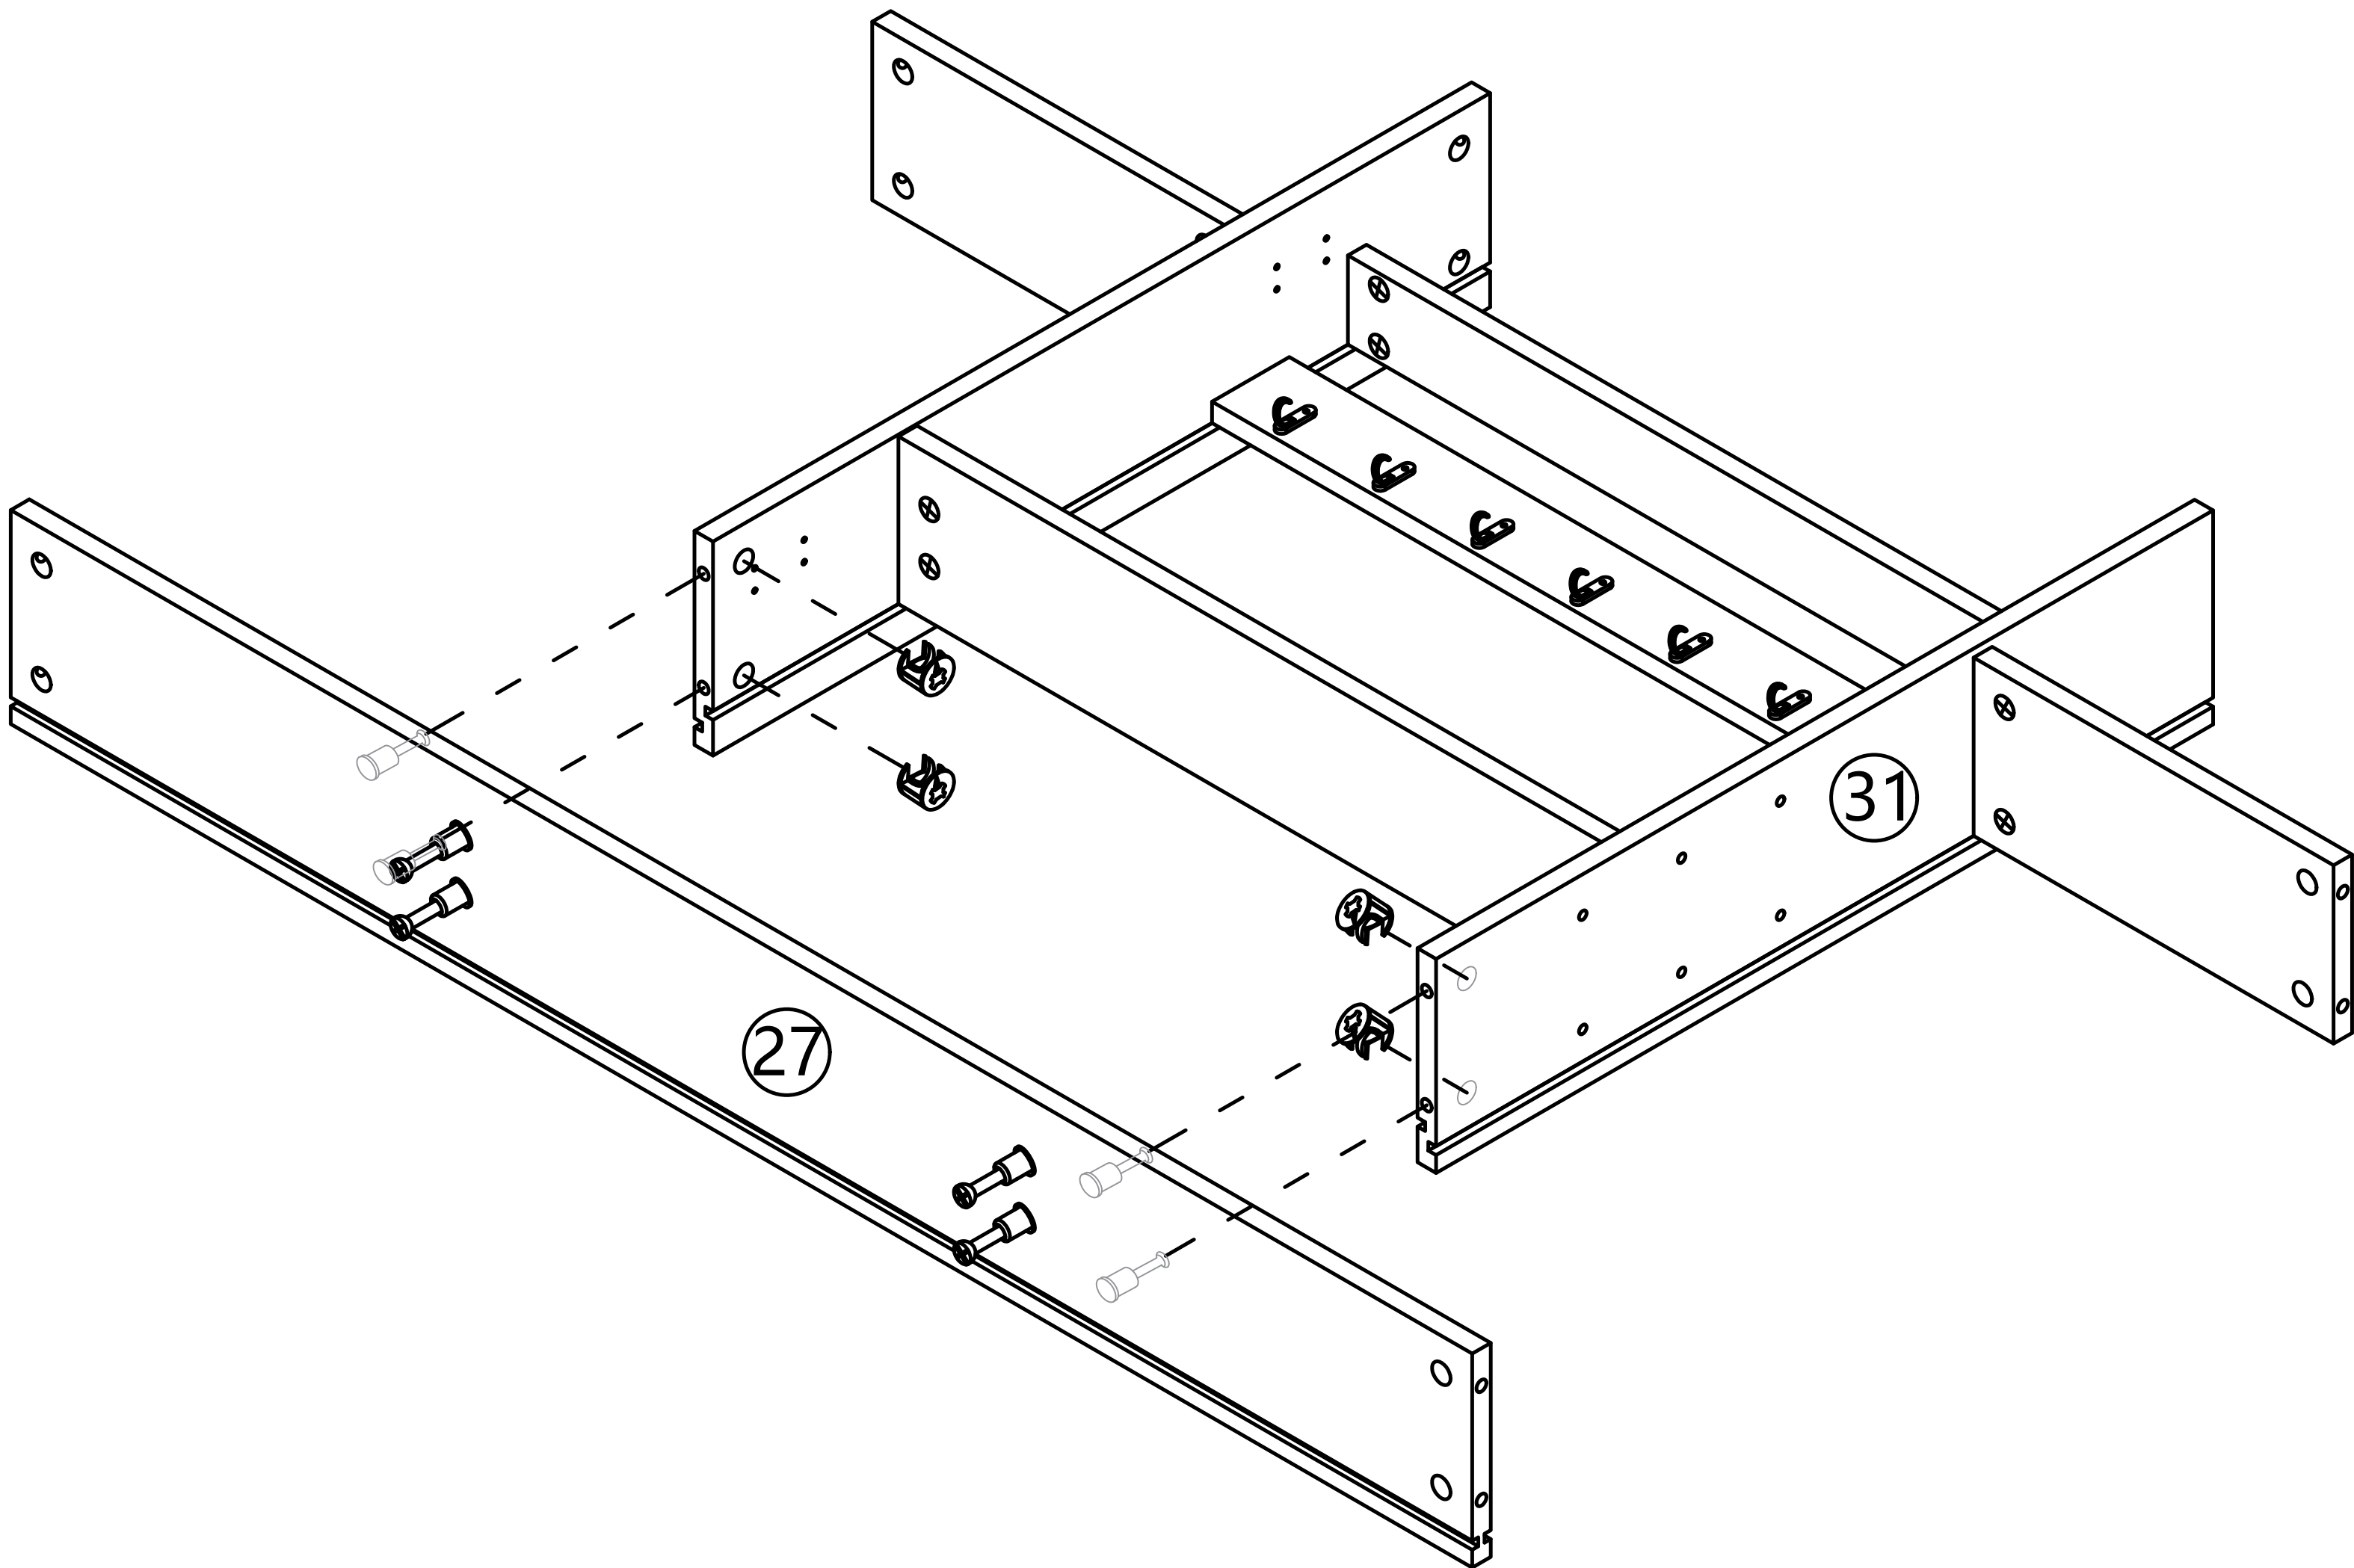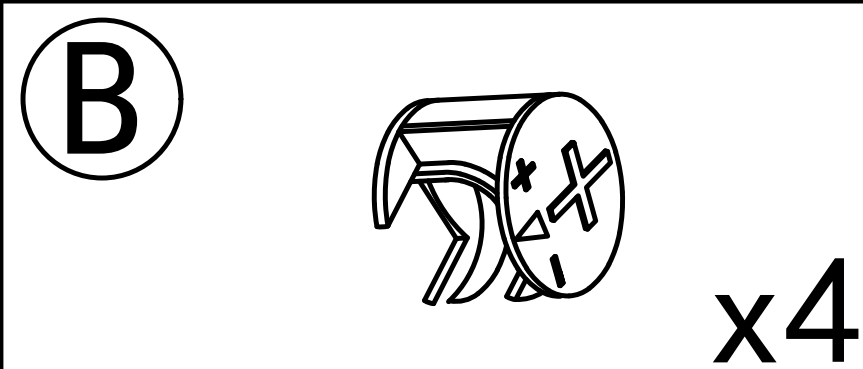



Step 71

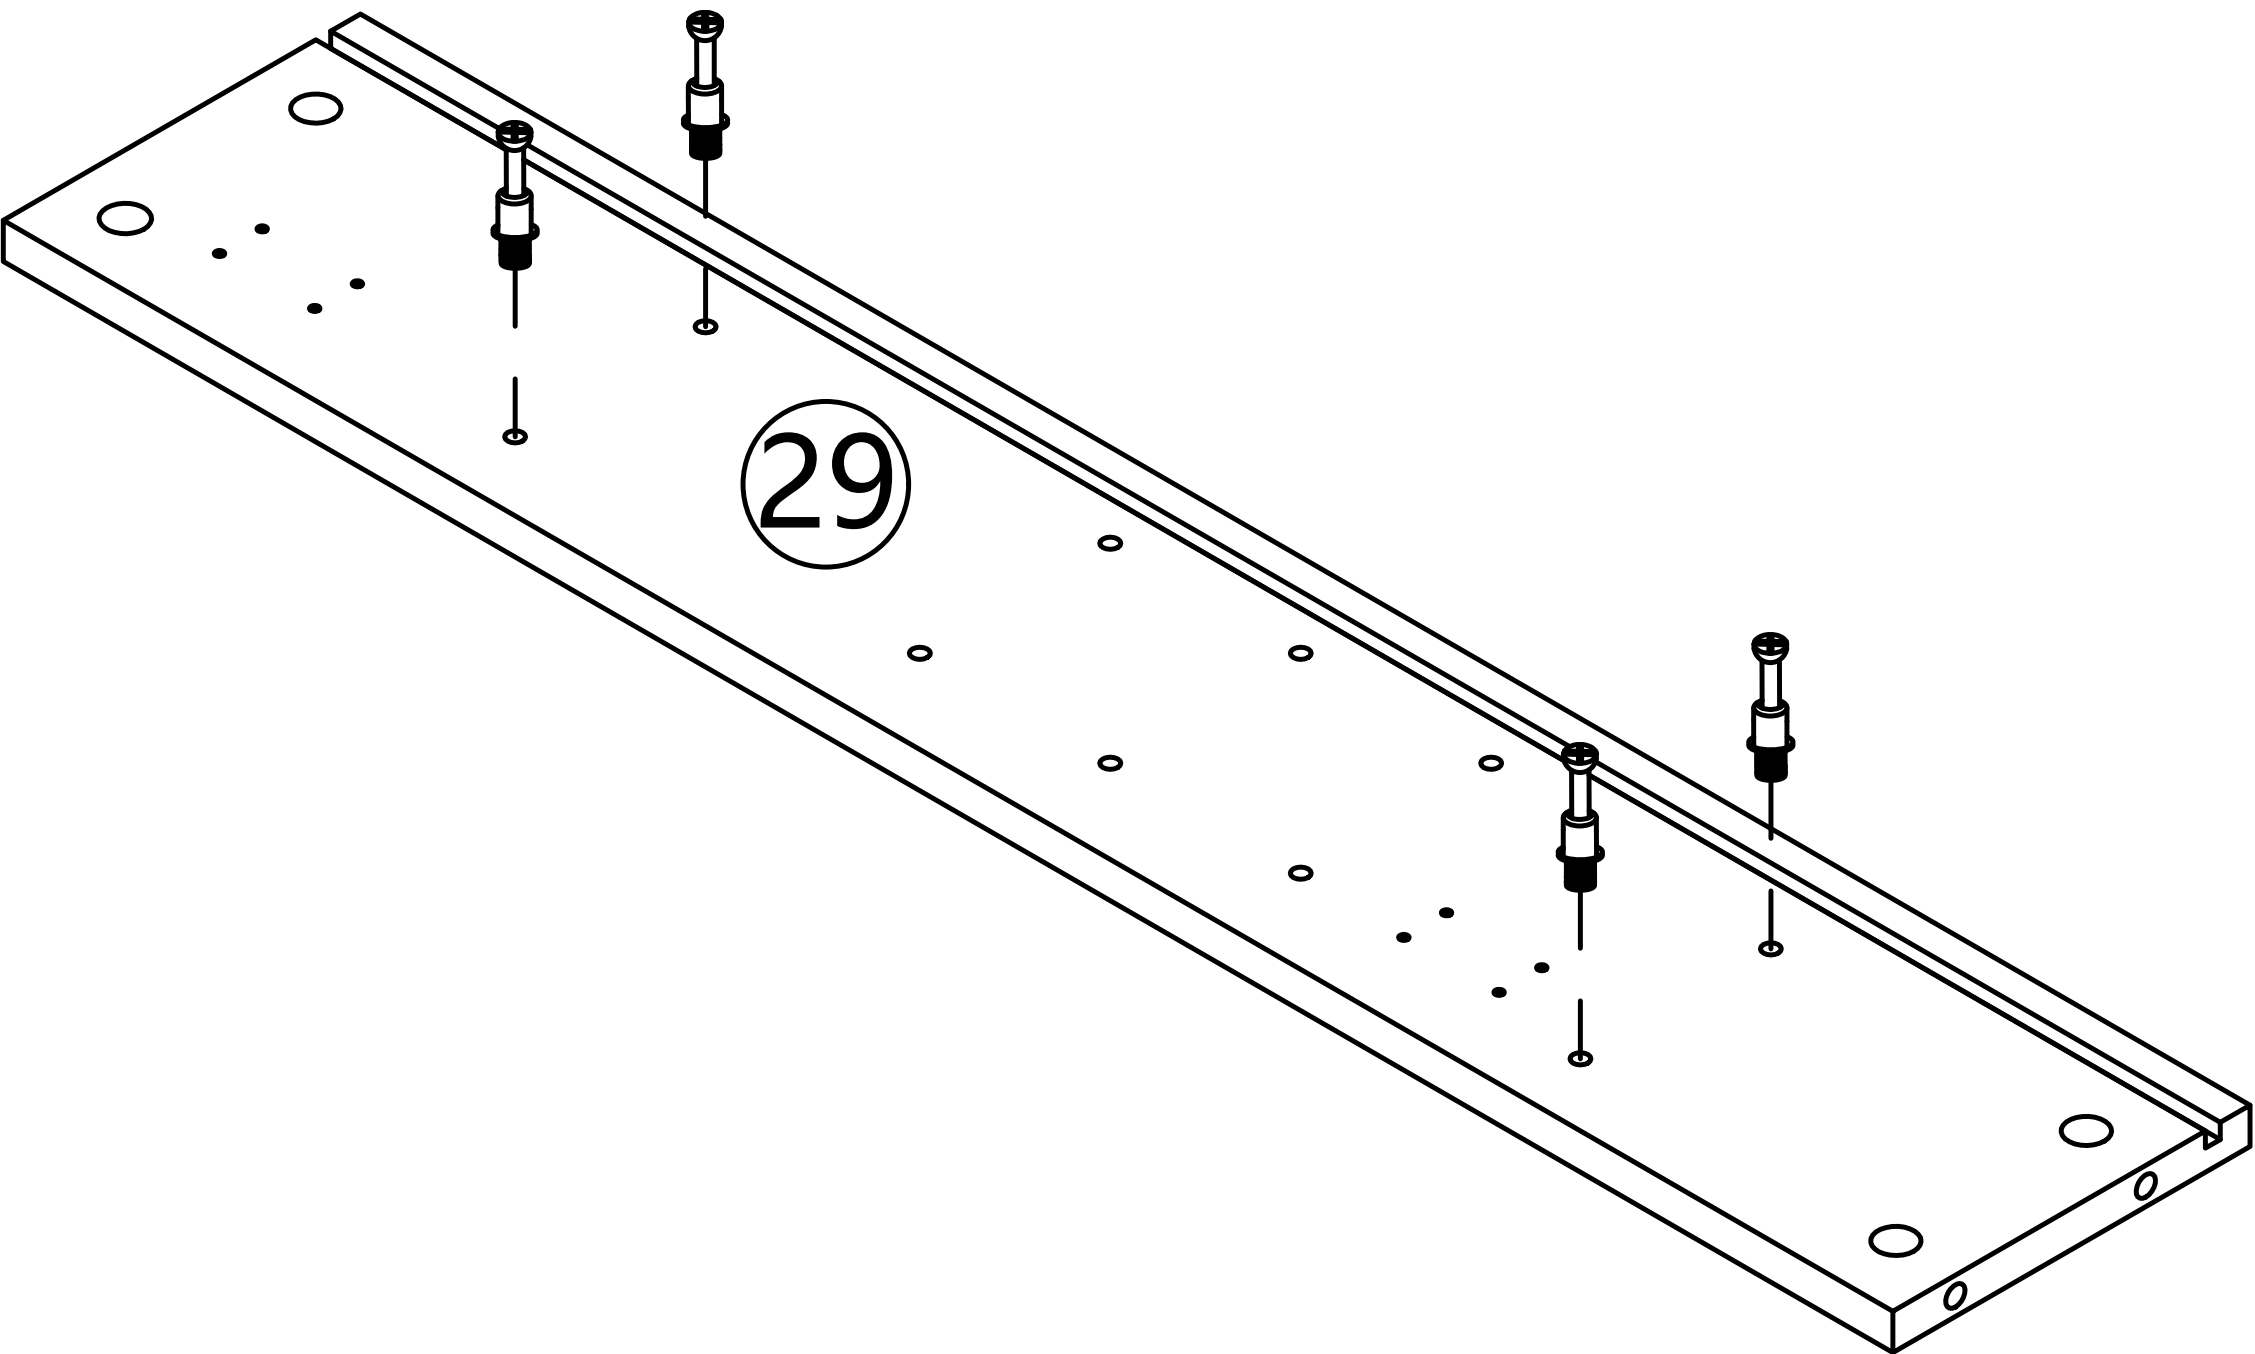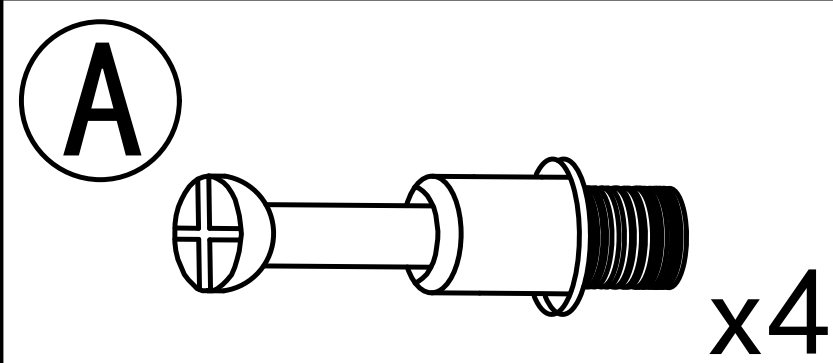



Step 72

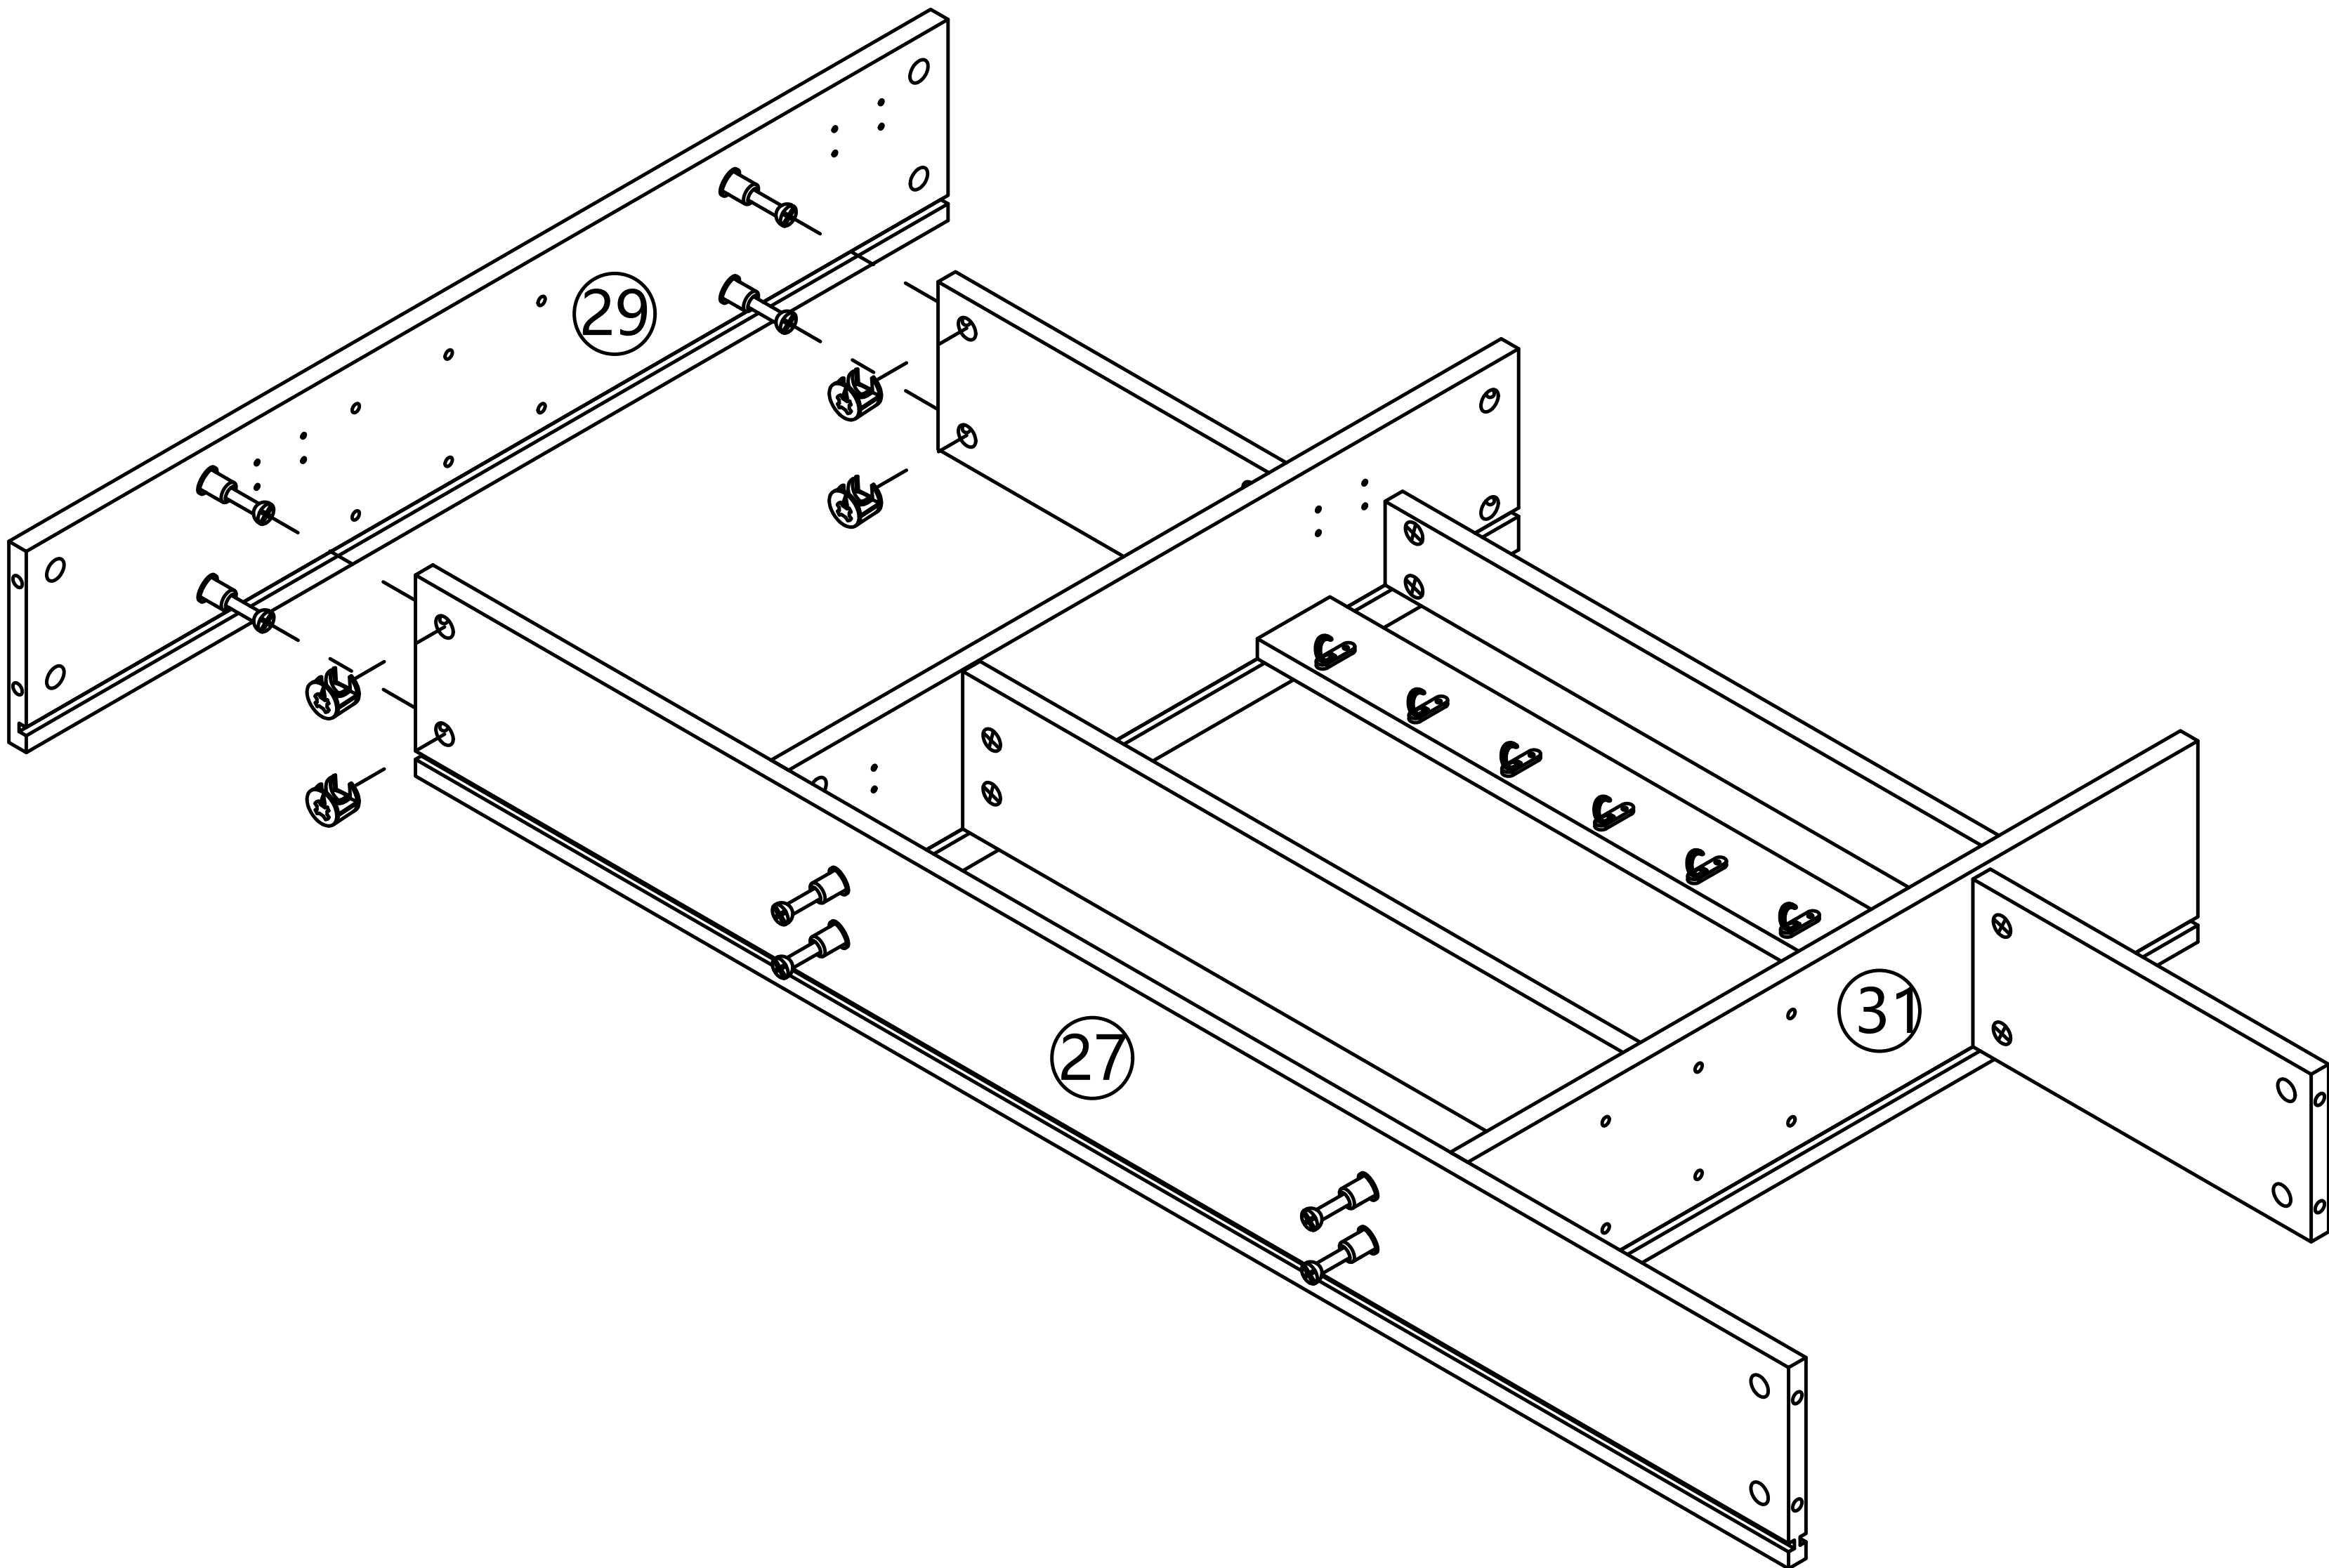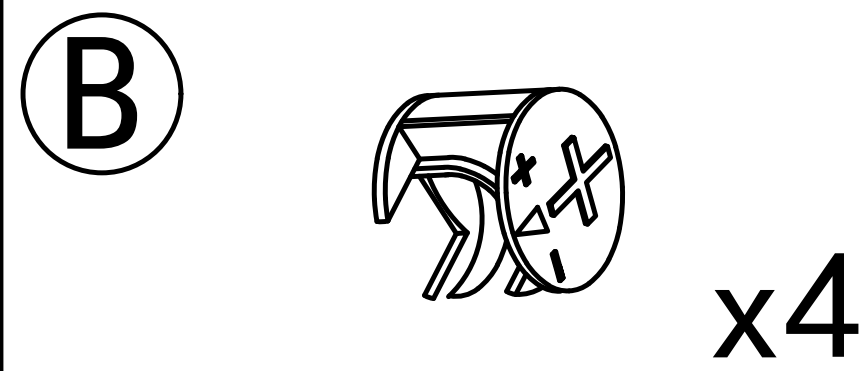

Step 73

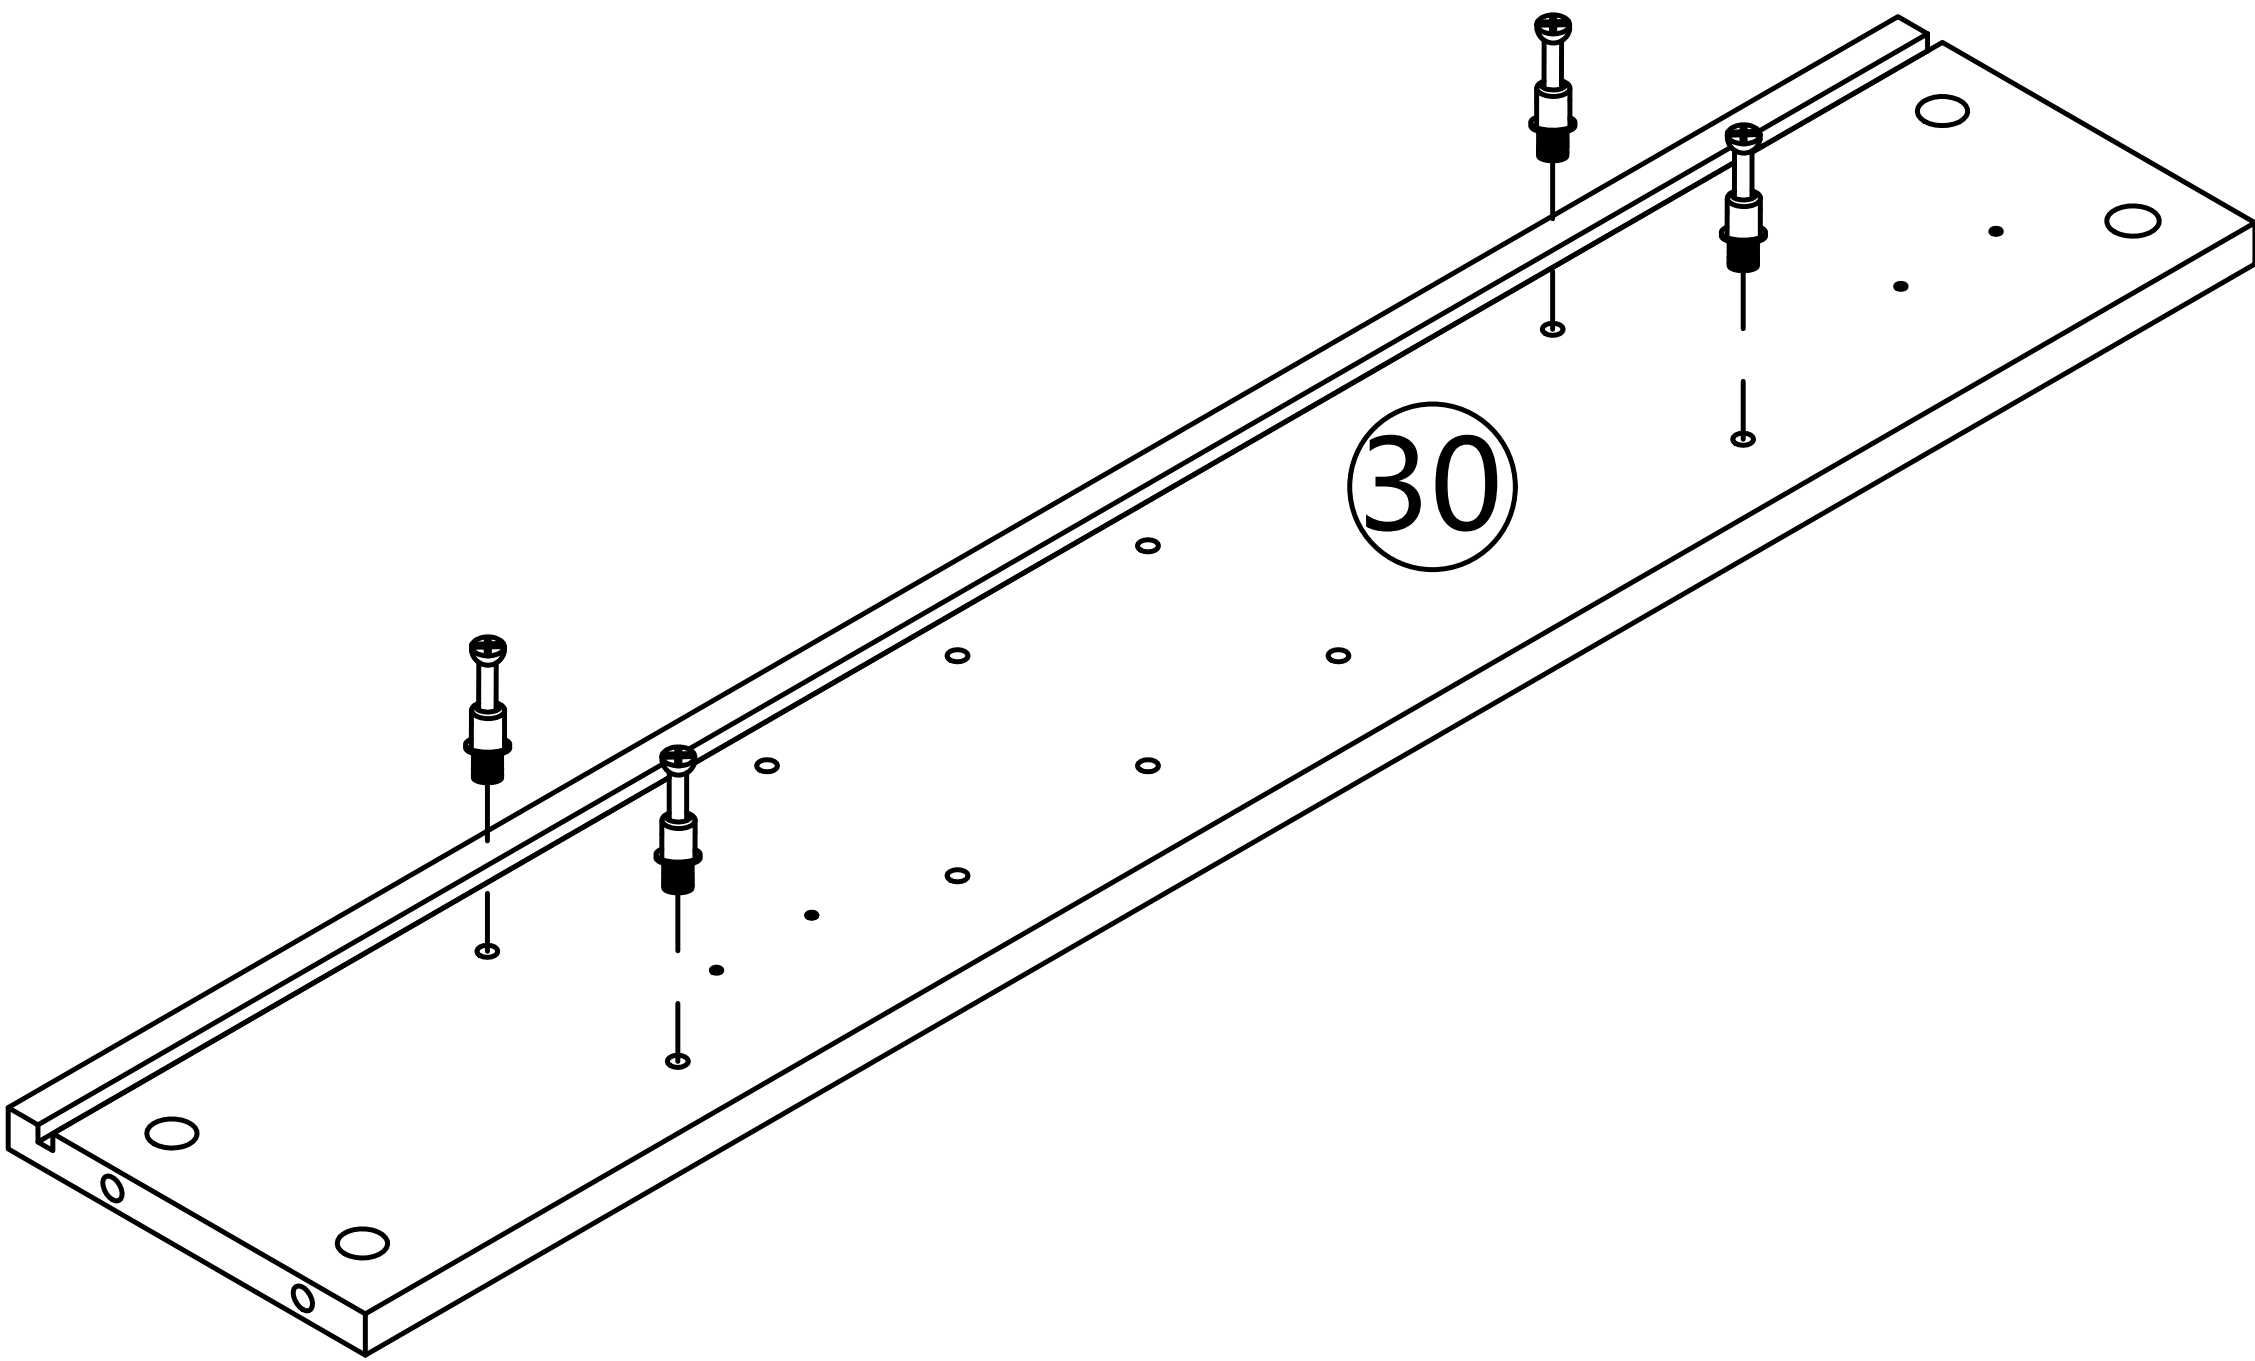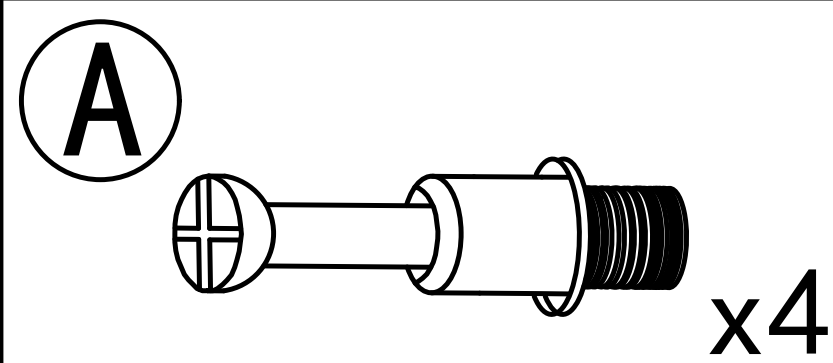


Step 74

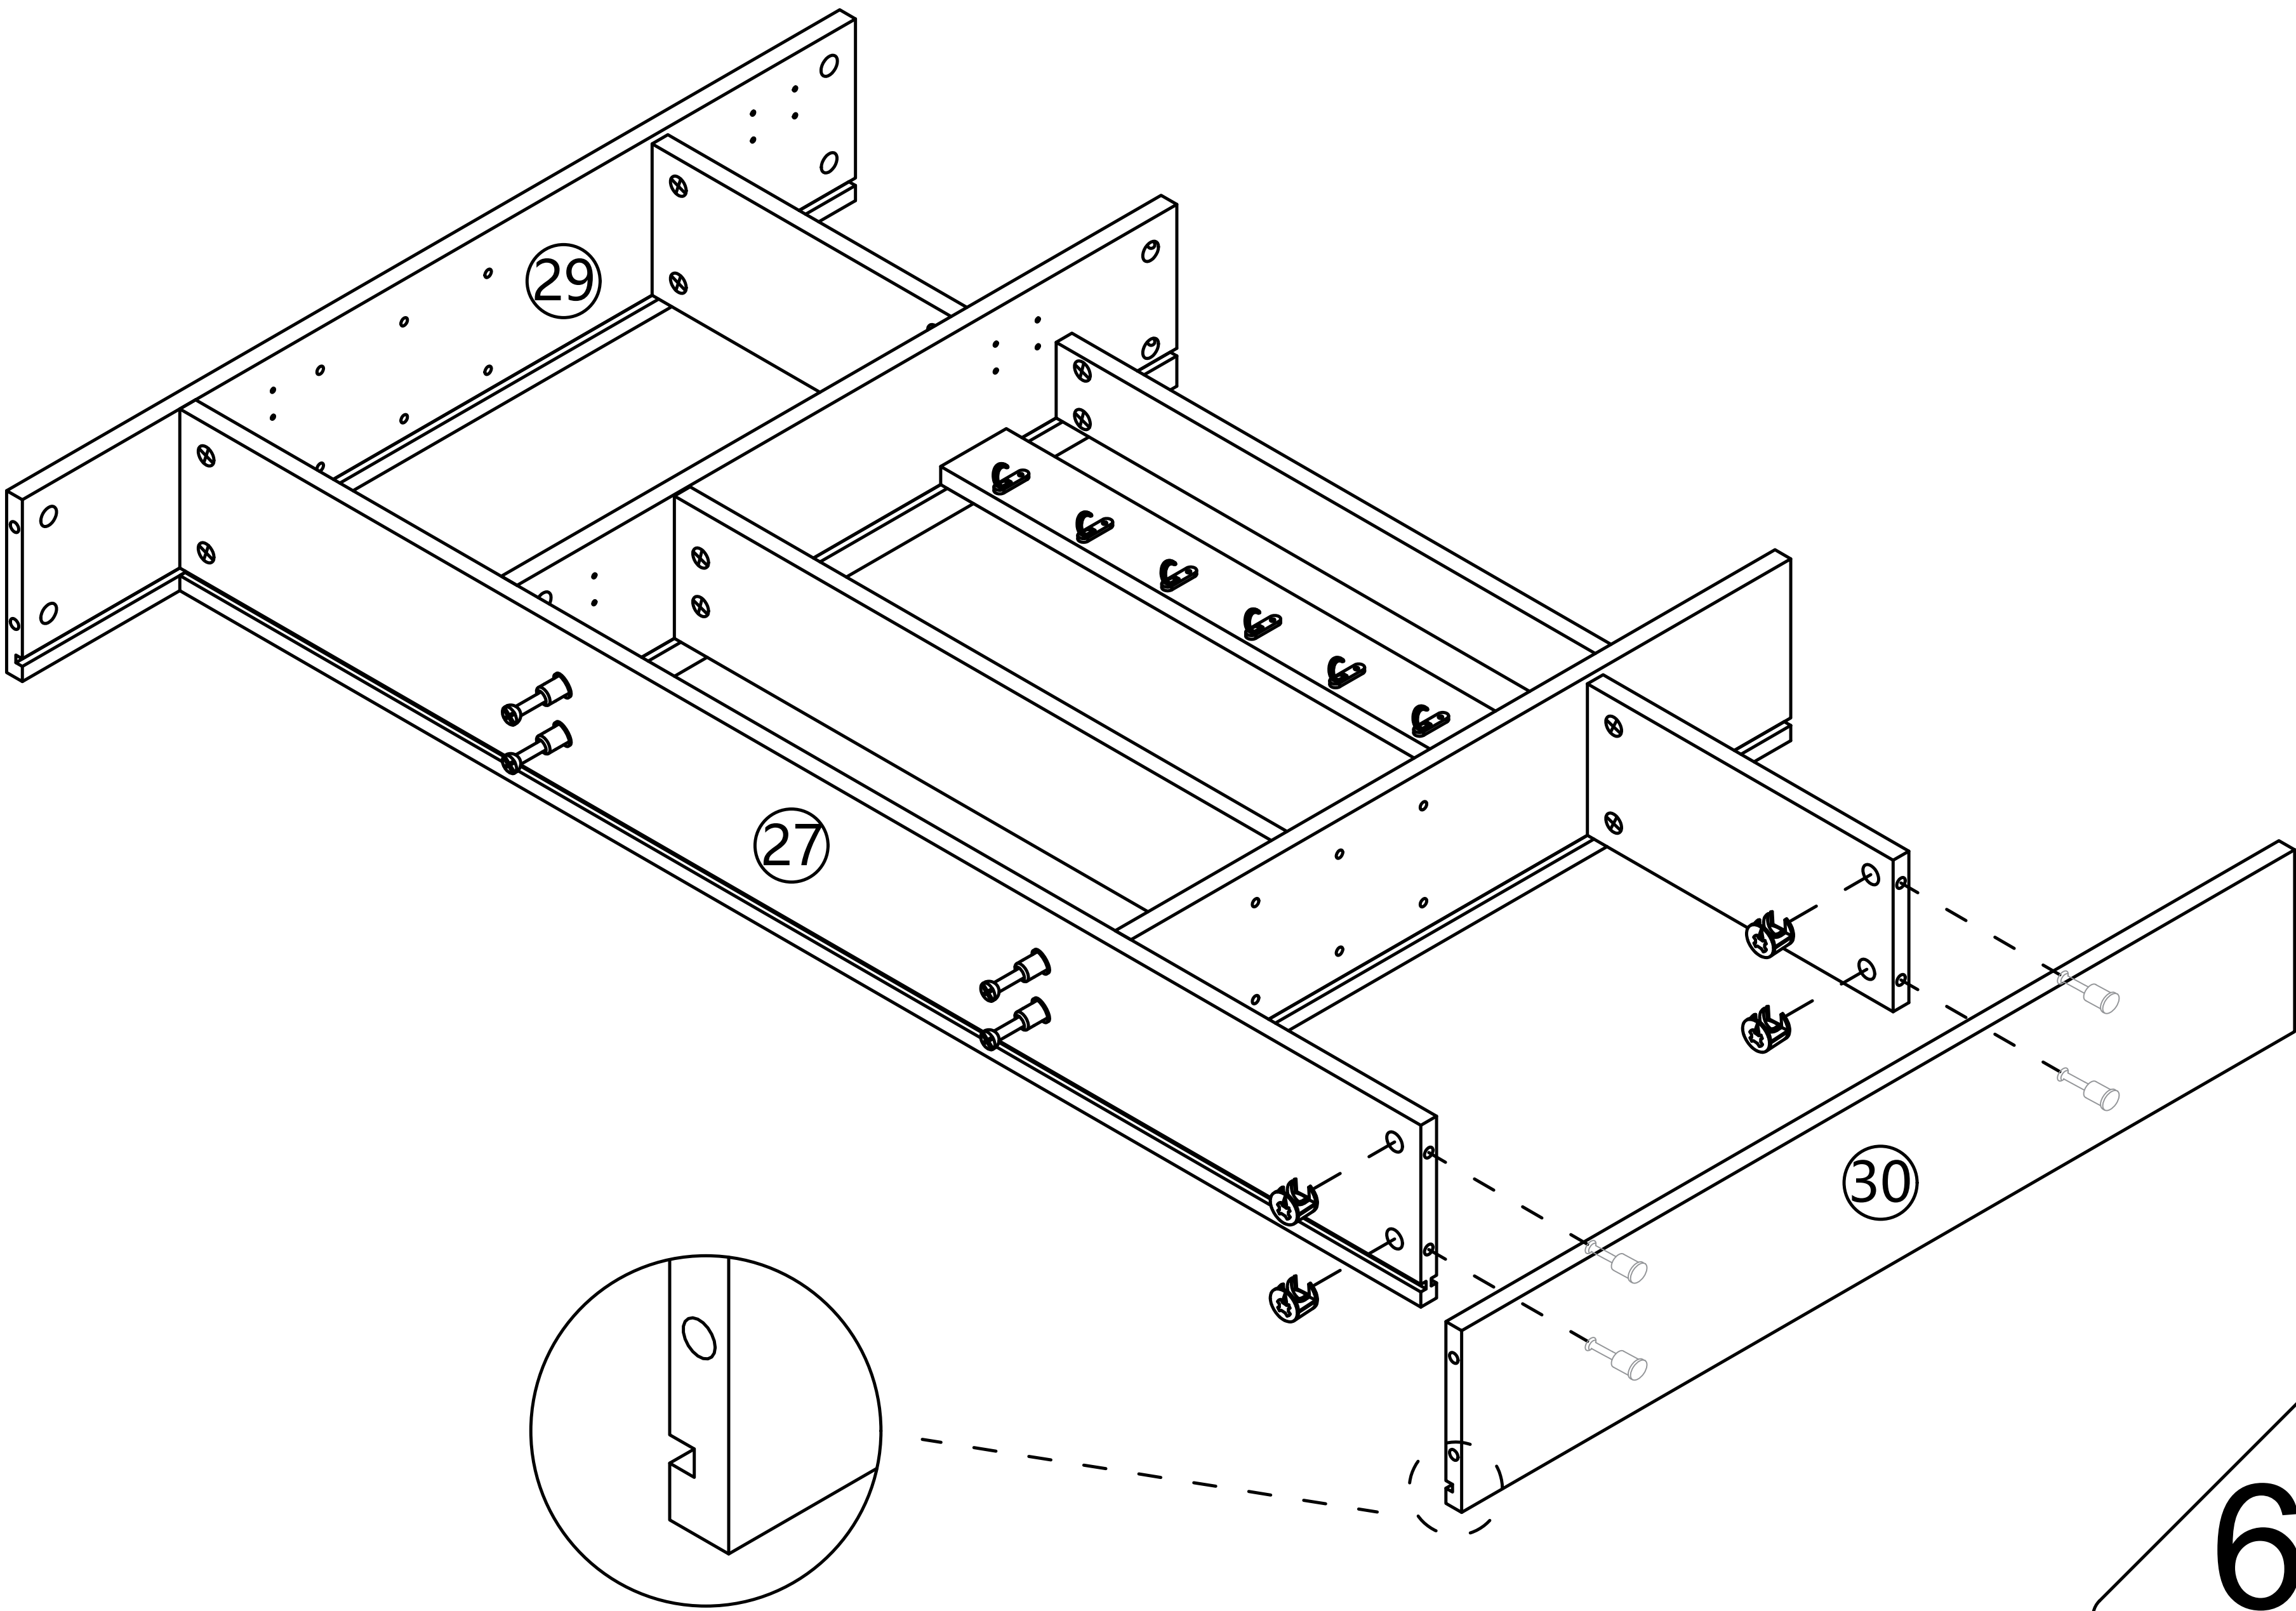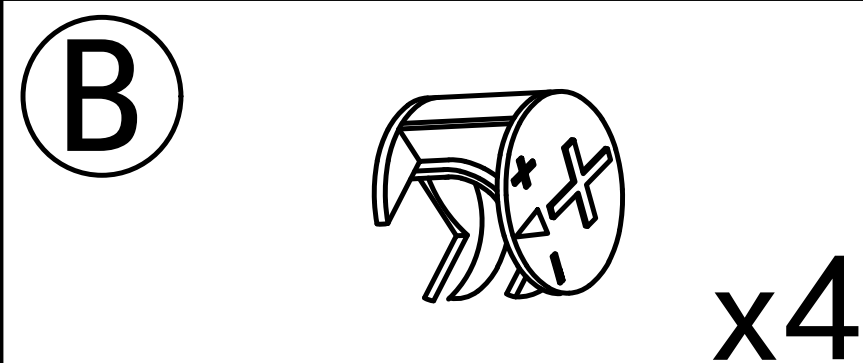


Step 75


B

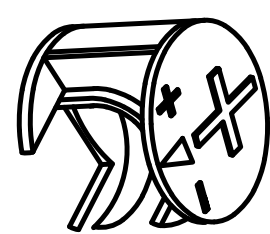


x4


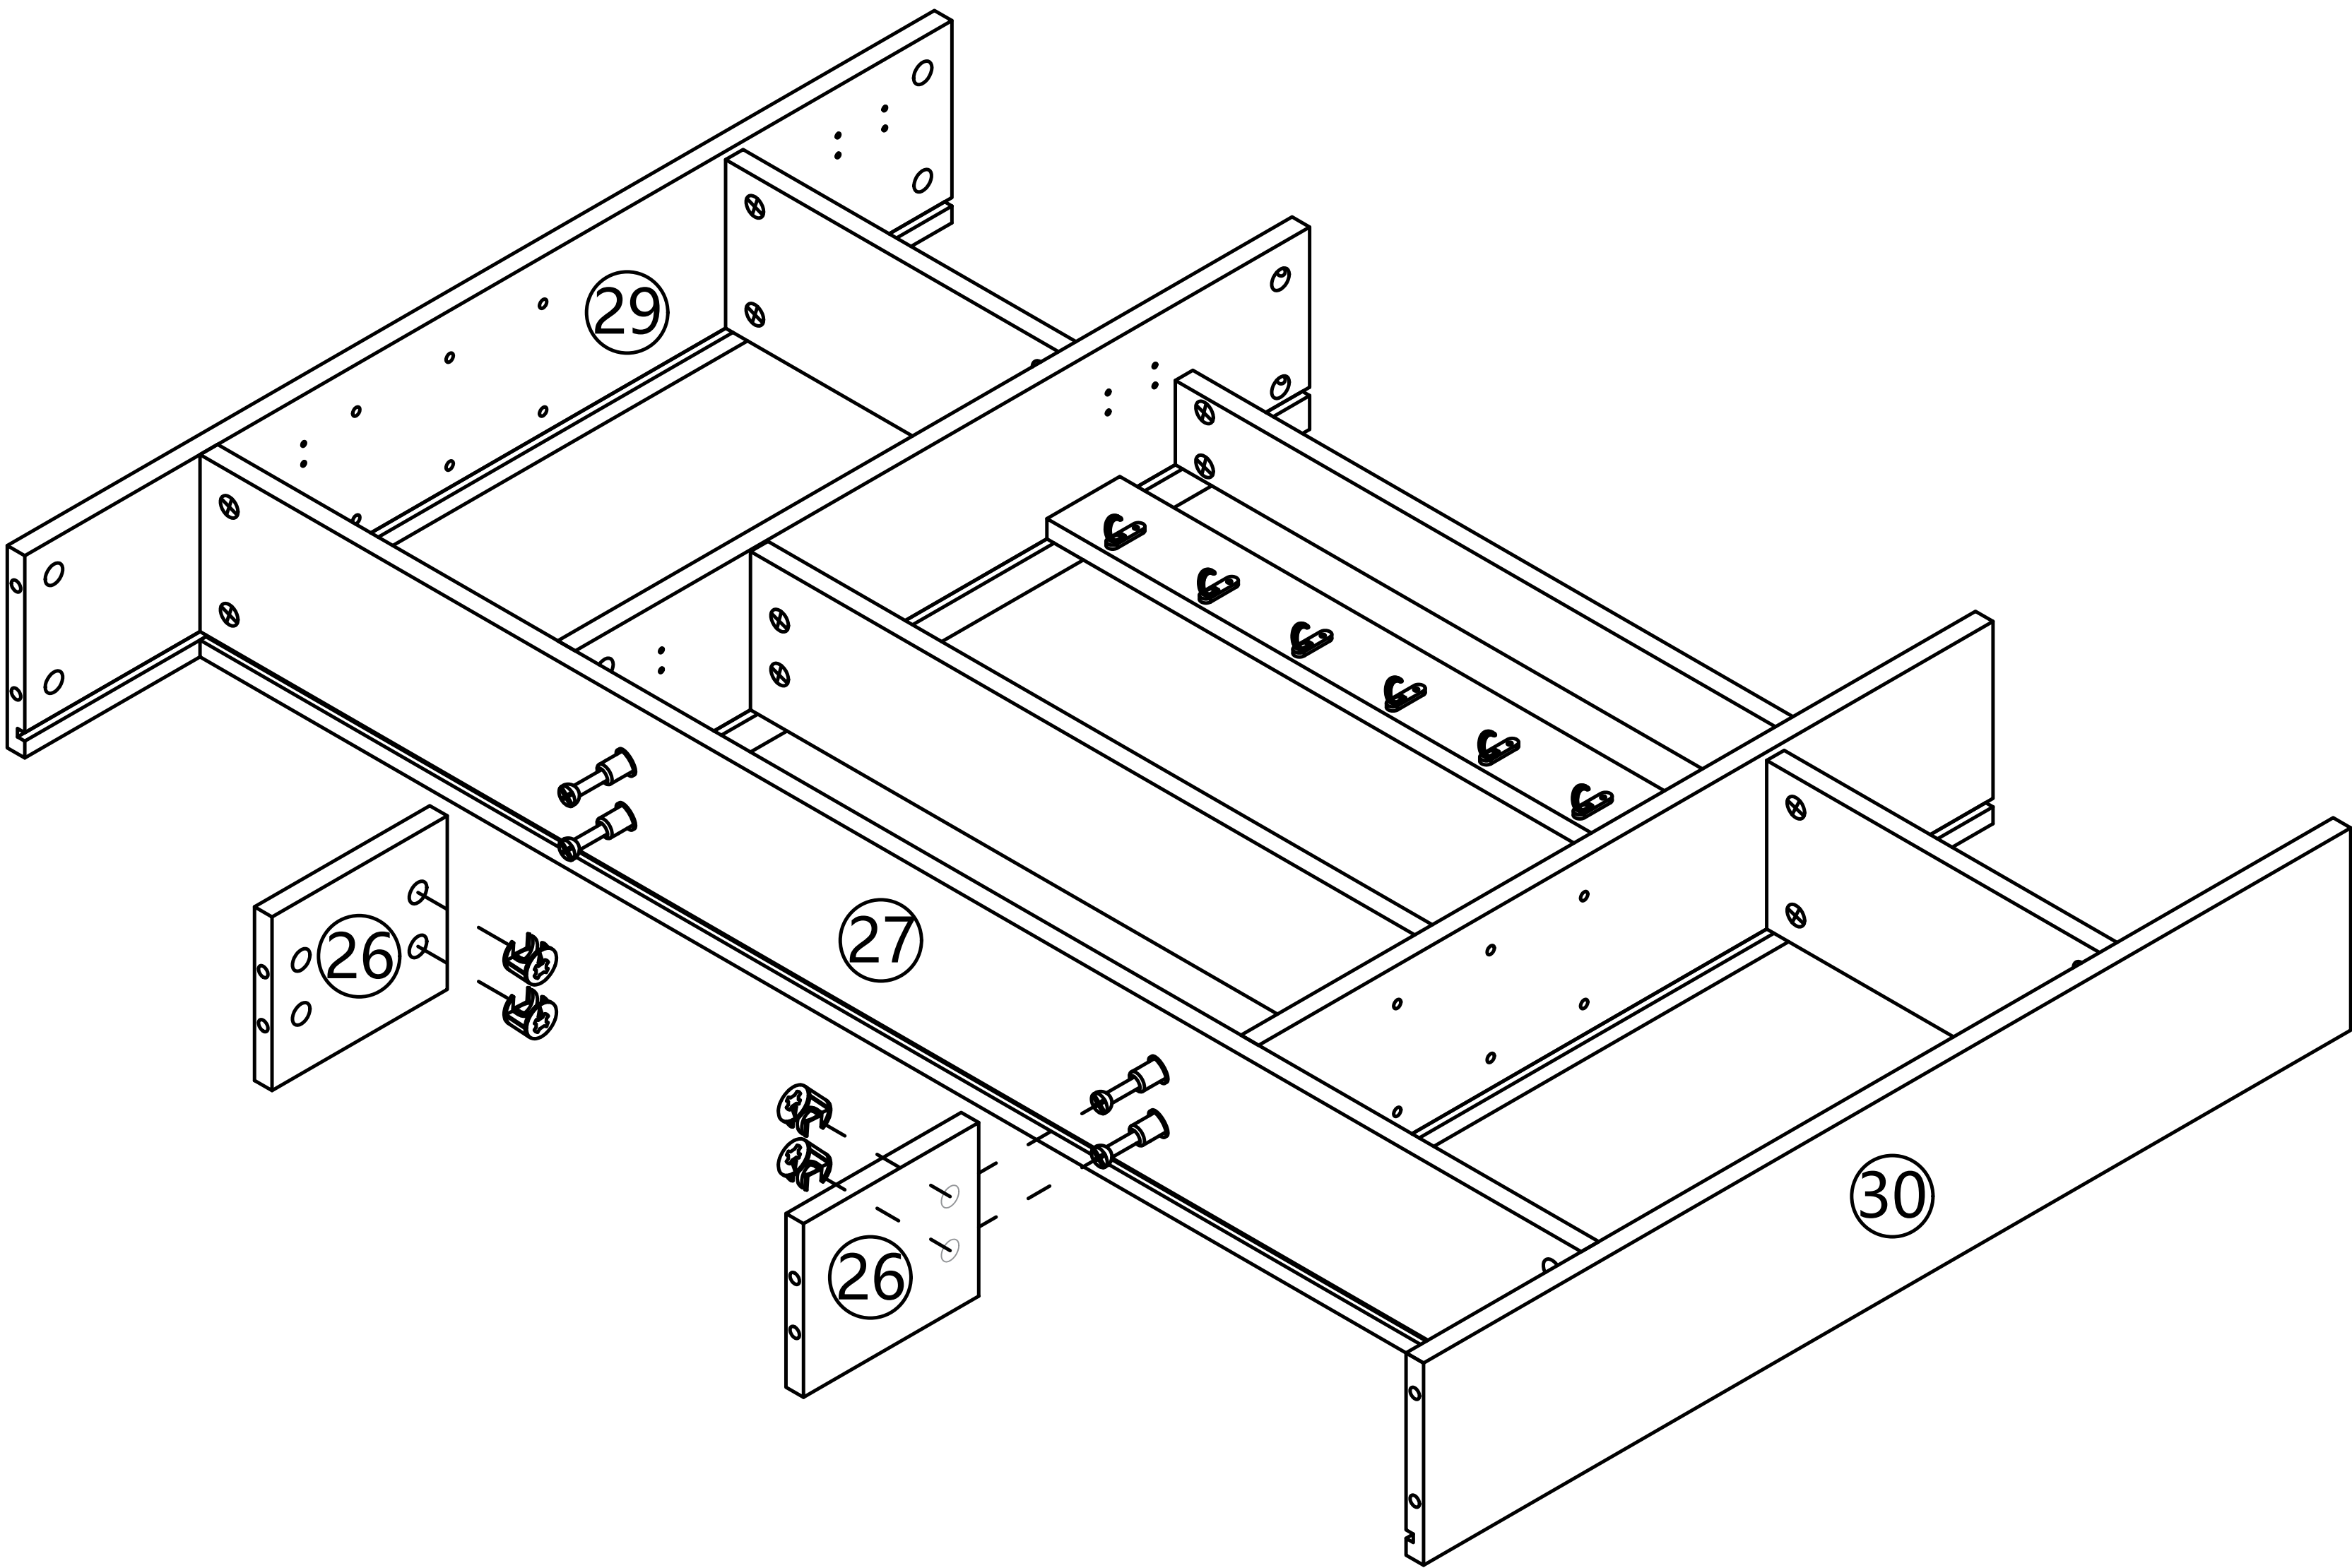


Step 76

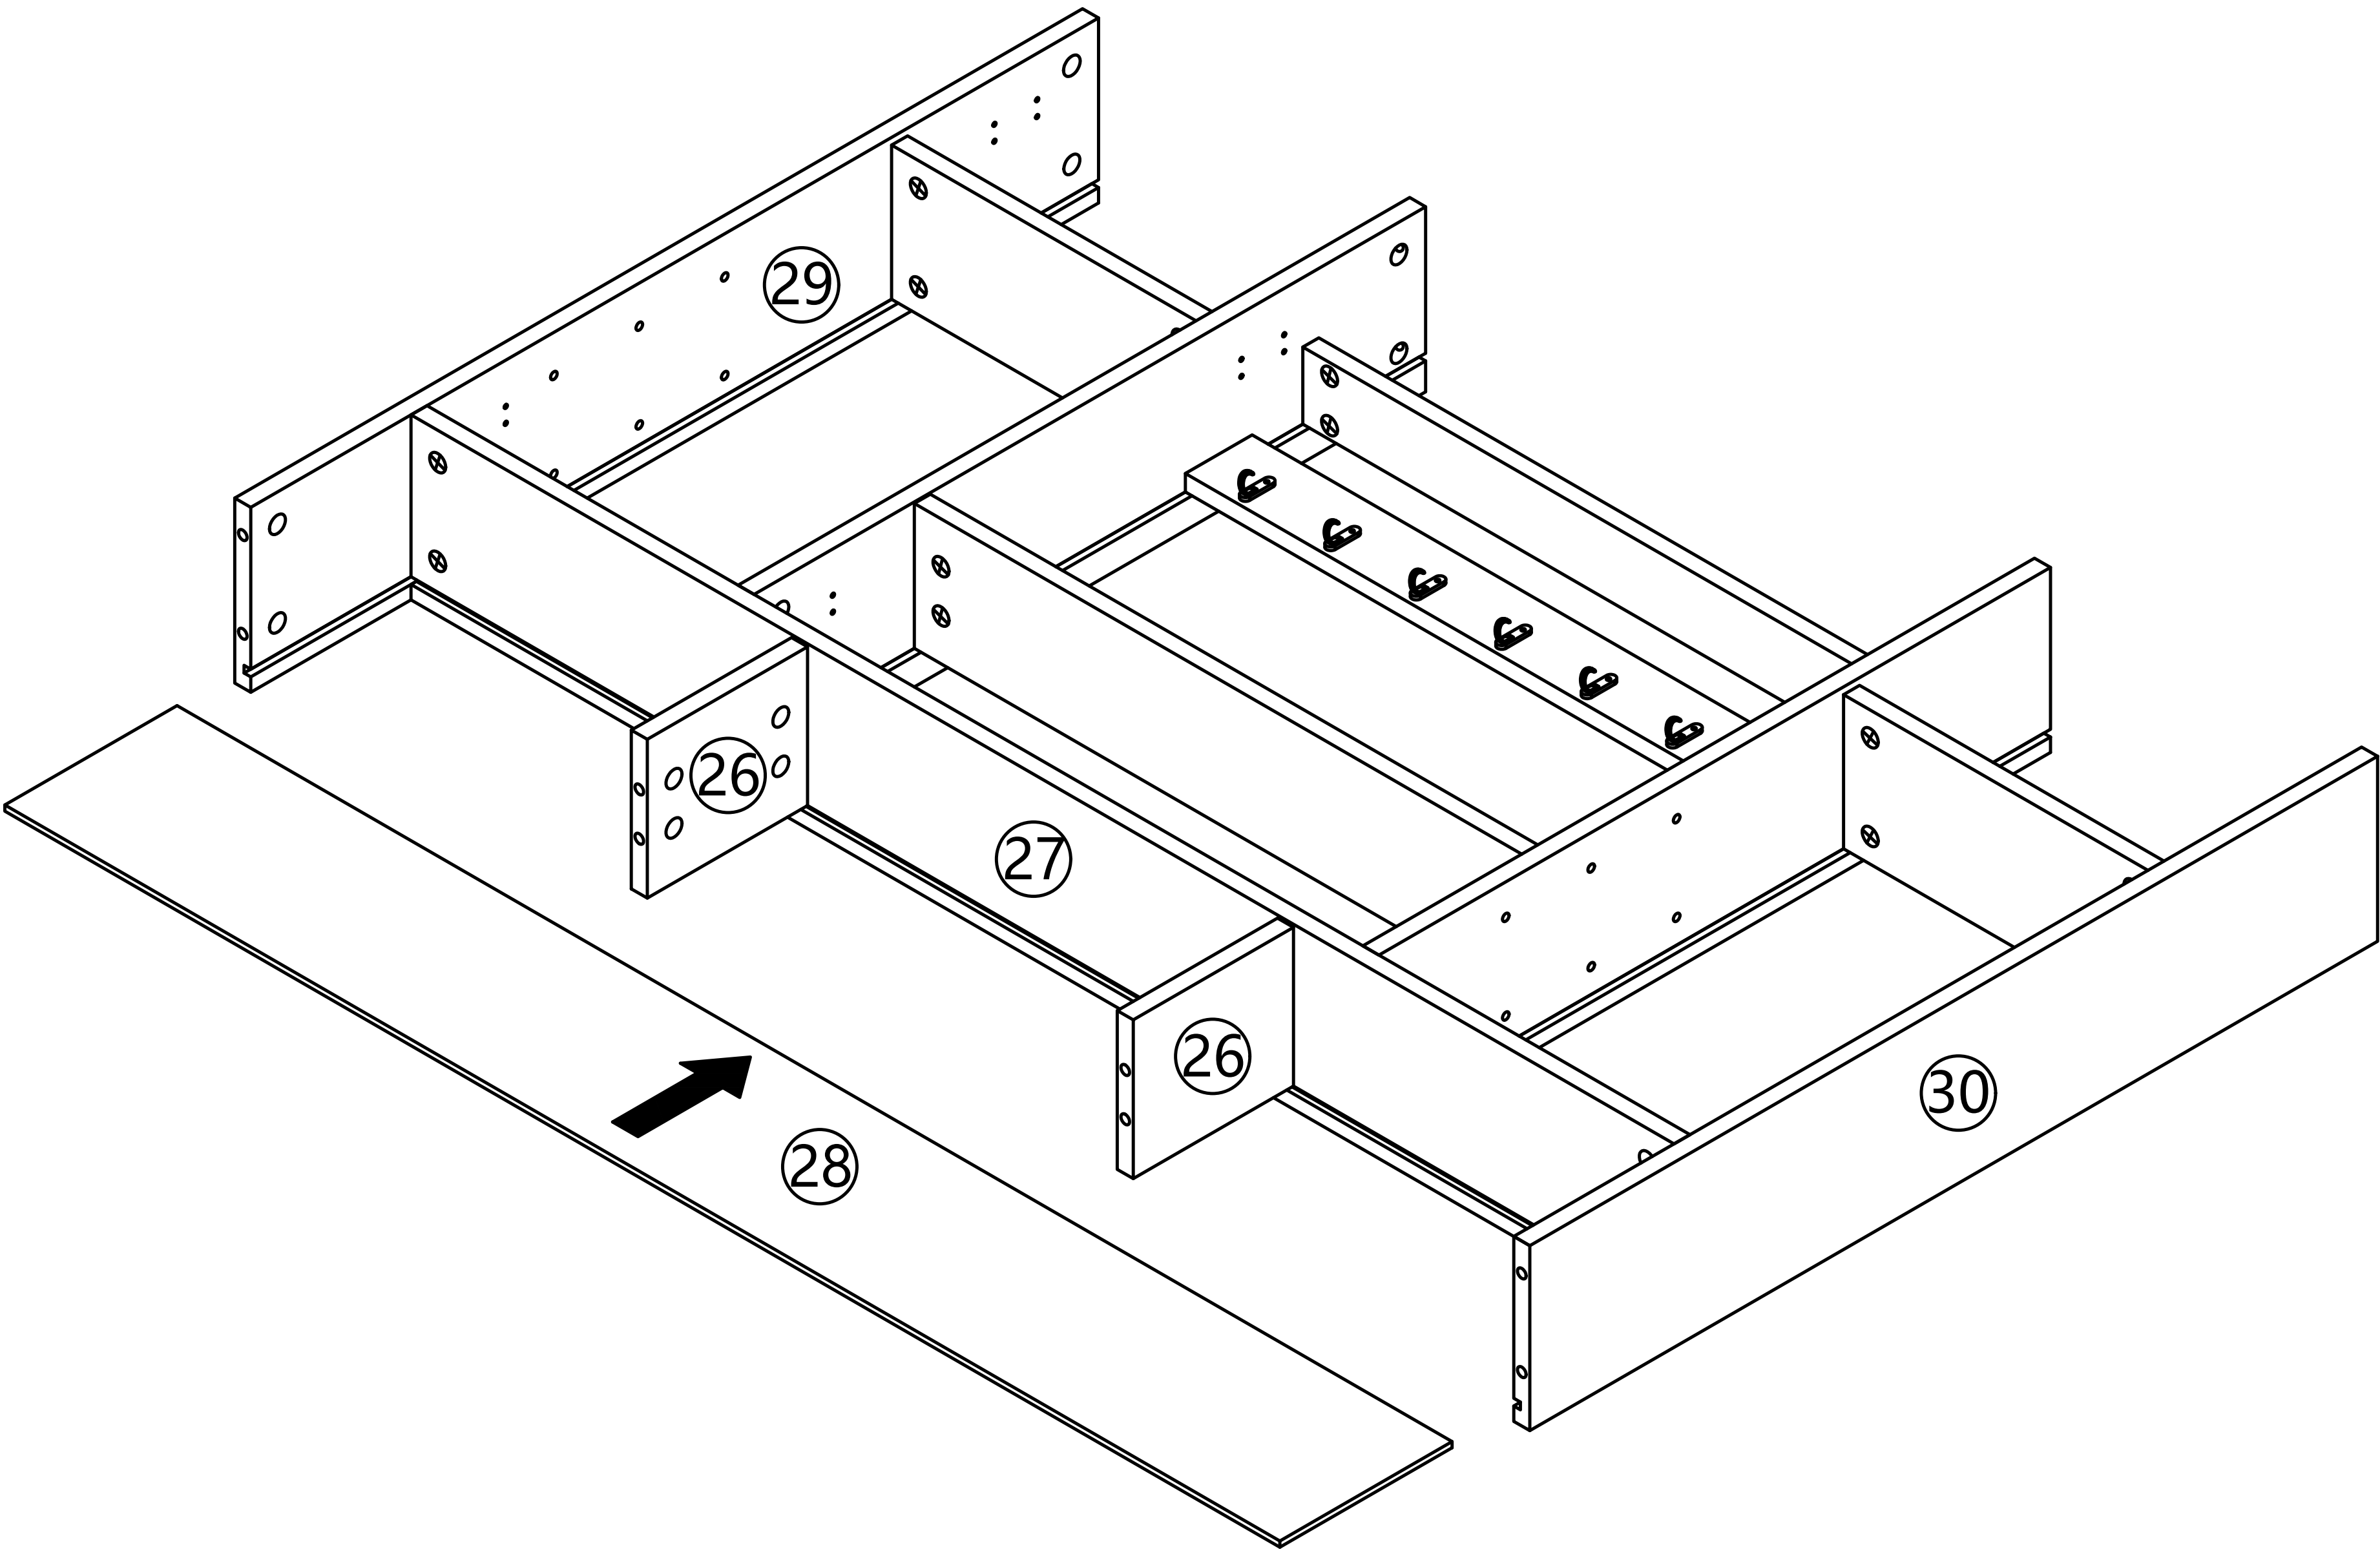


Step 77

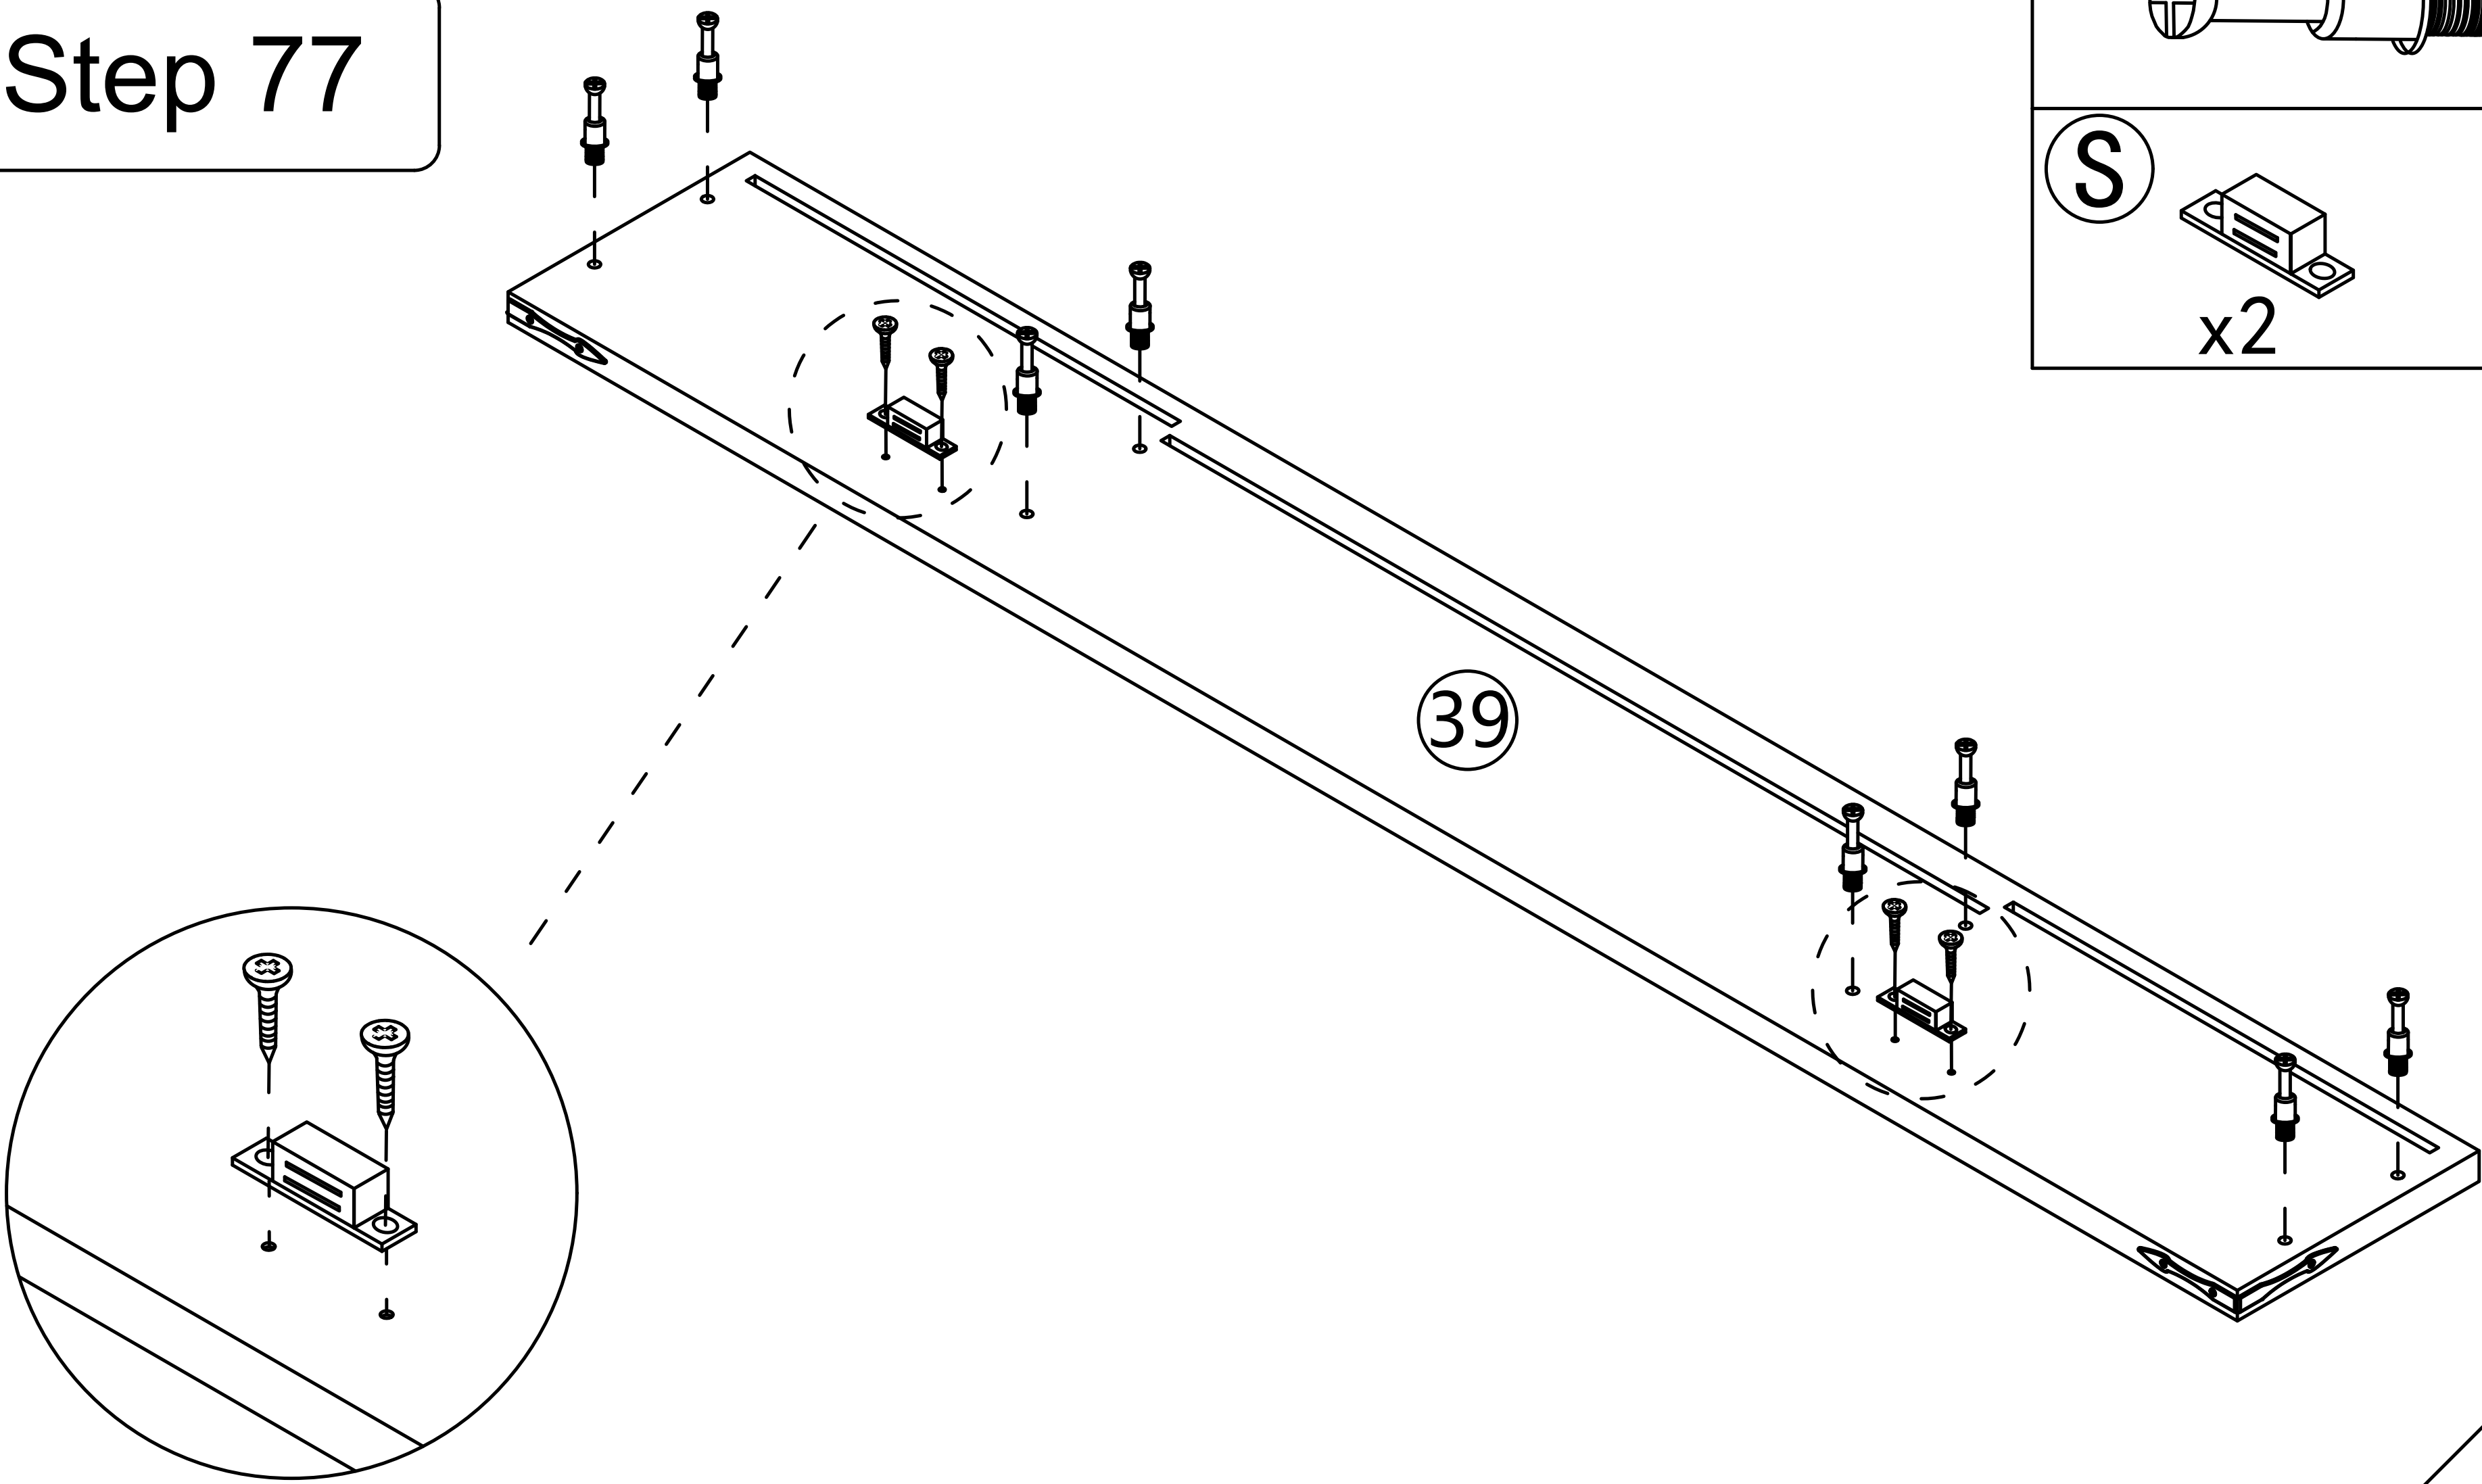

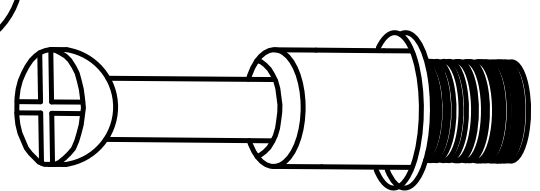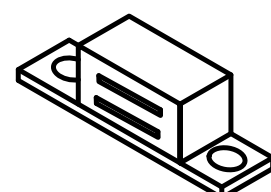
- | |
|---|
| <p>A</p>  <p>x8</p> |
| <p>S</p>  <p>x2</p>  <p>x4</p> |

Step 78


B

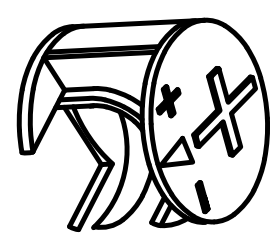

x8

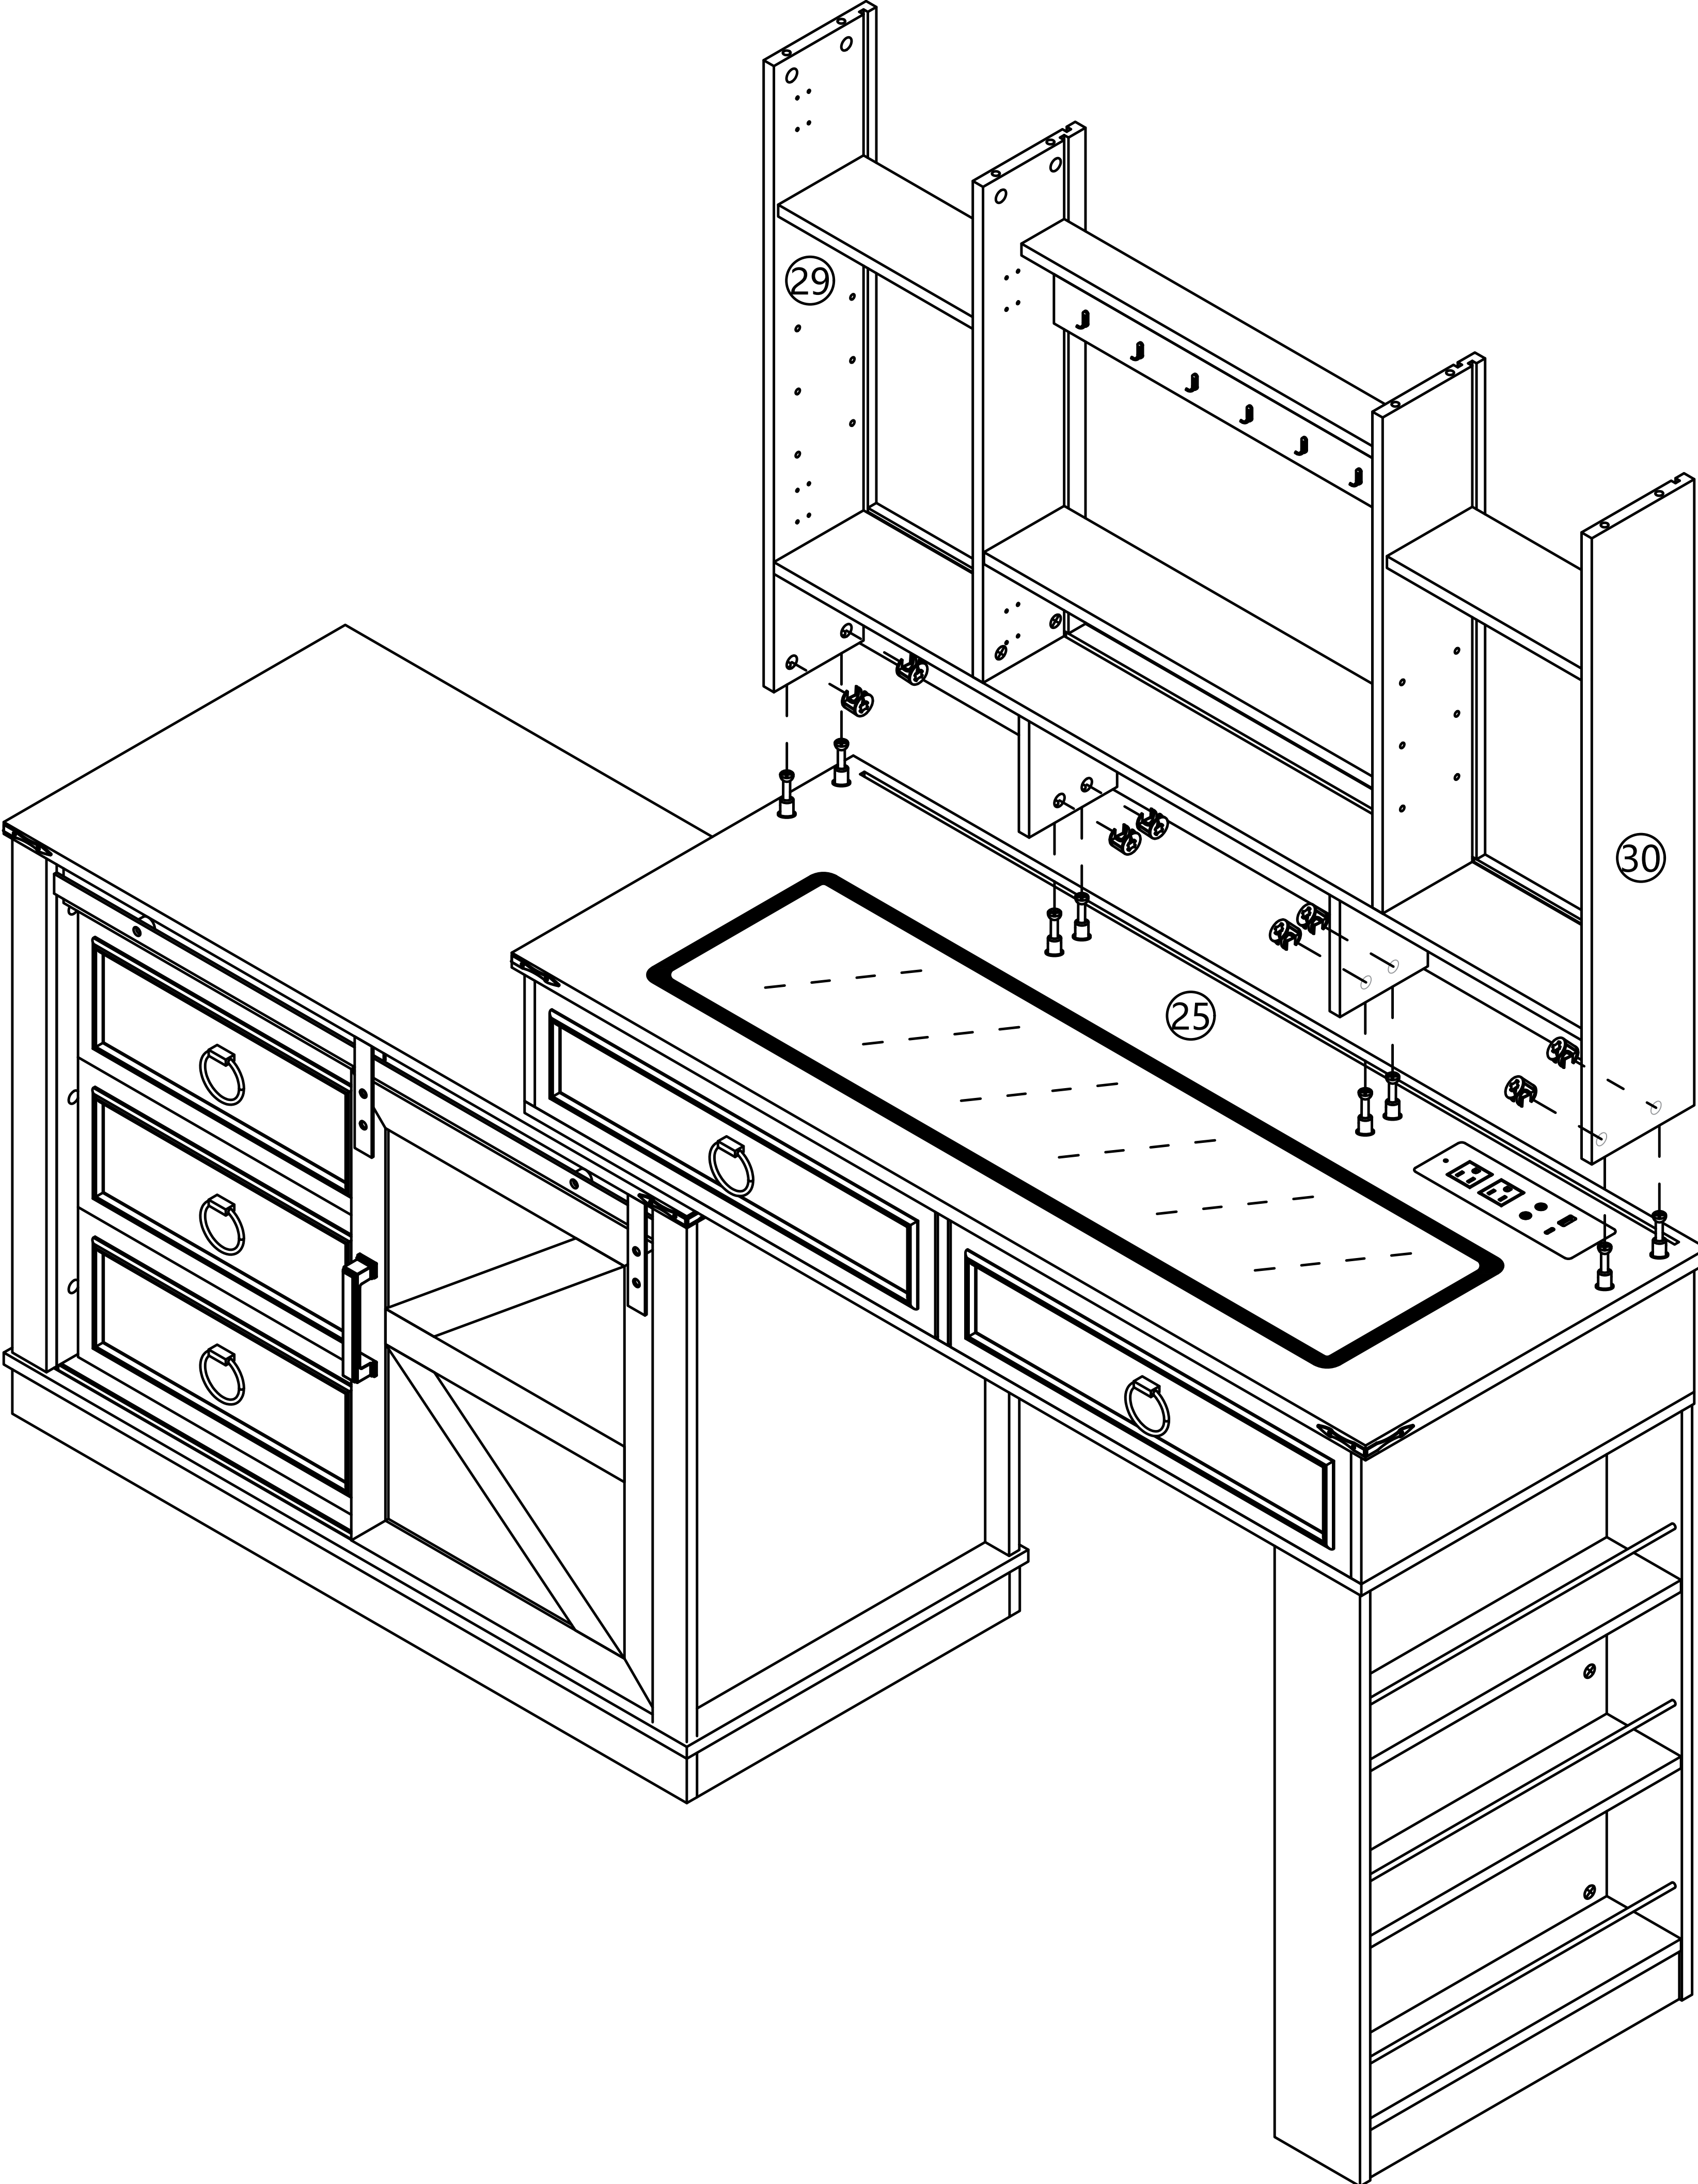


Step 79

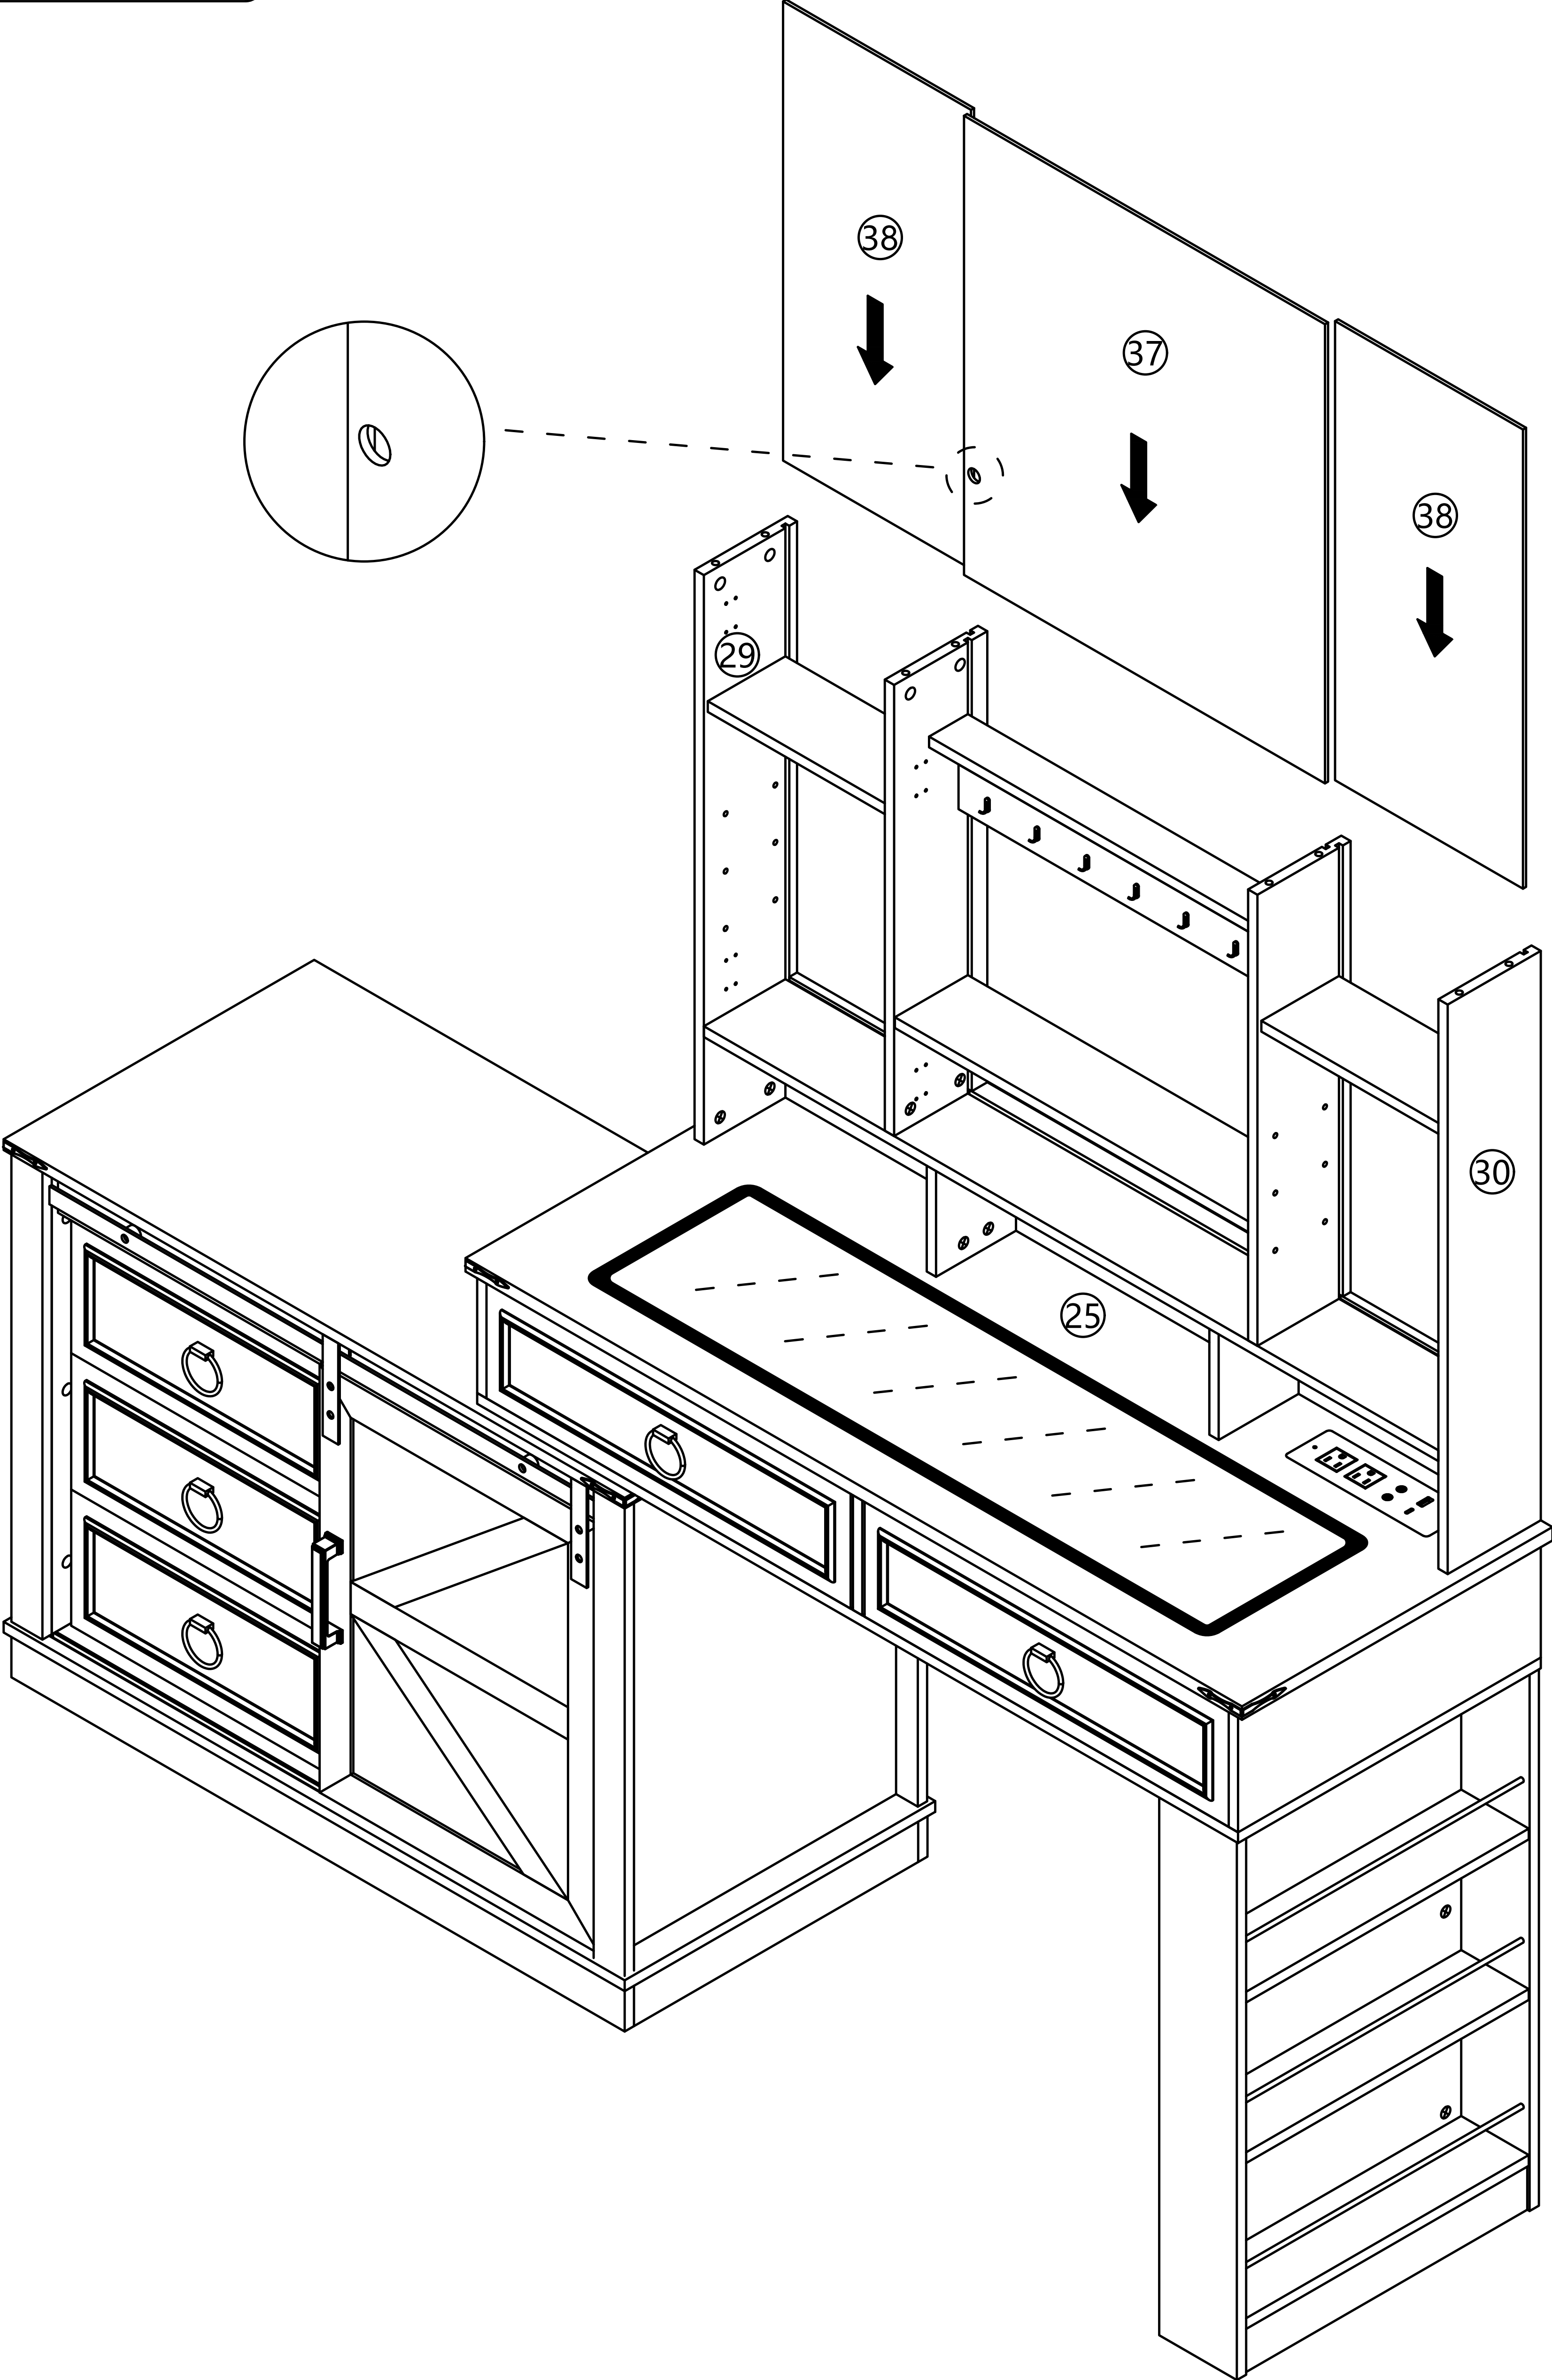


Step 80

B

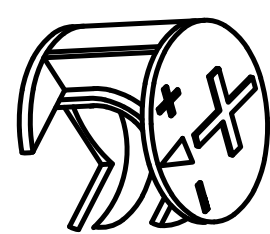


x8

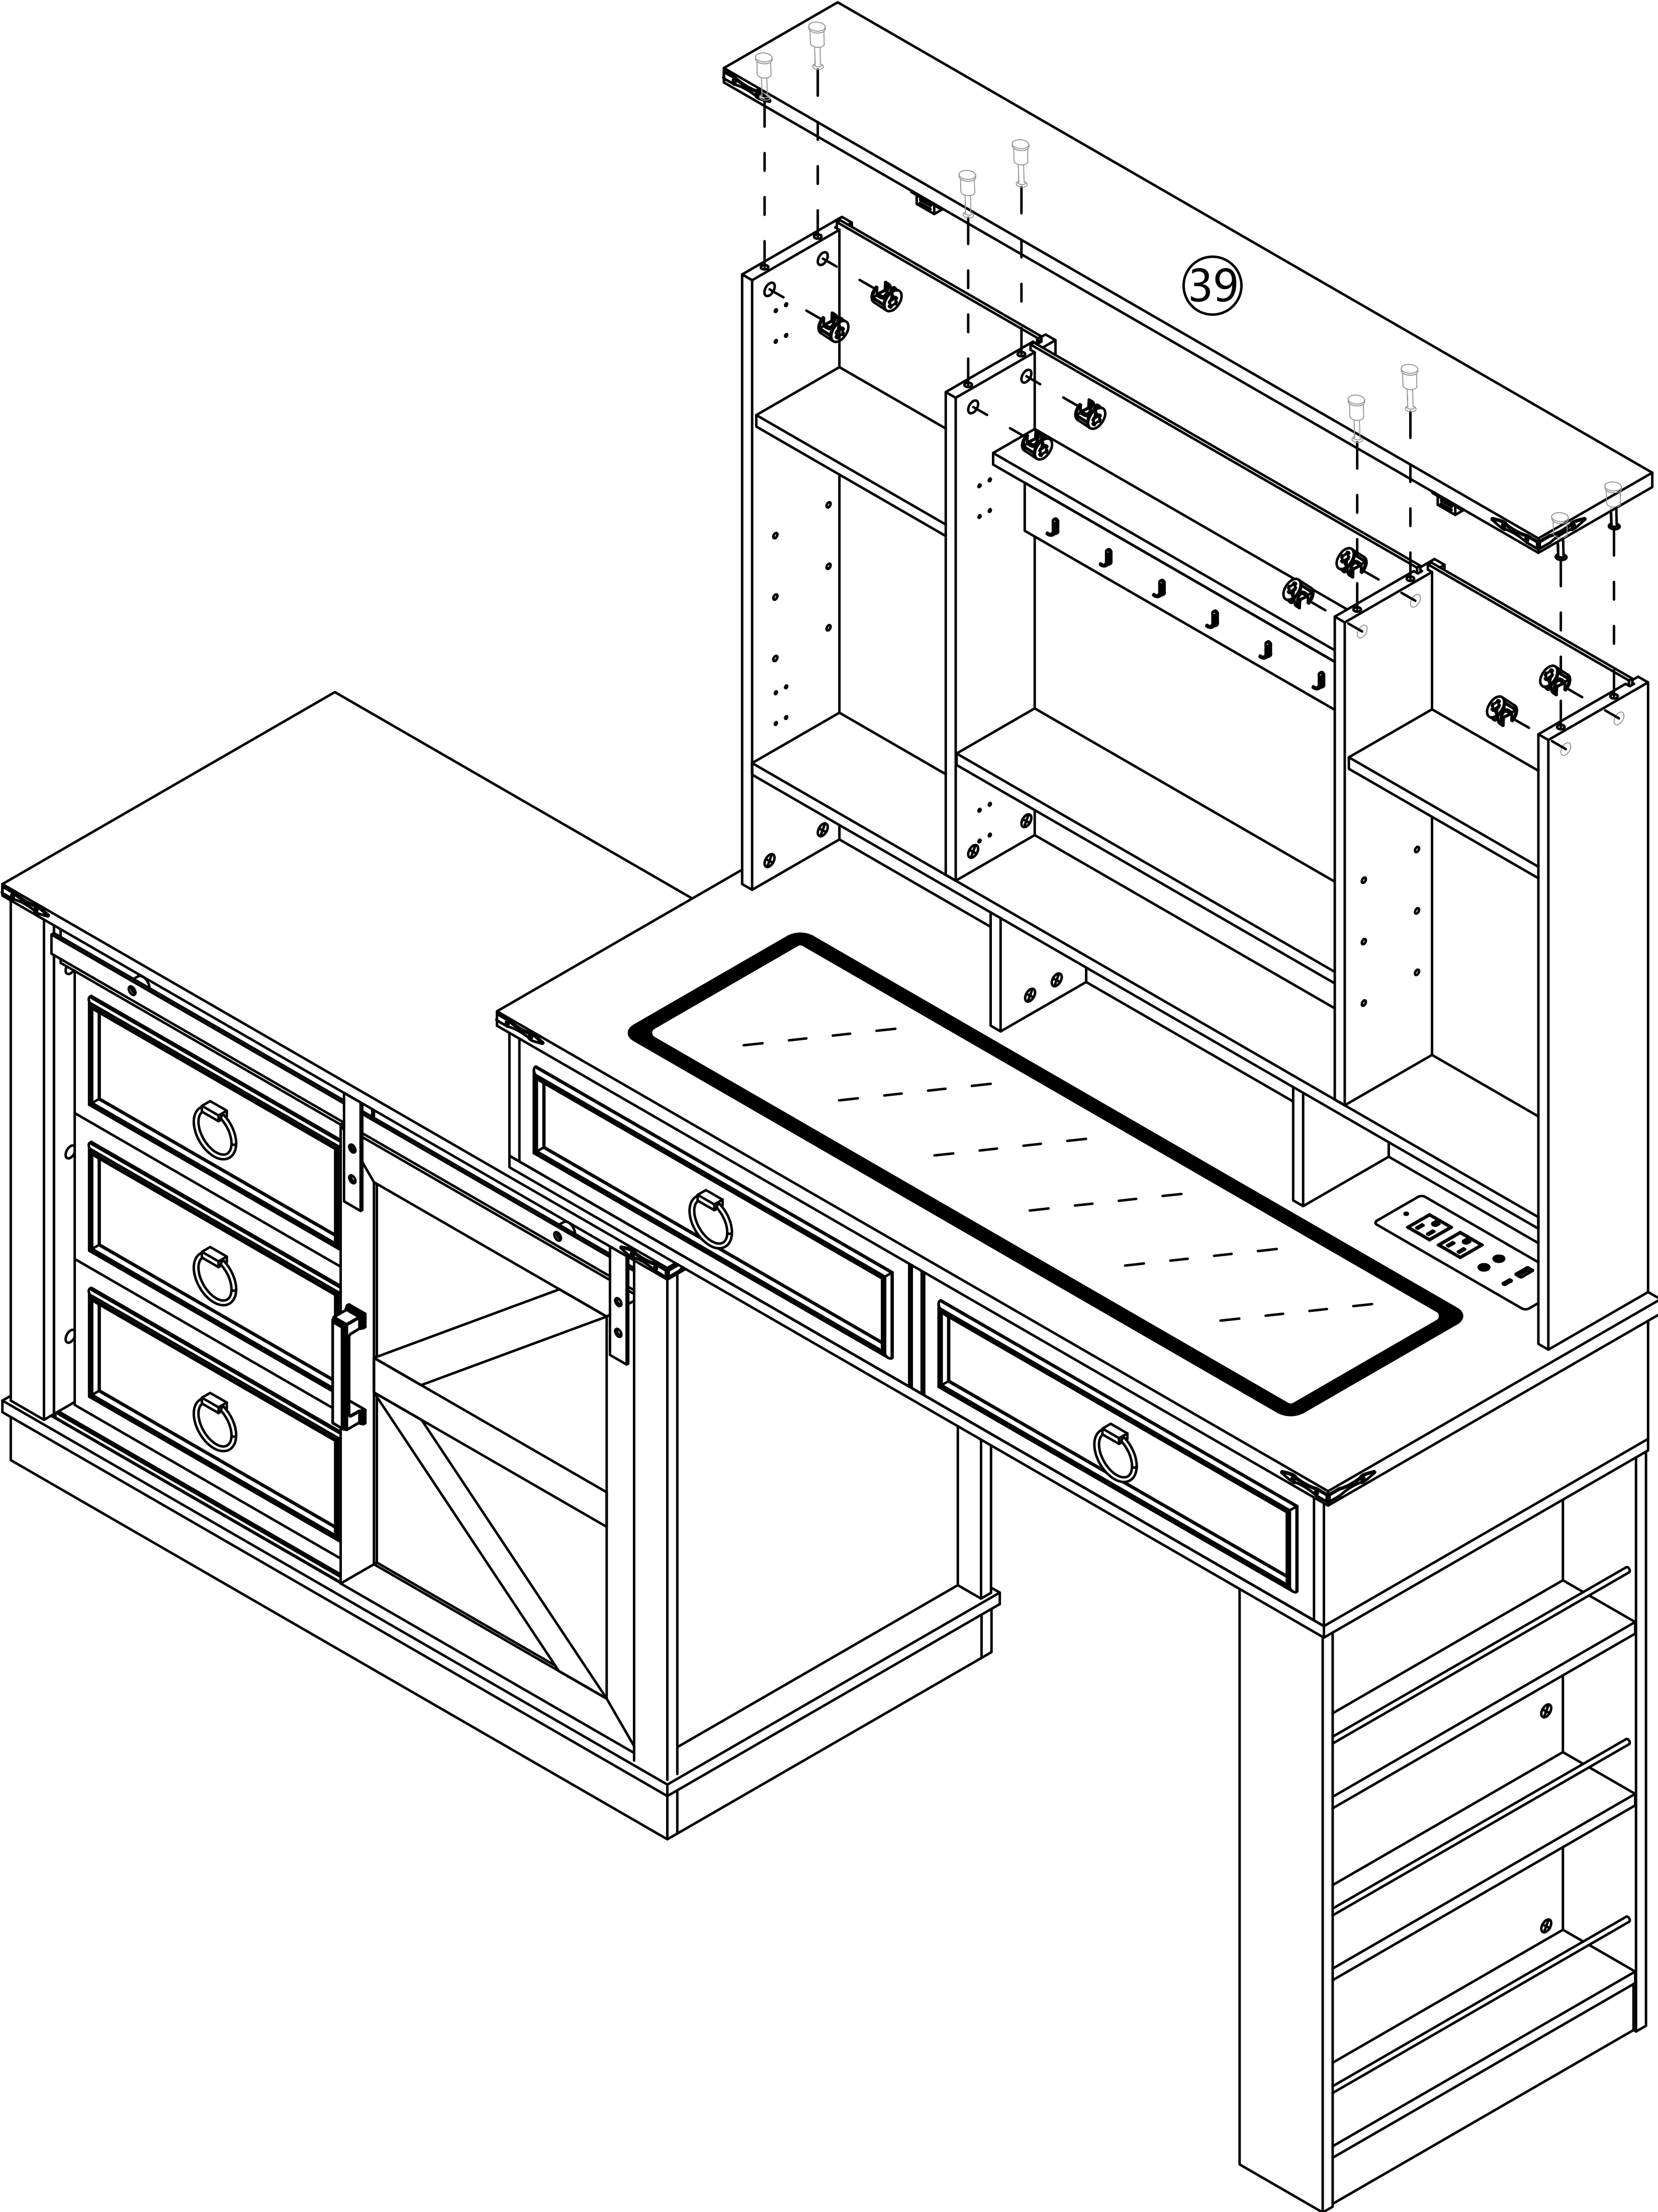


Step 81

Attention: First, peel off the white paper from the sponge and place it between the 36th and 39th boards. Once the position is appropriate, press the sponge onto the 37th board

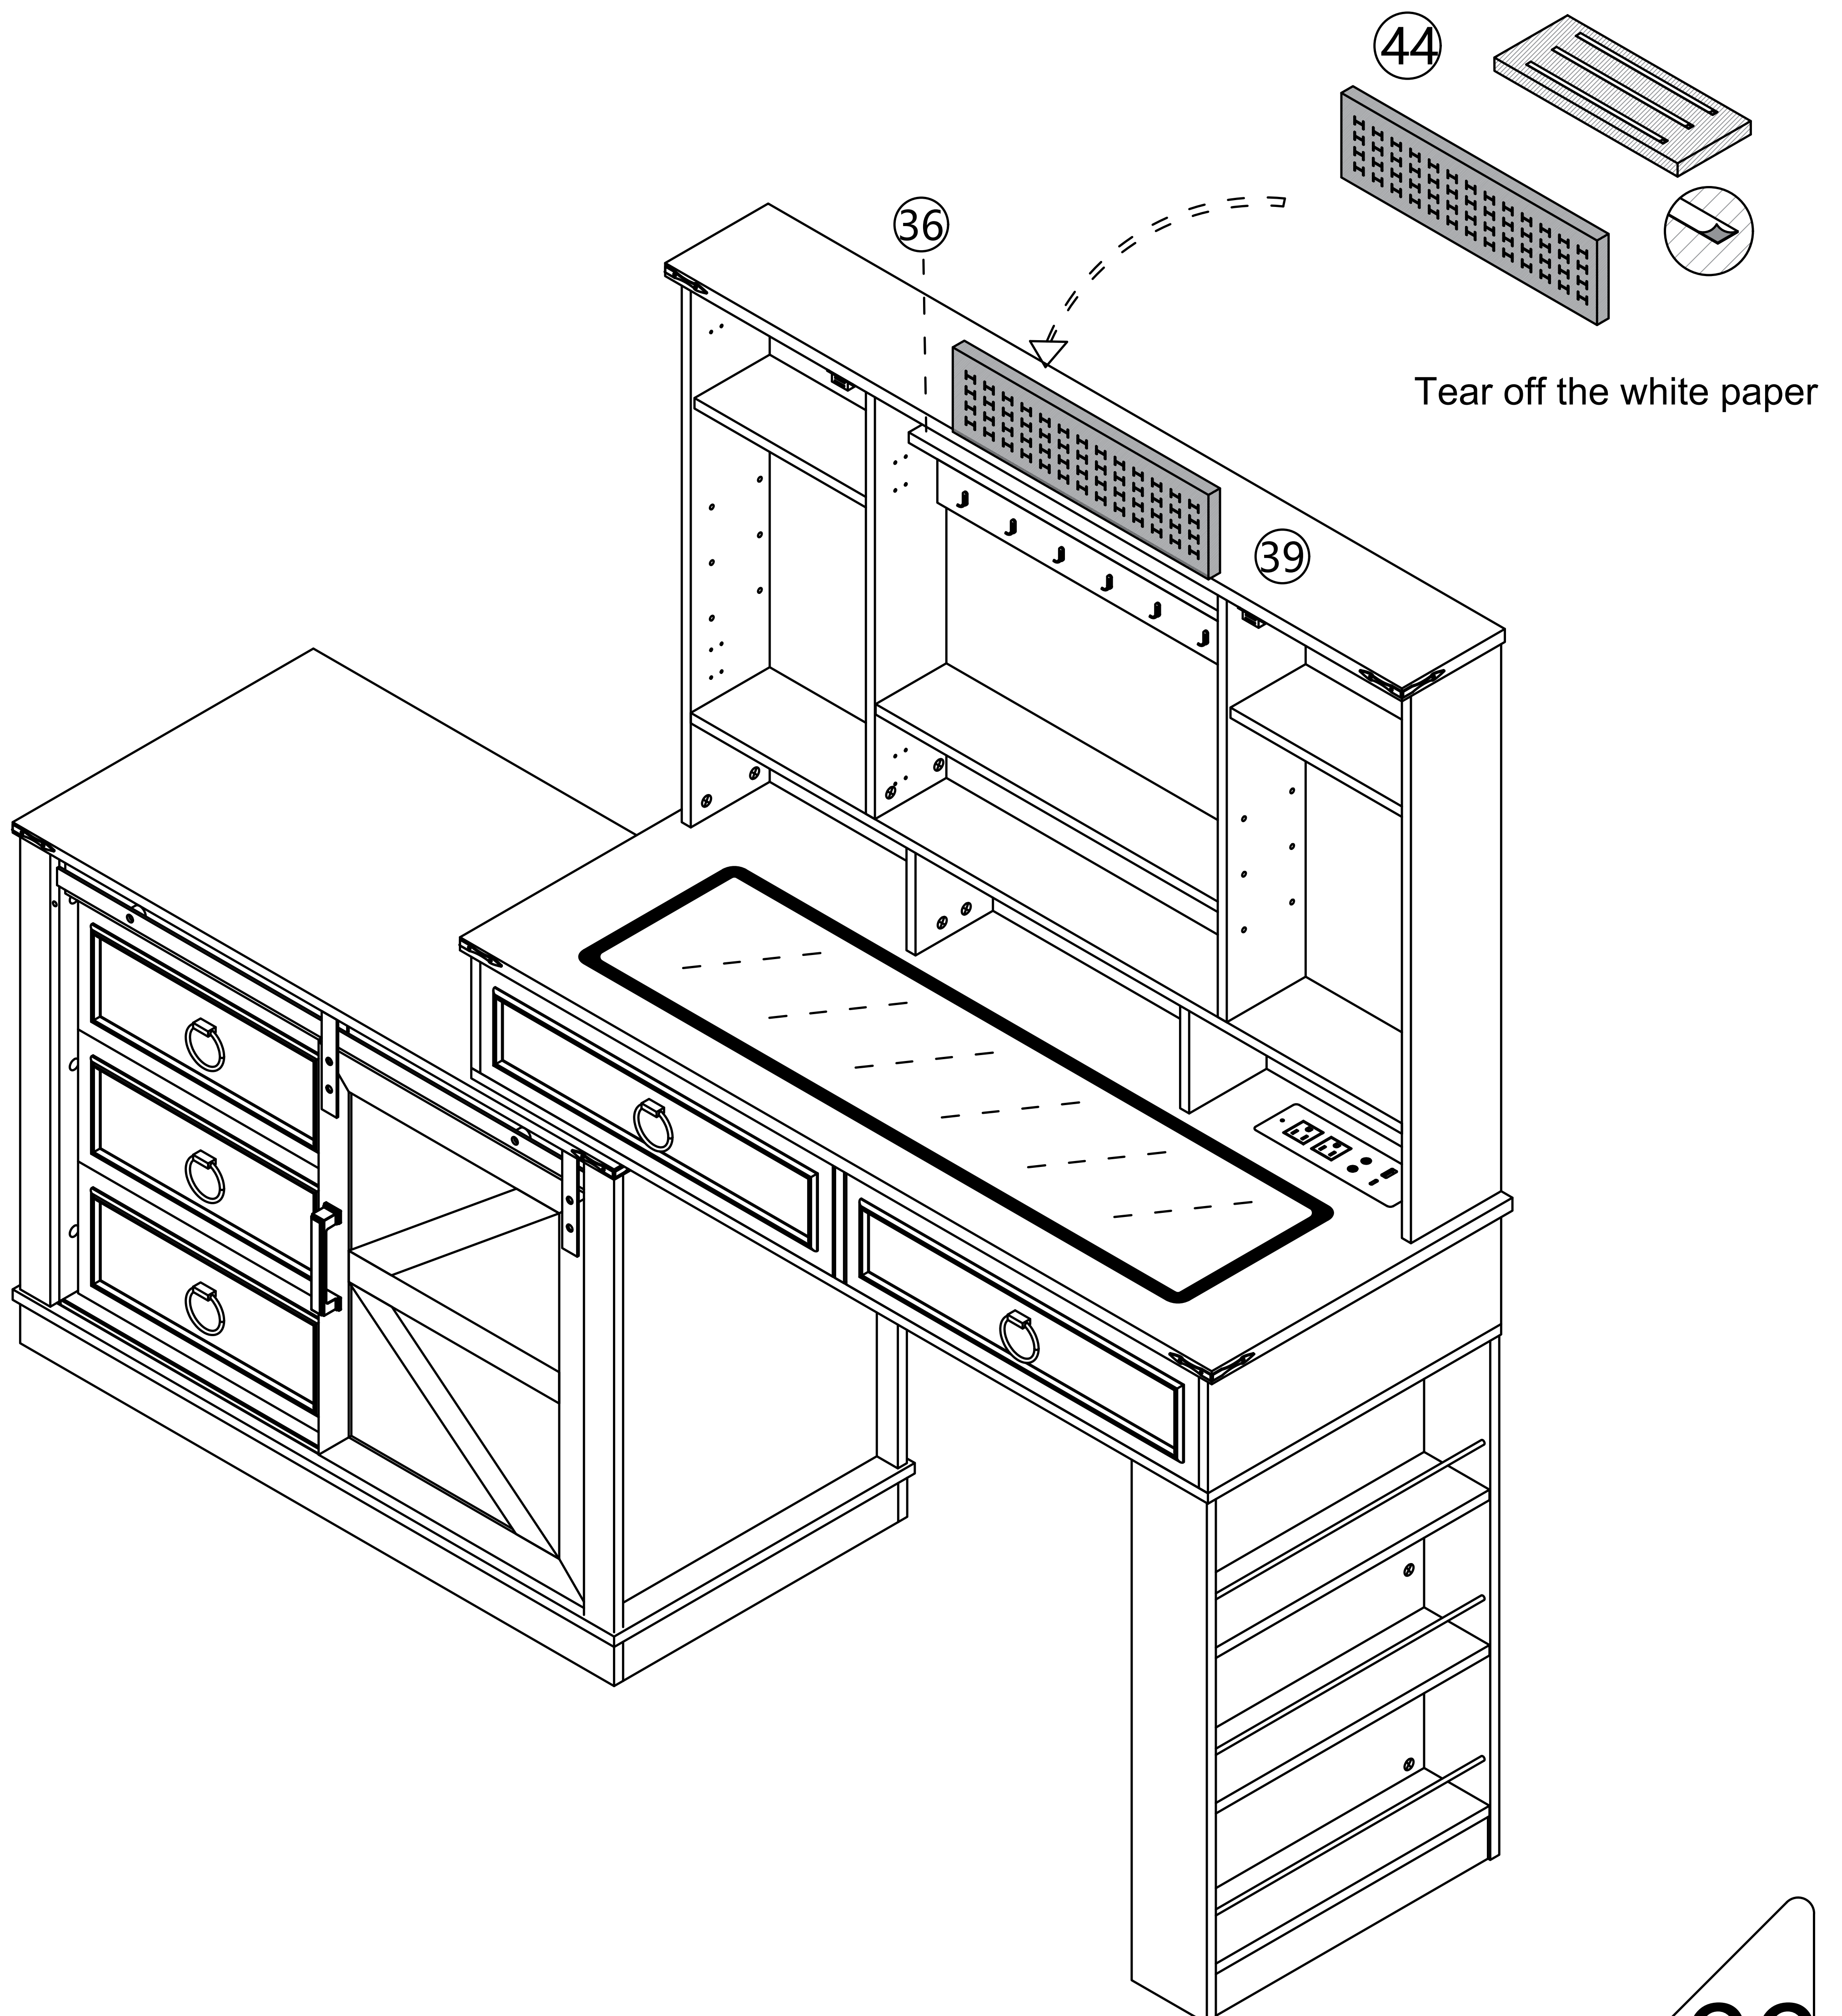


Step 82

0

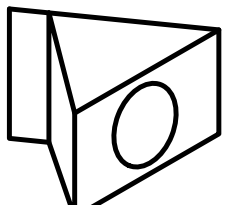

x18



x18

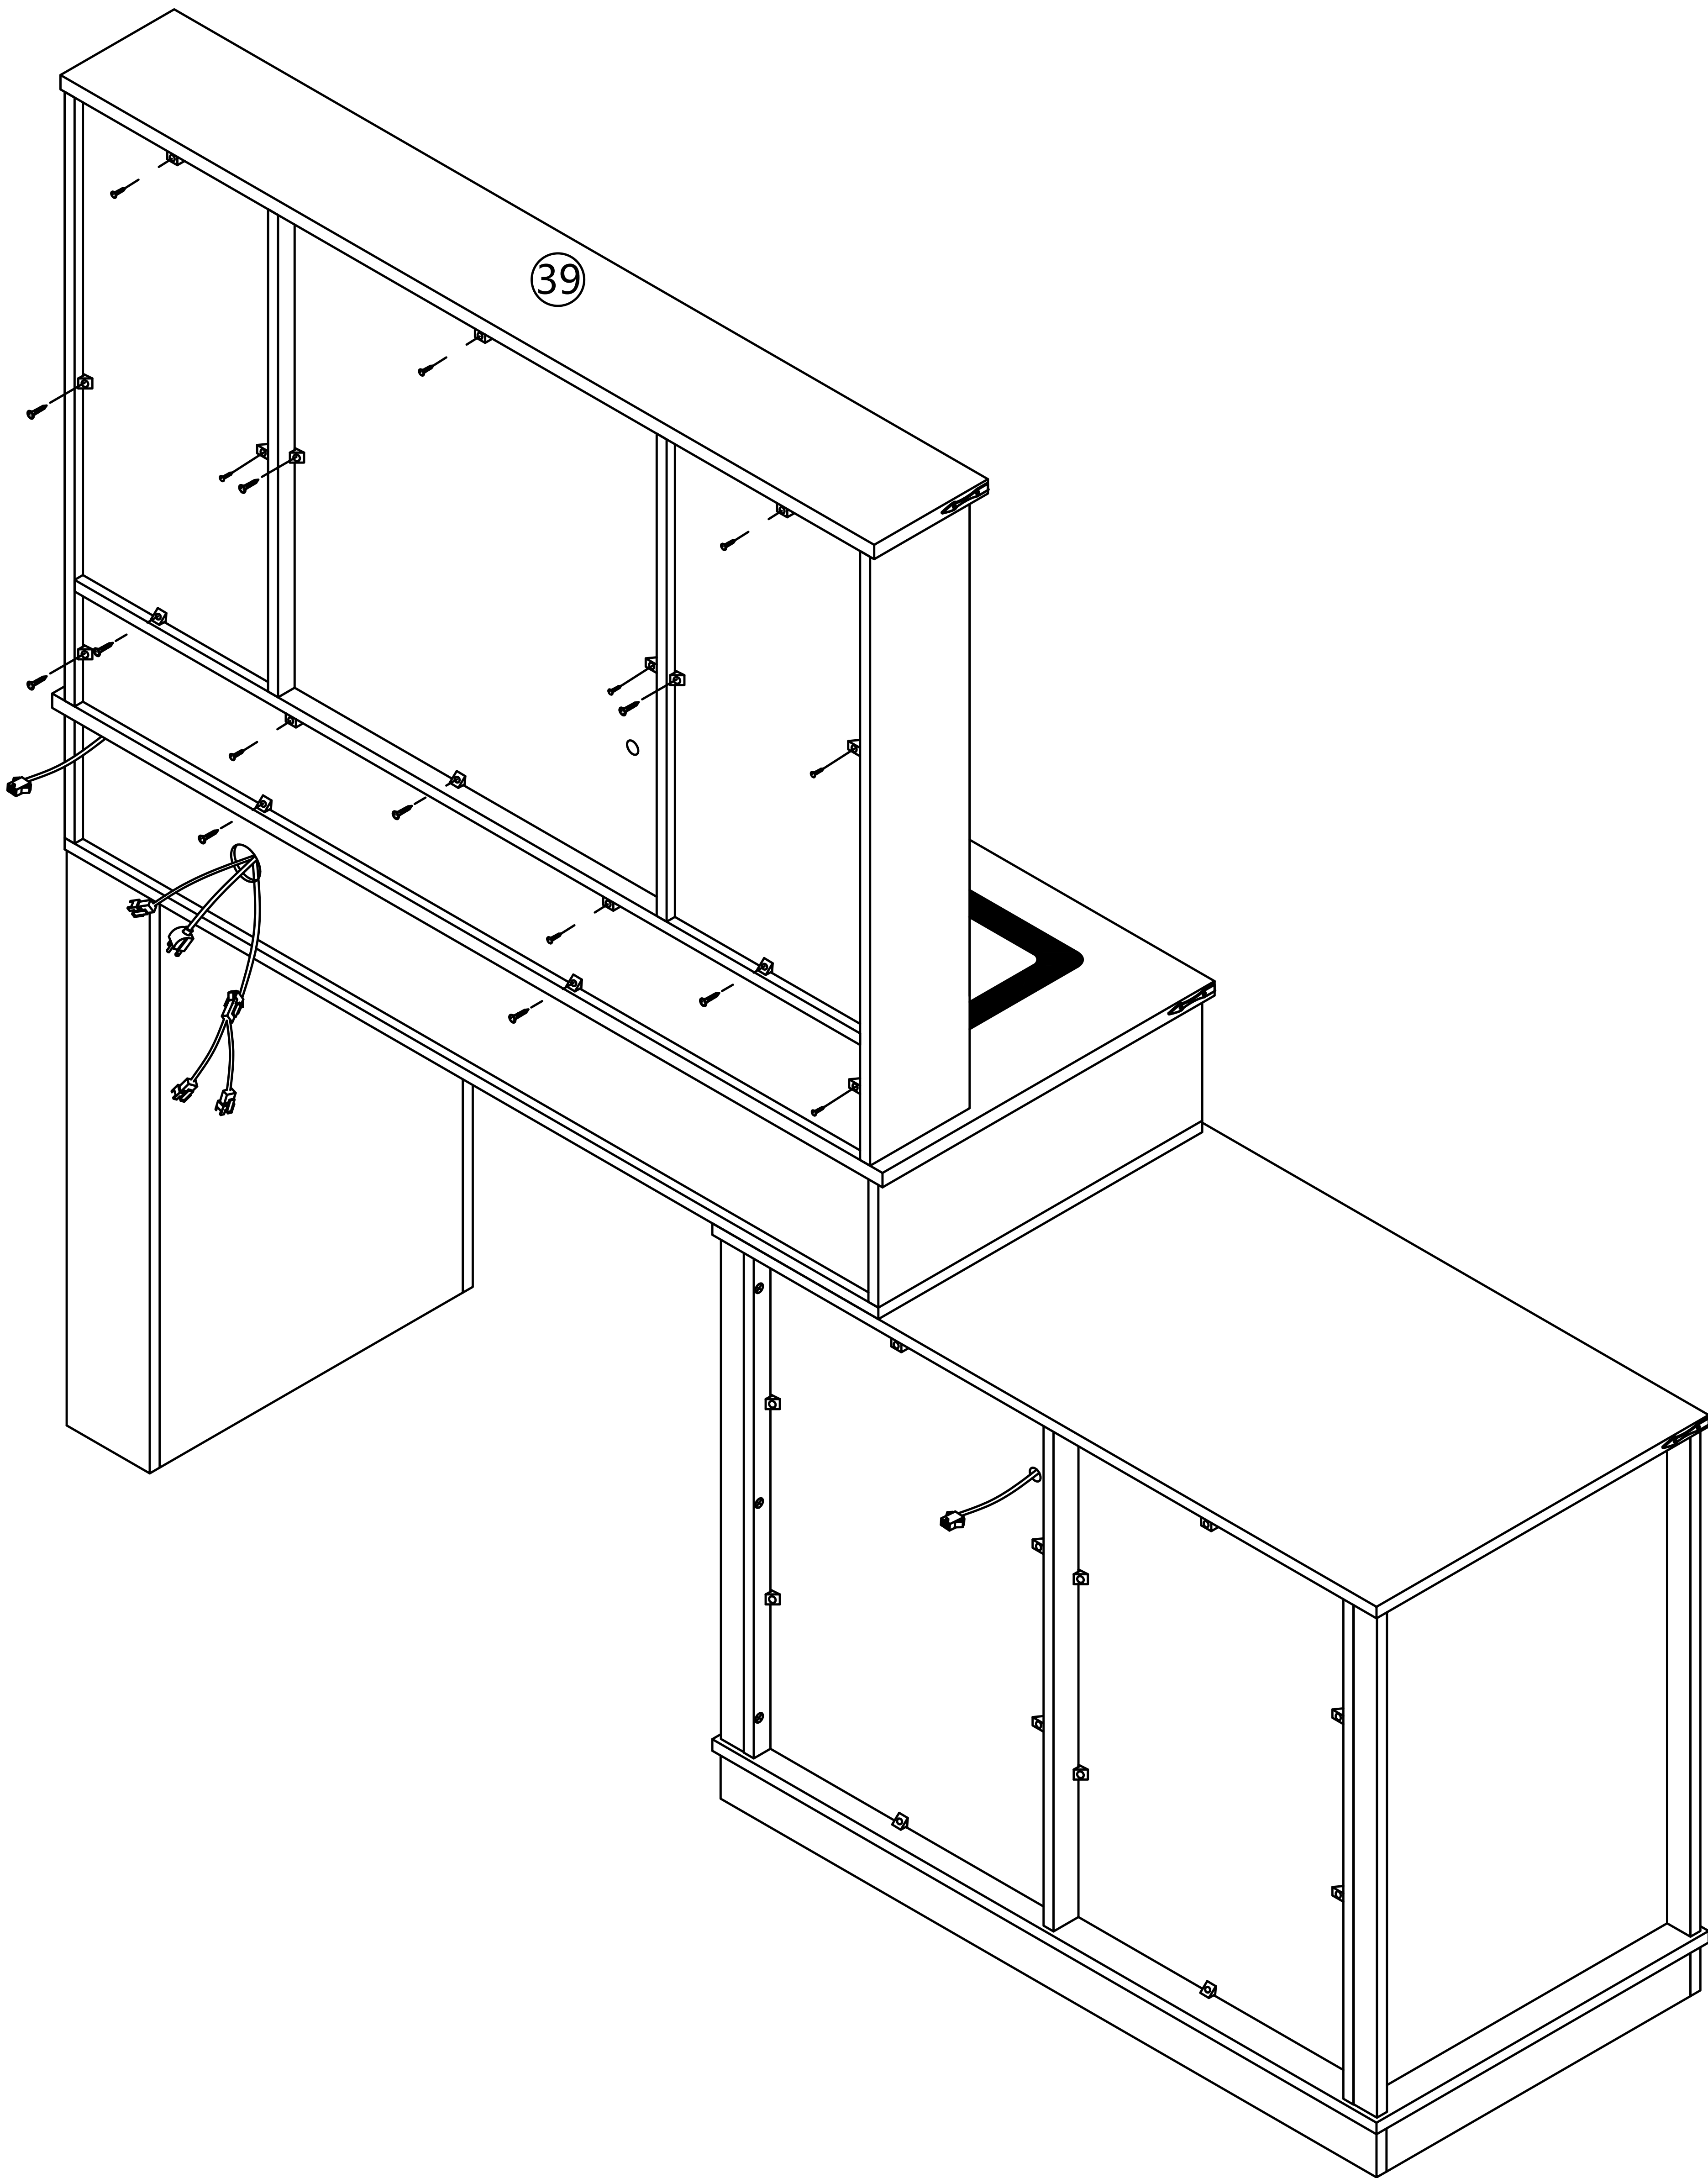



Step 83

- T

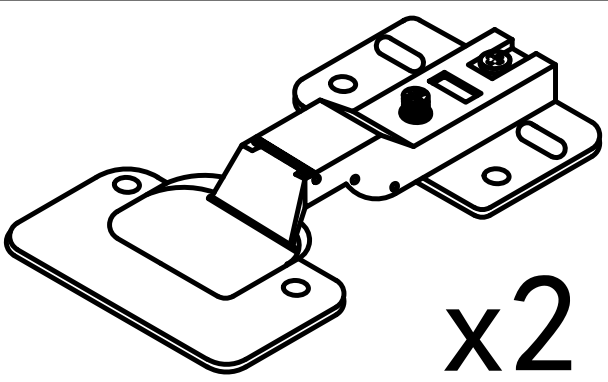

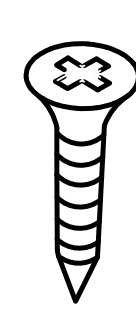
x2
- 

x4

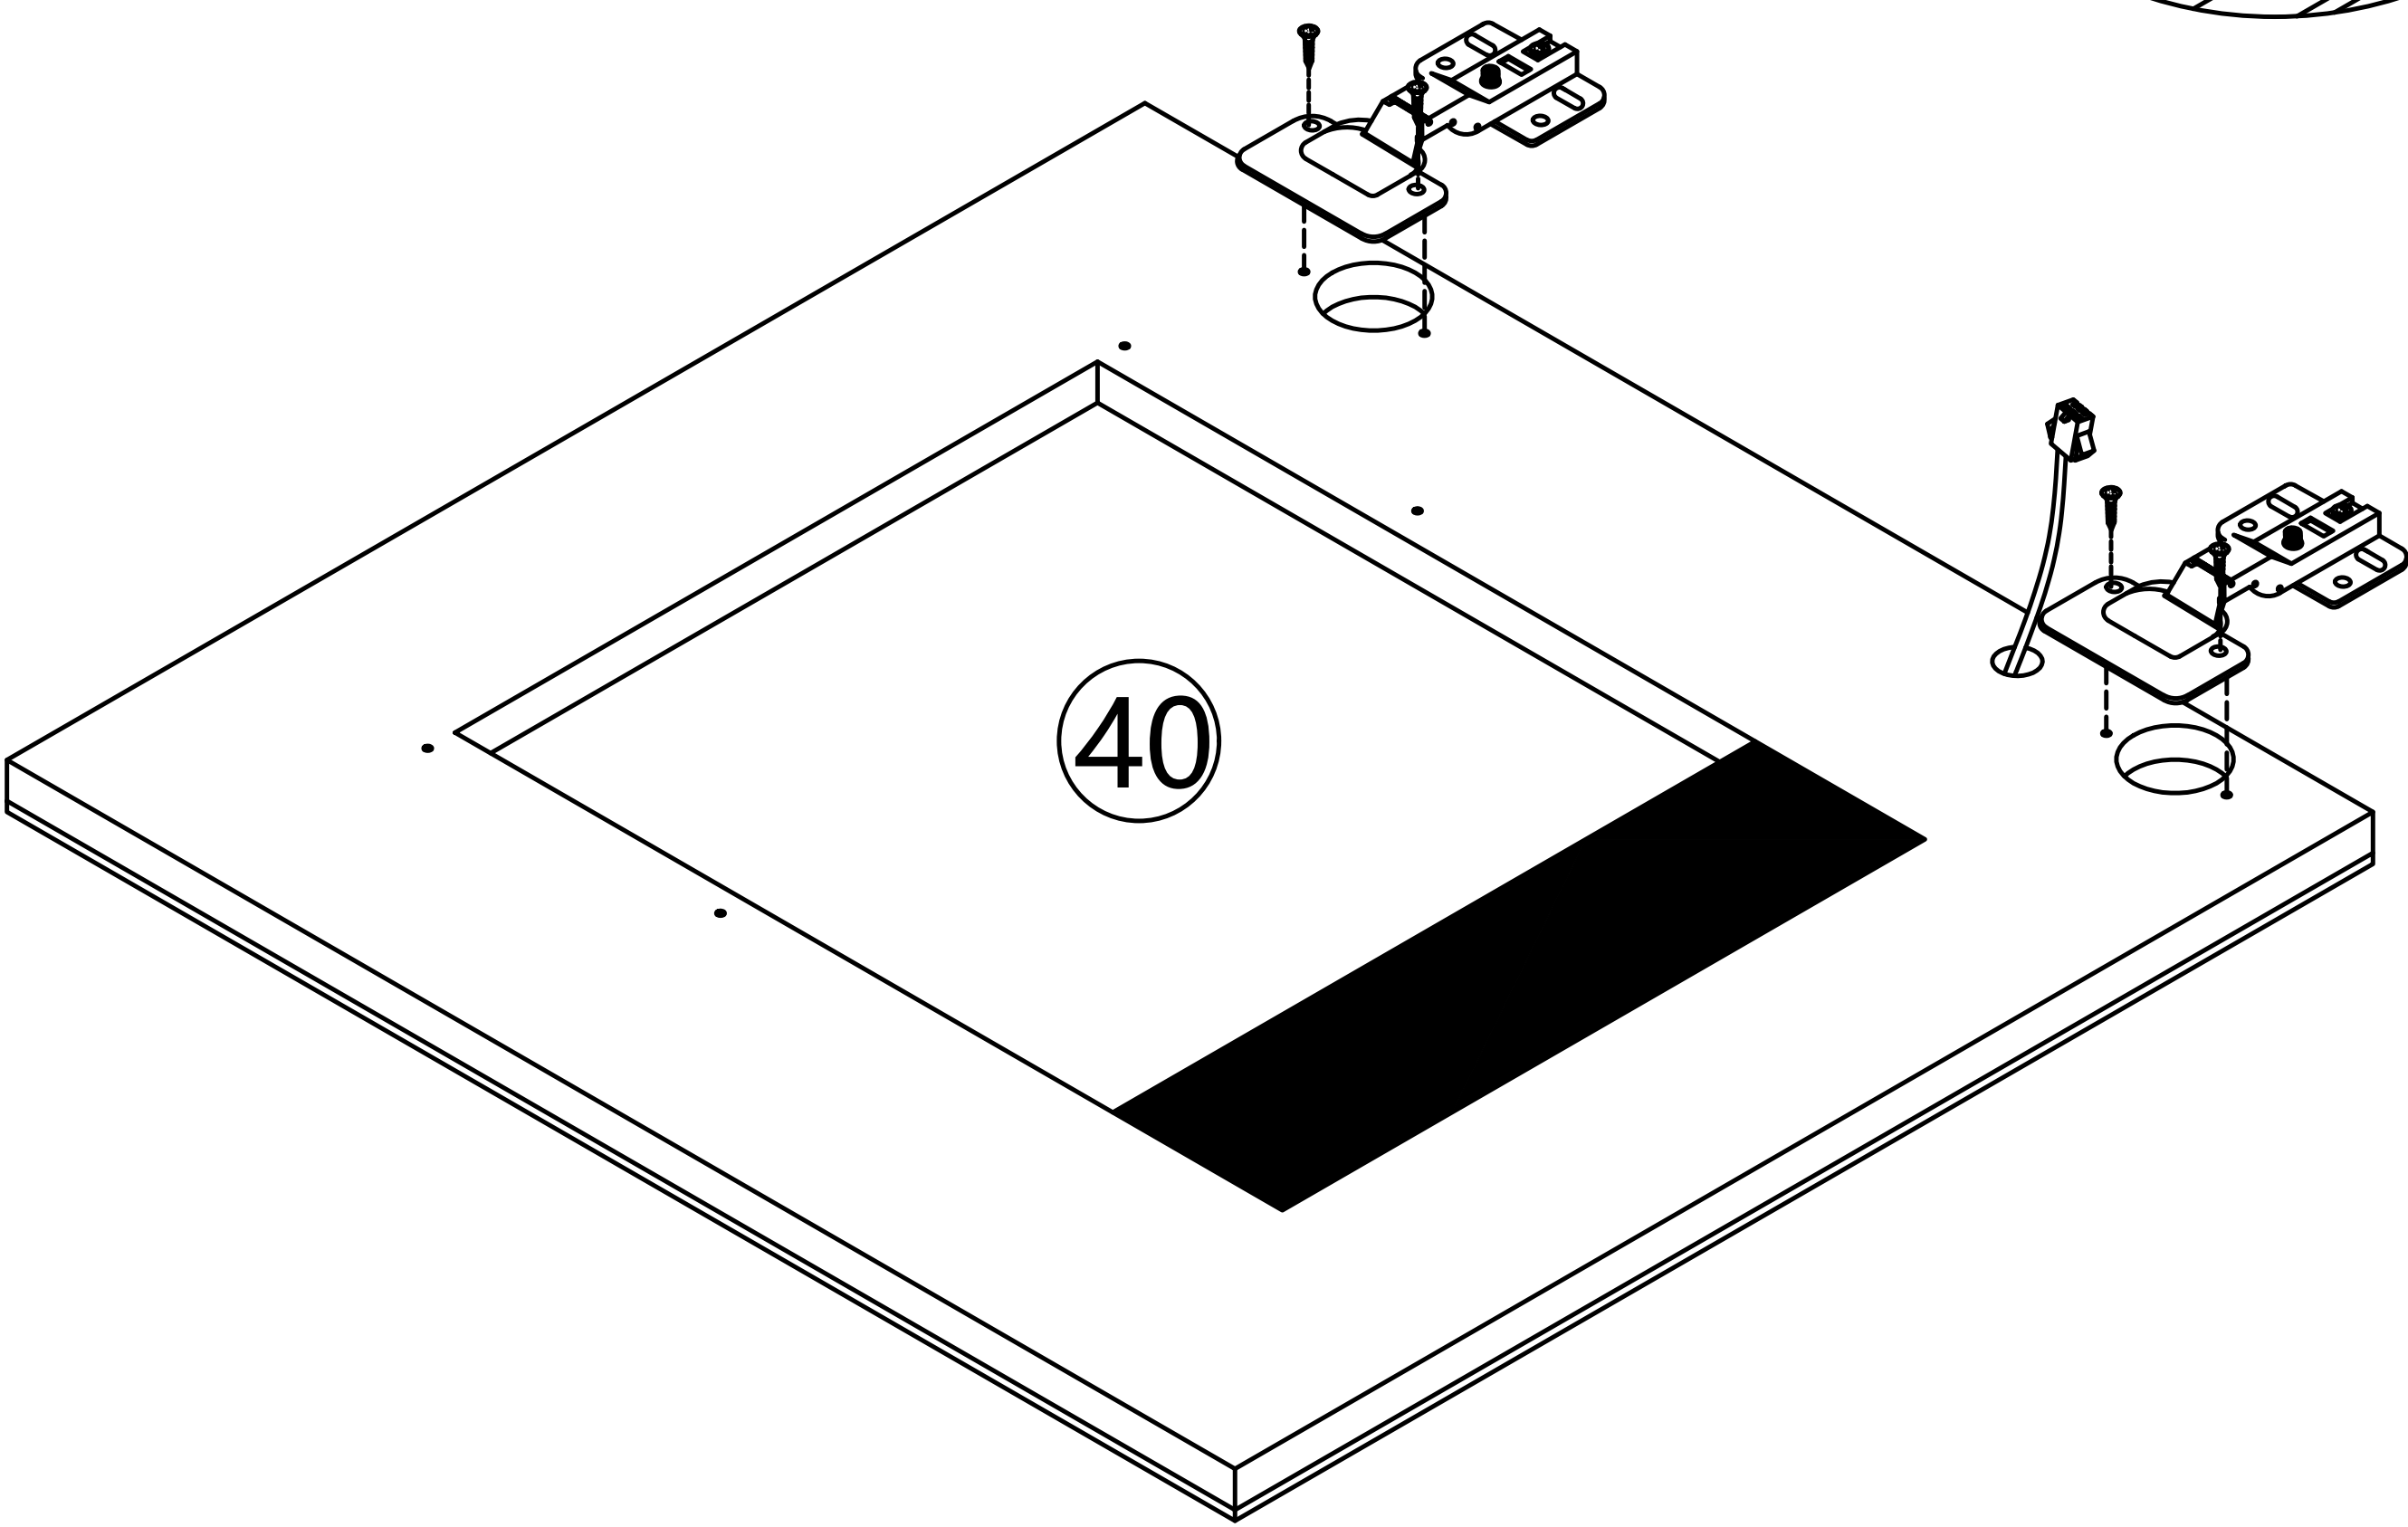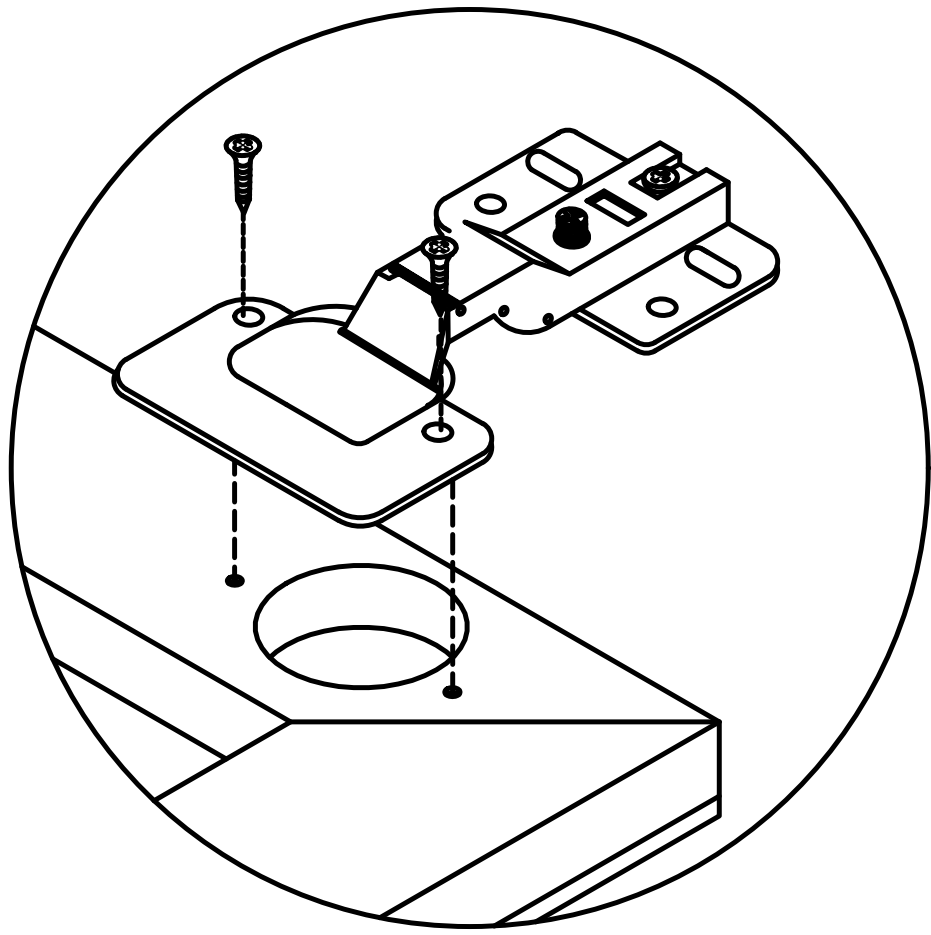


Step 84



- 46

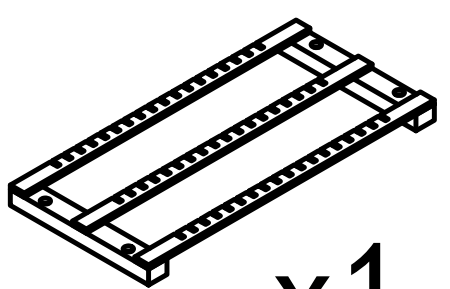




x1
- U

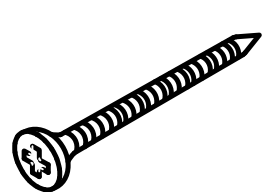

x4

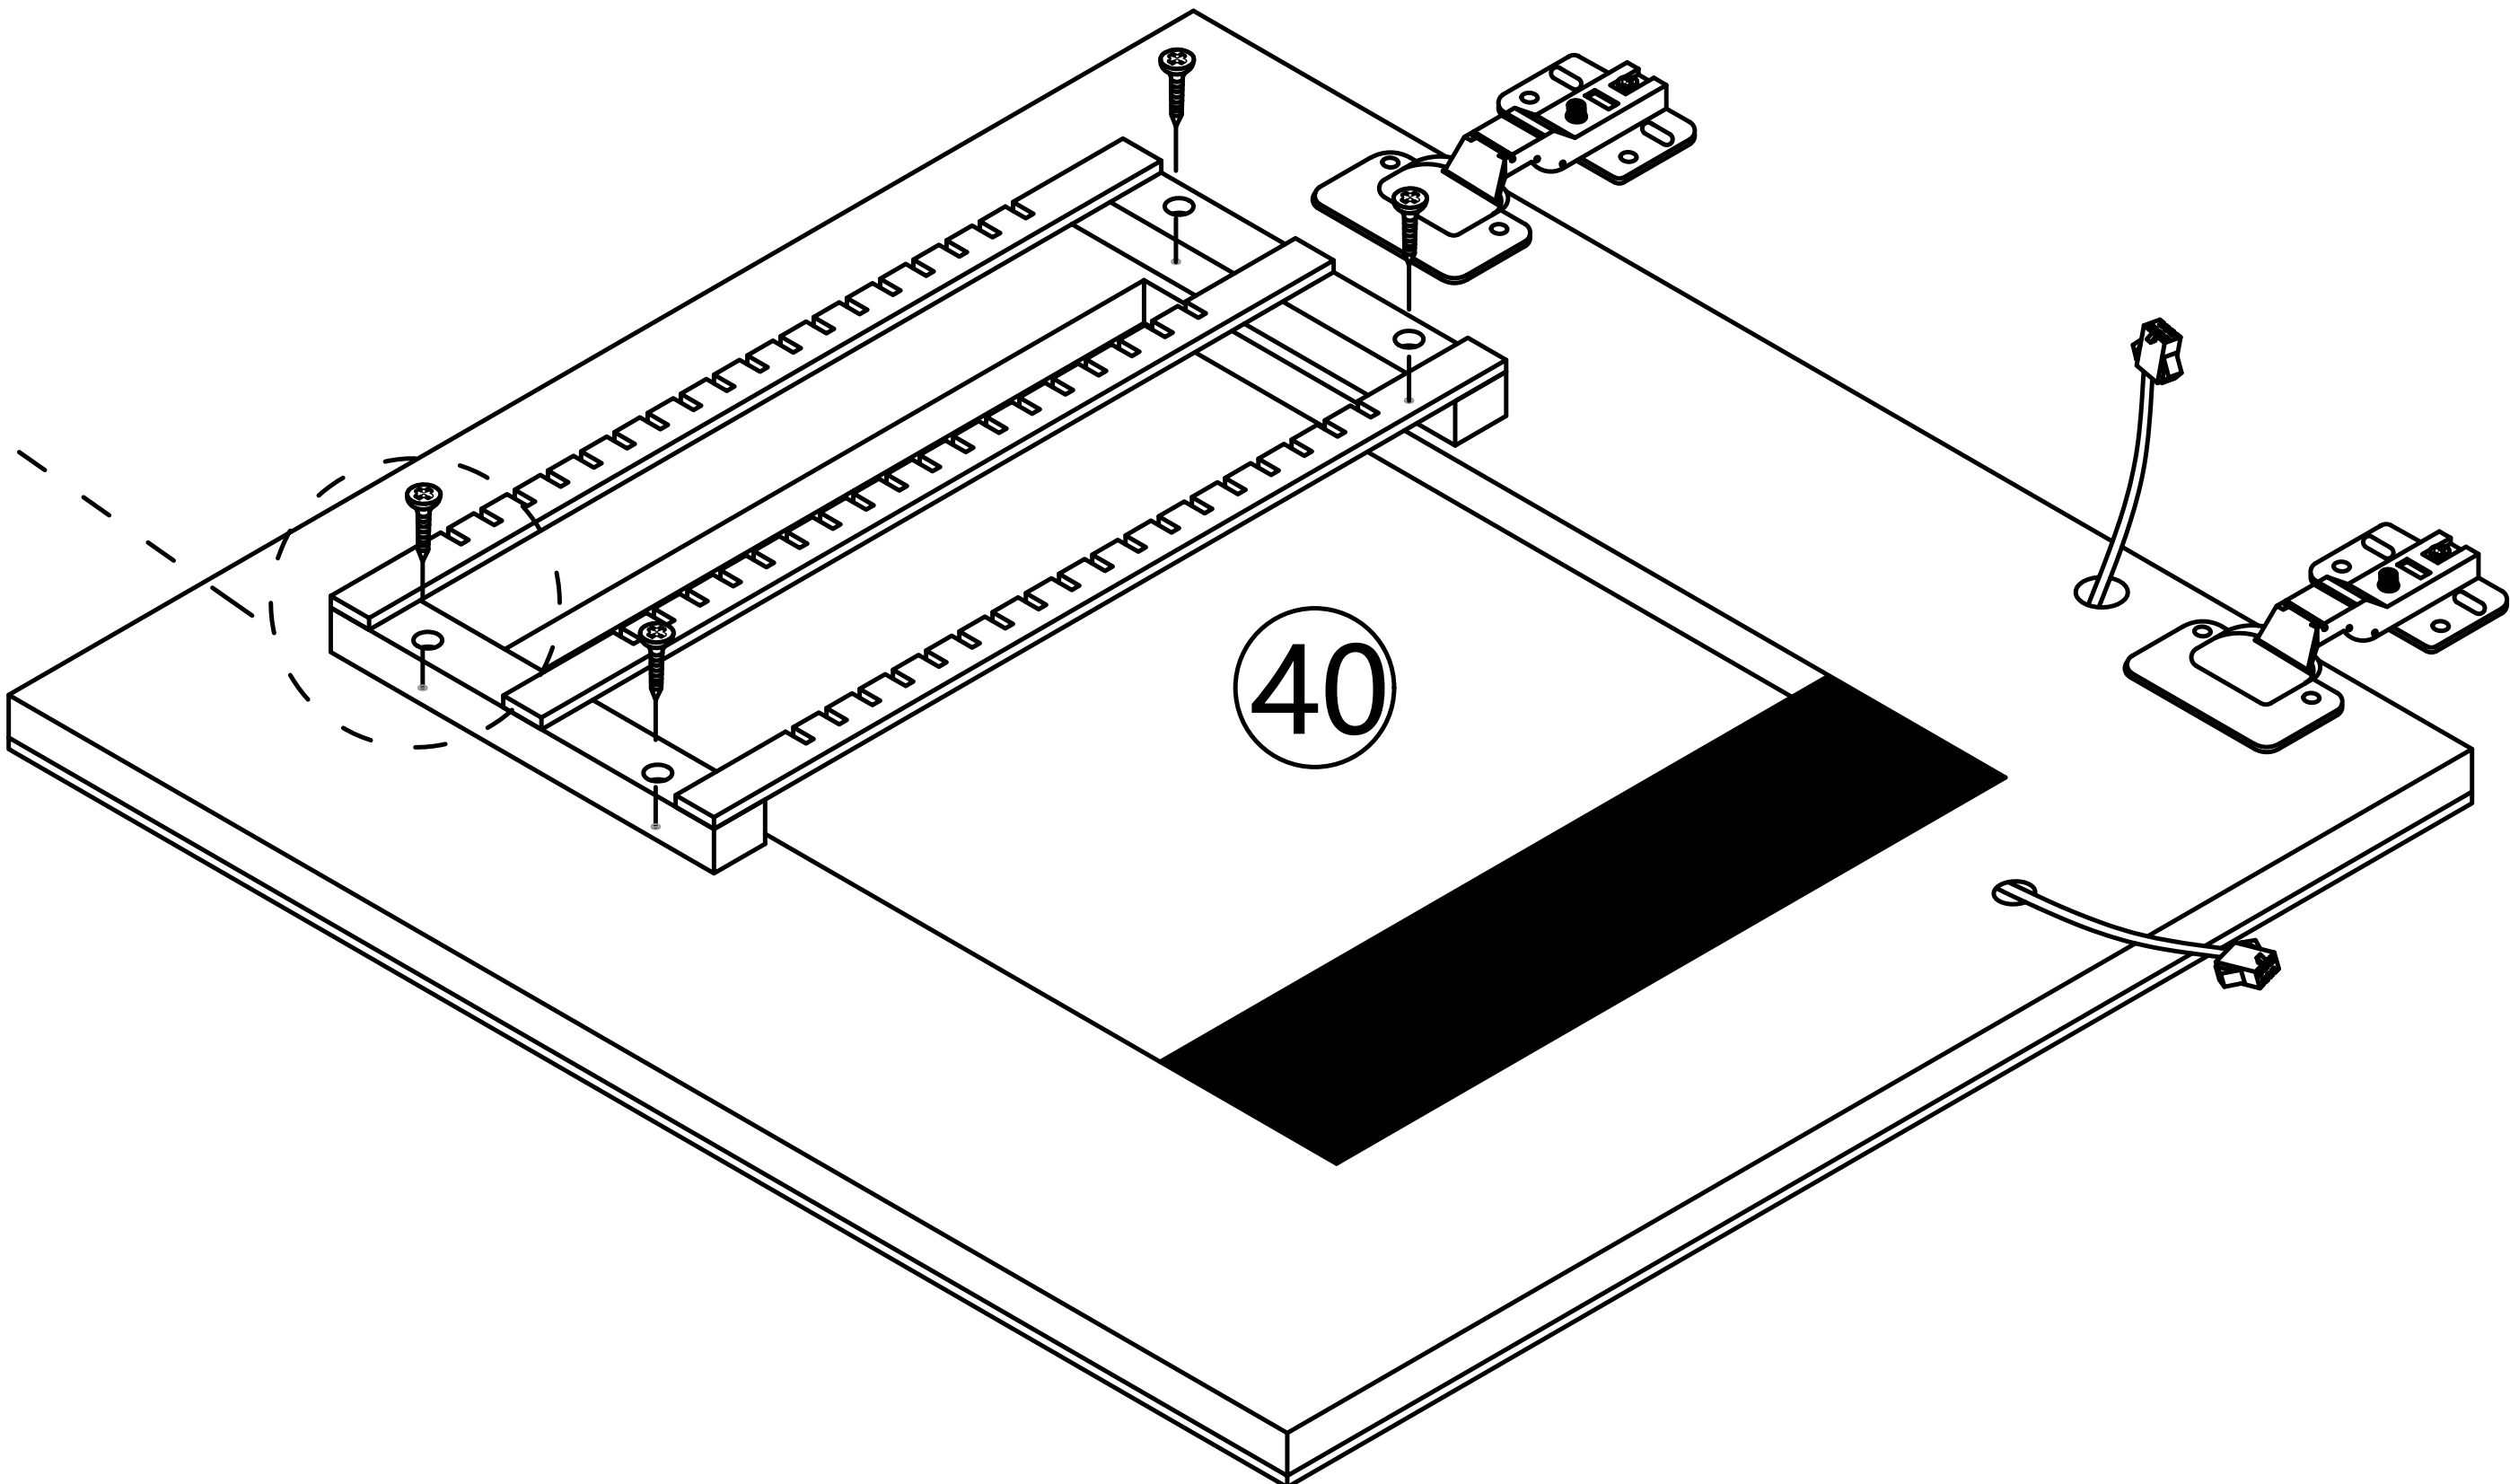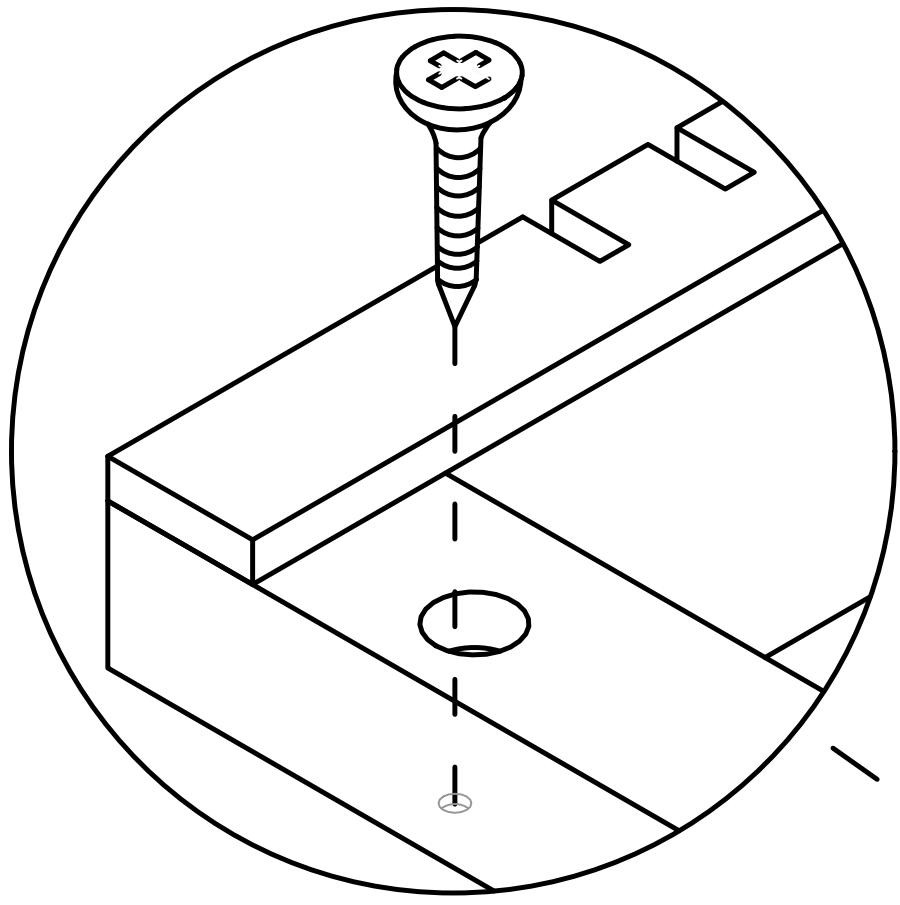


Step 85

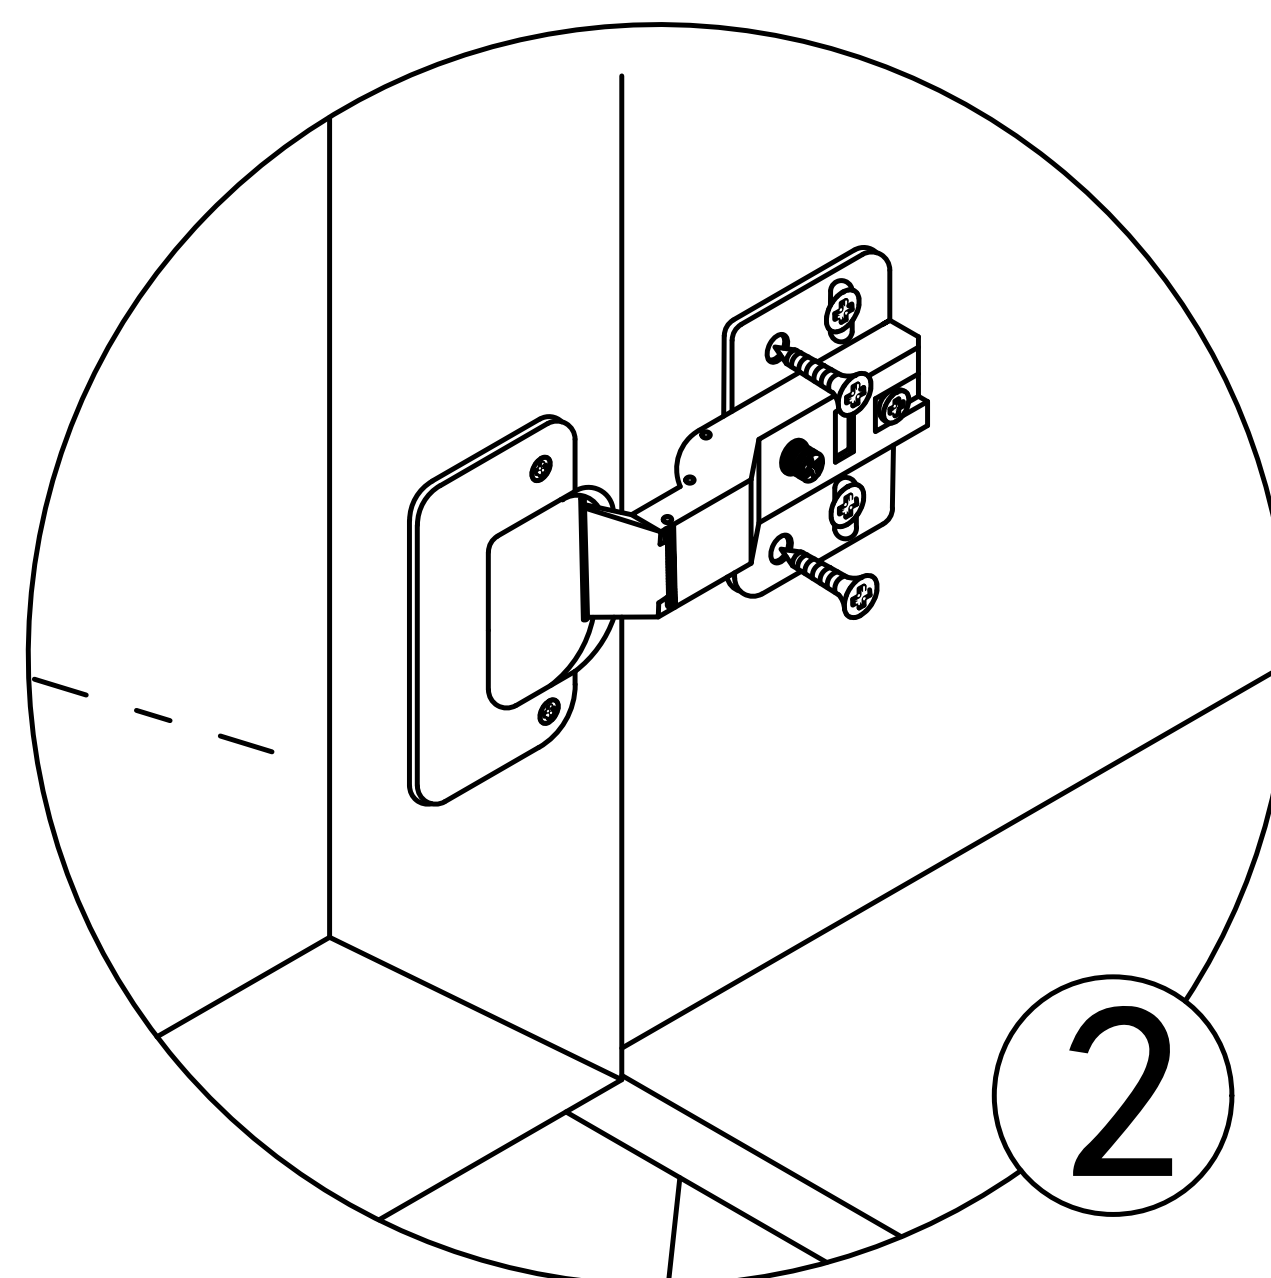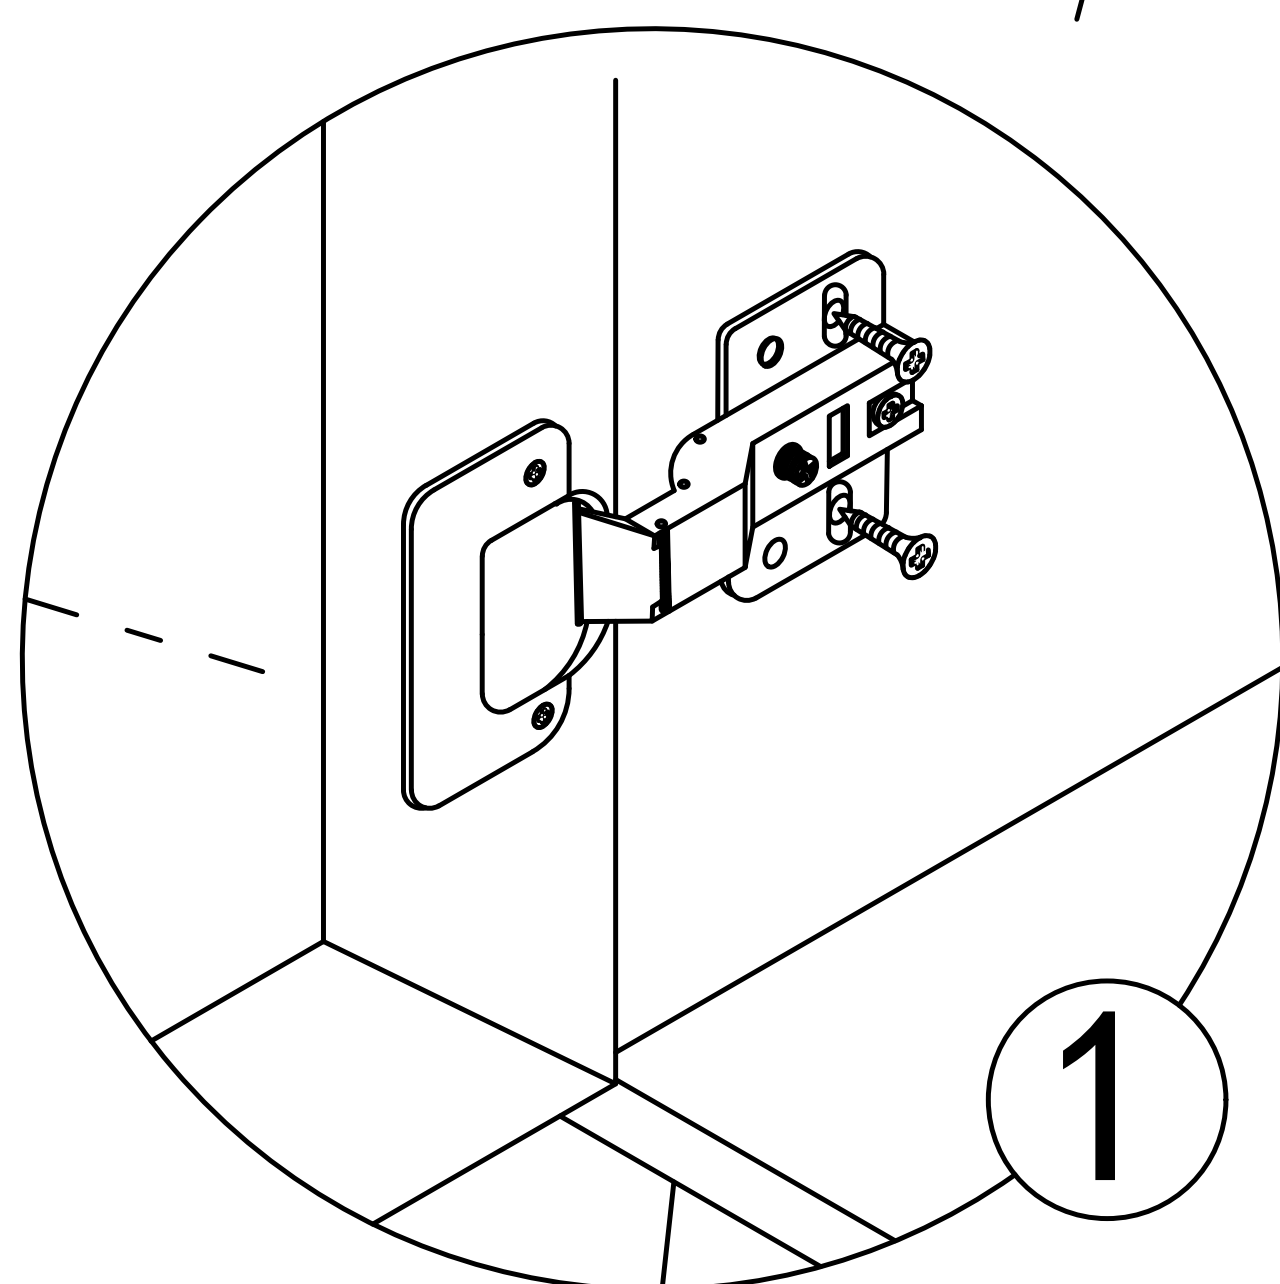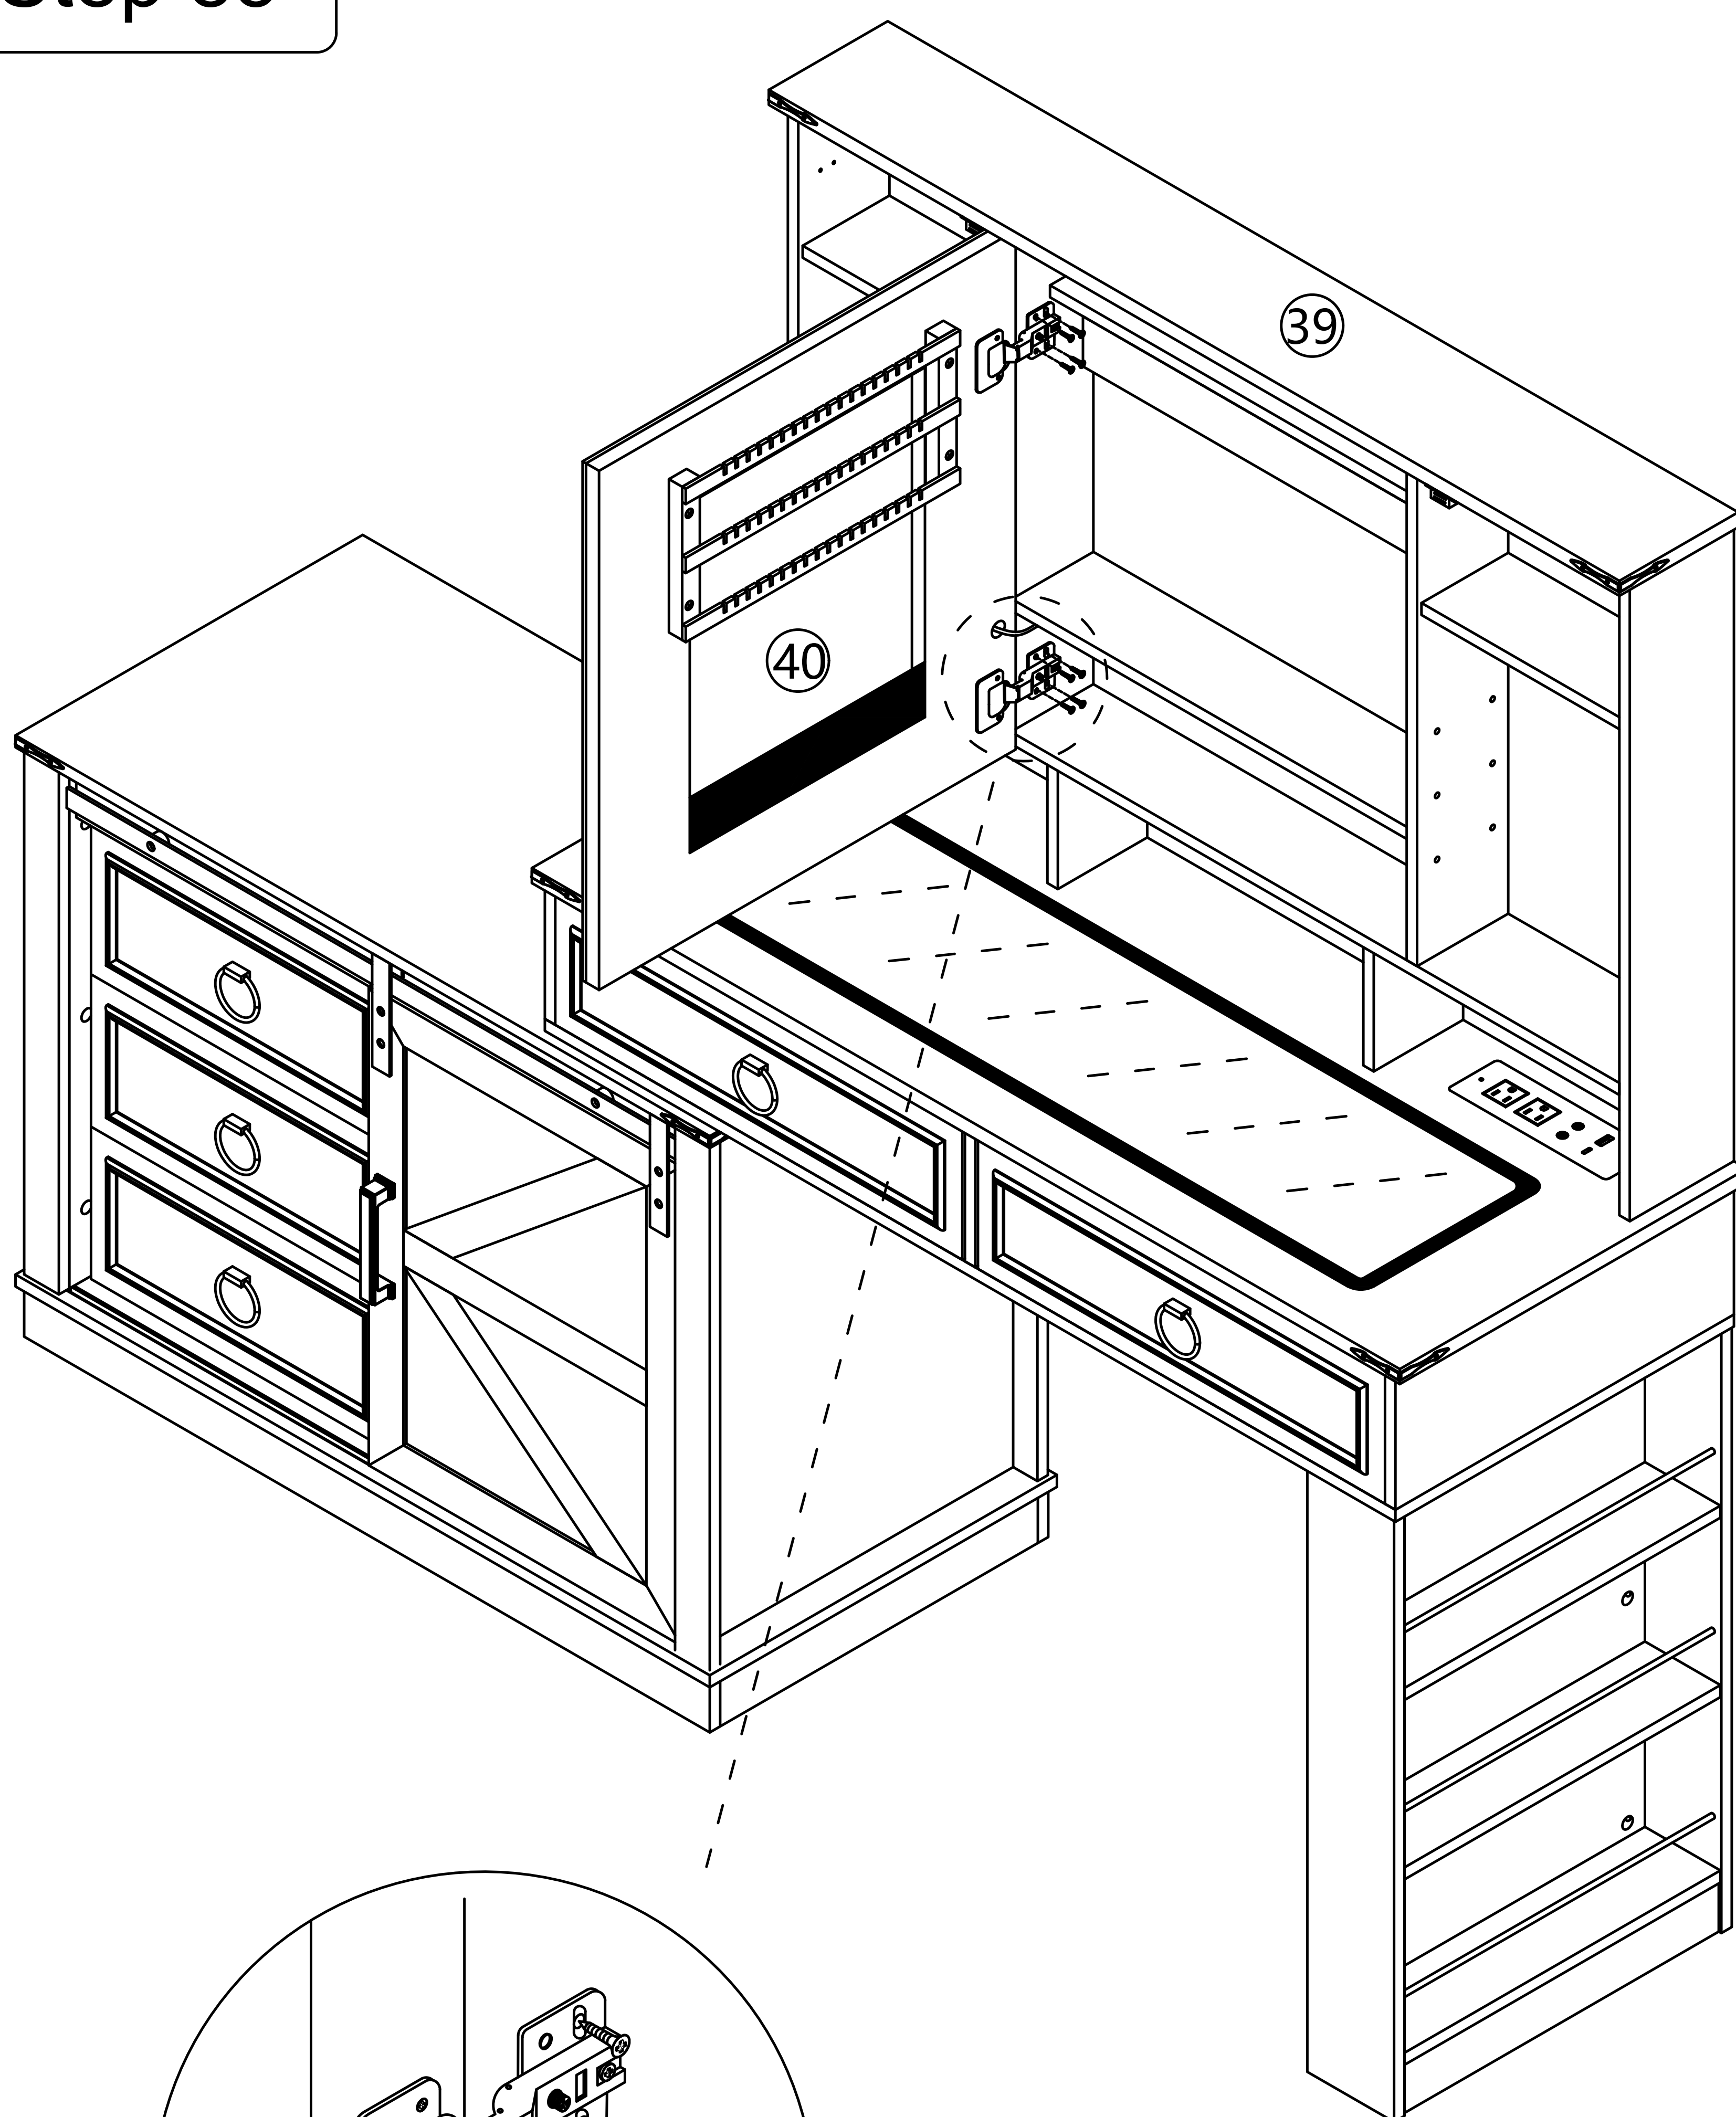


First lock the elliptical hole
then lock the fixed hole

Step 86

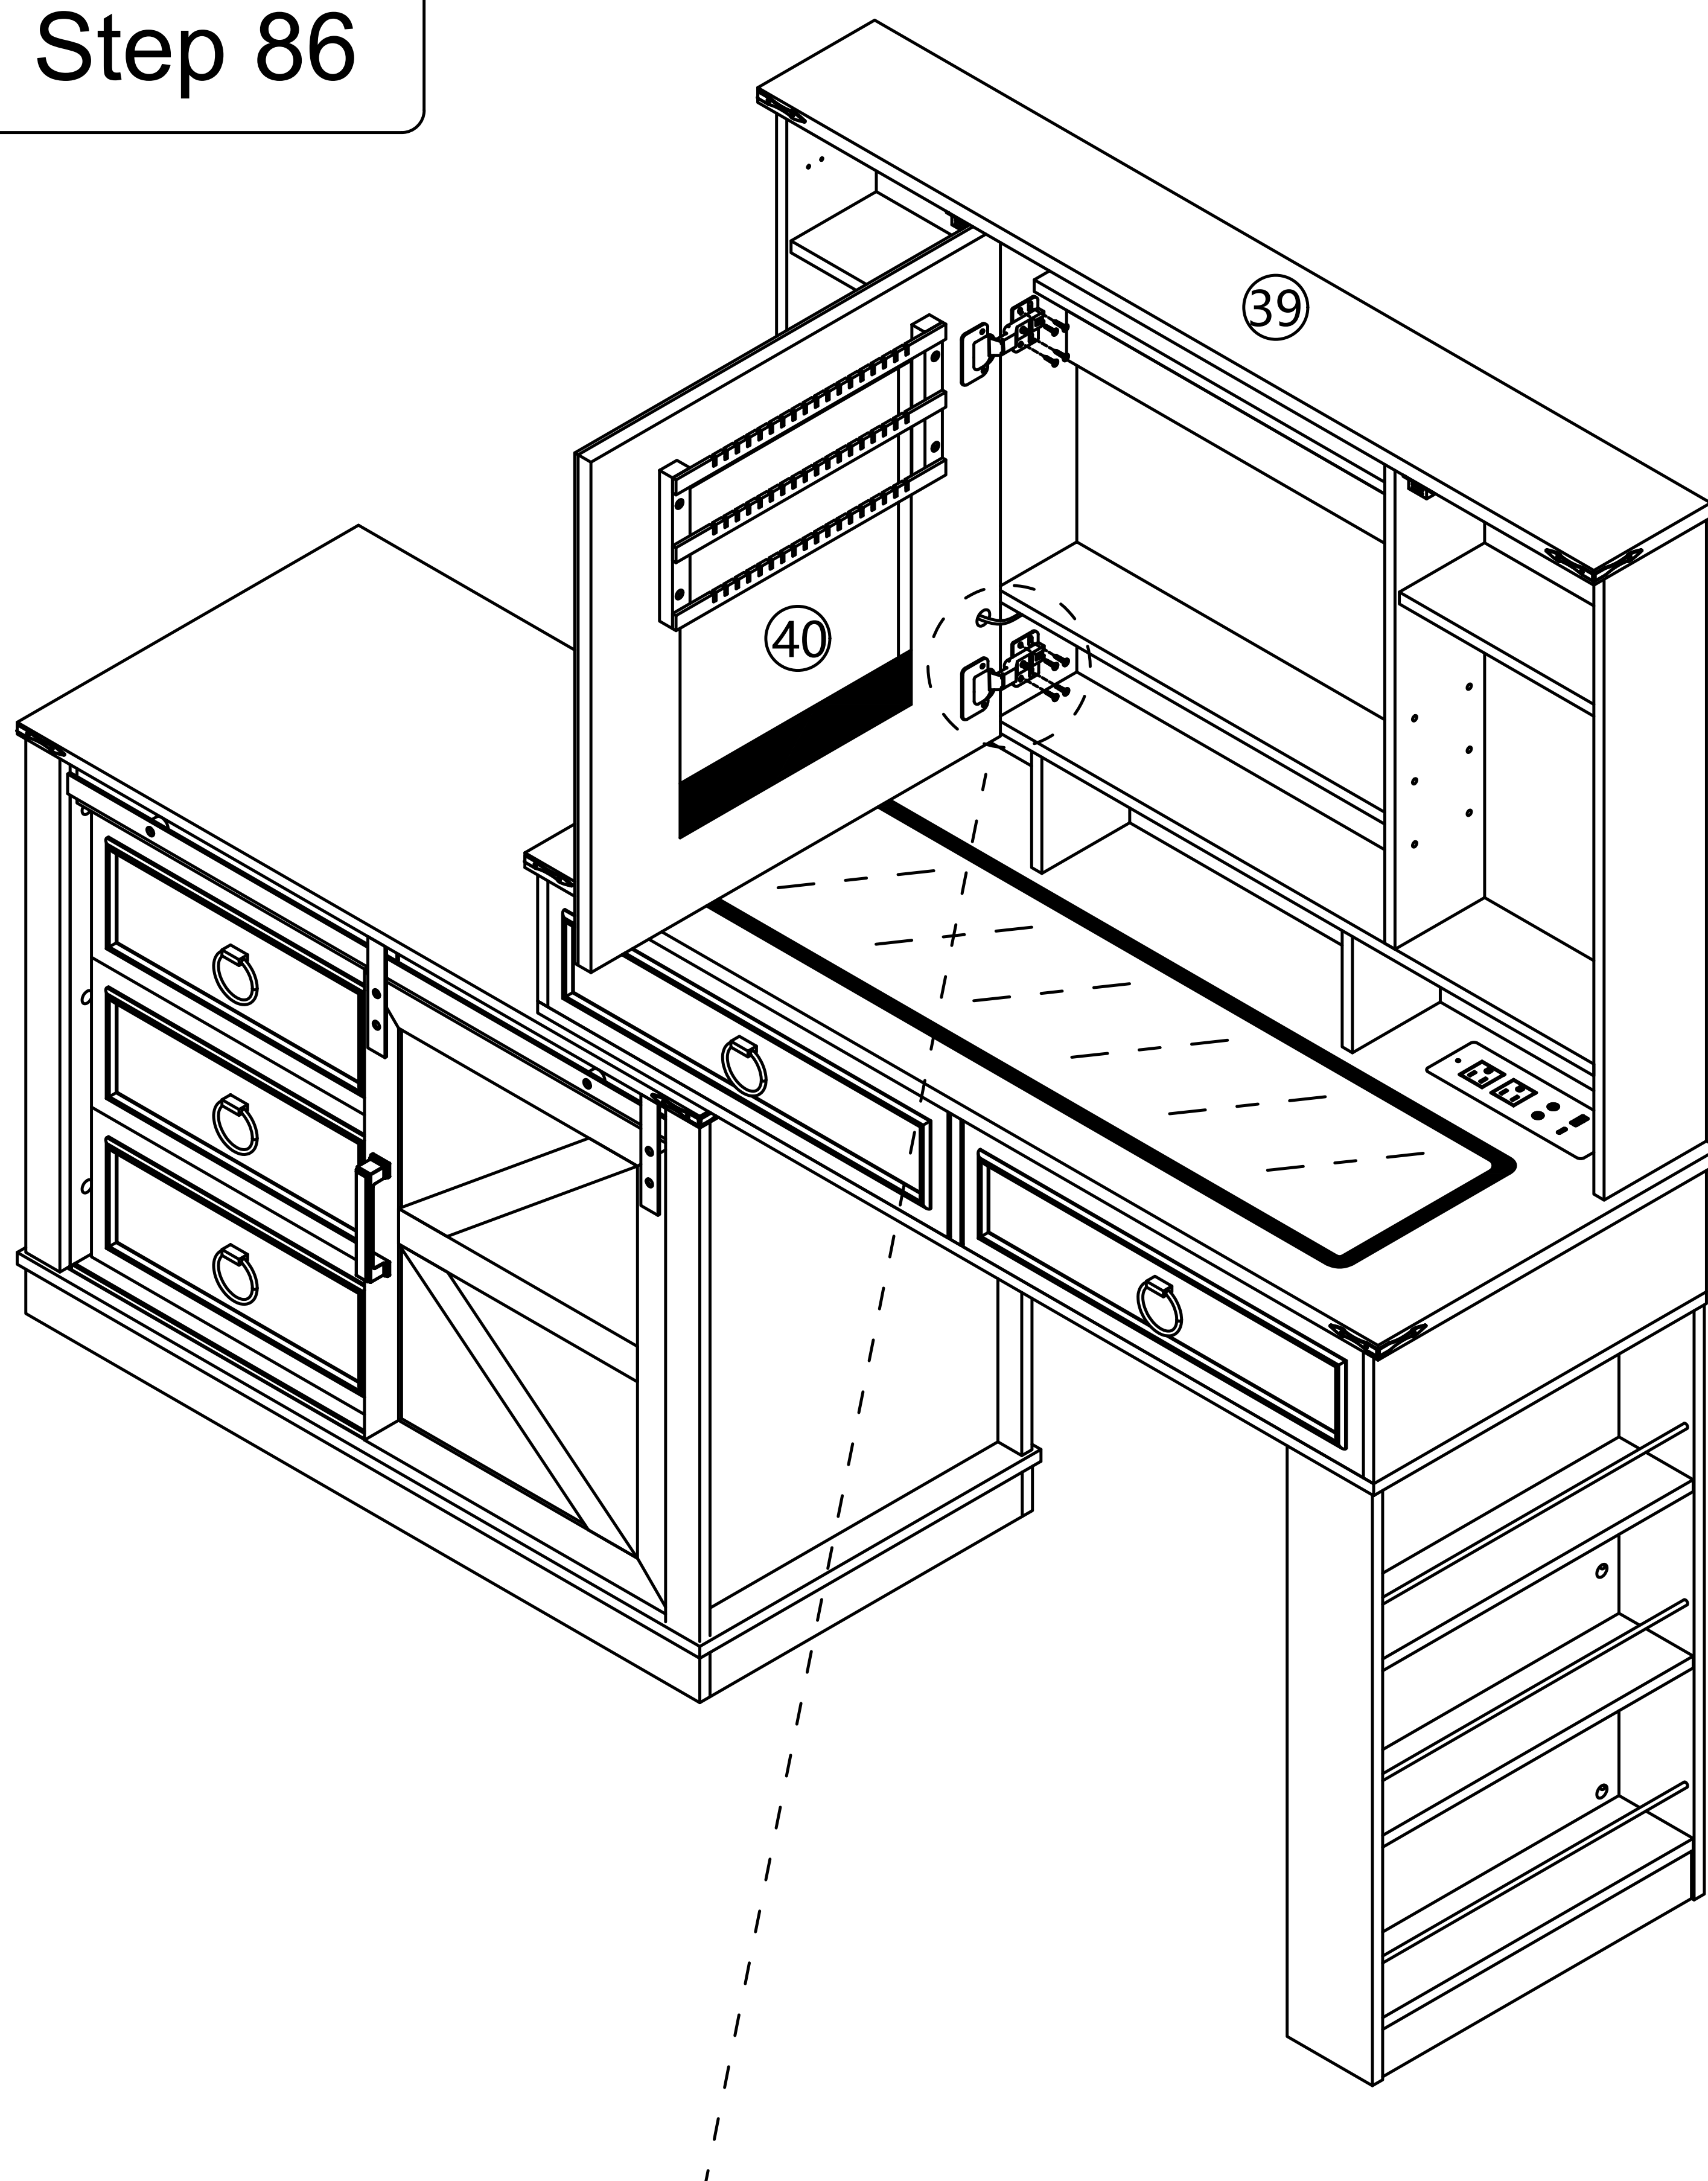







Turning this screw can effectively adjust the size of the door gap.

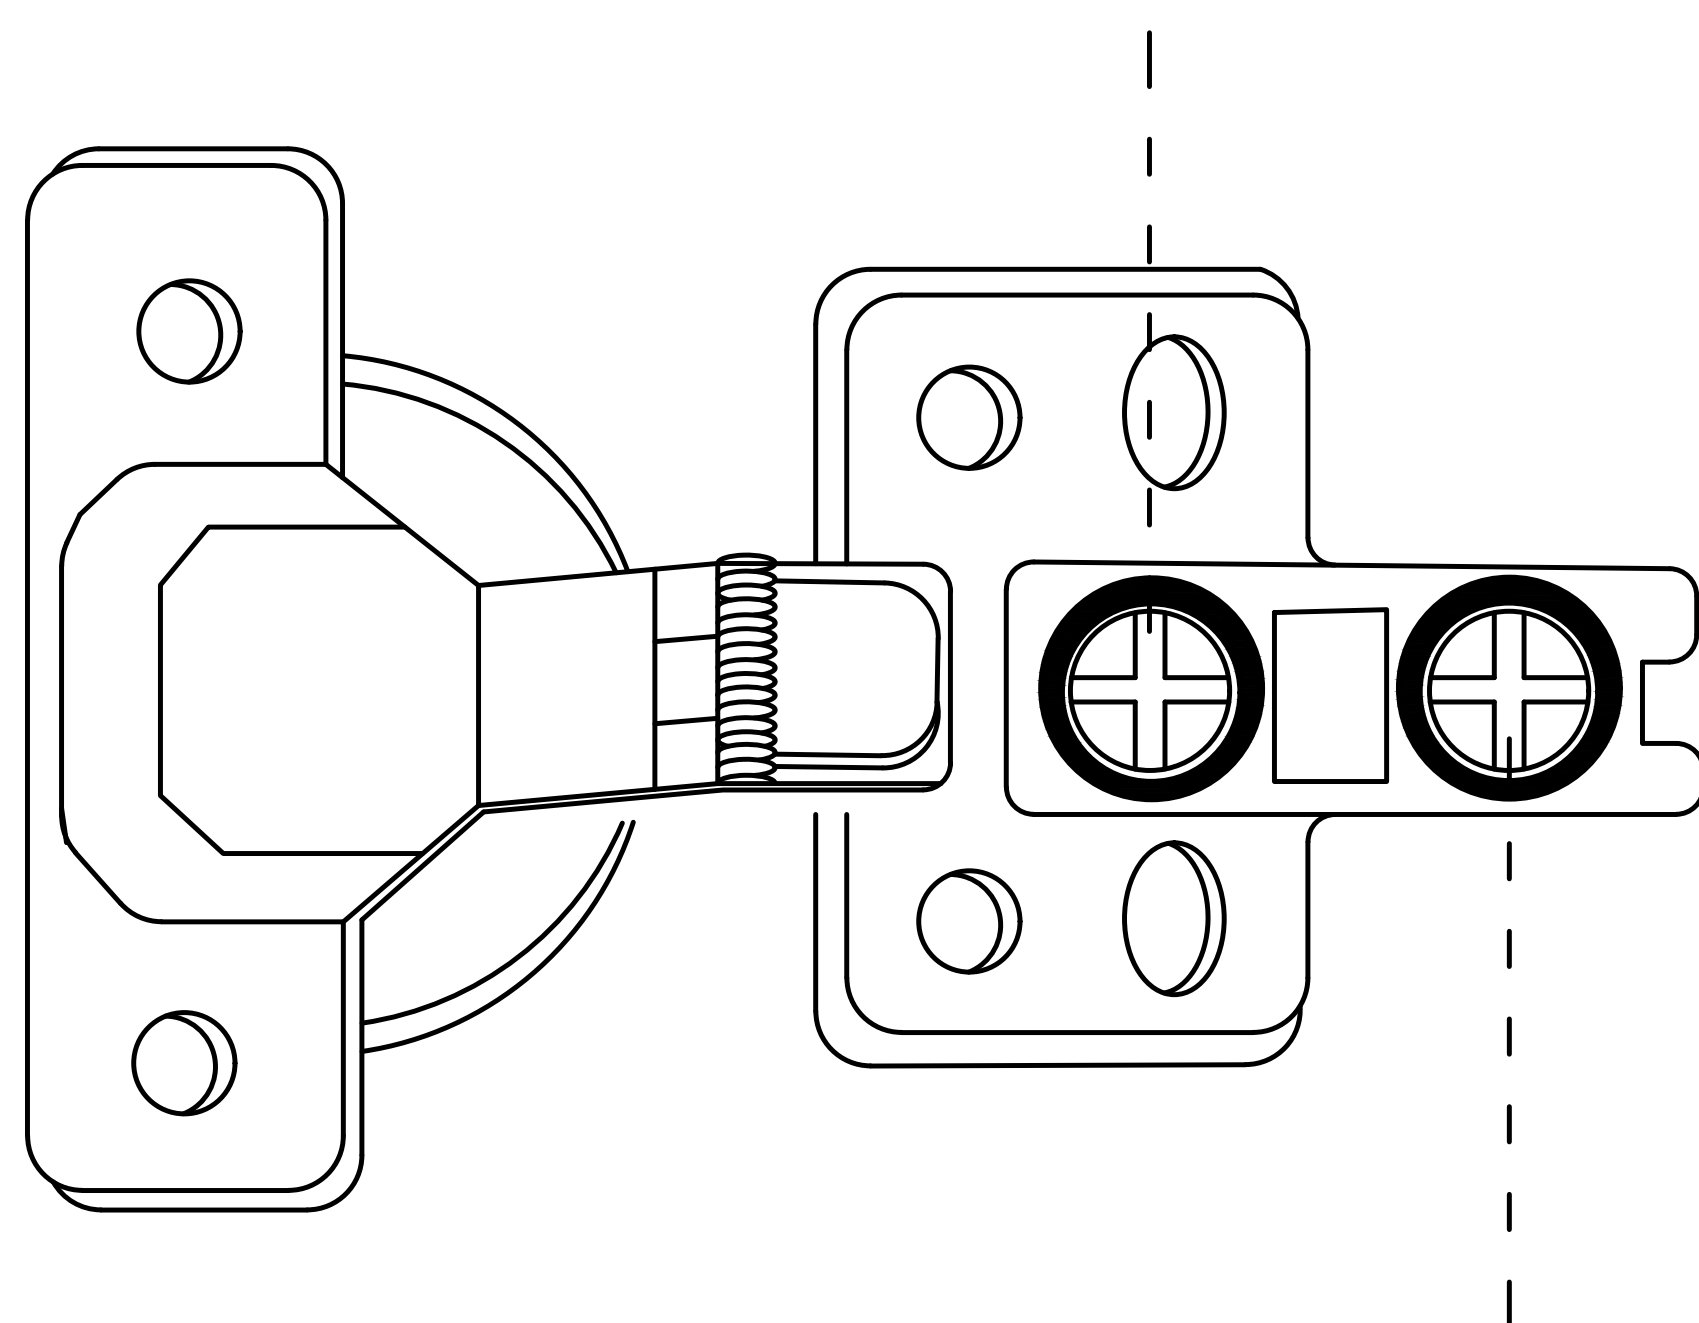


Turn this screw to adjust the door panel to be flat with the side panel.






Step 87

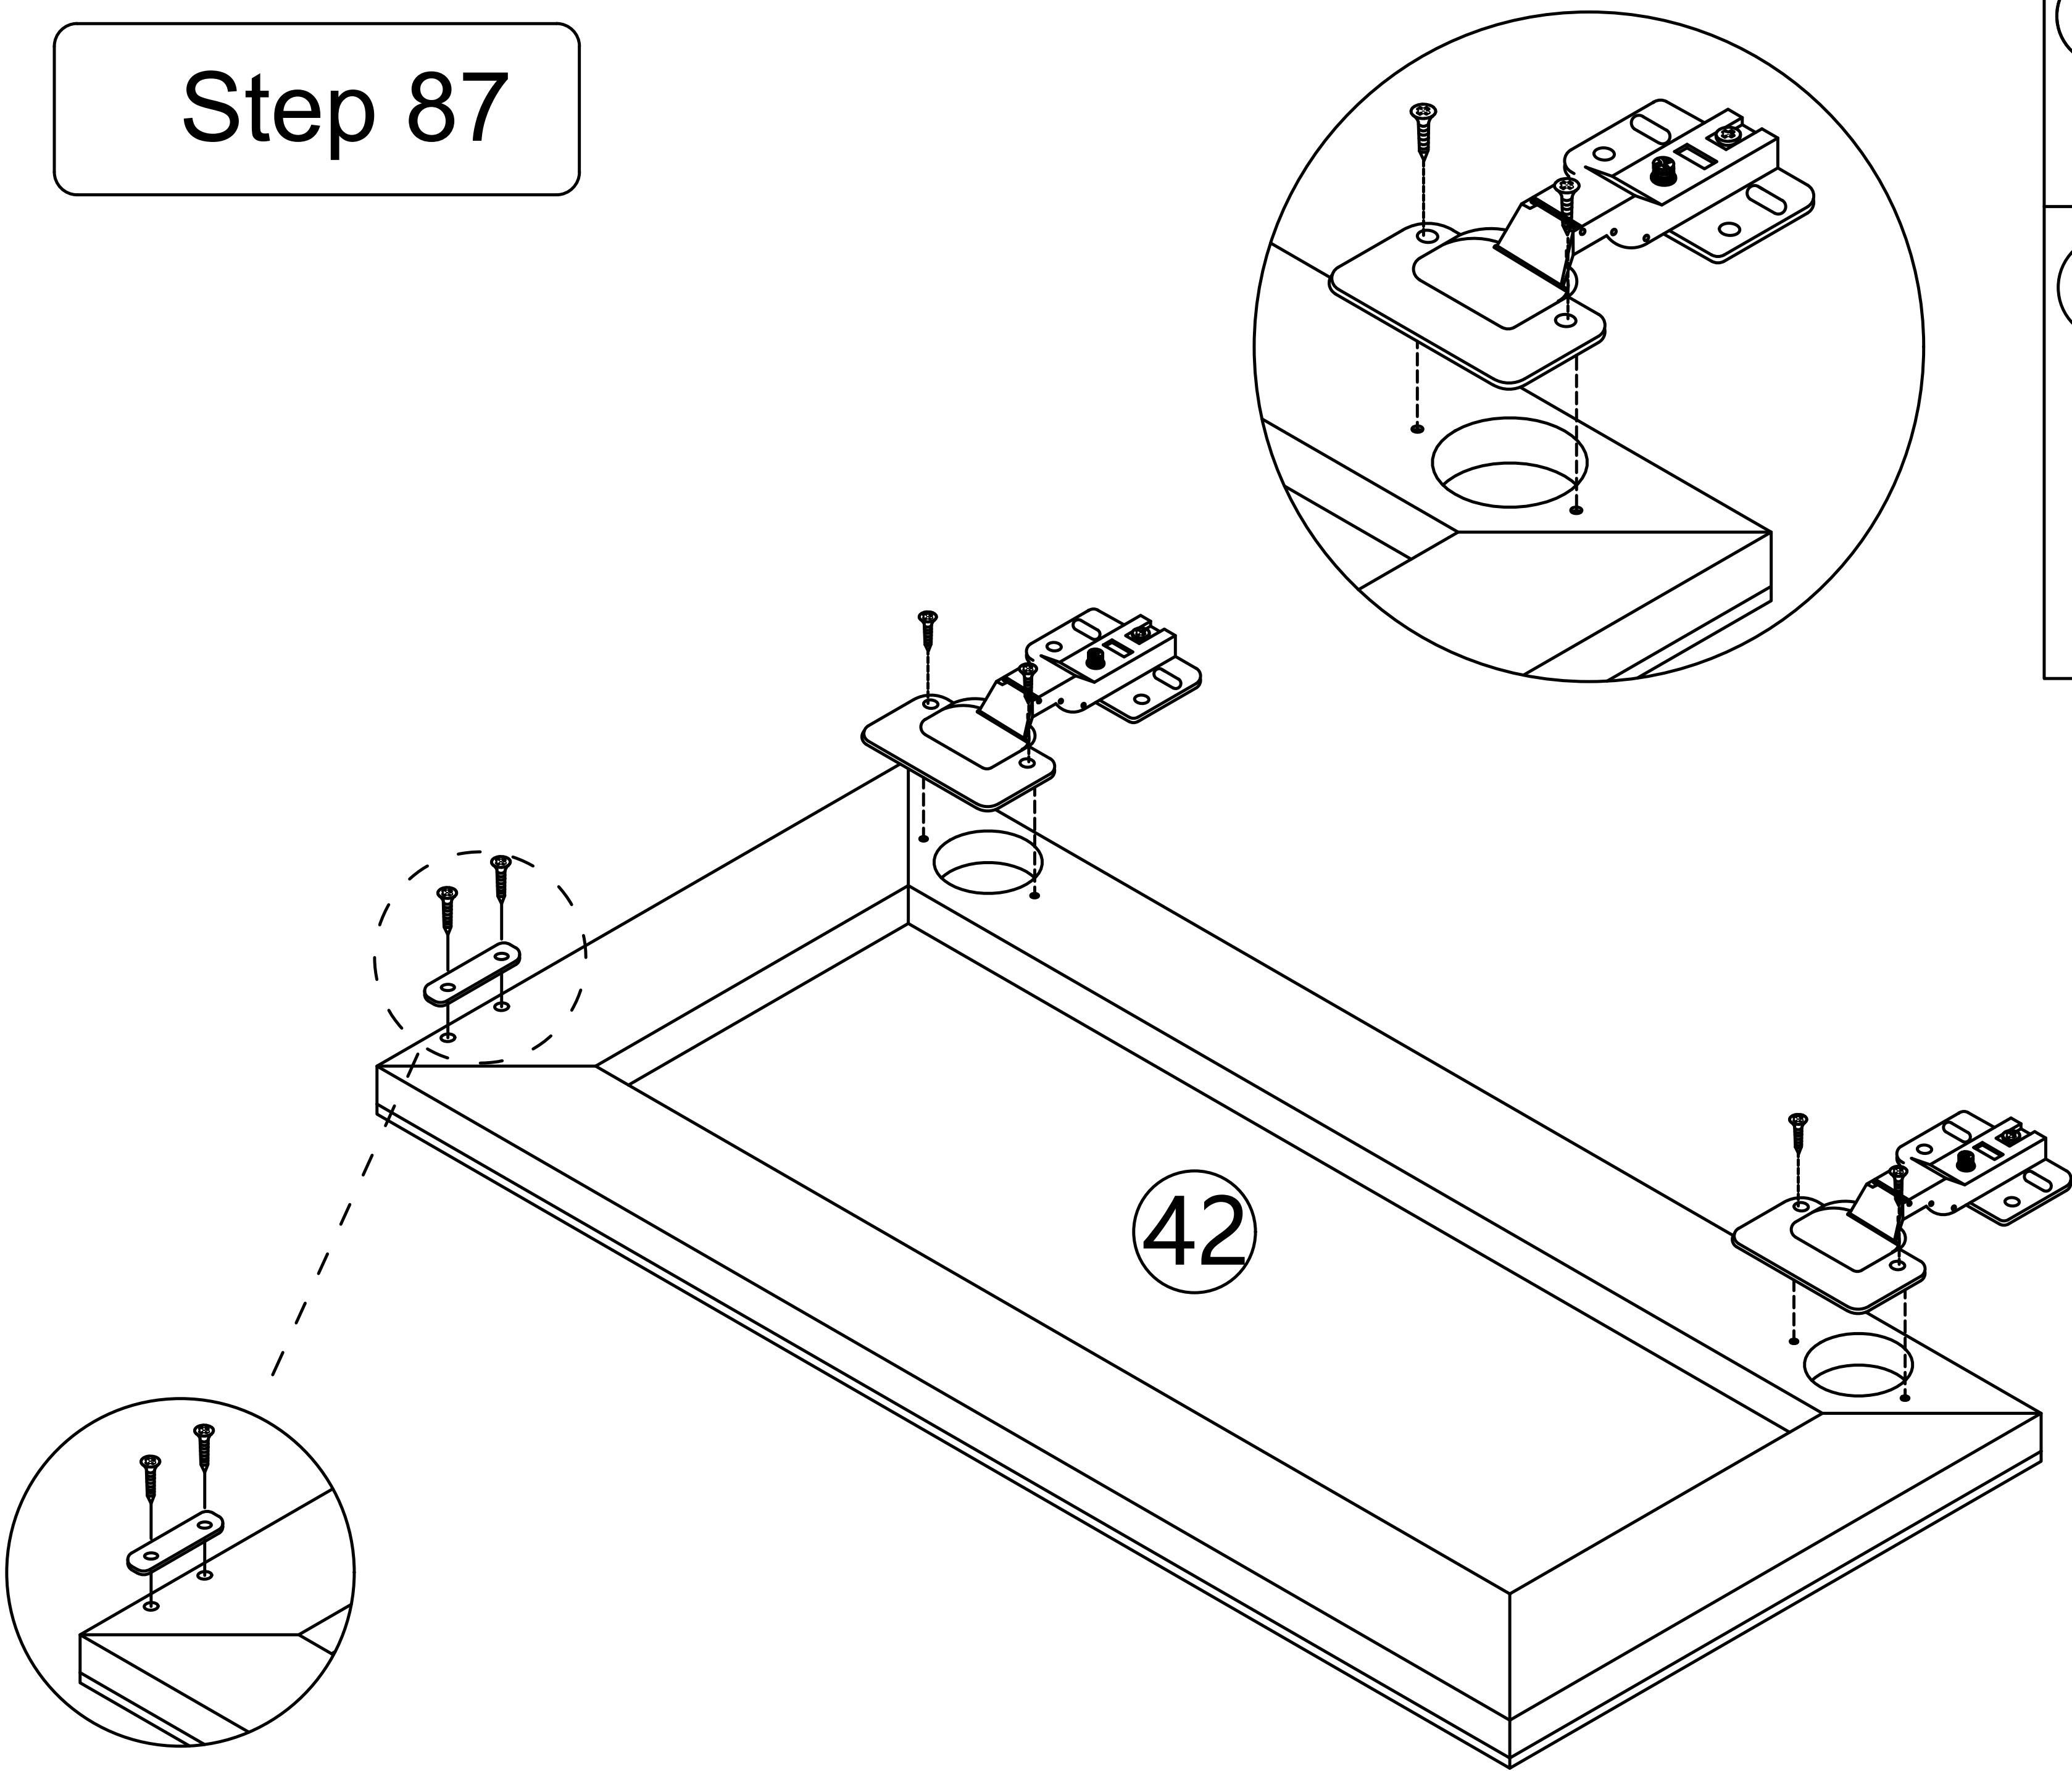

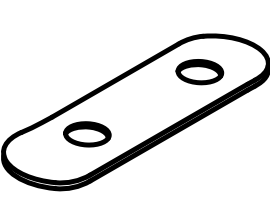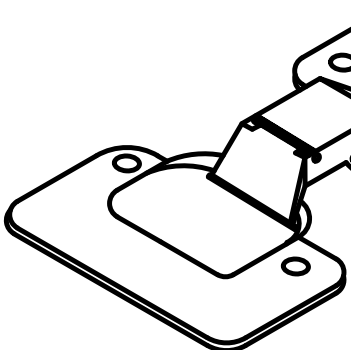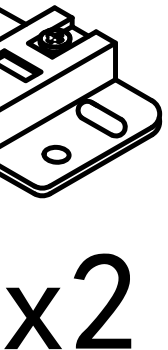- | | | |
|-----|---|---|
| (S) |  |  |
| | x1 | x2 |
| (T) |  |  |
| | x2 | |
| |  |  |
| | x4 | |


Step 88

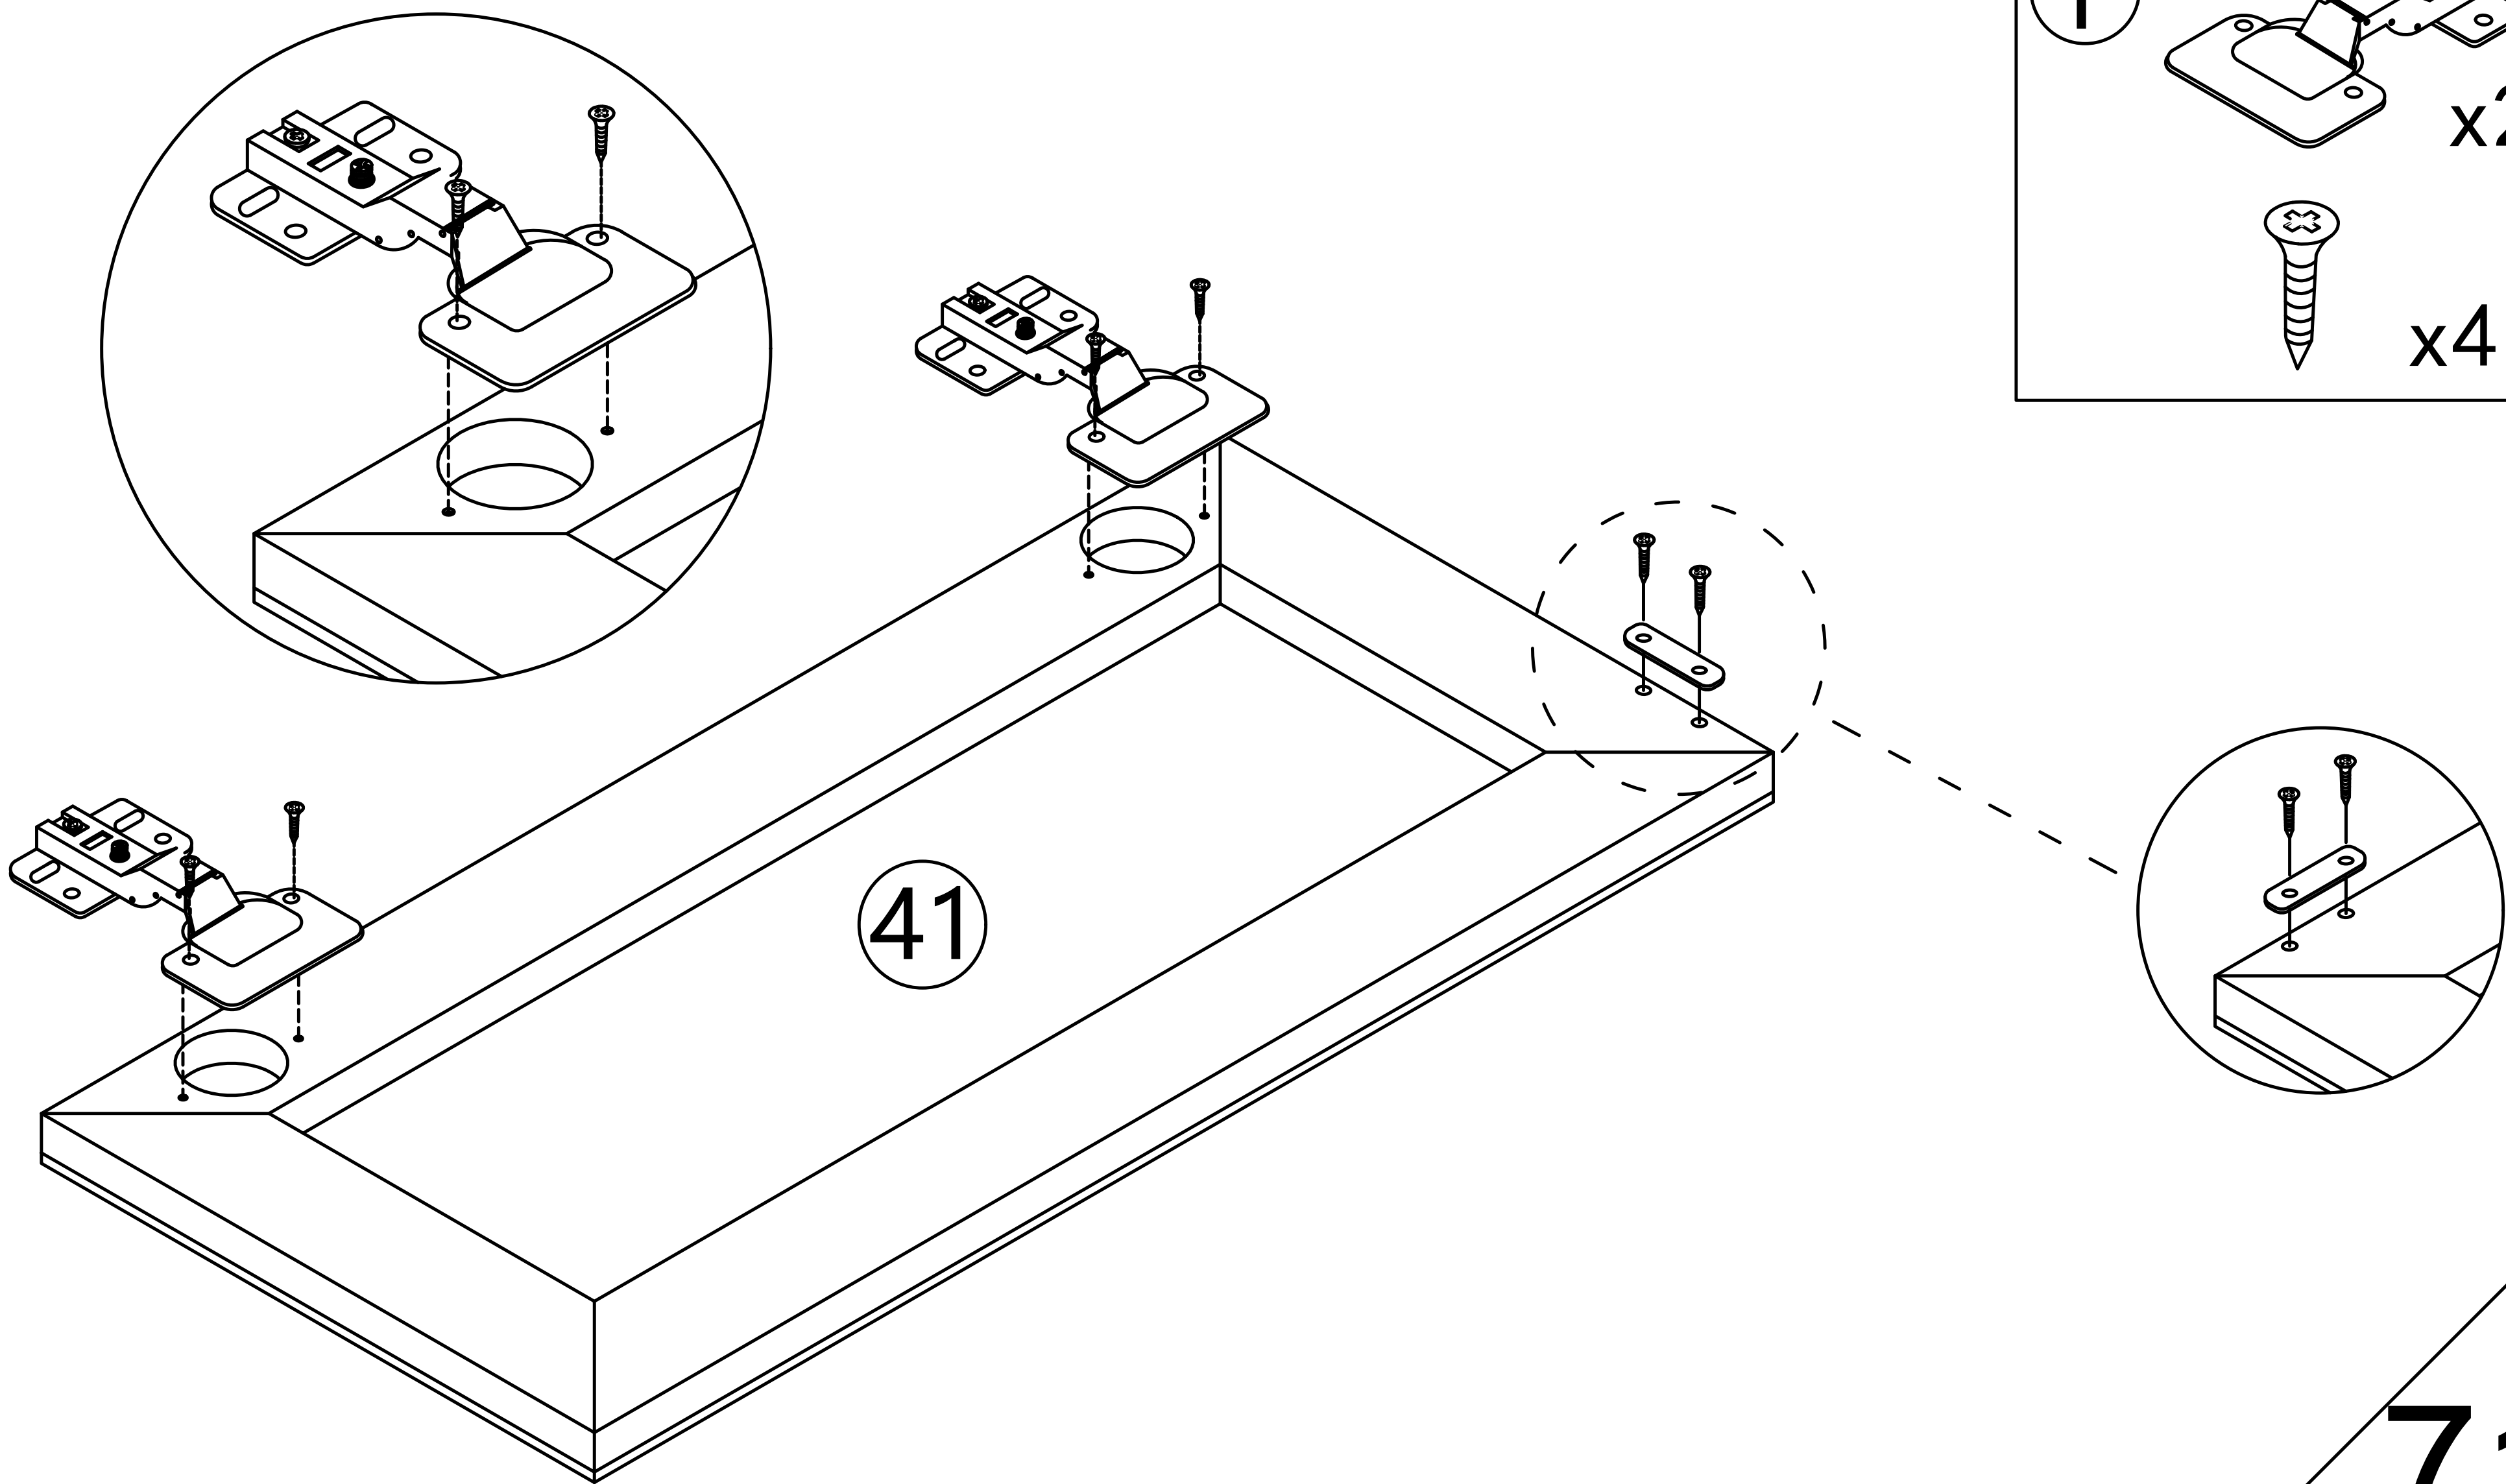

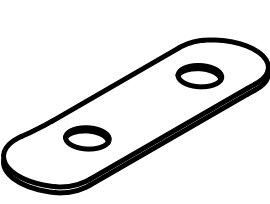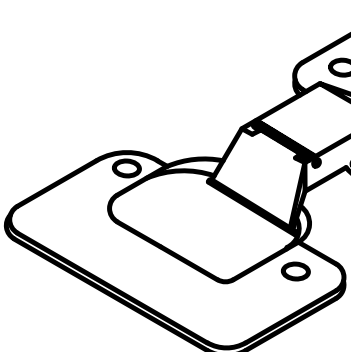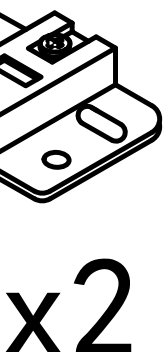

- | | | |
|-----|---|---|
| (S) |  |  |
| | x1 | x2 |
| (T) |  |  |
| | x2 | |
| |  |  |
| | x4 | |

Step 89


T

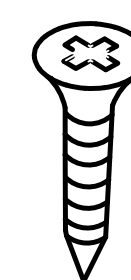

x8

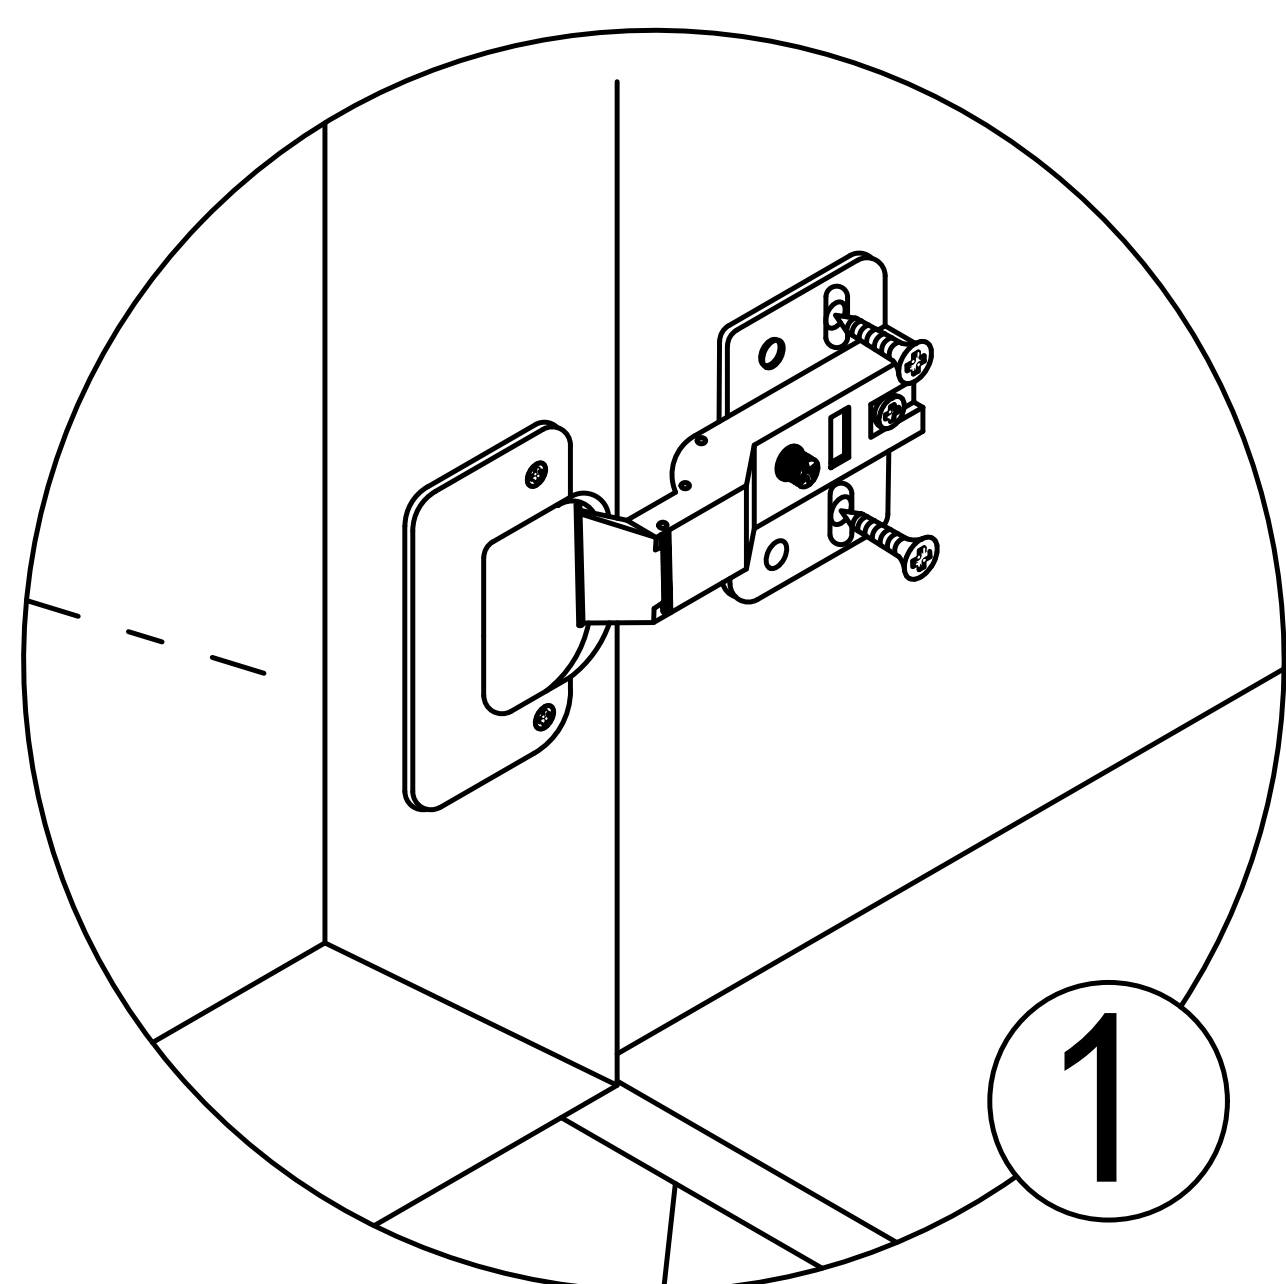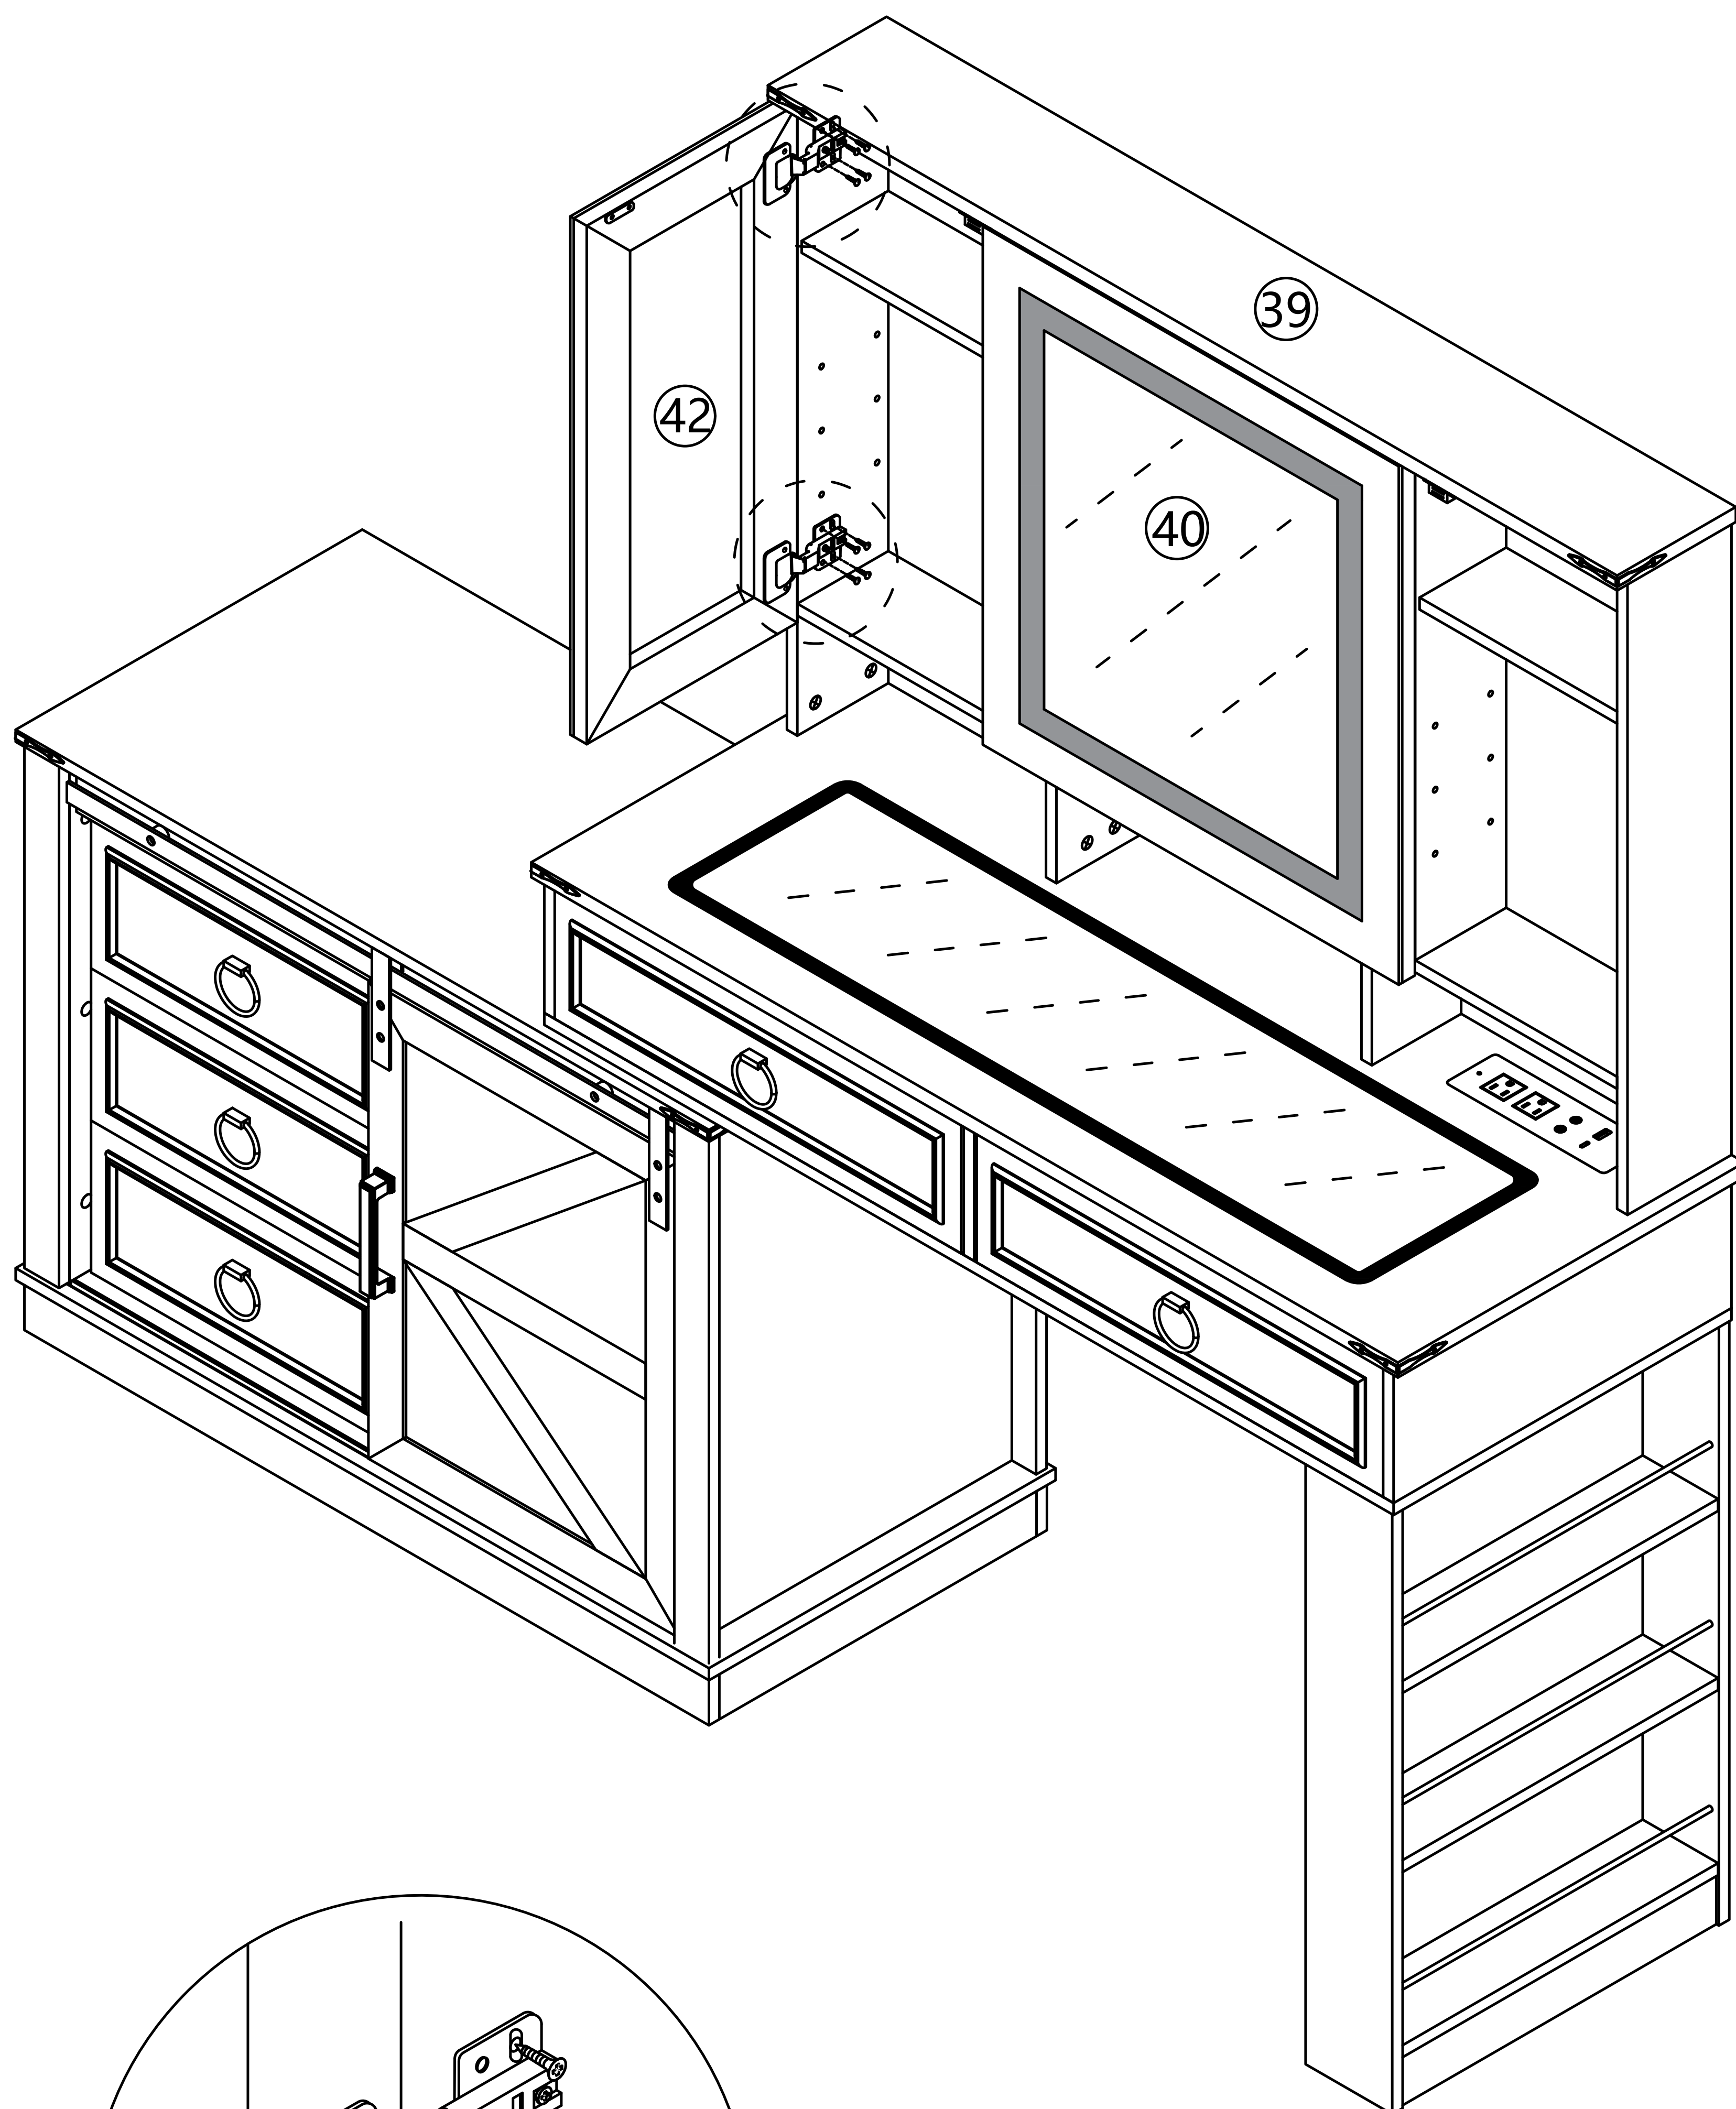


1

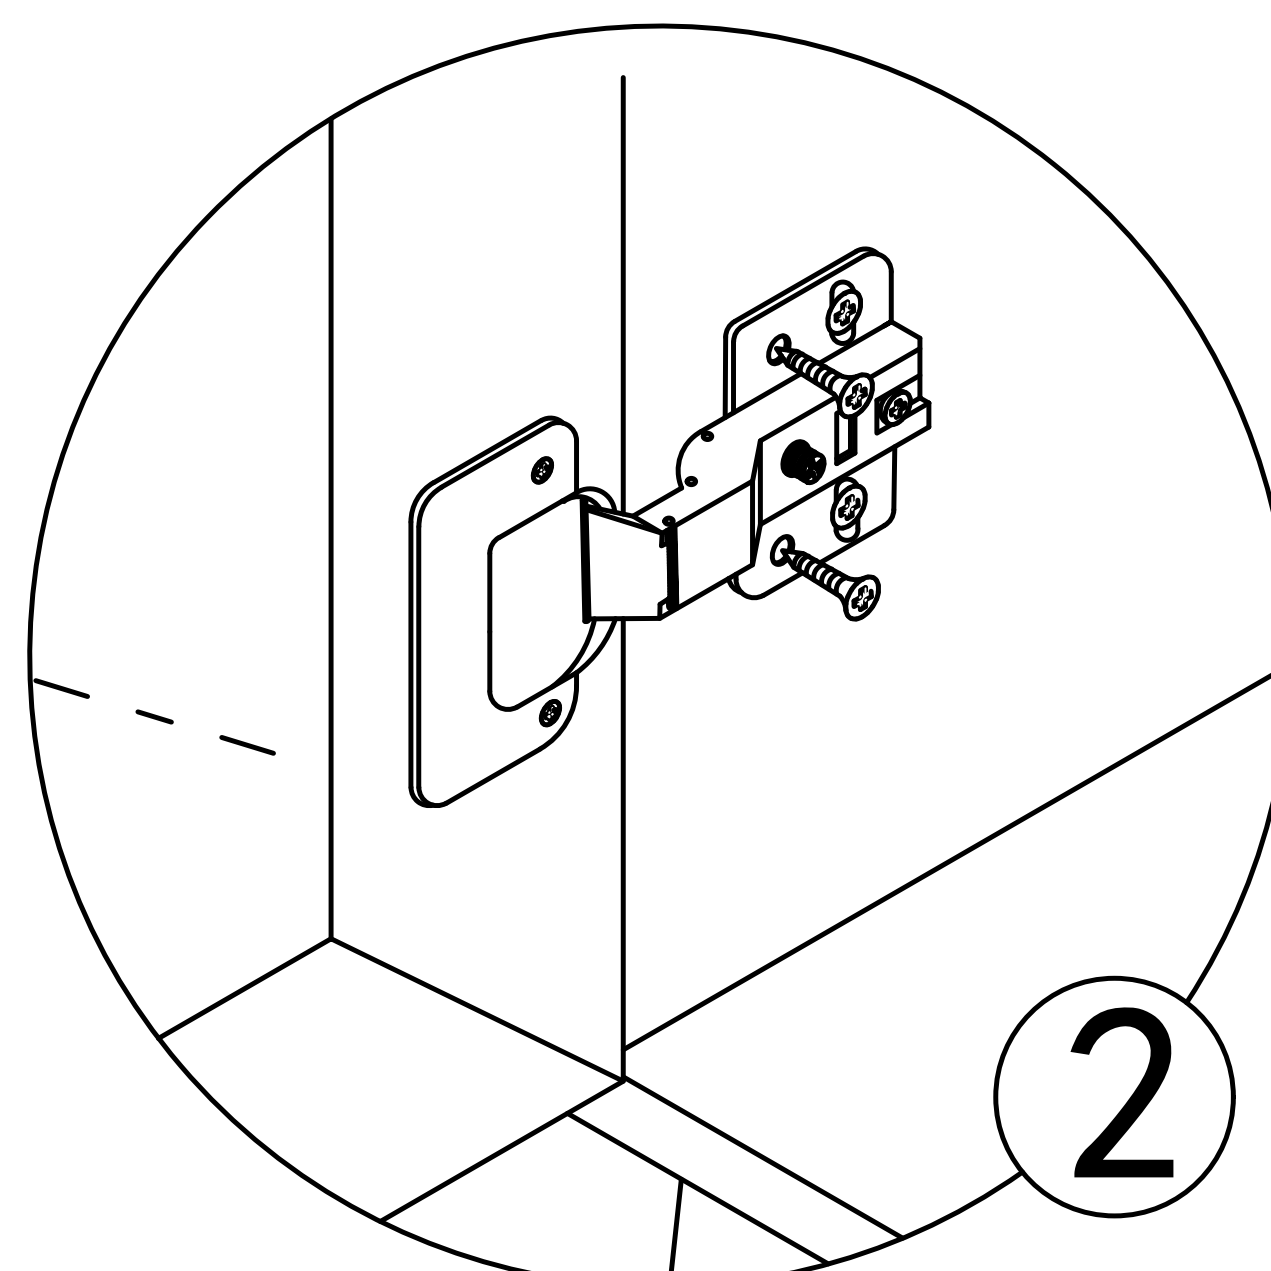


2

First lock the elliptical hole
then lock the fixed hole

Step 90

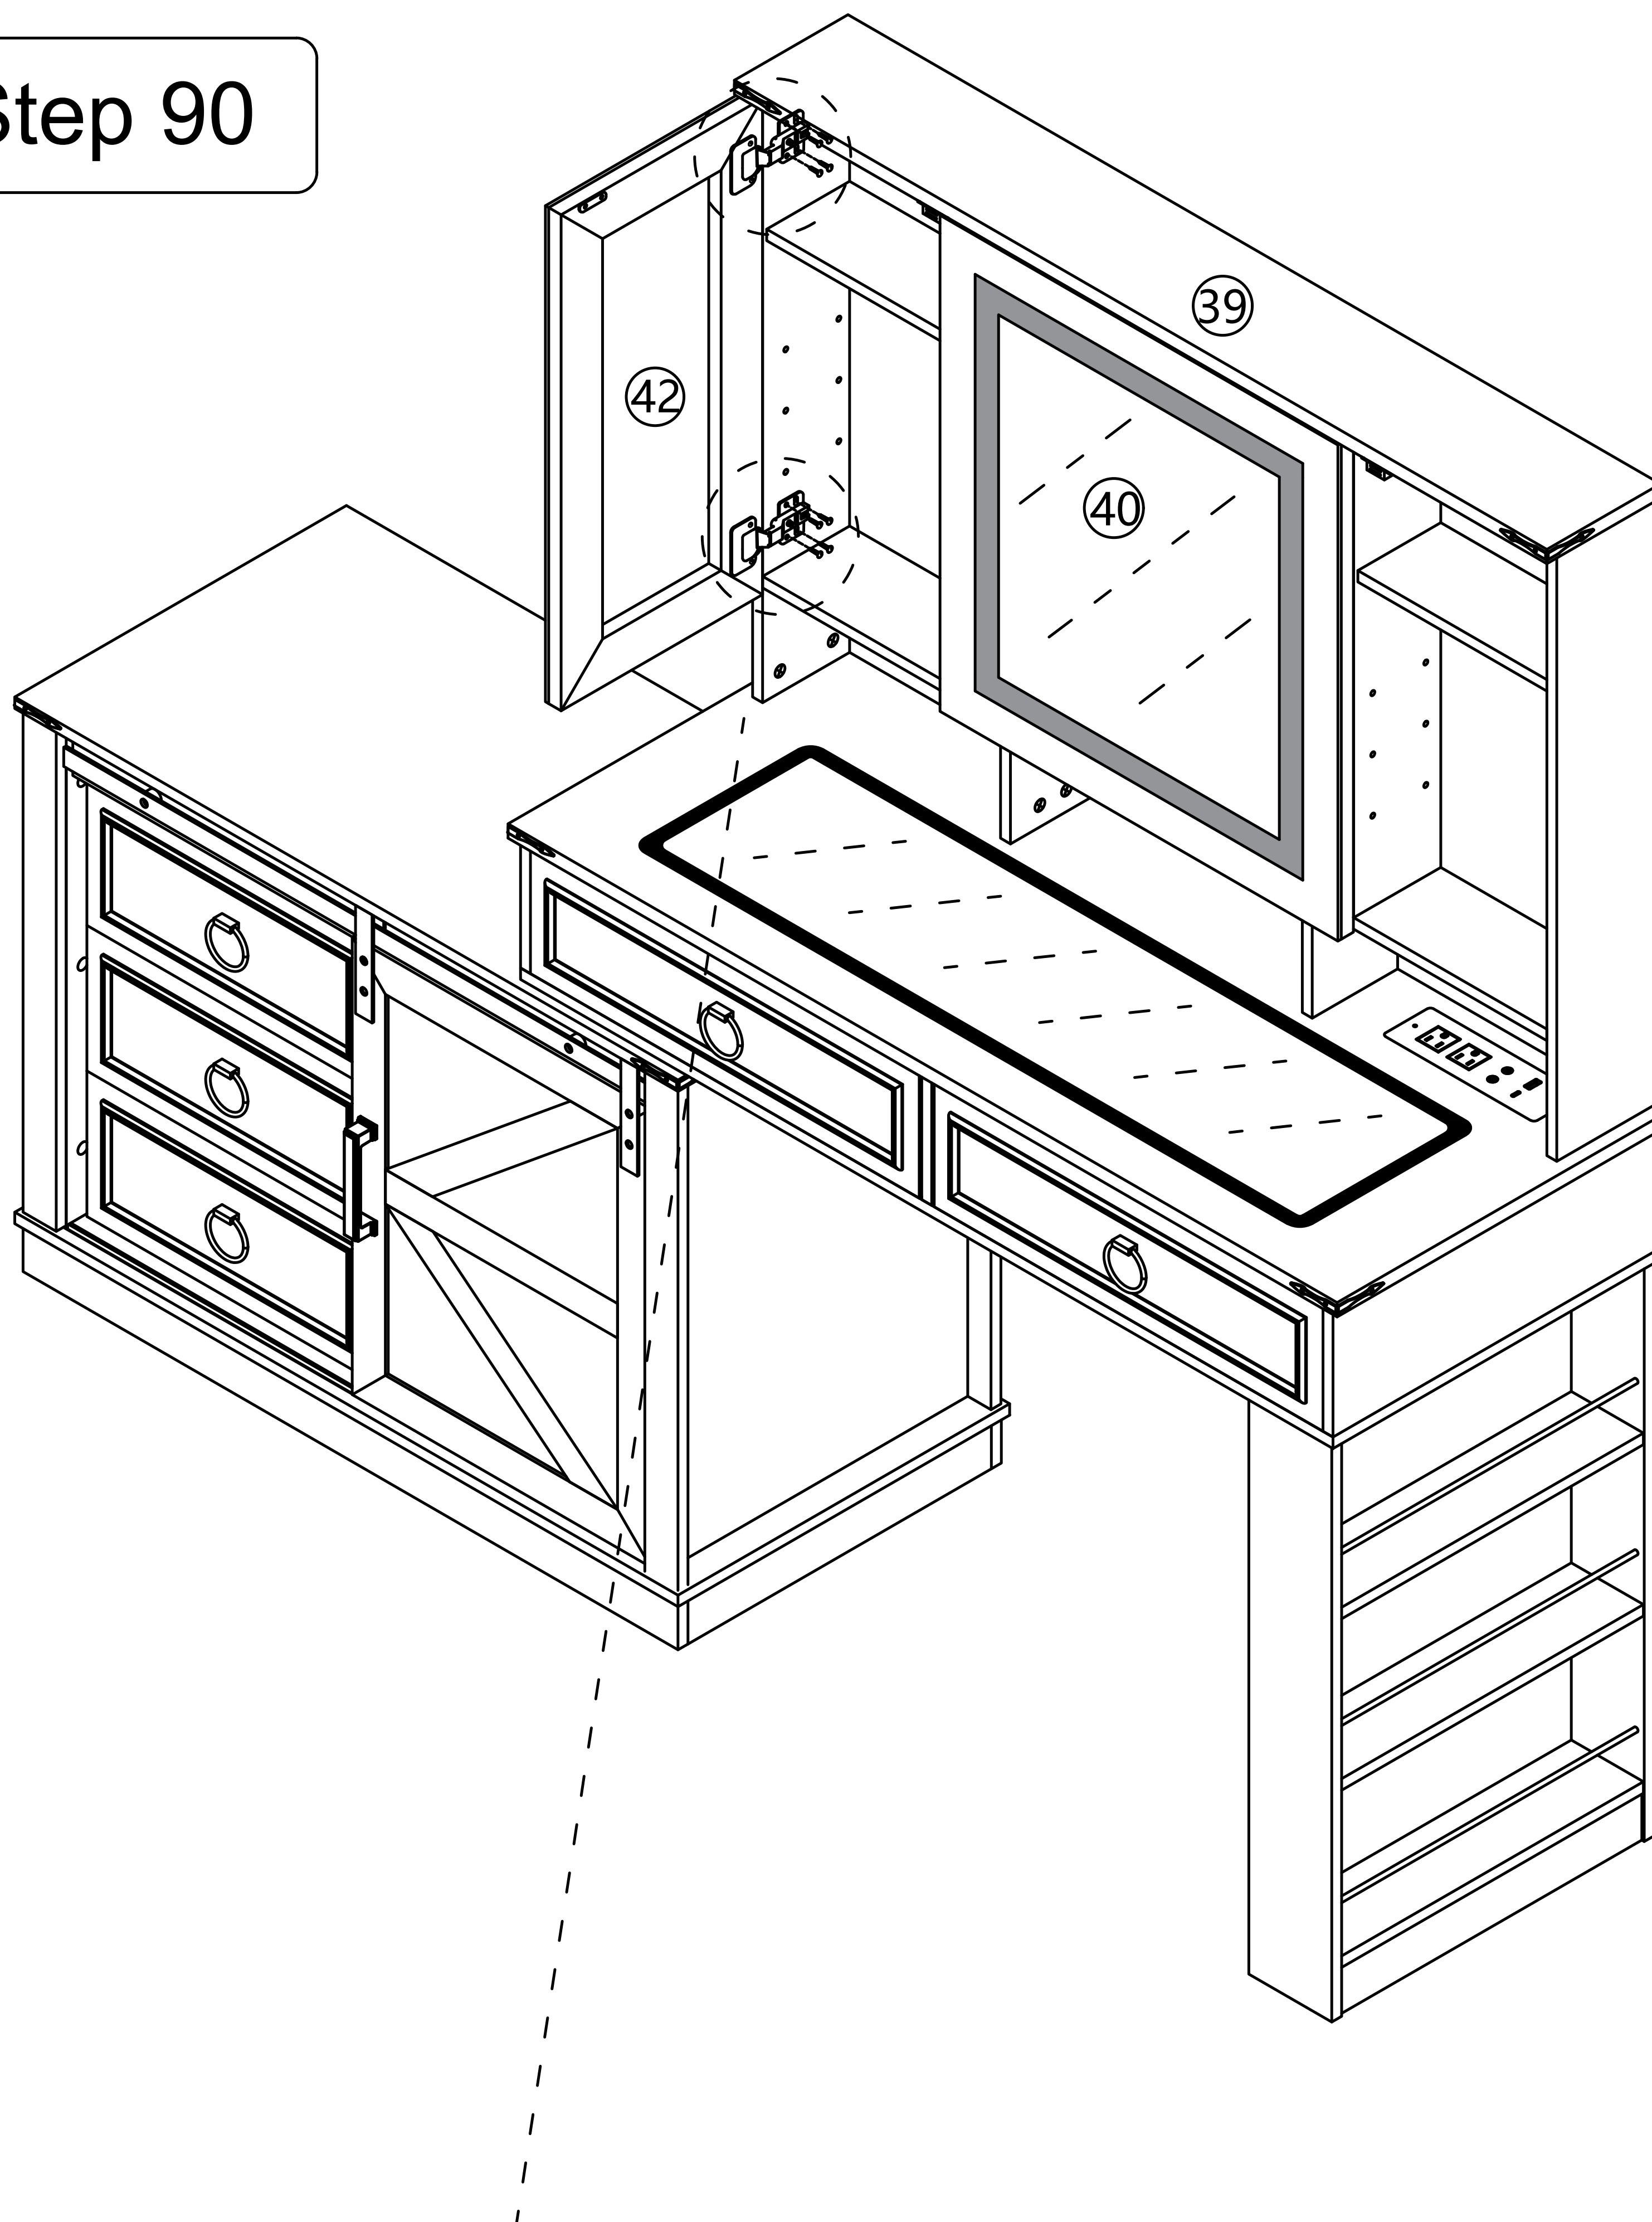



Turning this screw can effectively adjust the size of the door gap.

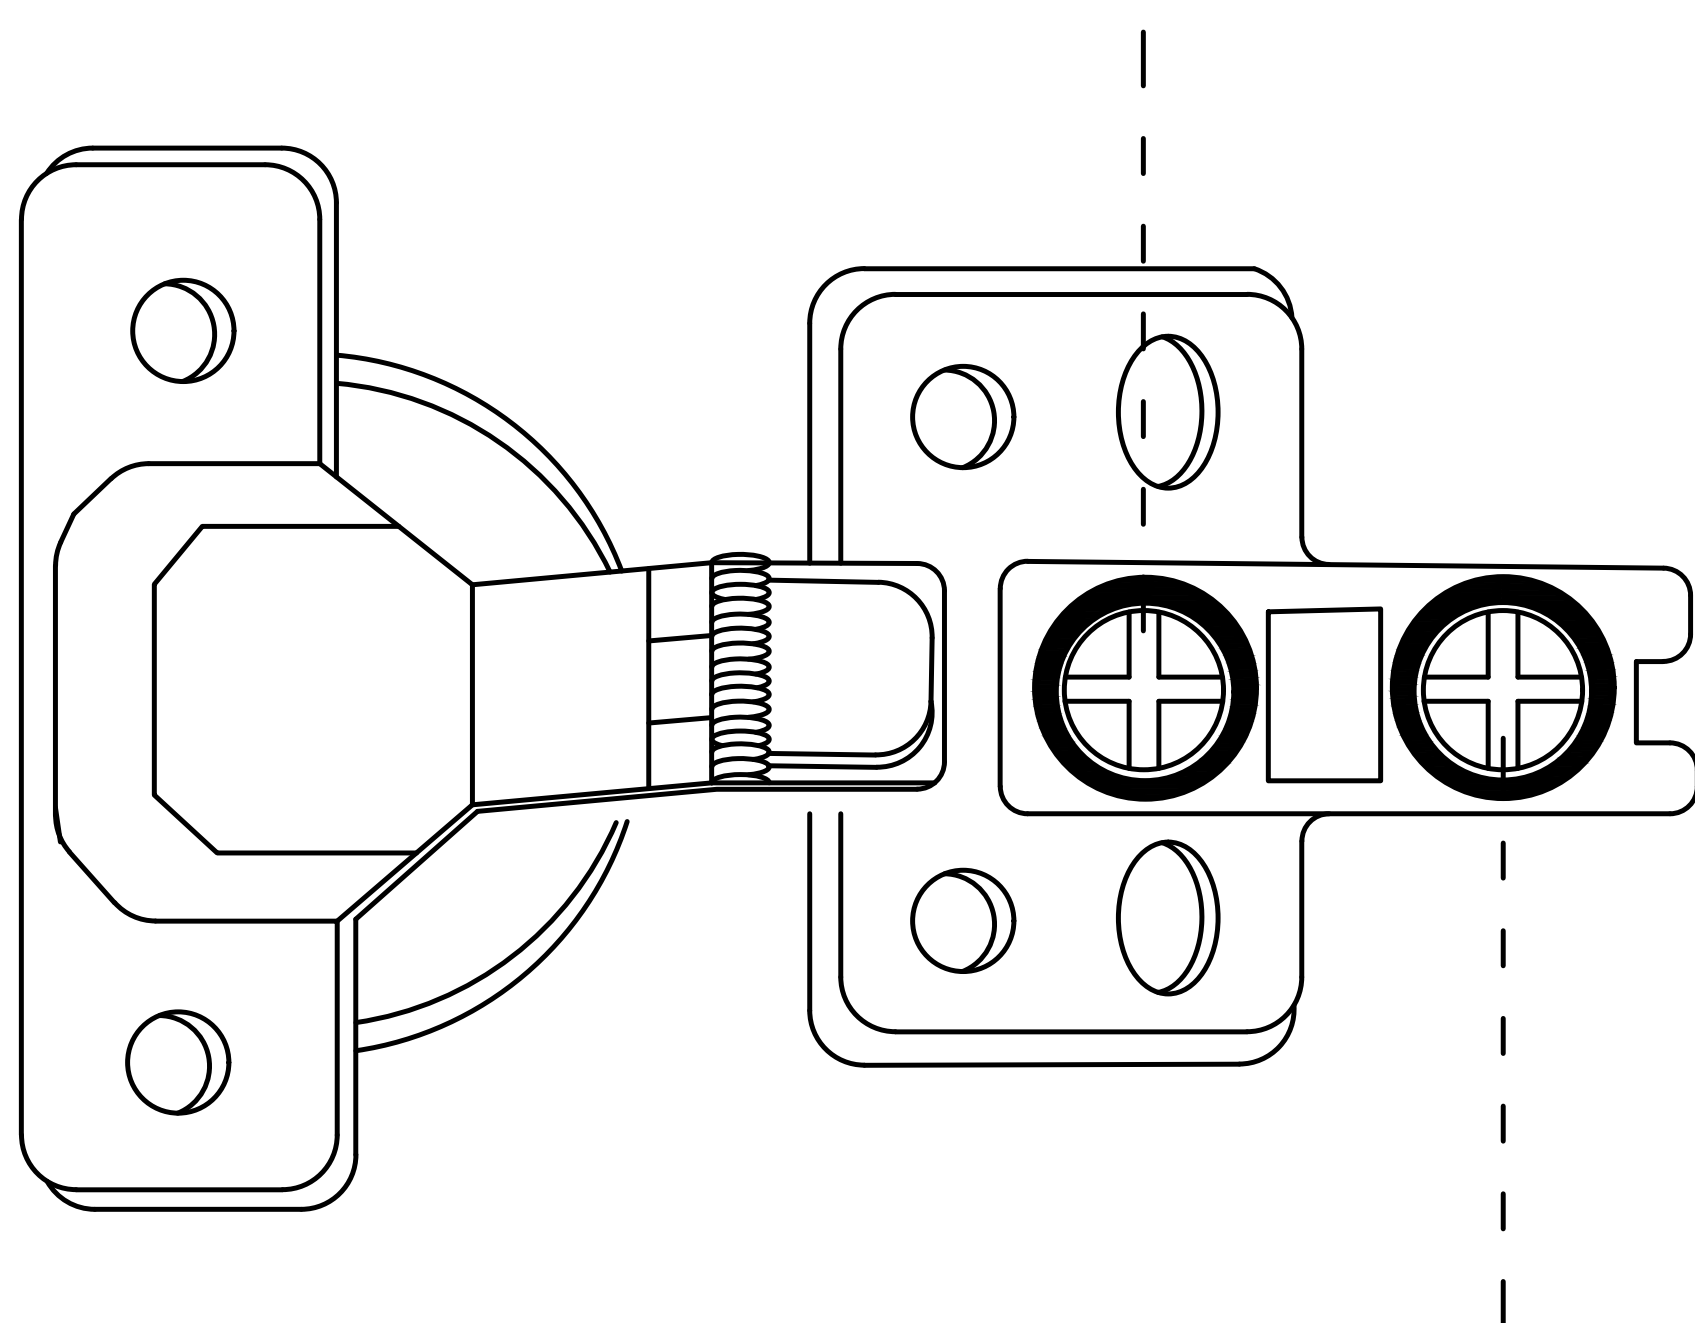


Turn this screw to adjust the door panel to be flat with the side panel.

Step 91

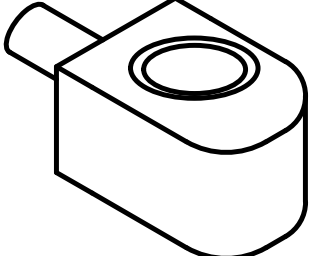
M  x4



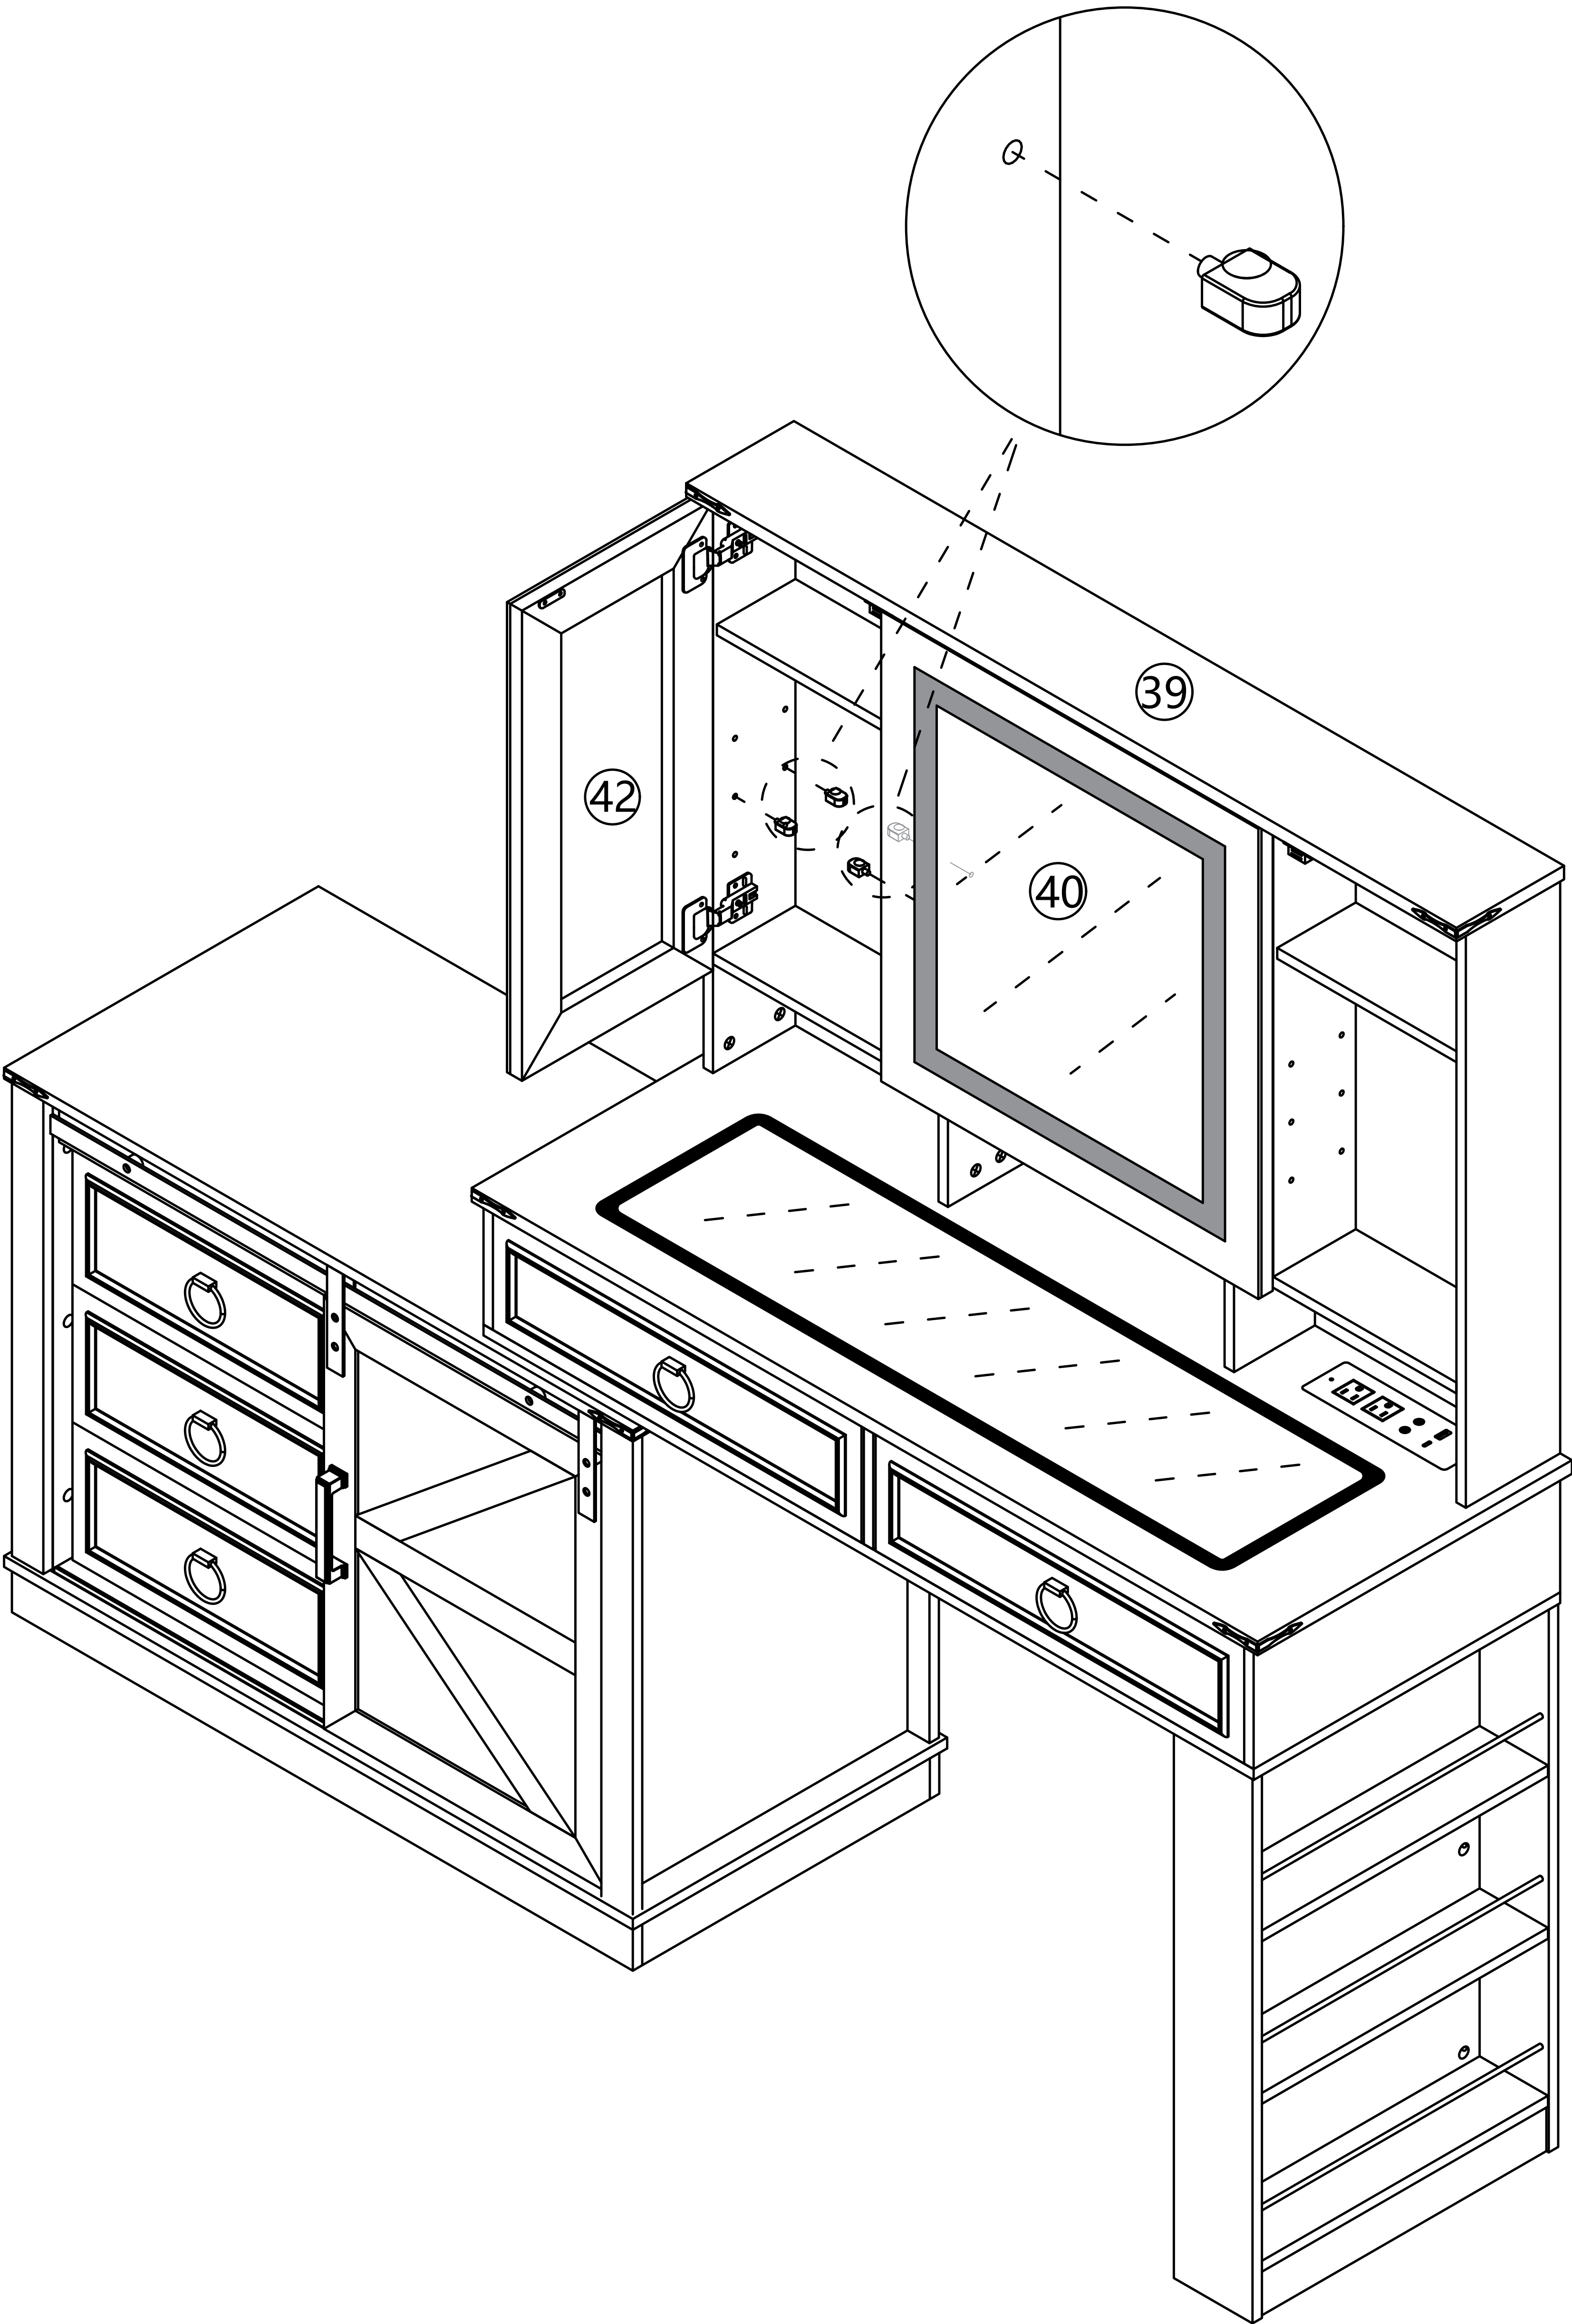


Step 92

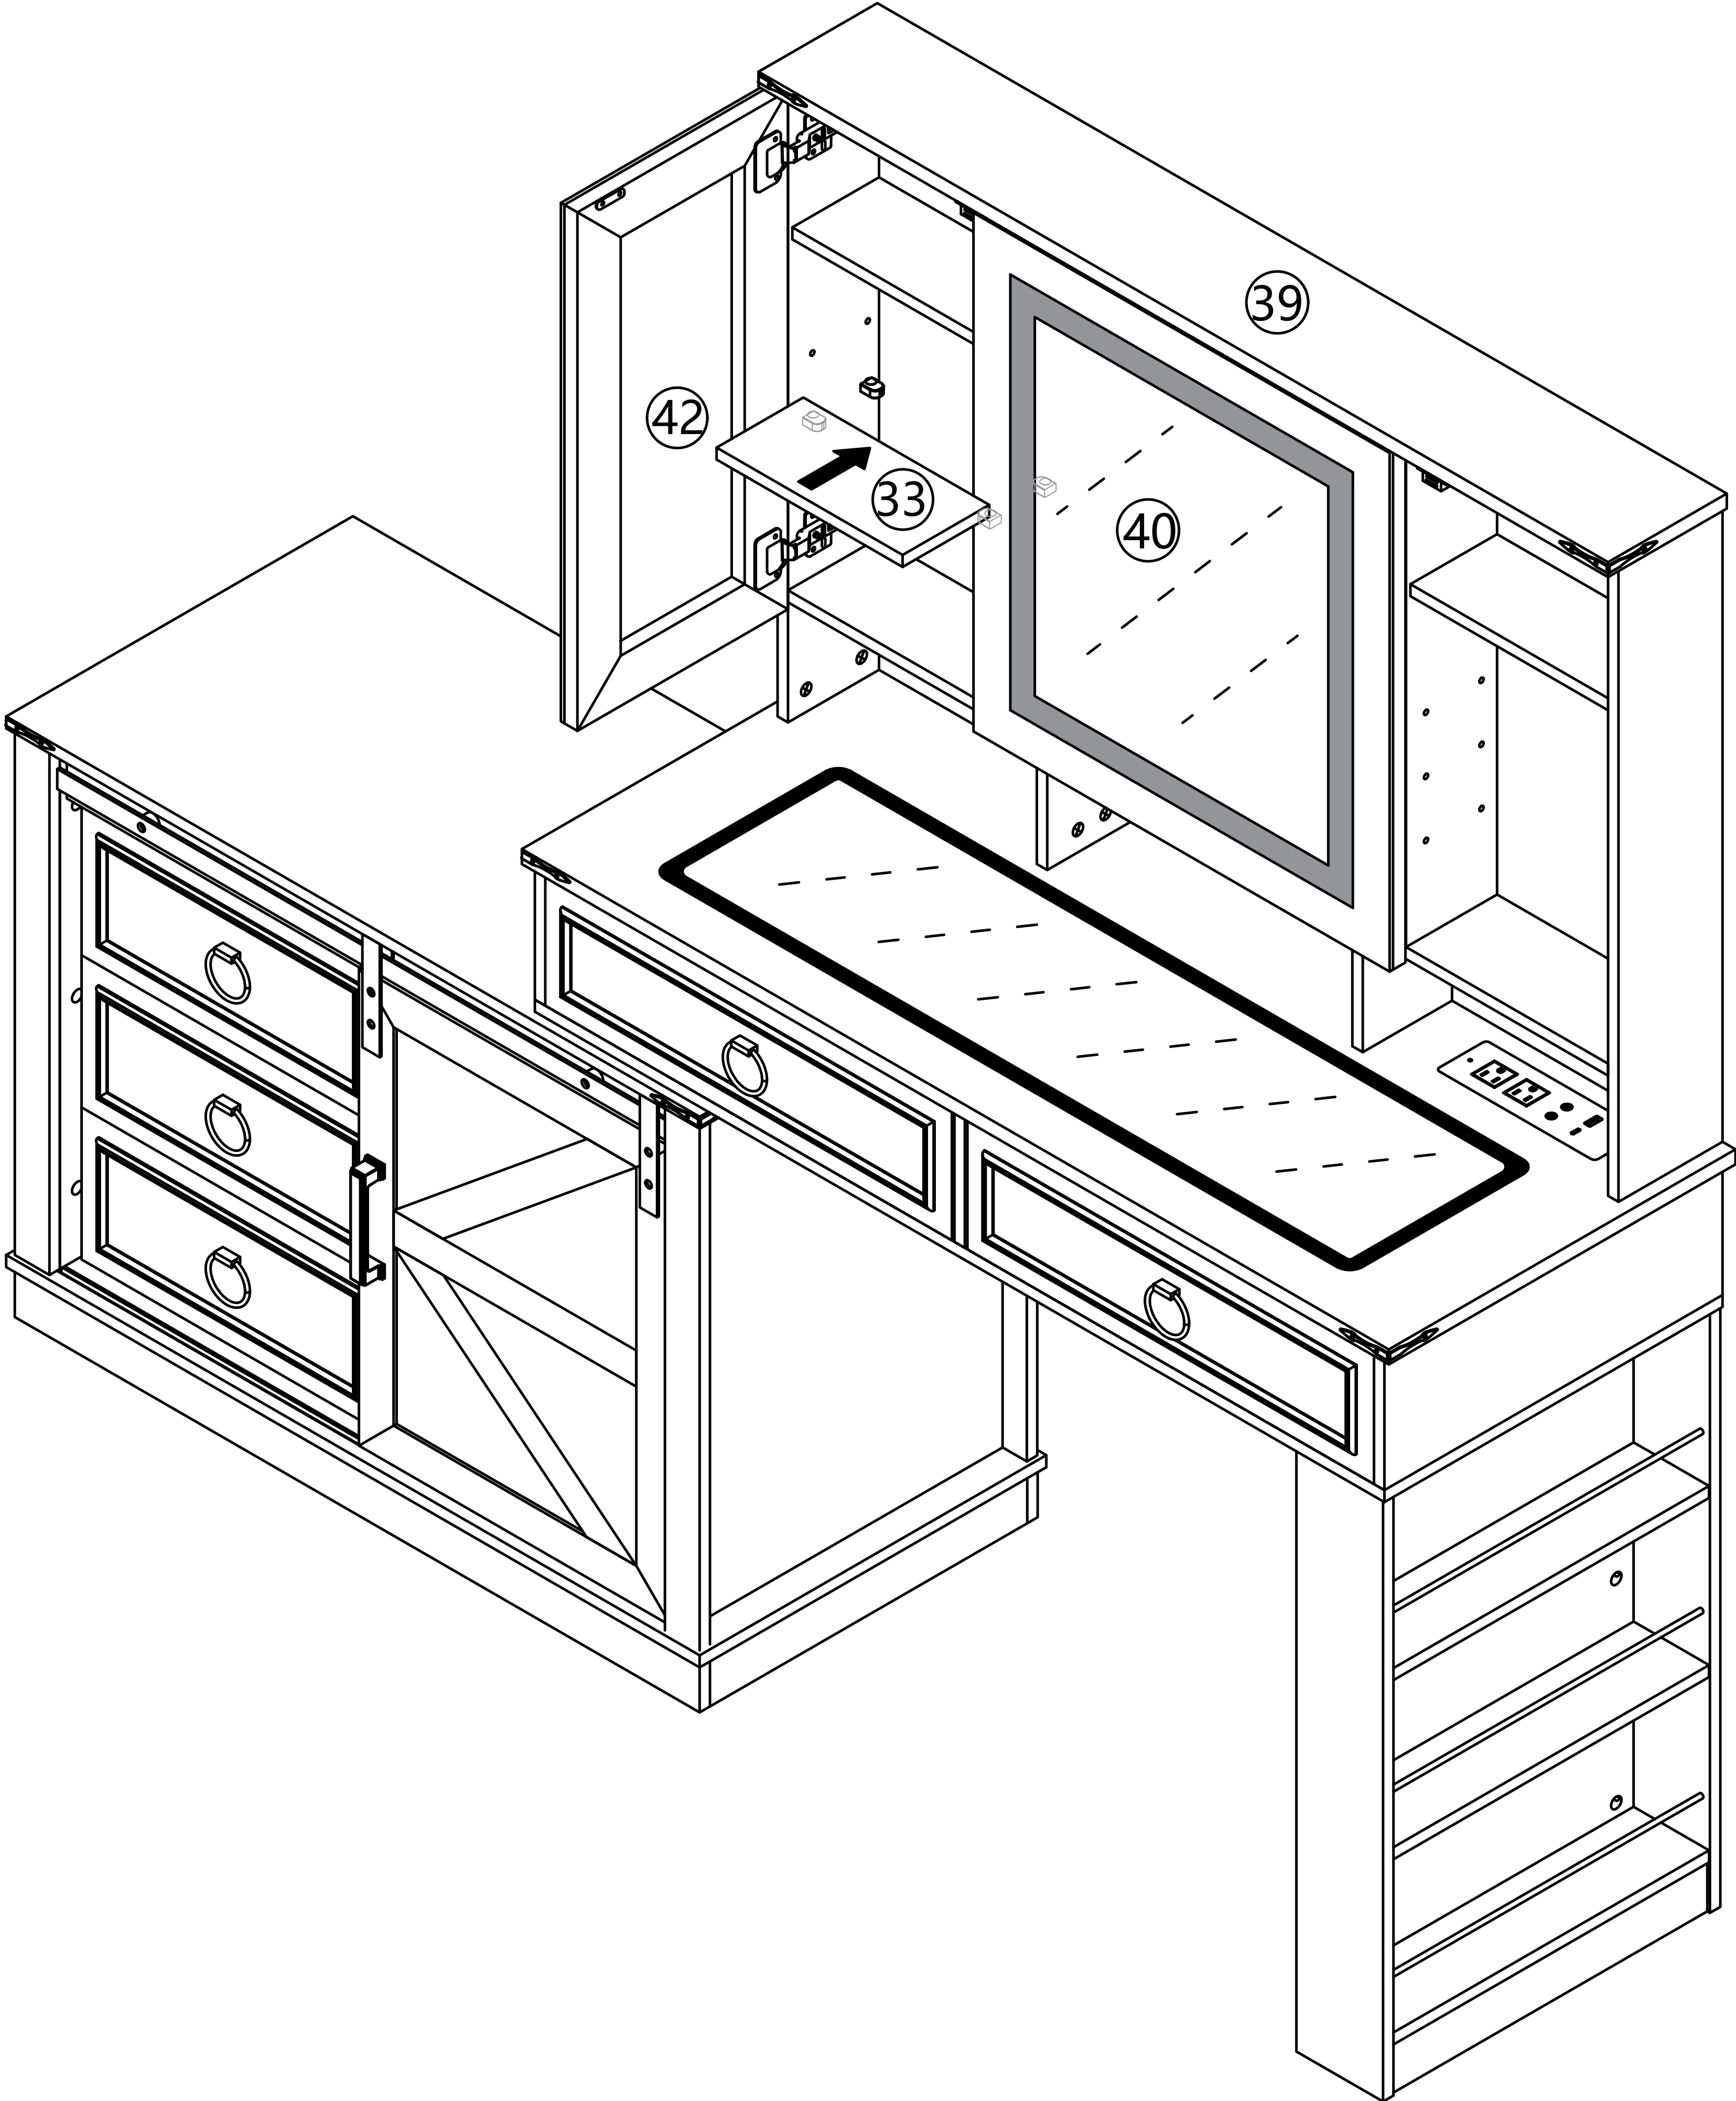

Step 93

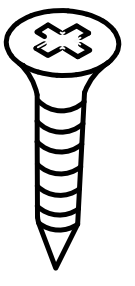
T  x8

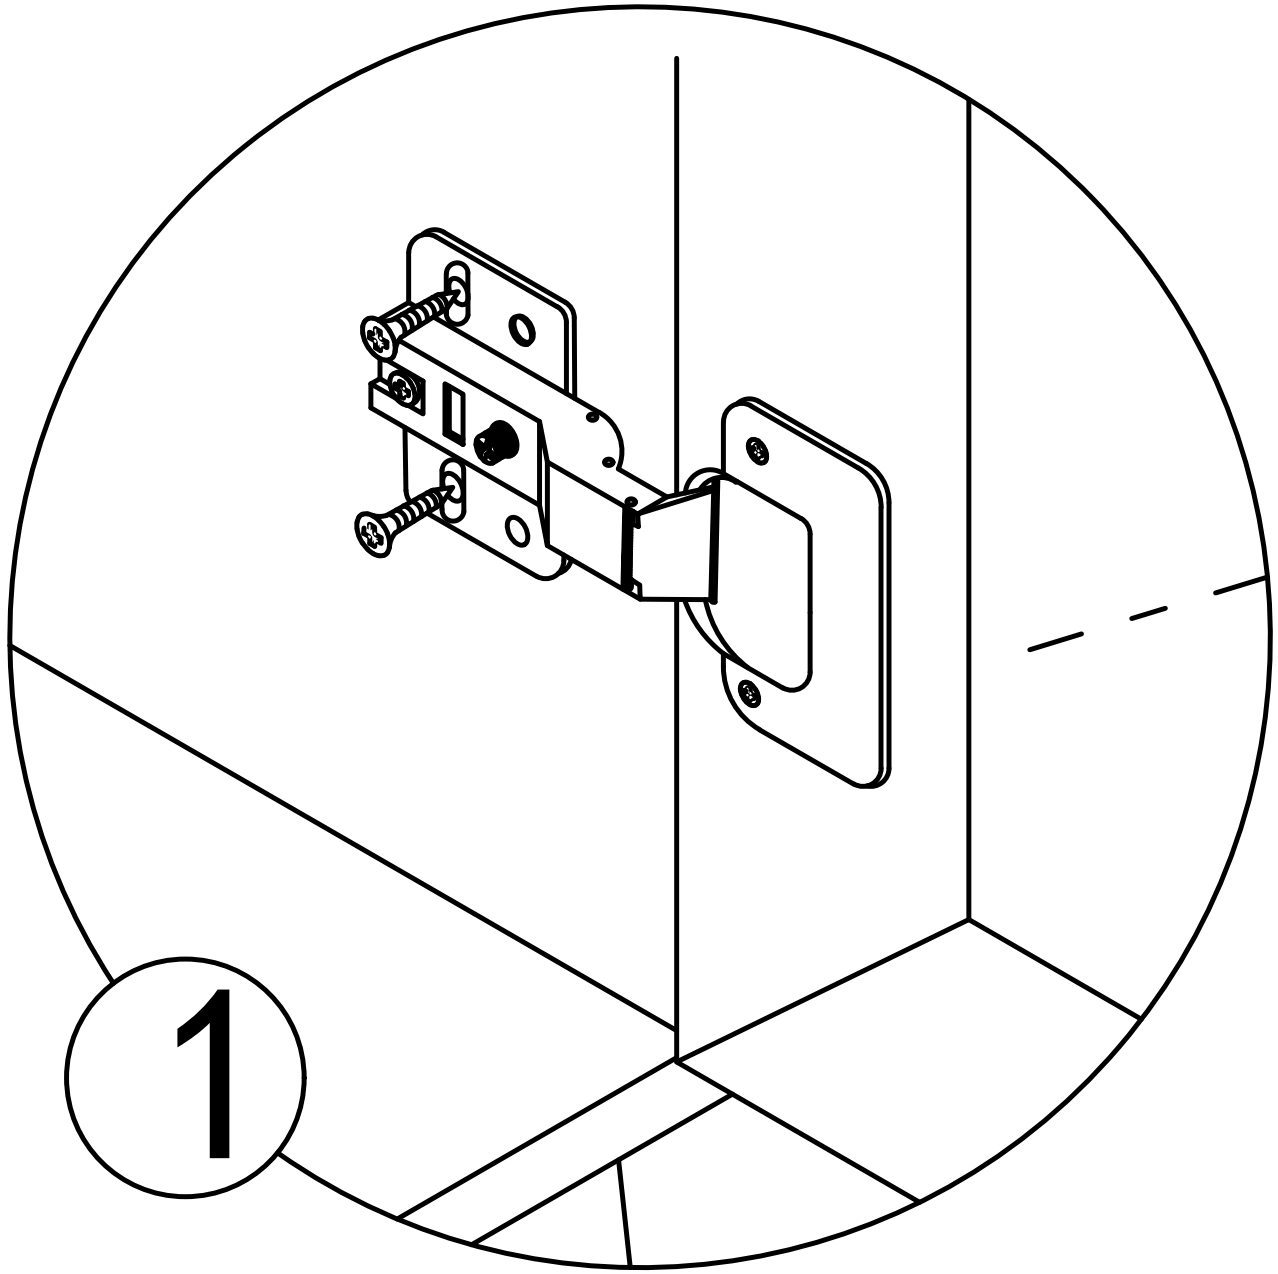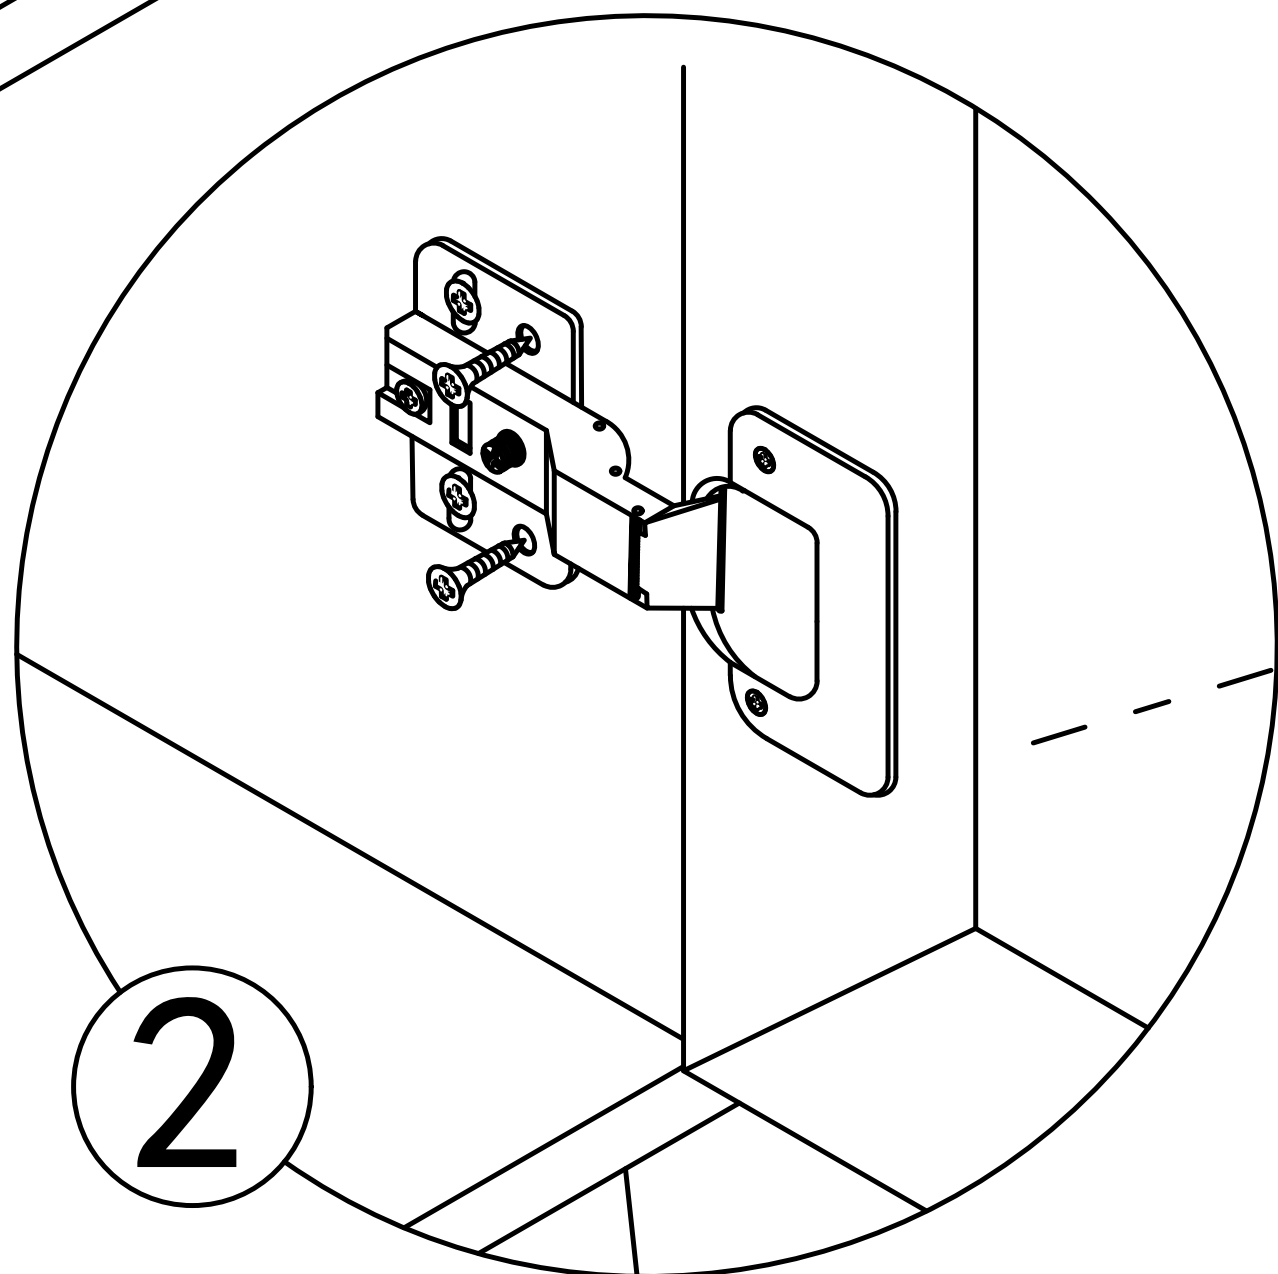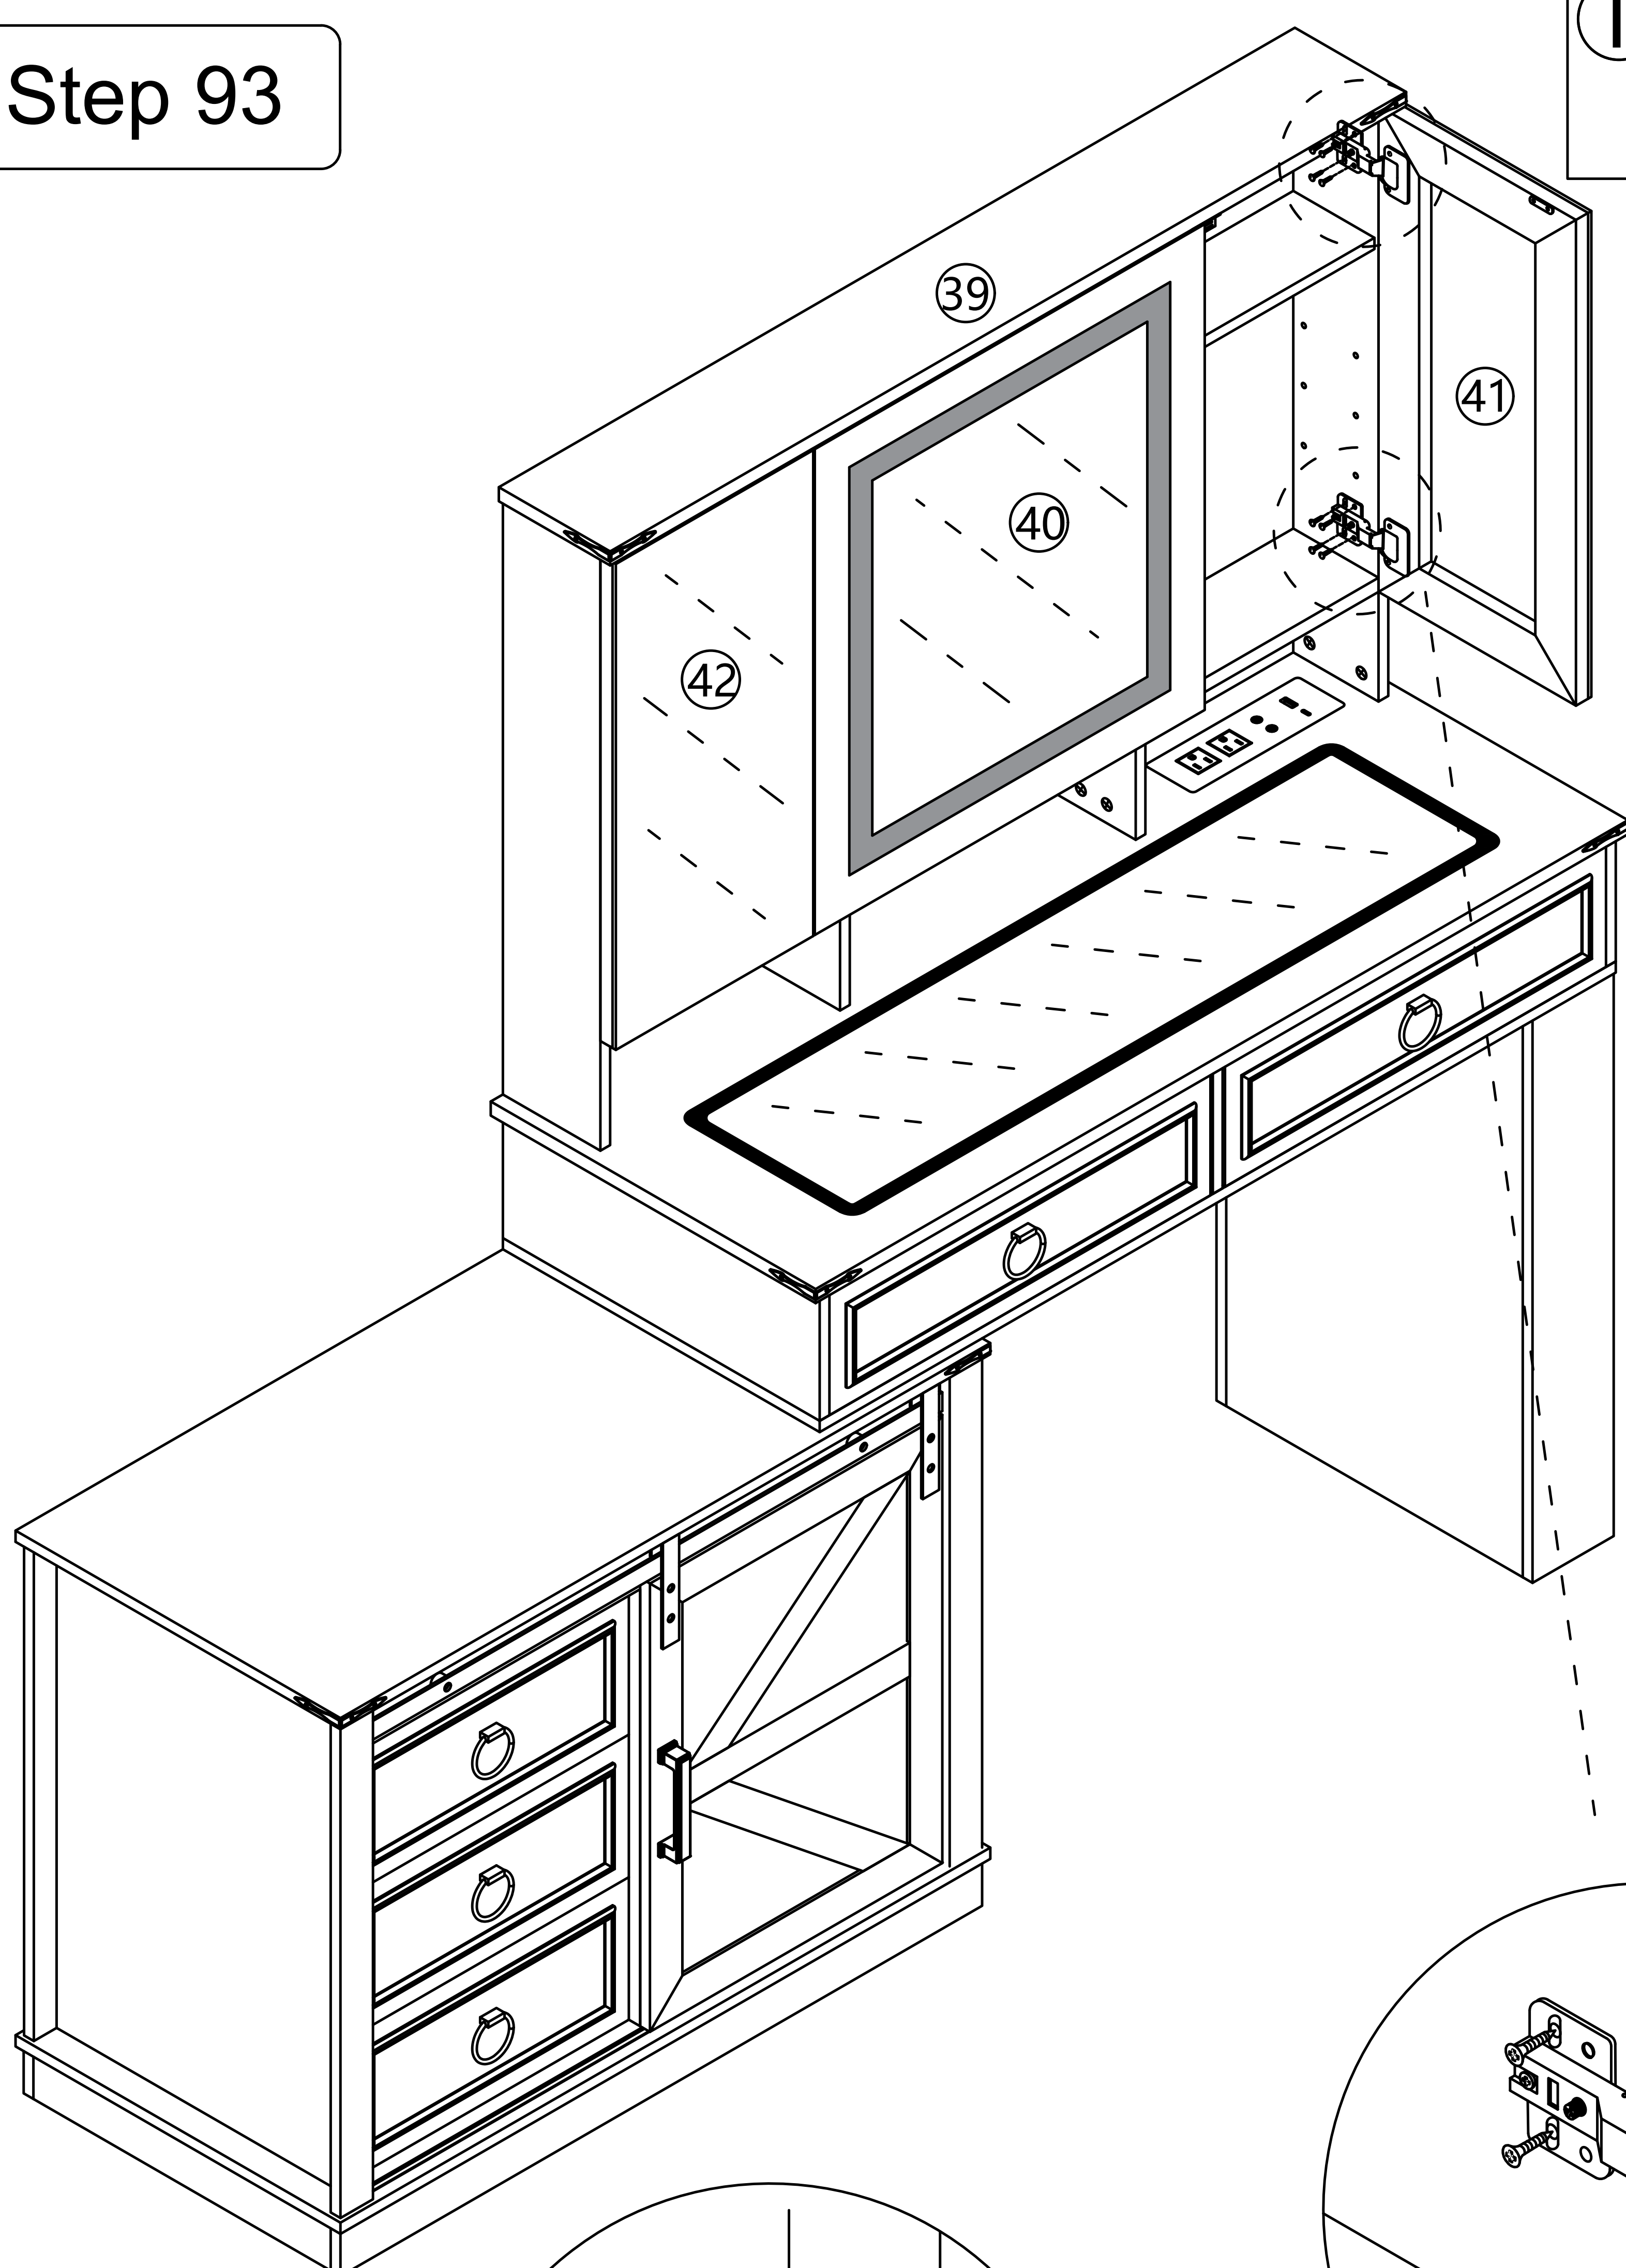


First lock the elliptical hole
then lock the fixed hole

Step 94


T

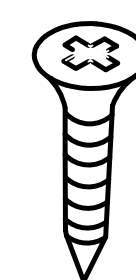

x8

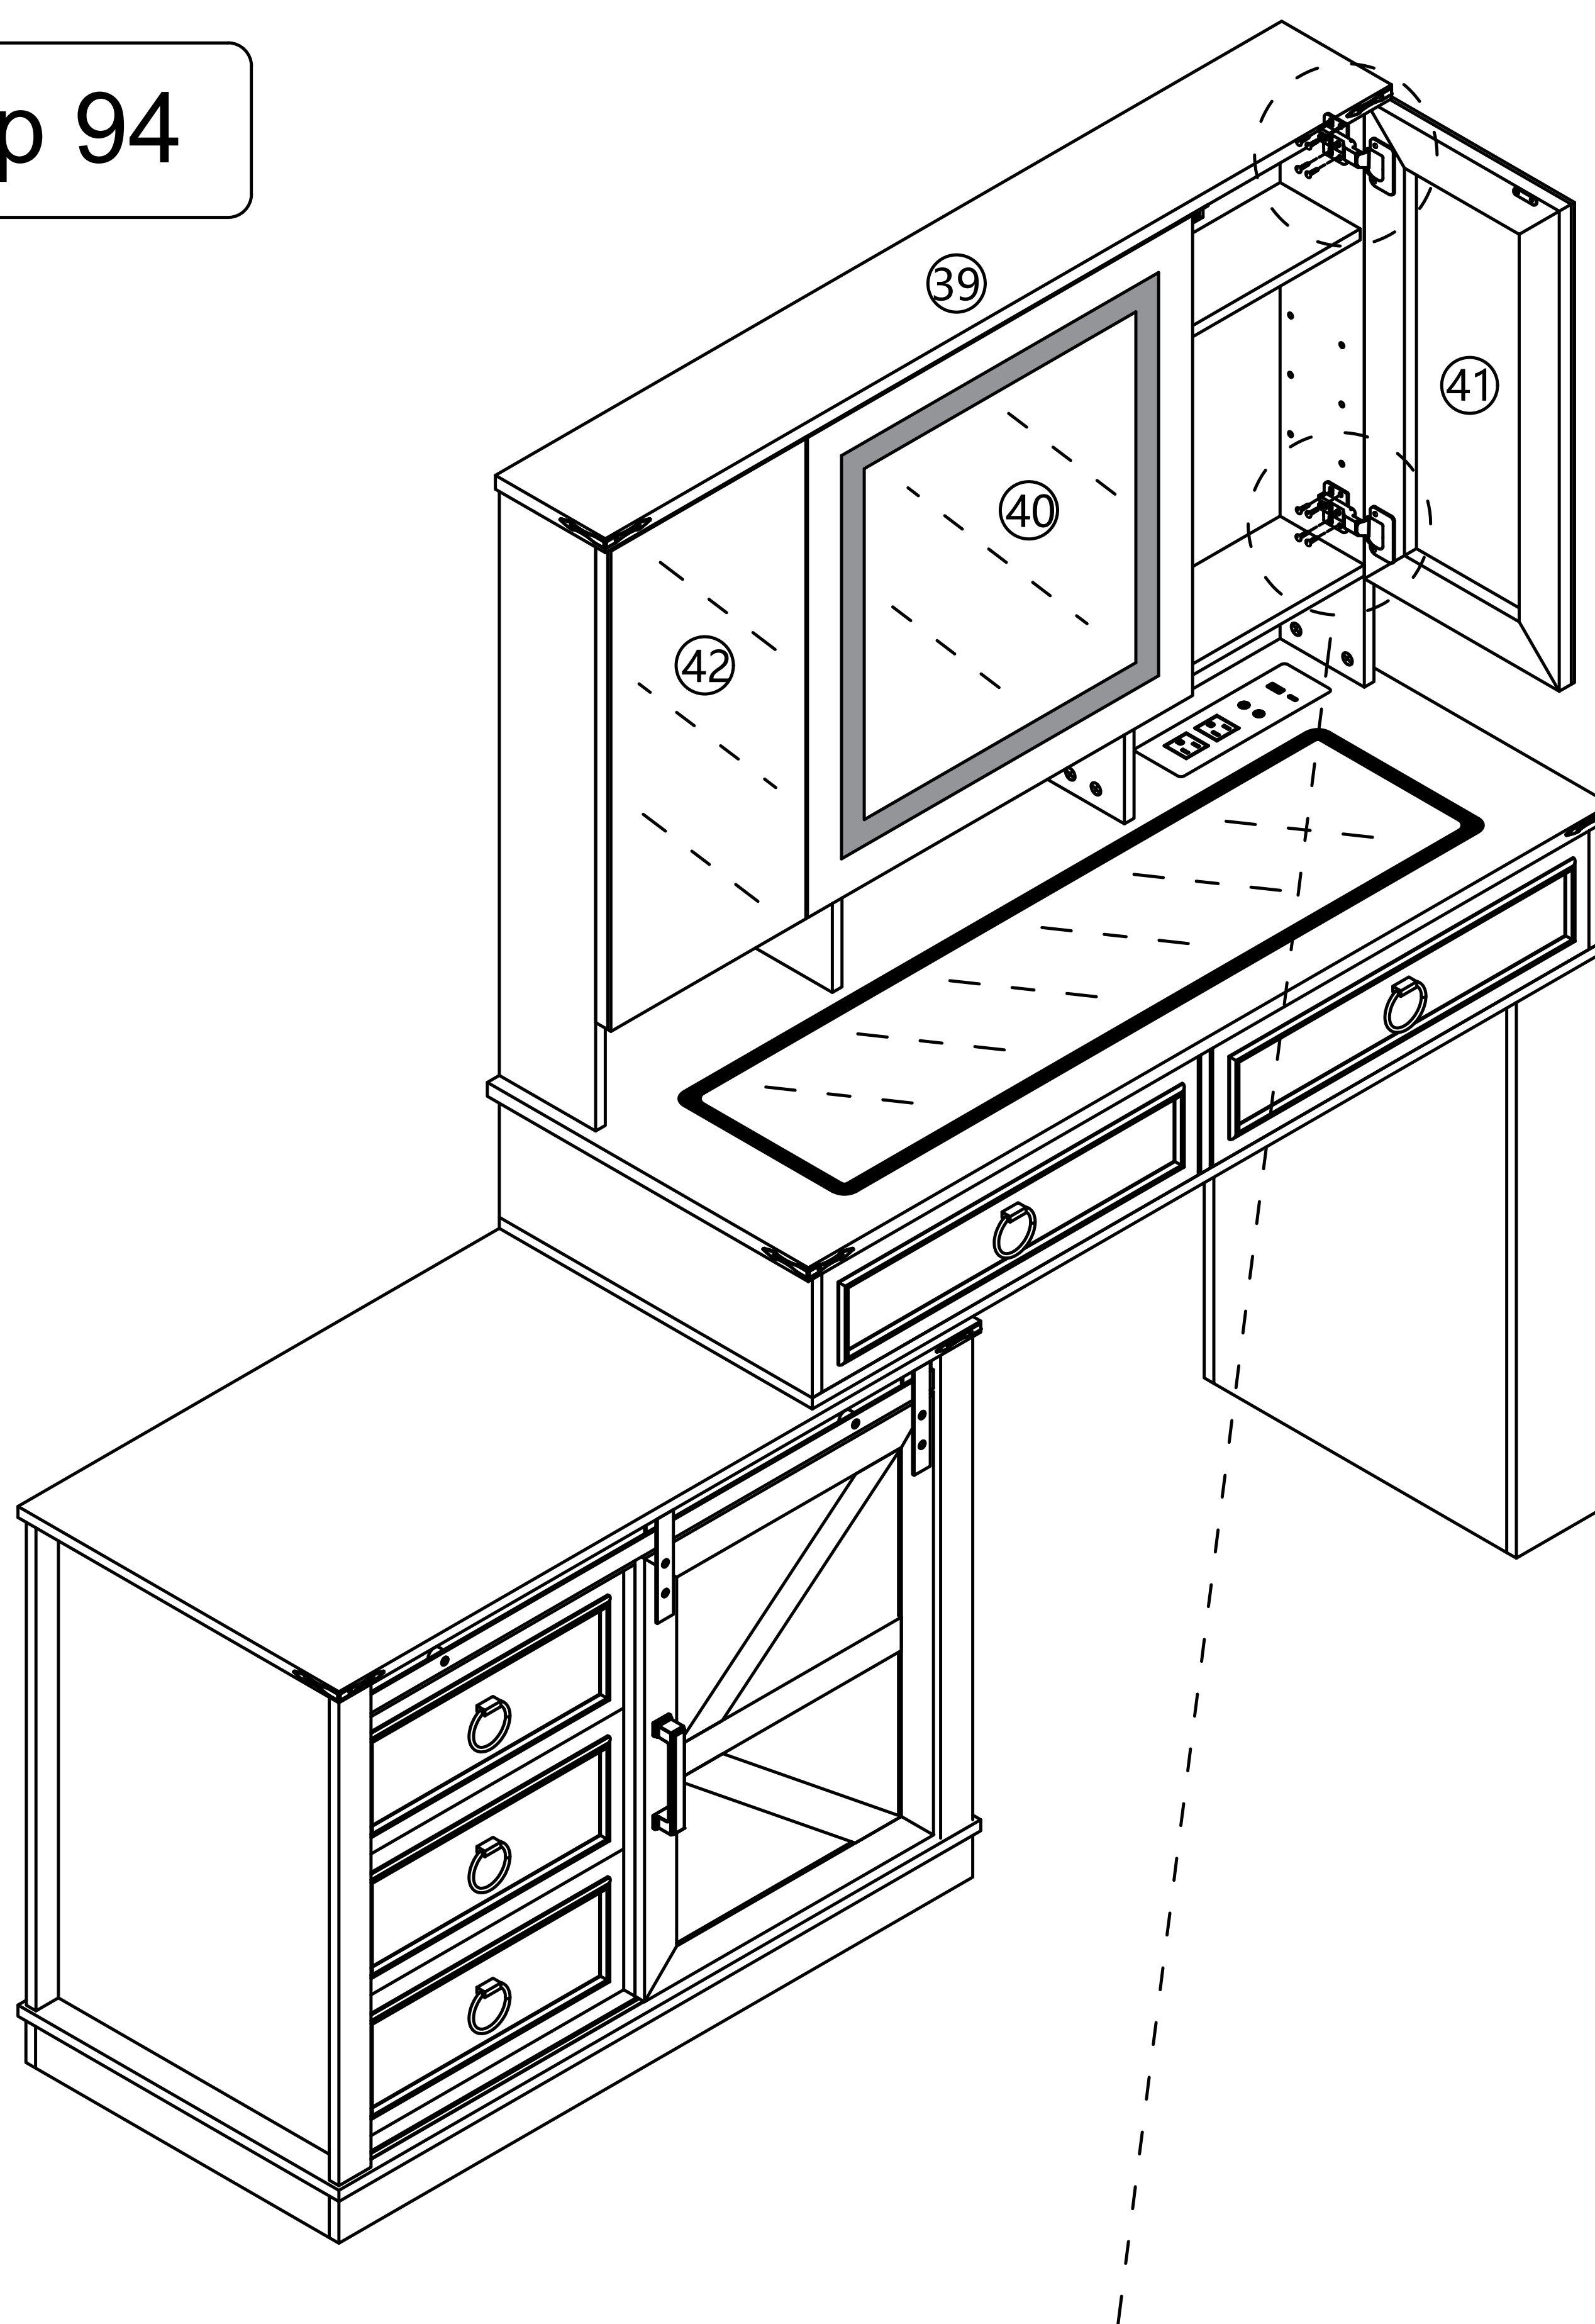




Turning this screw can effectively adjust the size of the door gap.

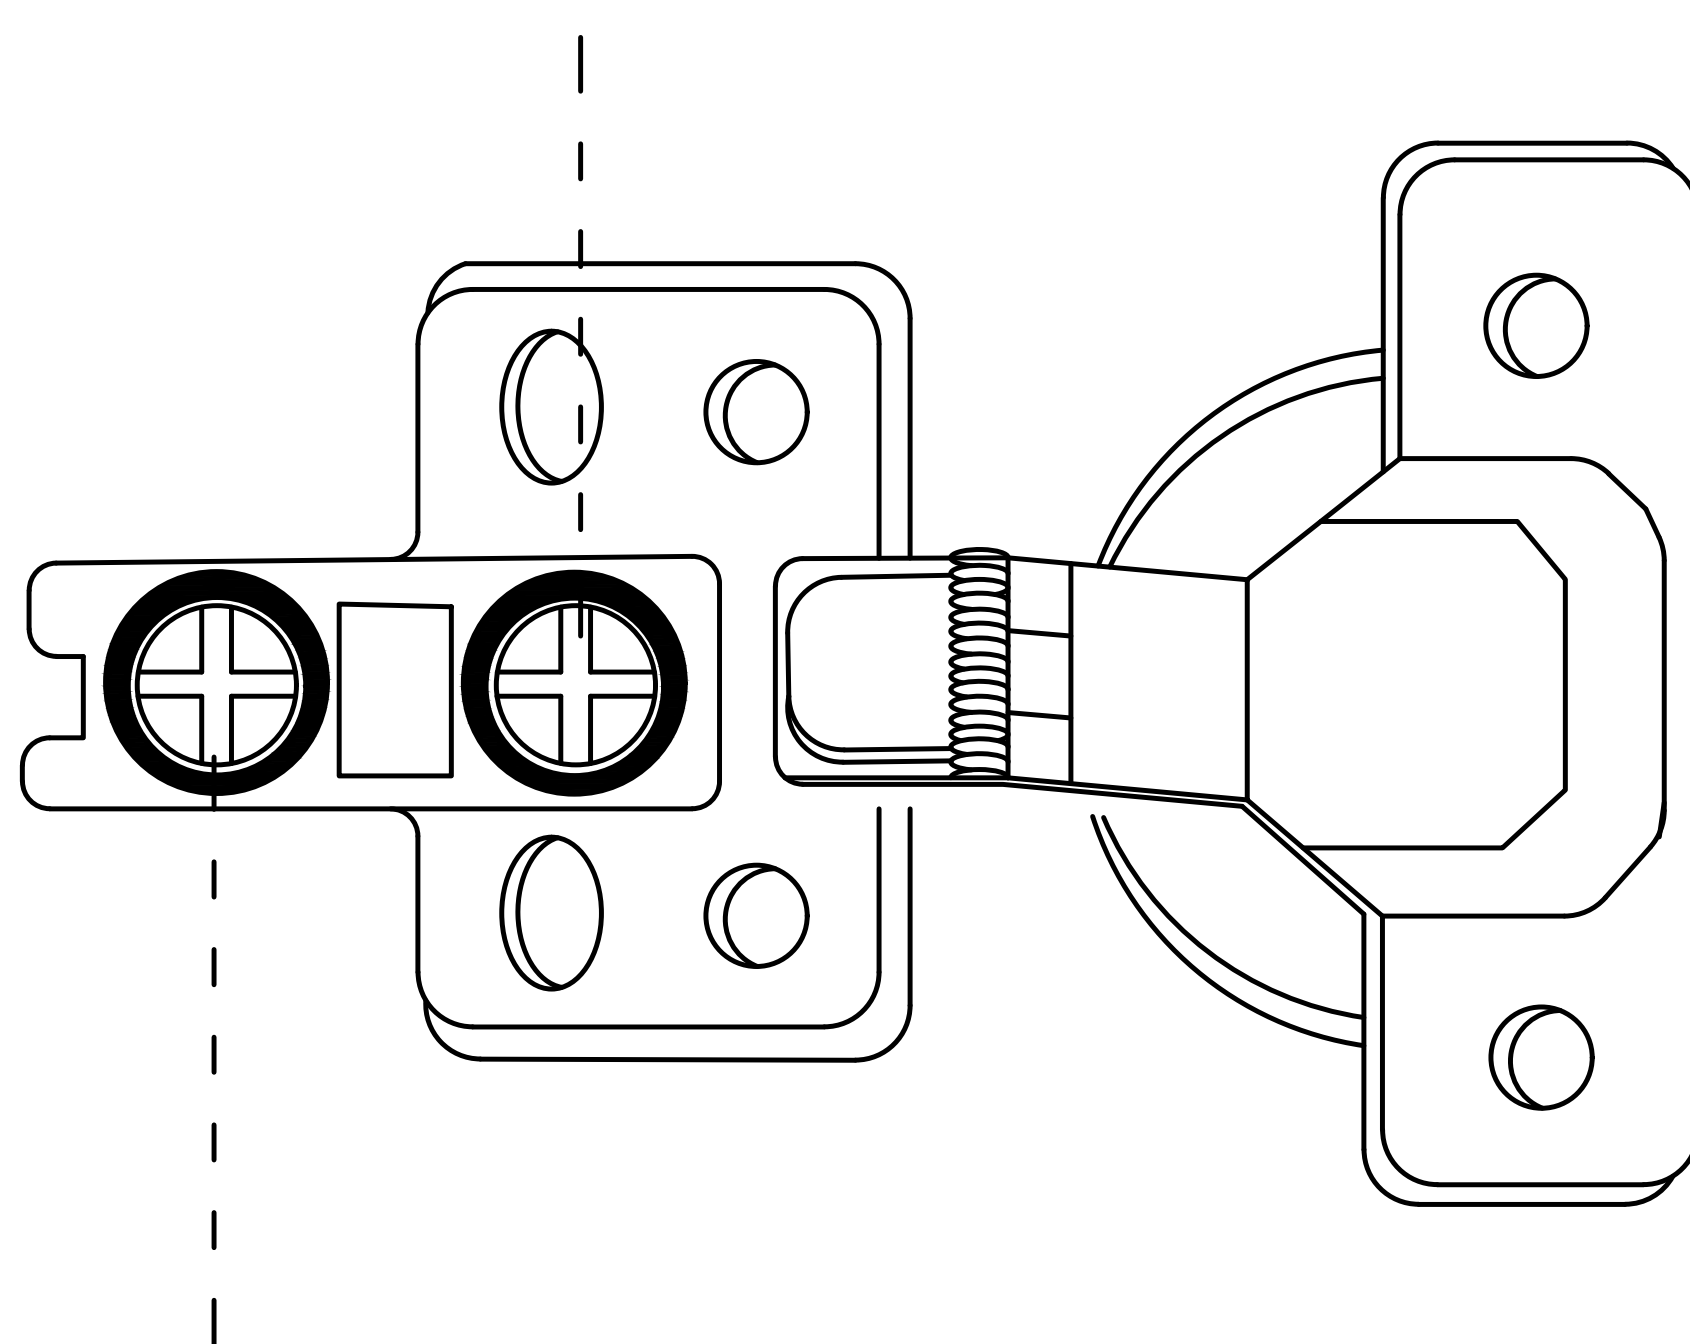


Turn this screw to adjust the door panel to be flat with the side panel.

Step 95

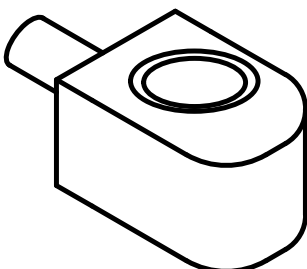
M  x4

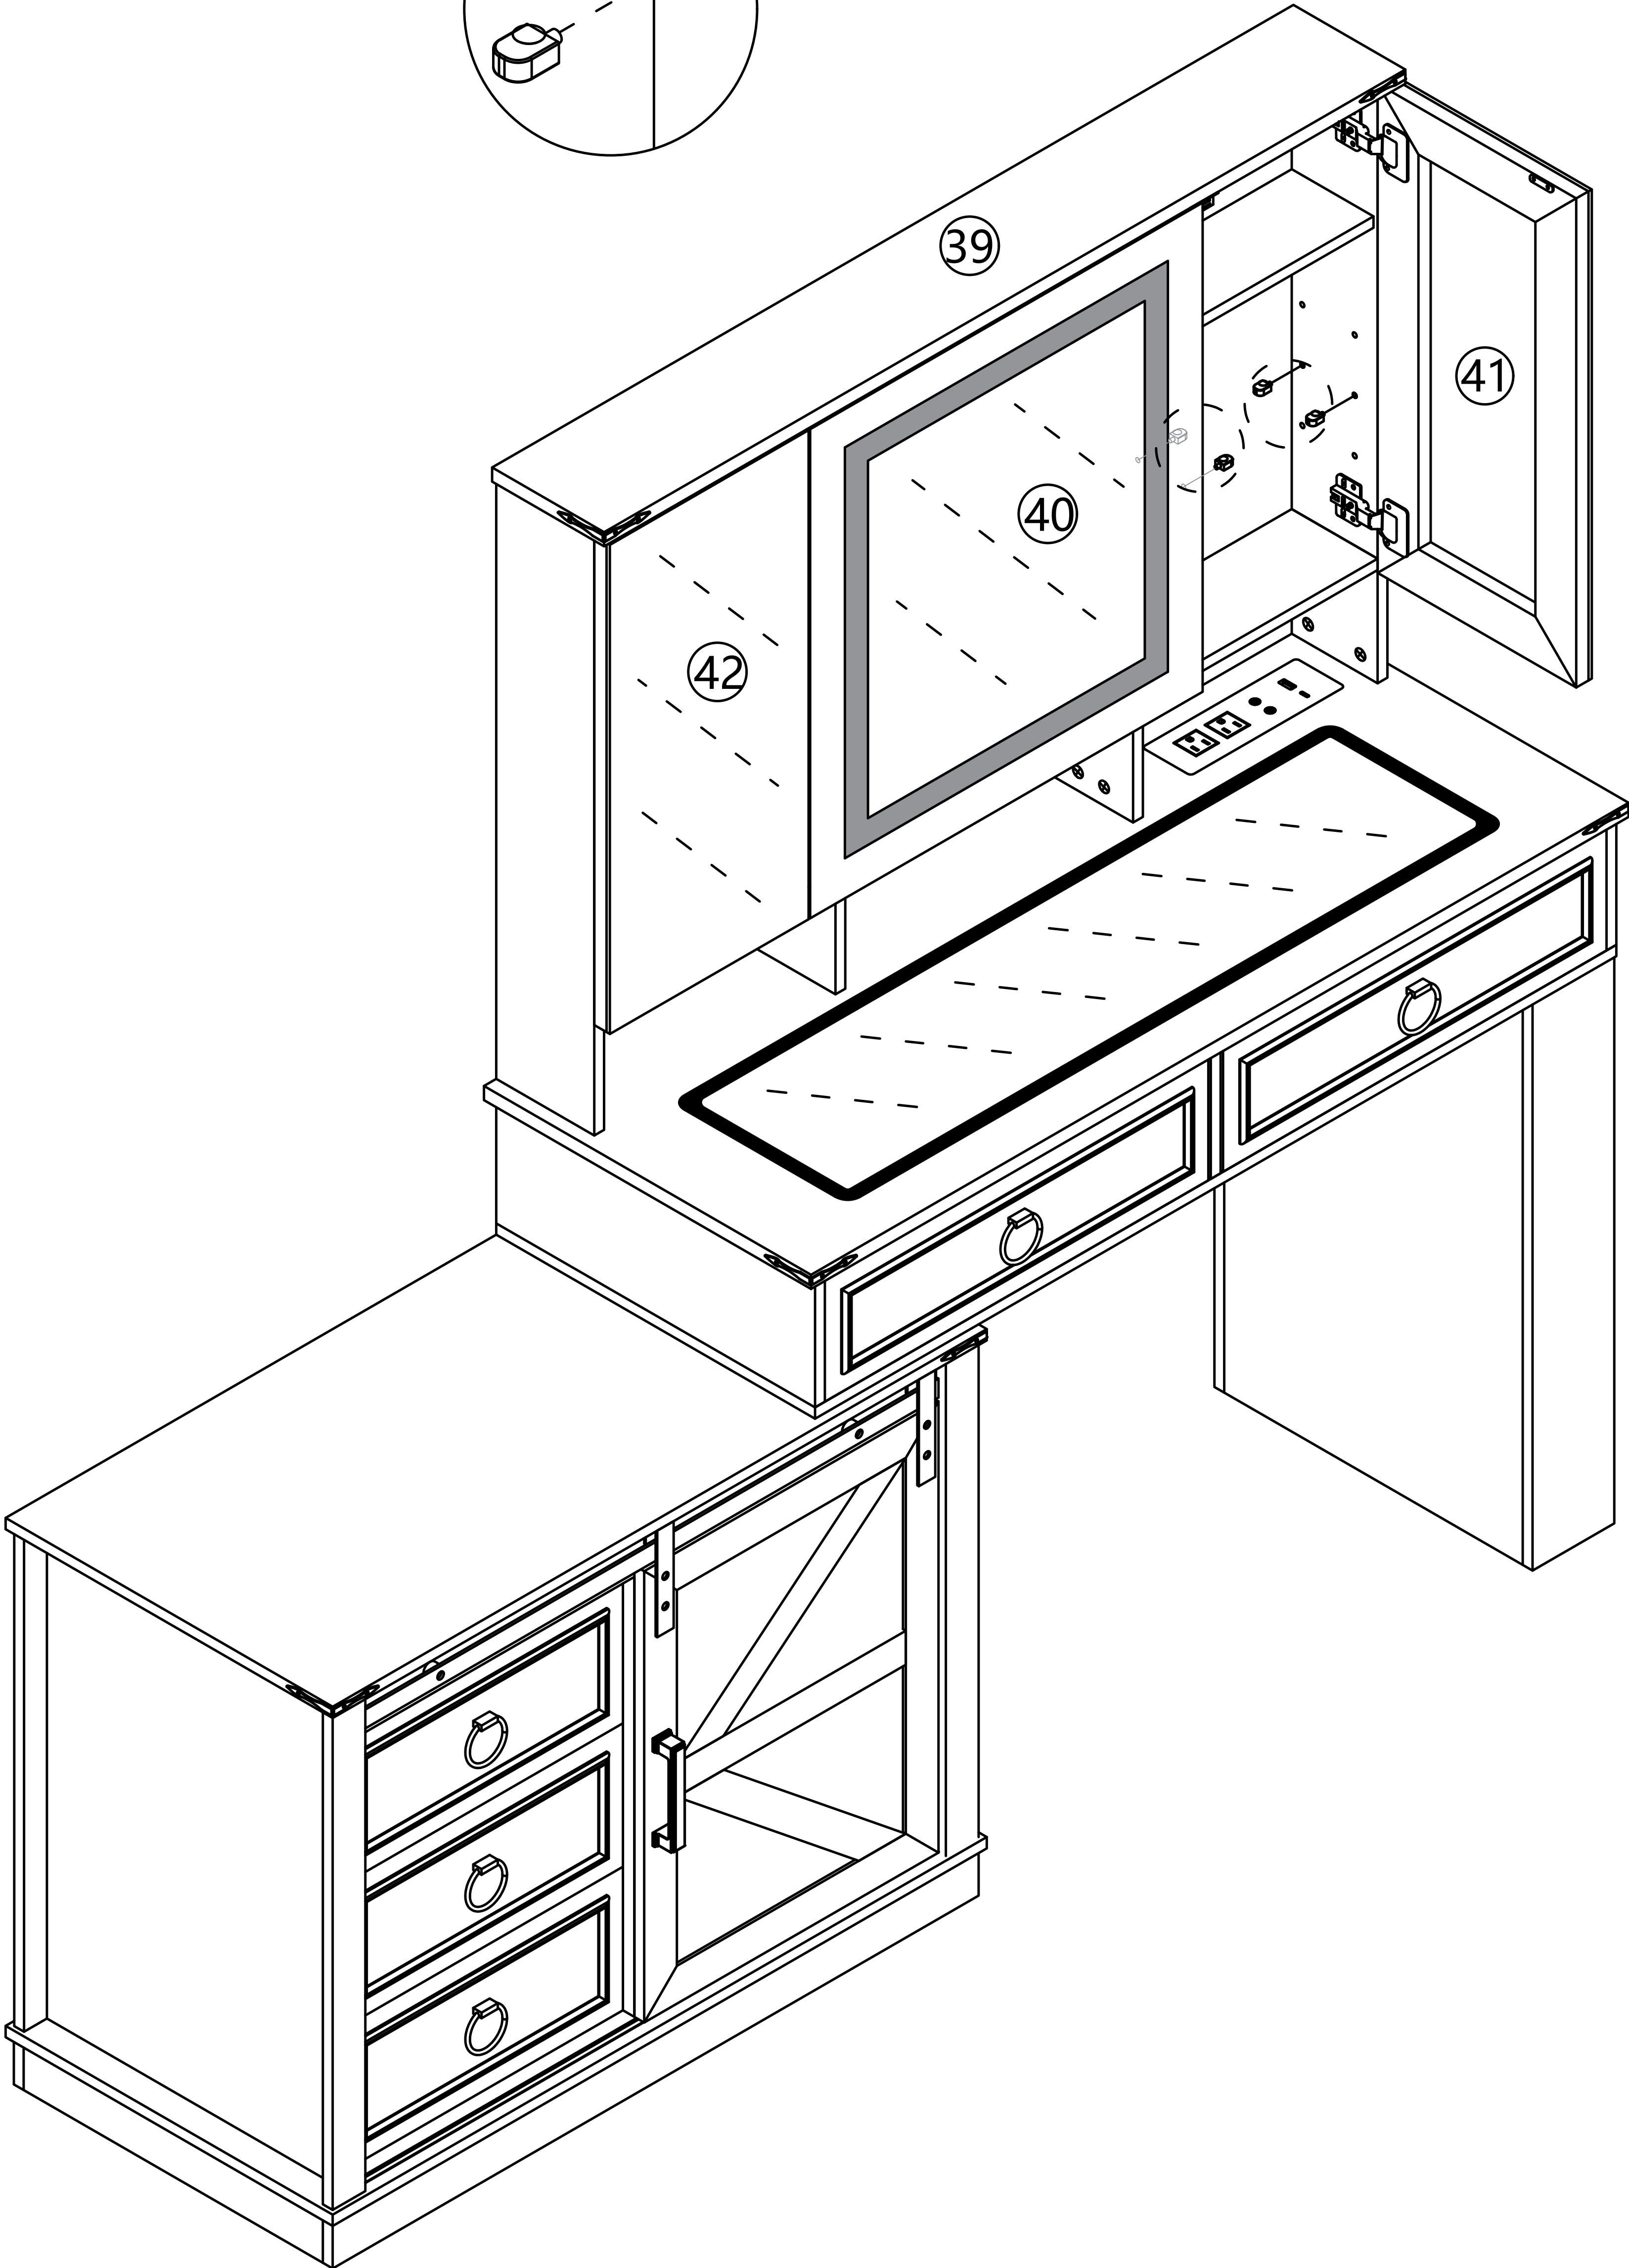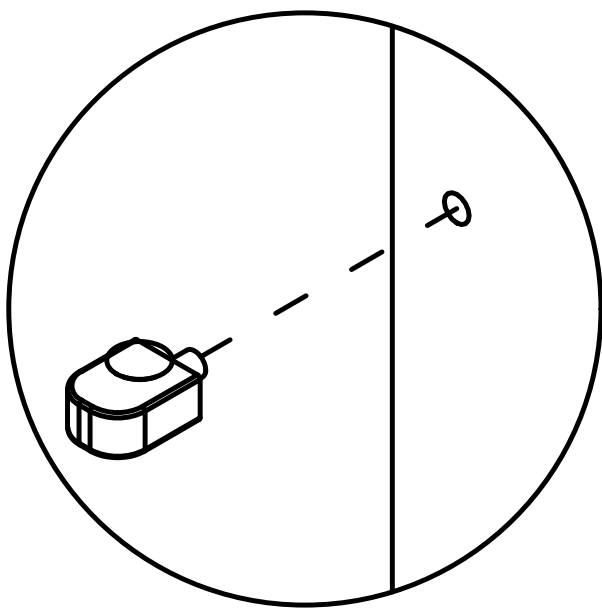

Step 96

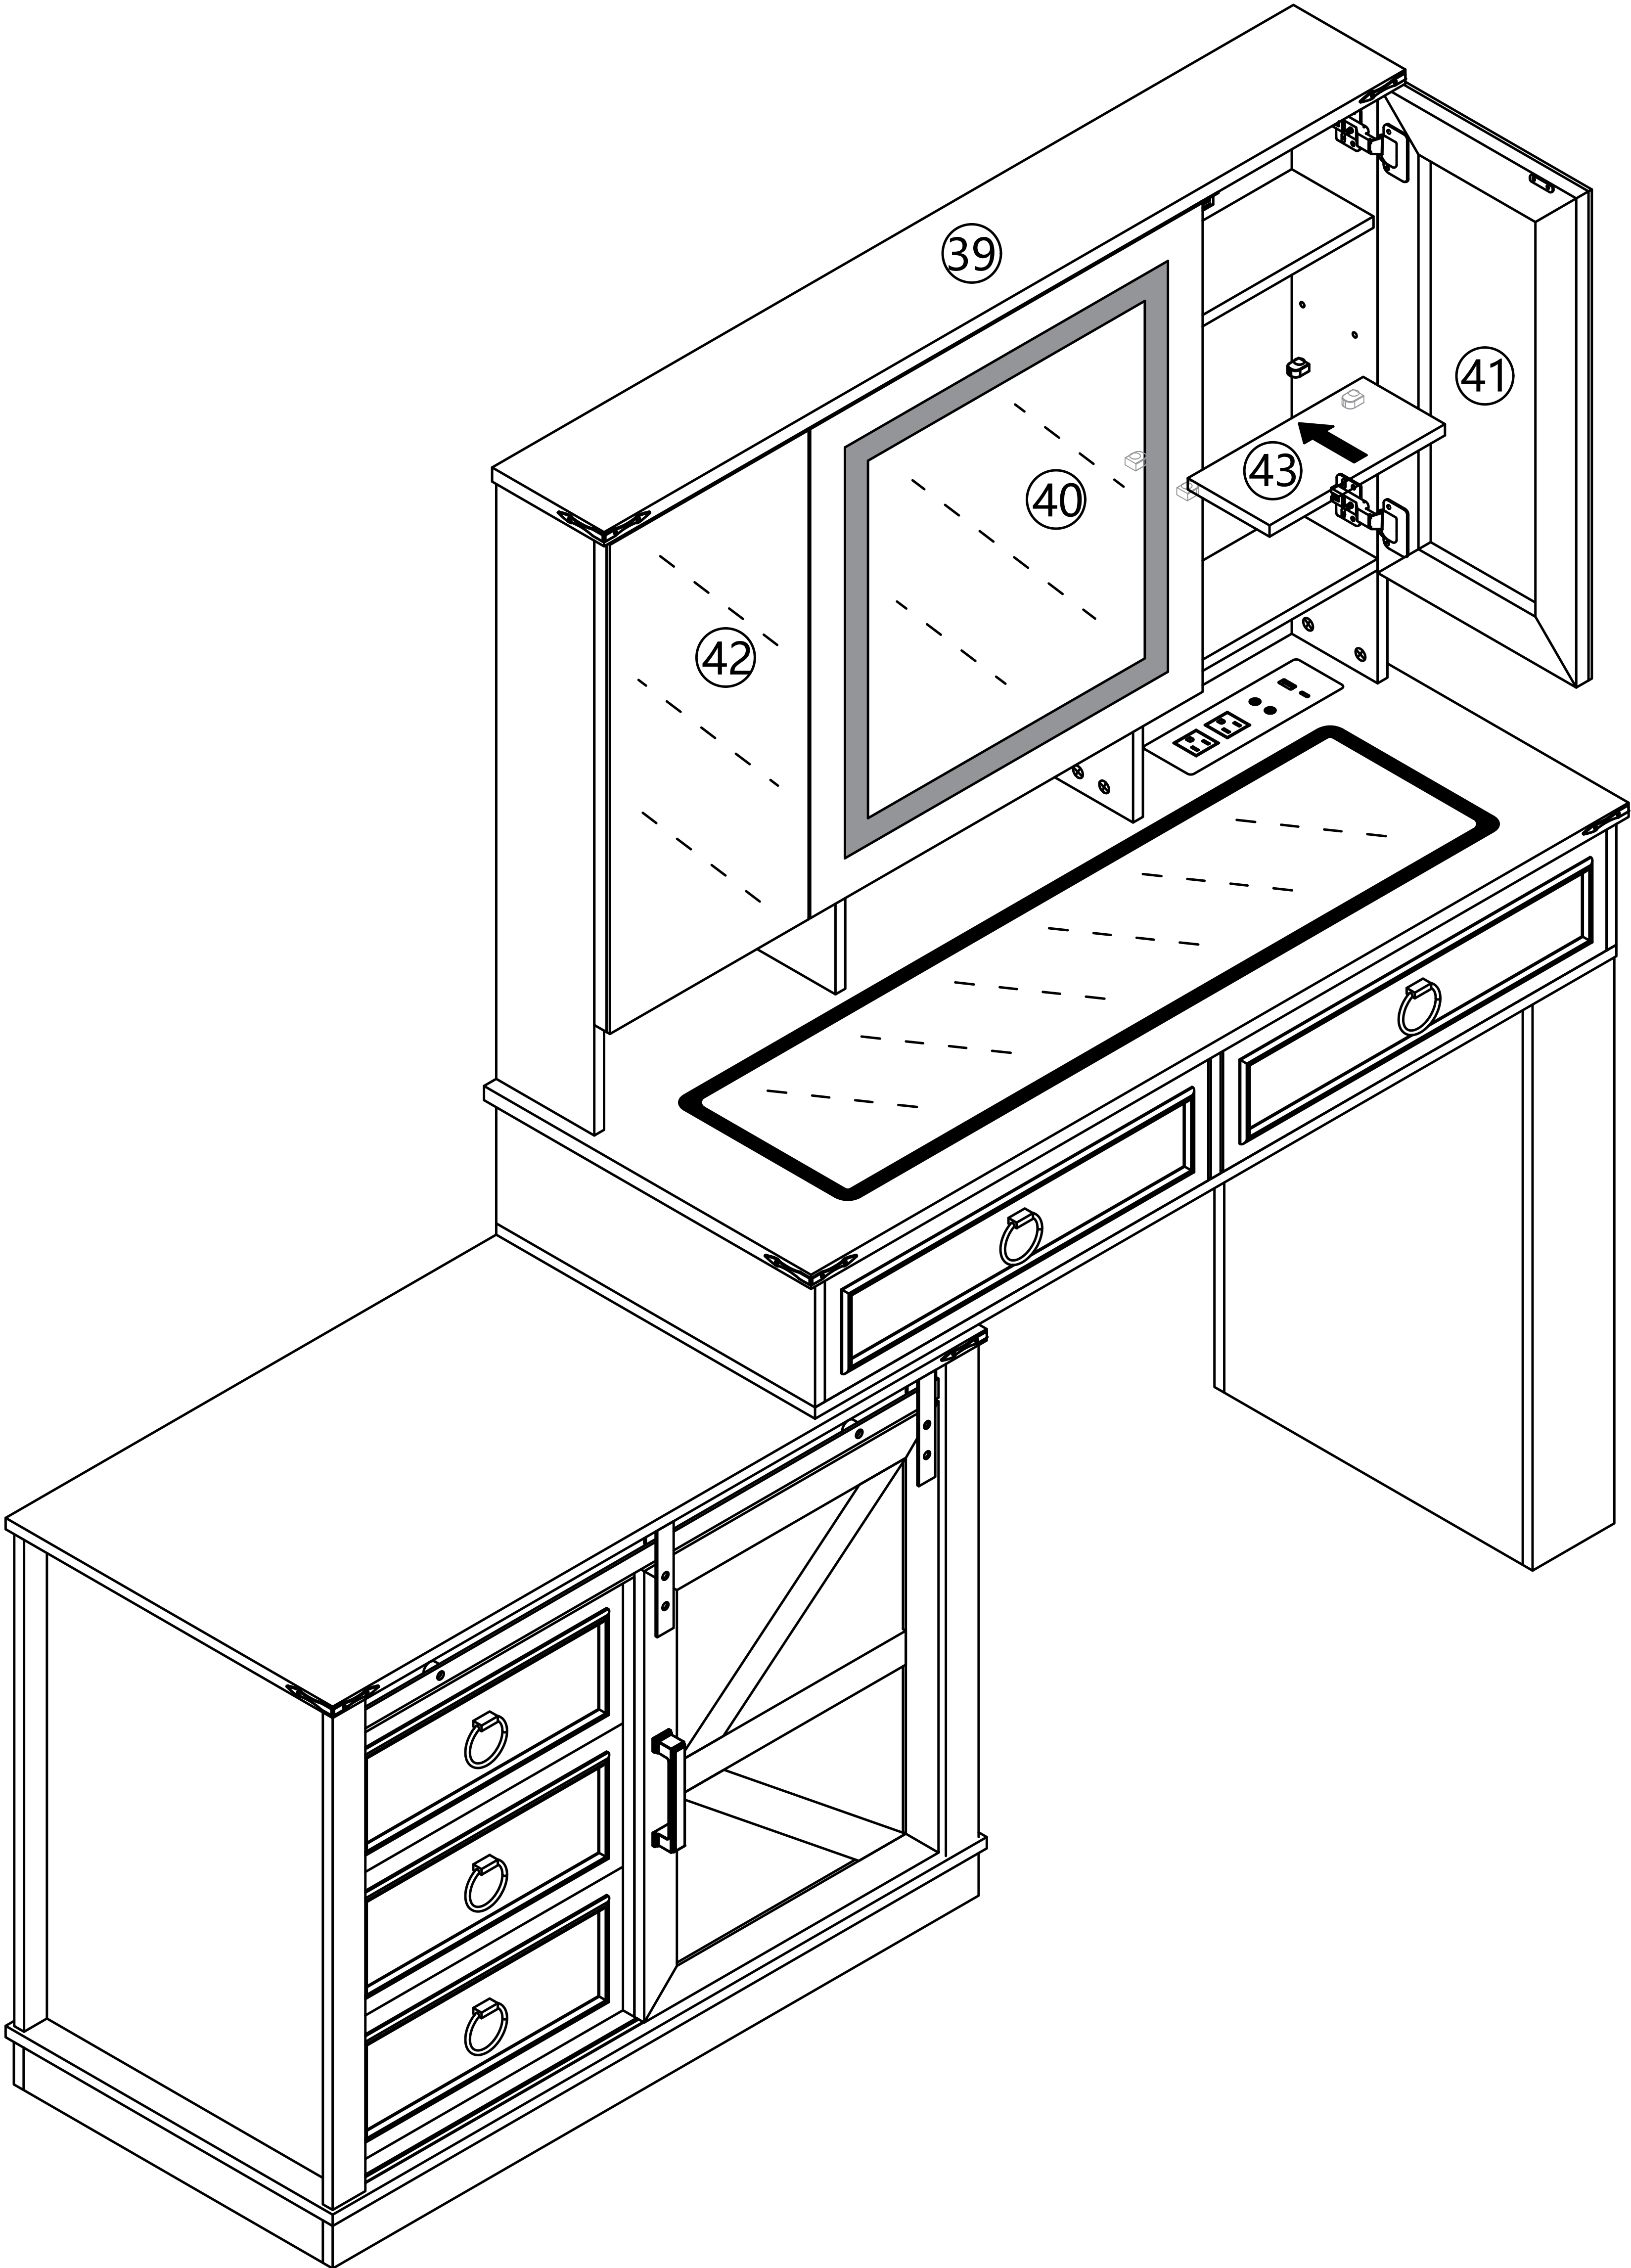


Step 97

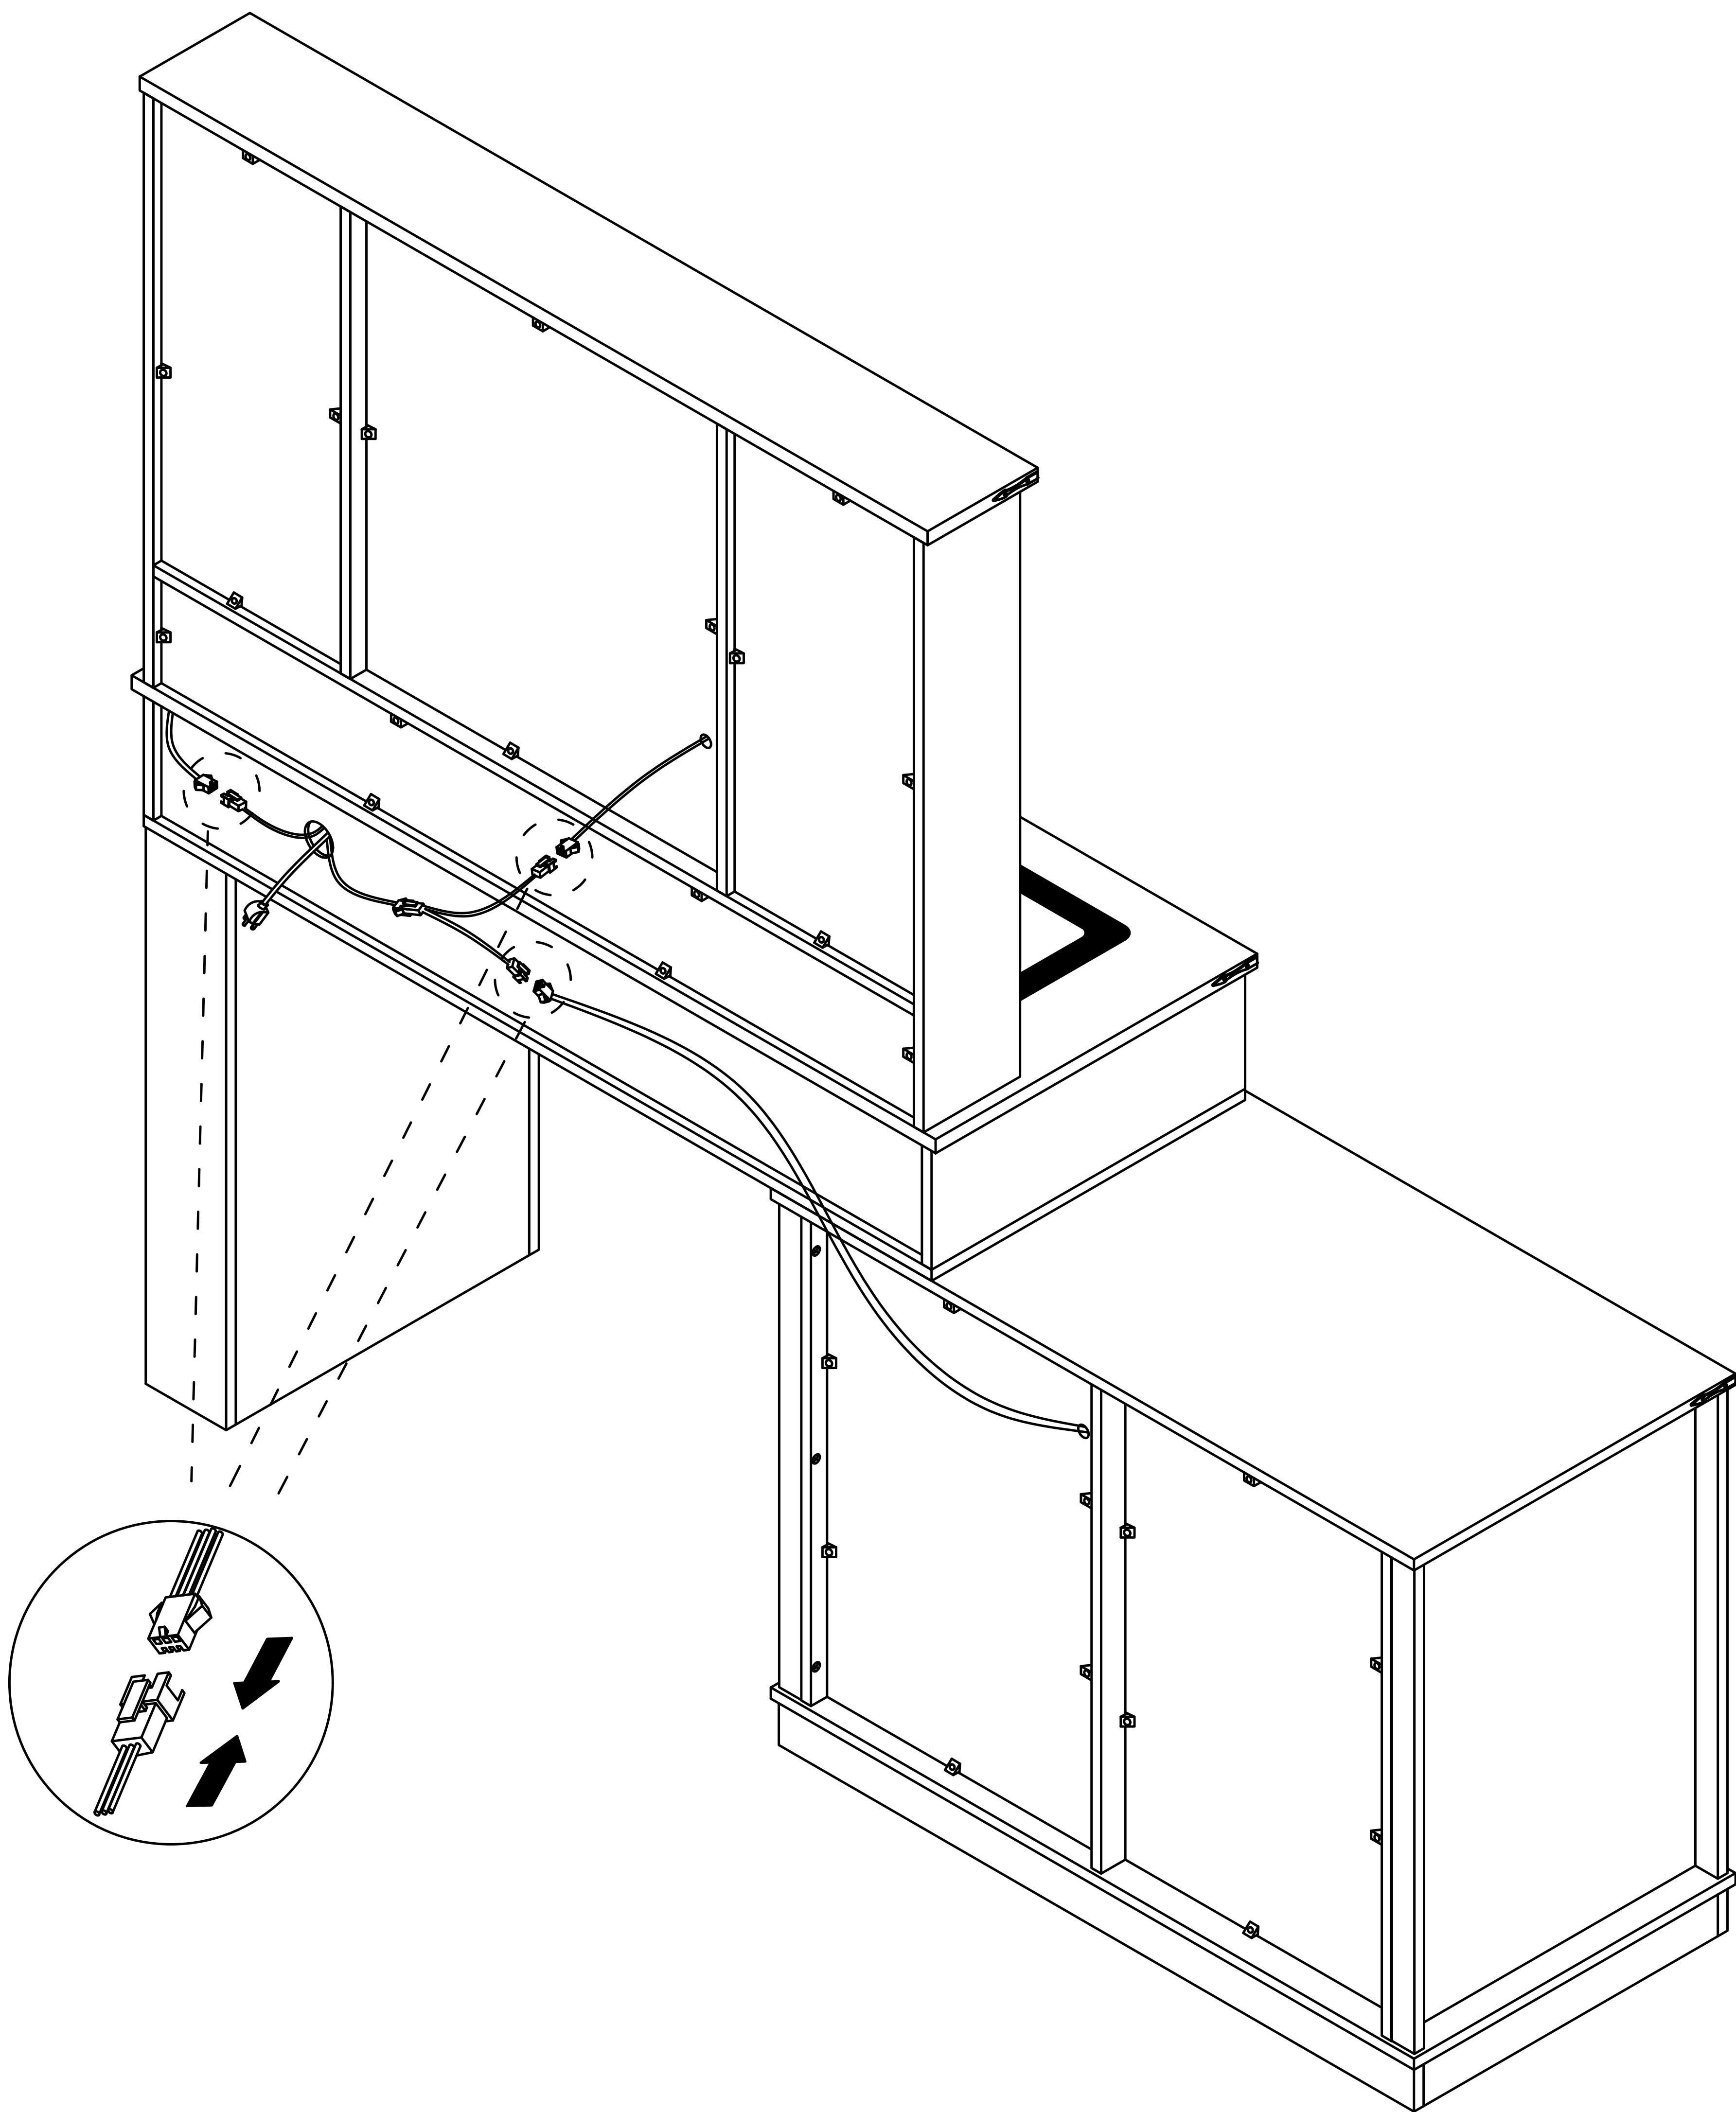


Attention: Please change the wiring method according to the actual placement method

Step 98

V

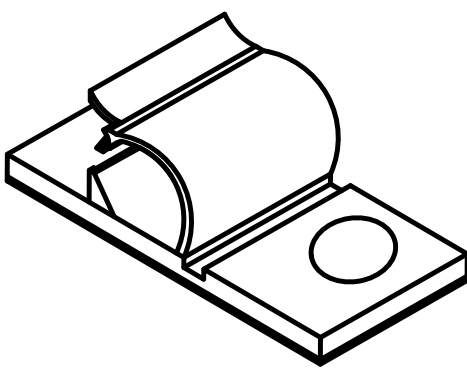


x5

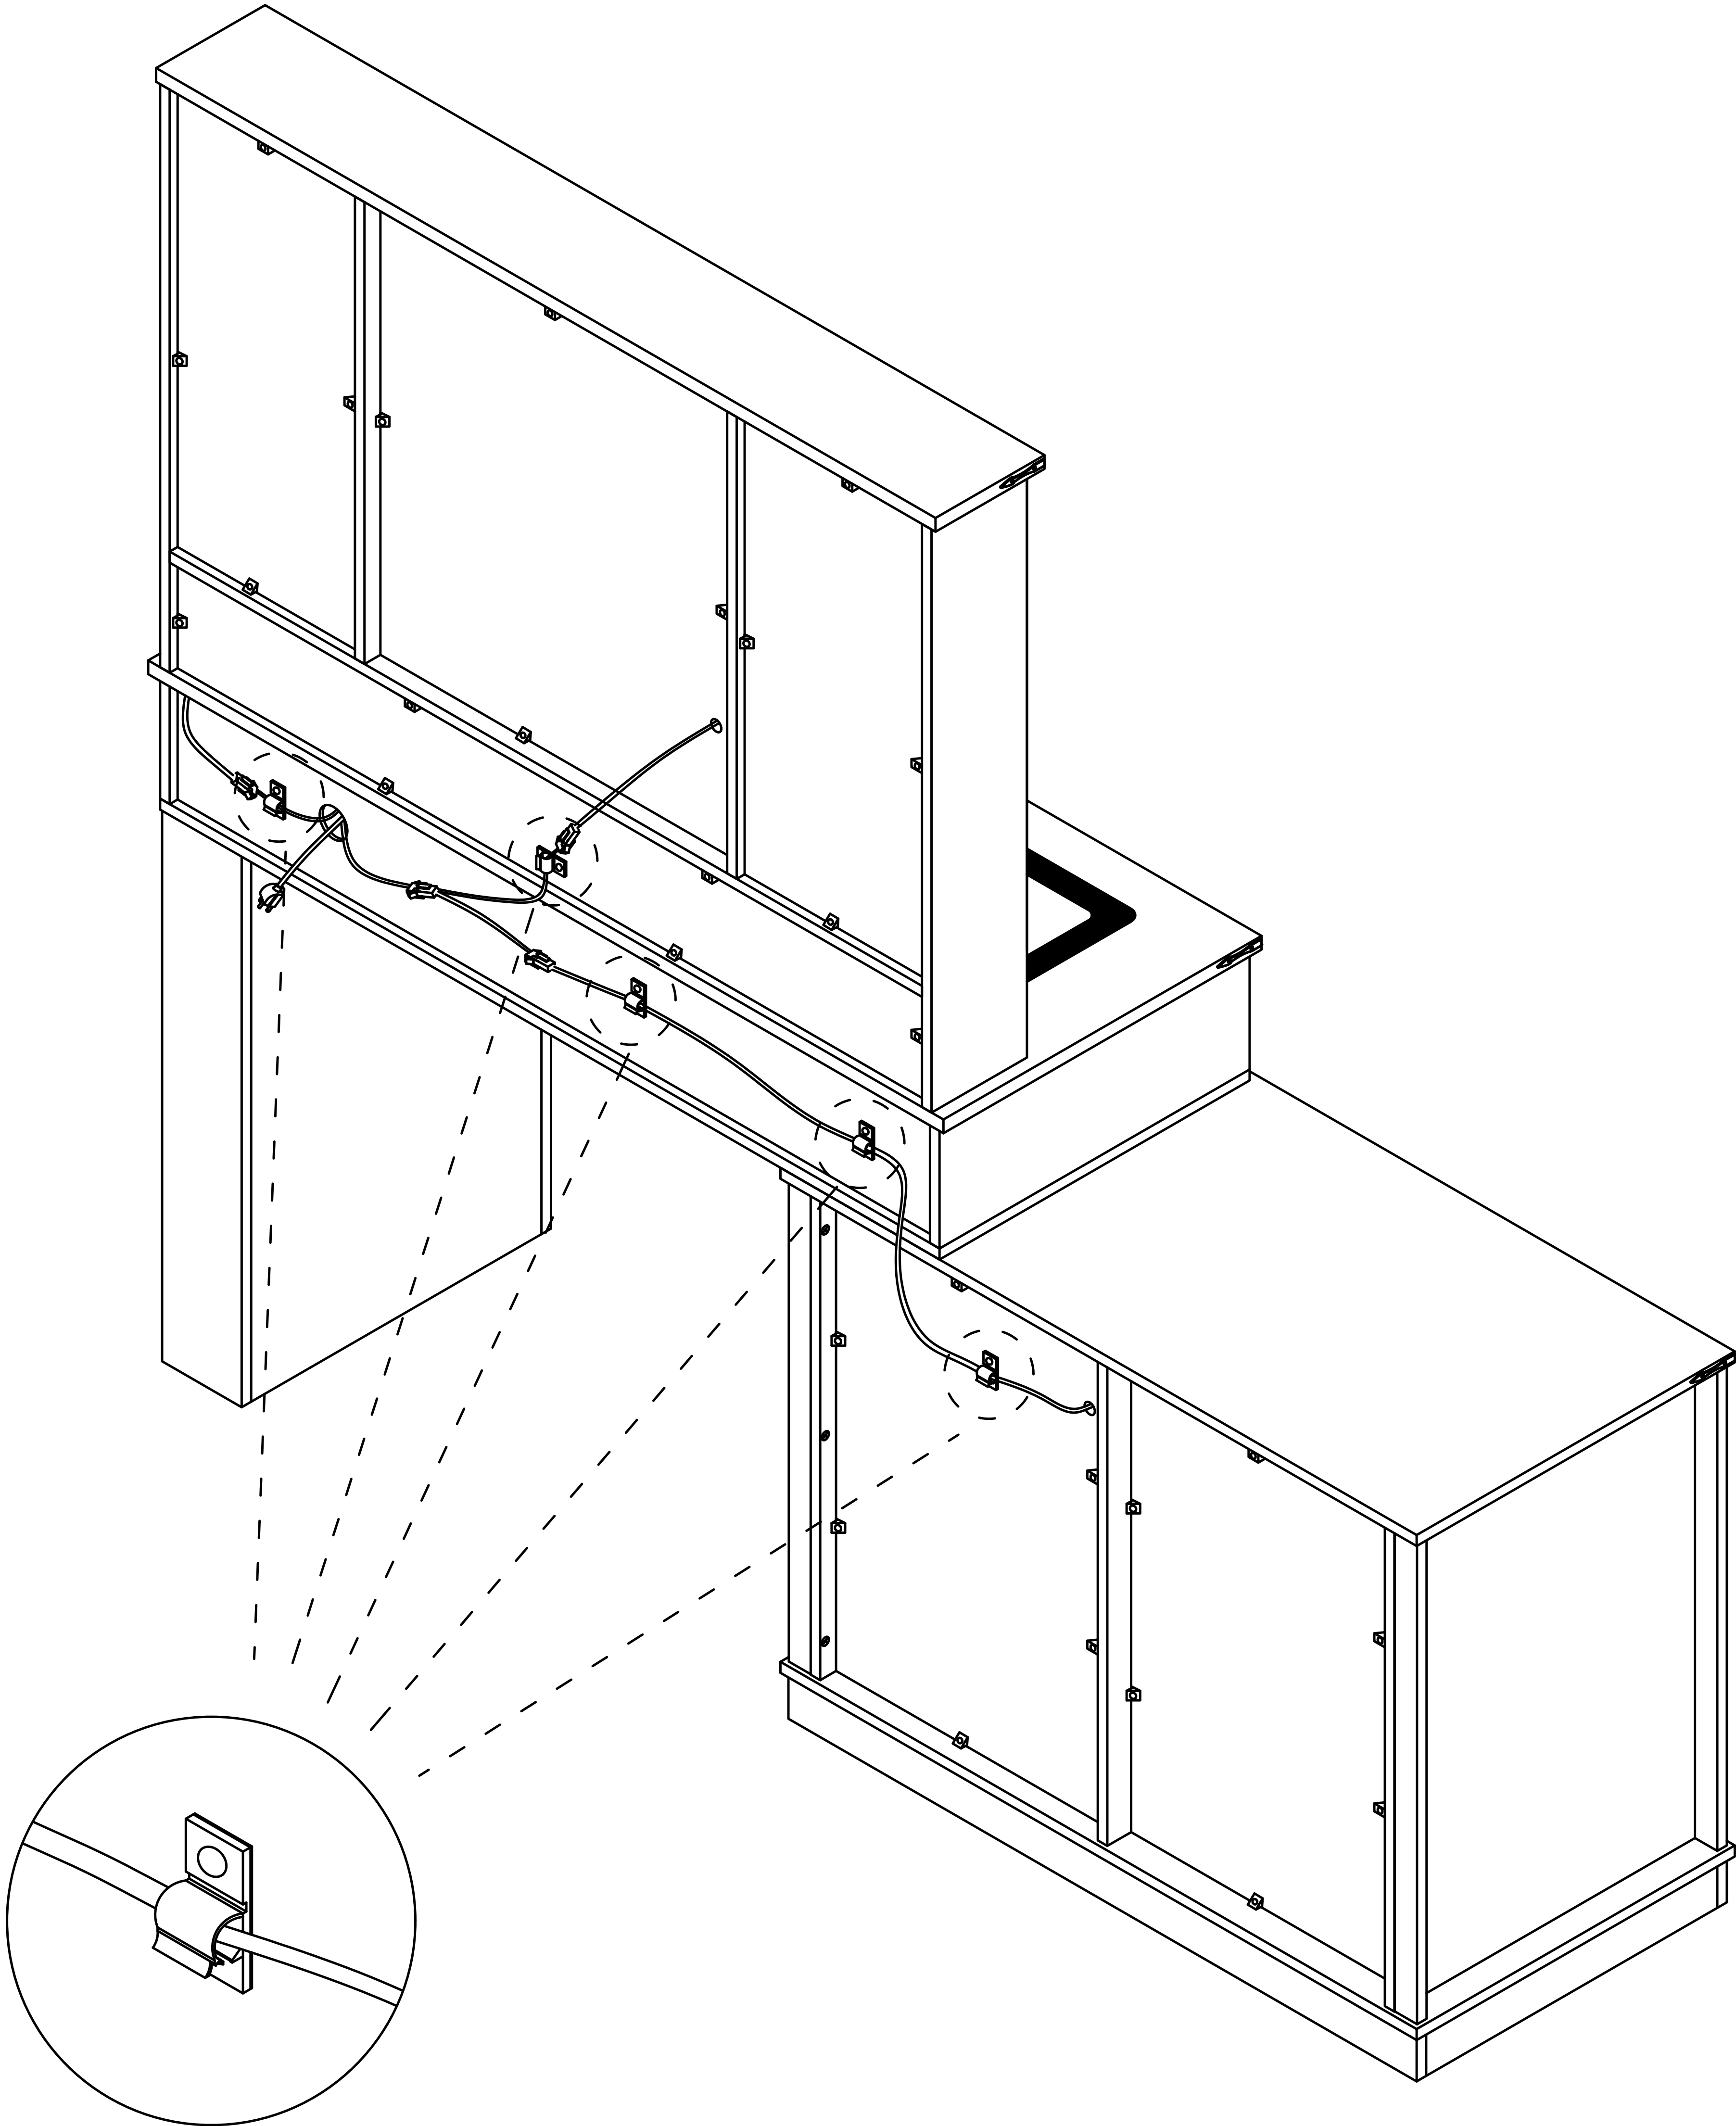


Step 99

W

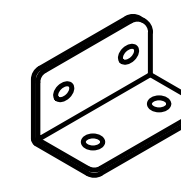


x2

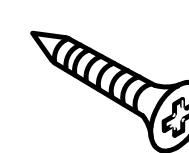


x8

The corner code is used for fixing the cabinet body, and installation can be selected according to needs

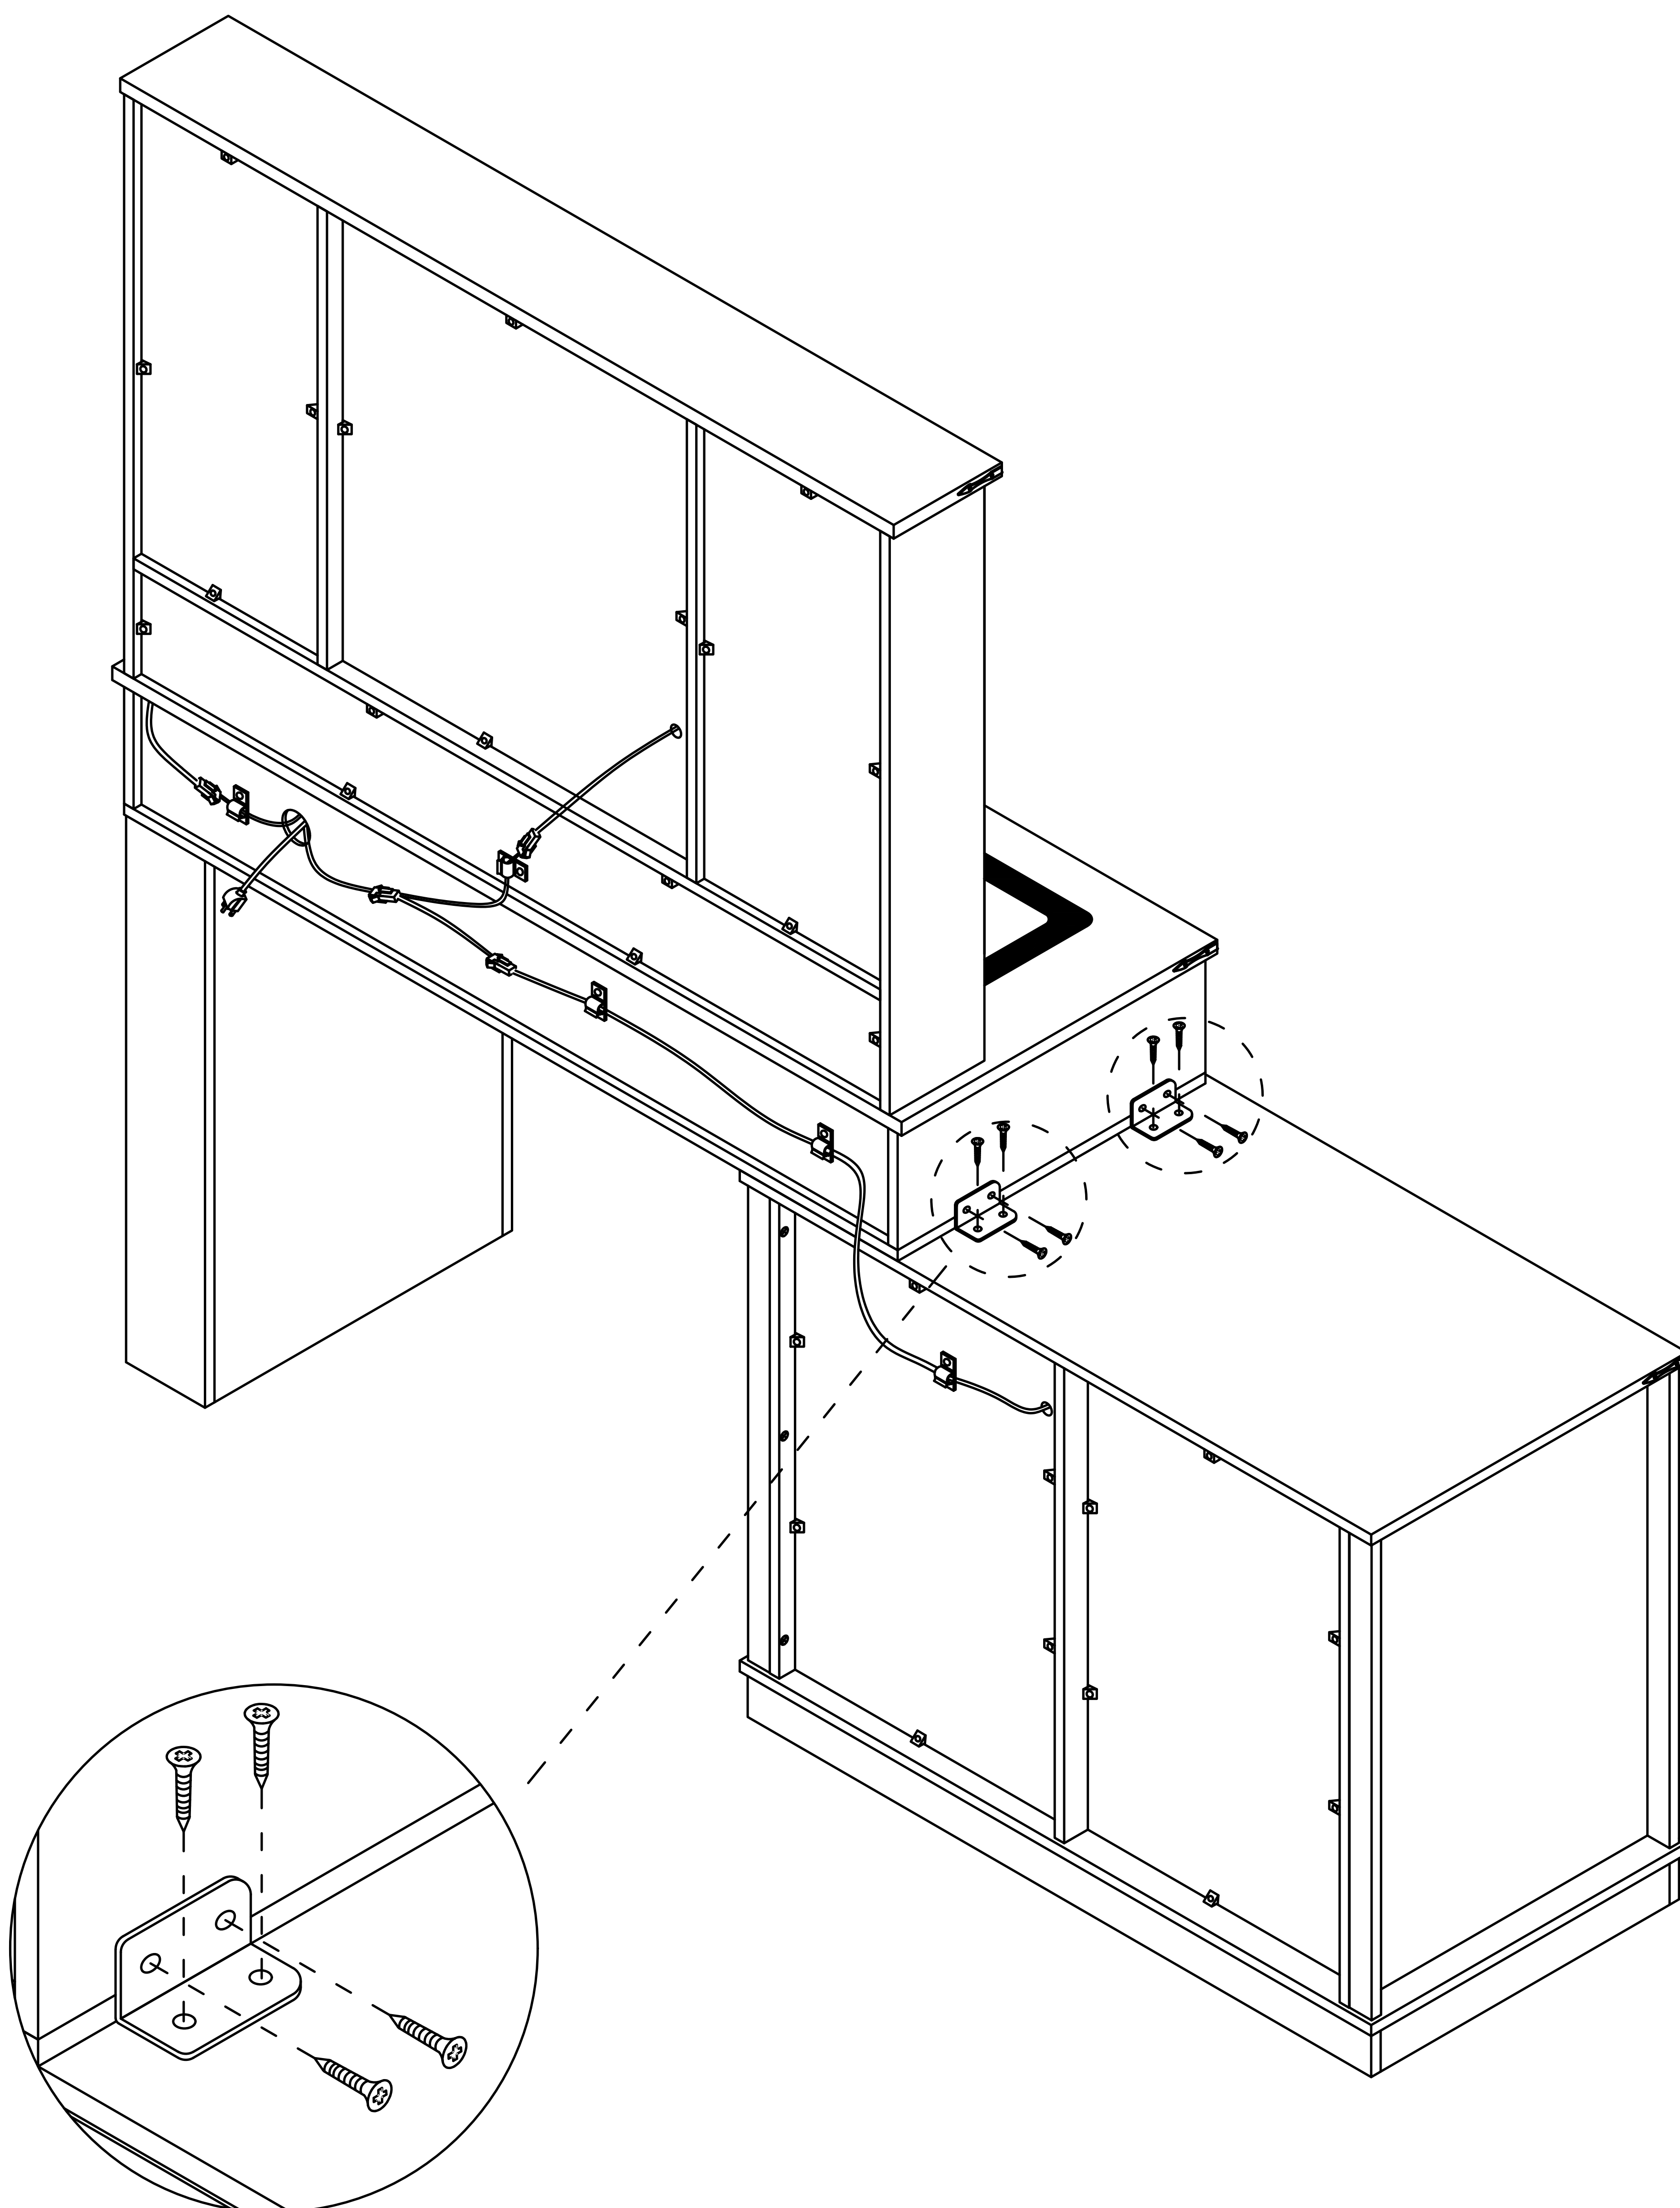


Step 100




Install as required

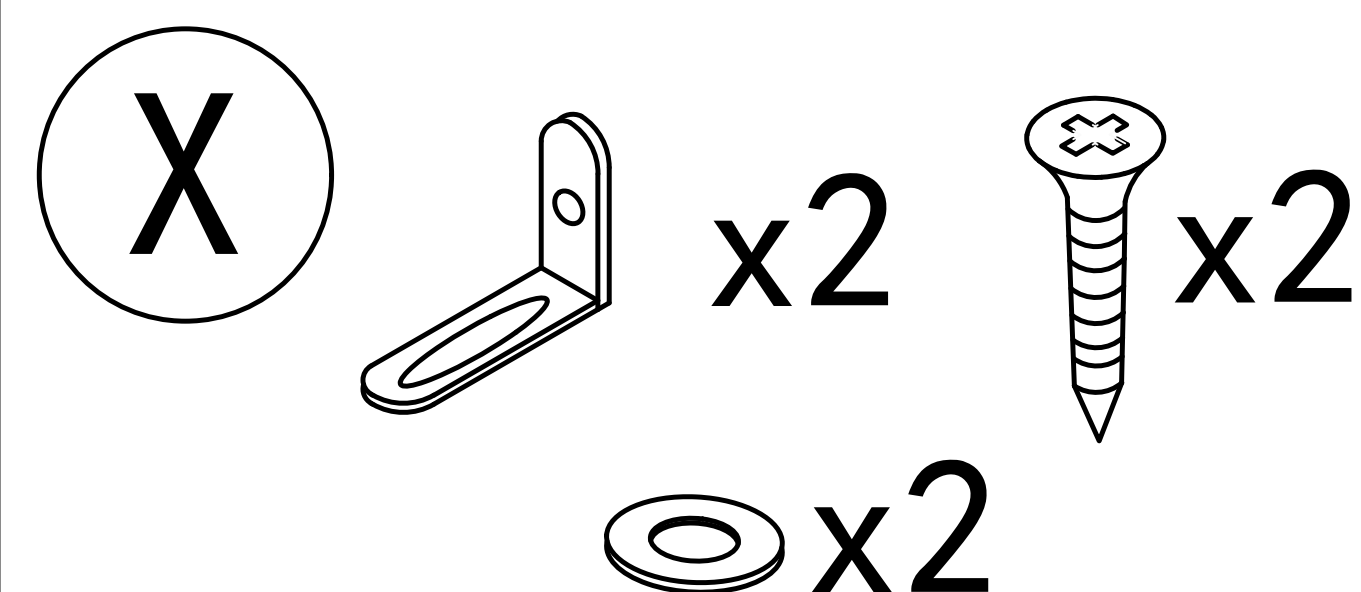

3.5x14mm


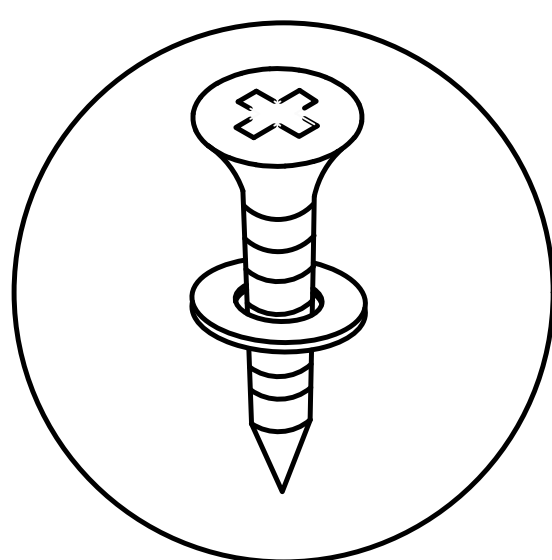


Install the anti fall hardware on the cabinet as shown in the picture first

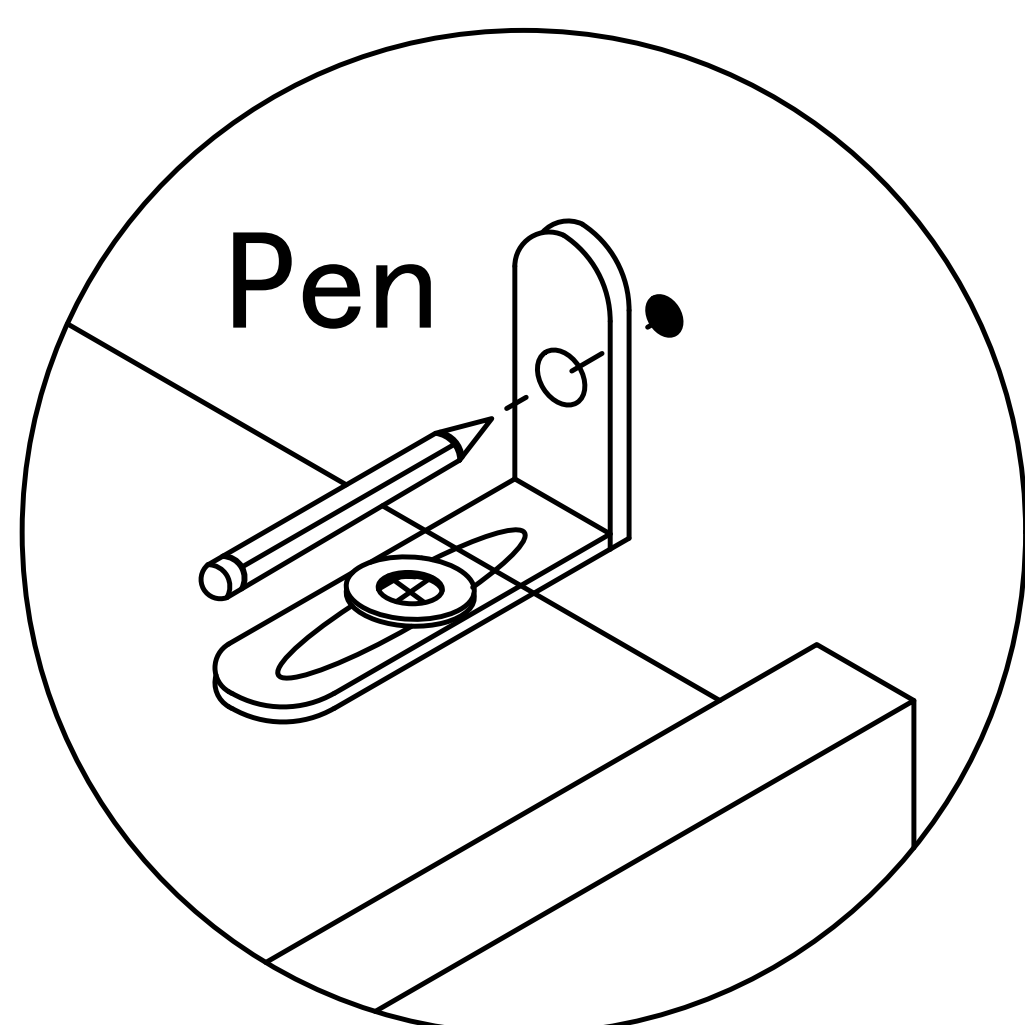
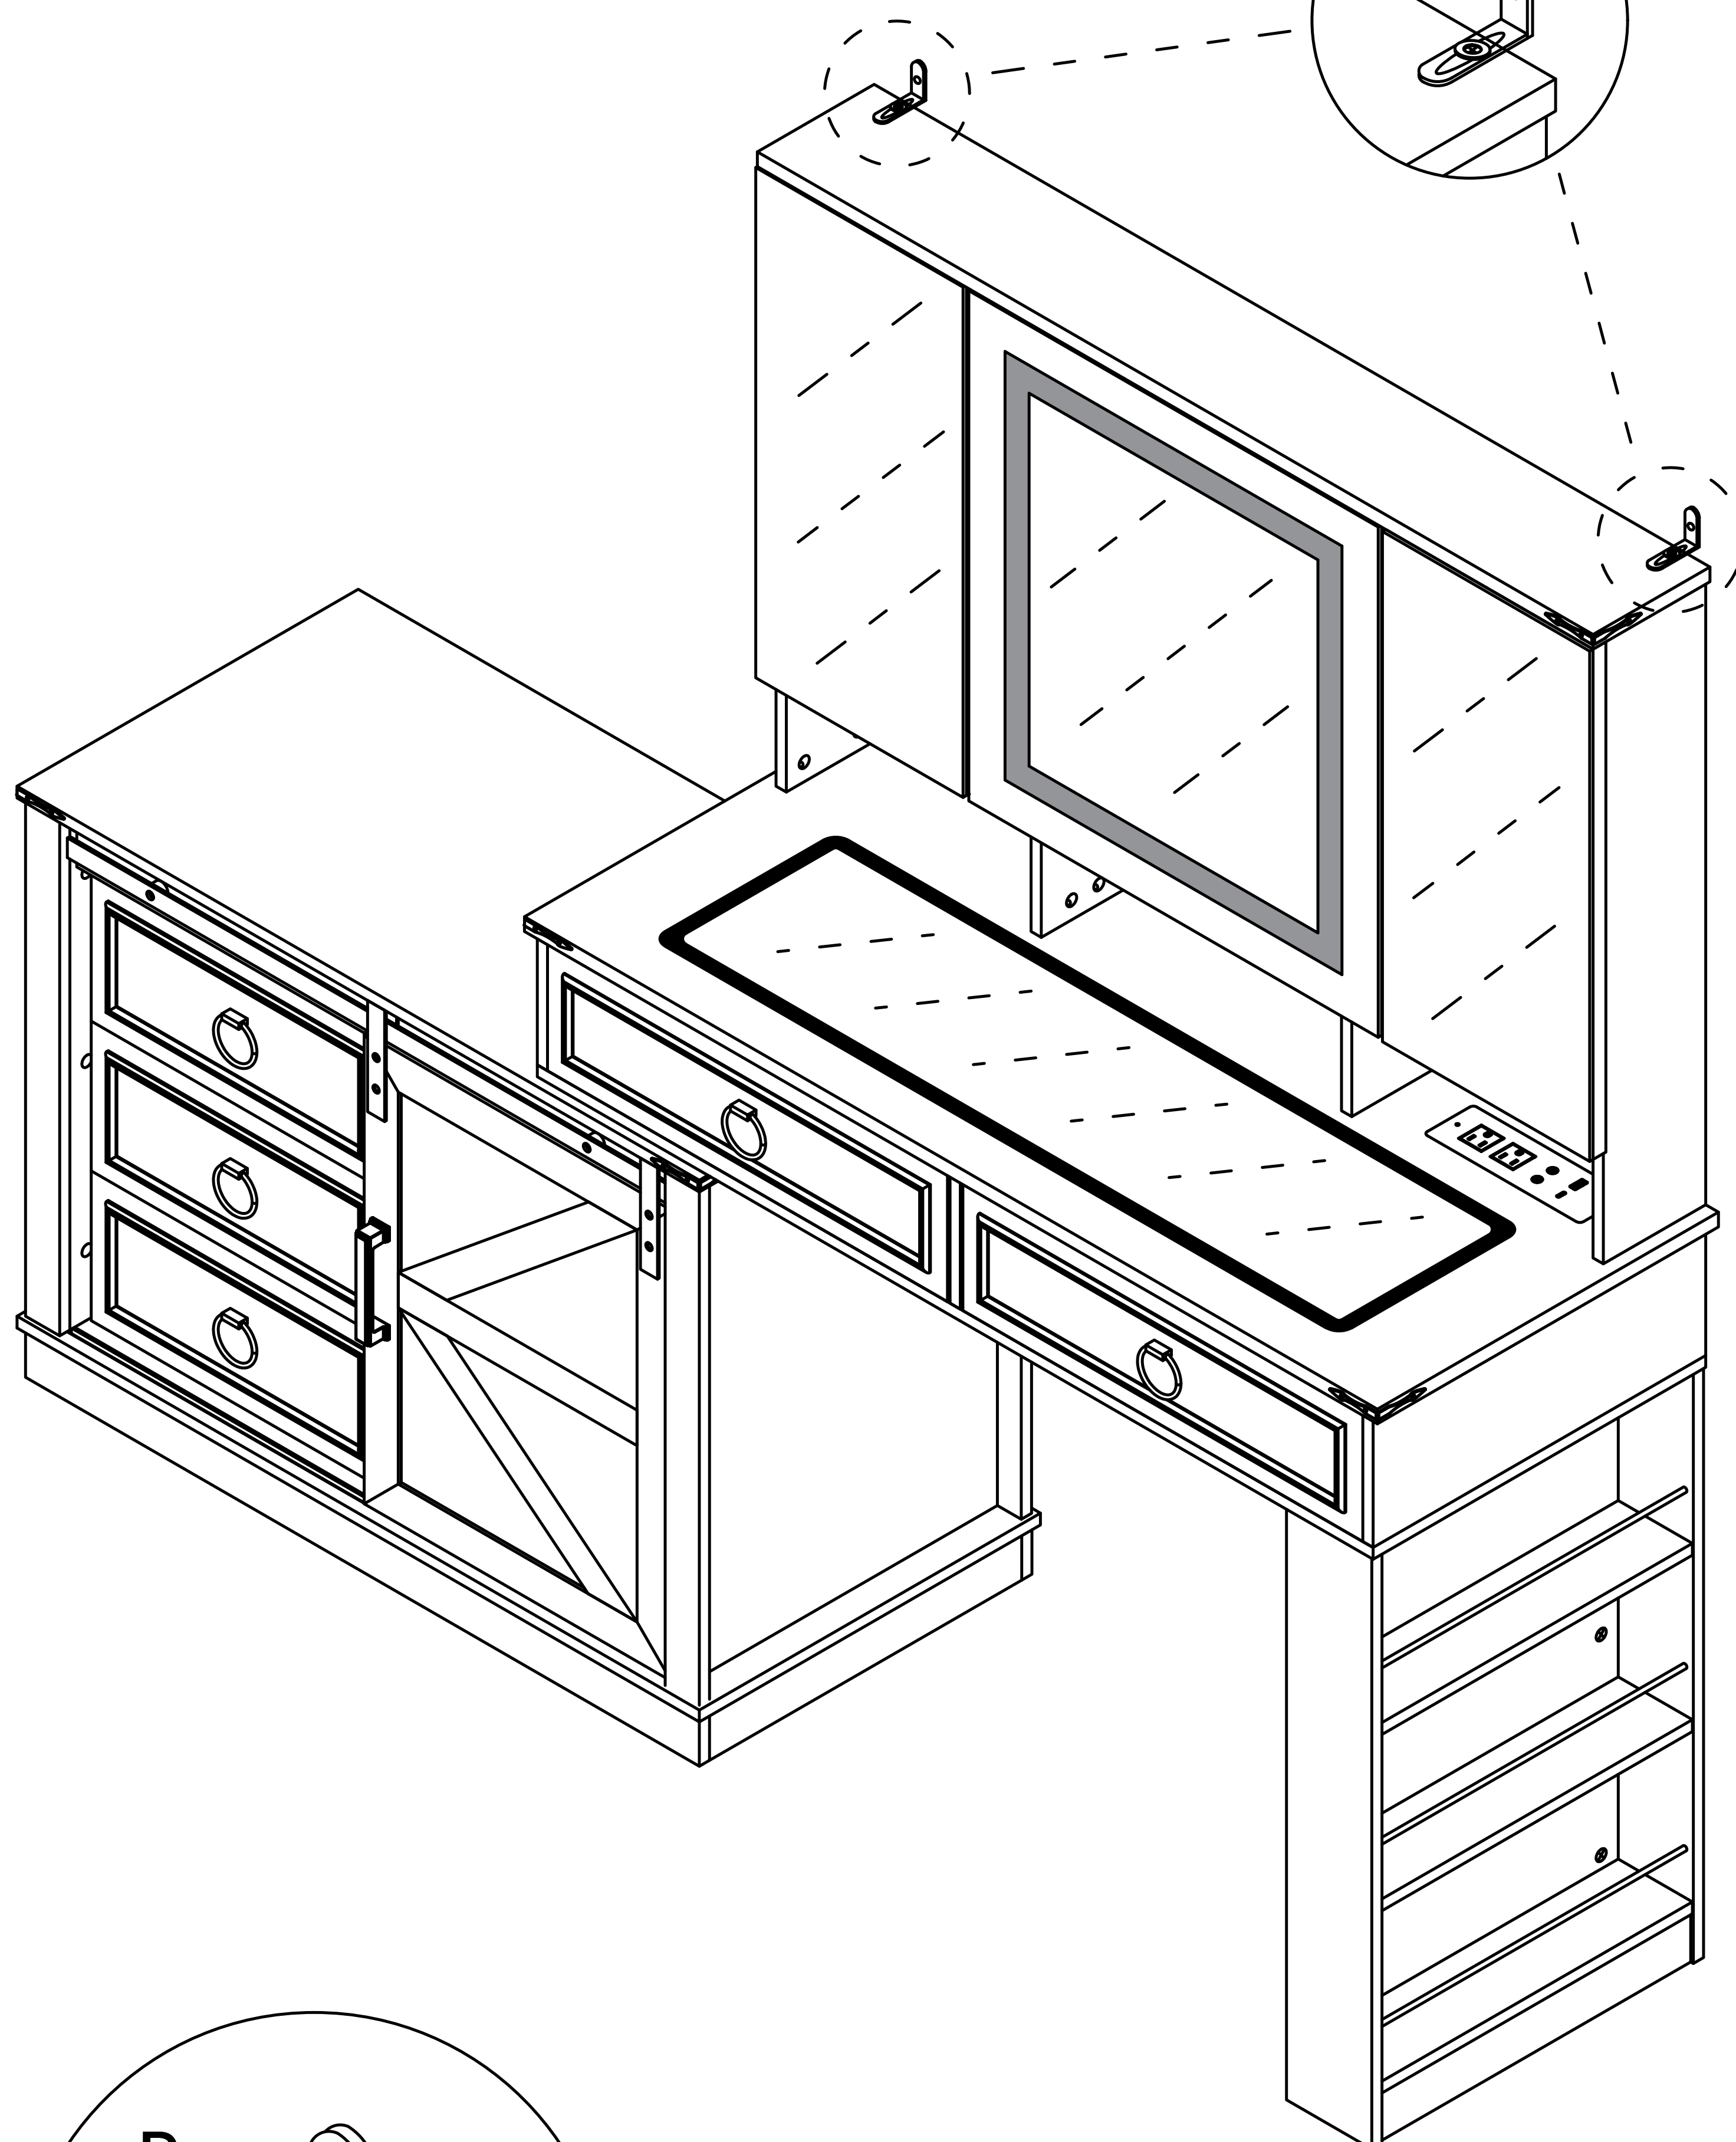
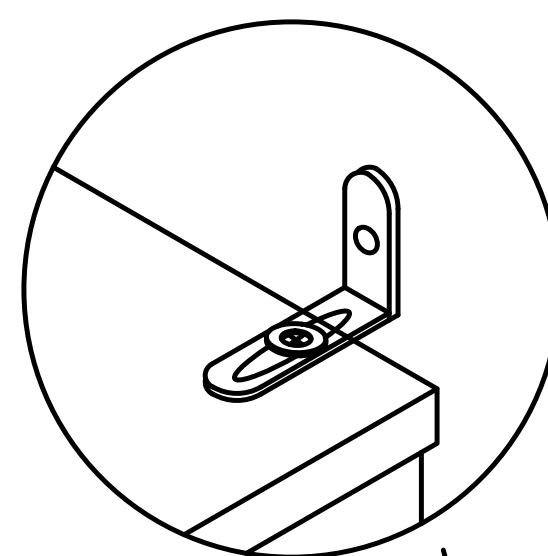


Then mark the wall with a pen through the holes in the anti-fall hardware

Step 101

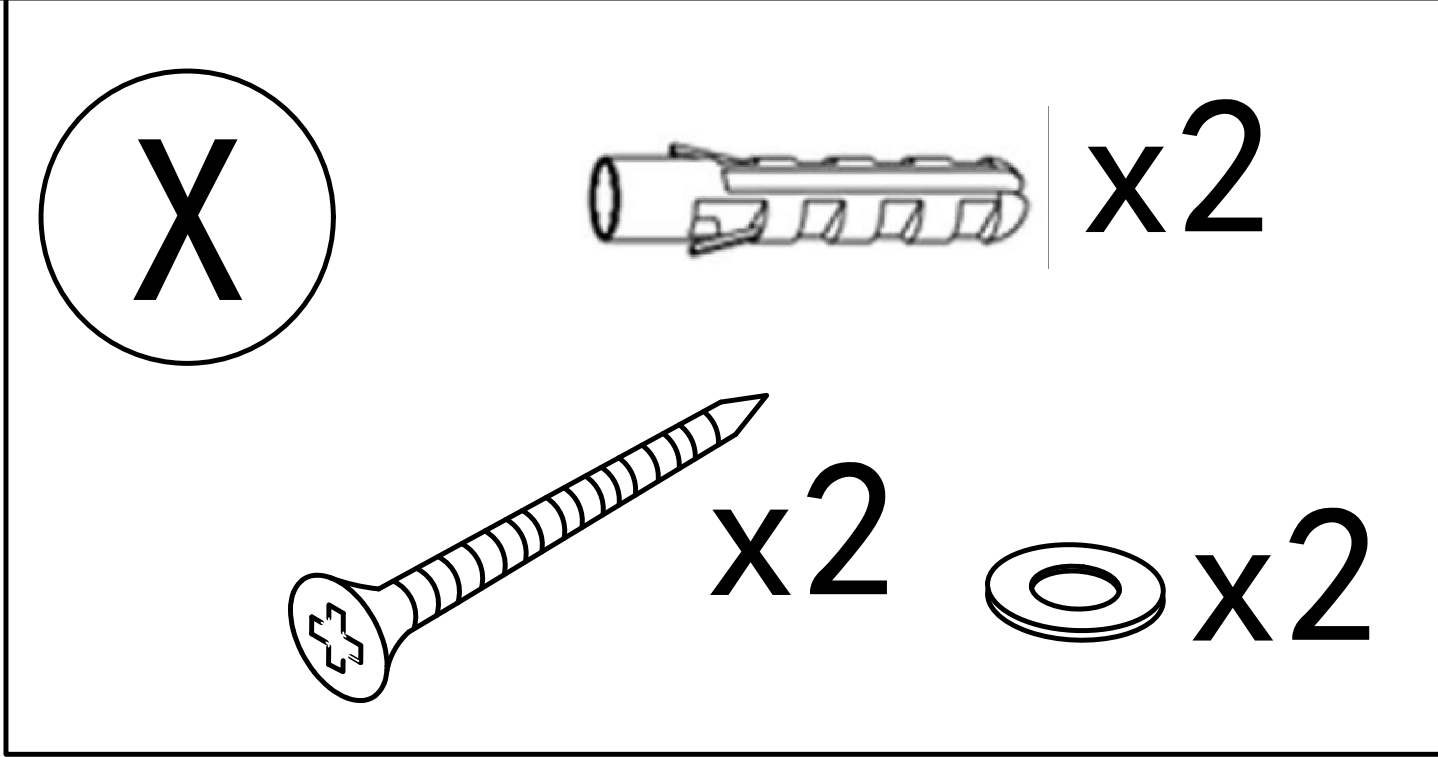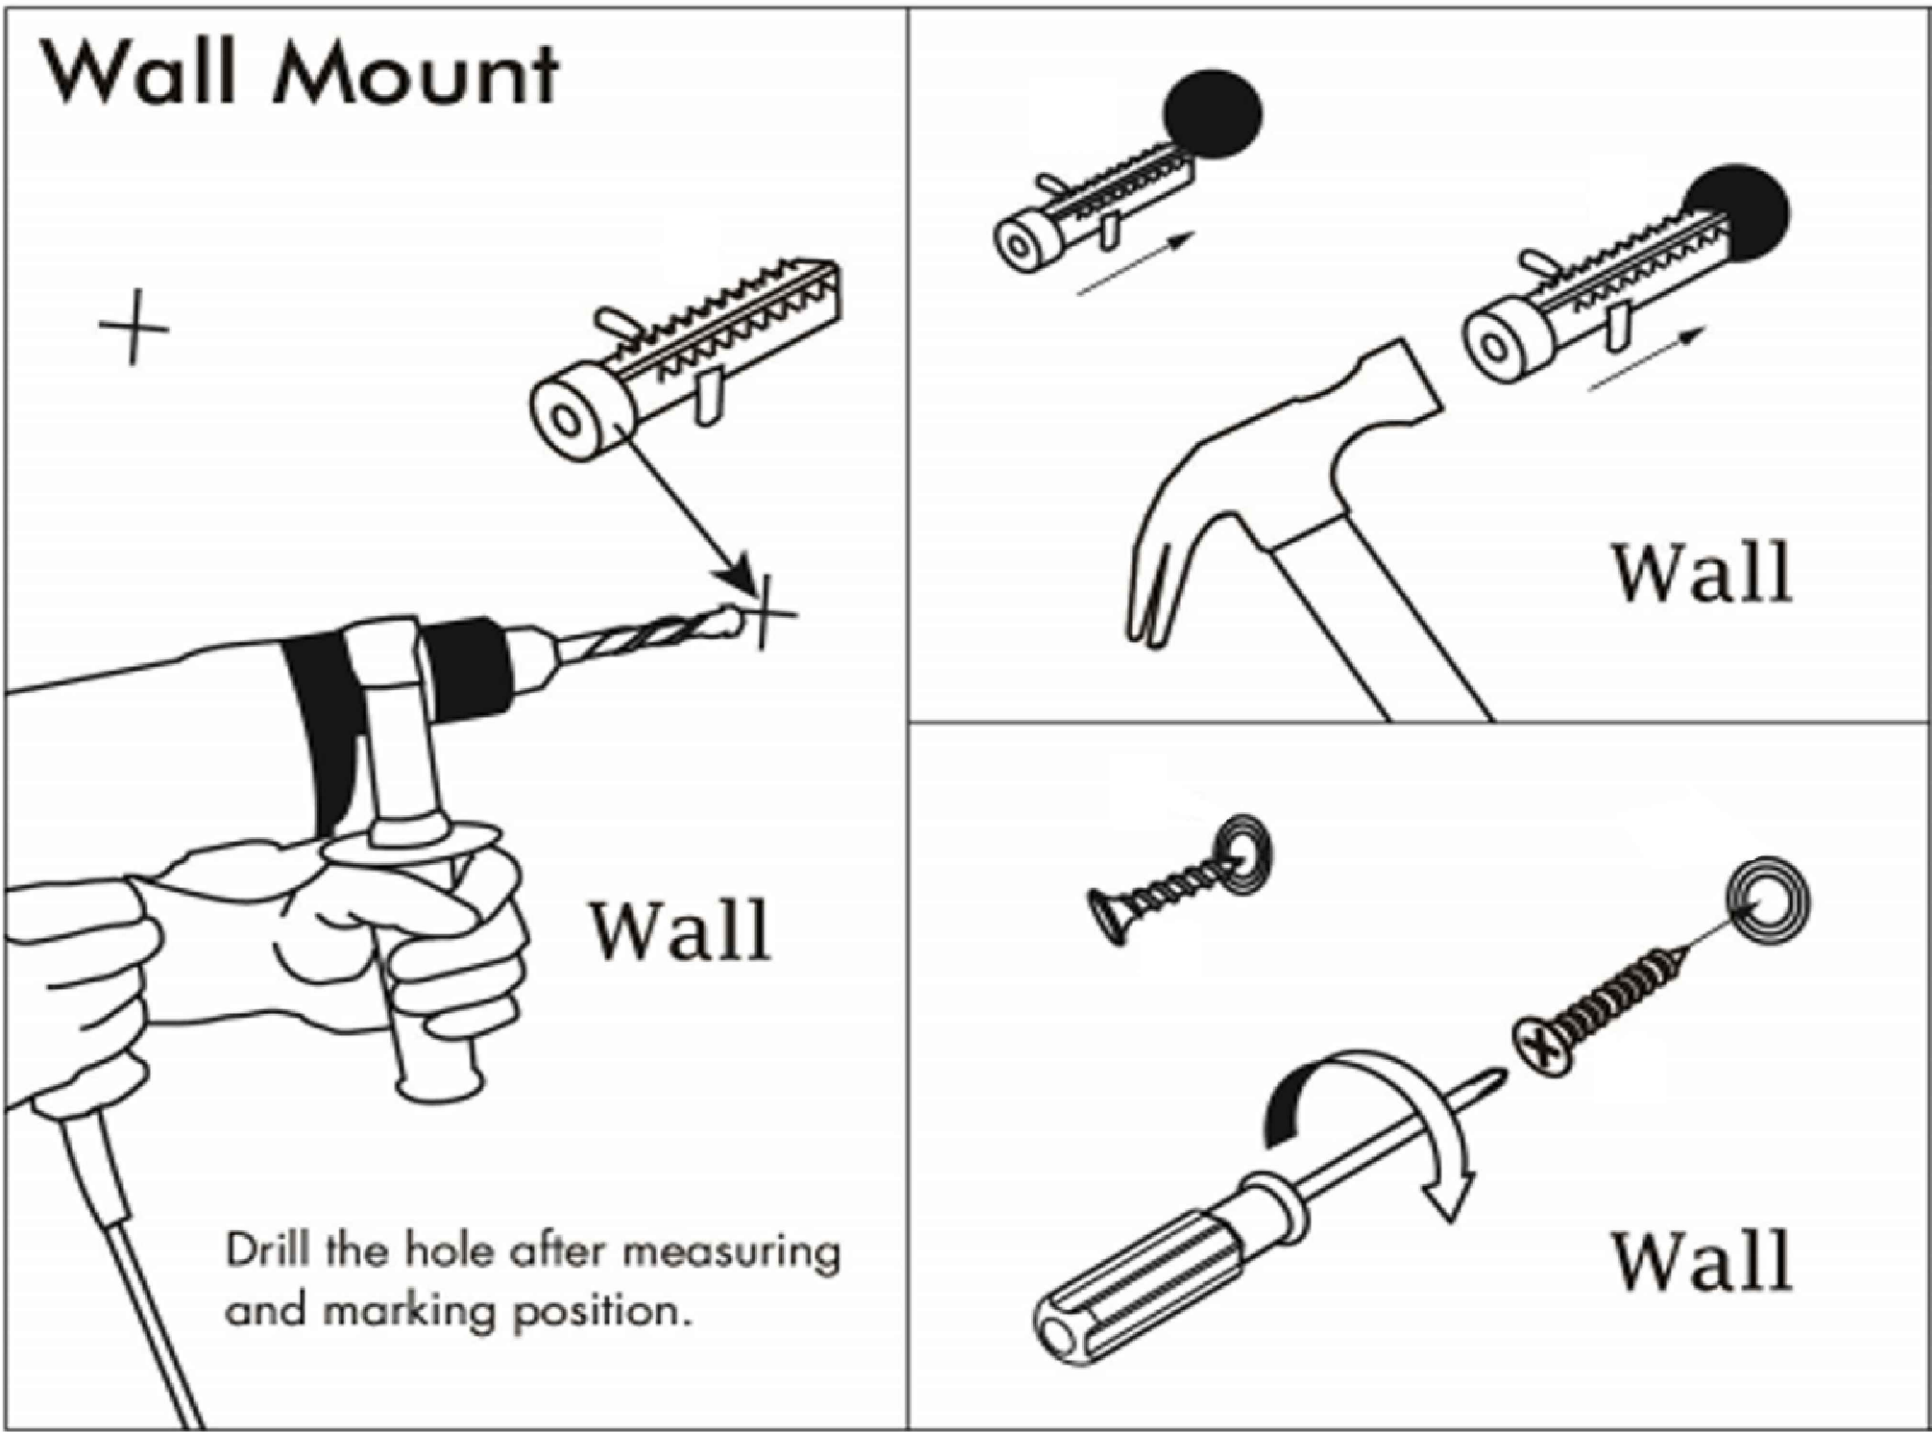

Drill the hole with an electric drill and punch in the colloidal particles

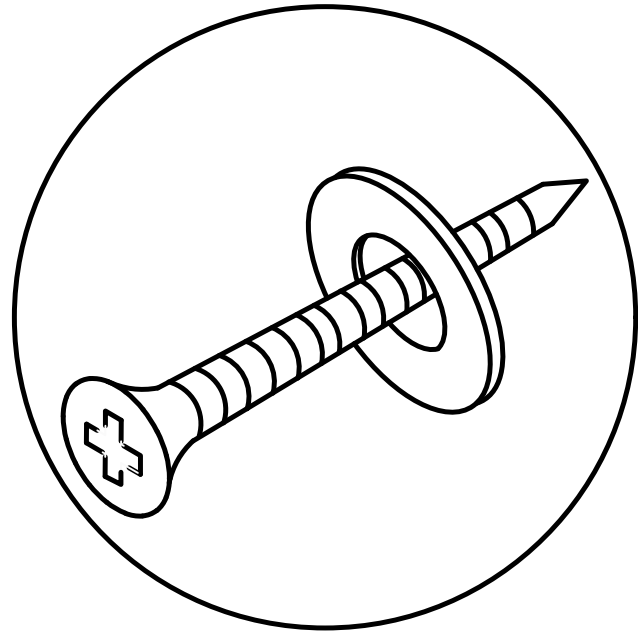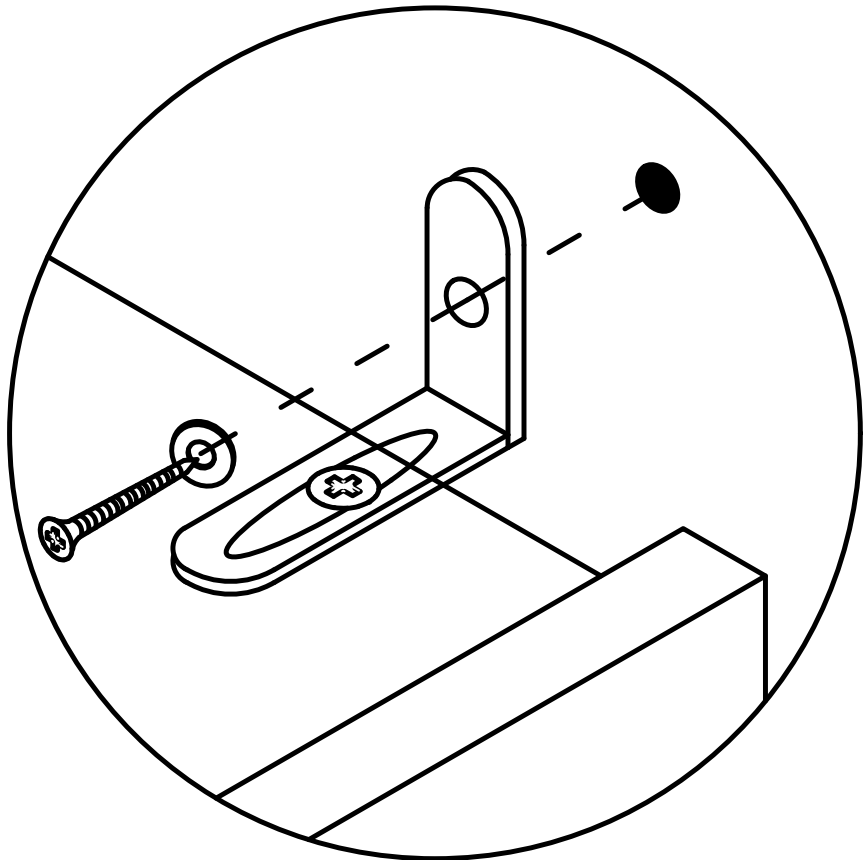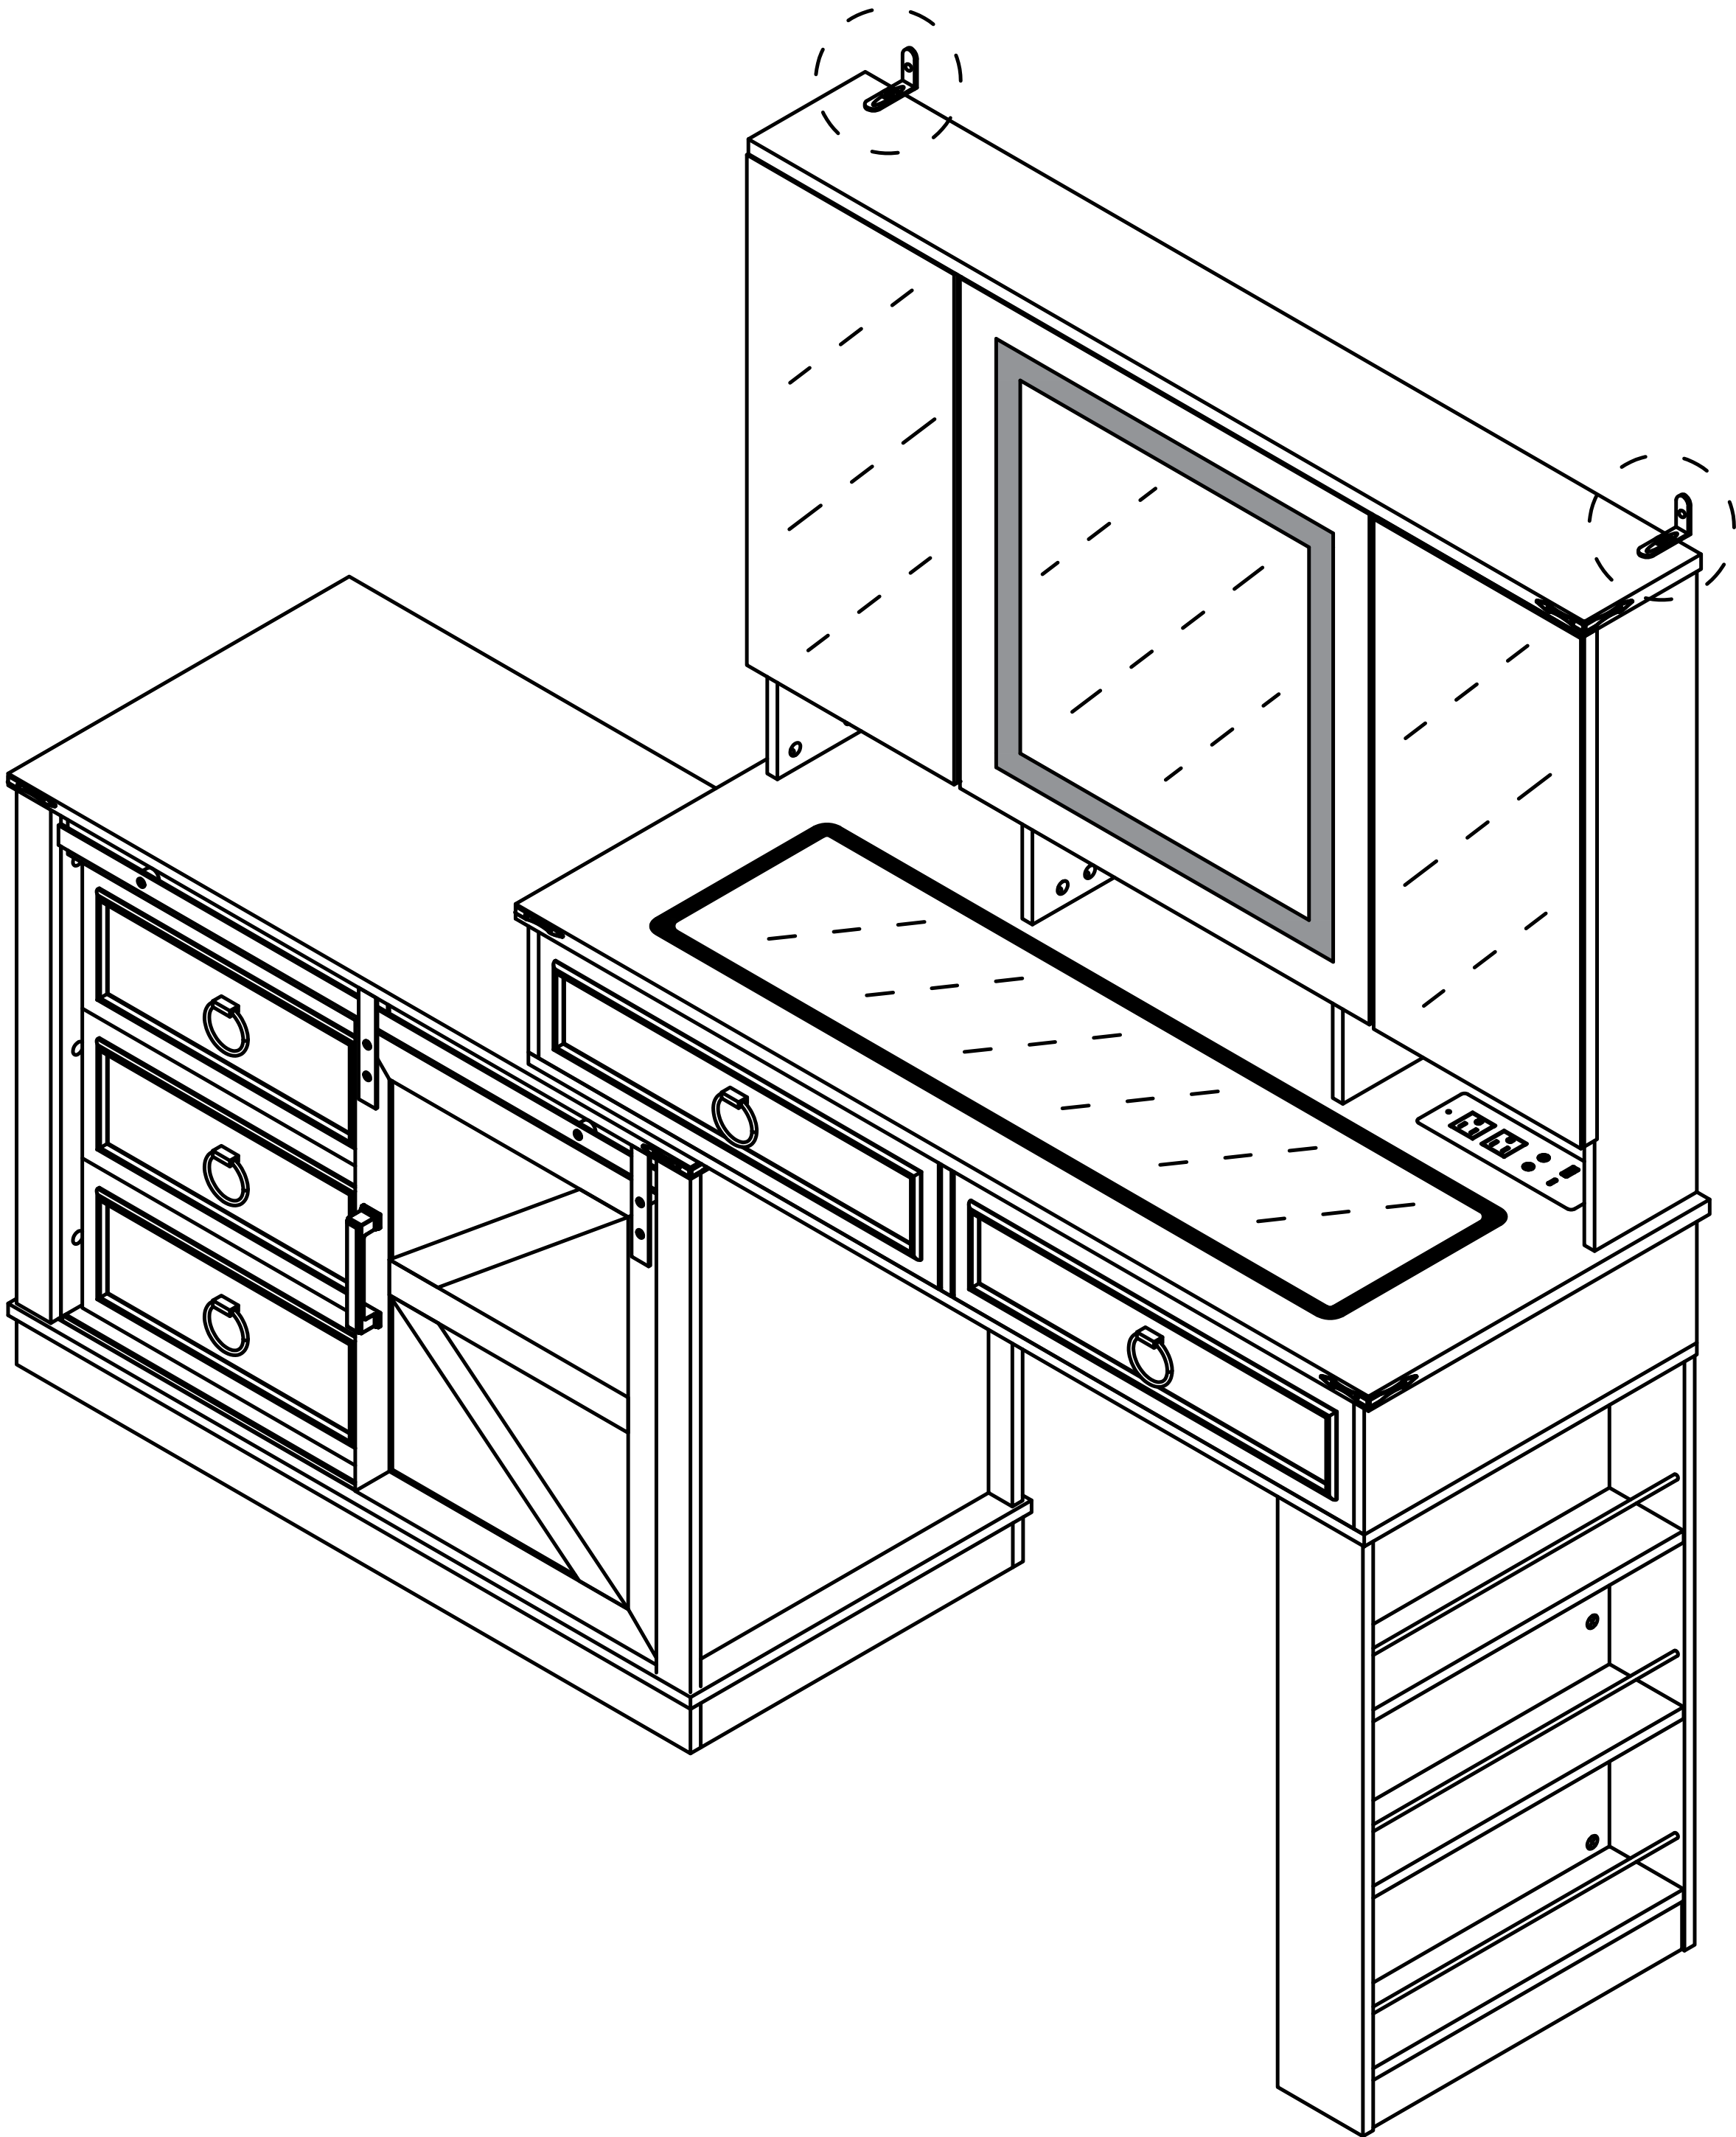

4x45mm

Fix the dressing table to the wall



User's Guide

Thank you for purchasing this product.

To use this product, please plug it into a 12V DC power supply.

Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller. It has 1 USB output port 1 Type-c port and can distribute the current output up to 5V DC-2A. With 2 touch buttons, it can turn. ON/OFF the light, change light colors, and adjust the light luminance.

Operation




This touch button is used to turn on/off, change colors, and adjust brightness.

- A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off.
- B. Long touch -> adjust the luminance.



This touch button is used to turn on/off the induction function.

- A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.
- B. Long touch to turn off the induction function.
- C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.

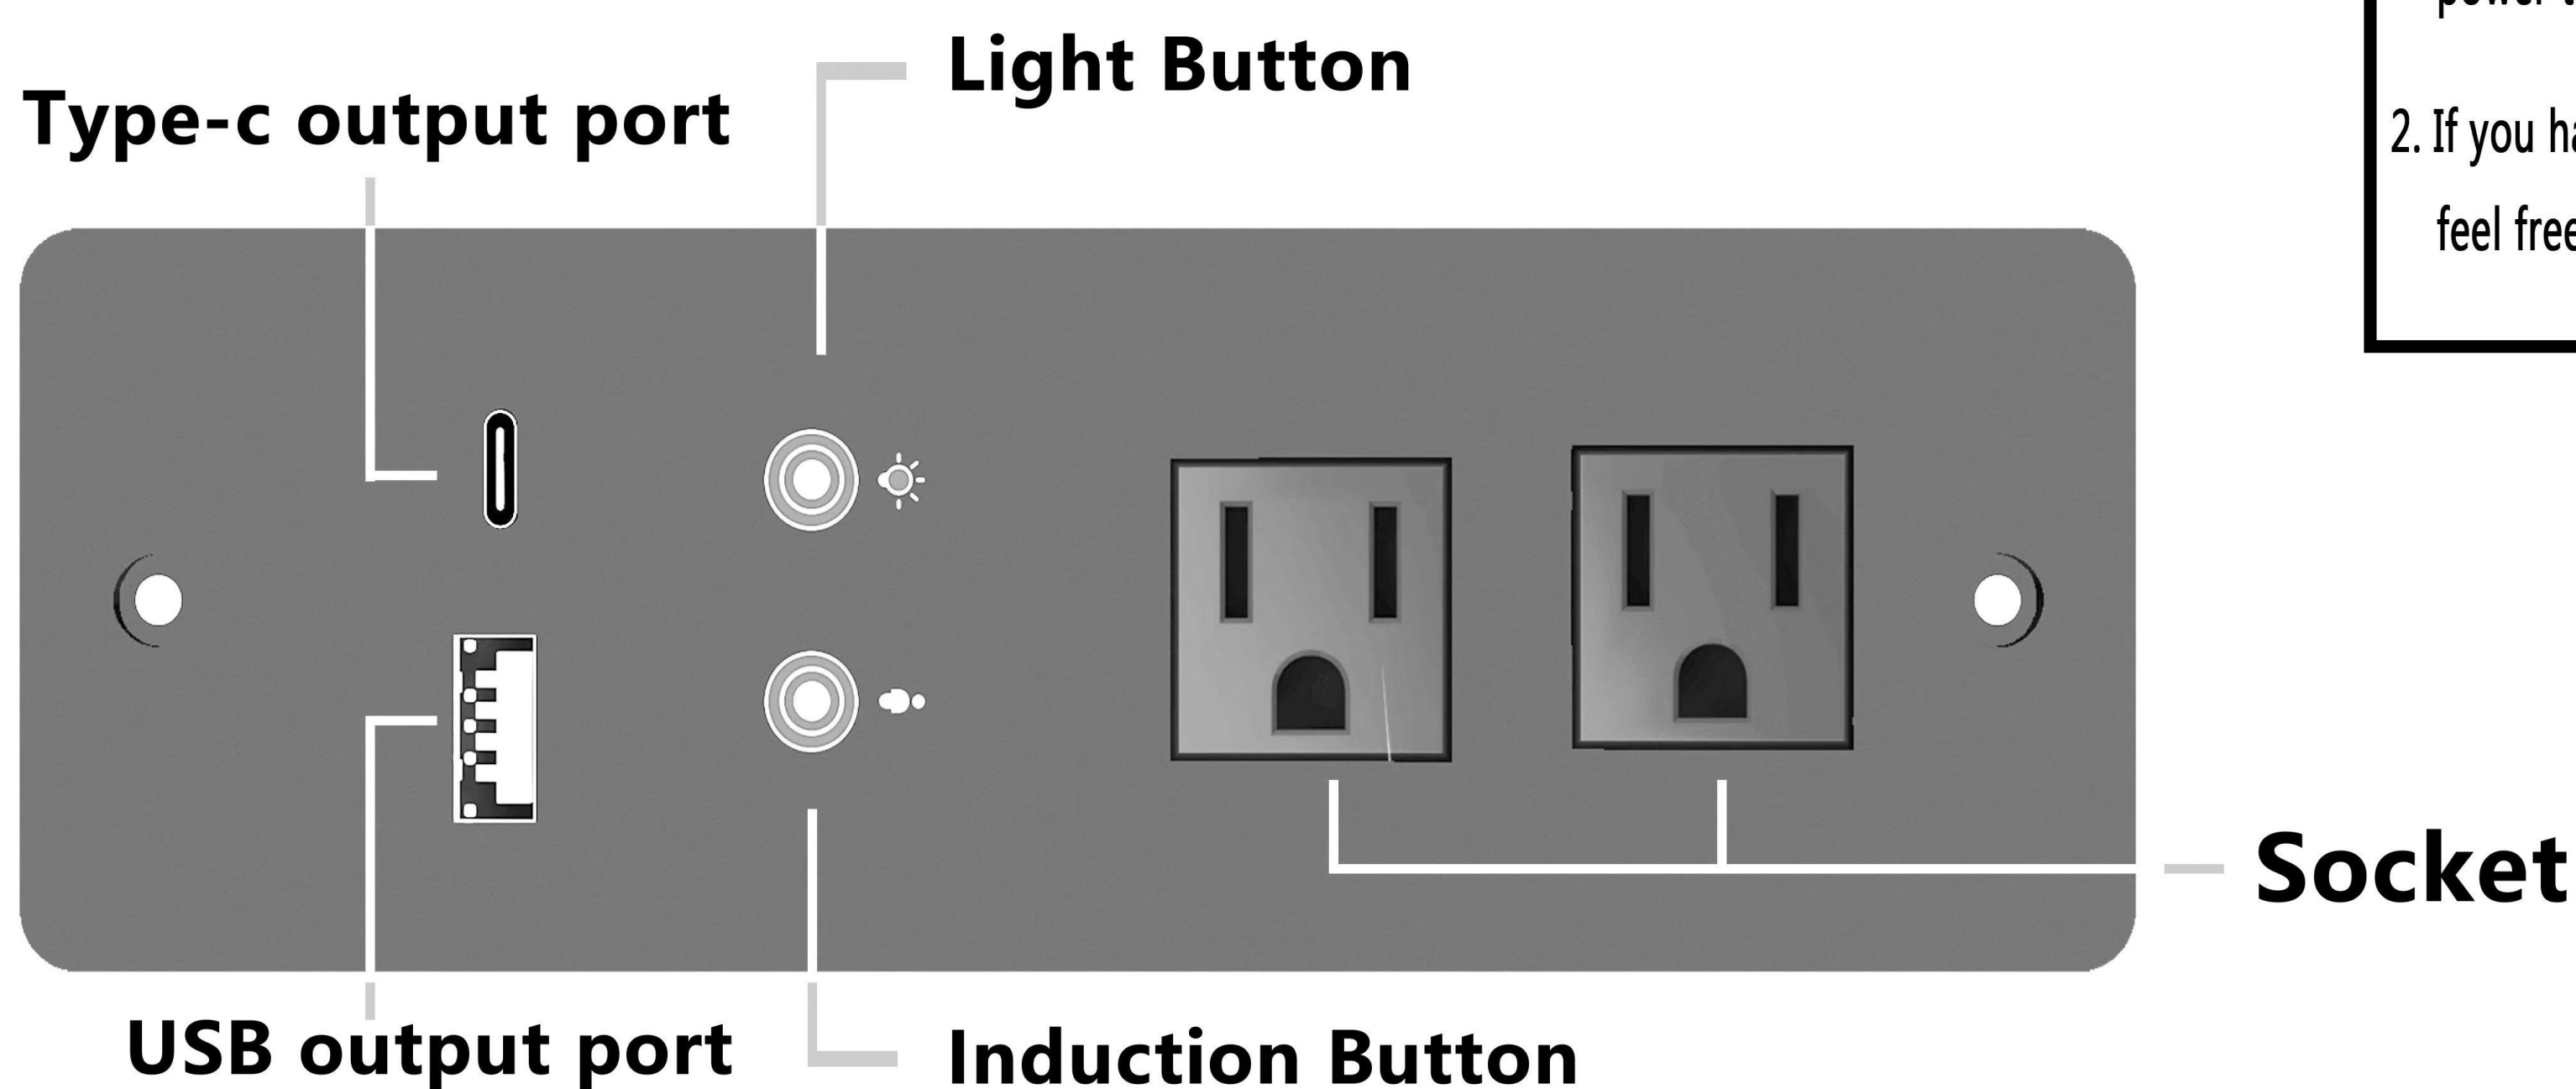

ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If you have any questions when installing, please feel free to contact us. Thank you.