


# LARGE BAR CABINET

## Assembly Instruction


### STEP 1

UNSCREW HANDLE

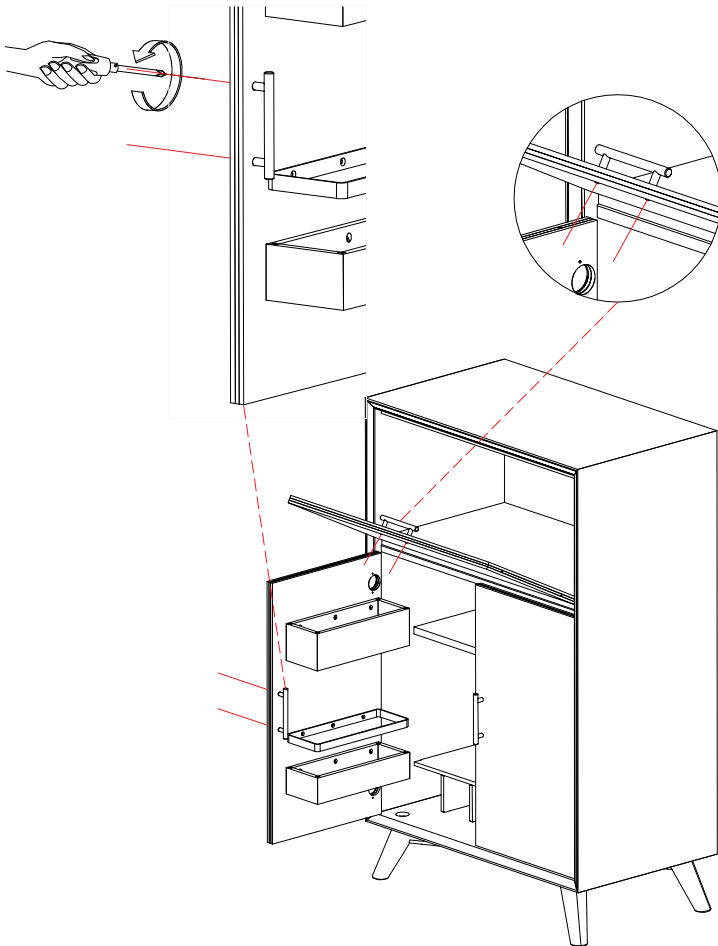

### STEP 2

RE-SCREW ON REVERSE SIDE

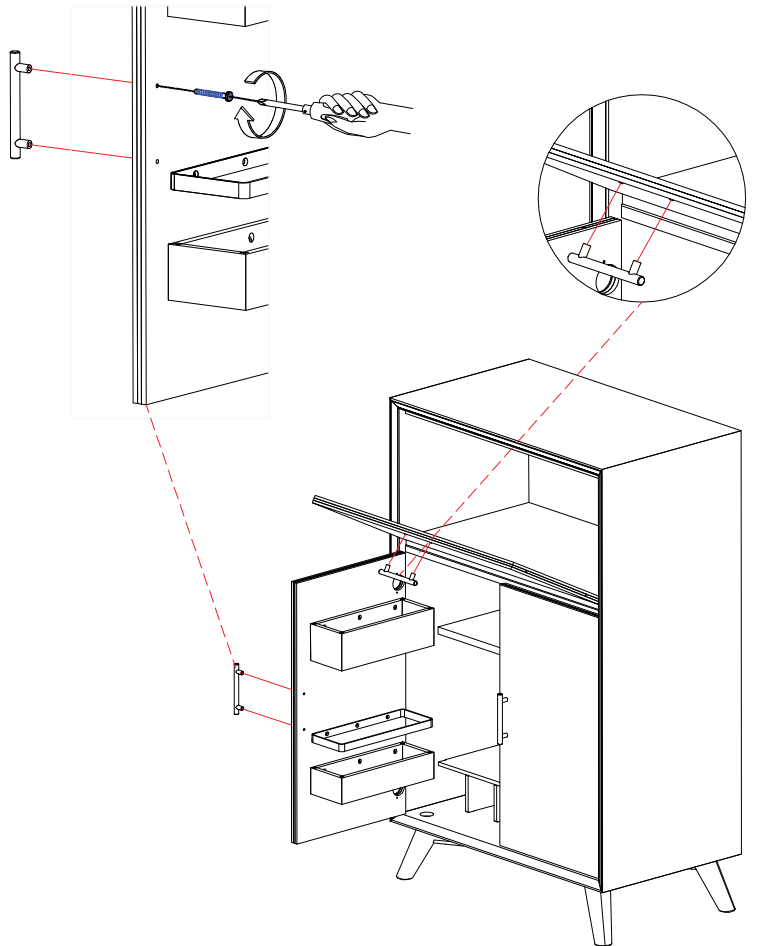

### FINISH

