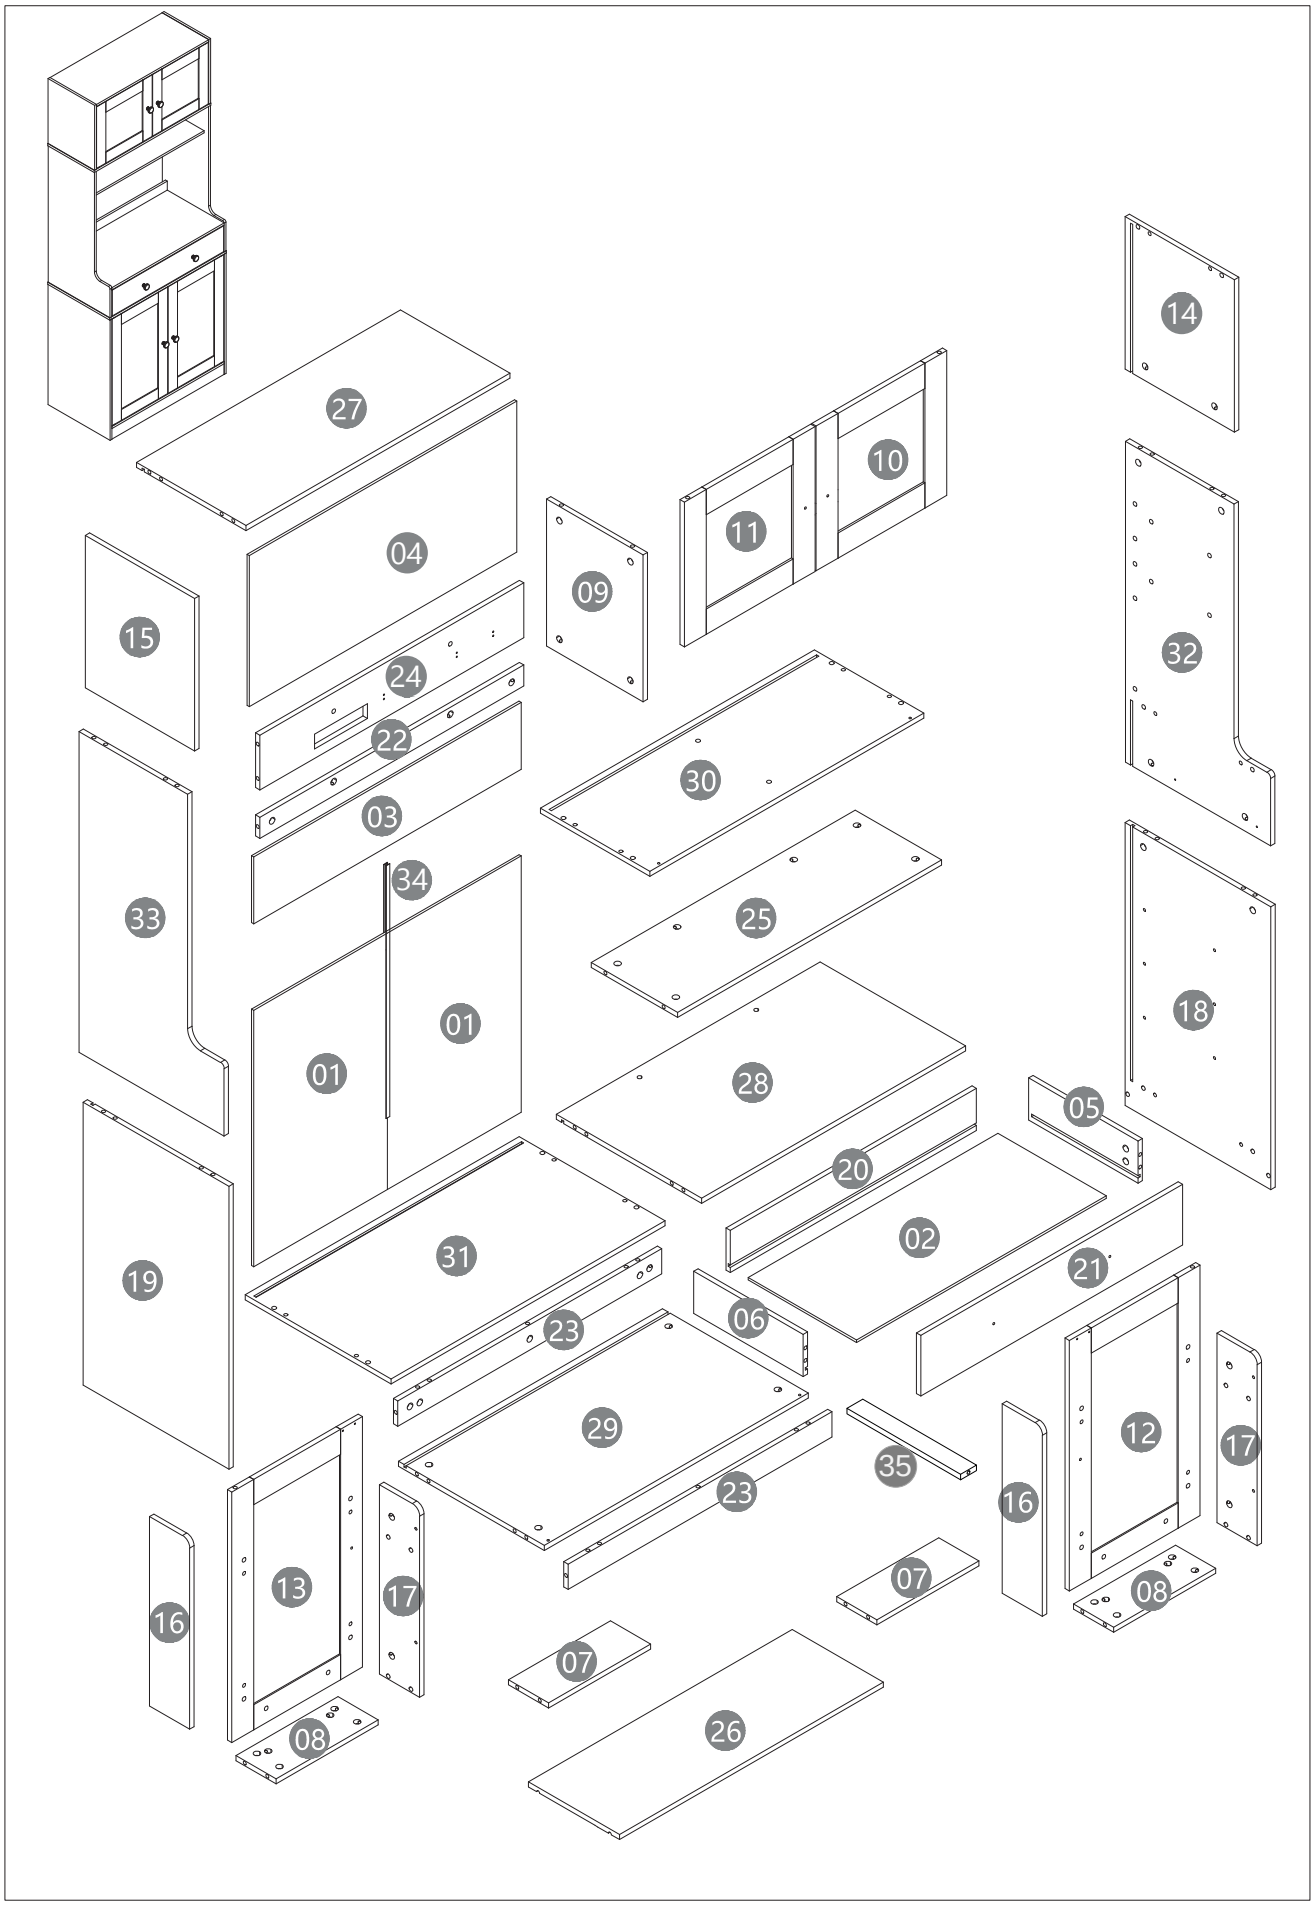
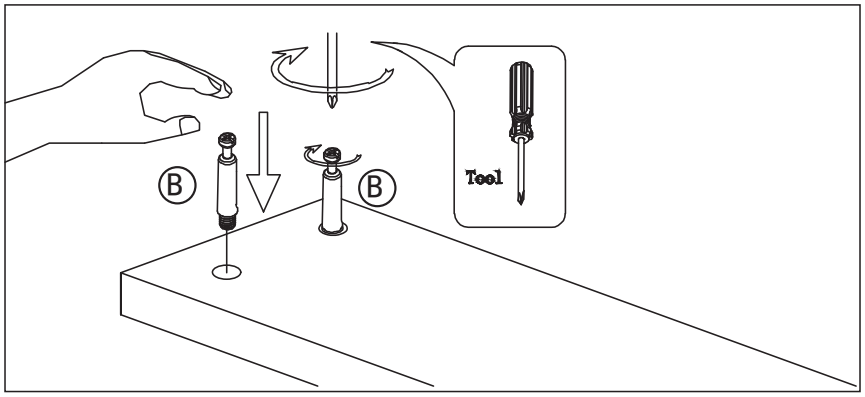
User Manual


Disassembly Diagram





Assembly Instructions

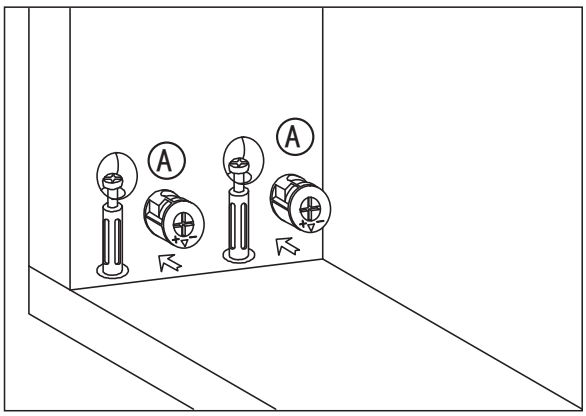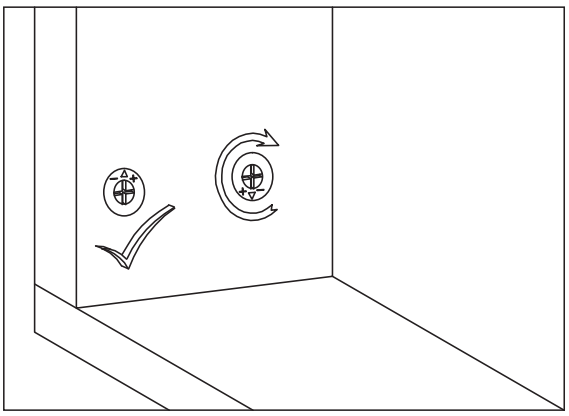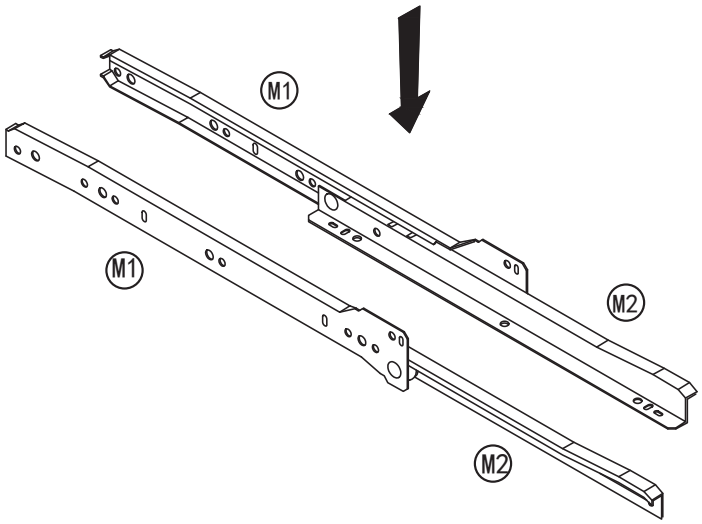
Setp1: Hardware Installation. NOTE:Ensure that screw "A" is fully tightened and cannot be loosened!









































Accessories

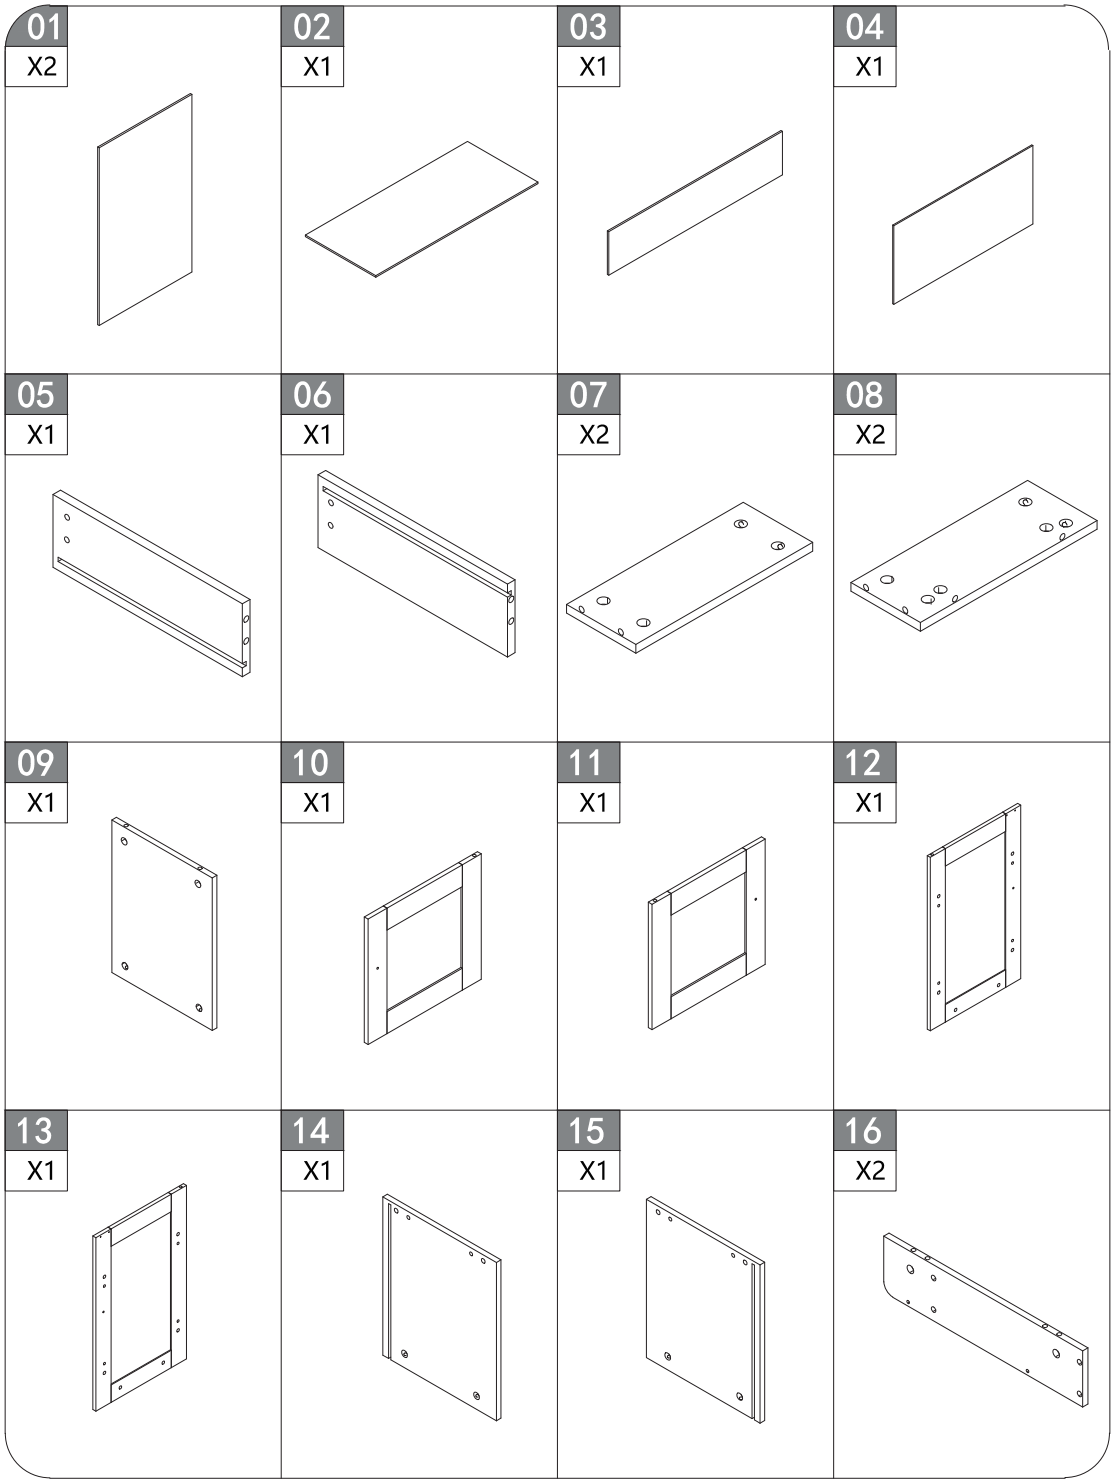












Accessories

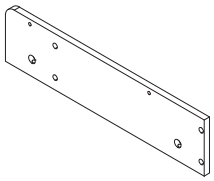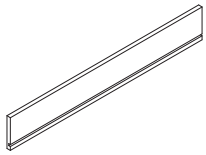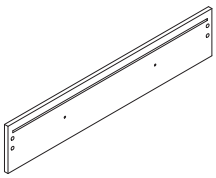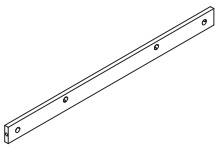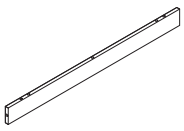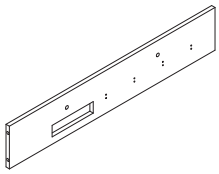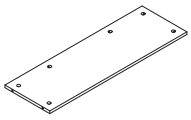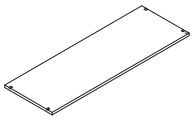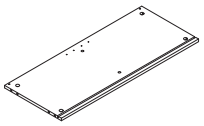17 X2 	18 X1 	19 X1 	20 X1 
21 X1 	22 X1 	23 X2 	24 X1 
25 X1 	26 X1 	27 X1 	28 X1 
29 X1 	30 X1 	31 X1 	32 X1 

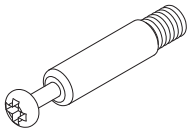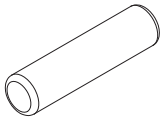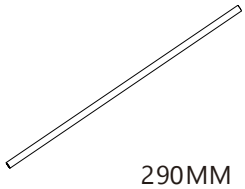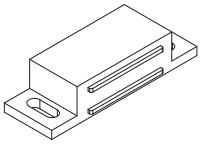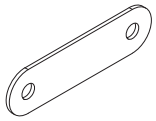Accessories


33 X1 	34 X1 	35 X1 	
A X 91 	B X 91 	C X42 	D X4  290MM
E X8  4*35MM	F X40  4*14MM	G X20  4*10MM	H X6  4*16MM
I X6 	J X4 	K X4 	L X4 

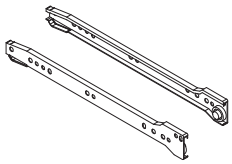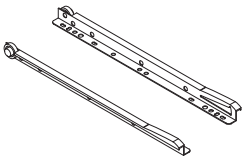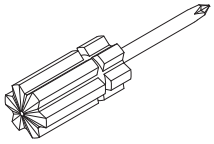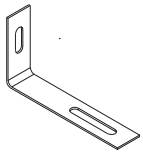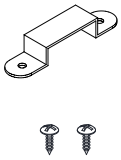

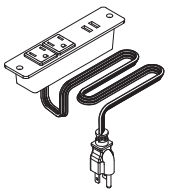
Accessories

M1 X1 	M2 X1 	N X8 	O X16 
P X1 	Q X2 	R X2 	S X96 
T X1 	U X3 	V X4 	W X1 

Assembly Instructions

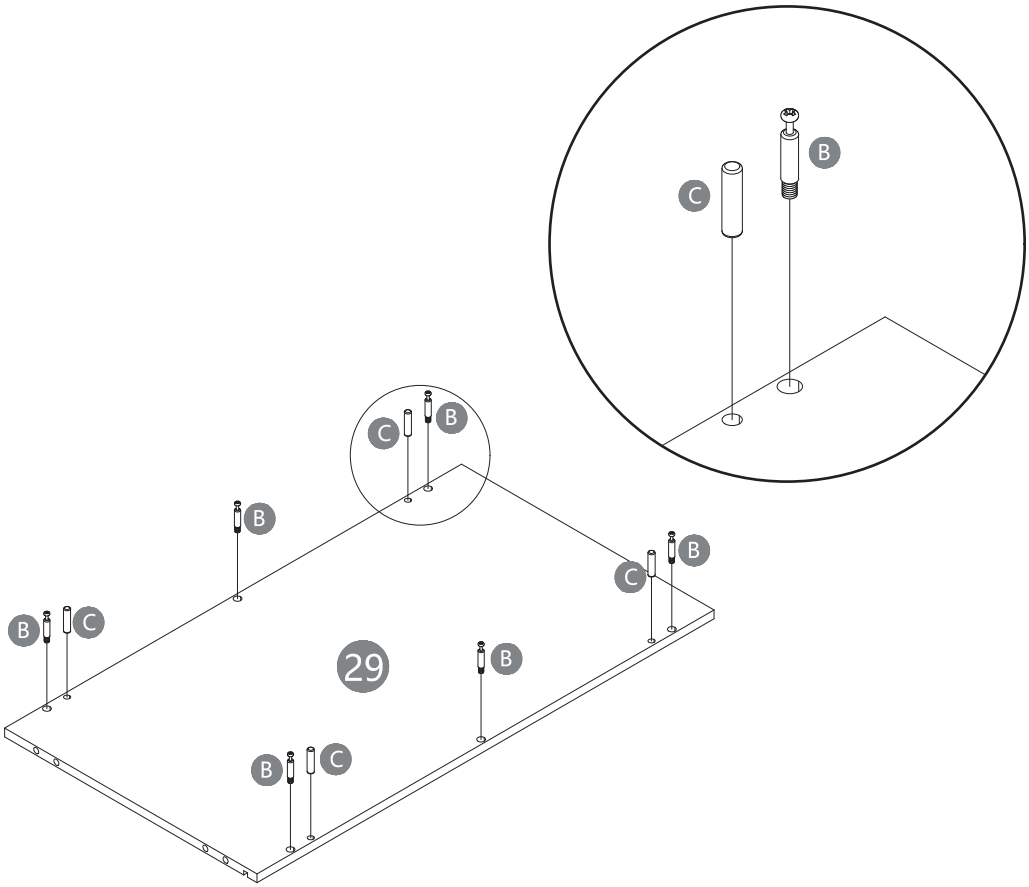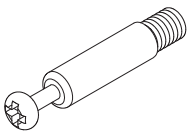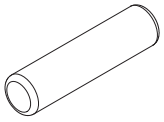
Step 1: Insert Ⓑ & Ⓒ into ㉙ .




29	B	C
		
X1	X6	X4

Assembly Instructions

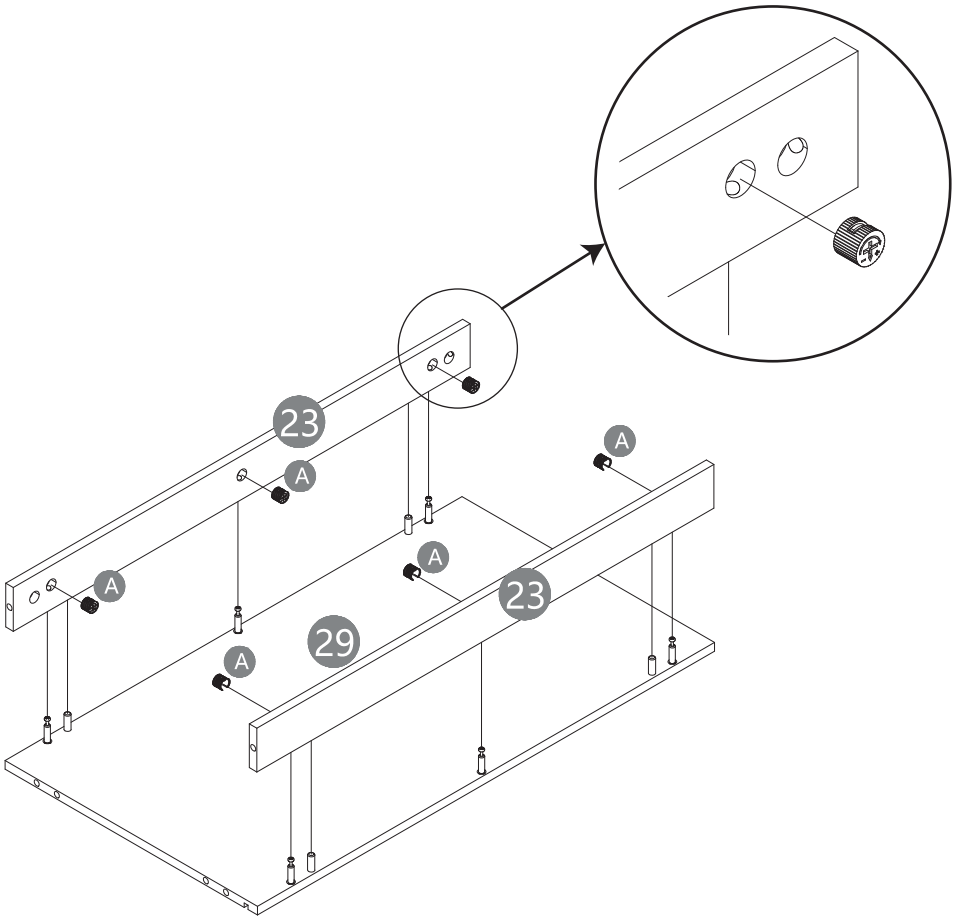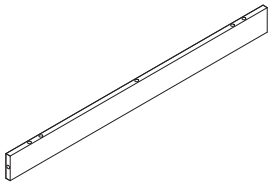
Step 2: Screw (A) into (23). Fix (23) to (29).







23	A
 X2	 X6

Assembly Instructions

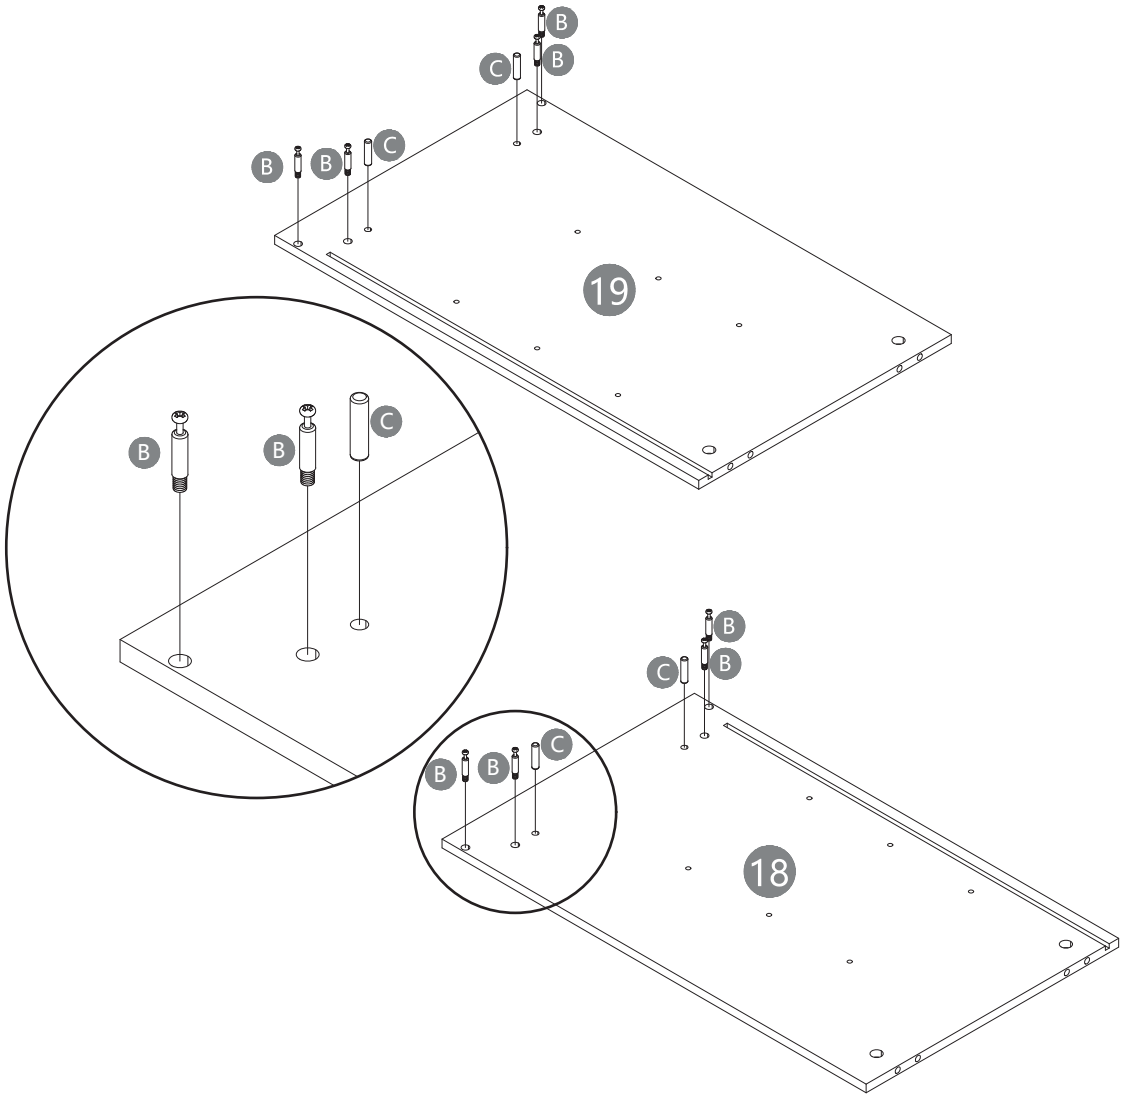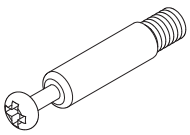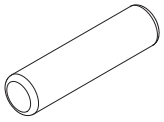
Step 3: Insert Ⓑ & Ⓒ into ⑲ and ⑱ .



18	19	B	C
			
X1	X1	X8	X4

Assembly Instructions

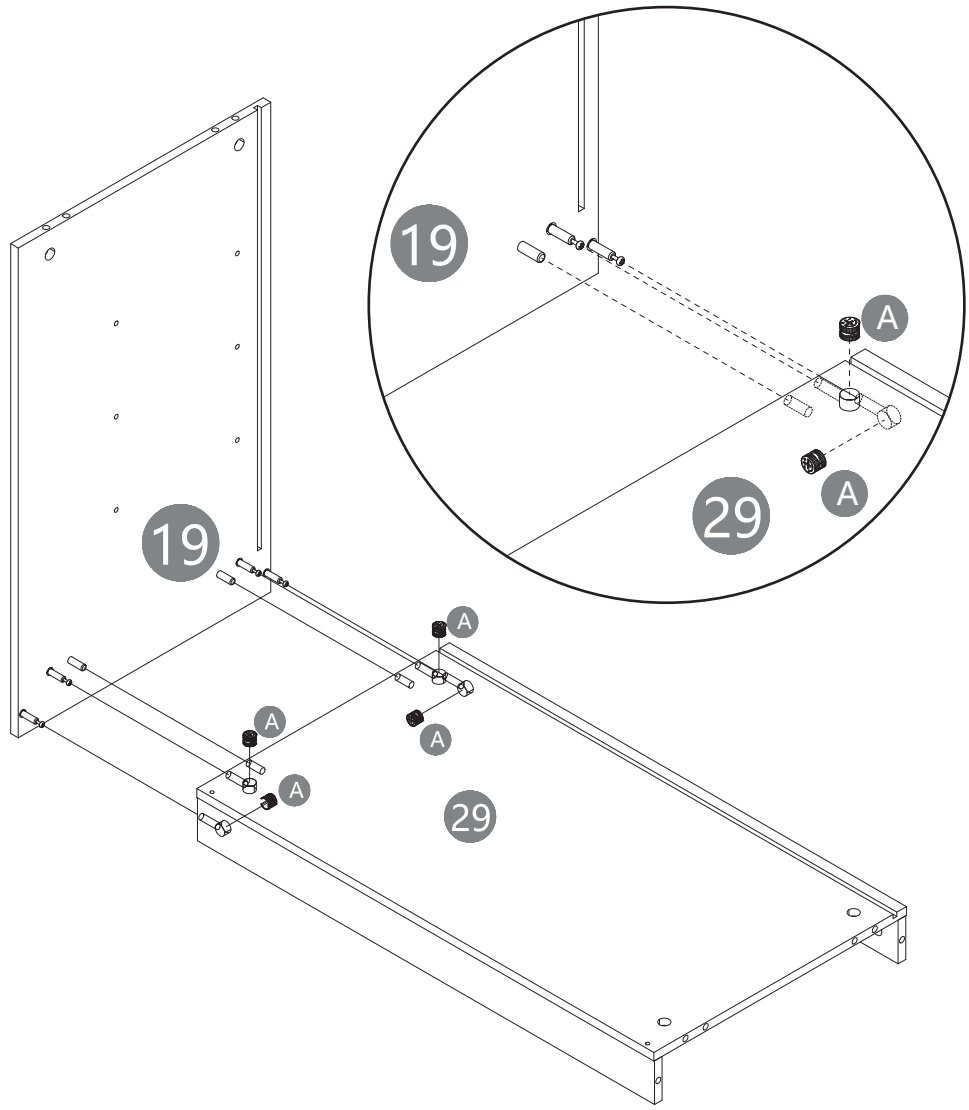Step 4: Fix ⑲ to ㉙ with Ⓐ.




A



X4

Assembly Instructions

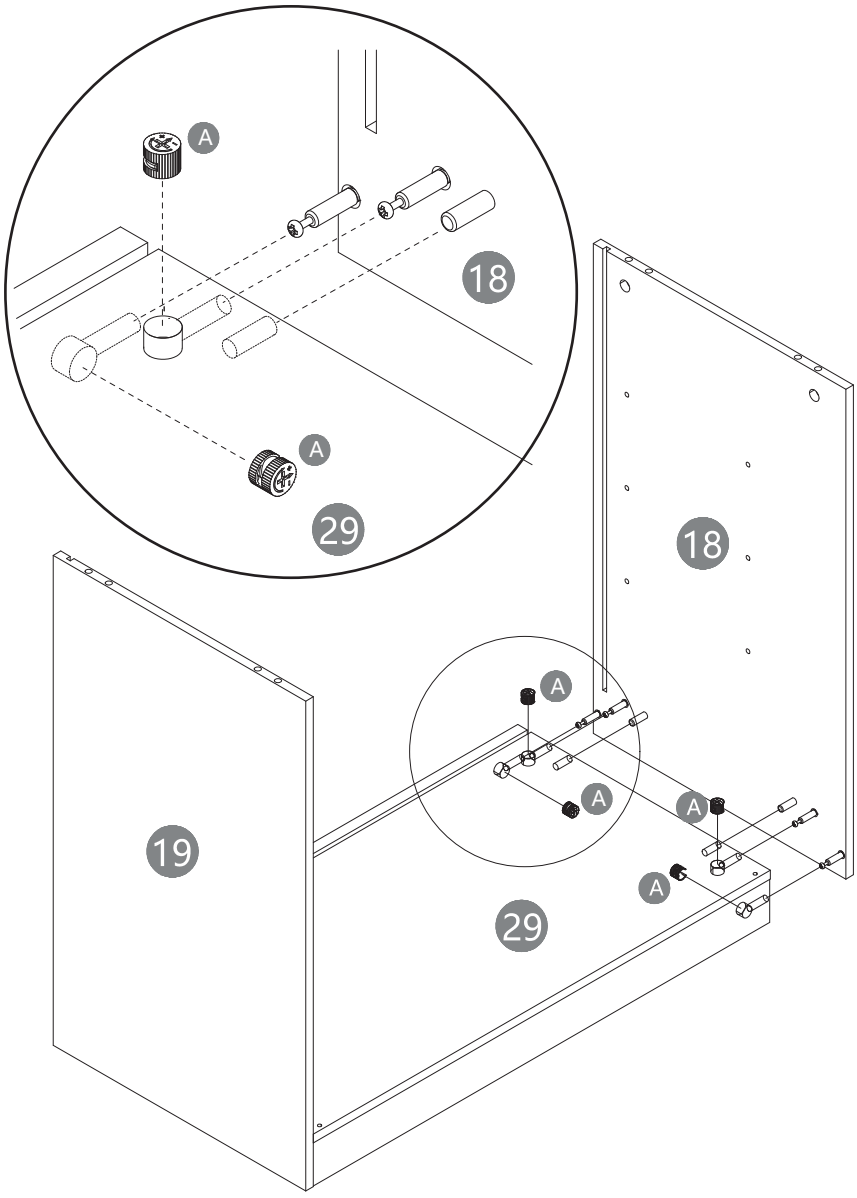Step 5: Fix ⑱ to ㉙ with Ⓐ.




A




X4

Assembly Instructions

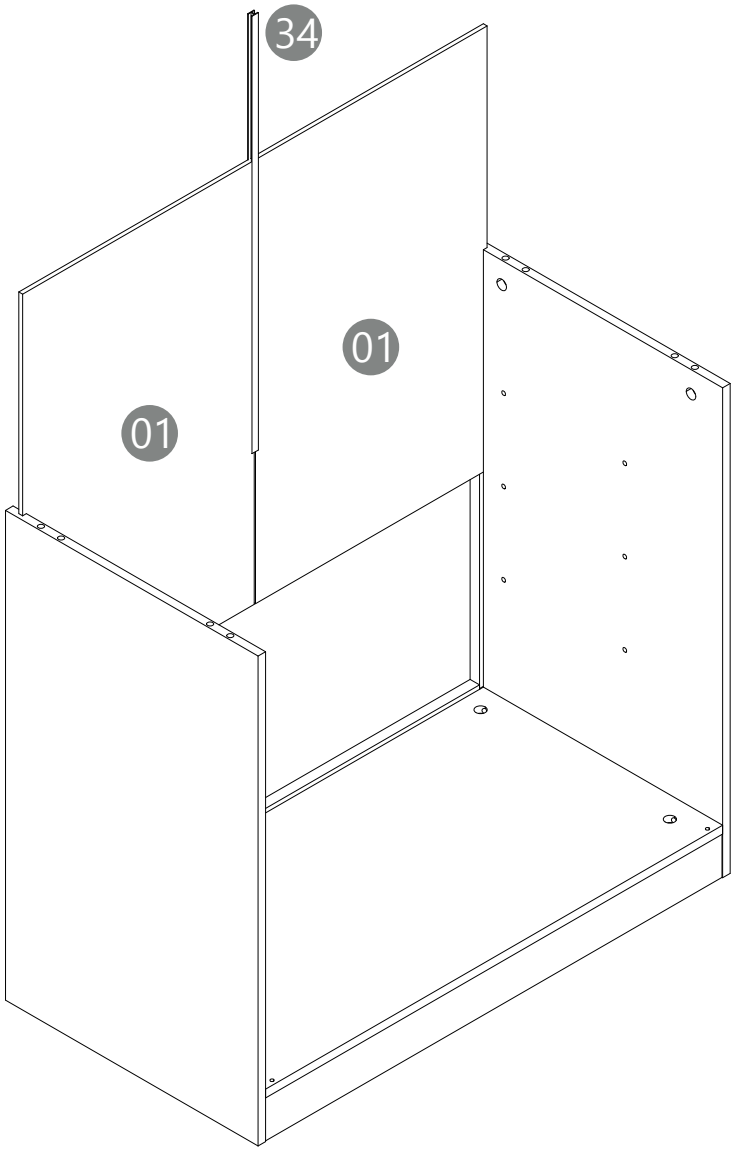
Step 6: Install the fitting (34) between components (1)







01	34
 X2	X1

Assembly Instructions

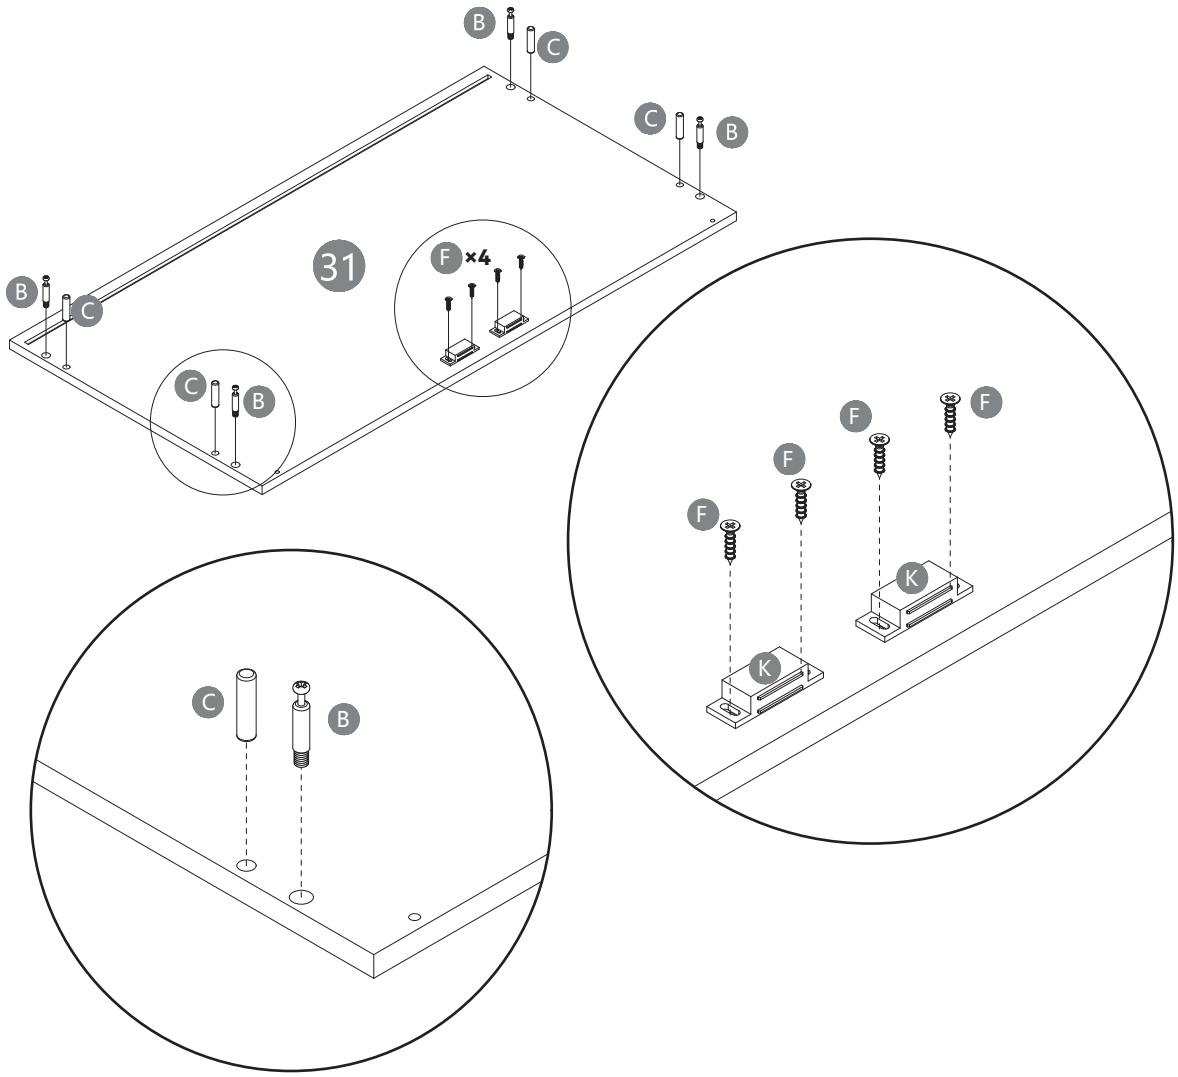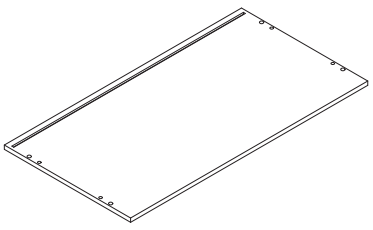
Step 7: Insert (B) & (C) into (31). Fix (K) to (31) with (F).



31  X1	B  X4	C  X4
	F  X4	K  X2

Assembly Instructions

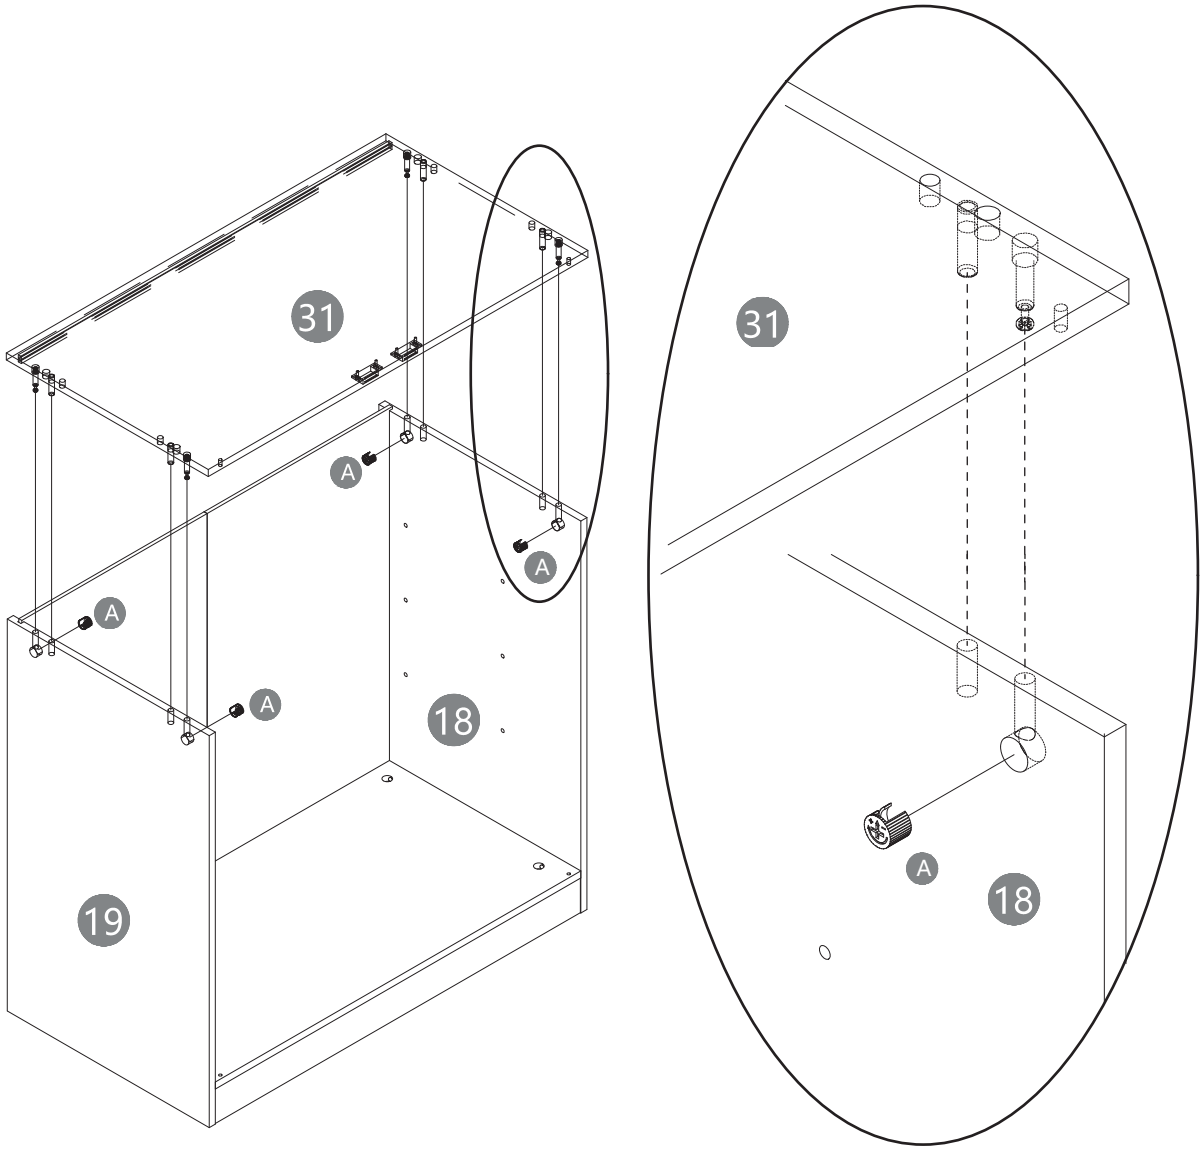Step 8: Fix ㉛ to ⑱ & ⑲ with Ⓐ.




A







X4

Assembly Instructions

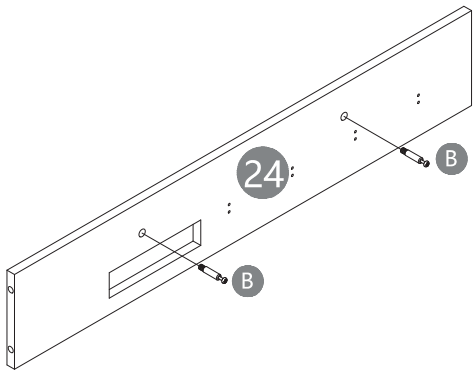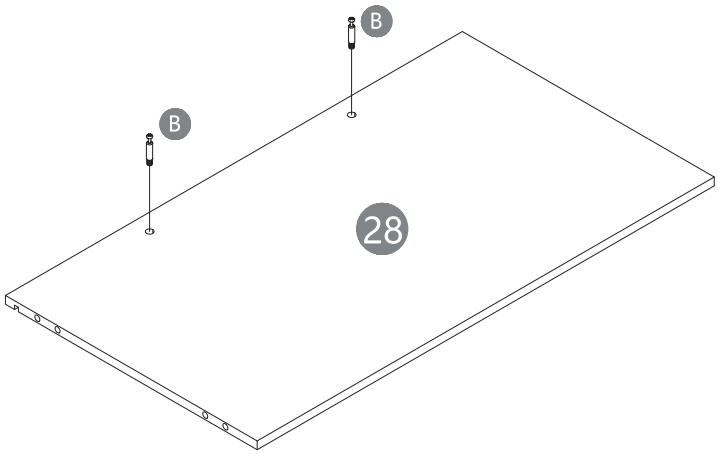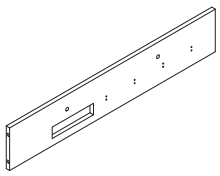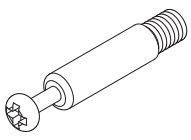Step 9: Insert Ⓑ into ㉔ & ㉘ .








24	28	B
		
X1	X1	X4

Assembly Instructions

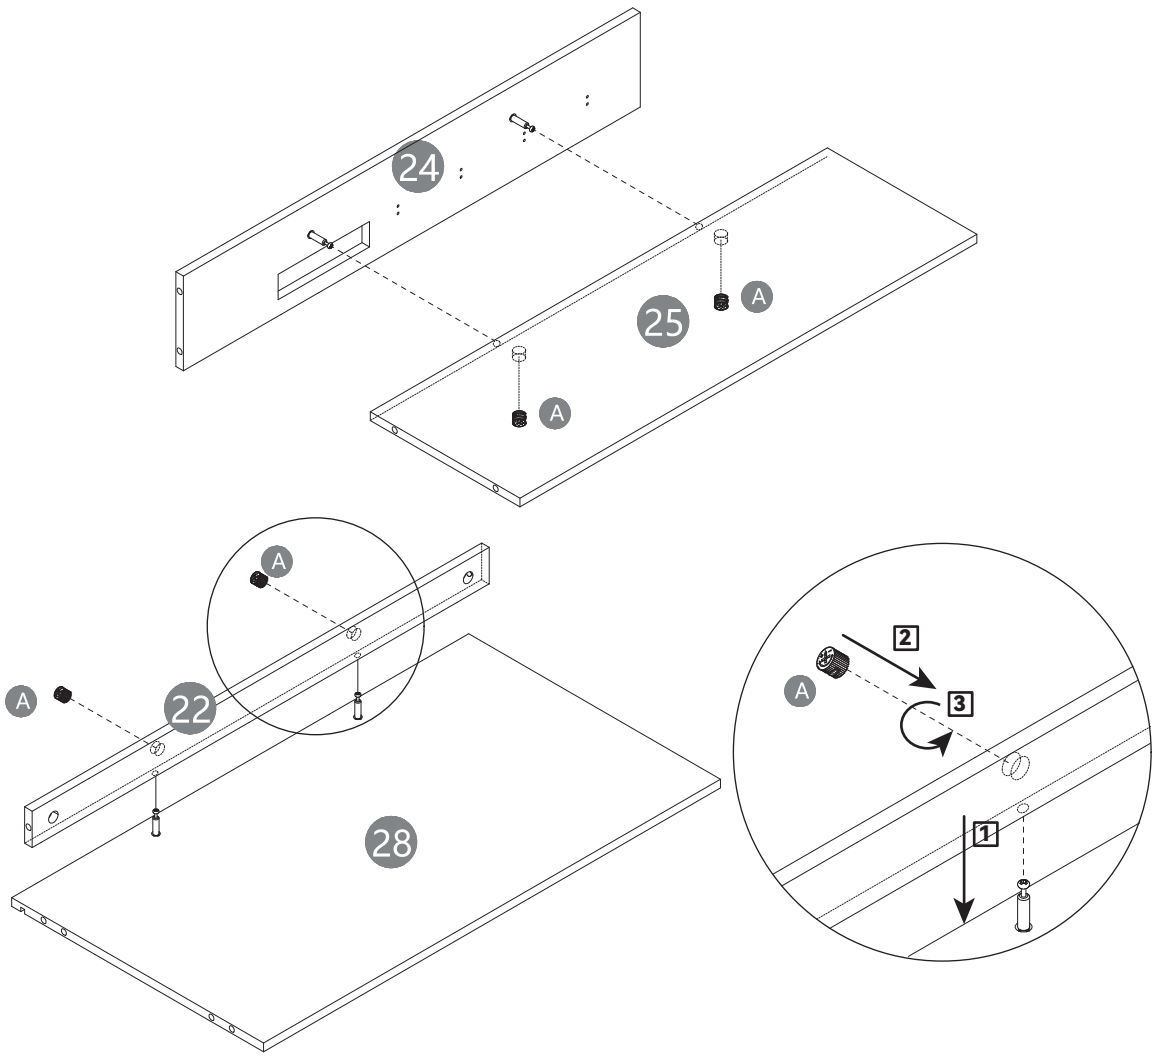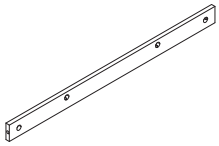
Step 10: Fix (24) to (25) with (A). Fix (22) to (28) with (A).







22	25	A
		
X1	X1	X4

Assembly Instructions

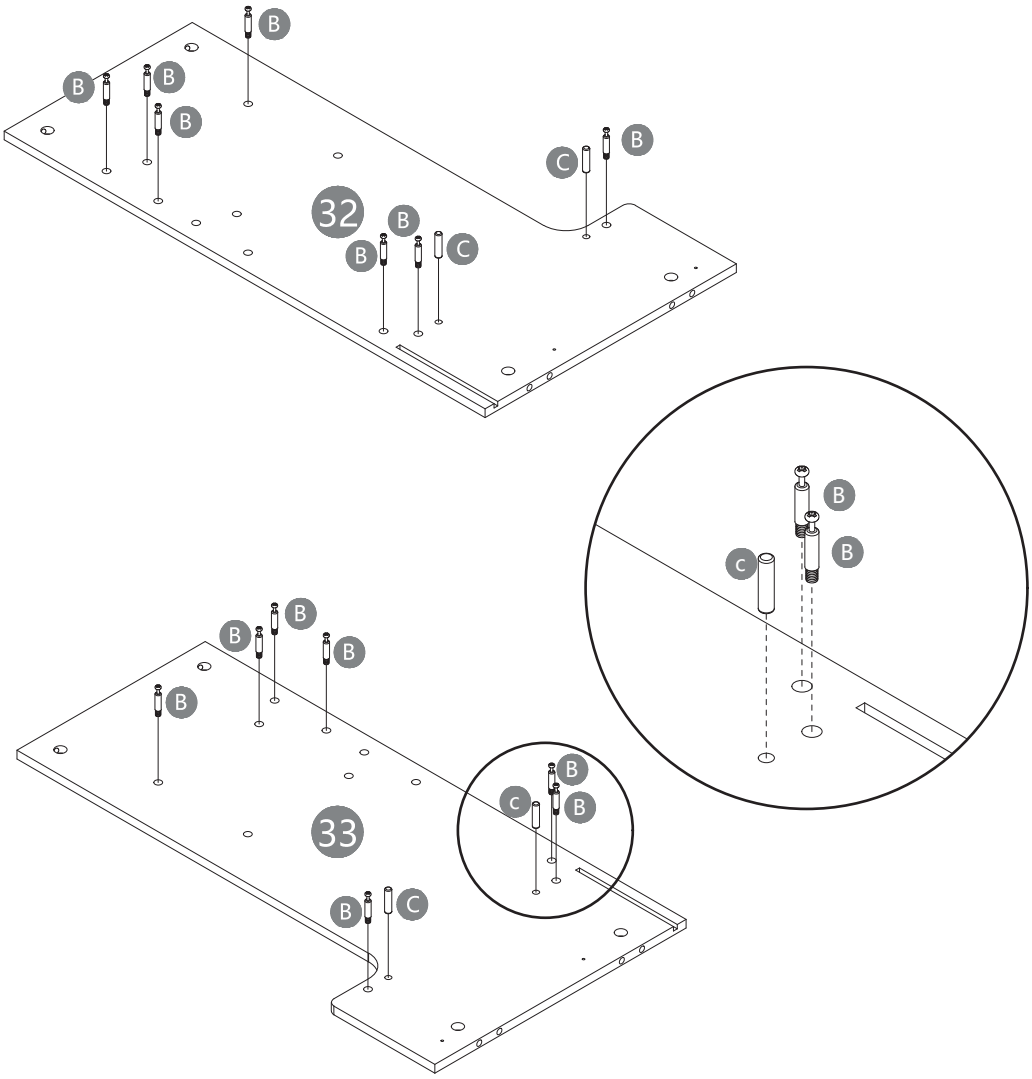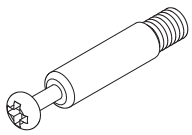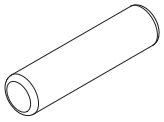
Step 11: Insert Ⓑ&Ⓒ into ㉜ & ㉝ .



32	33	B	C
			
X1	X1	X14	X4

Assembly Instructions

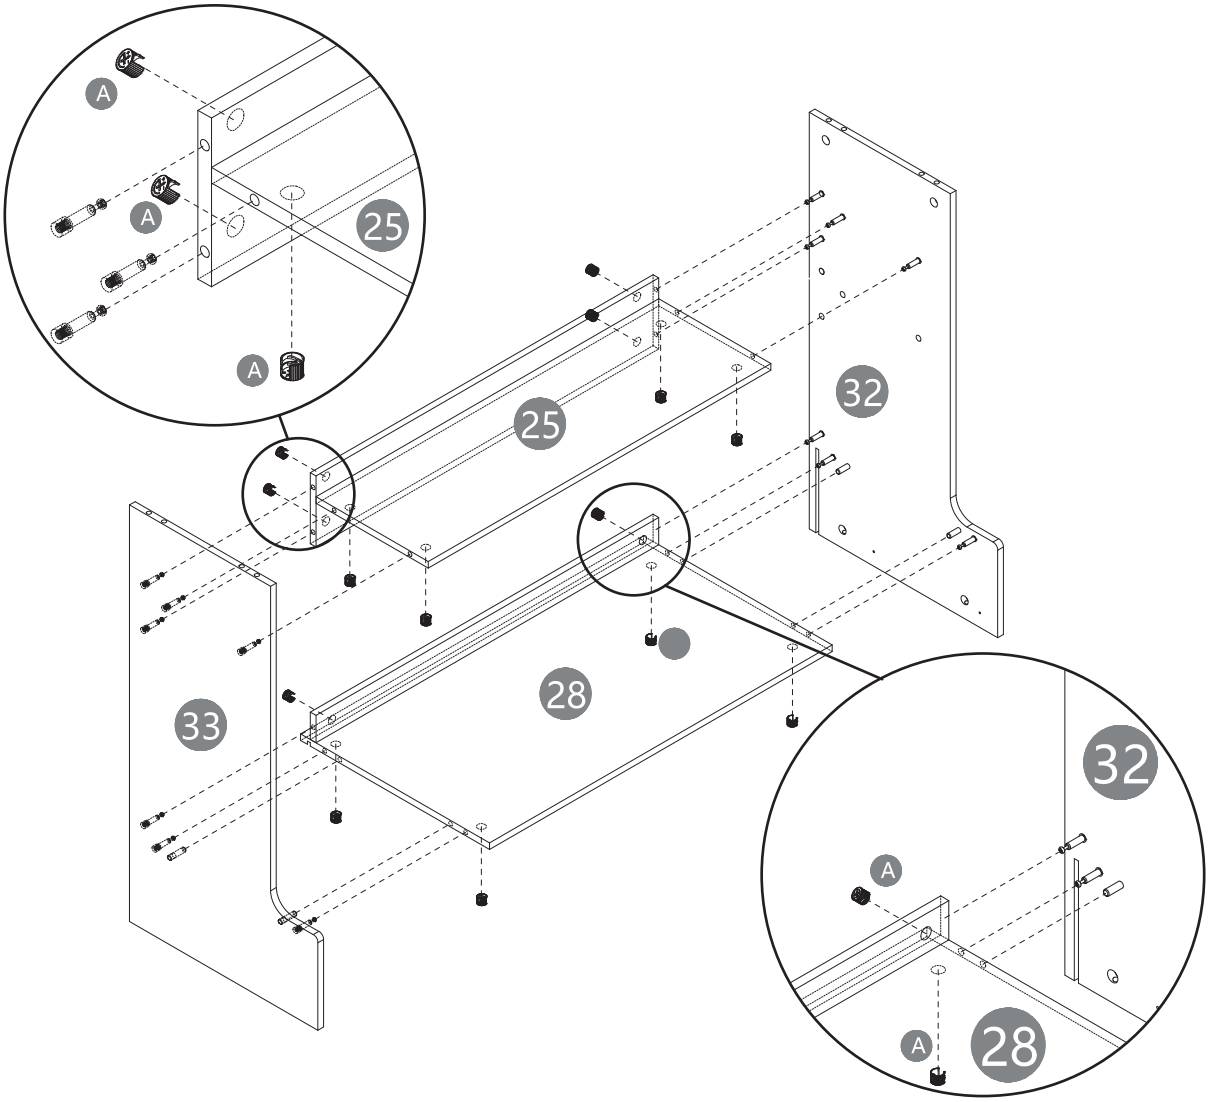Step 12: Fix ㉜ & ㉝ to ㉕ & ㉘ with Ⓐ.




A





X14

Assembly Instructions

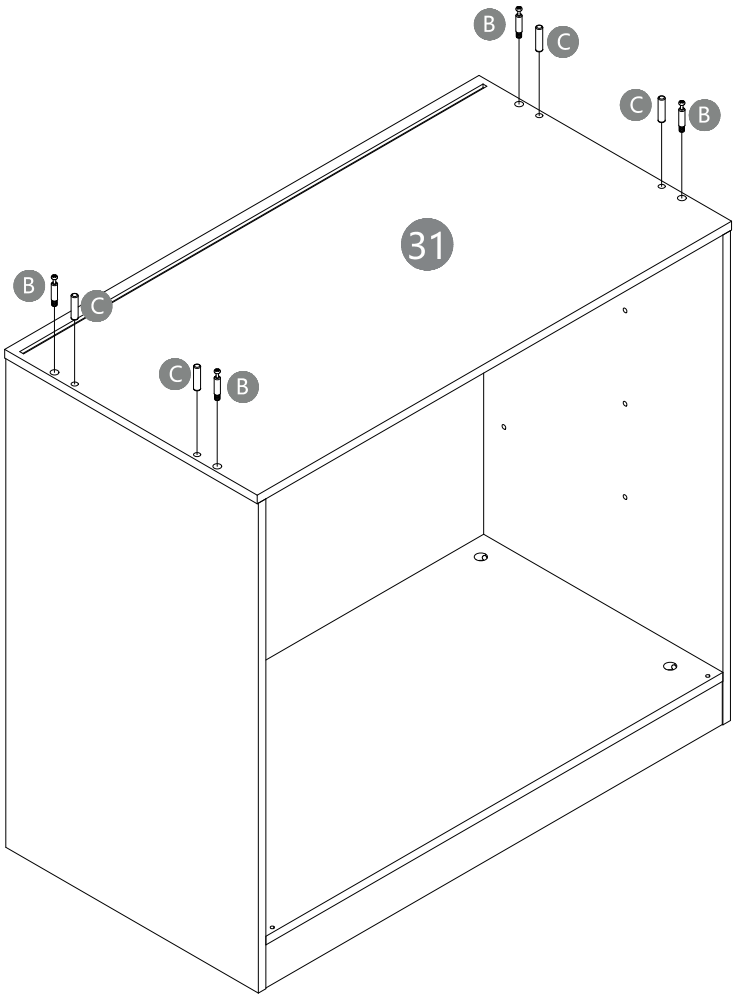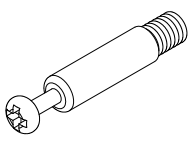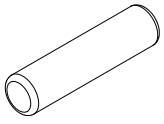
Step 13: Insert Ⓑ & Ⓒ into ㉛ .





B	C
	
X4	X4

Assembly Instructions

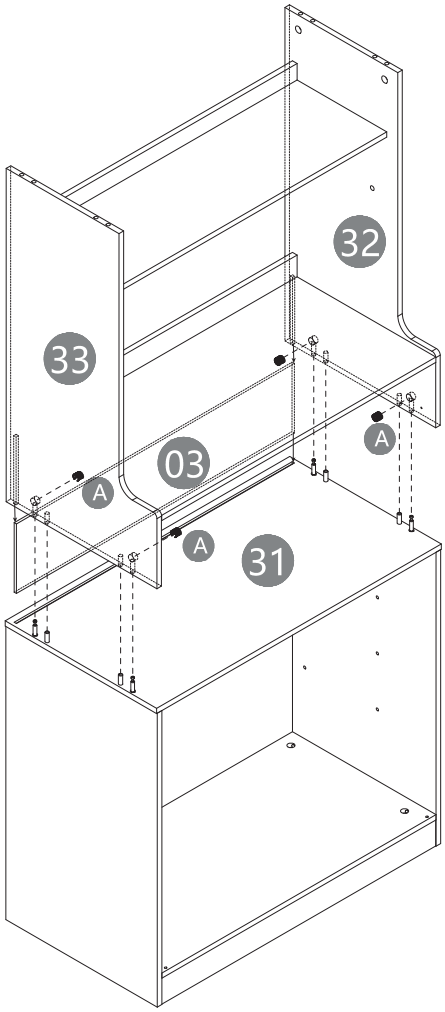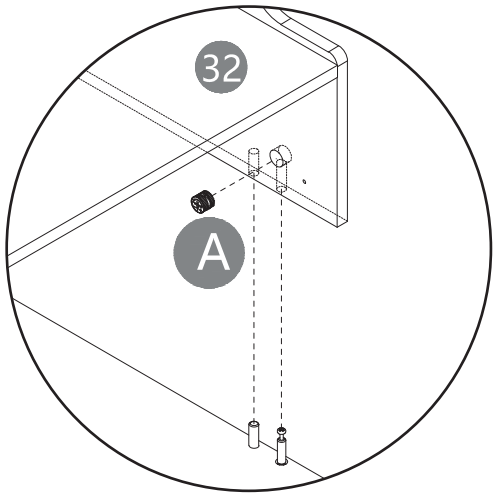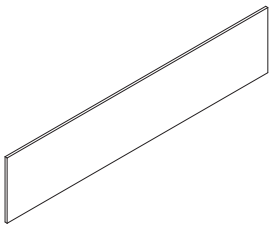Step 14: Snap ⑬ into ㉛. Fix ㉜ & ㉝ to ㉛ with Ⓐ.









03	A
	
X1	X4

Assembly Instructions

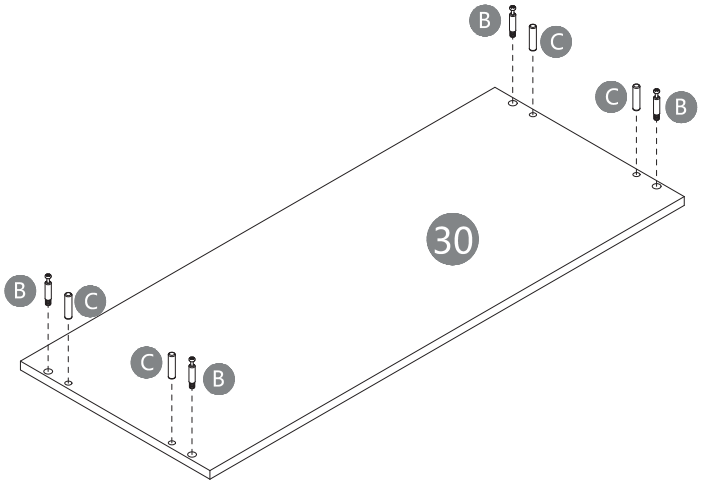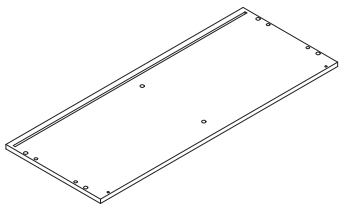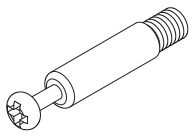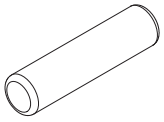
Step 15: Insert Ⓑ & Ⓒ into ㉚ .




30	B	C
		
X1	X4	X4

Assembly Instructions

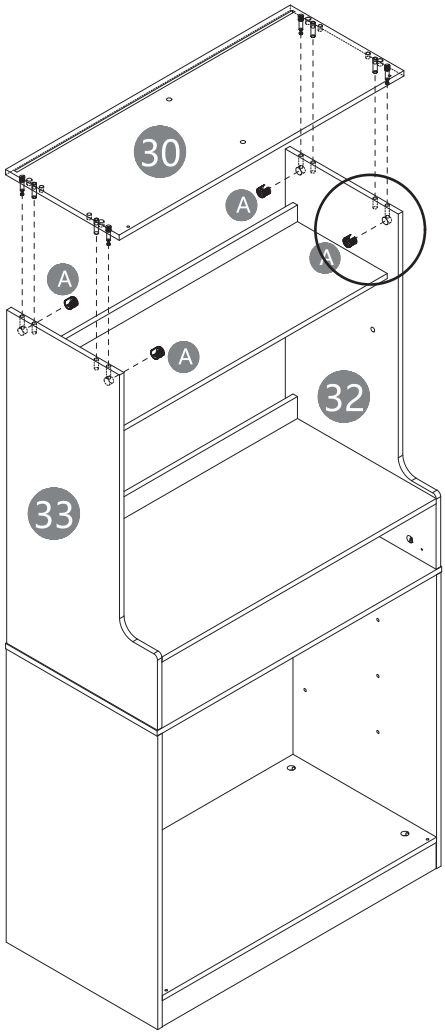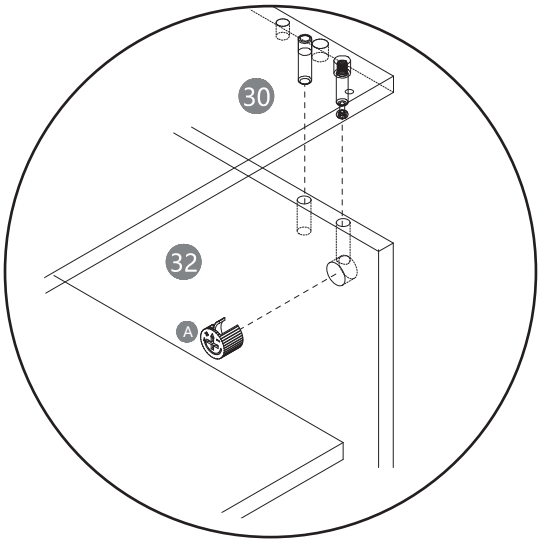Step 16: Fix ㉚ to ㉜ & ㉝ with Ⓐ.






A







X4

Assembly Instructions

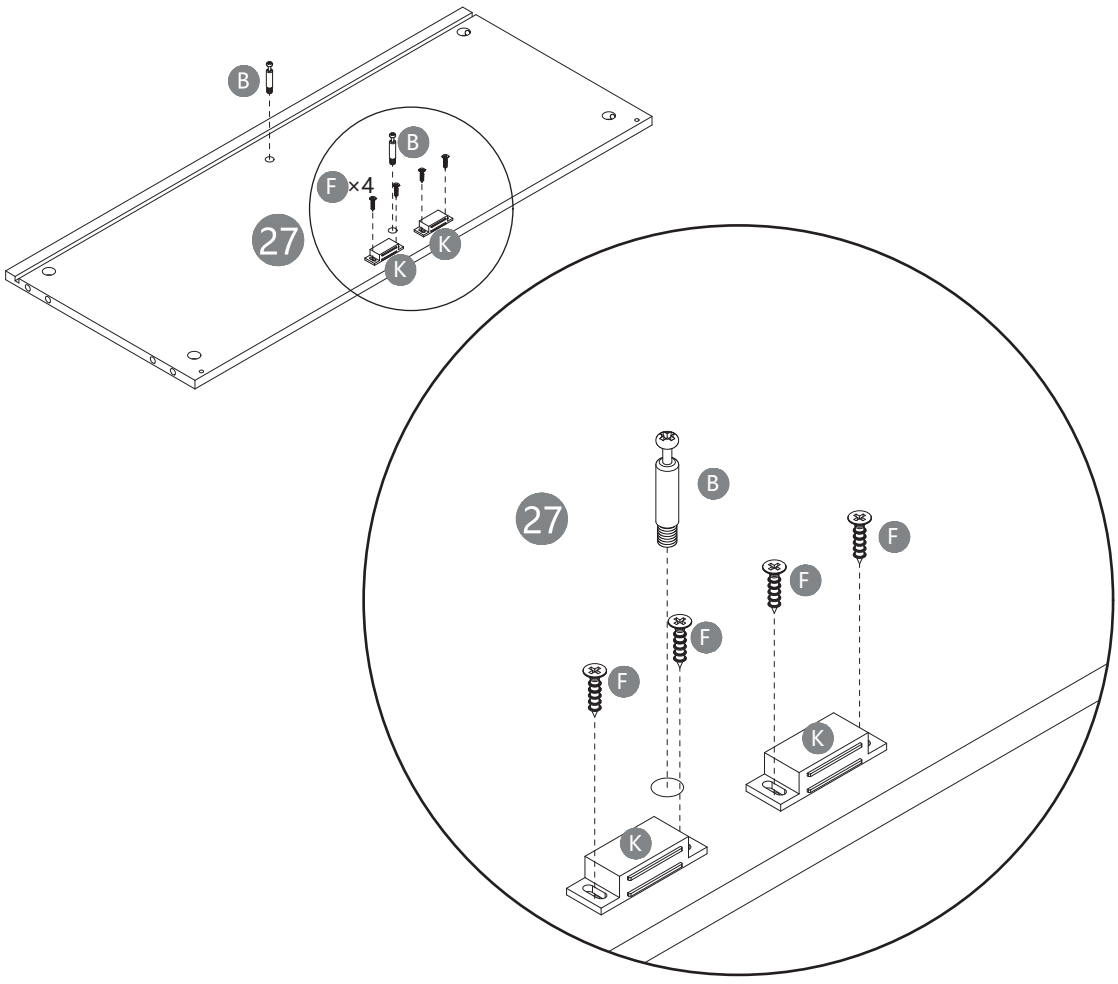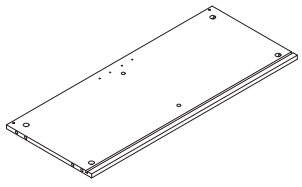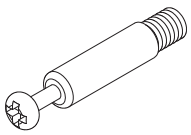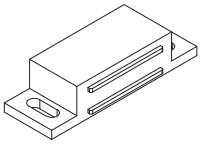
Step 17: Insert (B) into (27). Fix (K) to (27) with (F).




27	B	F	K
			
X1	X2	X4	X2

Assembly Instructions

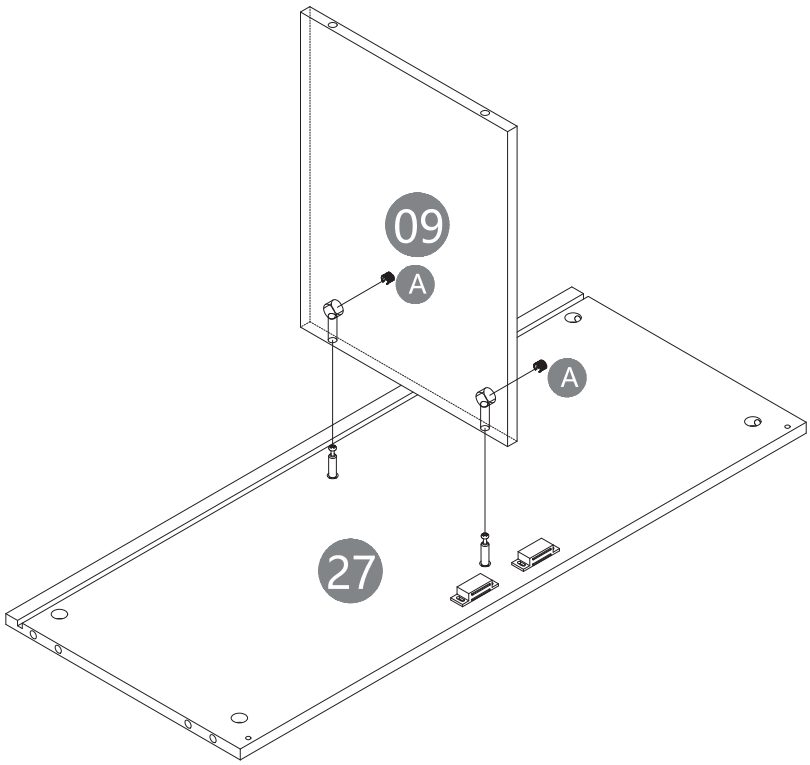
Step 18: Fix ⑨ to ㉗ with Ⓐ.








09	A
 X1	 X2

Assembly Instructions

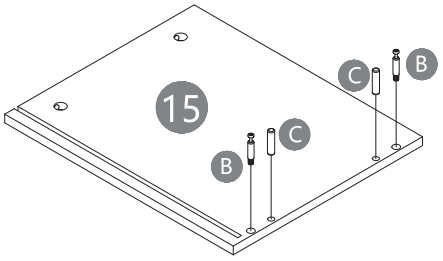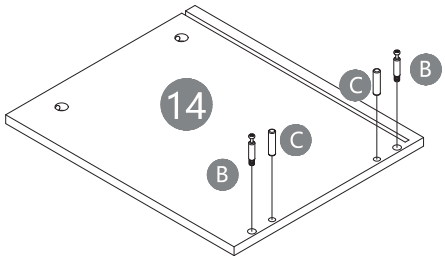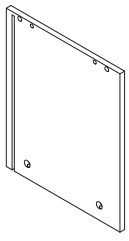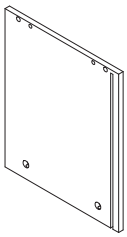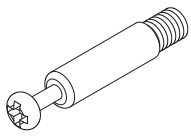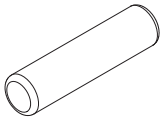Step 19:Insert Ⓑ & Ⓒ into ⑭ & ⑮ .






14	15	B	C
			
X1	X1	X4	X4

Assembly Instructions

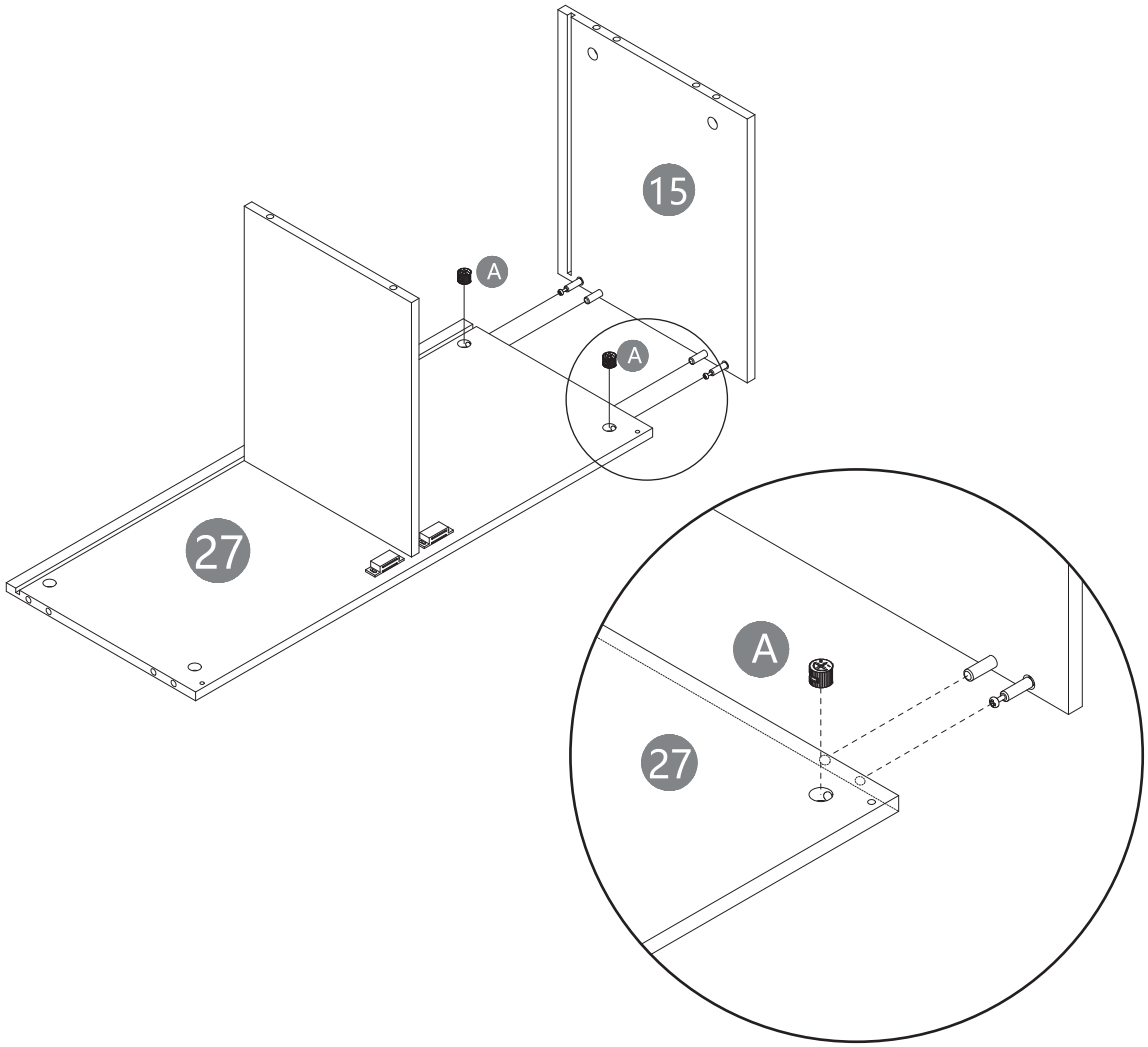Step 20: Fix (15) to (27) with (A).




A



X2

Assembly Instructions

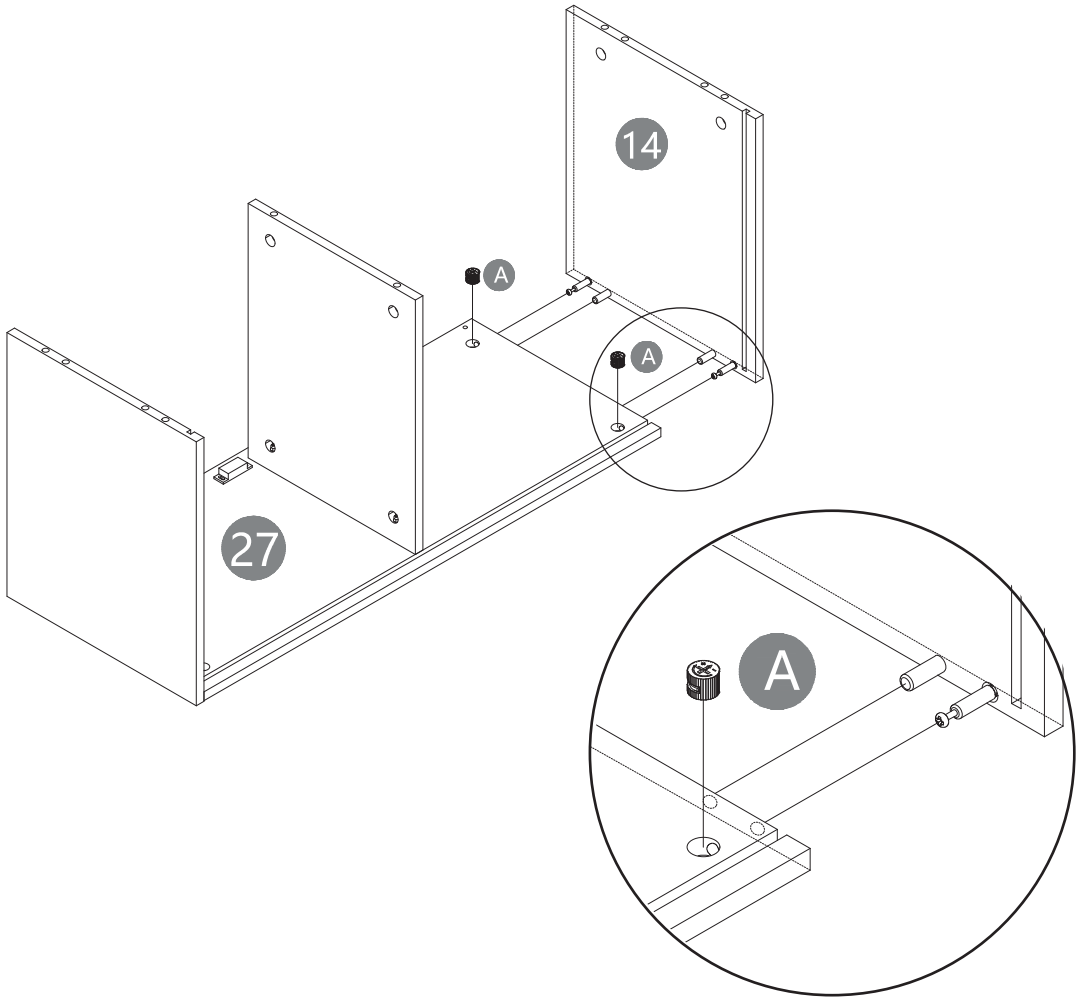Step 21: Fix ⑭ to ㉗ with Ⓐ.




A





X2

Assembly Instructions

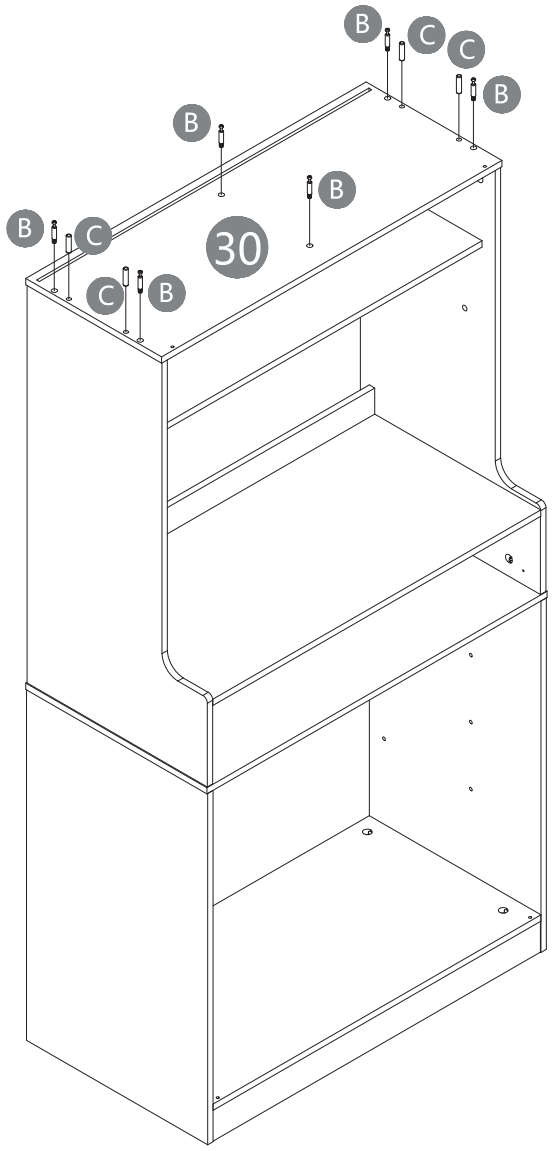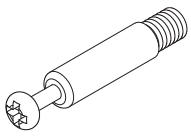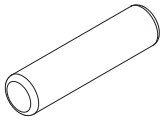
Step 22: Insert Ⓑ & Ⓒ into ㉚ .




B	C
	
X6	X4

Assembly Instructions

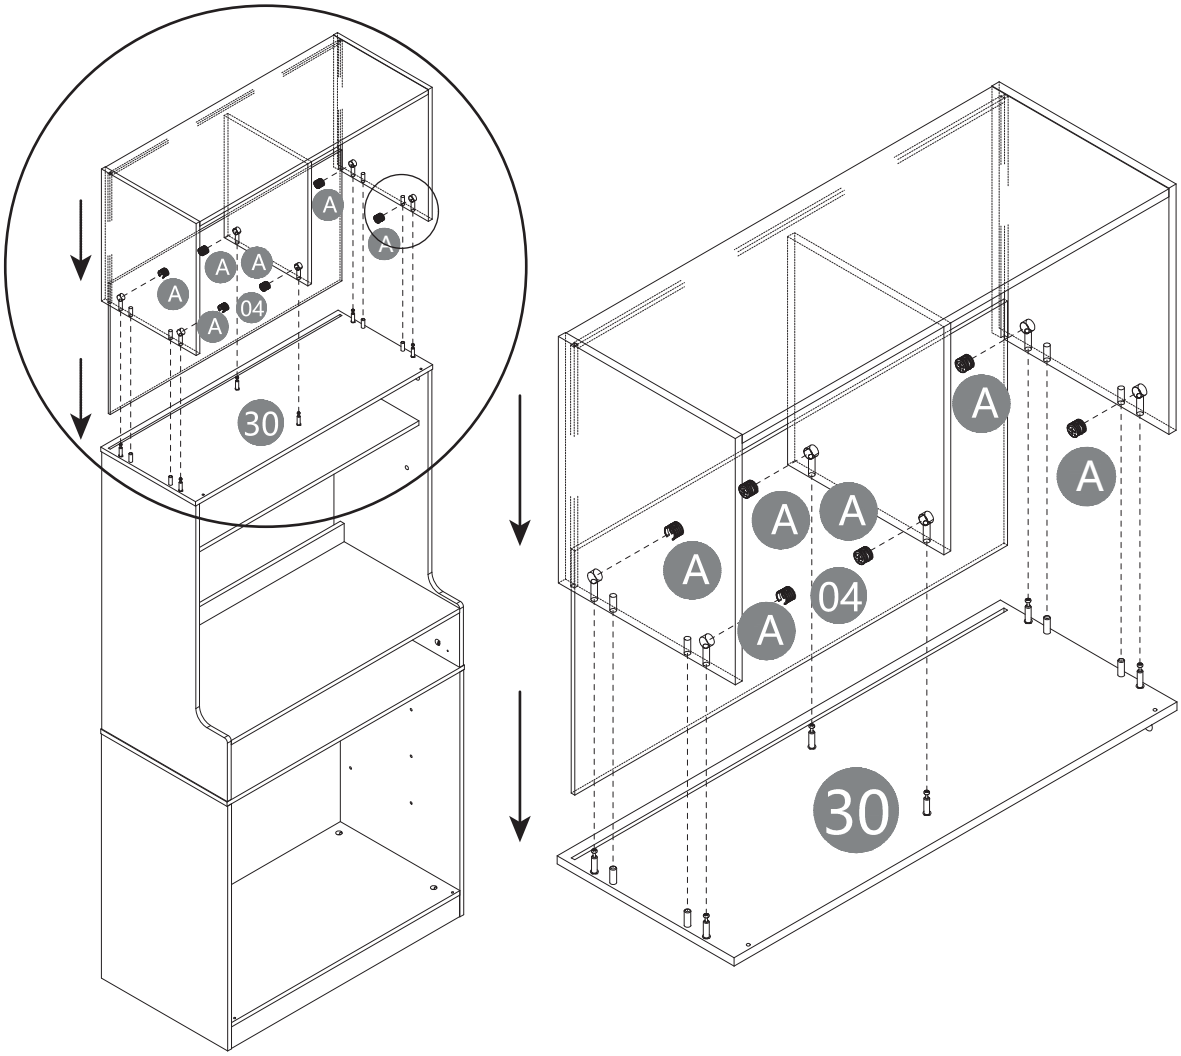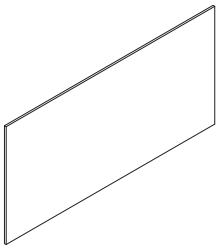
Step 23: Snap ⑭ into ㉚. Fix ⑮ & ⑯ to ㉚ with Ⓐ.






04	A
	
X1	X6

Assembly Instructions

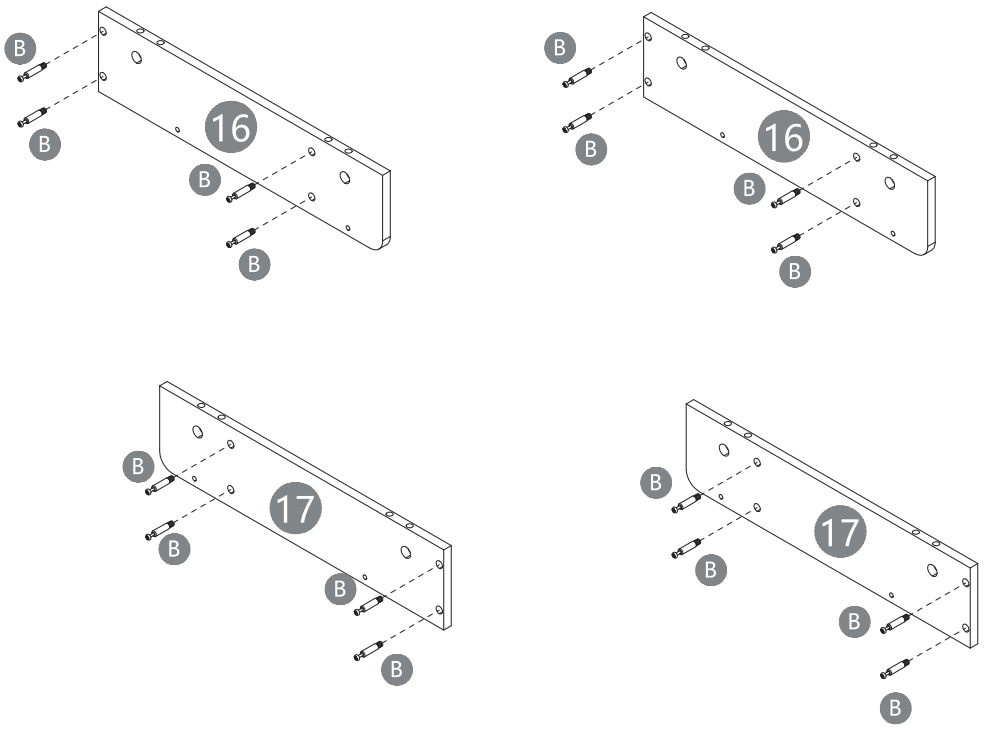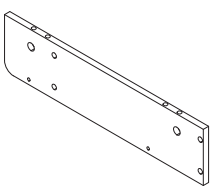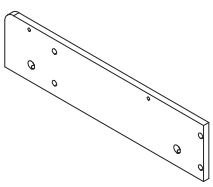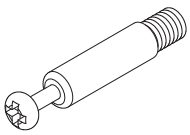Step 24: Insert Ⓑ into ⑯ & ⑰ .







16	17	B
		
X2	X2	X16

Assembly Instructions

X2

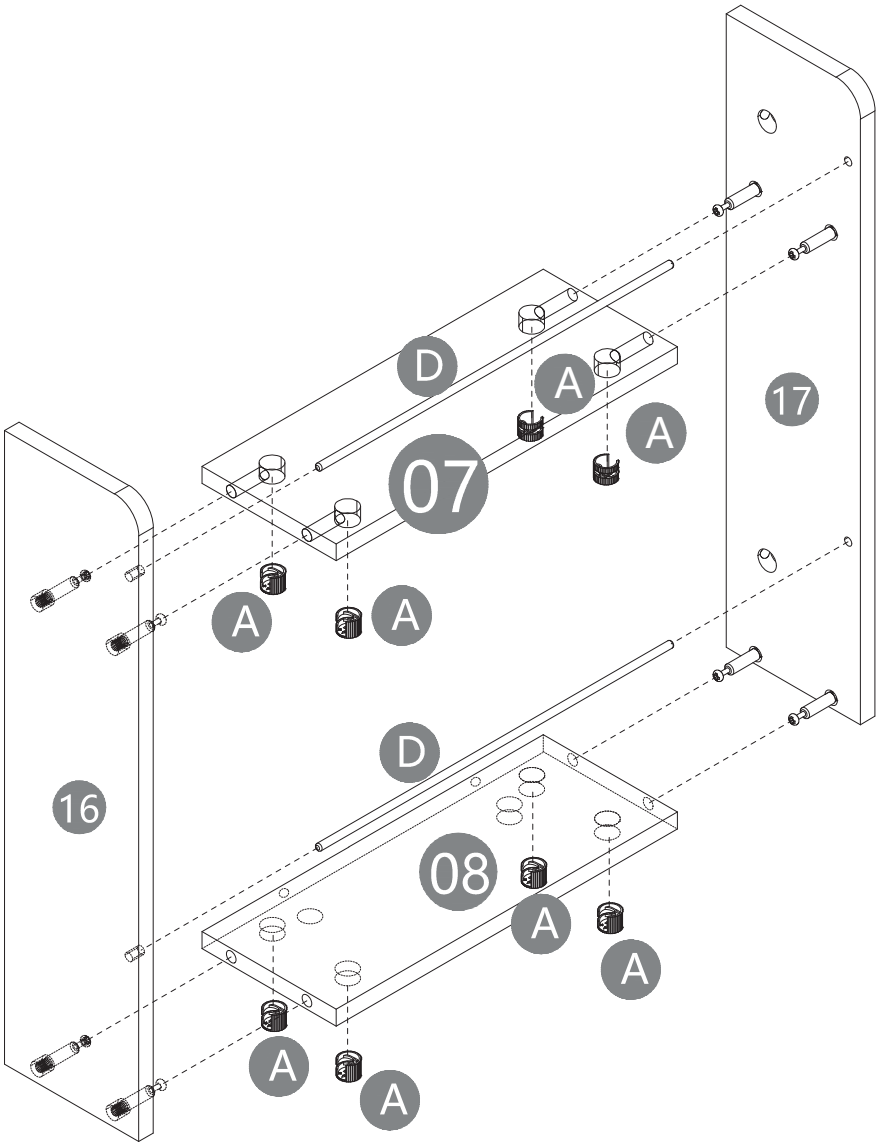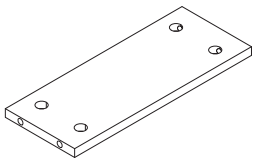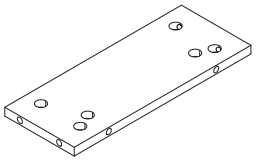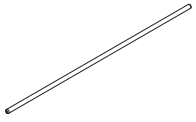
Step 25: Fix ⑯ & ⑰ to ⑦ & ⑧ with Ⓐ. Snap Ⓓ into ⑯ & ⑰.







07	08	A	D
			
X2	X2	X16	X4

Assembly Instructions

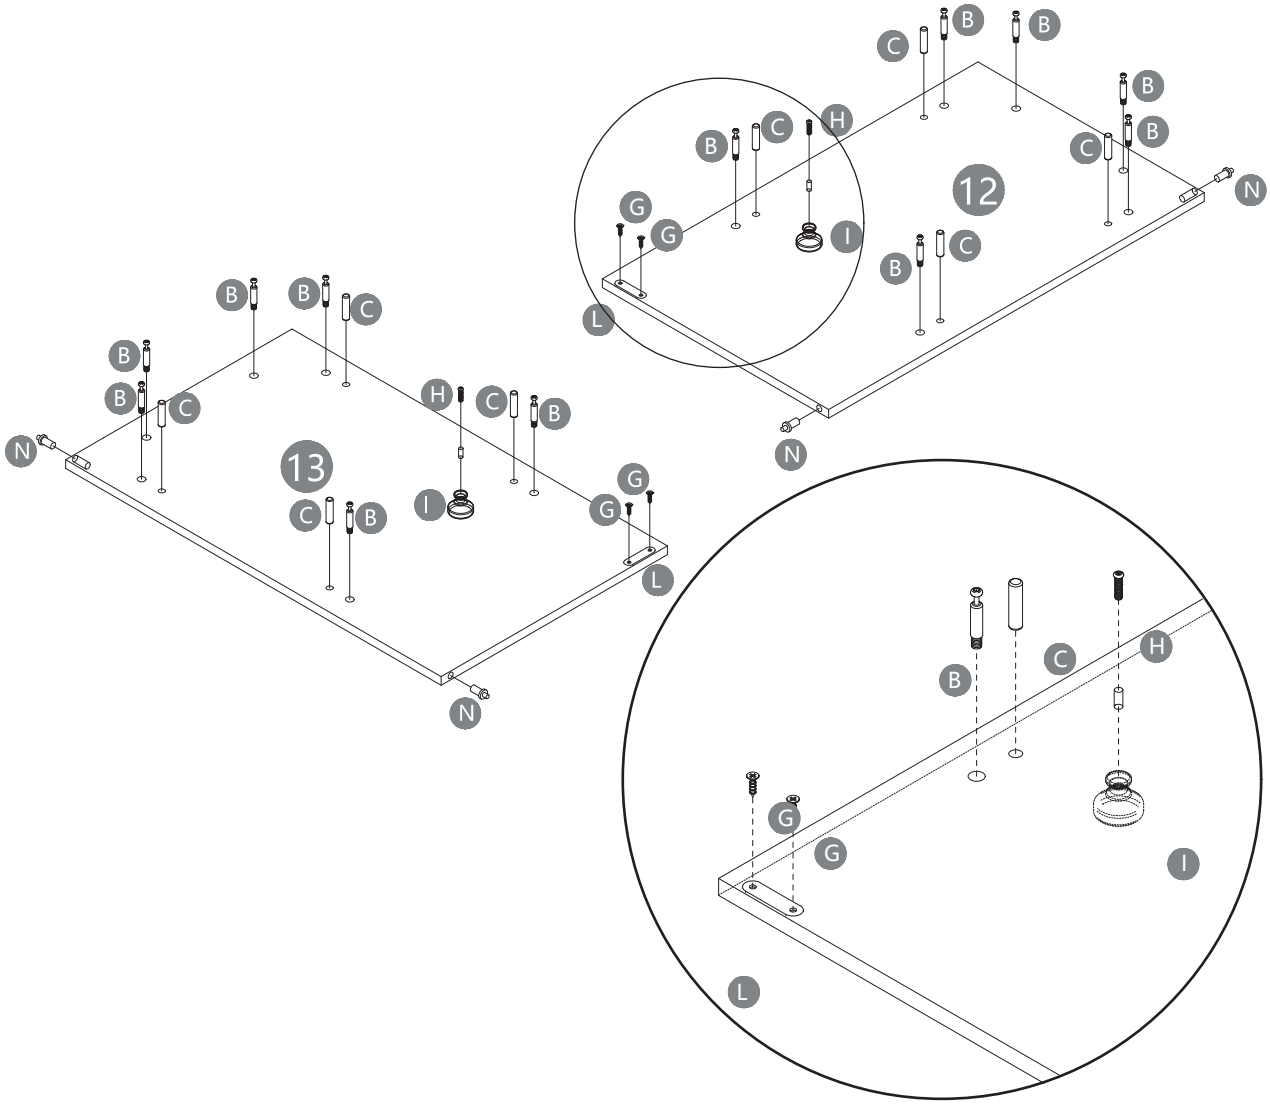
Step 26: Fix (L) to (12) and (13) with (G) . Fix (I) to (12) and (13) with (H). Insert (B) & (C) into (12) & (13) .



12  X1	B  X12	C  X8	G  X4	H  X2
13  X1	I  X2	L  X2	N  X4	

Assembly Instructions

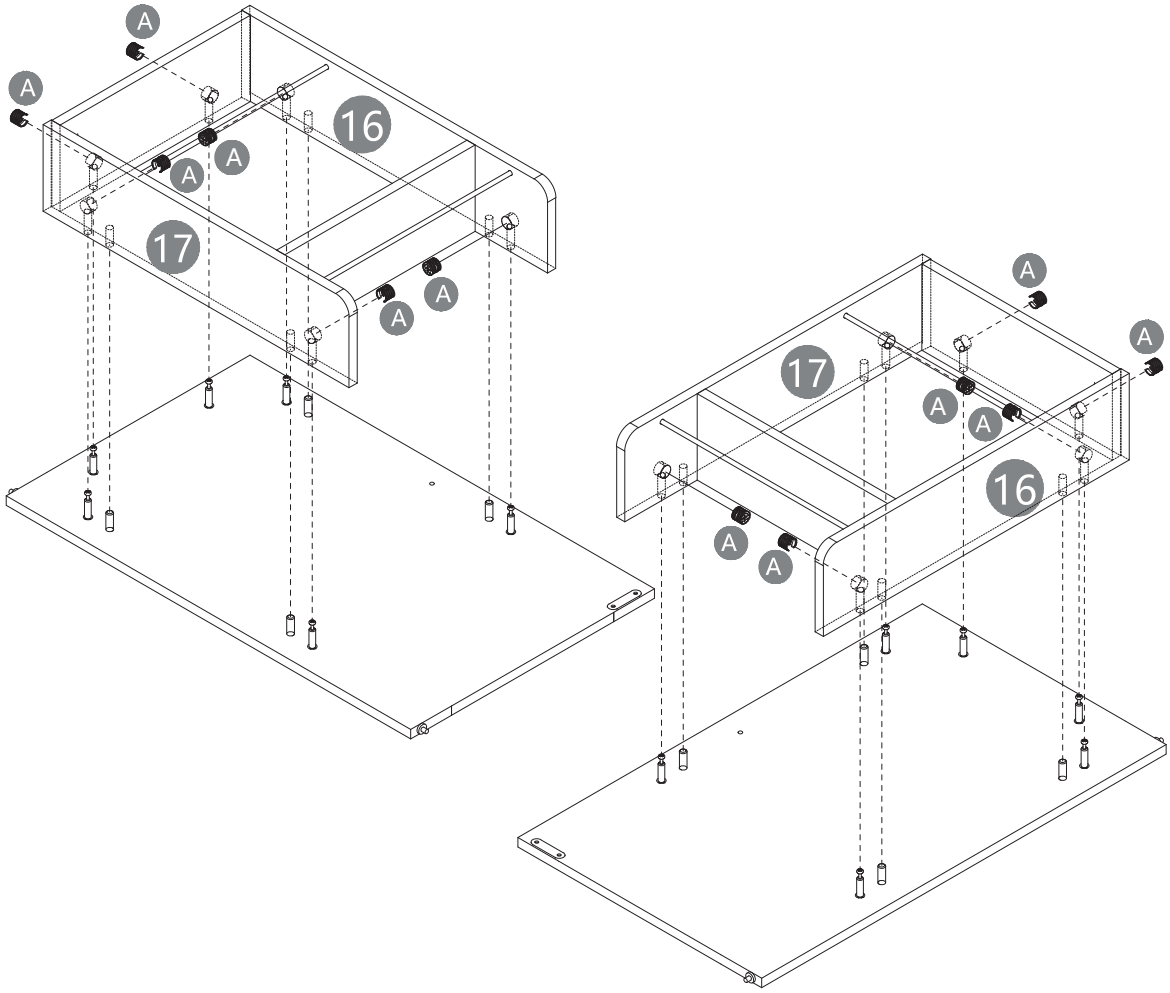Step 27: Fix ⑯ & ⑰ to ⑫ & ⑬ with Ⓐ.




A





X12

Assembly Instructions

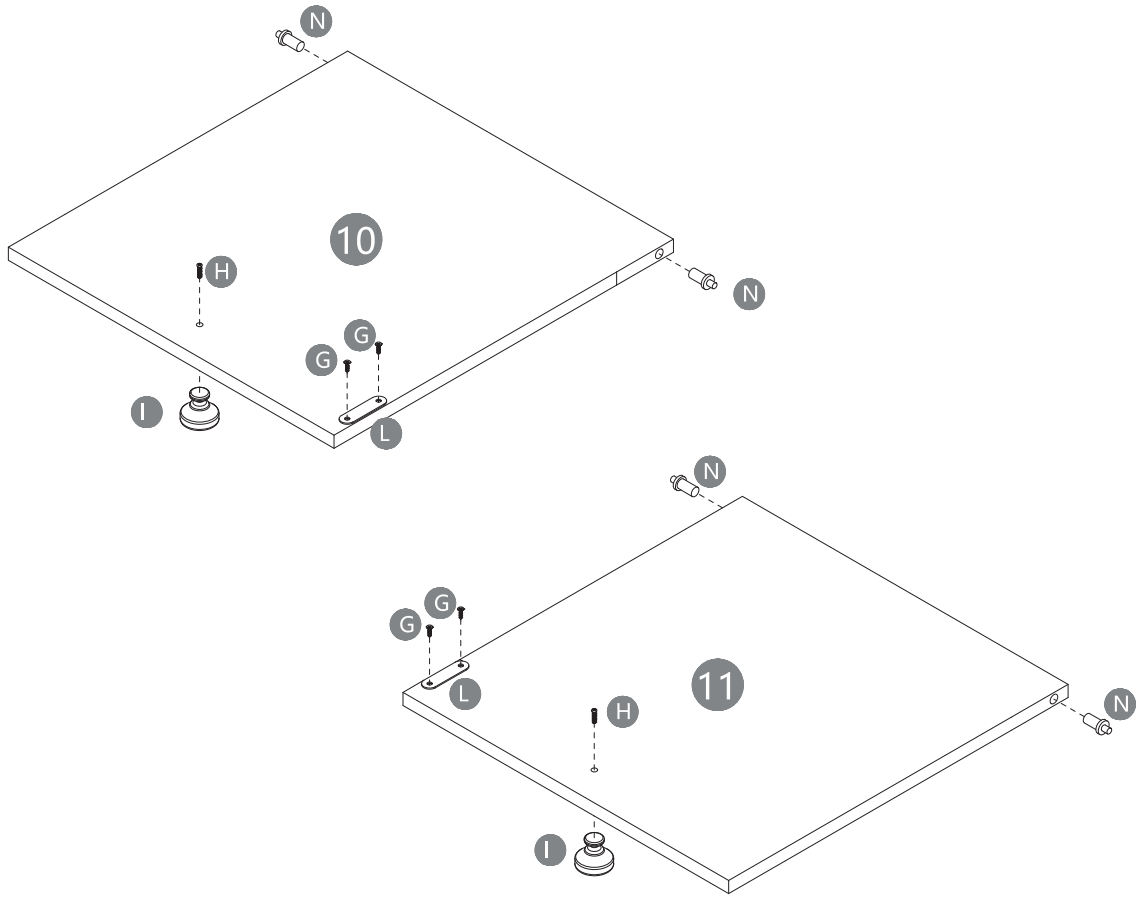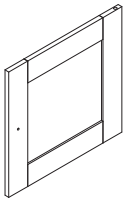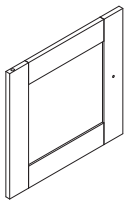
Step 28:Fix L to ⑩ & ⑪ with Ⓖ. Fix Ⓘ to ⑩ & ⑪ with Ⓗ. Insert Ⓝ into ⑩ & ⑪ .




10  X1	11  X1	G  X4	H  X2	I  X2
		L  X2	N  X4	



Assembly Instructions

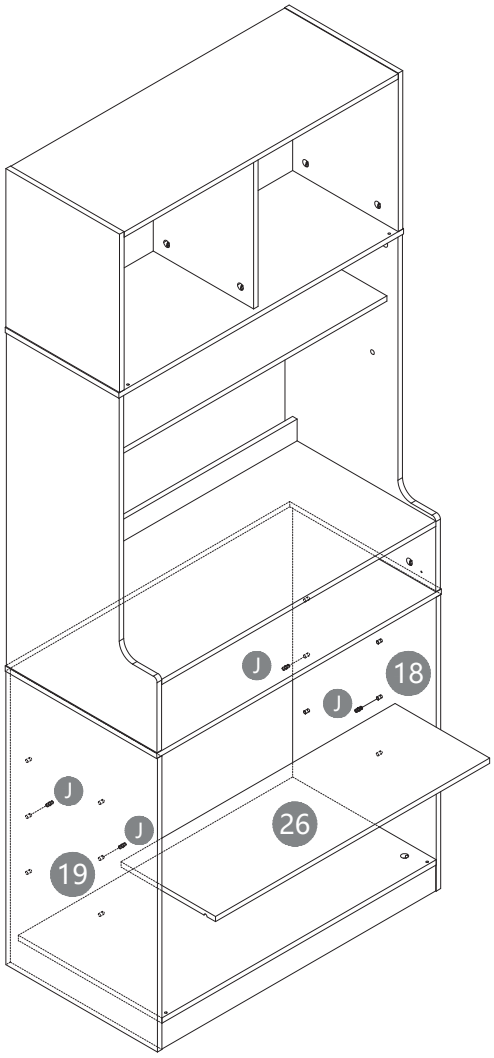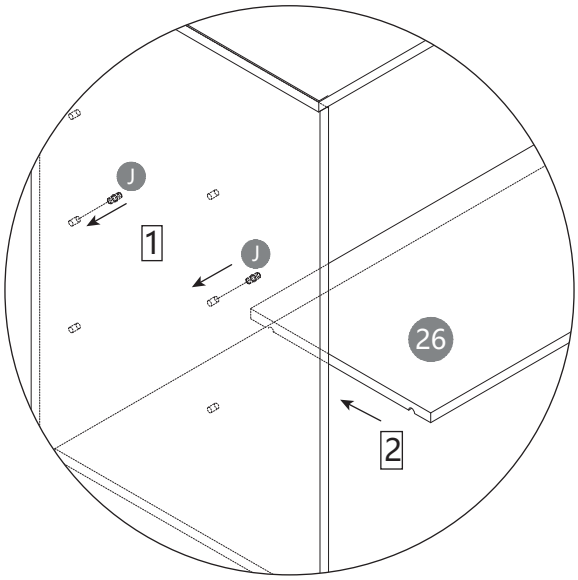Step 29:Insert Ⓙ into ⑱ & ⑲ . Then put in ㉖ .






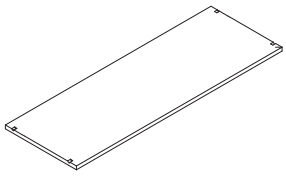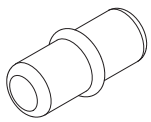Adjustable shelf : Can be mounted above or below the holes according to your needs .


26	J
	
X1	X4

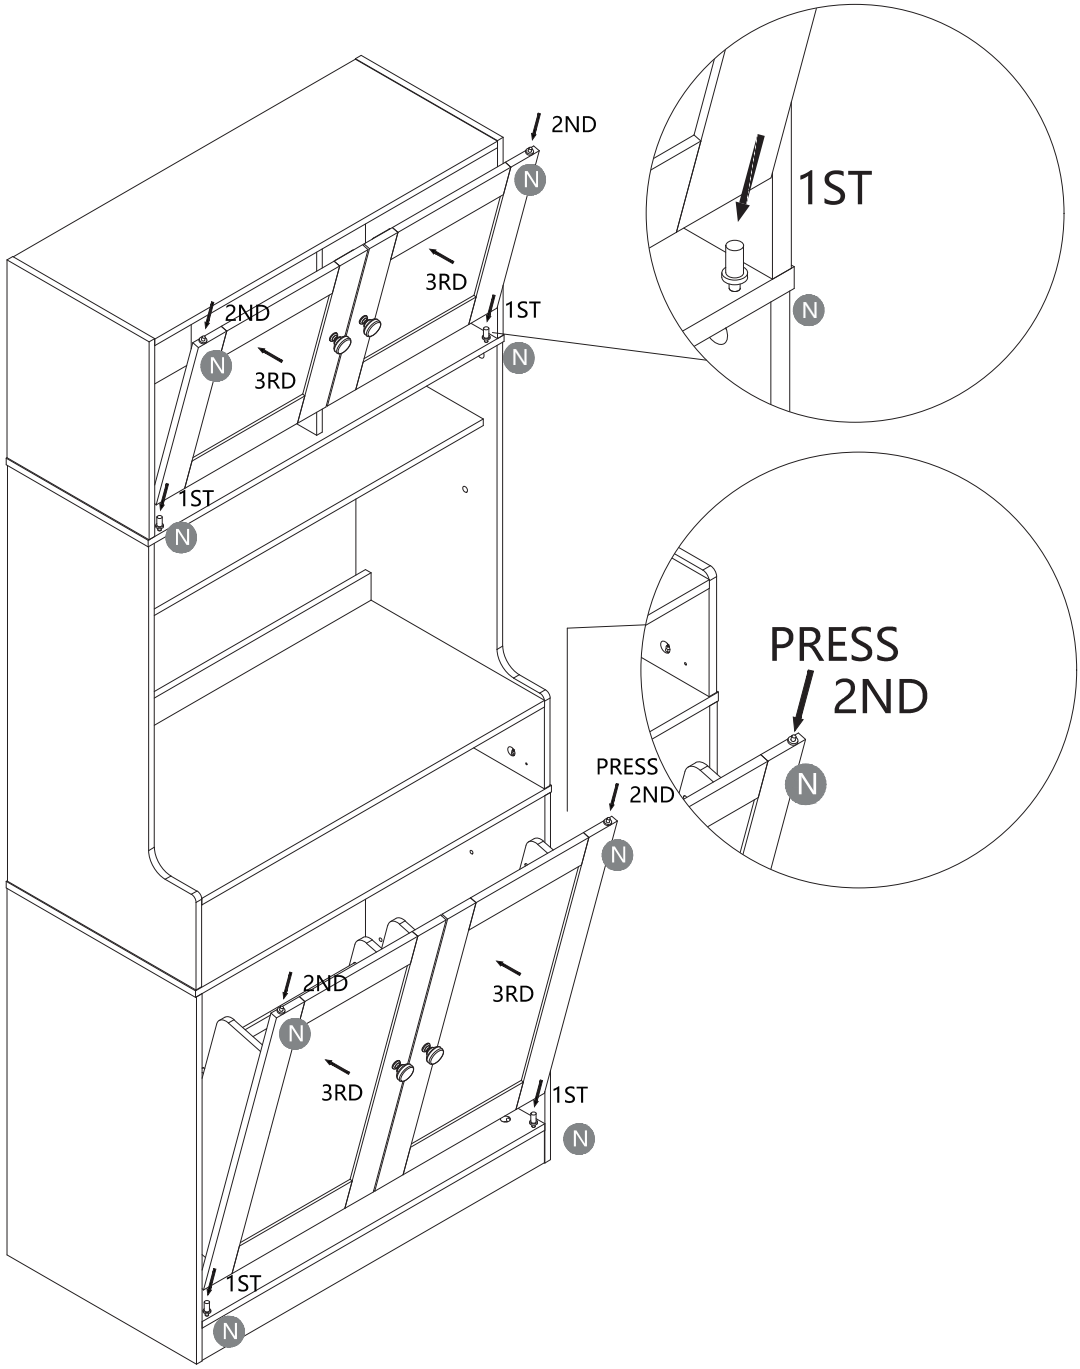
Step 30: Installation of cabinet door to top panel using fastener (N)









Assembly Instructions

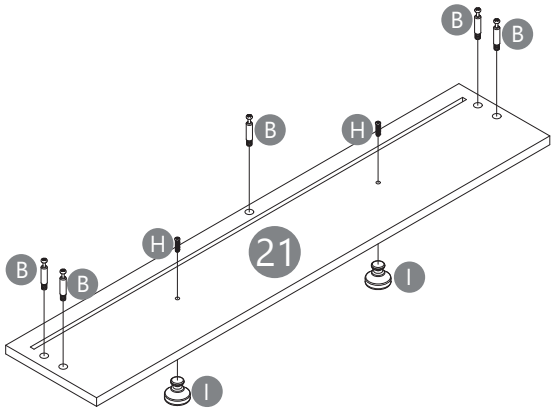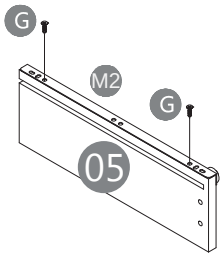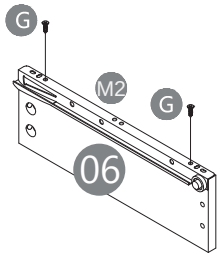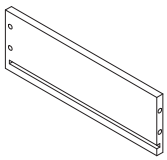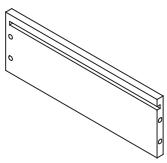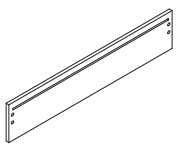Step 31: Fix (I) to (21) with (X). Insert (B) into (21). Fix (M2) to (05) & (06) with (G).









05  X1	06  X1	21  X1	B  X5	G  X4	H  X2
			I  X2	M2  X1	

Assembly Instructions

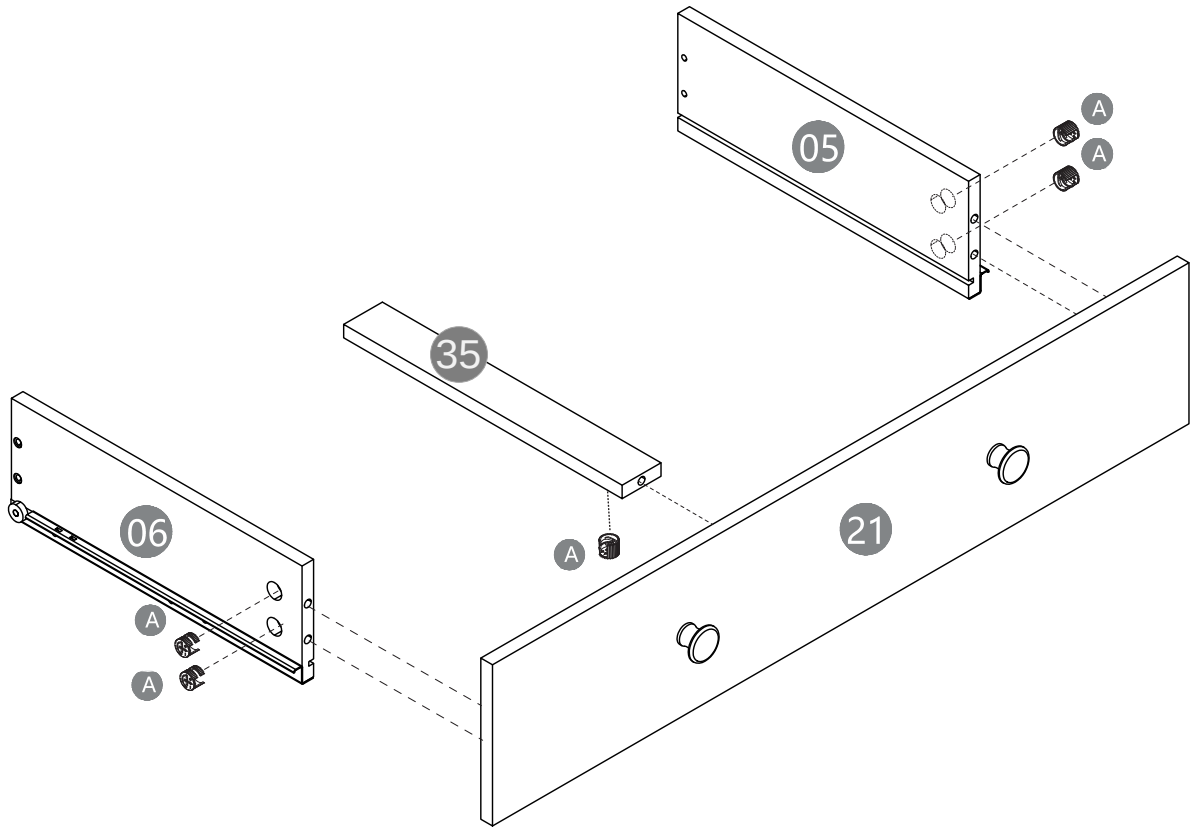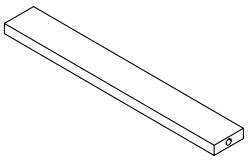
Step 32: Fix ⑤ & ⑥ & ㉟ to ㉑ with Ⓐ .




35	A
 X1	 X5

Assembly Instructions

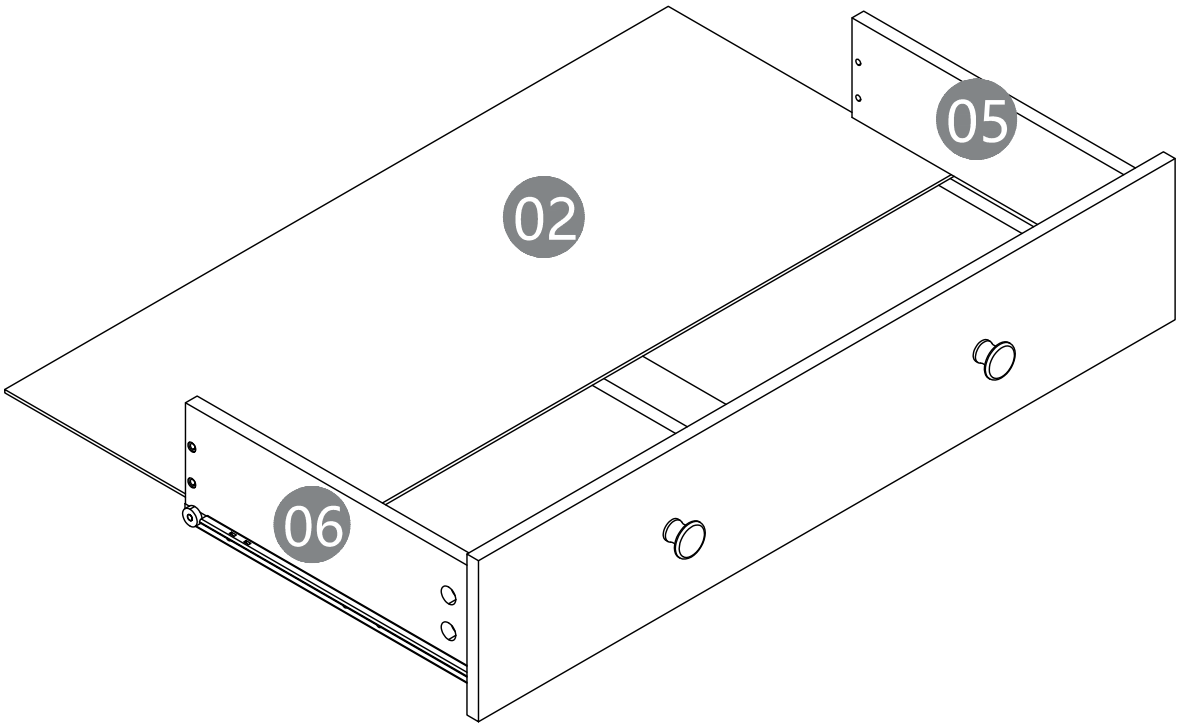Step 33: Insert ⑫ into ⑮ & ⑯ .




02


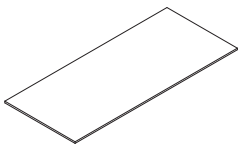


X1

Assembly Instructions

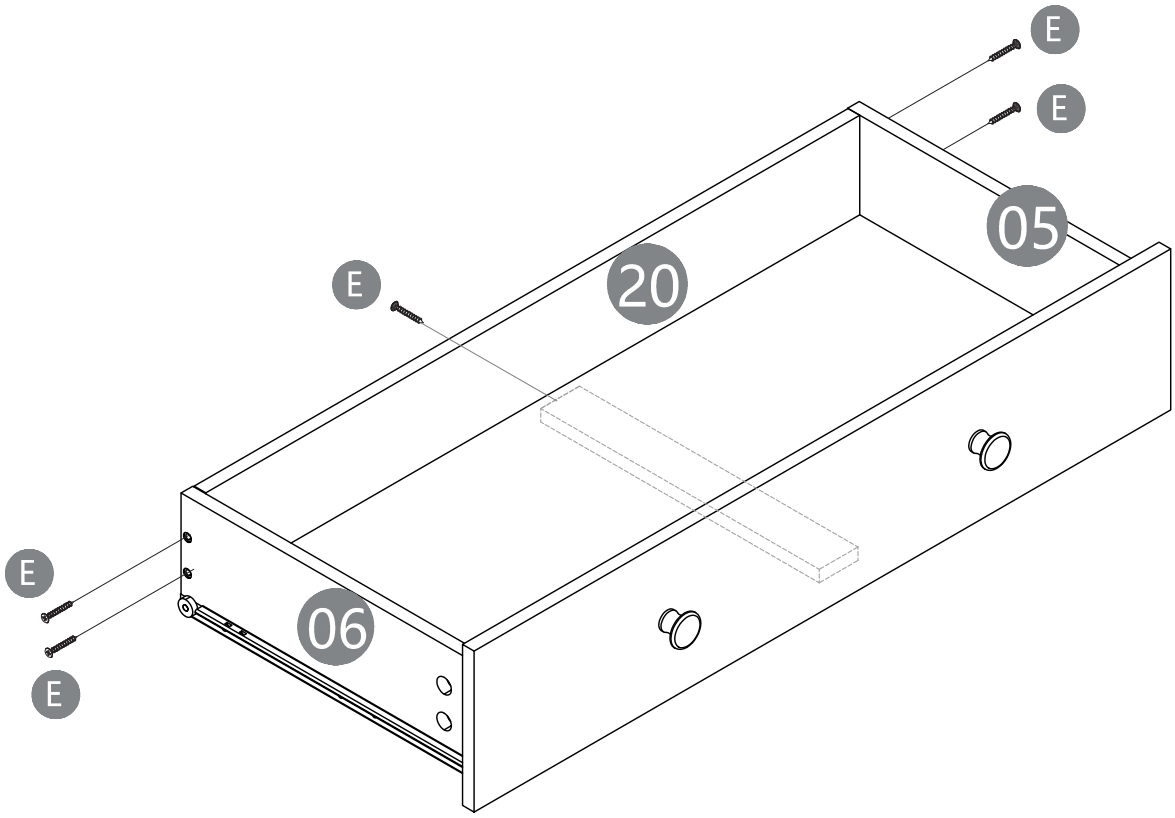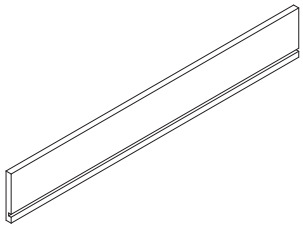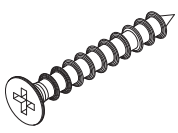
Step 34: Fix ⑳ to ⑤ & ⑥ with Ⓔ.






20	E
 X1	 X 5

Assembly Instructions

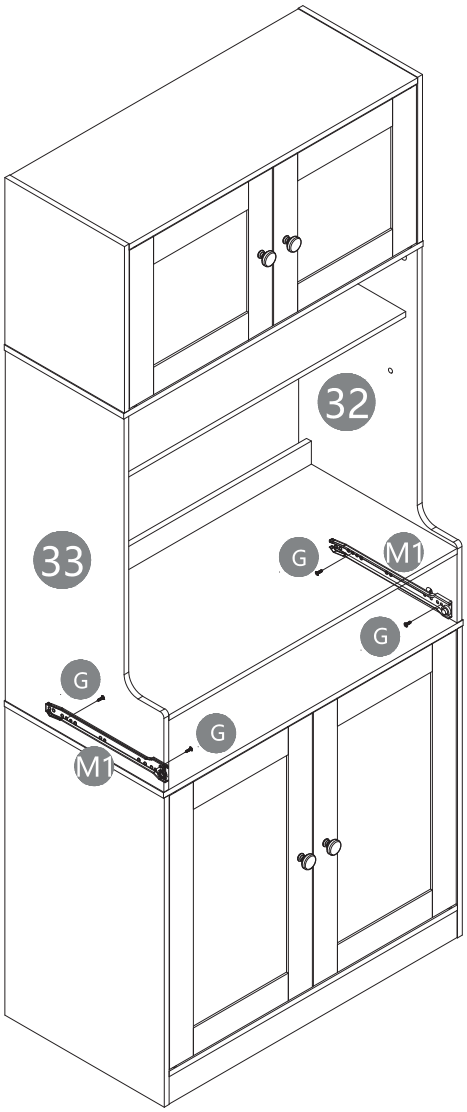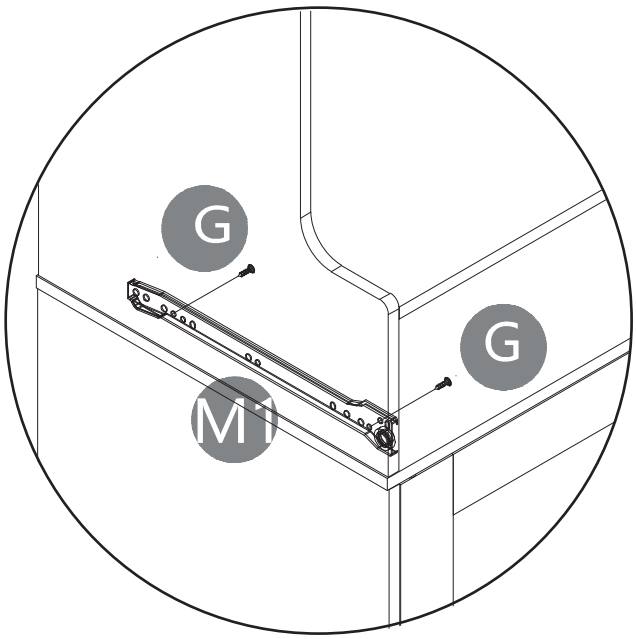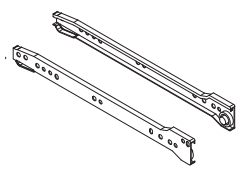
Step 35: Fix (M1) to (32) & (33) with (G).






G	M1
 X4	 X1


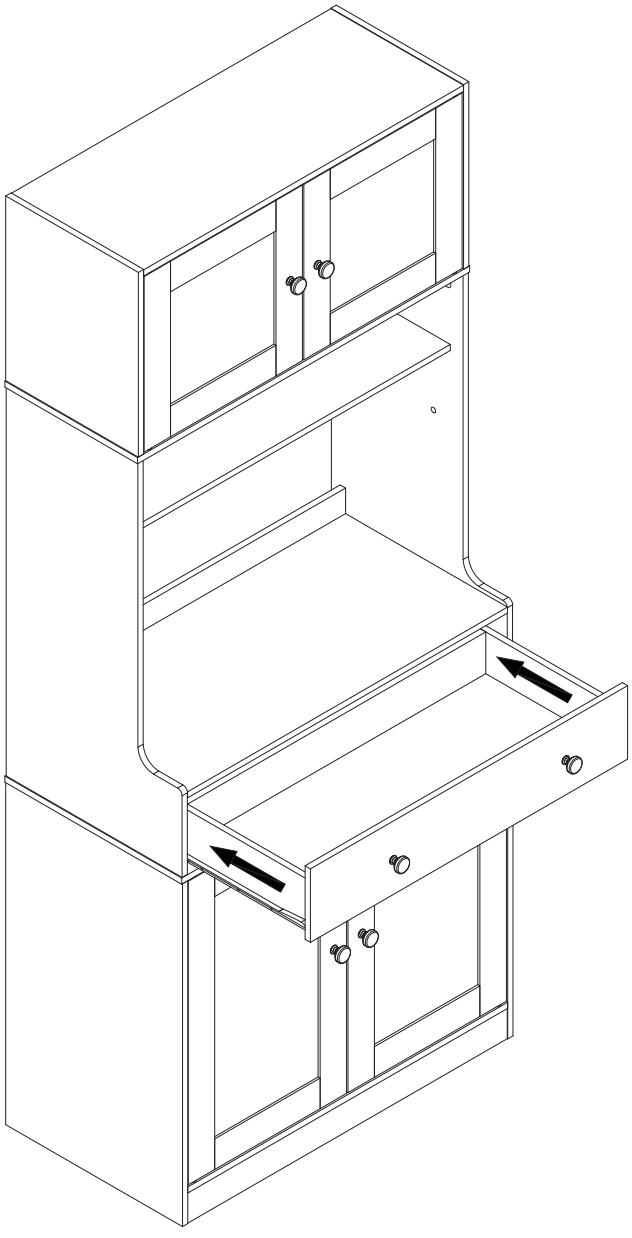
Step 36: Insert the drawer inside .



Assembly Instructions

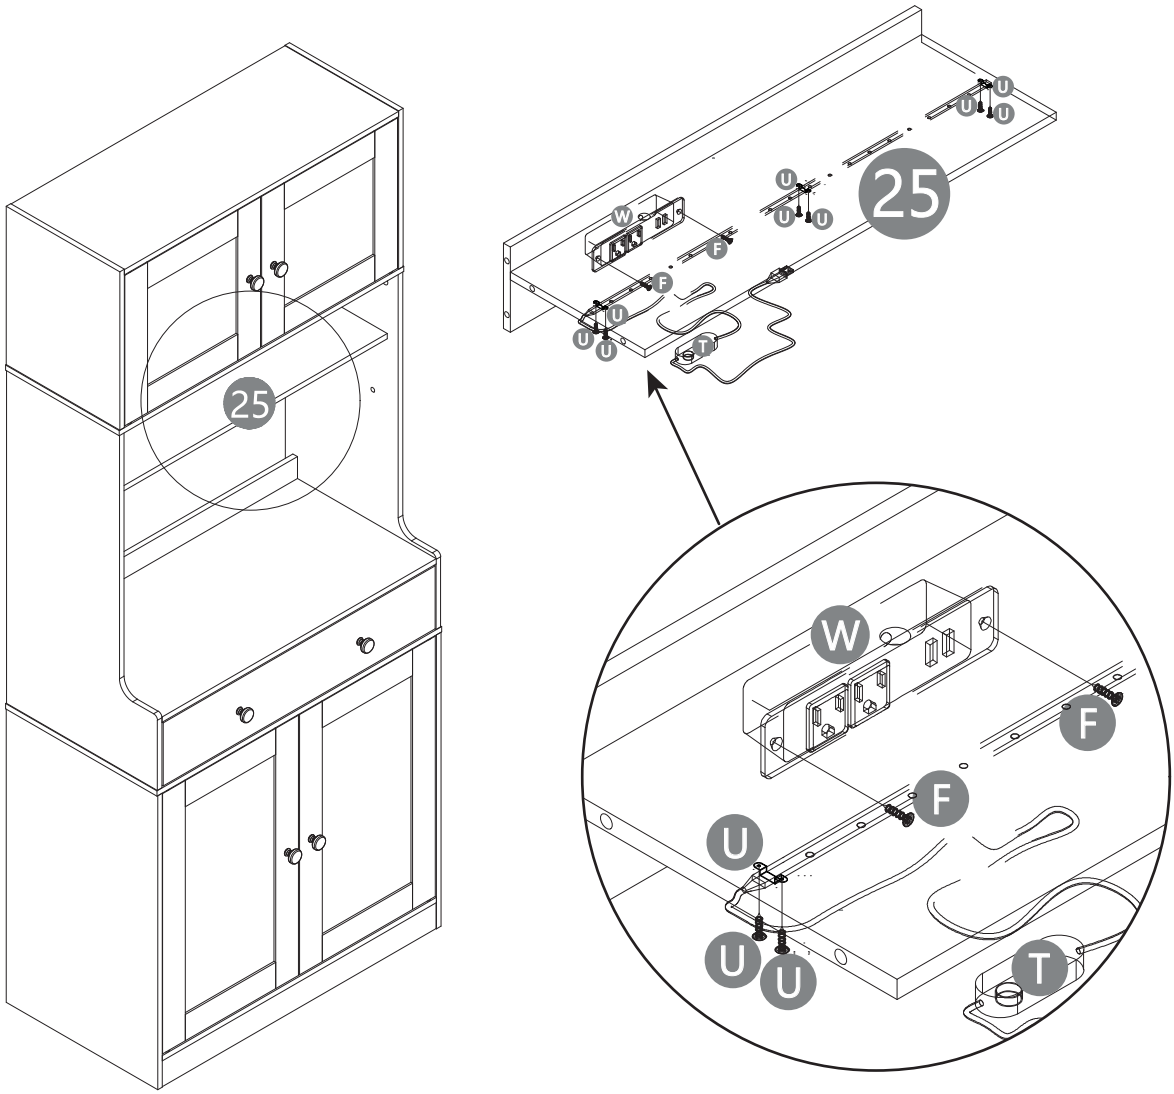
Step 37: Fix power outlets with (F). Fix the light strip to the bottom panel with (U) & (G) .




F  X2	T  X1	U  X3
W  X1		

Assembly Instructions

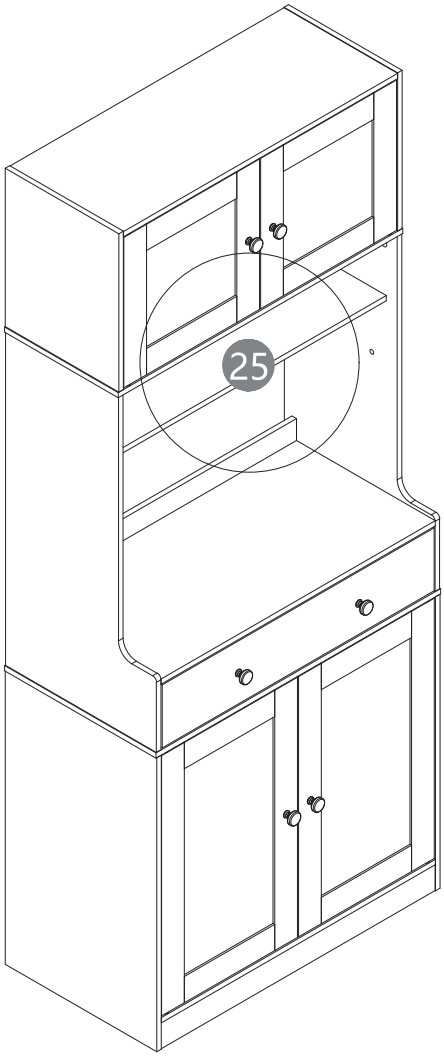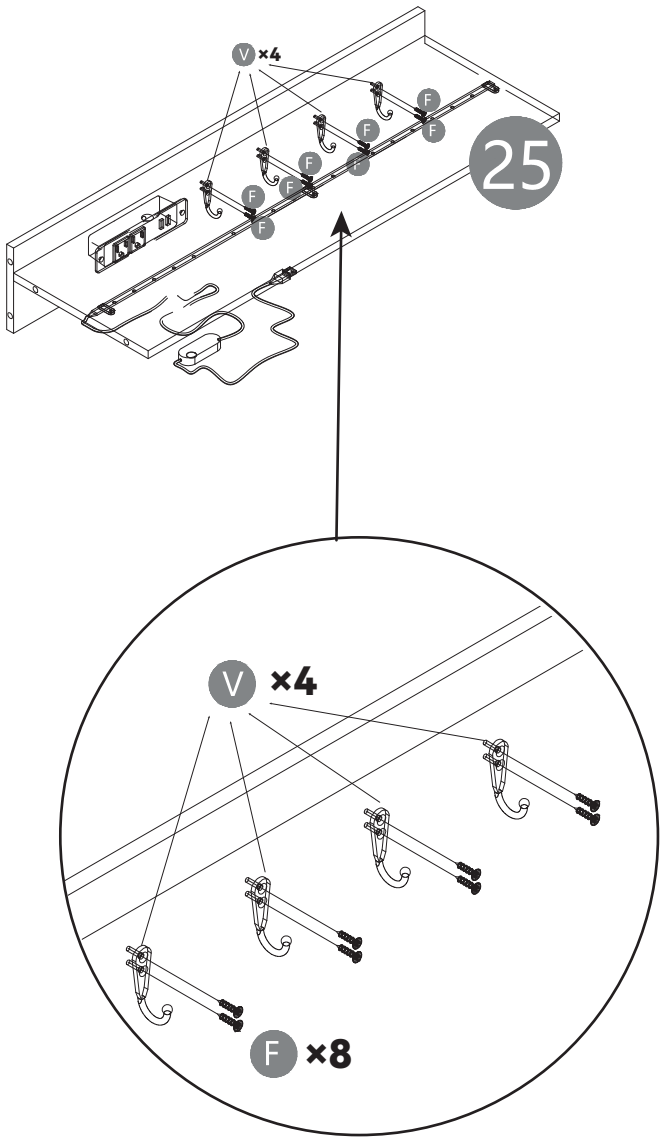Step 38: Fix Ⓥ with Ⓕ.








F	V
	
X8	X4

Assembly Instructions

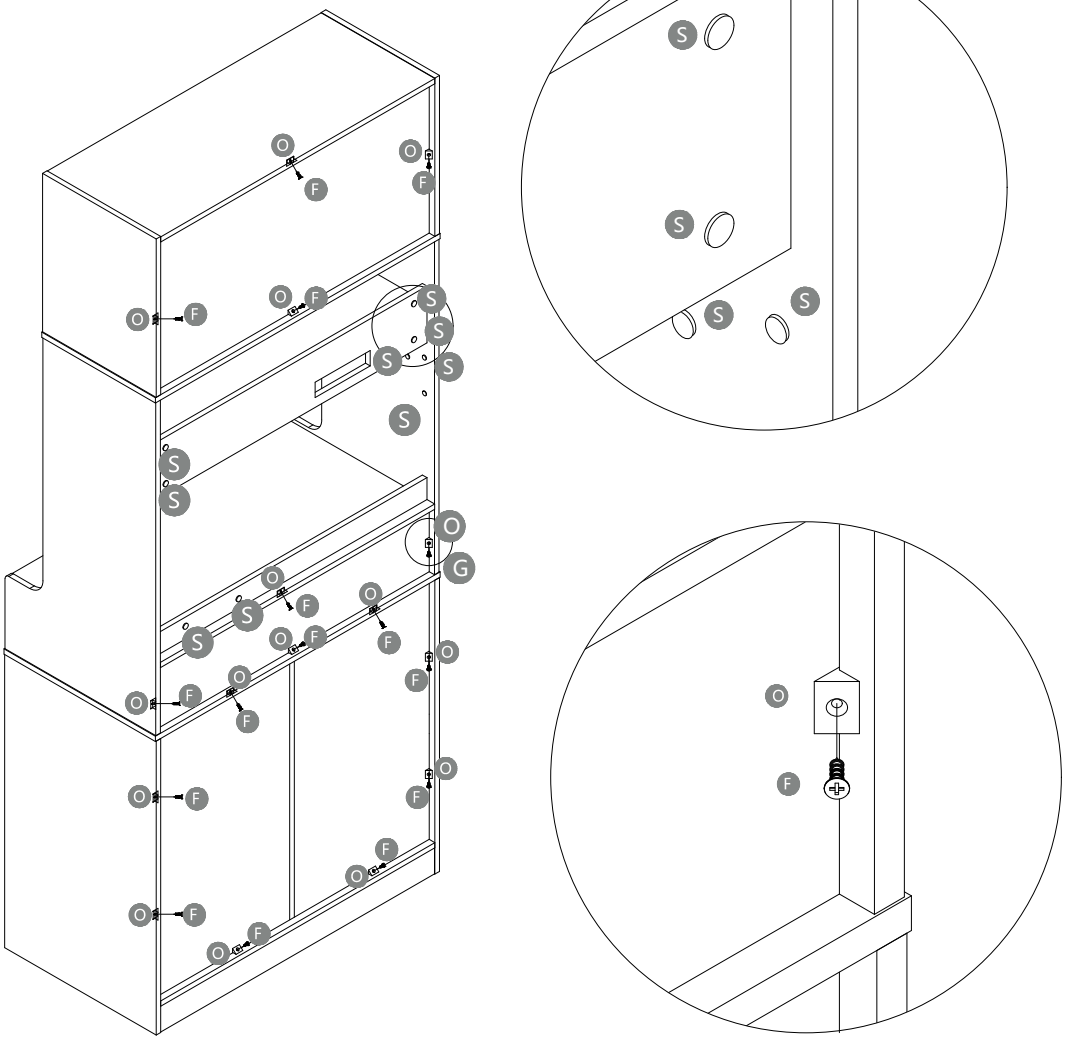
Step 39: Fix ⓞ with screws Ⓕ and cover the hole cap Ⓢ.



F	O	S
		
X16	X16	X96

Assembly Instructions

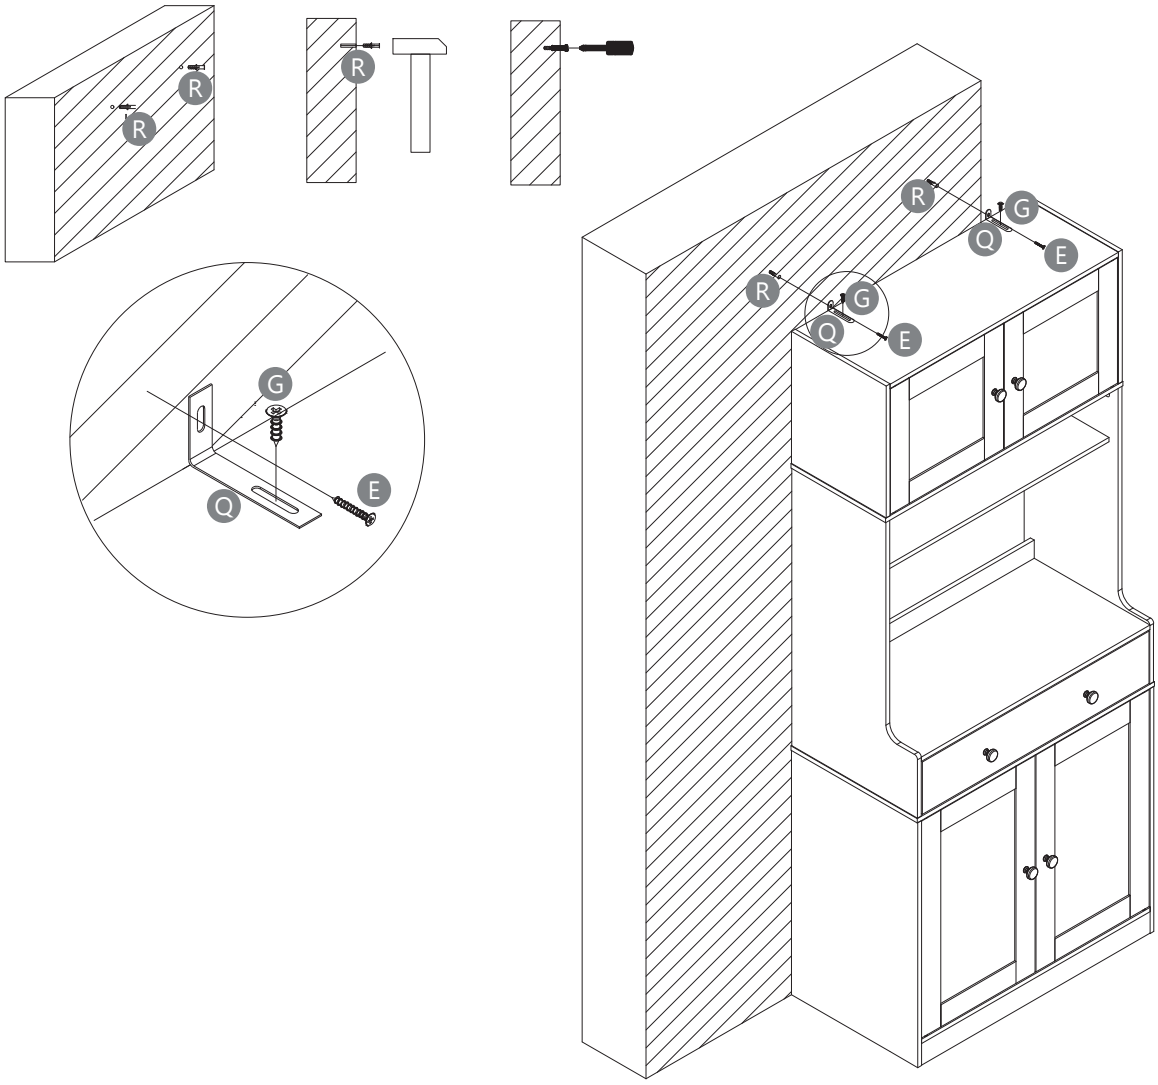Step 40: Assemble anti-tipping accessories .



E  X2	G  X2
Q  X2	R  X2