

2-PIECE STAINLESS STEEL BASE PLATE

Stronger Installation. Built to Last.



8-HOLE DESIGN

Even Force Distribution,
More Secure



STRONG & STABLE

Enhanced Fixing
for Outdoor Use



RUST RESISTANT


304 Stainless Steel,
Corrosion Resistant



2-PIECE COVER DESIGN

Concealed Screws,
Clean & Elegant Finish

EASY 5-STEP INSTALLATION

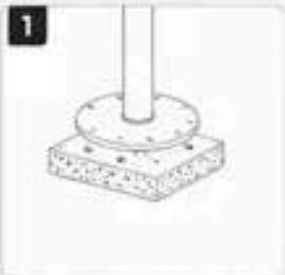

1. Set the outdoor shower upright at the installation position.




2. Mark the 8 hole positions of the base plate.



3. Drill eight Ø8 holes with a depth of 100mm at the marked locations.



4. Connect the hot and cold water inlet hoses with the cold and hot water pipes respectively.

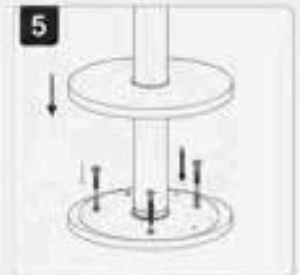

5. Install the expansion screws and tighten them with a wrench.
Place the cover over the base to complete installation.

 **DURABLE. RELIABLE. MADE FOR OUTDOORS.**