
ASSEMBLY INSTRUCTIONS

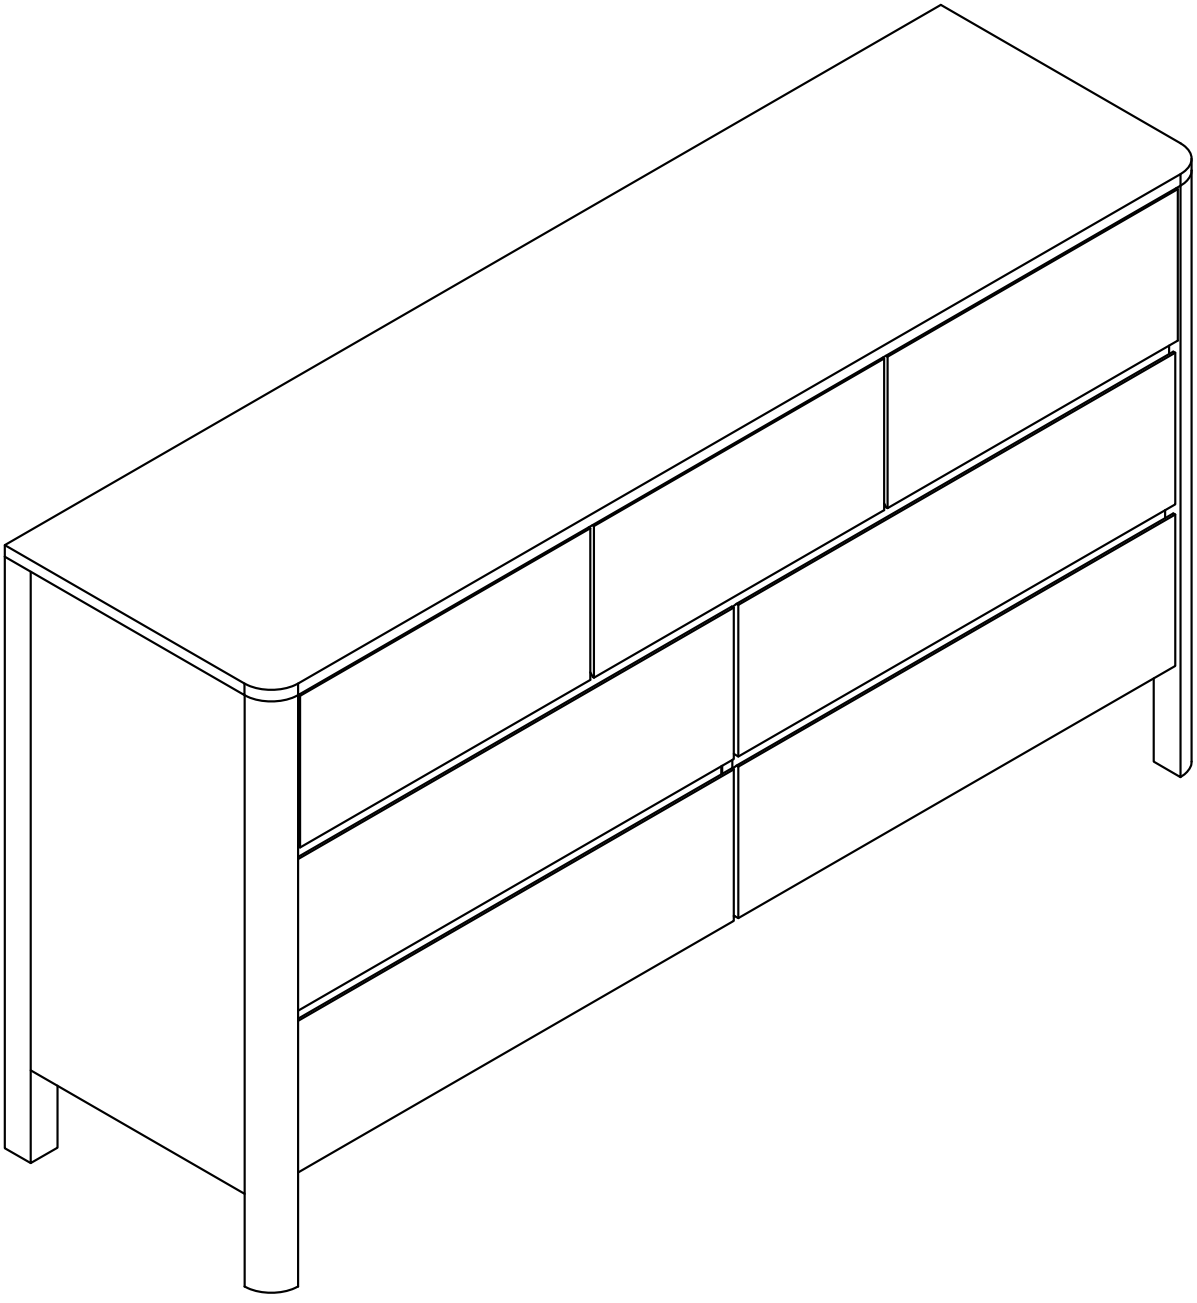

2 People

sentowayCS@hotmail.com

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please contact us.


DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order.
  Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.


AFTER-SALES CONTACT




sentowayCS@hotmail.com

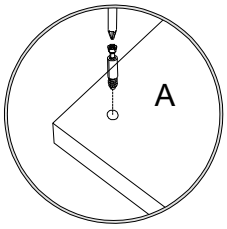


1.Screw cam boit into panel

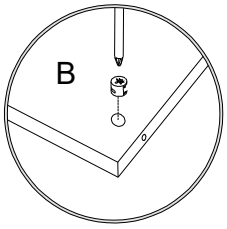


2.Push cam into panel - arrow feature on cam top points to panel edge

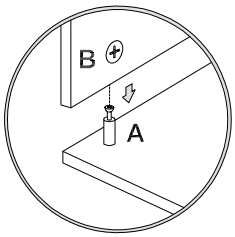

3.Aligu cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

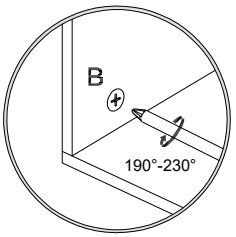



4.Rotate cam(s) clockwise 190°-230° to lock panels together

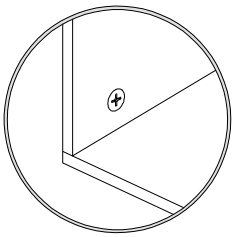

5.Panels should be tight against each other and connection should be rigid


Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

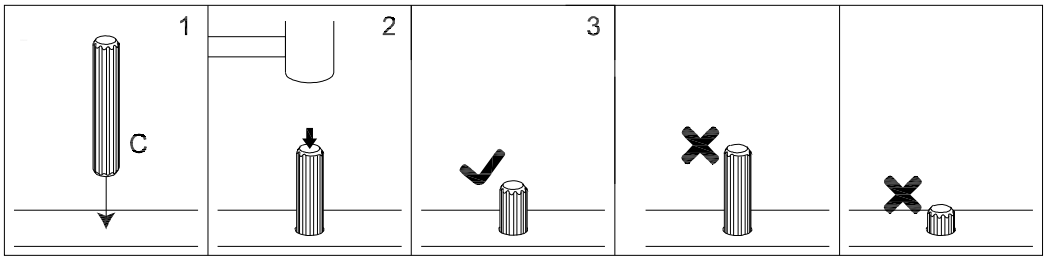


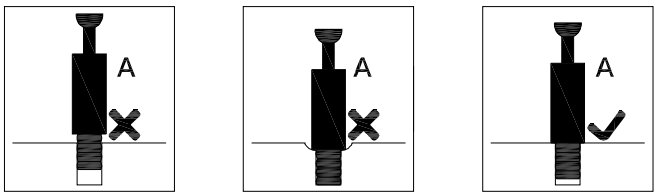



⚠ WARNING


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

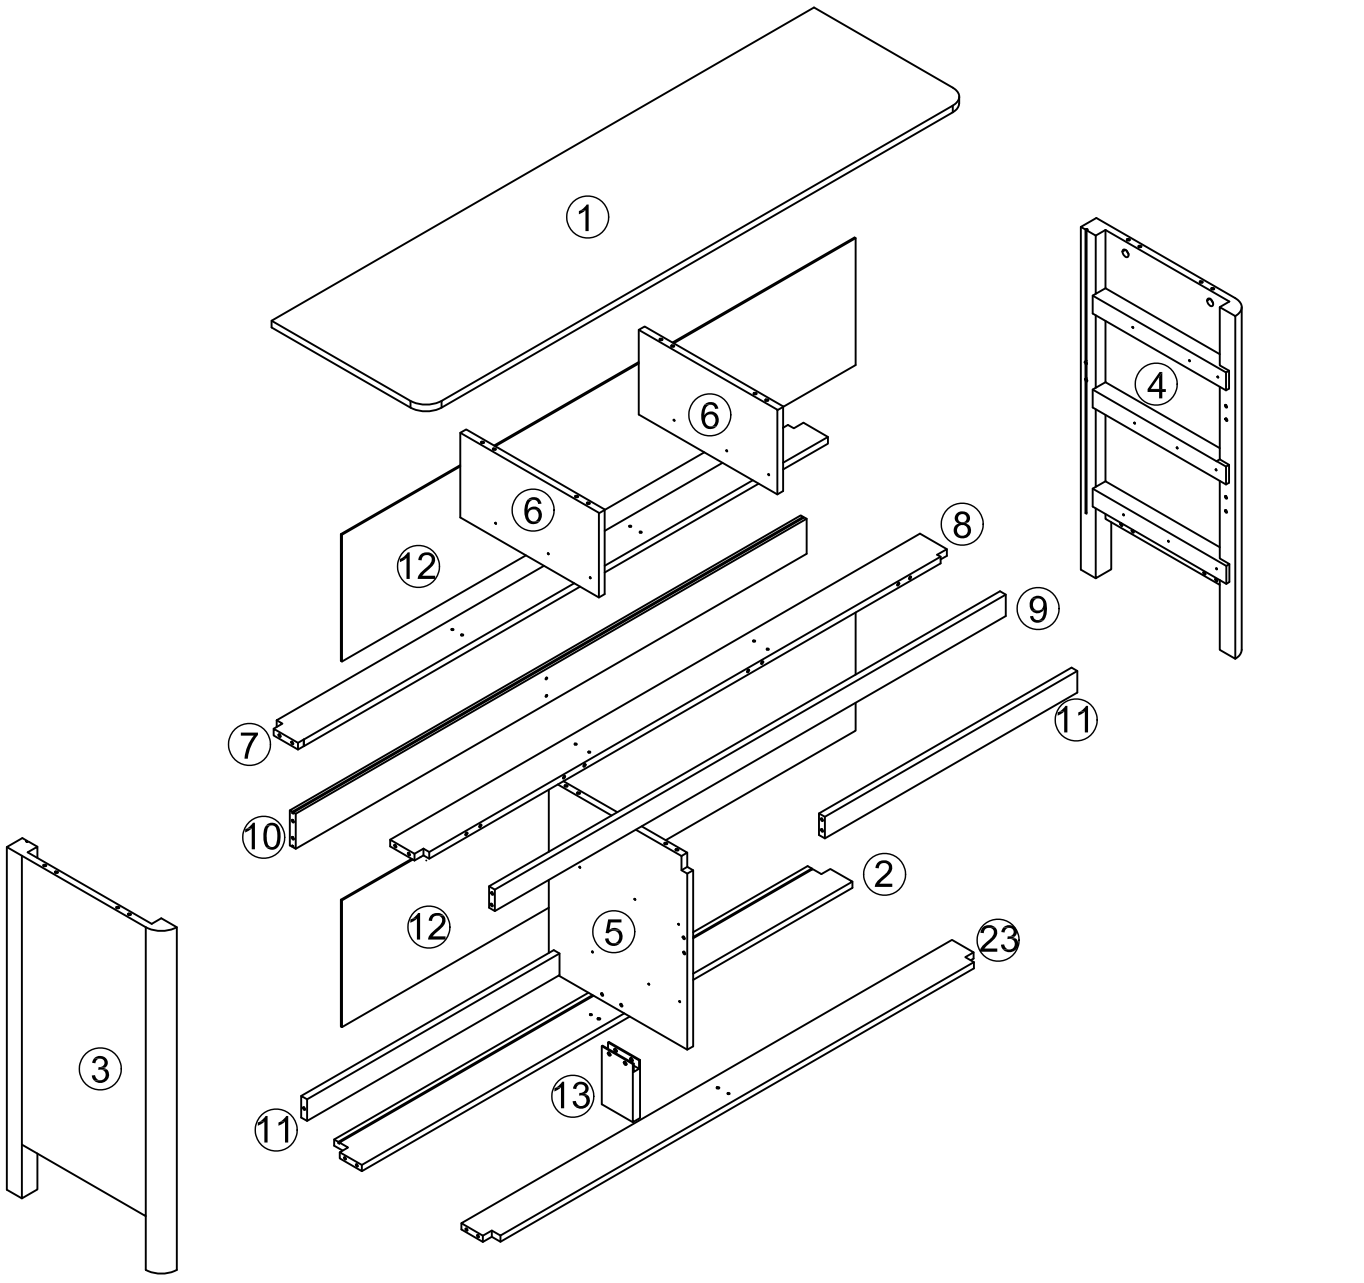

1
6
6
12
4
8
9
7
11
10
2
12
5
23
3
13
11

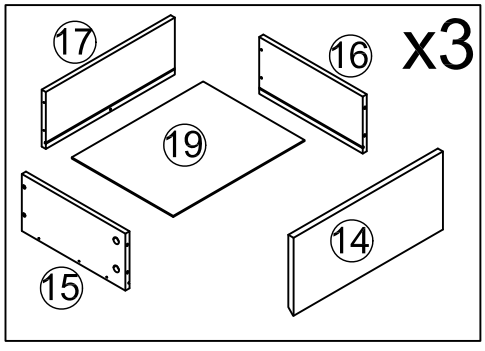

17
16
x3
19
14
15

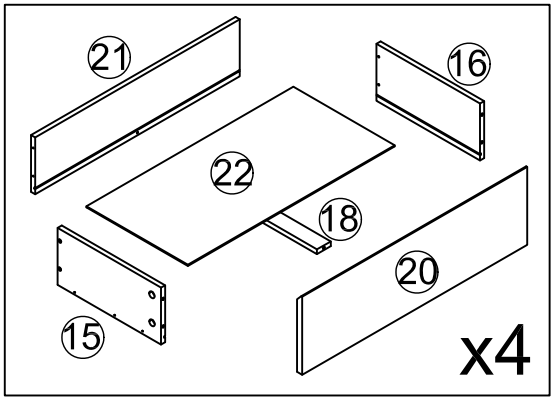
21
16
22
18
20
15
x4



A x72



B x72



Cx24
M6 x 30 mm



Dx42
M4 x 35 mm



Ex84
M3 x 12 mm

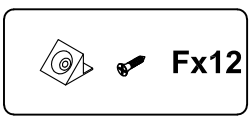

Fx12

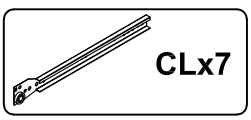

CLx7

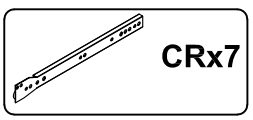

CRx7

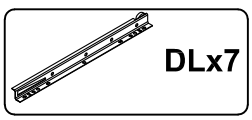
DLx7

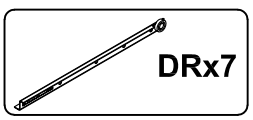

DRx7

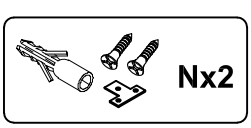

Nx2

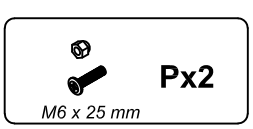

Px2
M6 x 25 mm

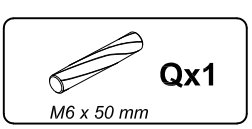

Qx1
M6 x 50 mm



STEP 1

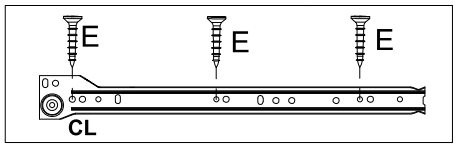

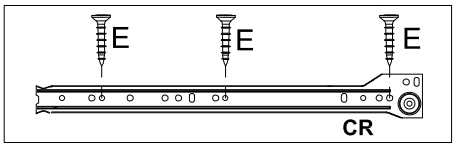


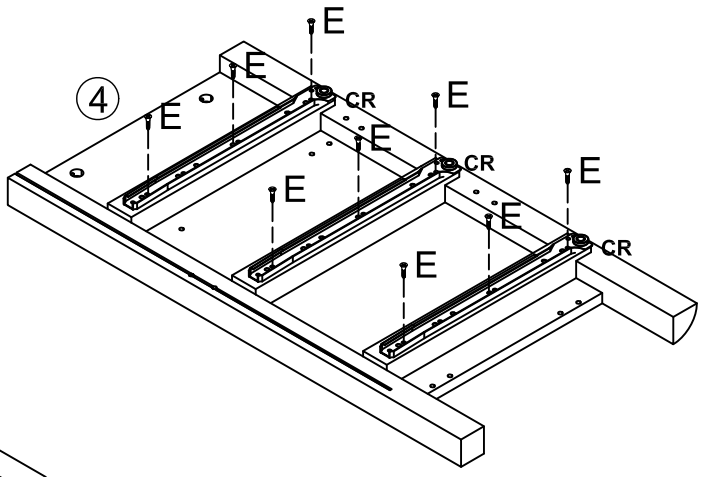


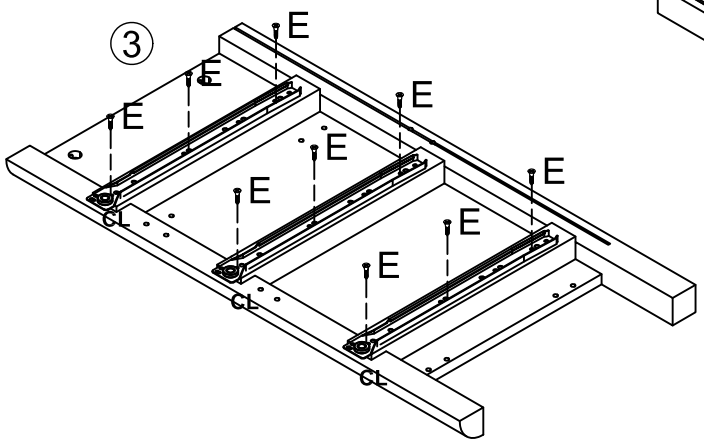



 **Ex18** *M3 x 12 mm*	 **CL x3**	 **CR x3**

STEP 2

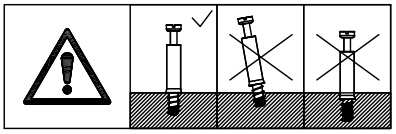


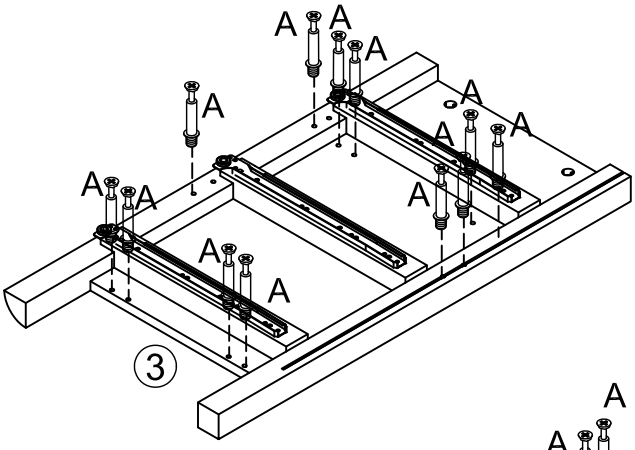


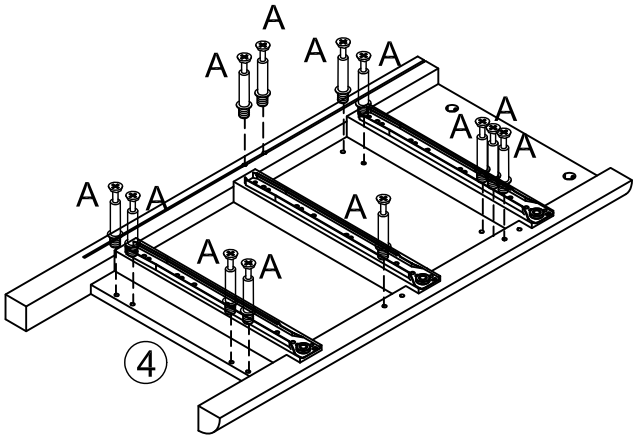


 **A x24**

STEP 3

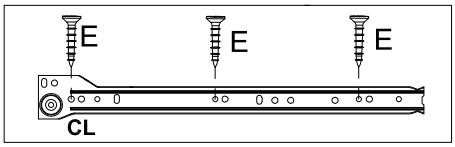


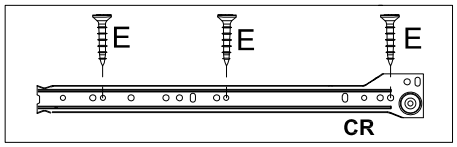


x2

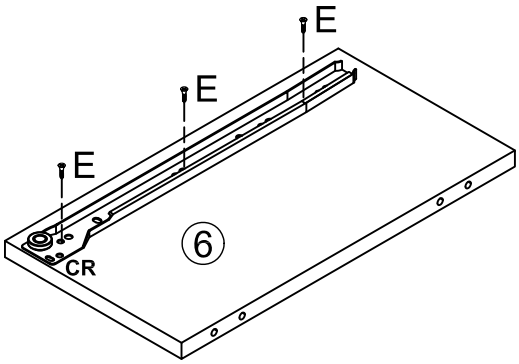




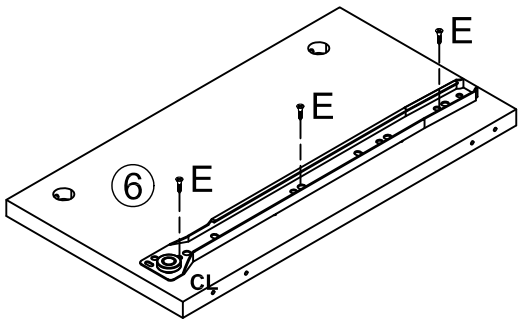












STEP 4

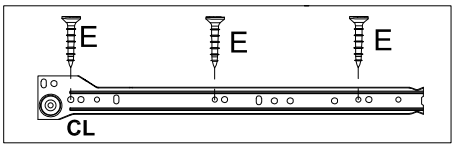

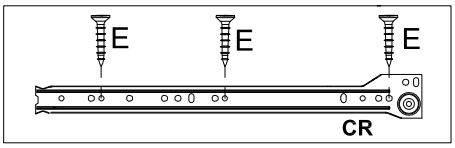


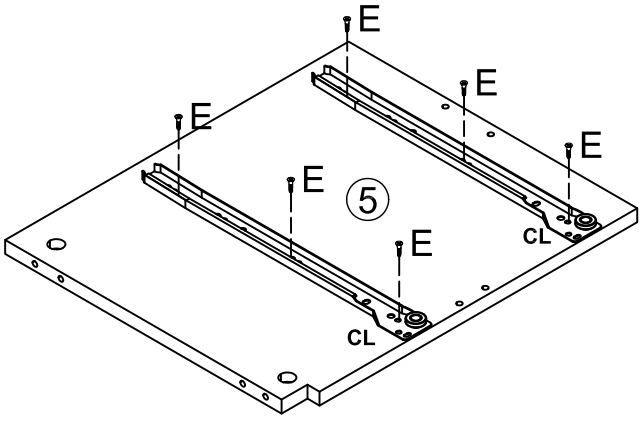





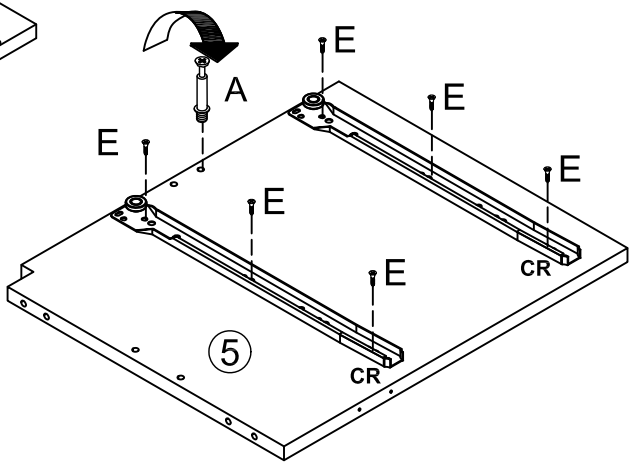












STEP 5

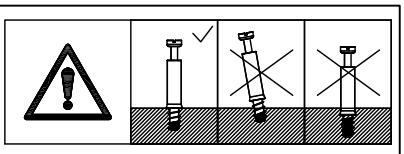


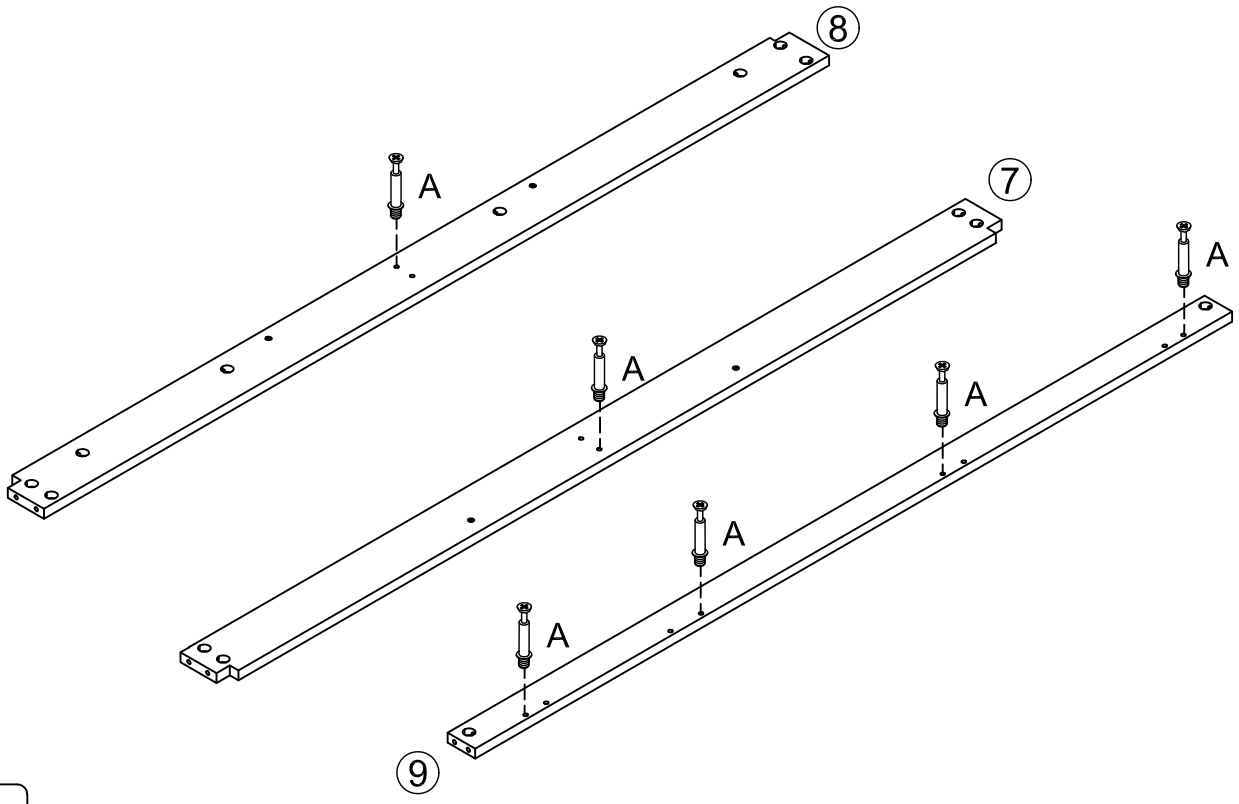



A x6


STEP 6

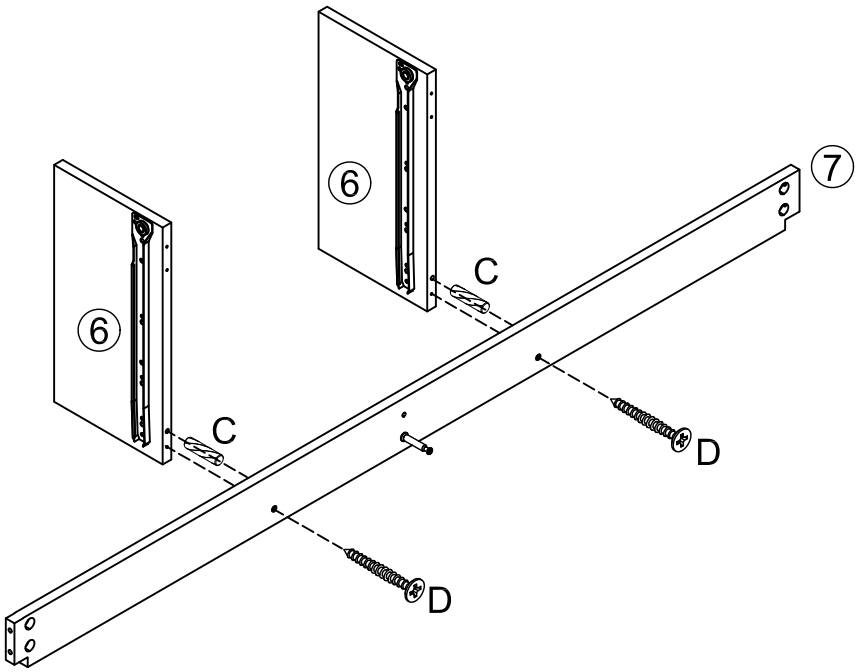



Dx2


M4 x 35 mm




Cx2

M6 x 30 mm


STEP 7

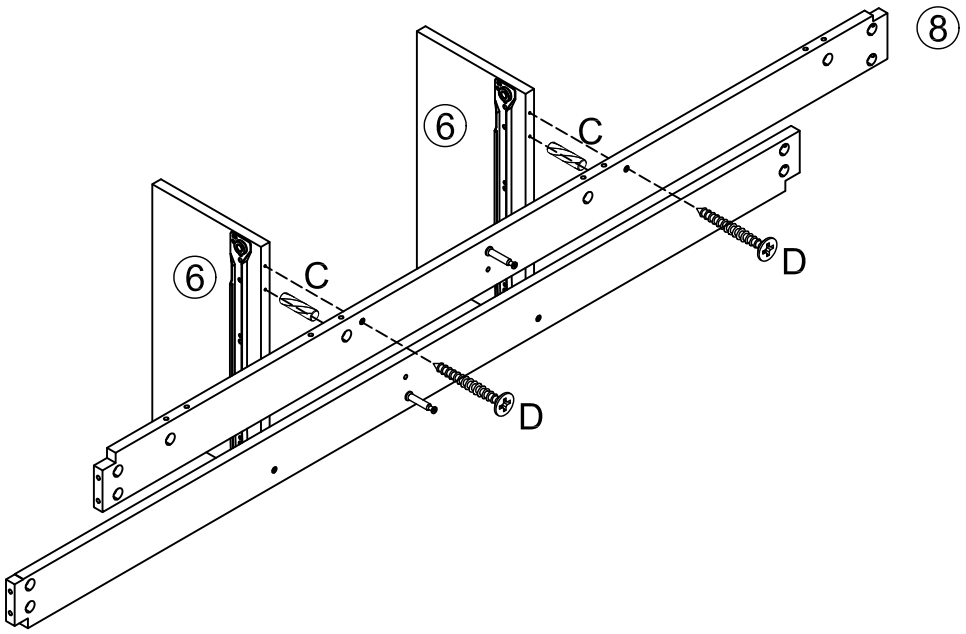




Dx2
M4 x 35 mm


Cx2
M6 x 30 mm

STEP 8

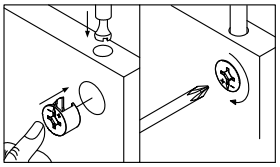


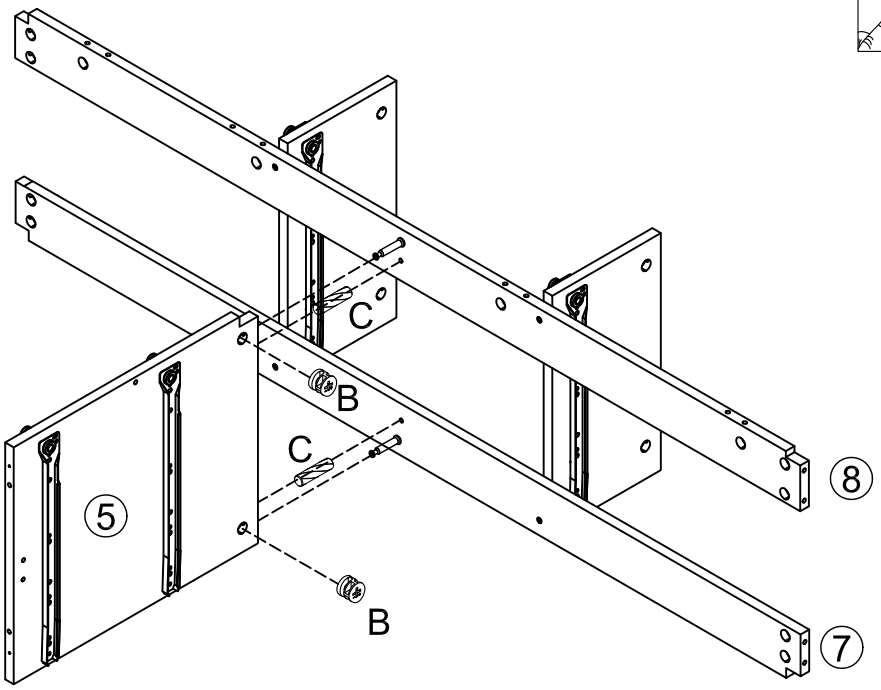




Cx2
M6 x 30 mm


B x2

STEP 9

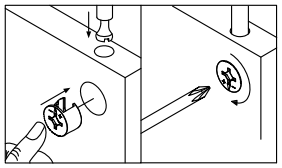

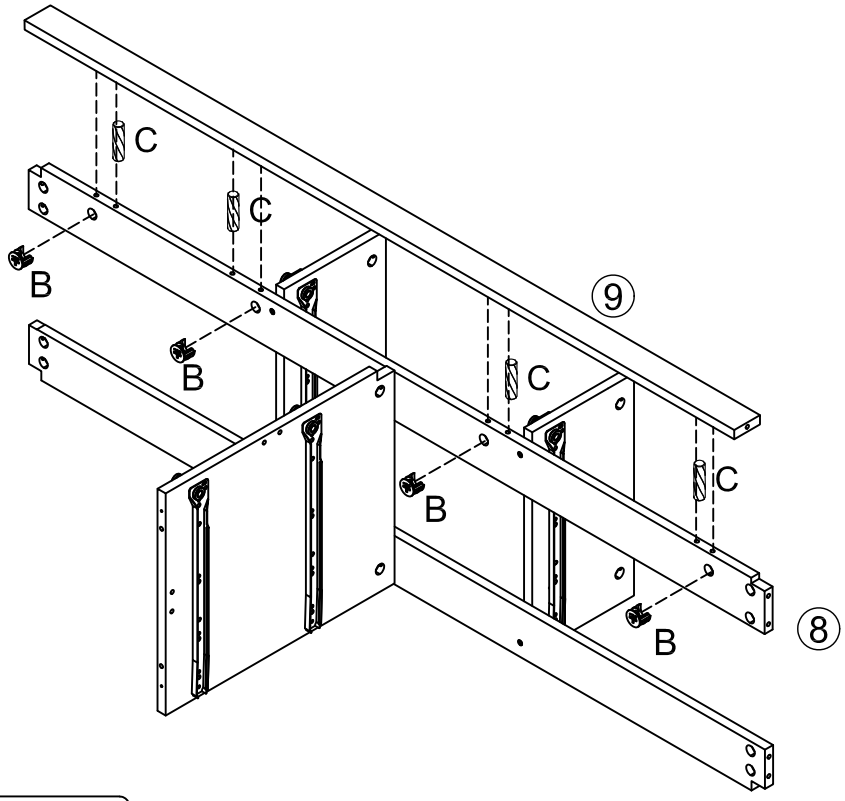




Cx4


M6 x 30 mm




B x4

STEP 10

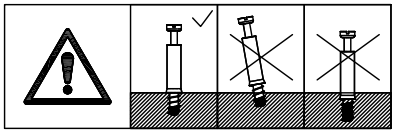


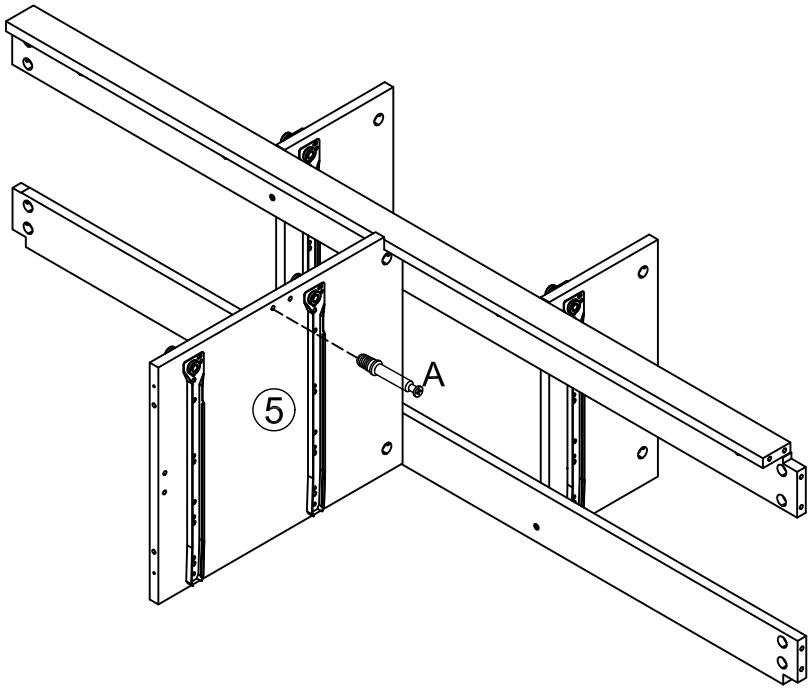




A x1


STEP 11

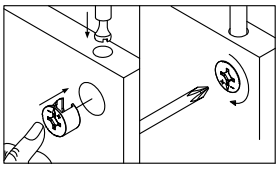

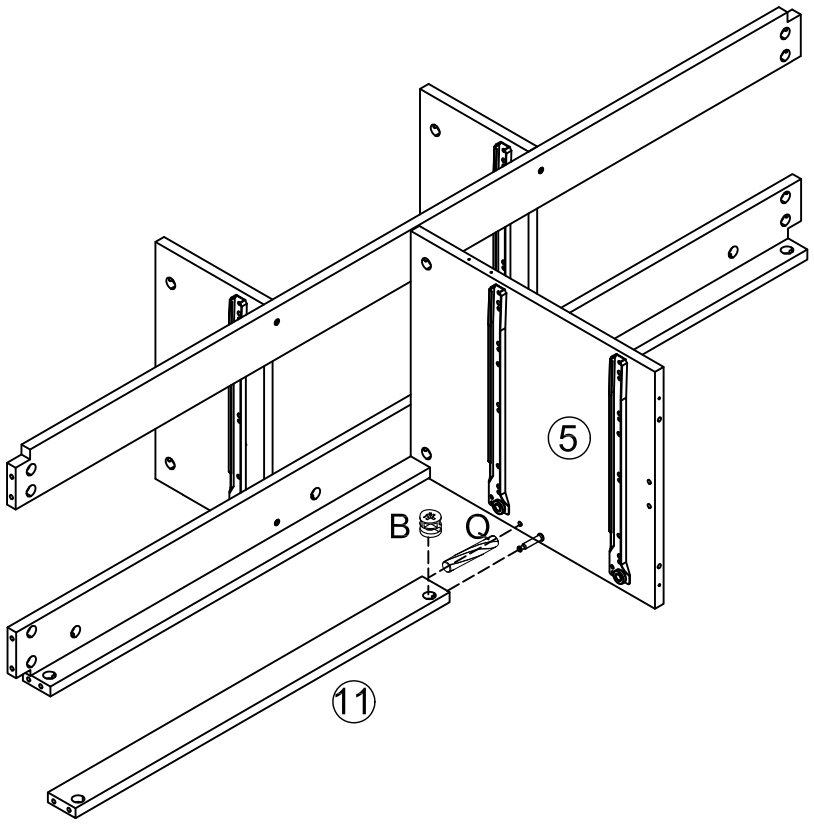




B x1



Qx1

M6 x 50 mm


STEP 12

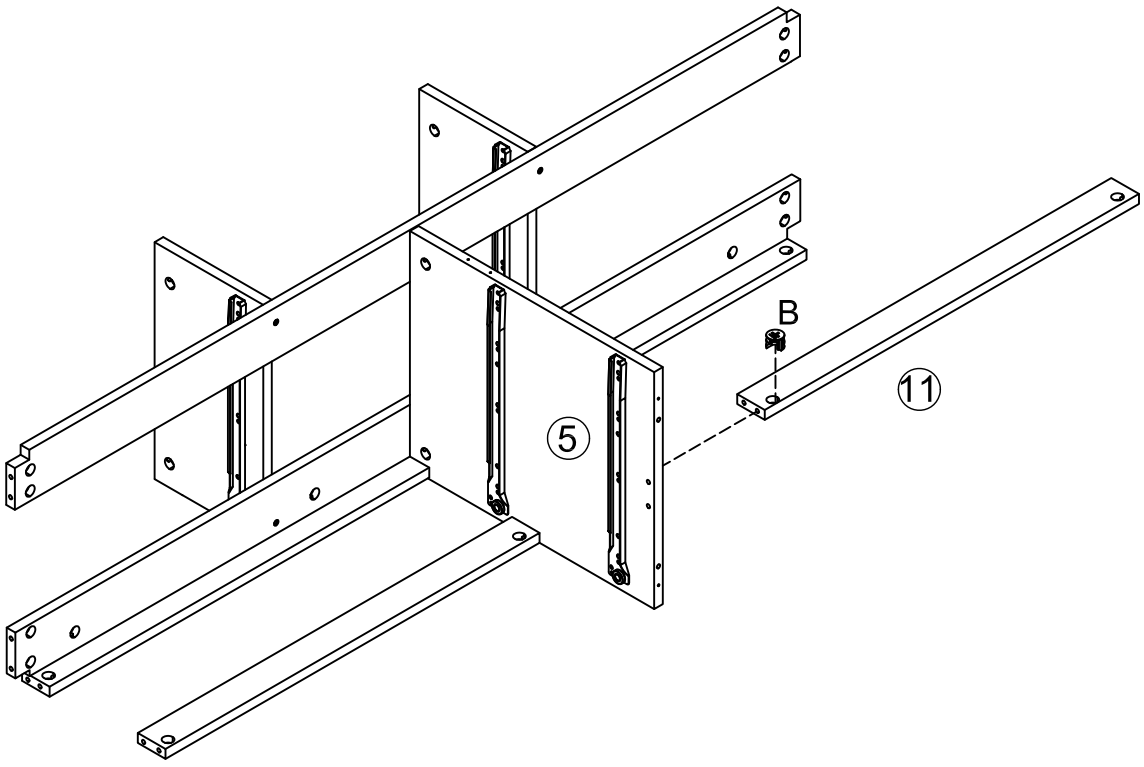



B x1

STEP 13

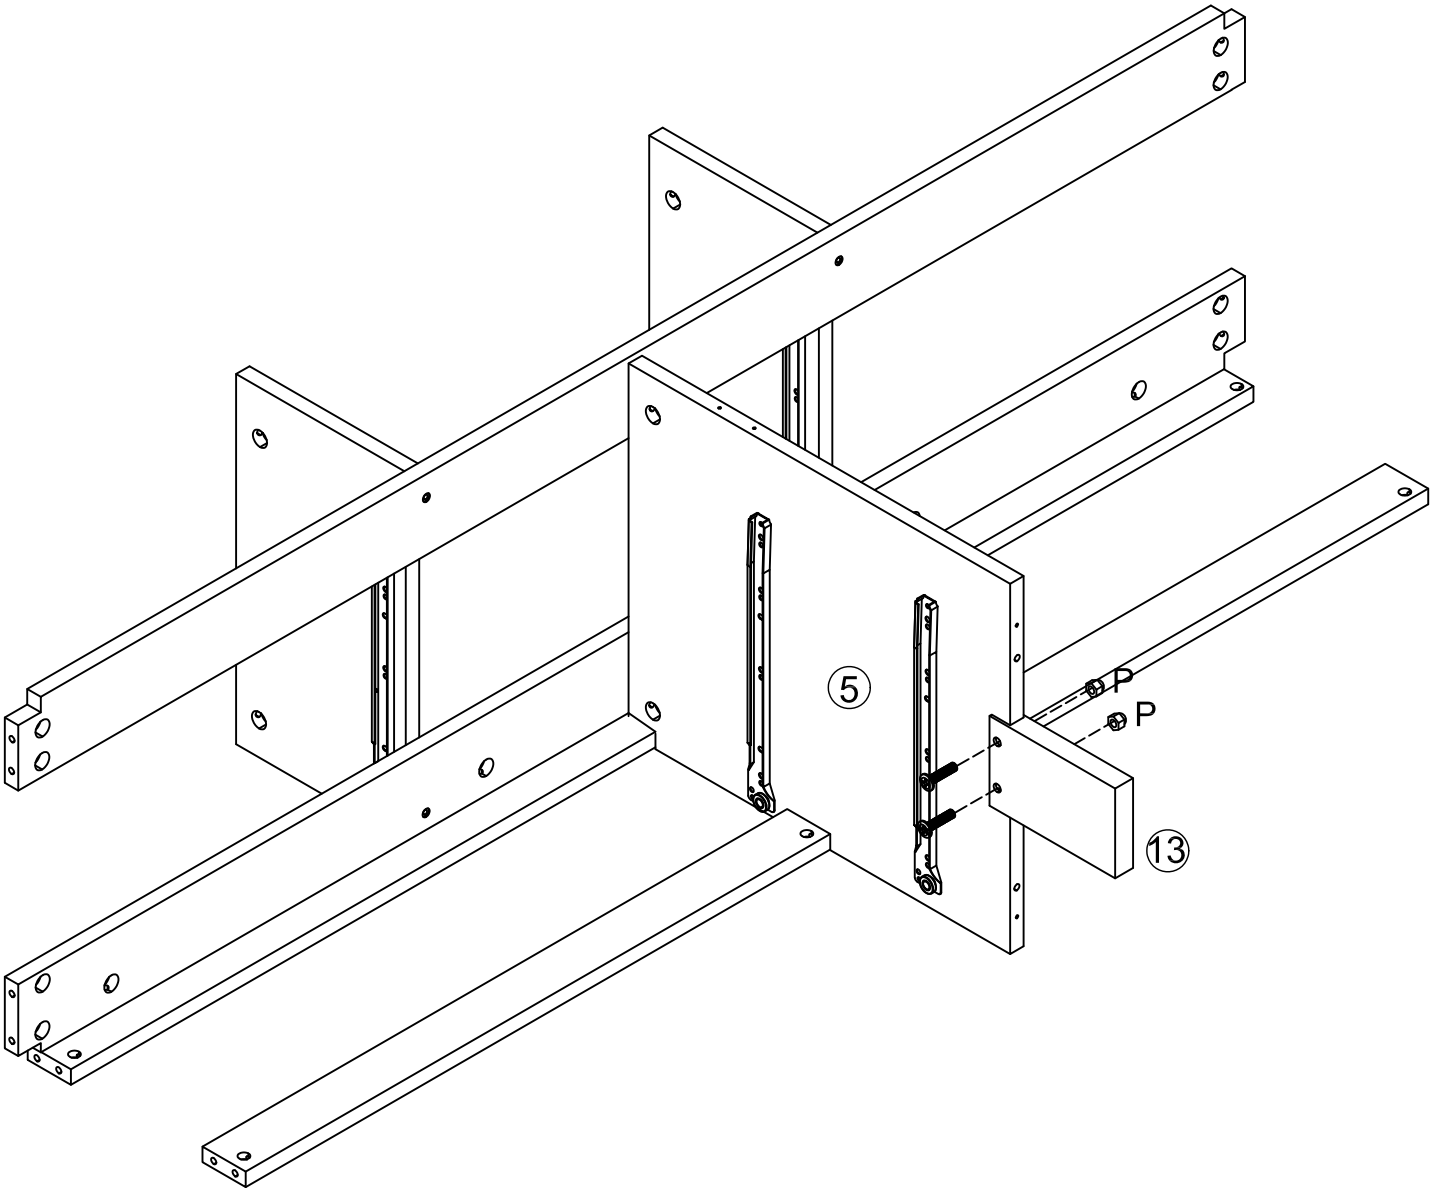




Px2

M6 x 25 mm

STEP 14

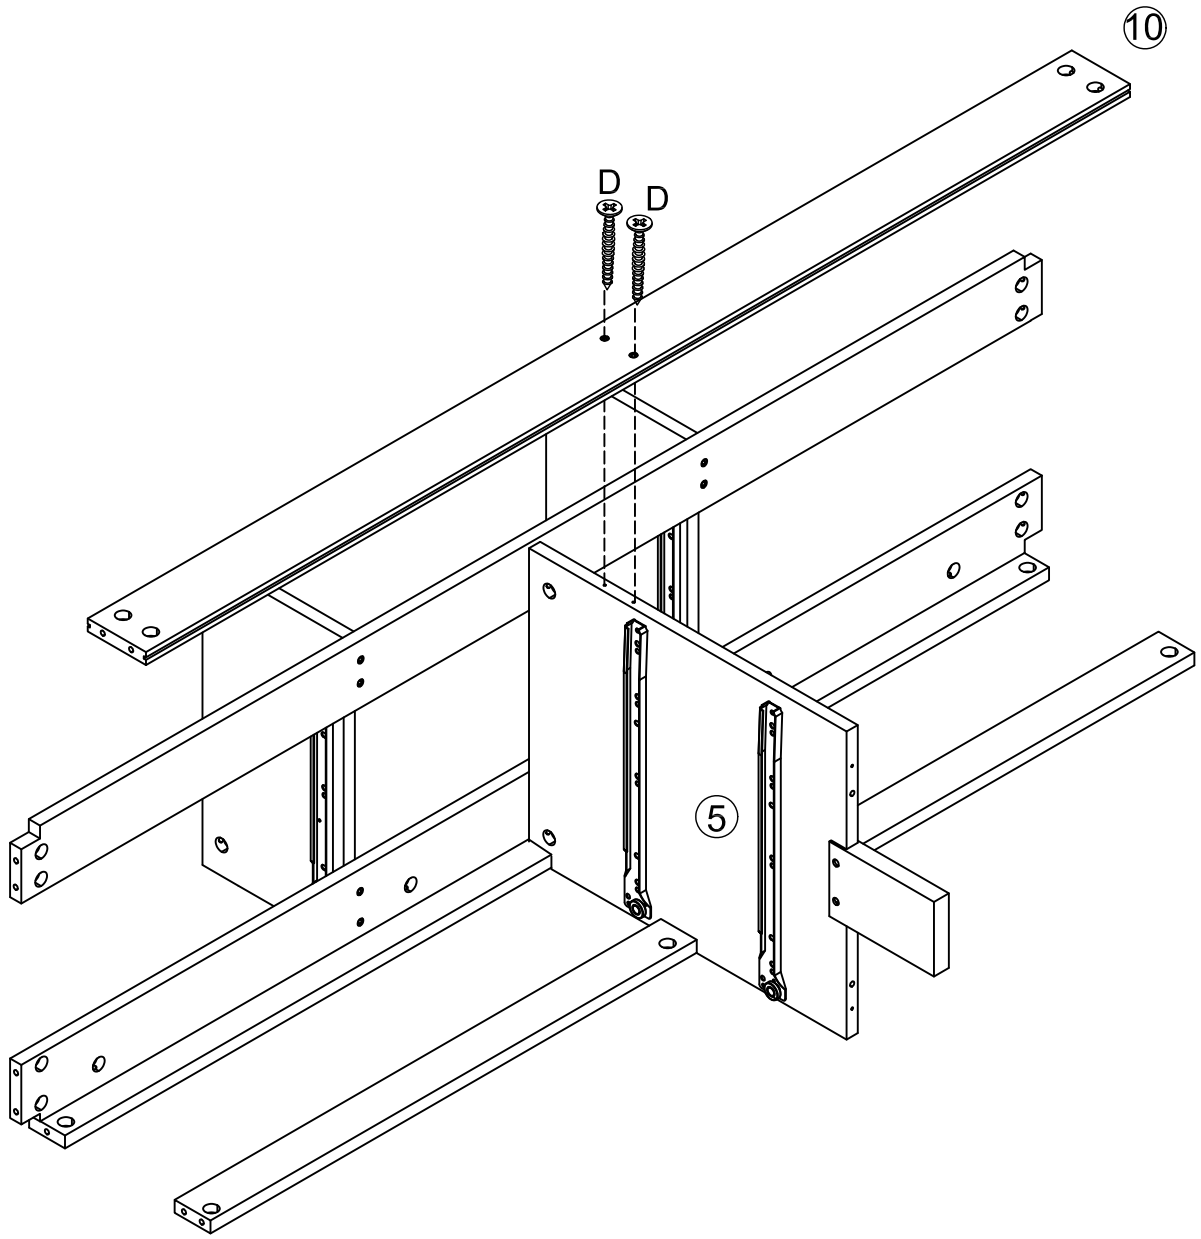




Dx2


M4 x 35 mm


STEP 15

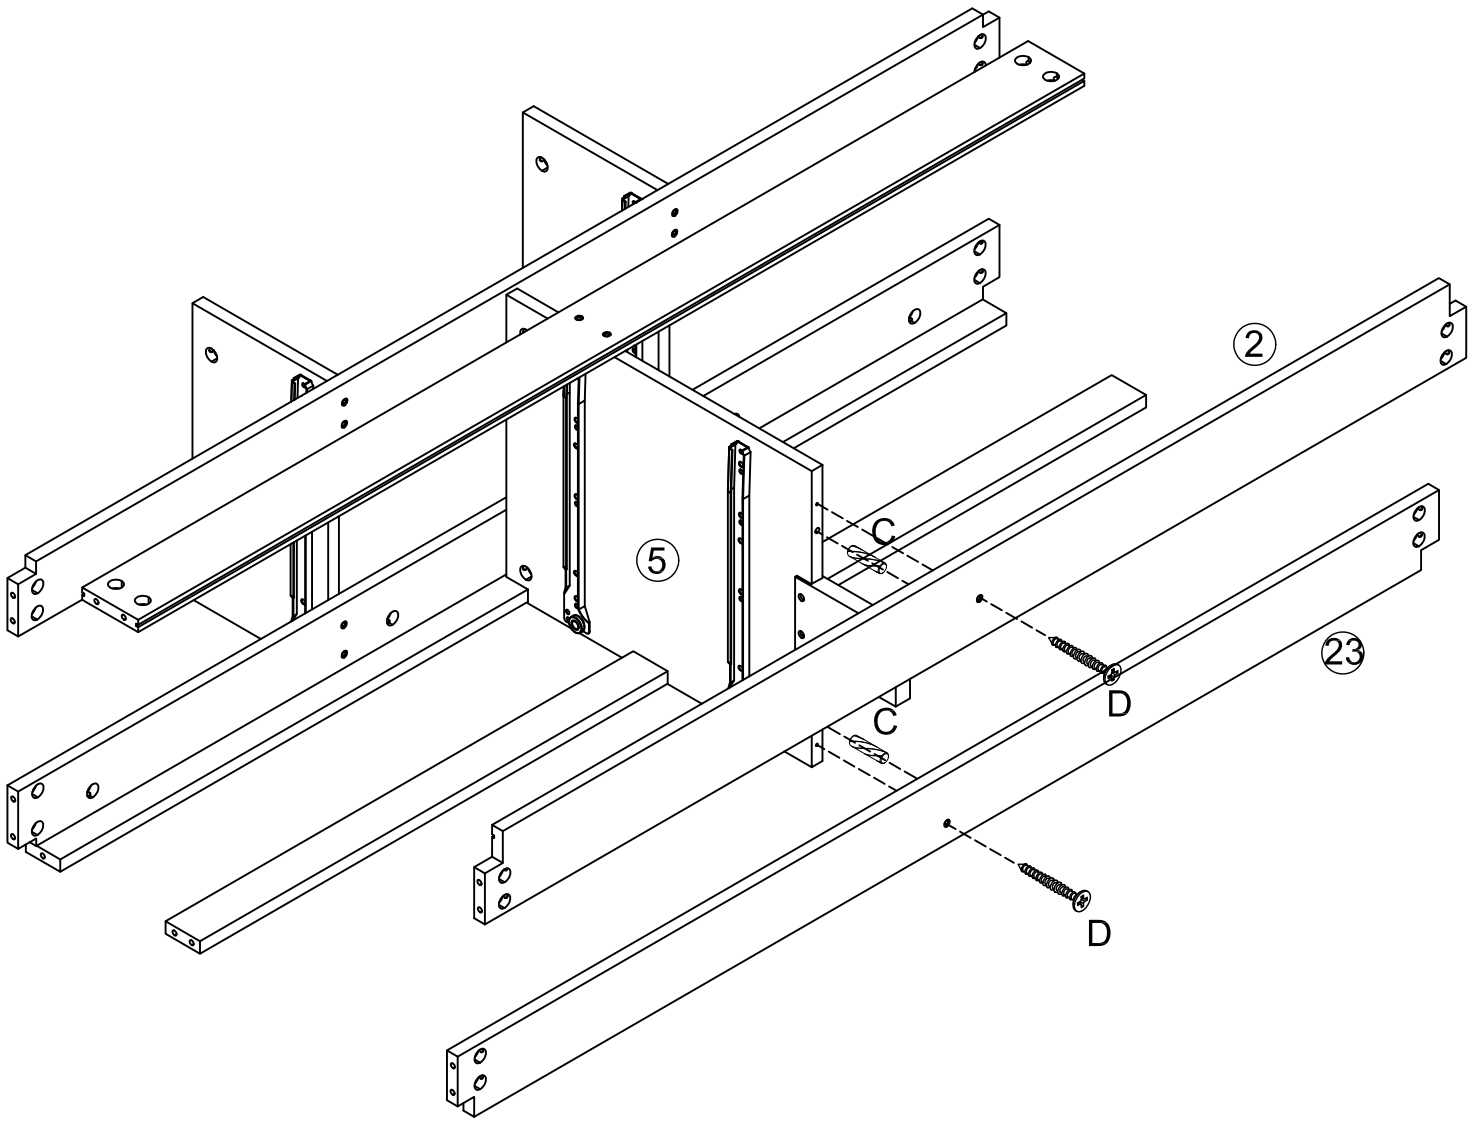


Dx2 *M4 x 35 mm*	**Cx2** *M6 x 30 mm*

STEP 16

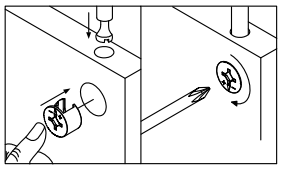

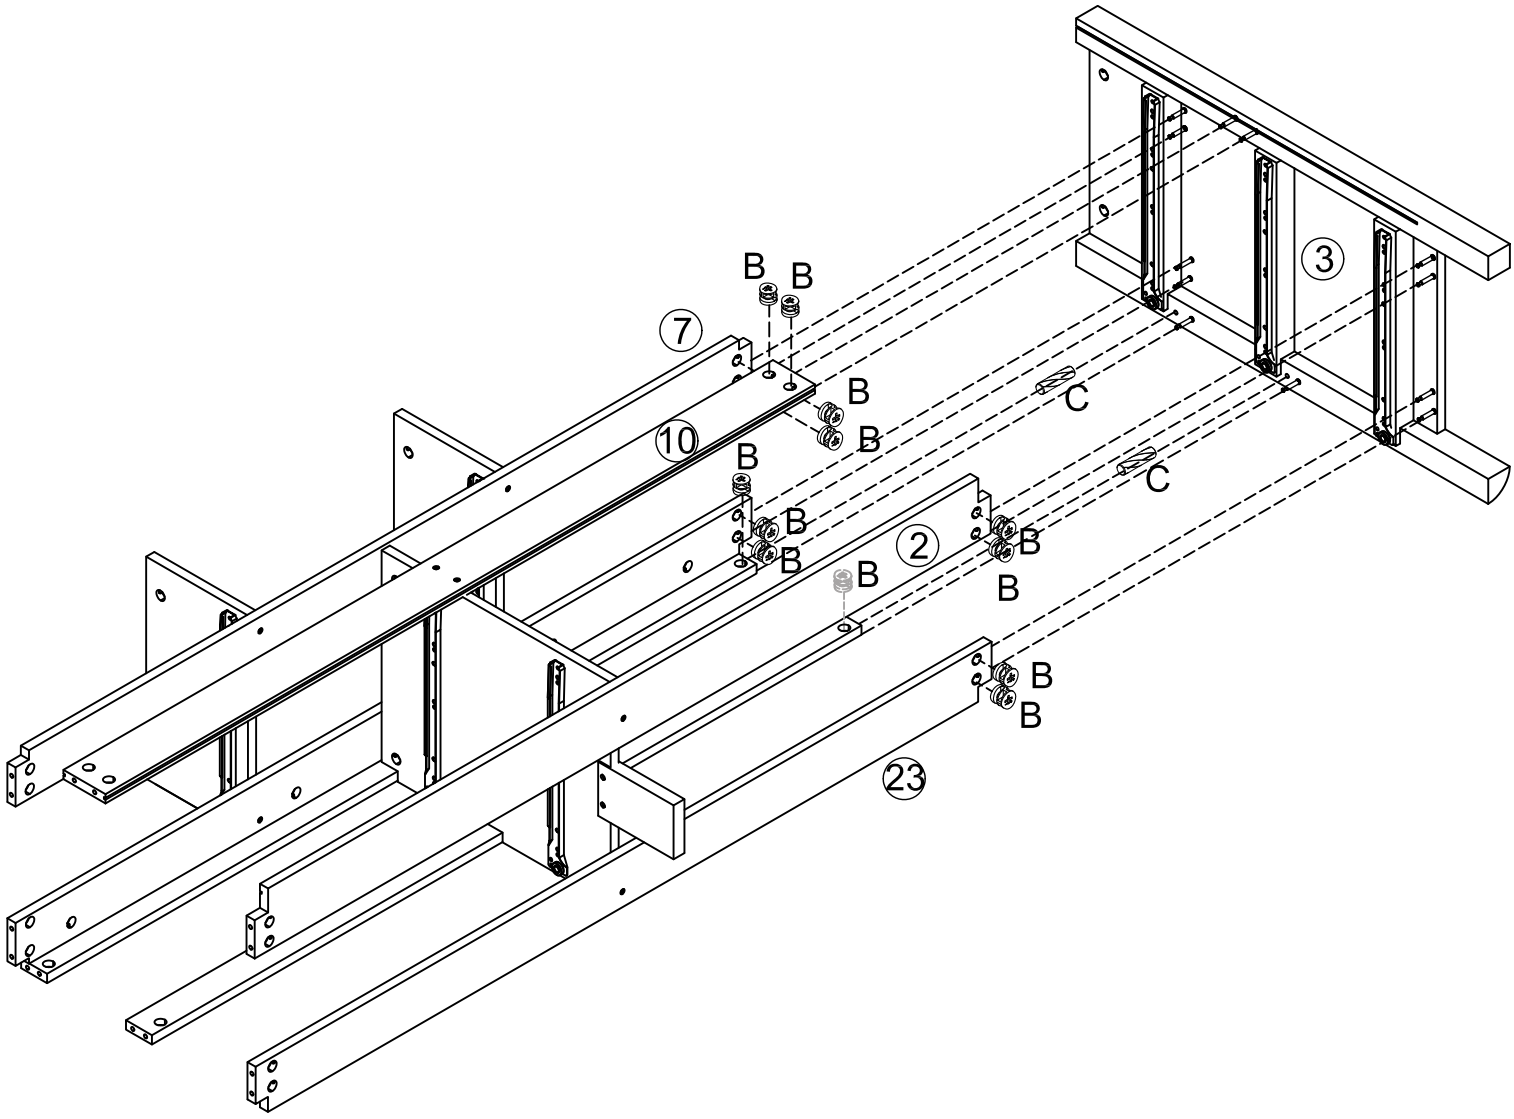




Cx2

M6 x 30 mm





B x12


STEP 17

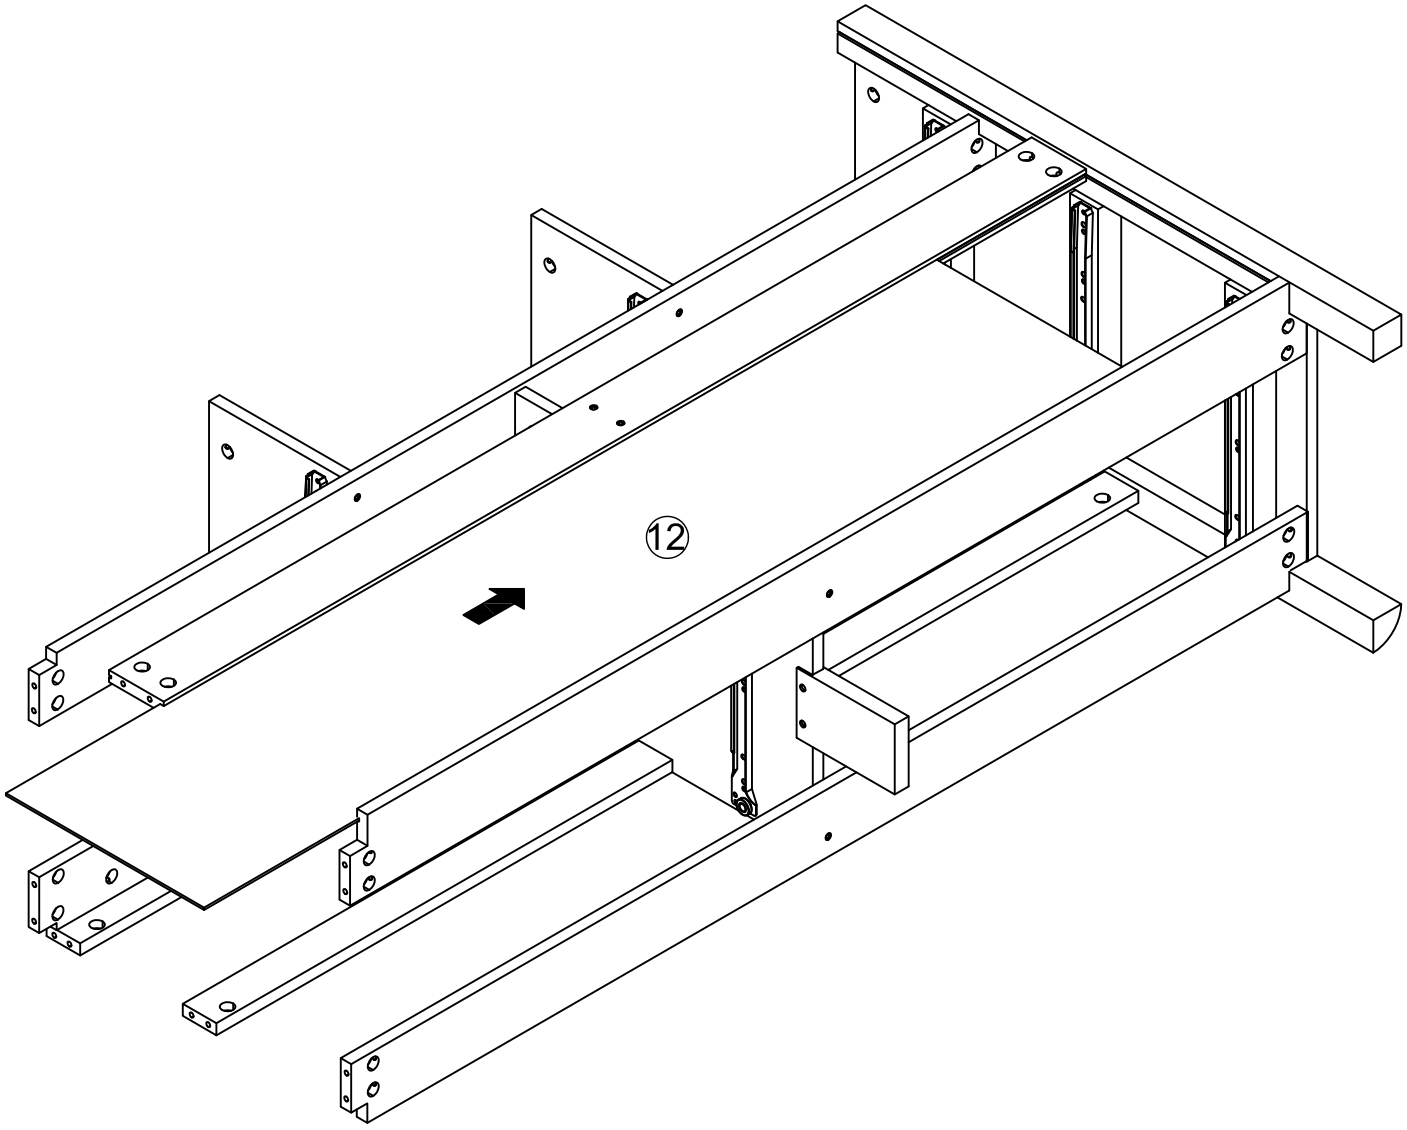

STEP 18

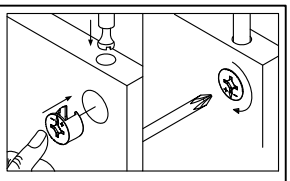

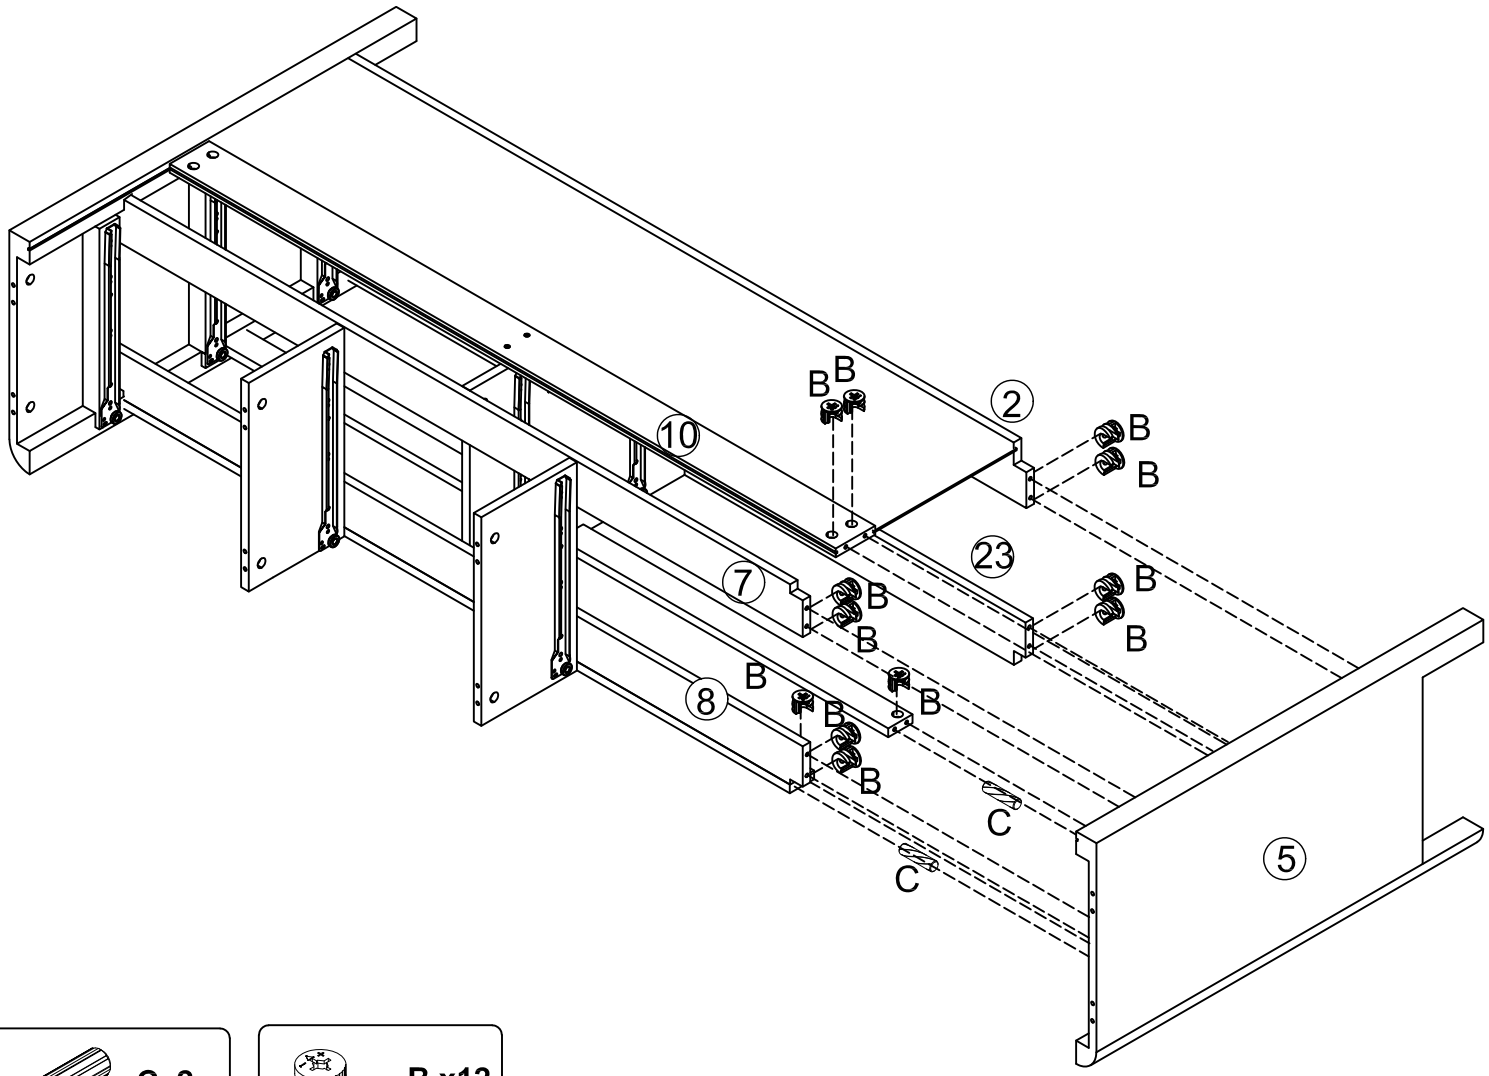




Cx2


M6 x 30 mm




B x12

STEP 19

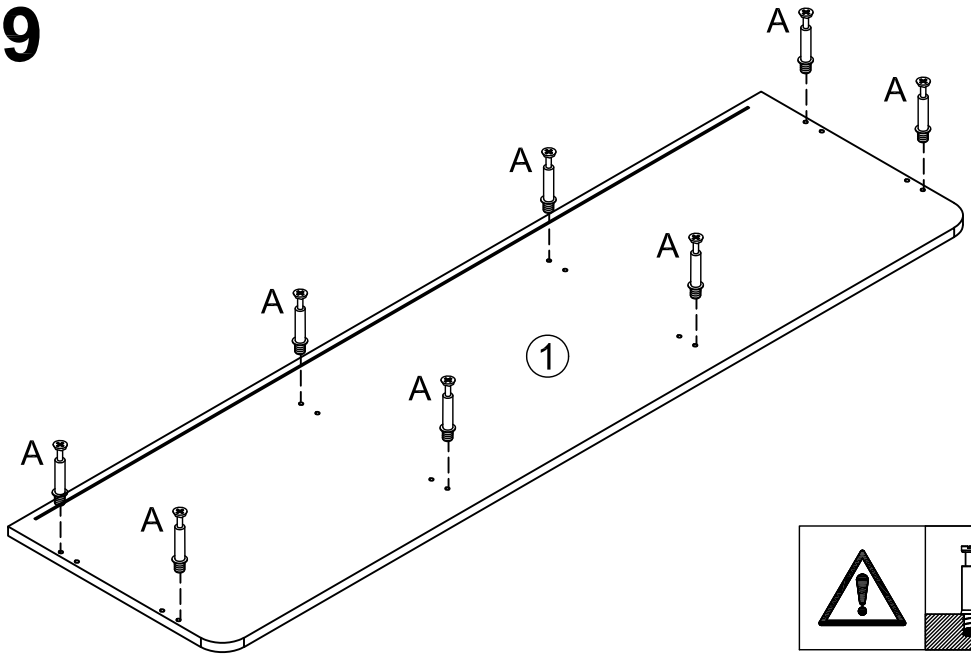


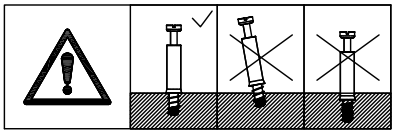





A x8

STEP 20

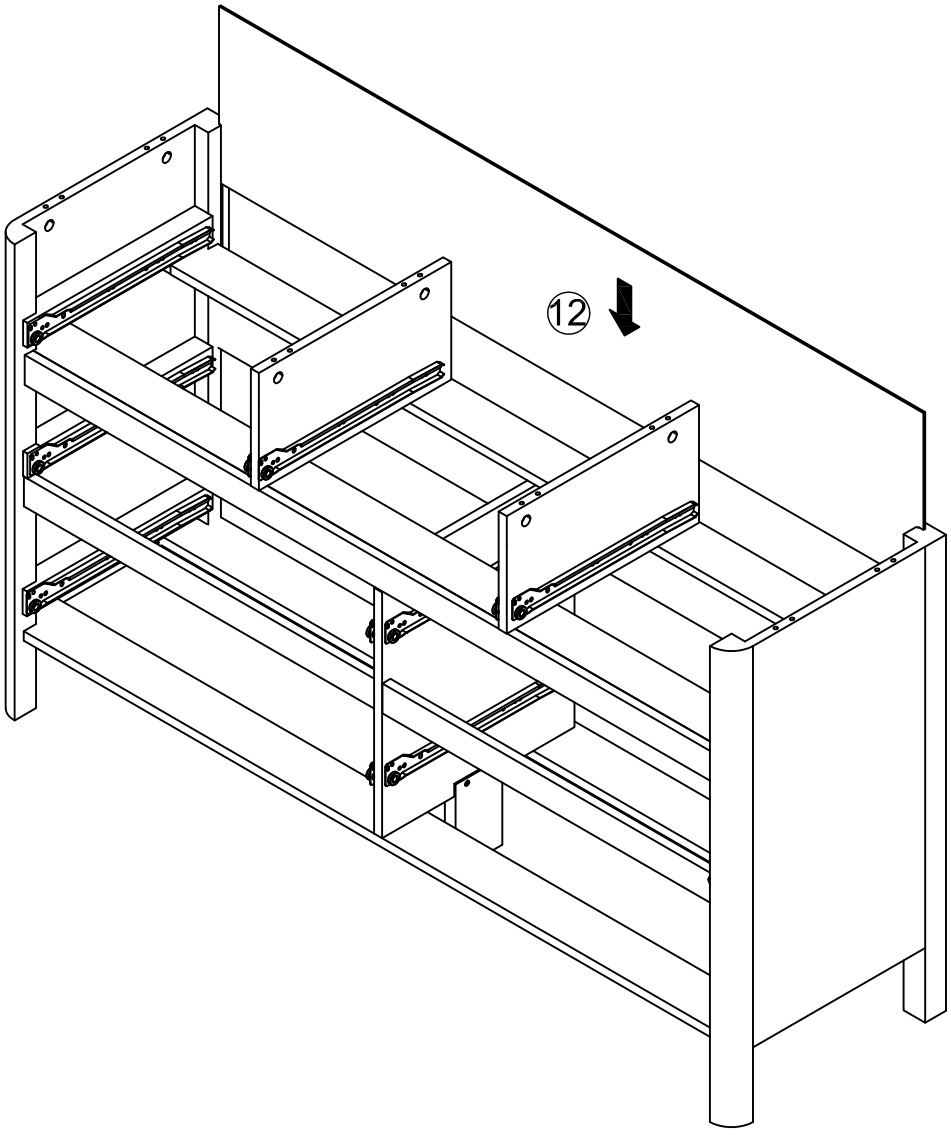


STEP 21

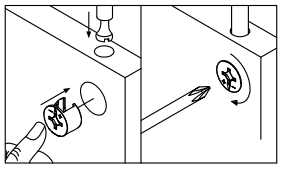

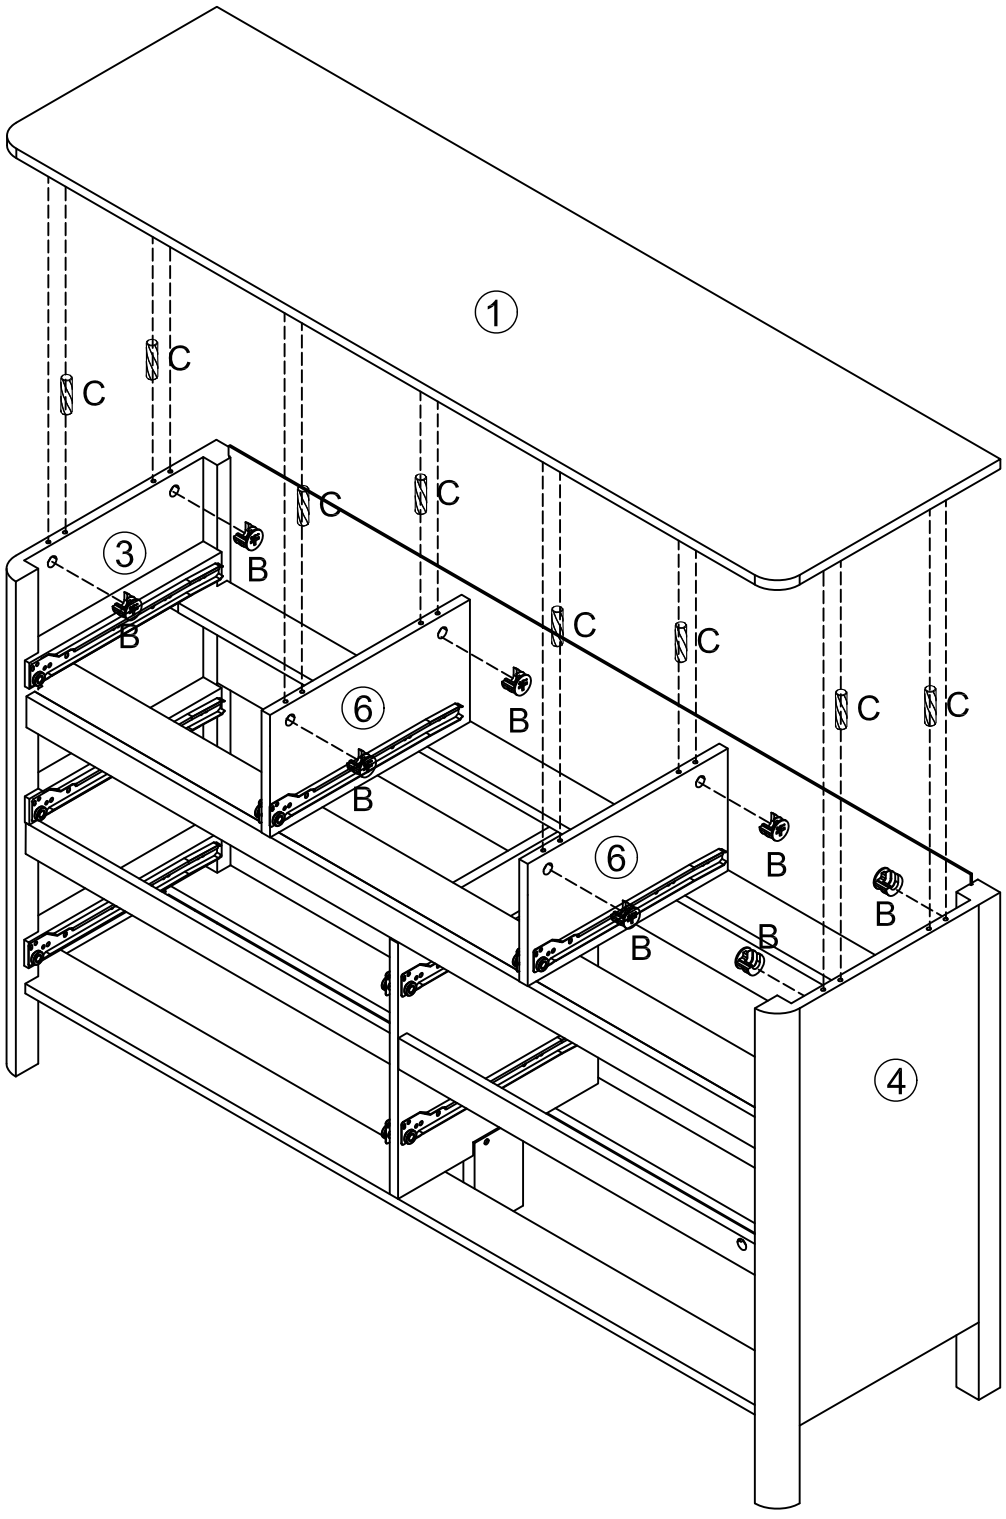



Cx8 *M6 x 30 mm*	**B x8**


STEP 22

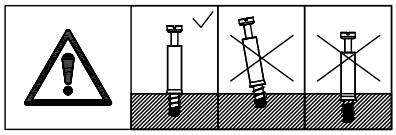



x4

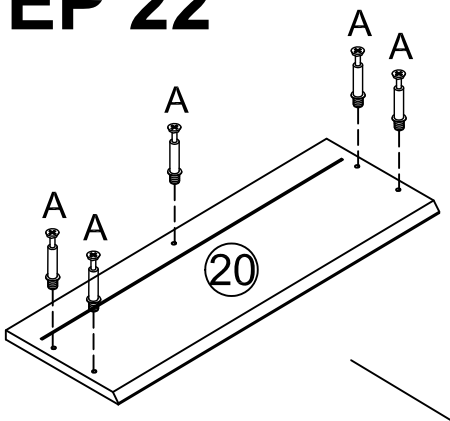


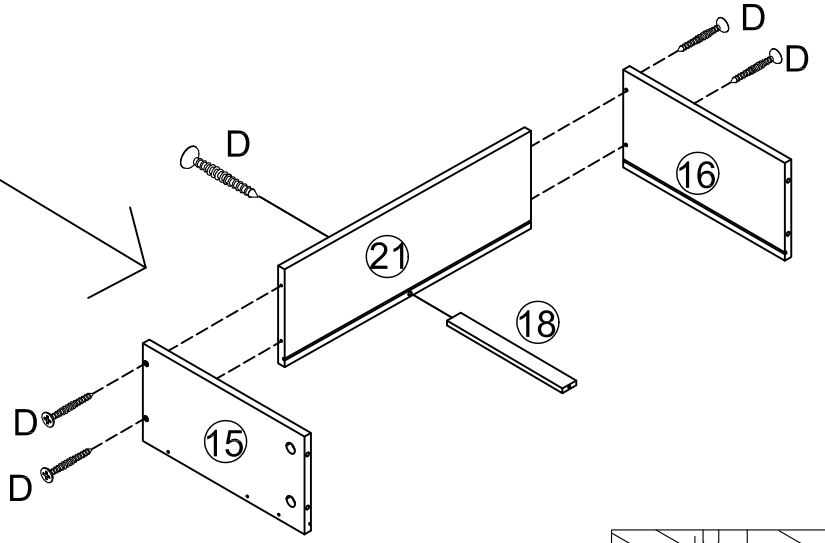


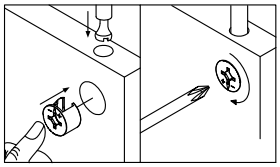

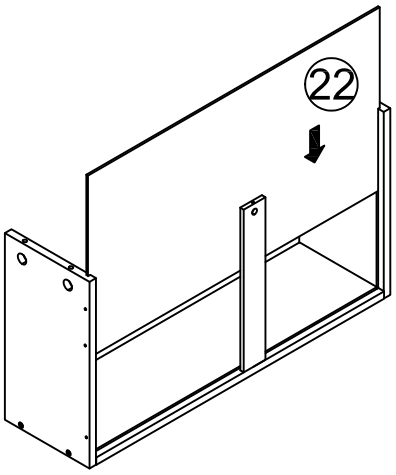

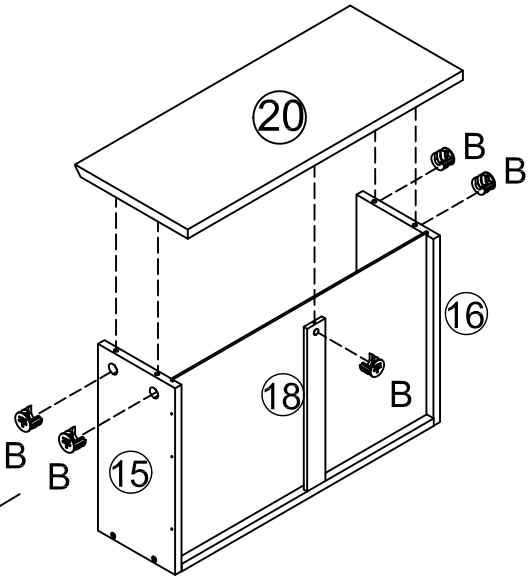

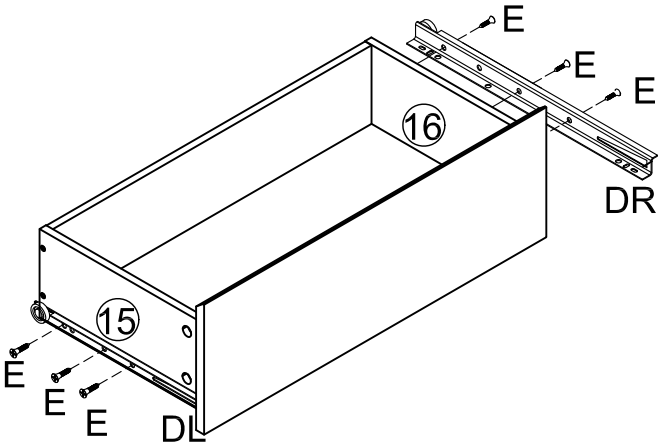


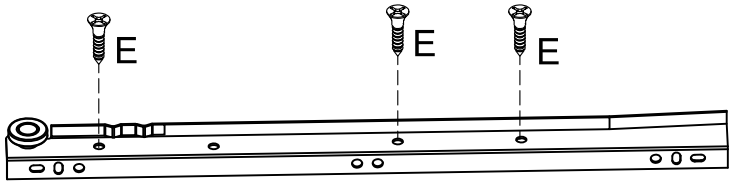



D x20 *M4 x 35 mm*	B x20	A x20
E x24 *M3 x 12 mm*	DLx4	DRx4


STEP 23


x3

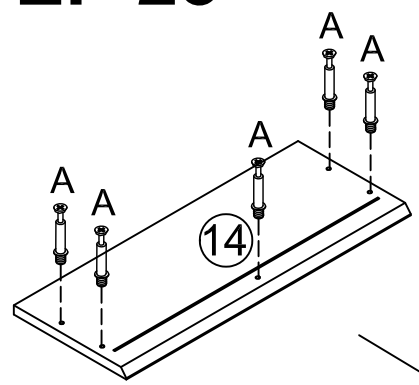


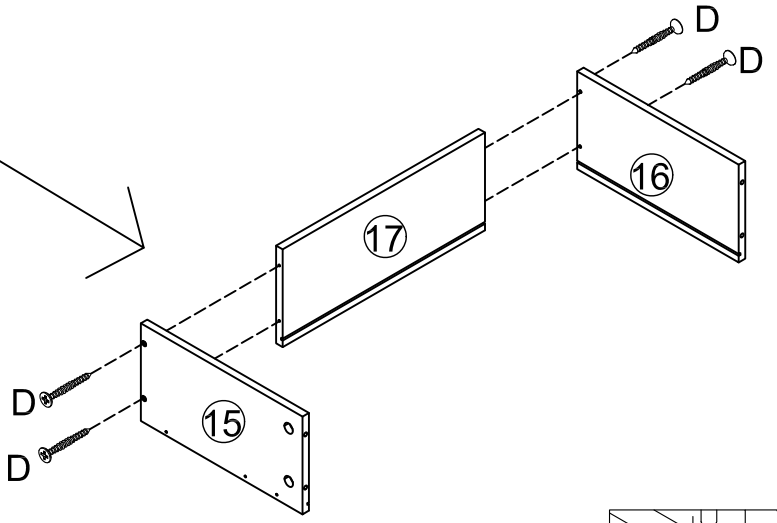


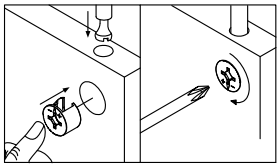

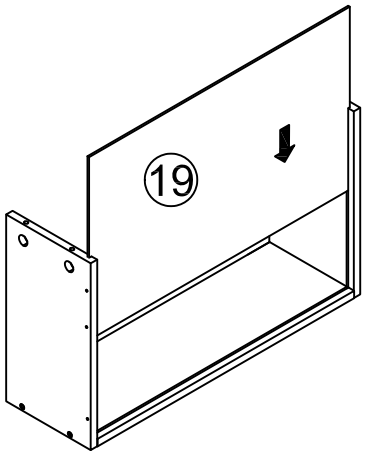

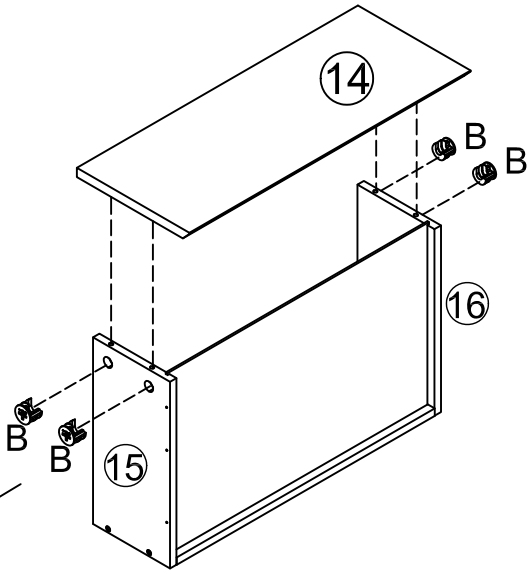


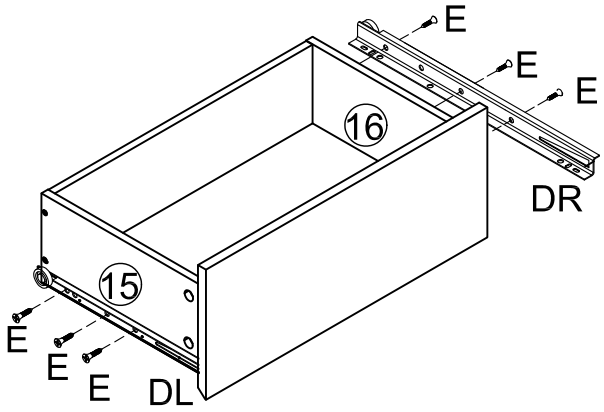

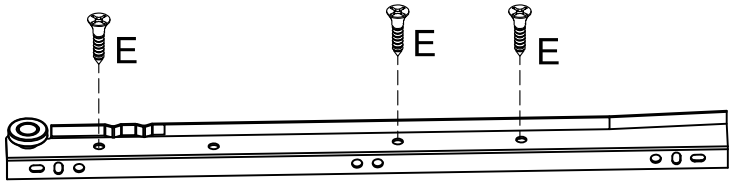

D x12 *M4 x 35 mm*	B x12	A x12
E x18 *M3 x 12 mm*	DLx3	DRx3


STEP 24

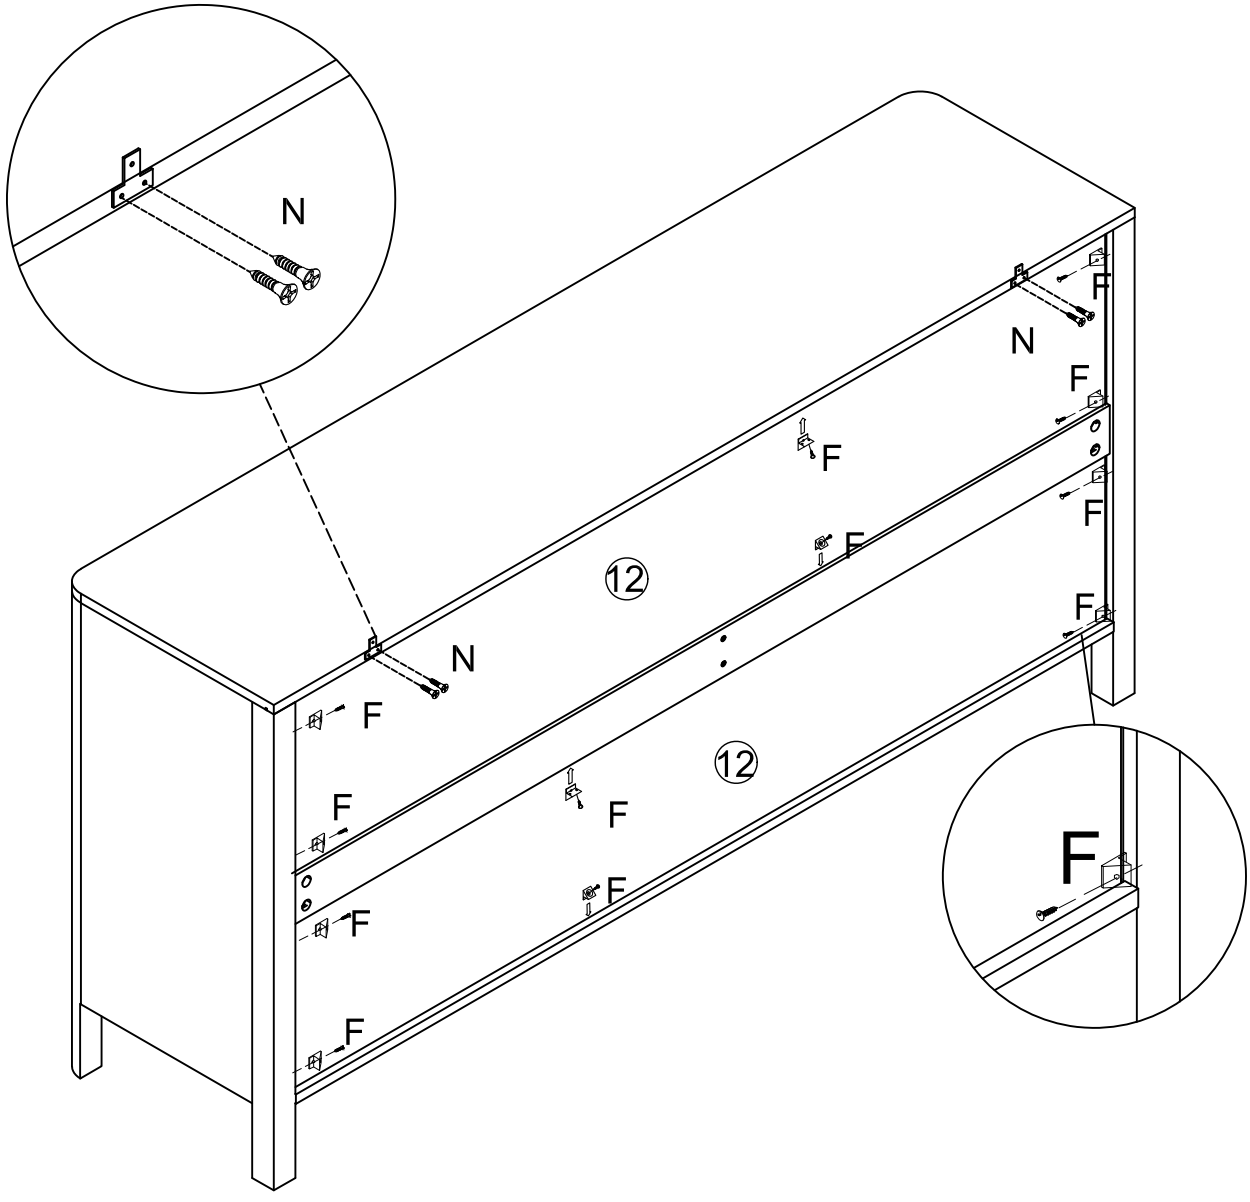


Fx12

Nx2

STEP 25

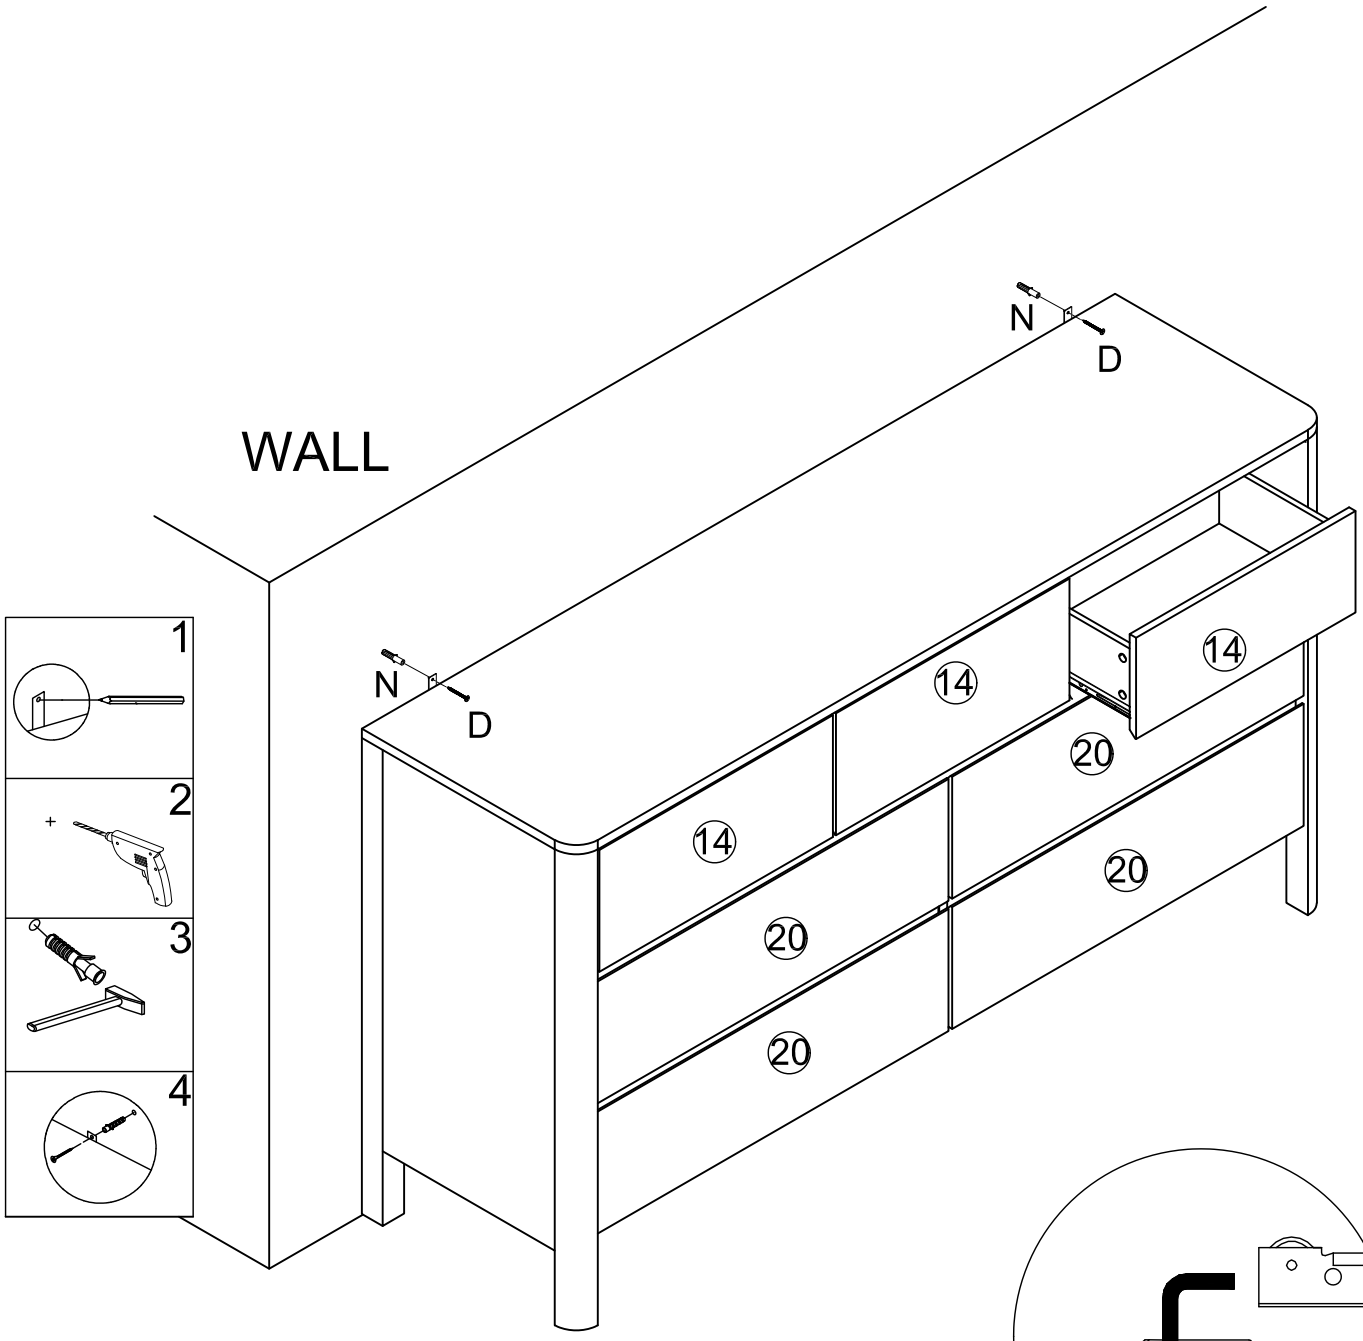

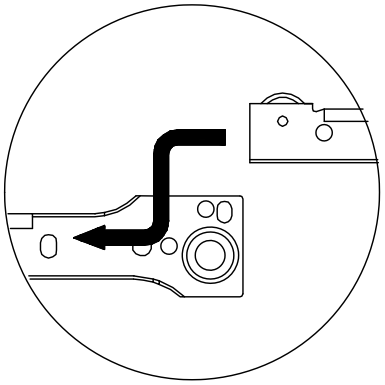

Installation of anti-tipping decorations. Installing the cabinet on the wall using part(D)andpart(N). Theinstallation position is asshown in the figure below



Nx2



Dx2

M4 x 35 mm