

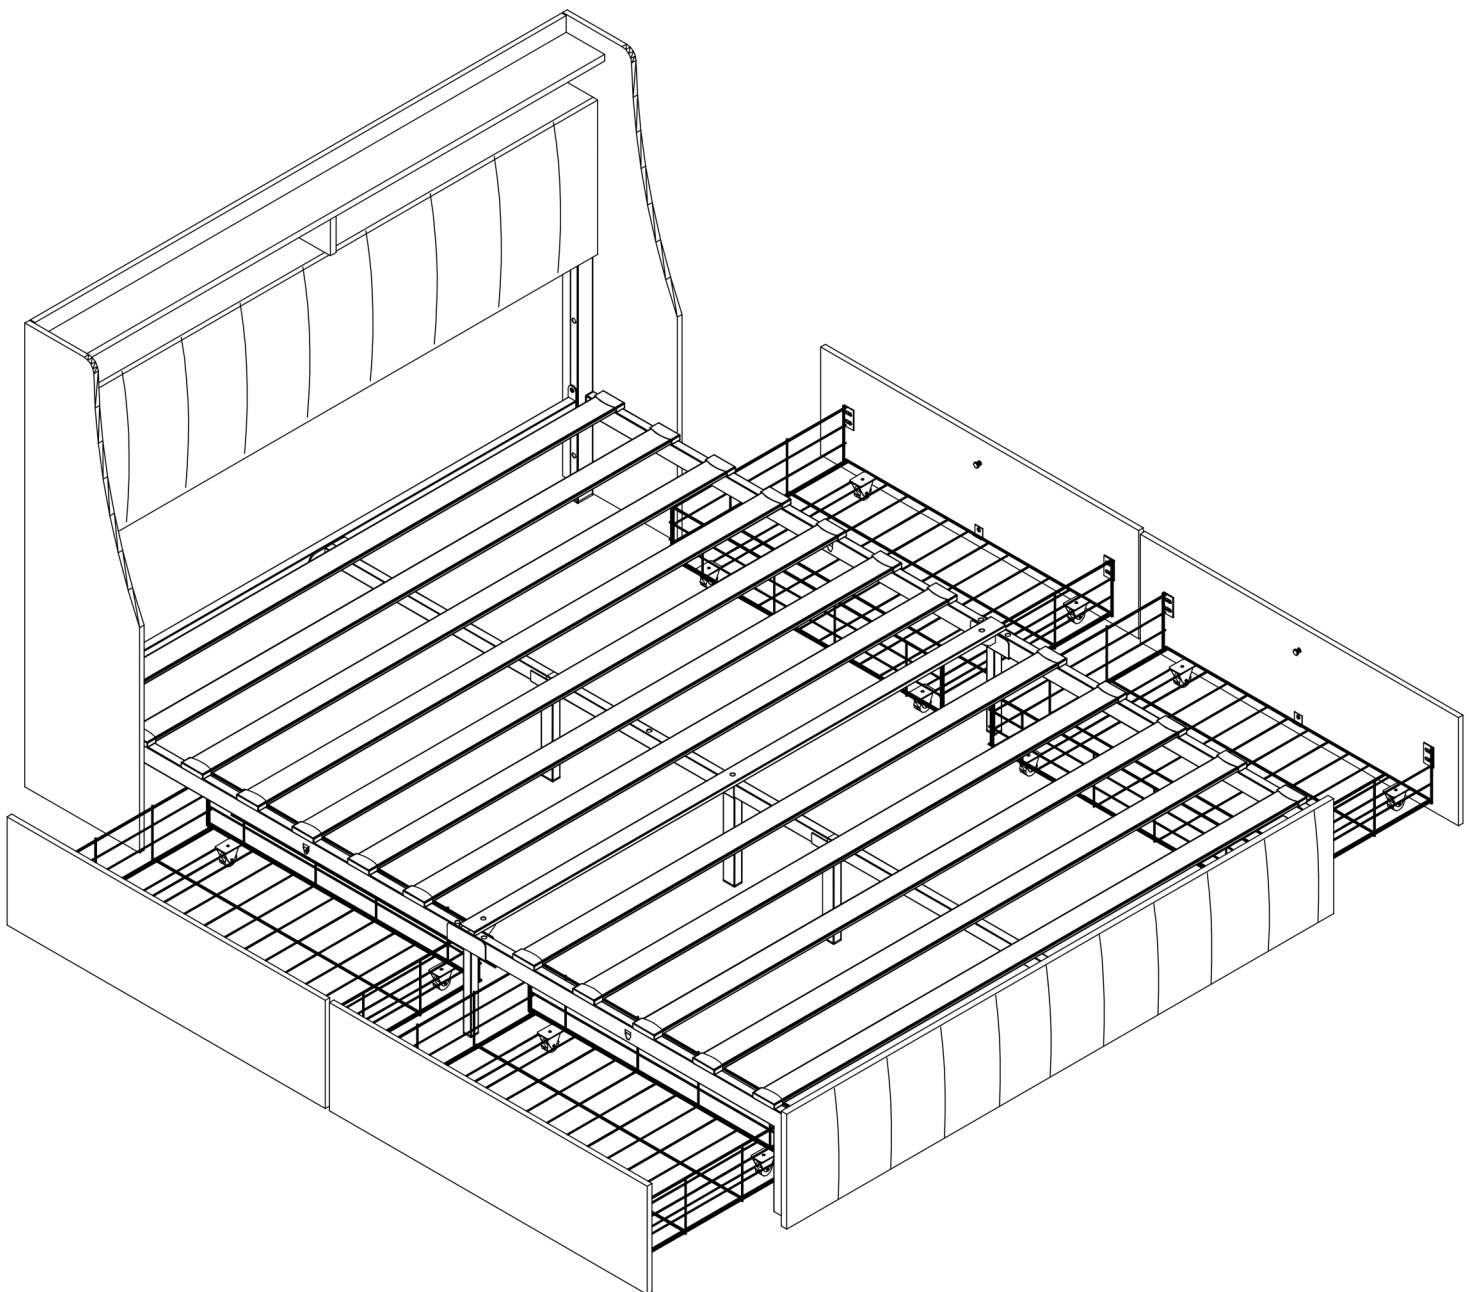


Assembly Instruction

LED Bed frame with 4 drawers

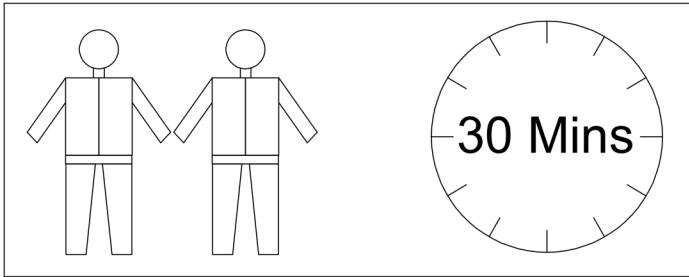

Parts Check List



















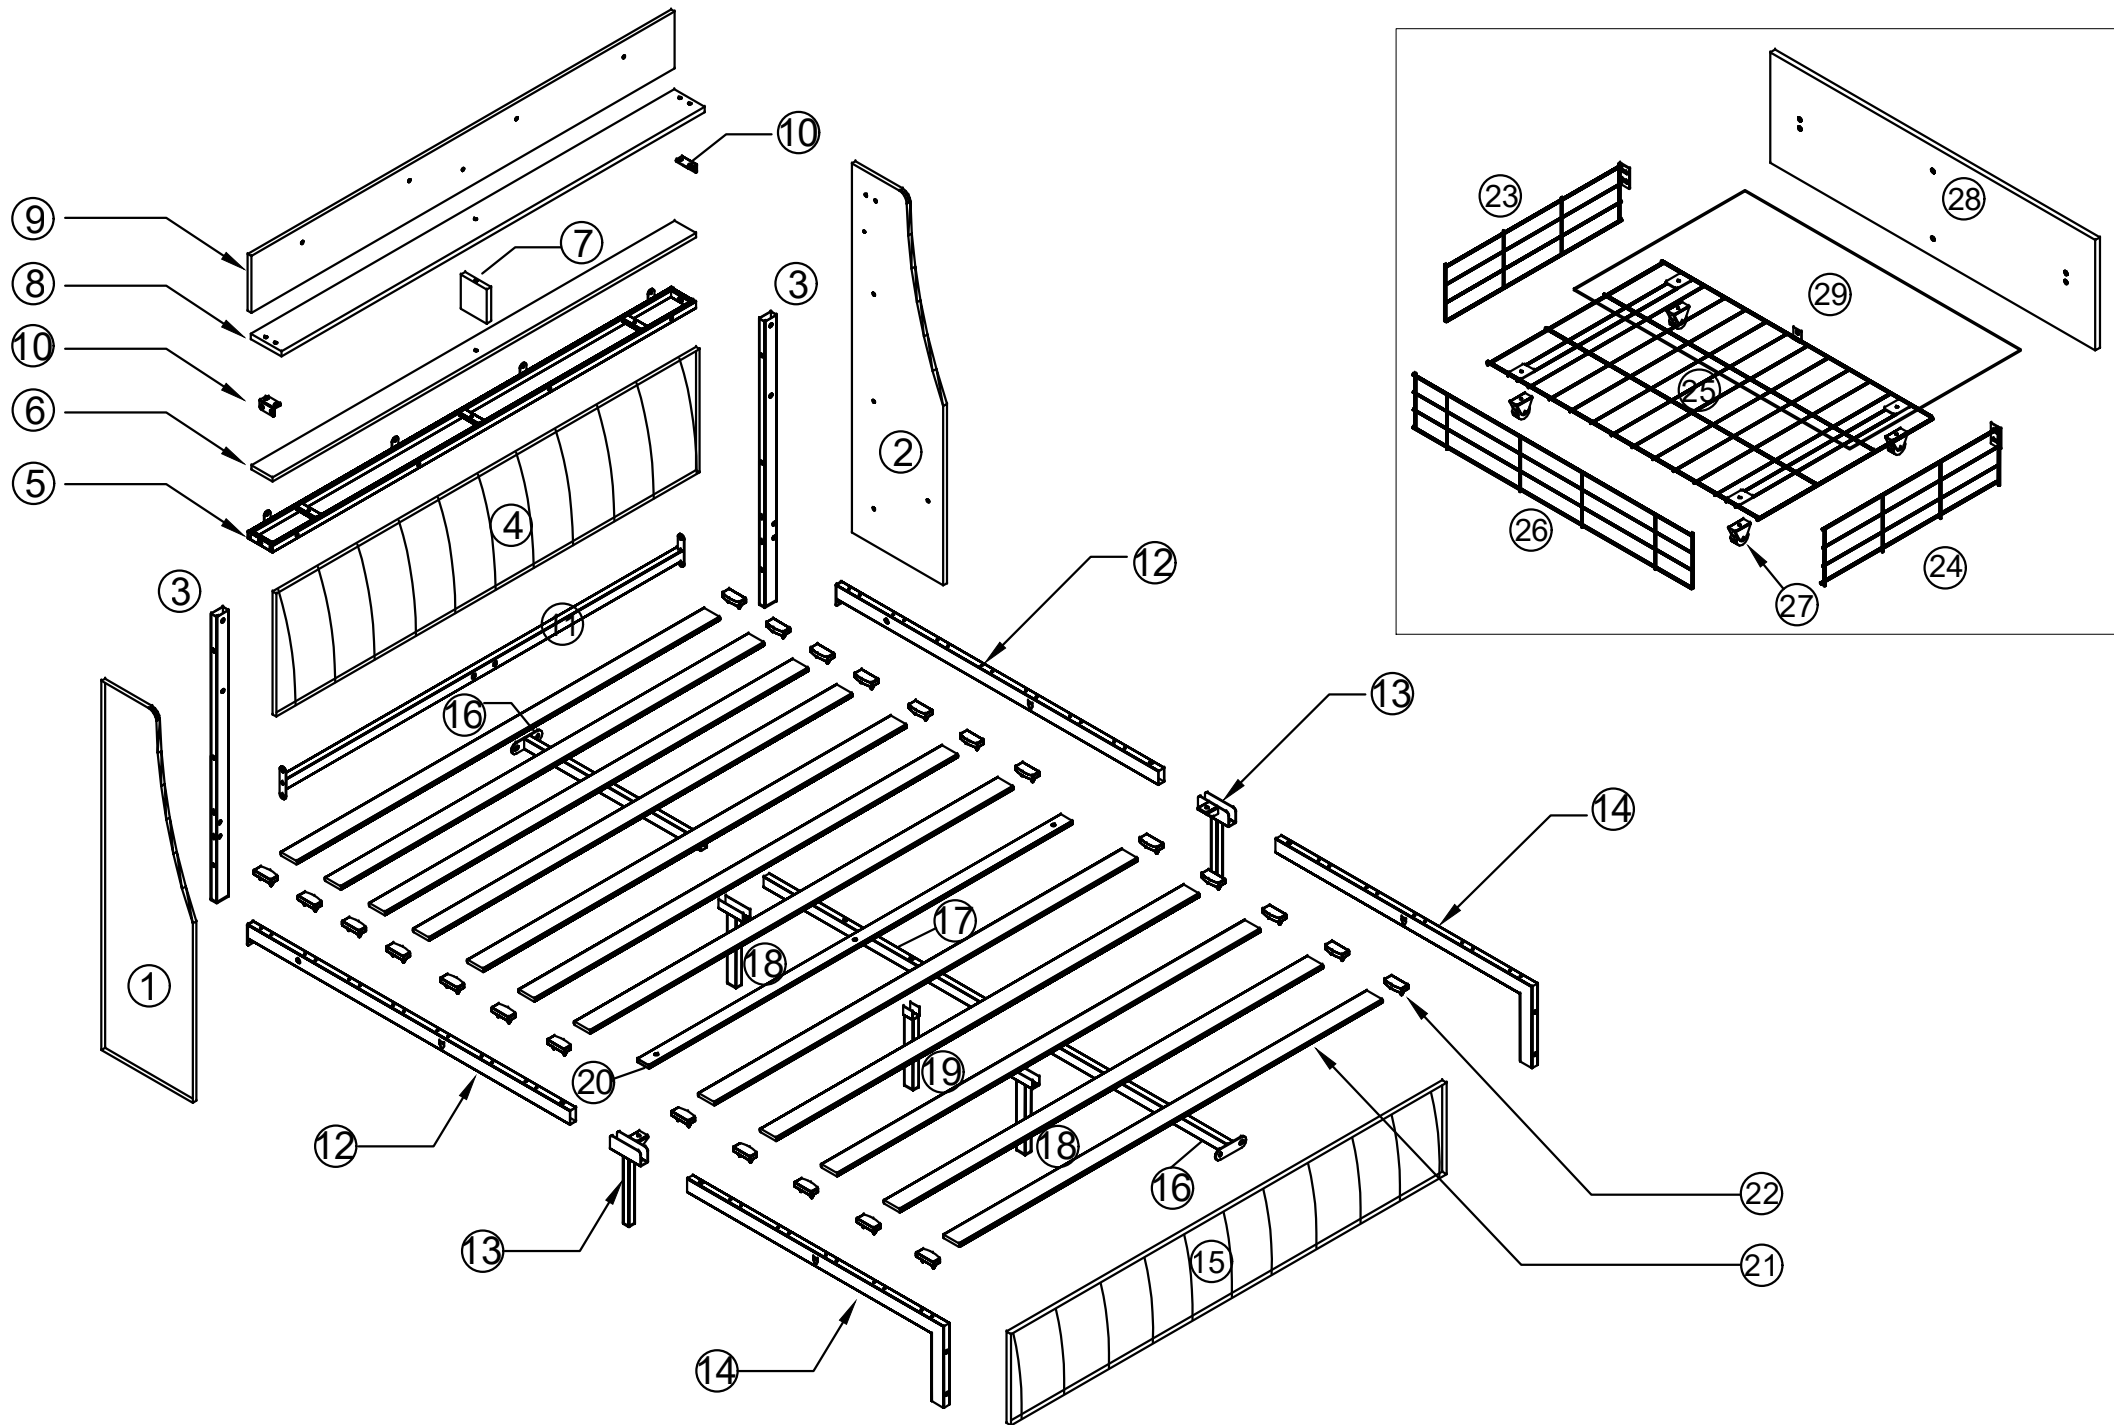



Parts List

Reminder:



1- This bed is combo product, it should come with 2 packages. You may take few time to receive both package after order. Thank you for your understanding.

2- Kindly please check the list below and confirm you receive all stuff from the package. If you find something missing, please contact us as soon as possible and we think we will find a solution together.

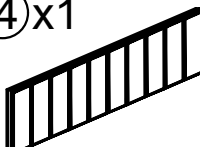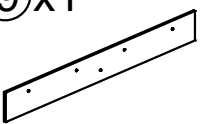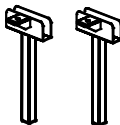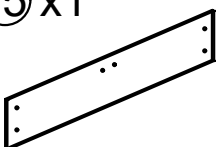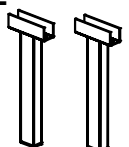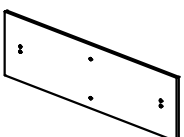①x1 	②x1 	③x2 	④x1 	⑤x1 	⑥x1 
⑦x1 	⑧x1 	⑨x1 	⑩x2 	⑪x1 	⑫x2 
⑬x2 	⑭x2 	⑮x1 	⑯x2 	⑰x1 	⑱x2 
⑲x1 	⑳x1 	㉑x12 	㉒x24 	㉓x4 	㉔x4 
㉕x4 	㉖x4 	㉗x16 	㉘x4 	㉙x4 	㉚x44 
A*15  M8*50	B*10  M8*35	C*14  M8*20	D*32  M6*12	E*16  M4*10	F*6  M6*25
G*4 	H*4 	I*3 	Short Tapping J1*3 J2*4 Long Tapping		Allen Key for A / B / C
LED Strip	RF Remote	USB adapter	Driver for E/G/H/J		Allen Key for D / F

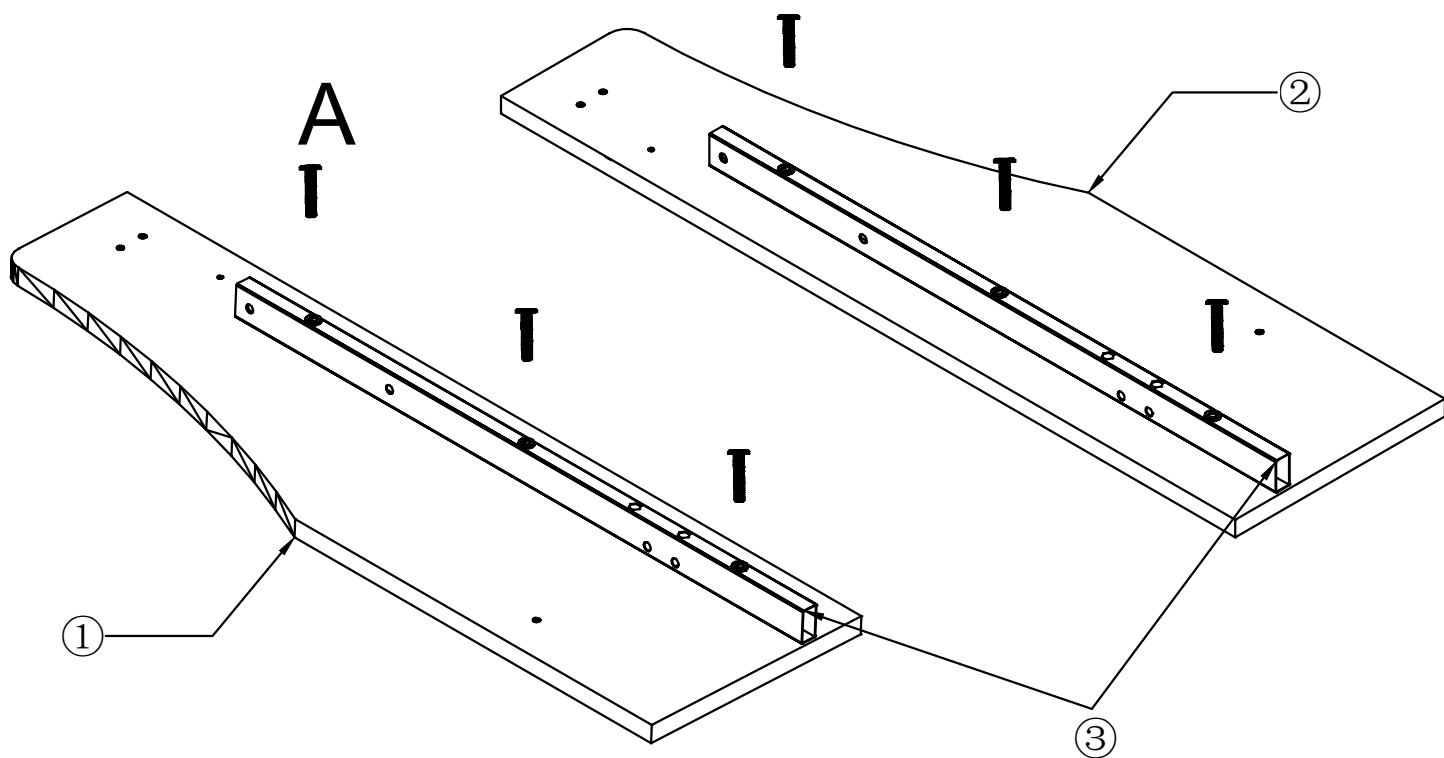



Step 1

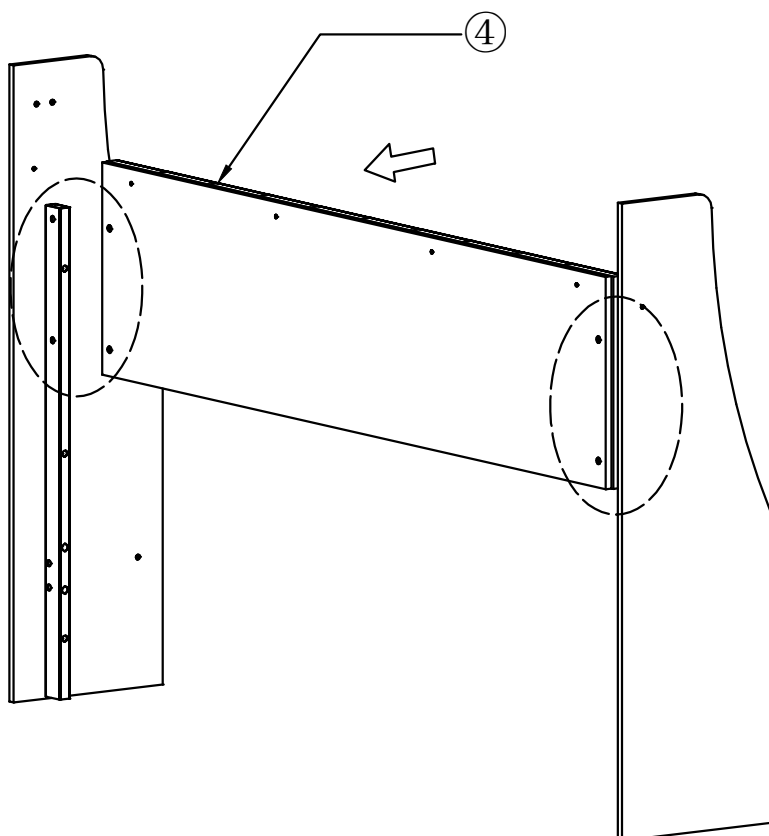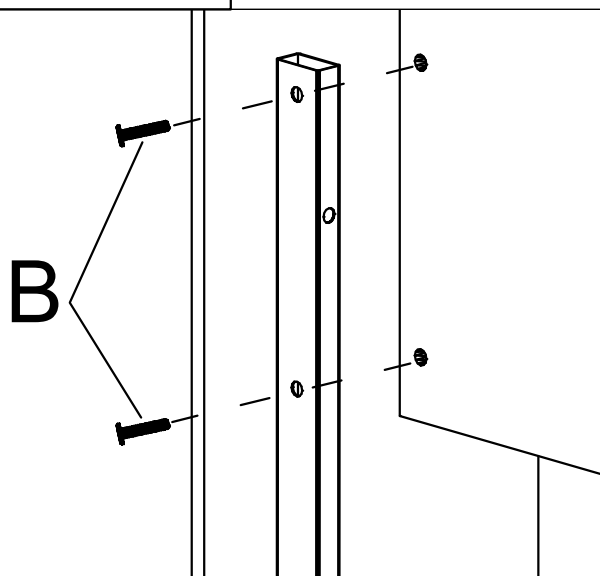

Step 2


Fx6

F

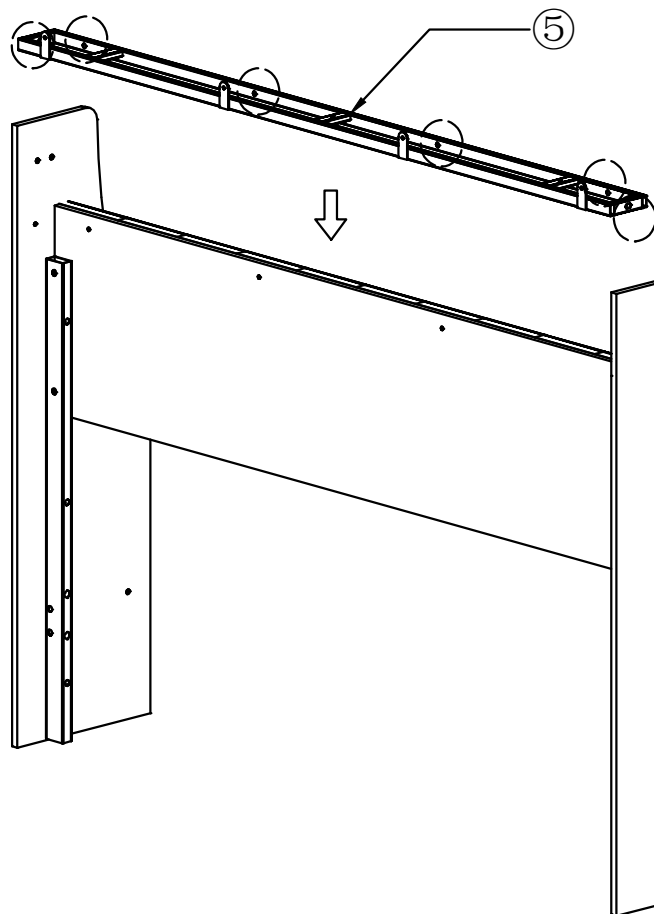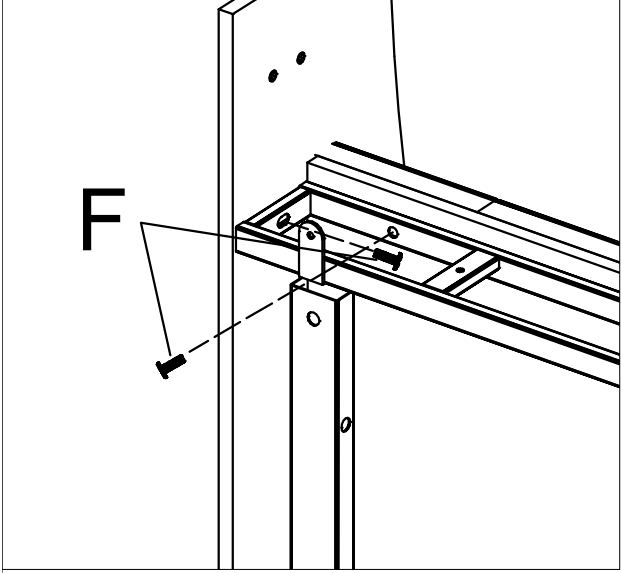


Step 3

J1


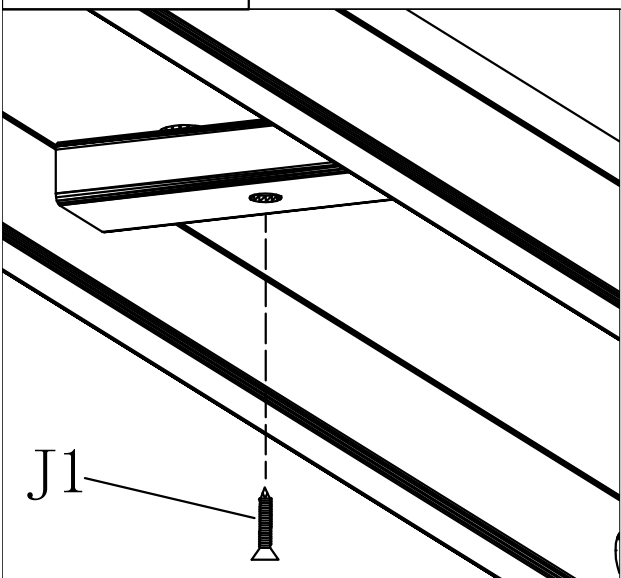


J1x3


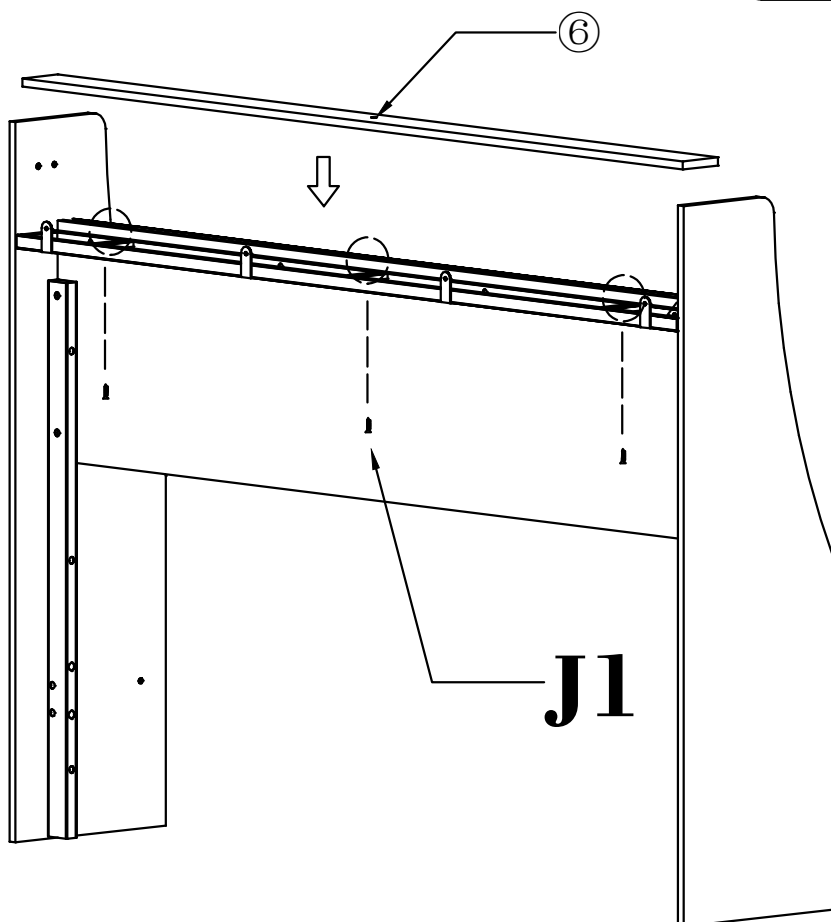


Step 4

Gx4

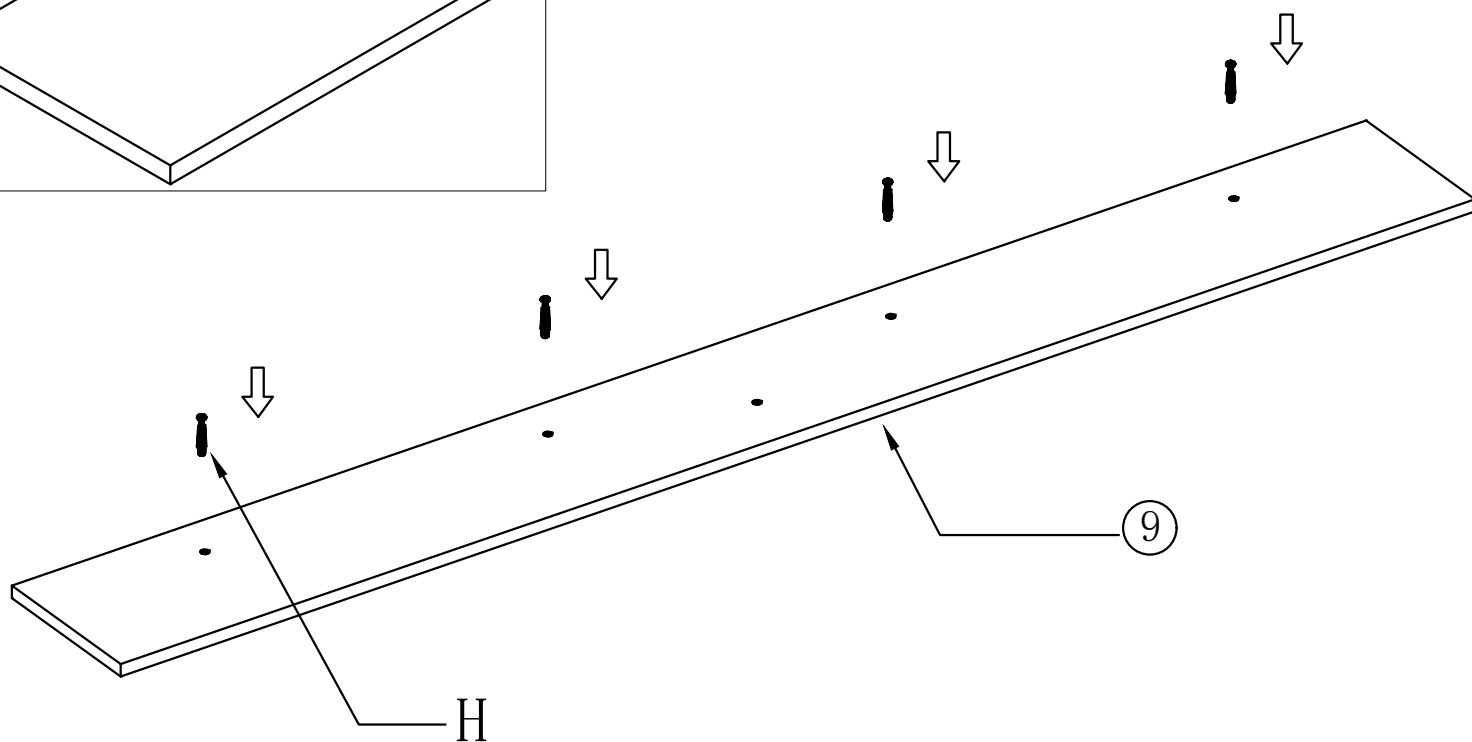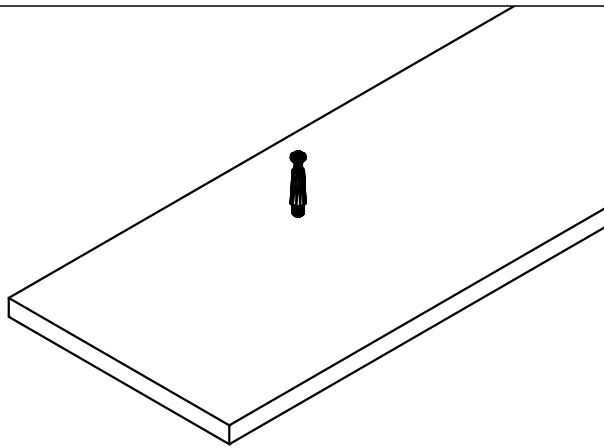


Step 5

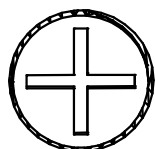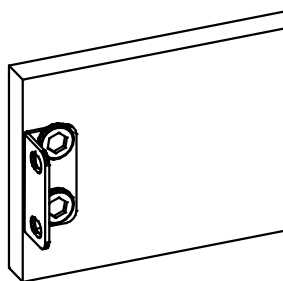


Tips: Please always keep the mark towards to the hole.

Dx4


Hx4

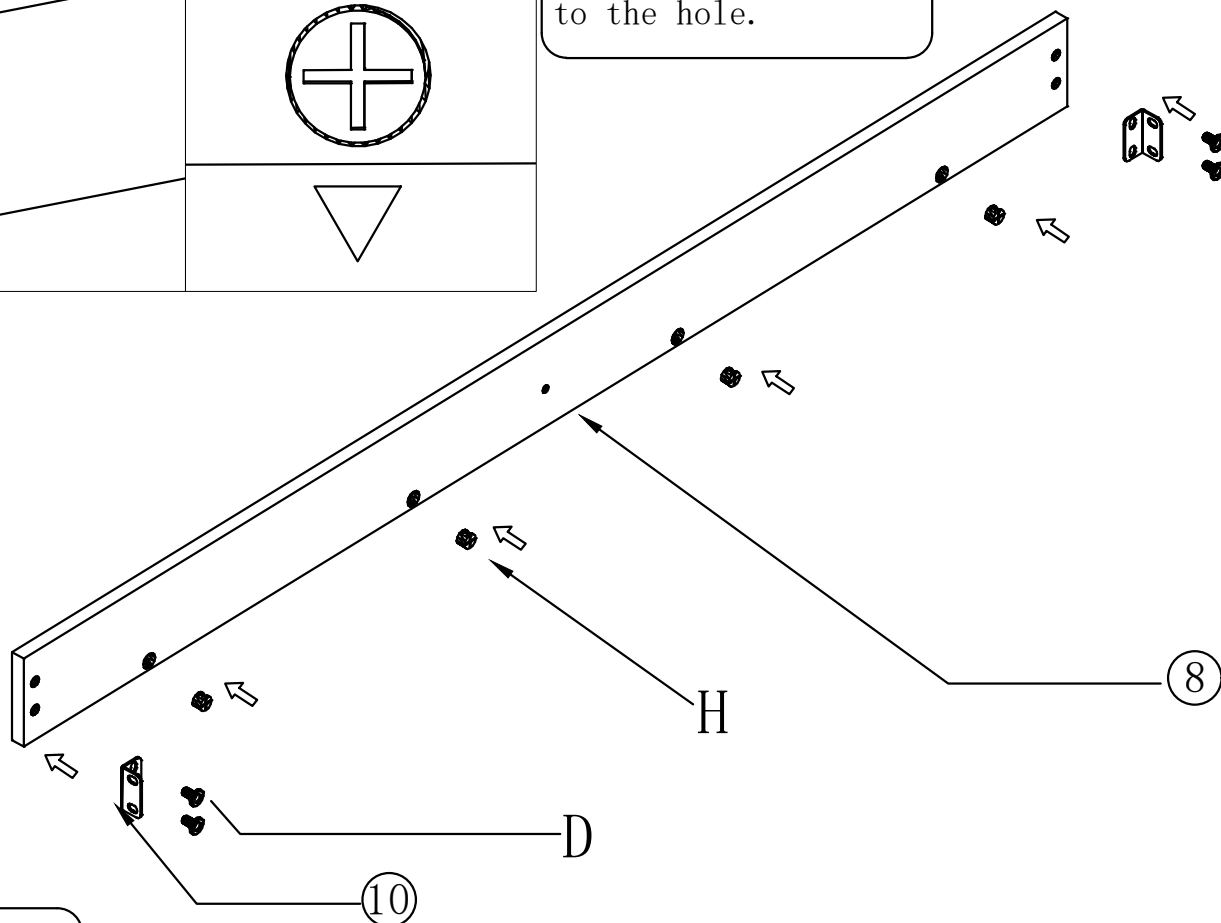


Step 6

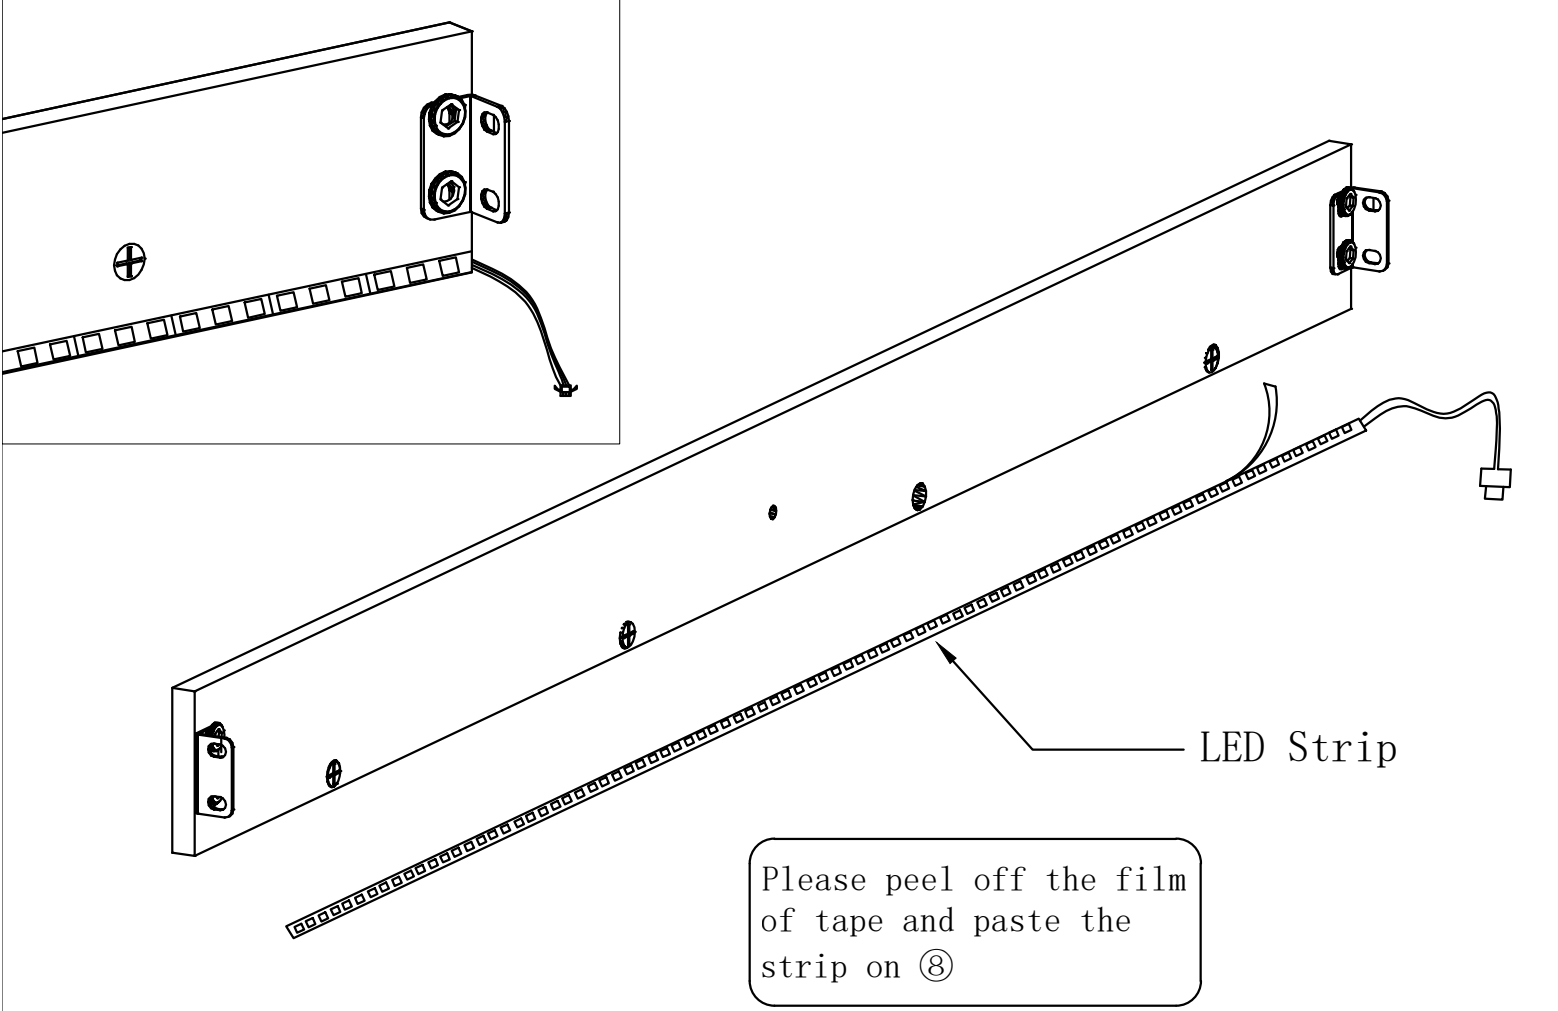


Step 7

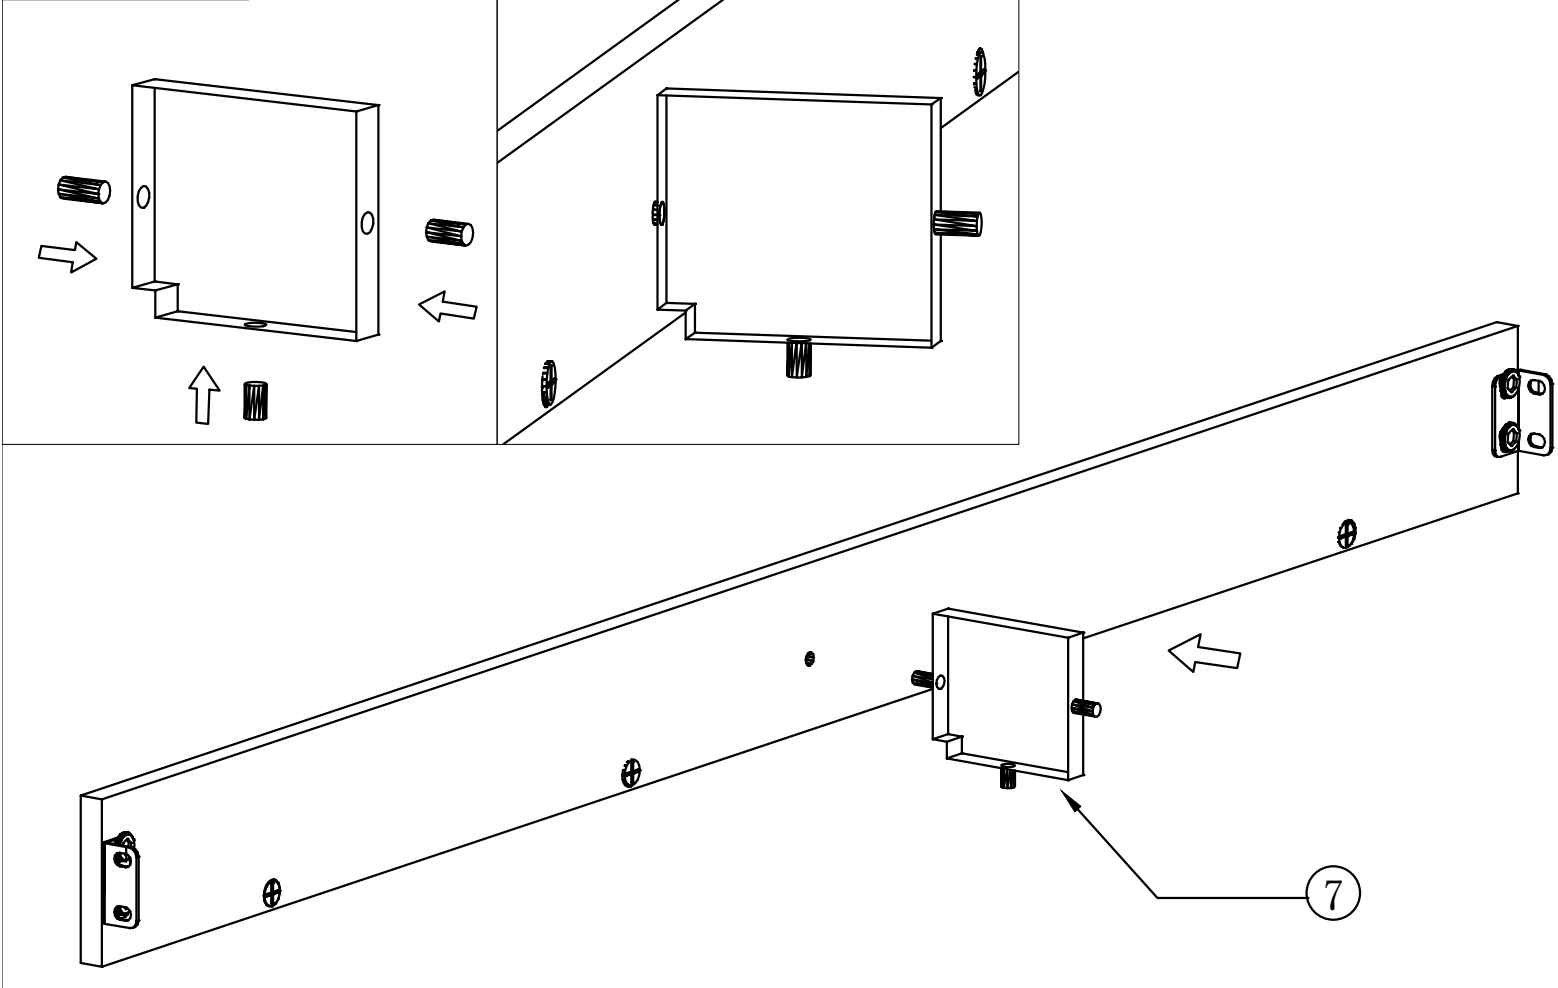


Step 8

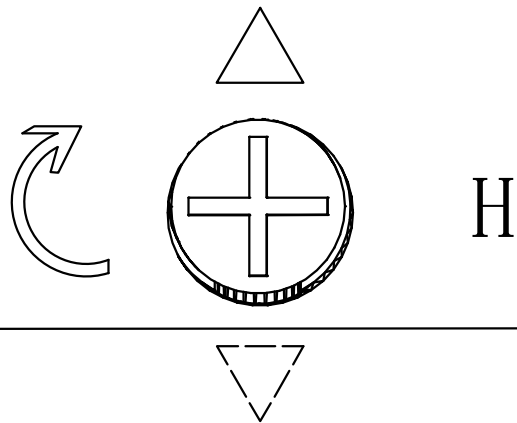


Align ⑦⑧on⑨ and screw
H until the mark turning
180°.

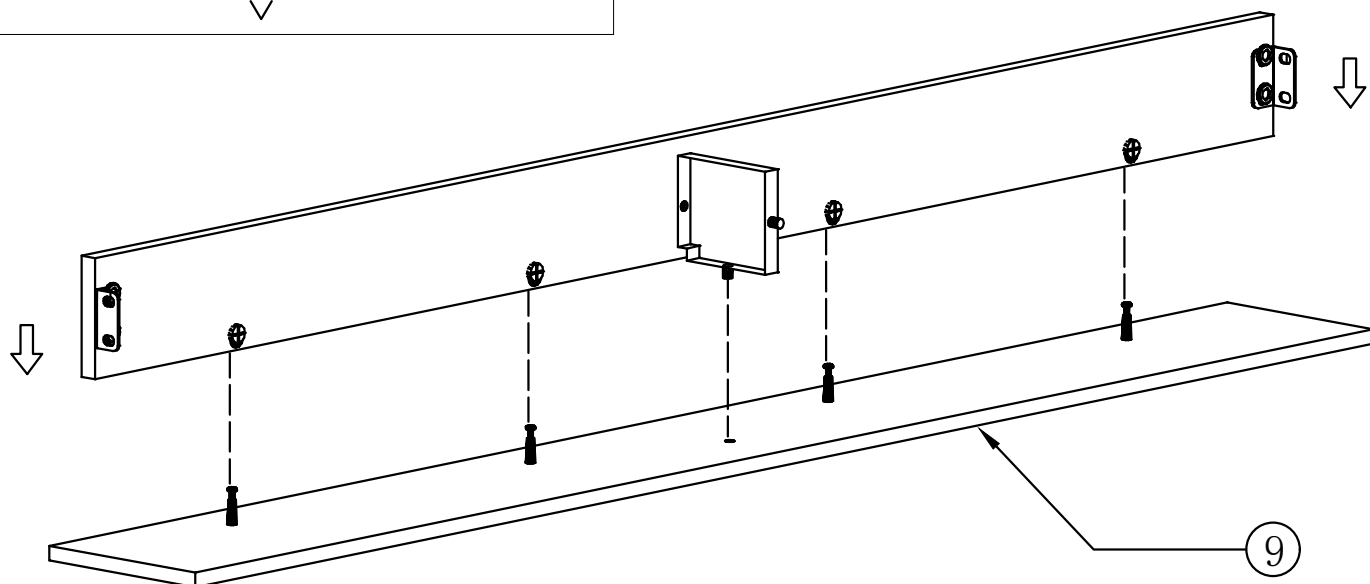

Step 9

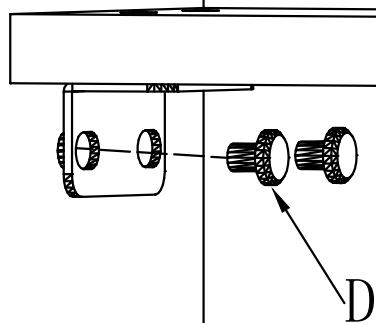


Dx4 J2x4

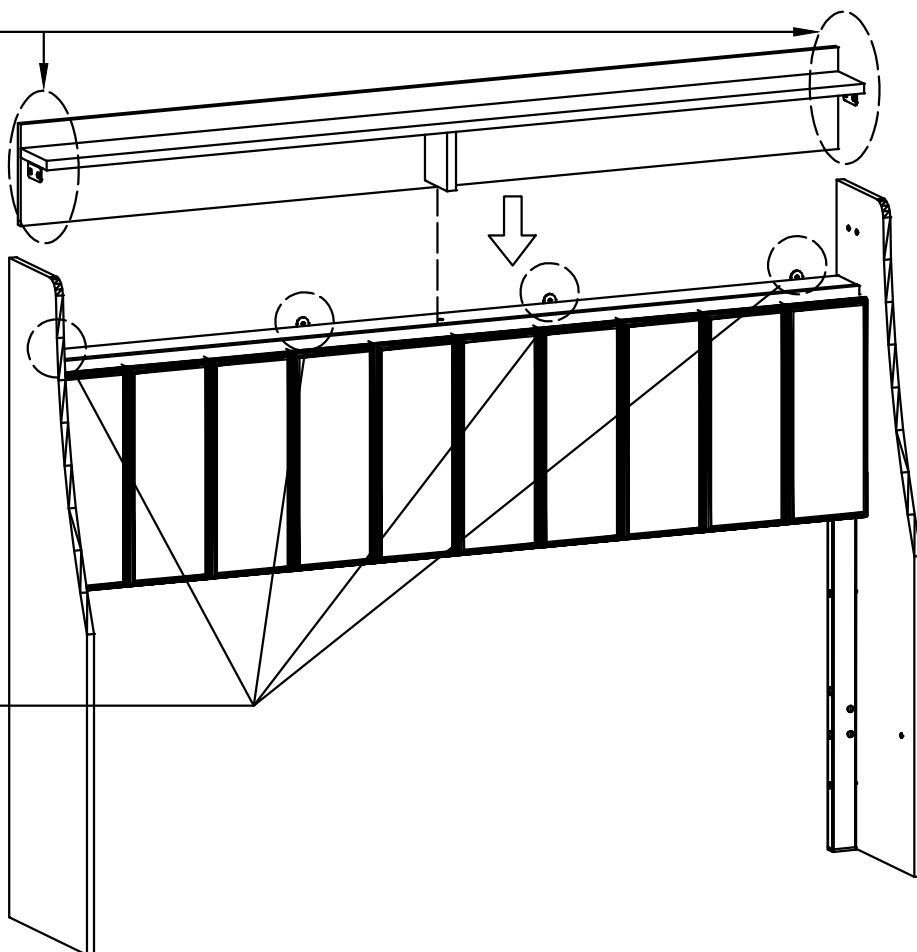

J2


Step 10

Cx4

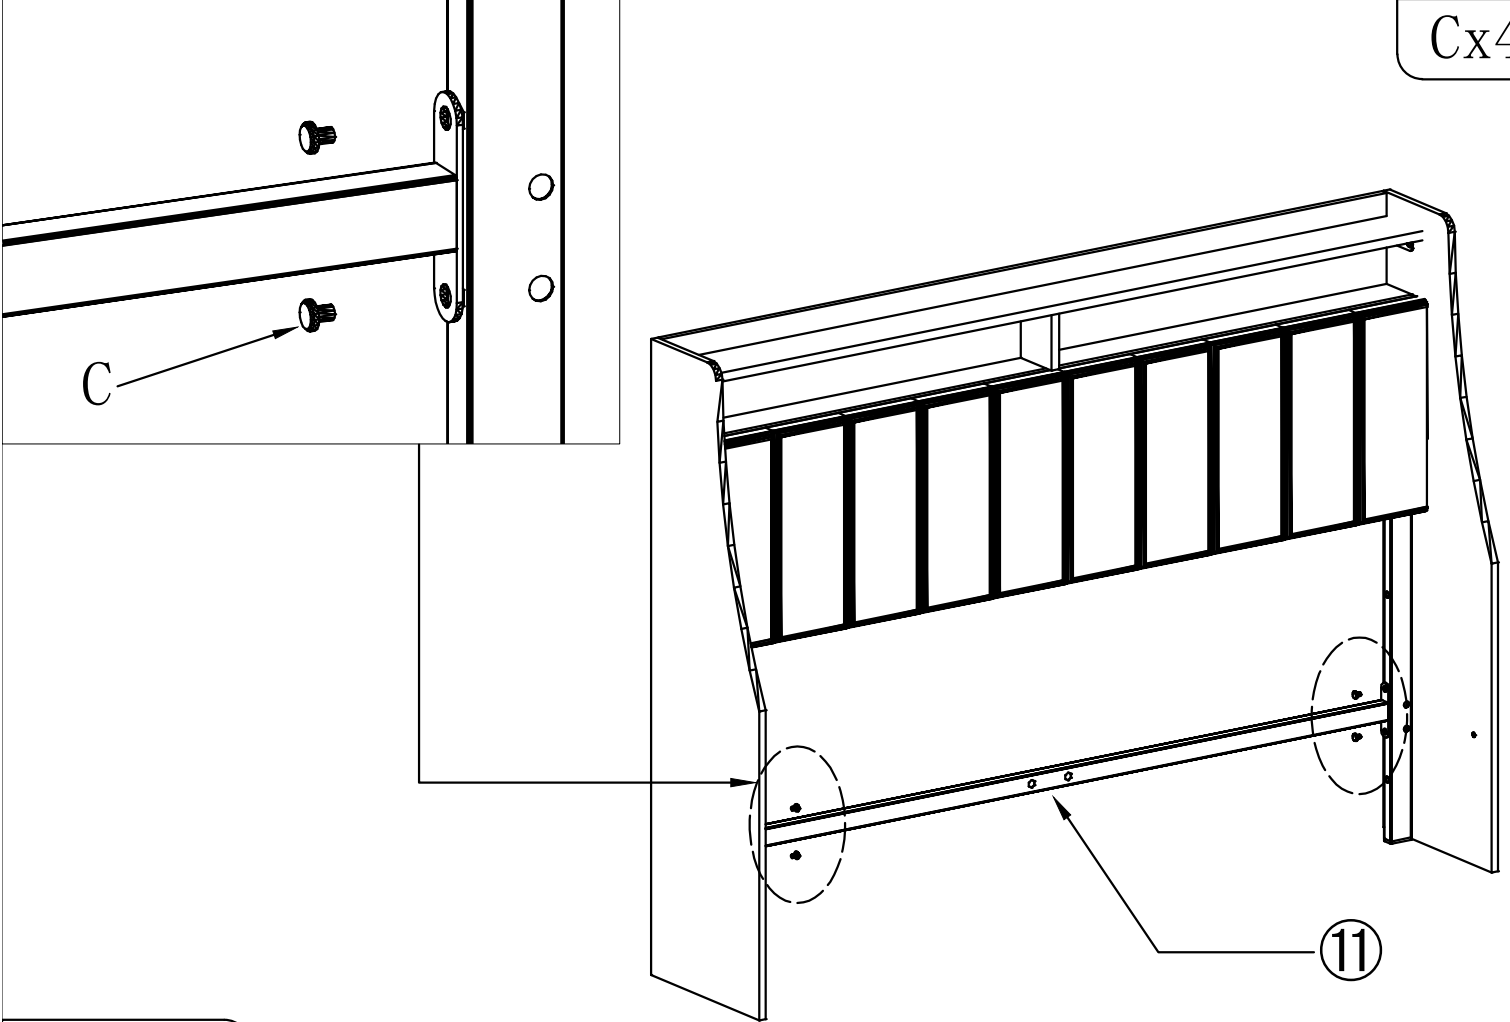


Step 11

Ax4

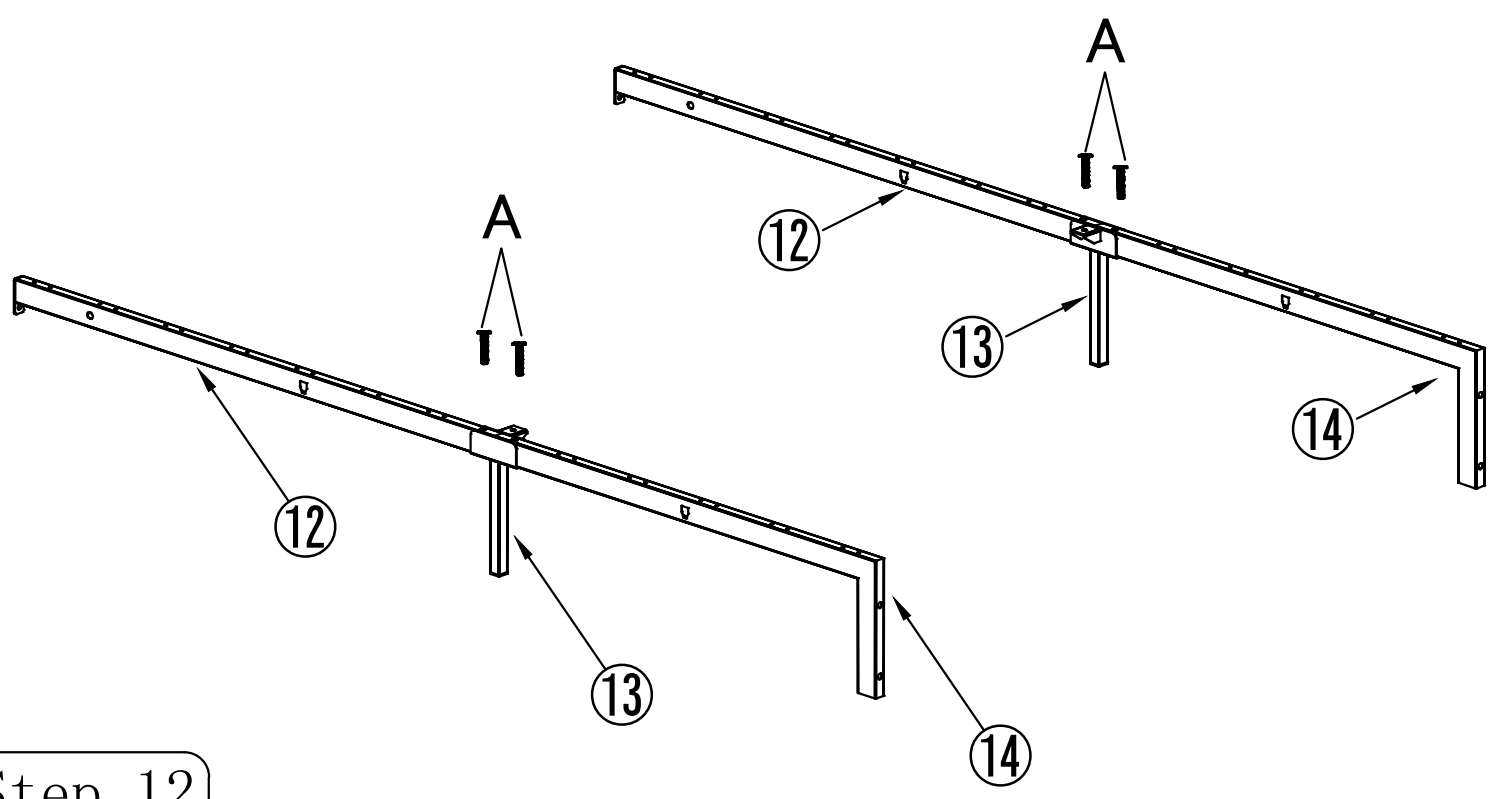

Step 12

Bx6

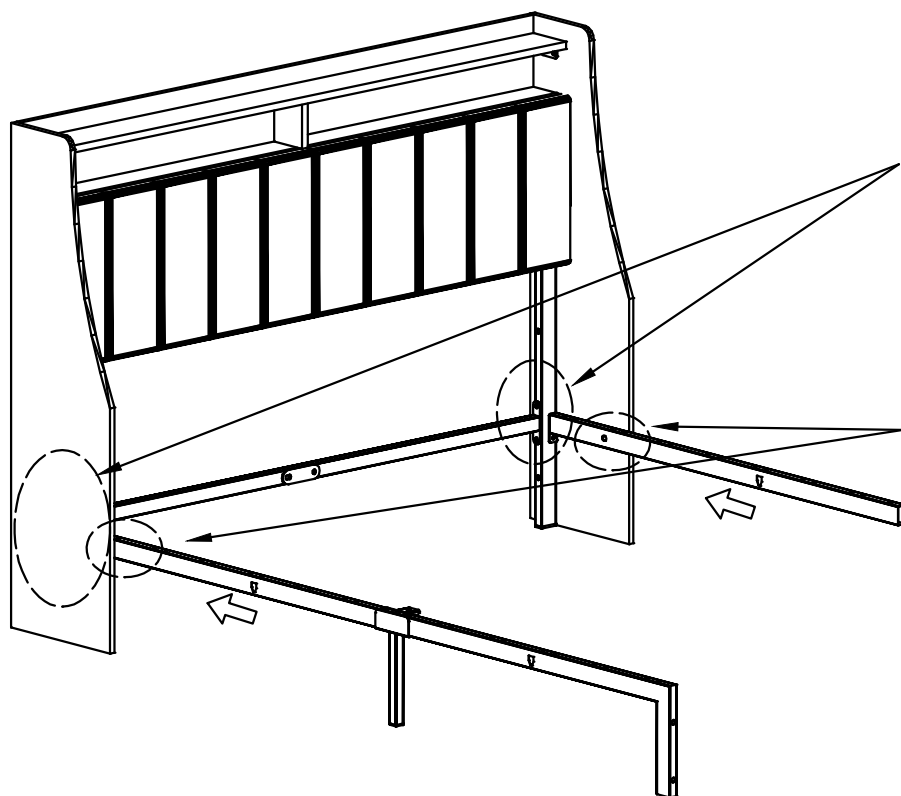


B

B

Step 13

Ax4

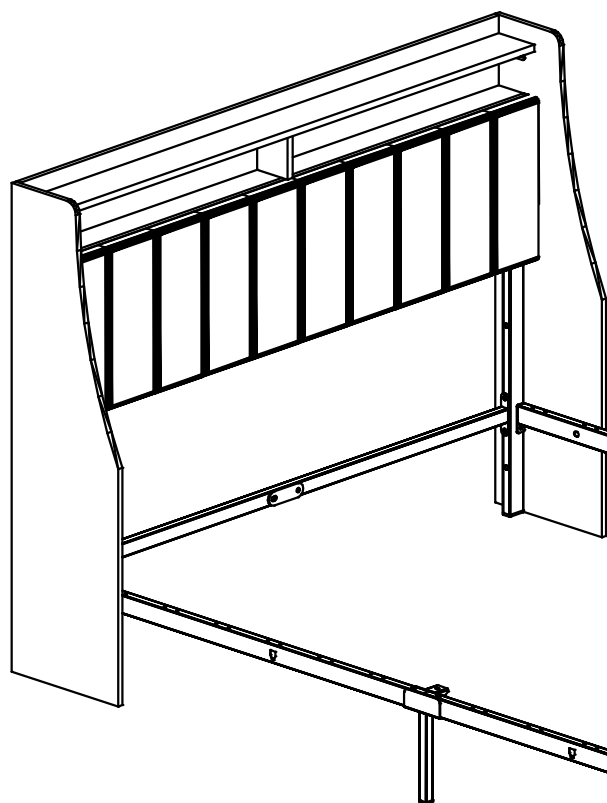


A

Step 14


15

Cx4

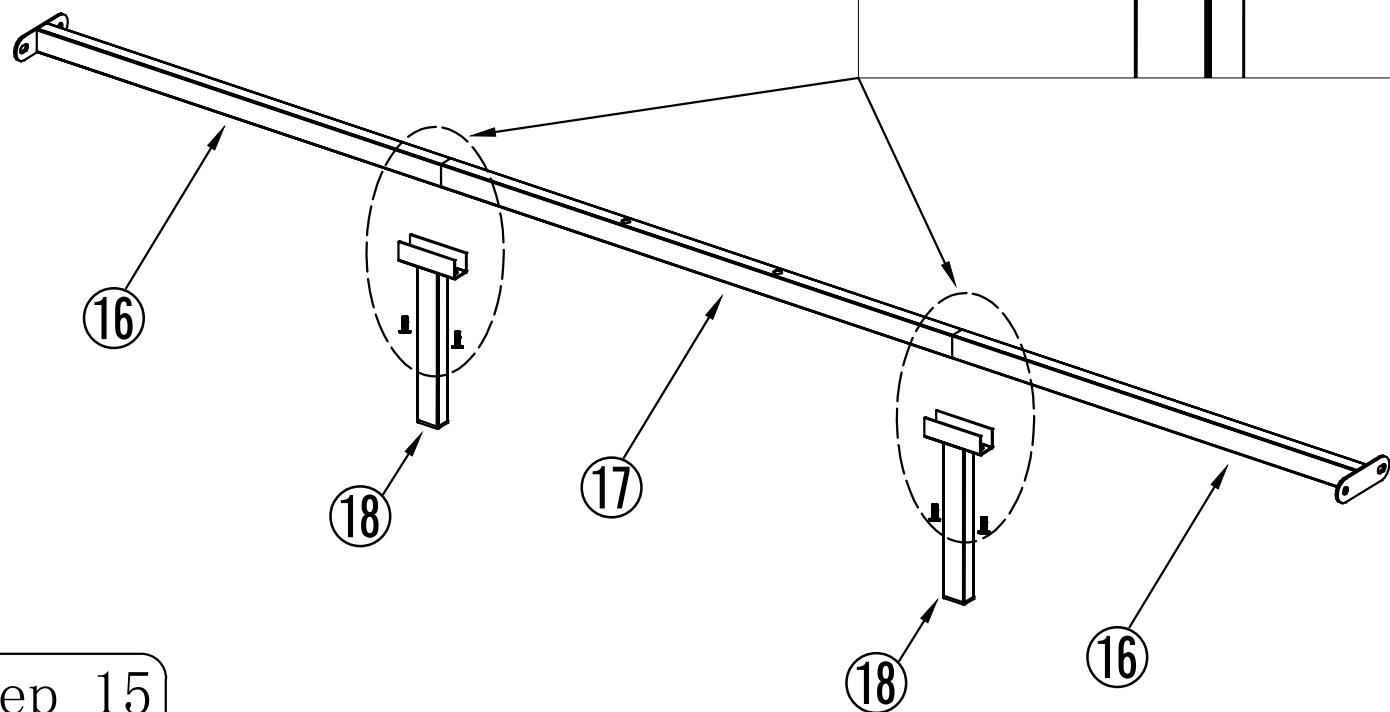



Step 15

Cx4

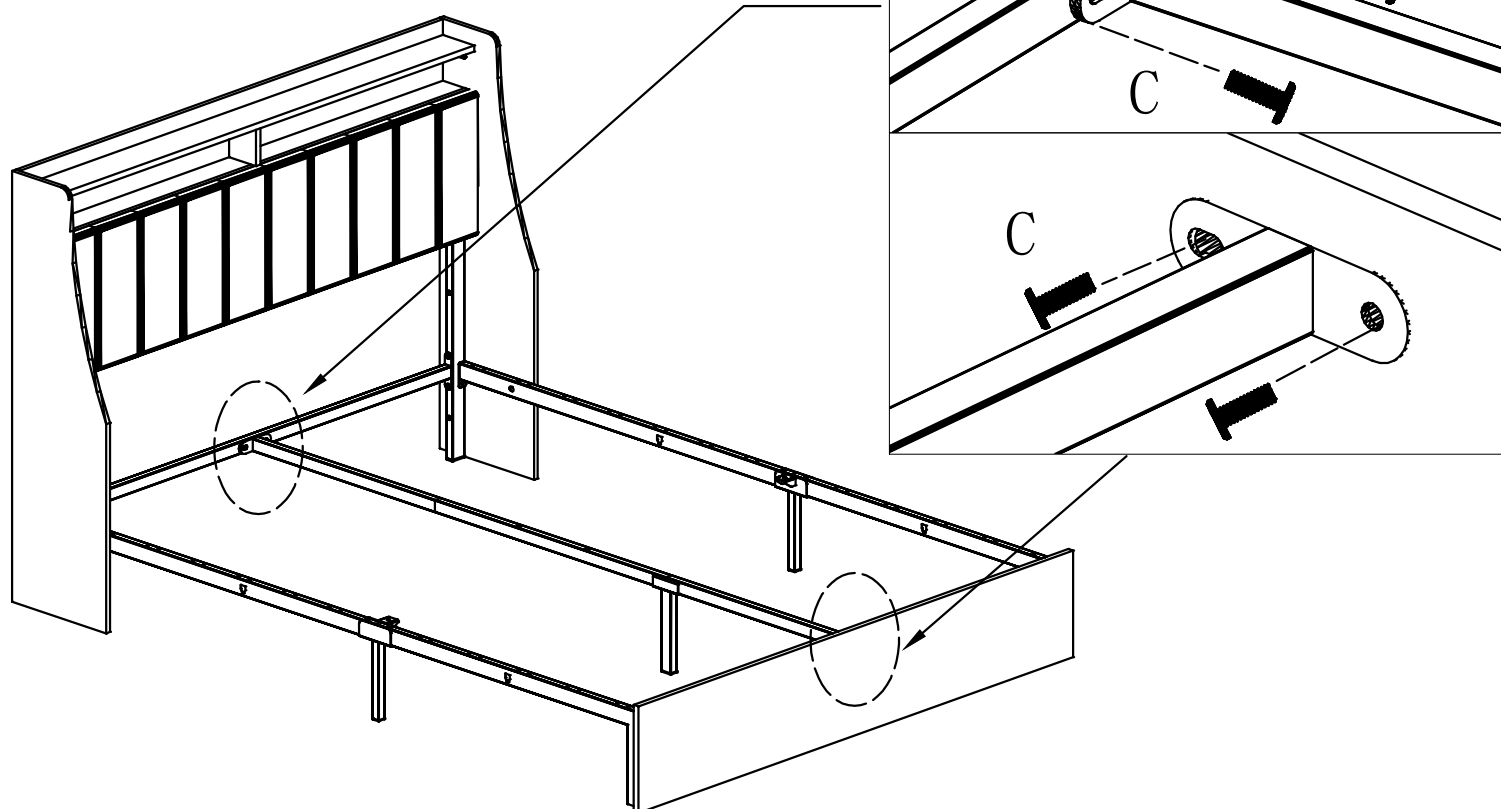



Step 16

Cx2

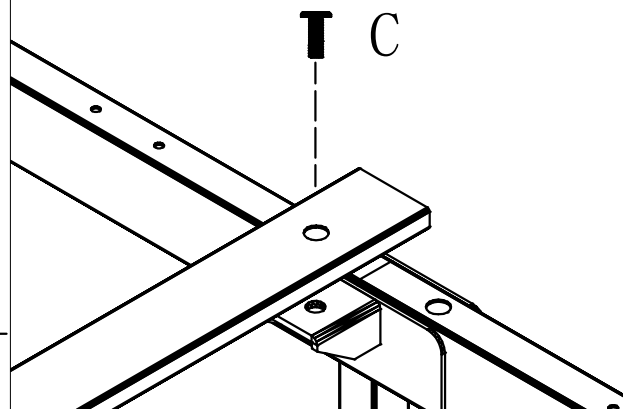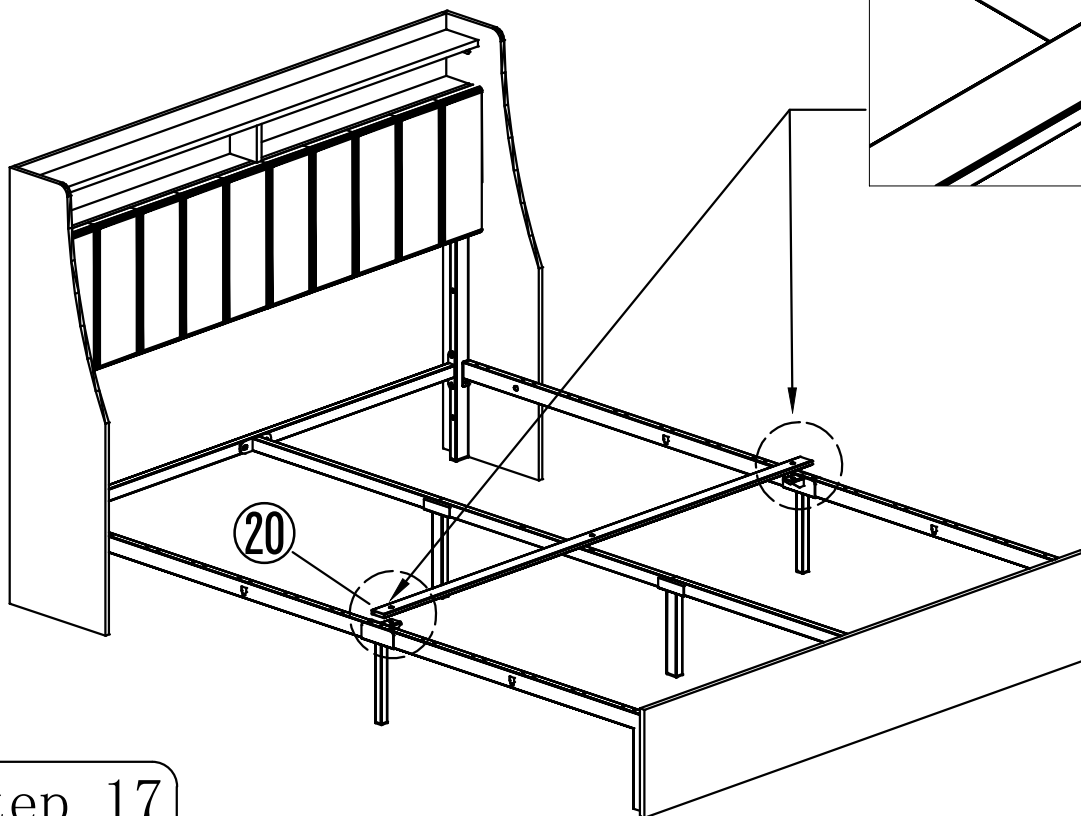


Step 17


Ax1

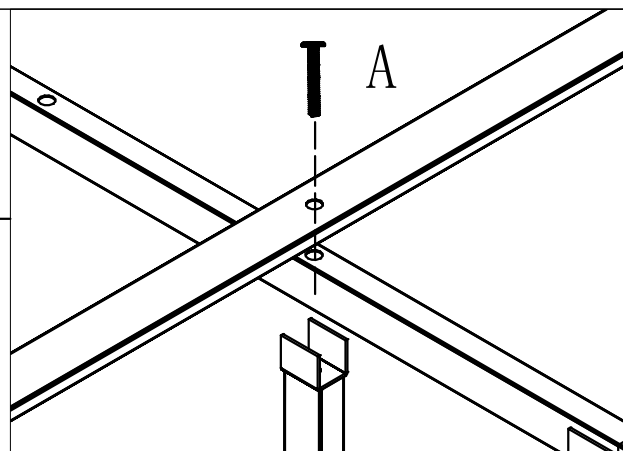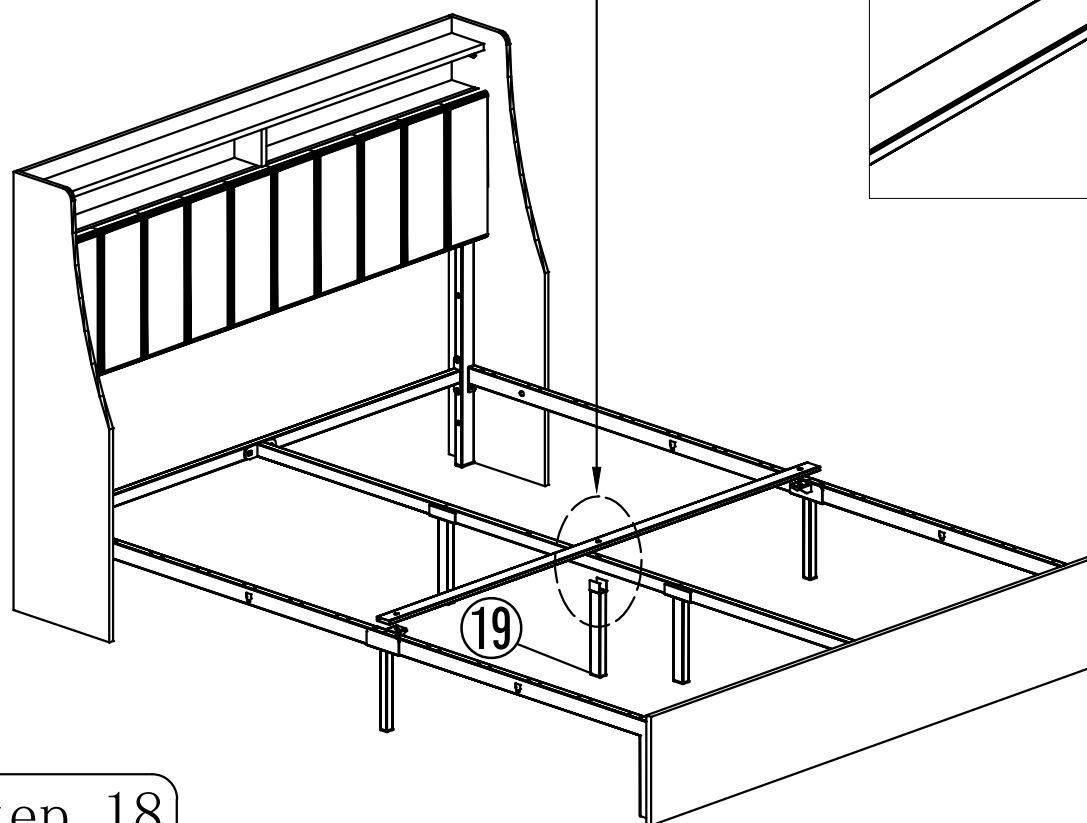


Step 18

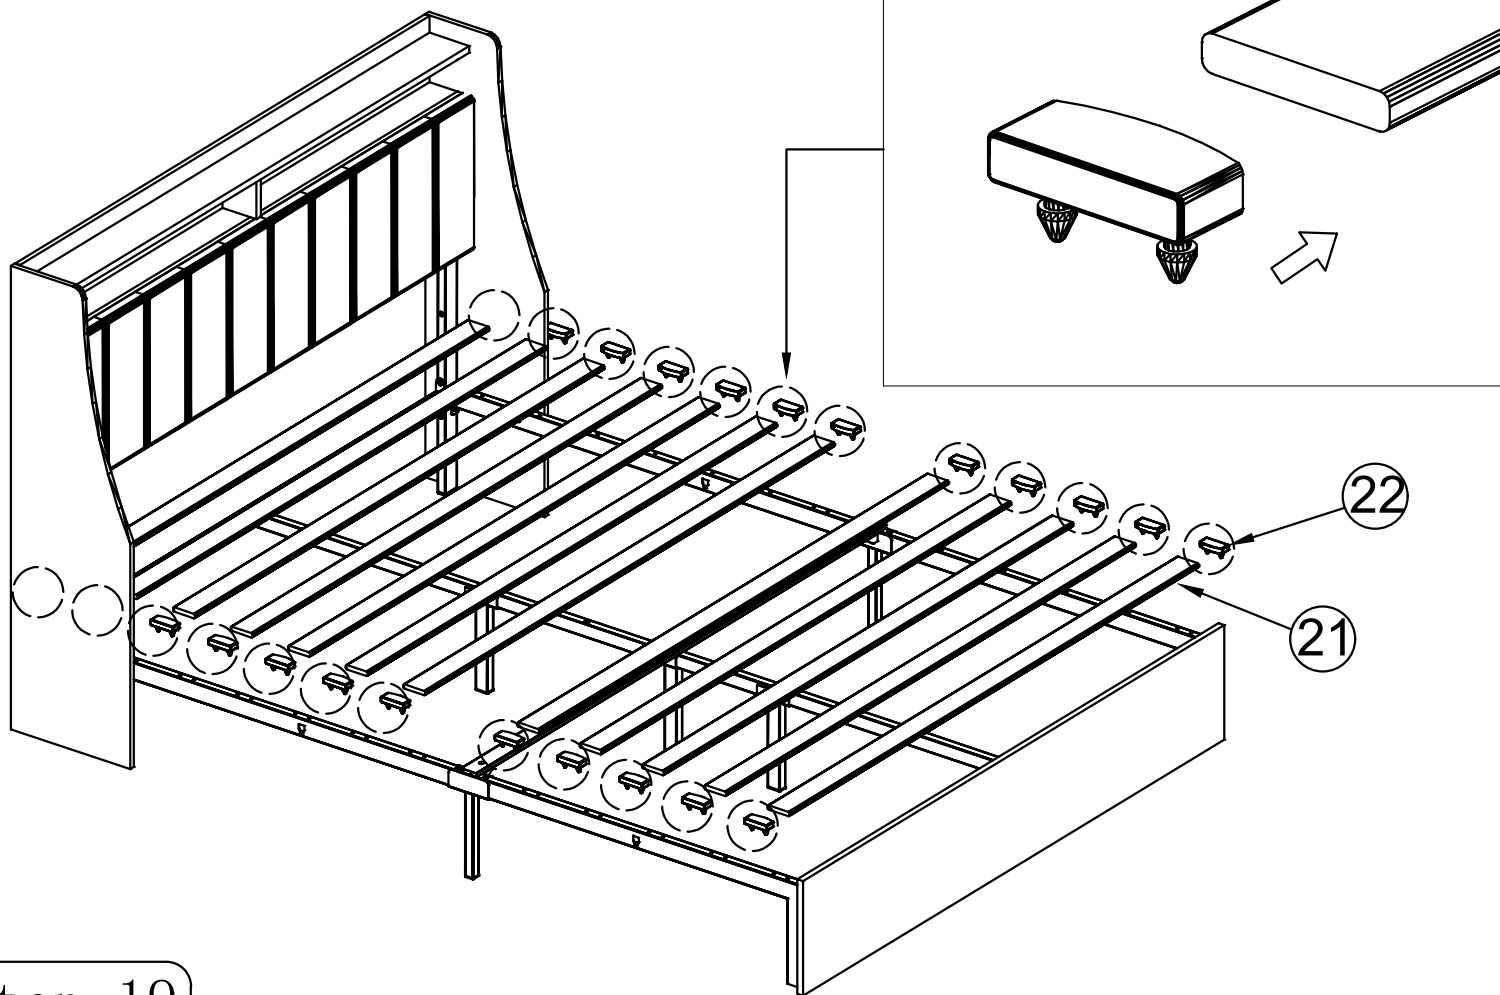


Step 19

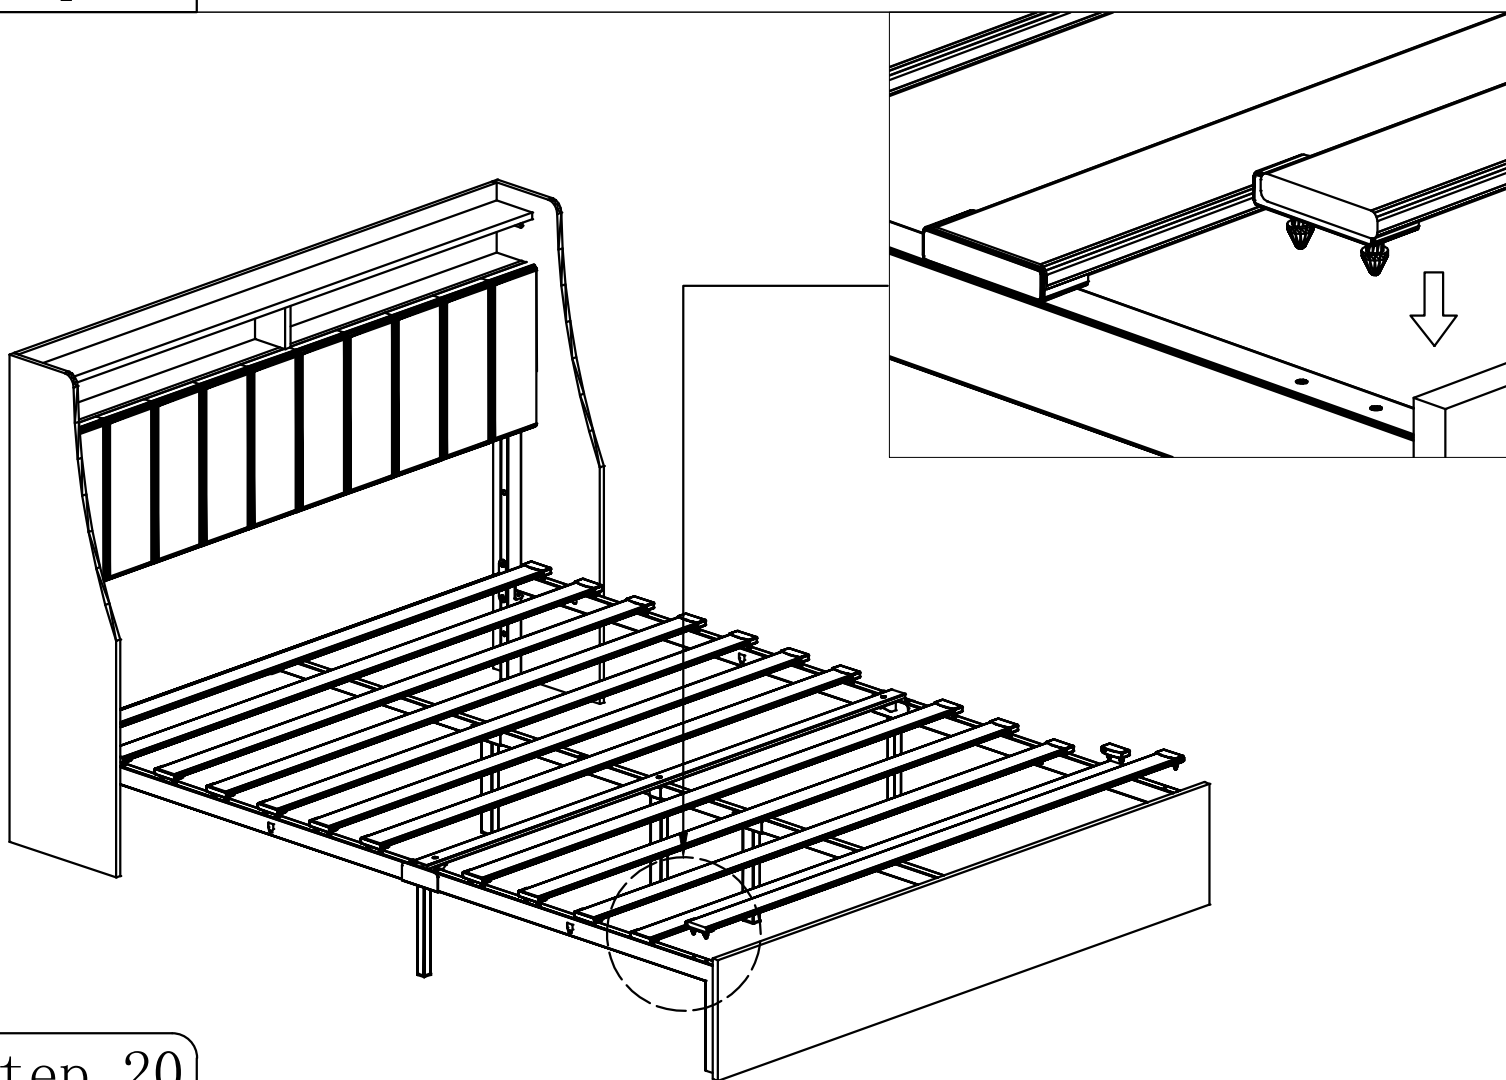


Step 20

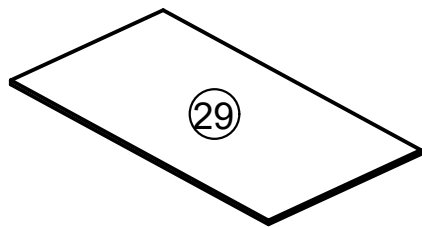



Underplates

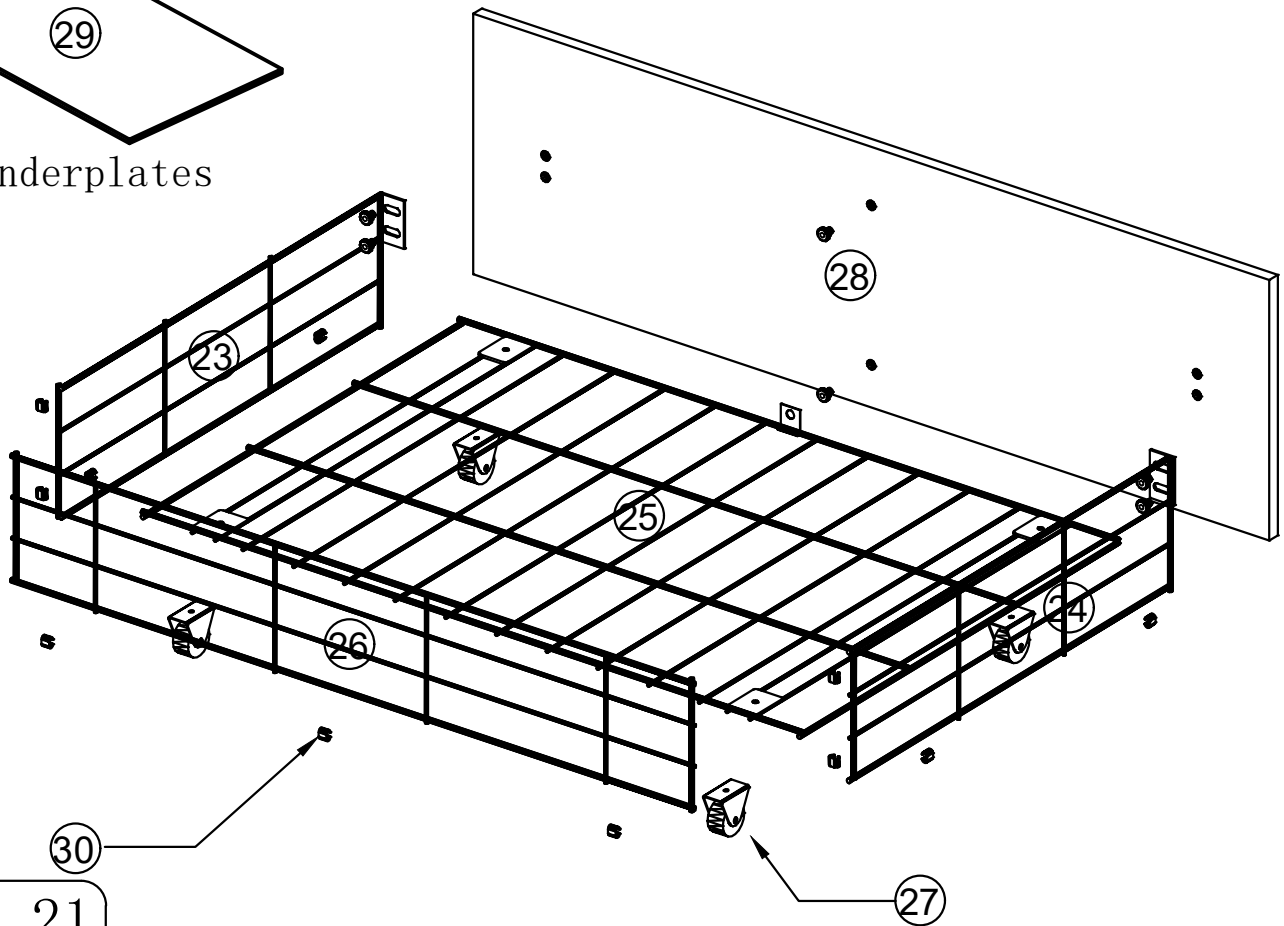


Step 21

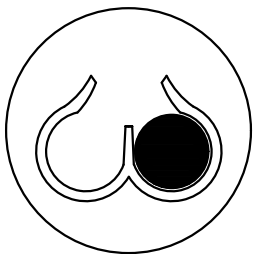



Embed 30 to the rod and make sure it is wrapped in one hole.

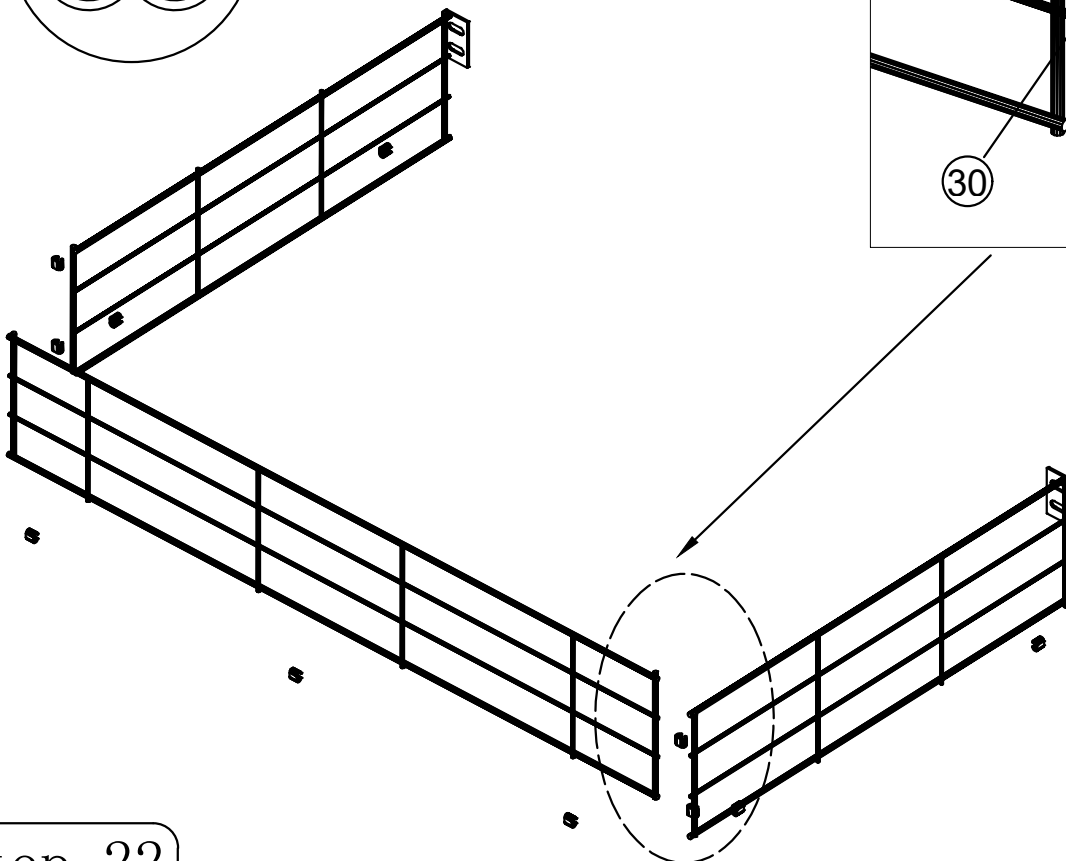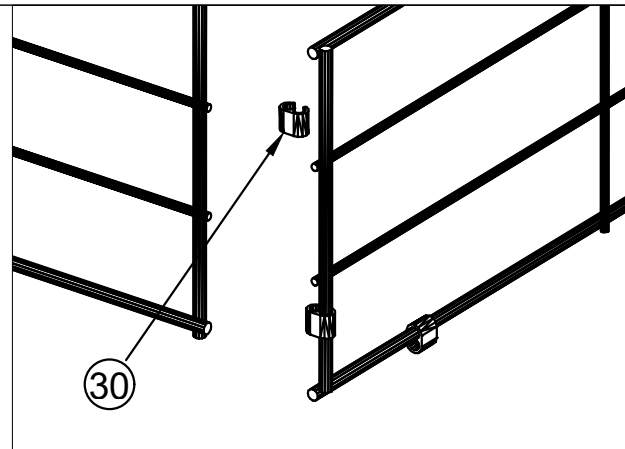



Step 22

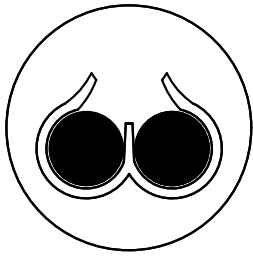

Embed ③⑩ to the rod and make sure it is wrapped in both hole.



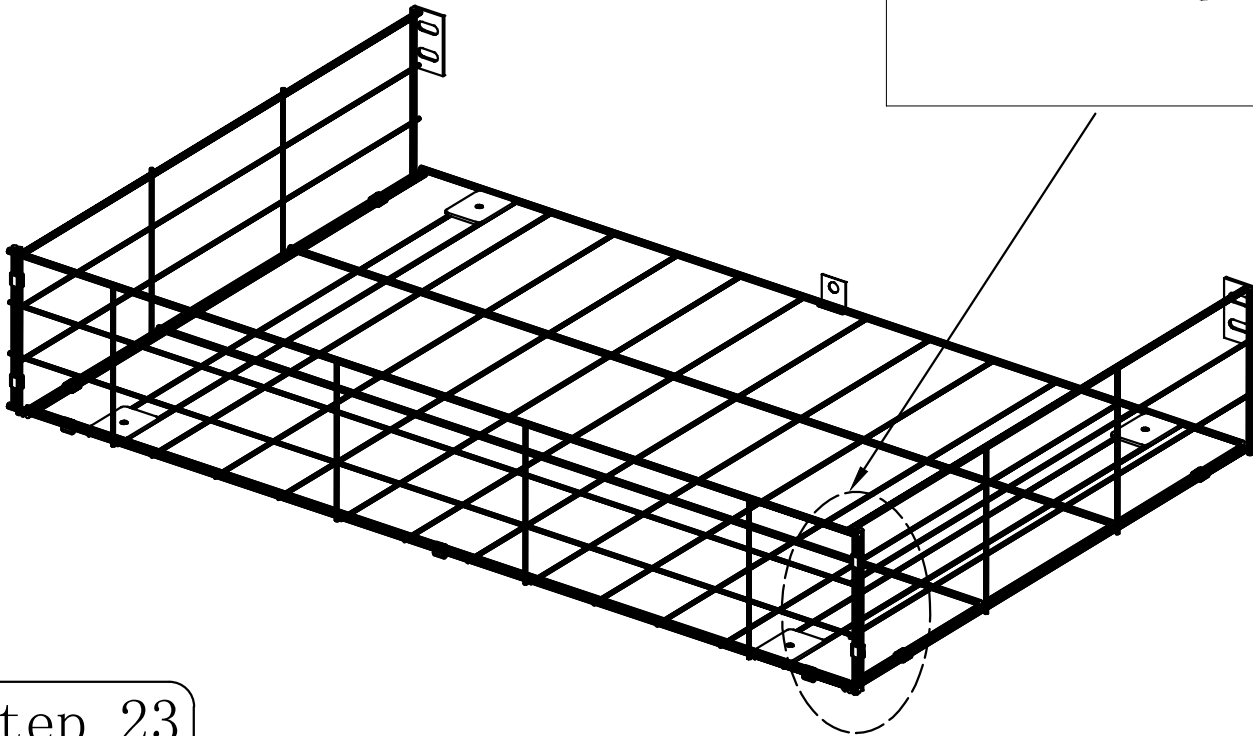
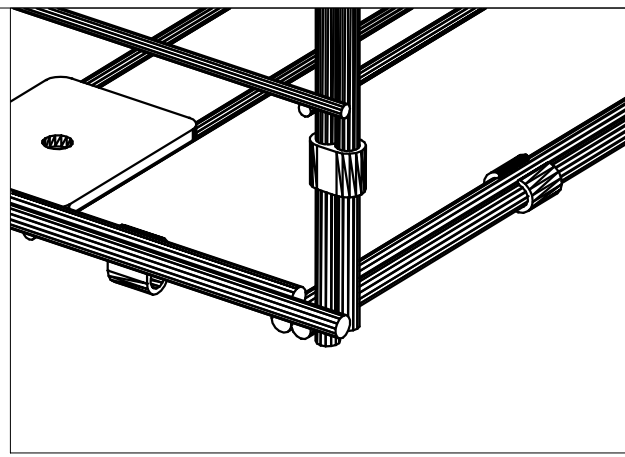


Step 23

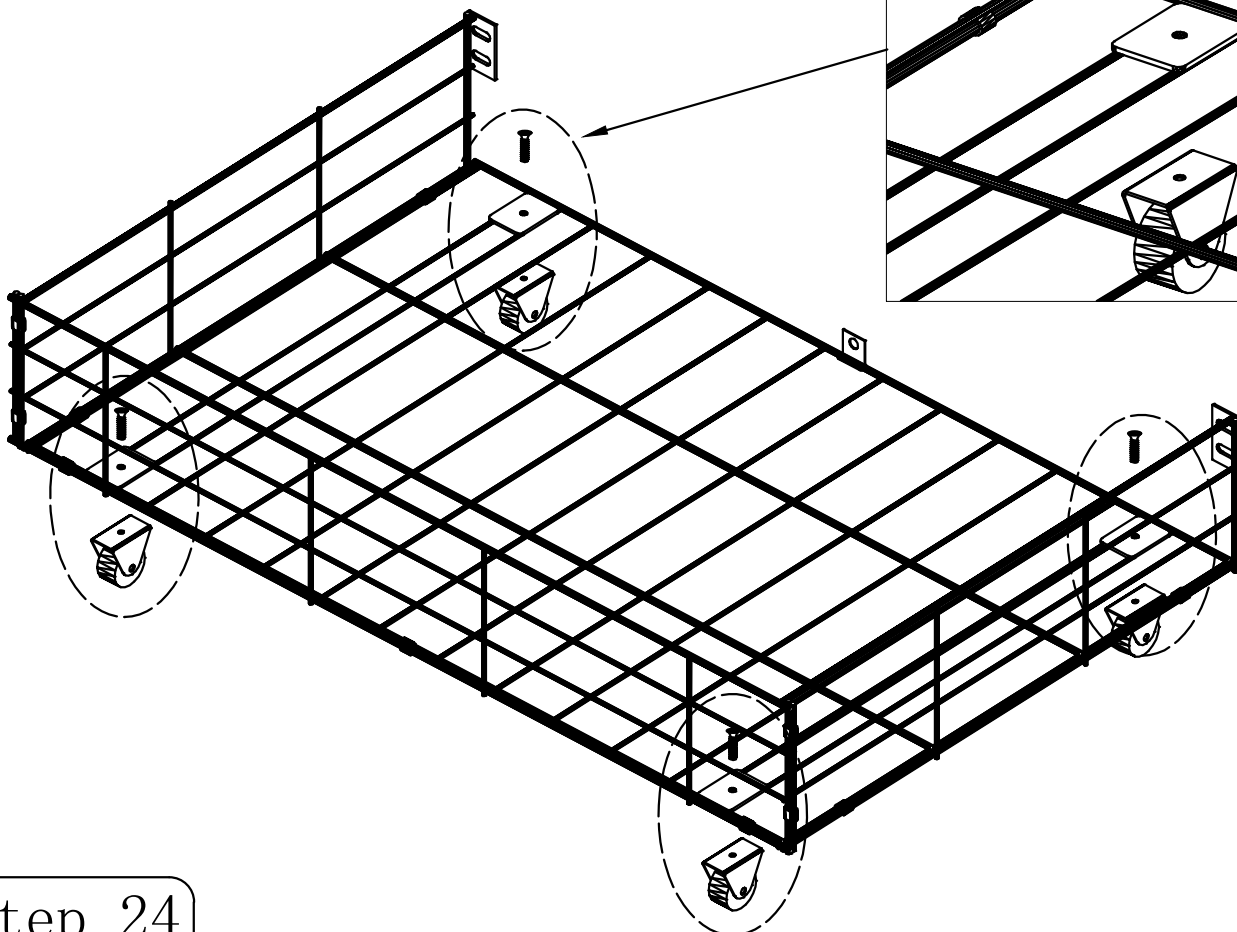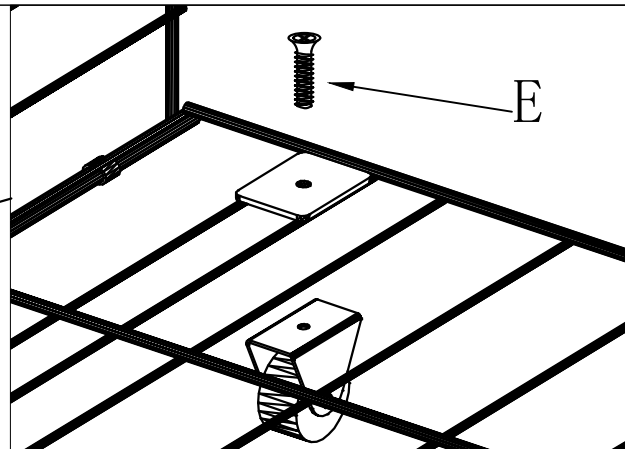


Step 24

Please do not tighten all the way-
the screw will act as a hook for the
drawer to the bed.

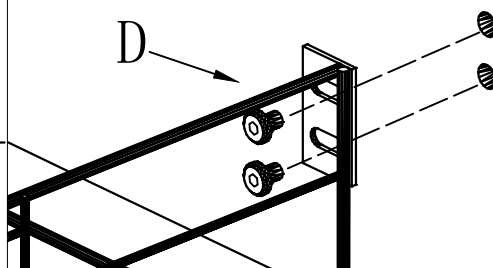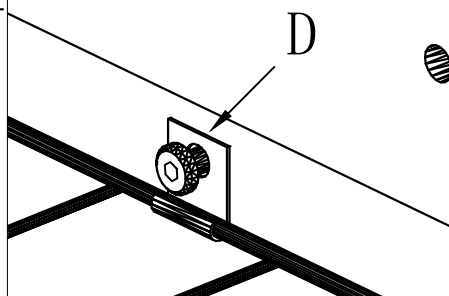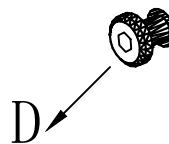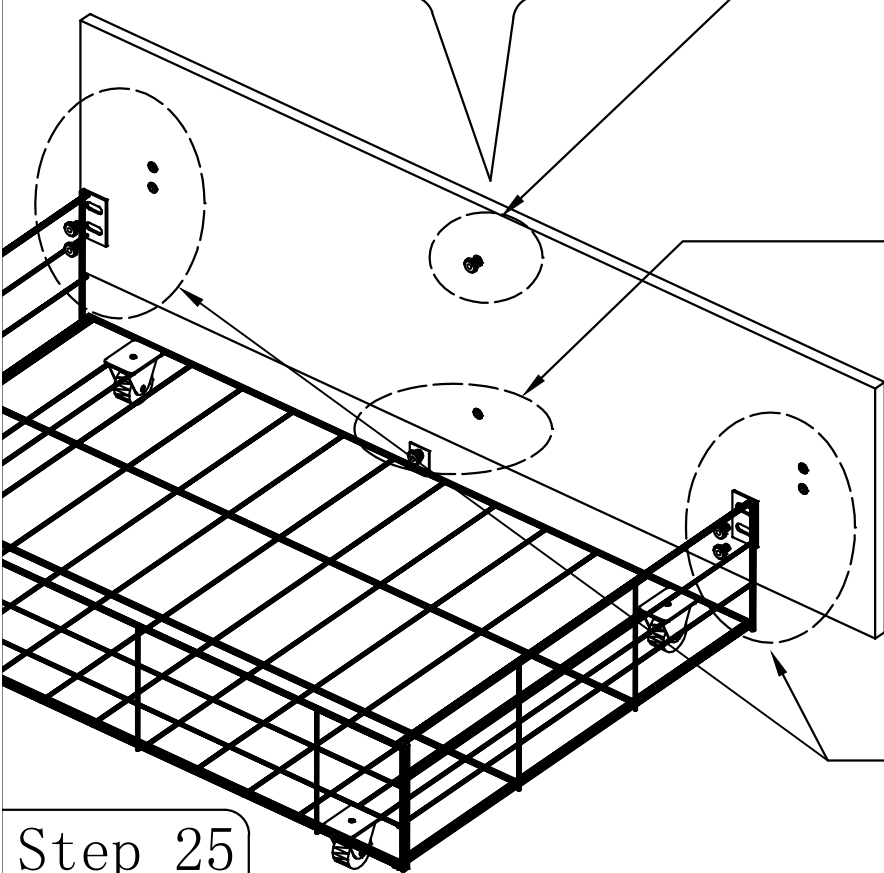

Step 25

Put down the black underplate on the drawer.

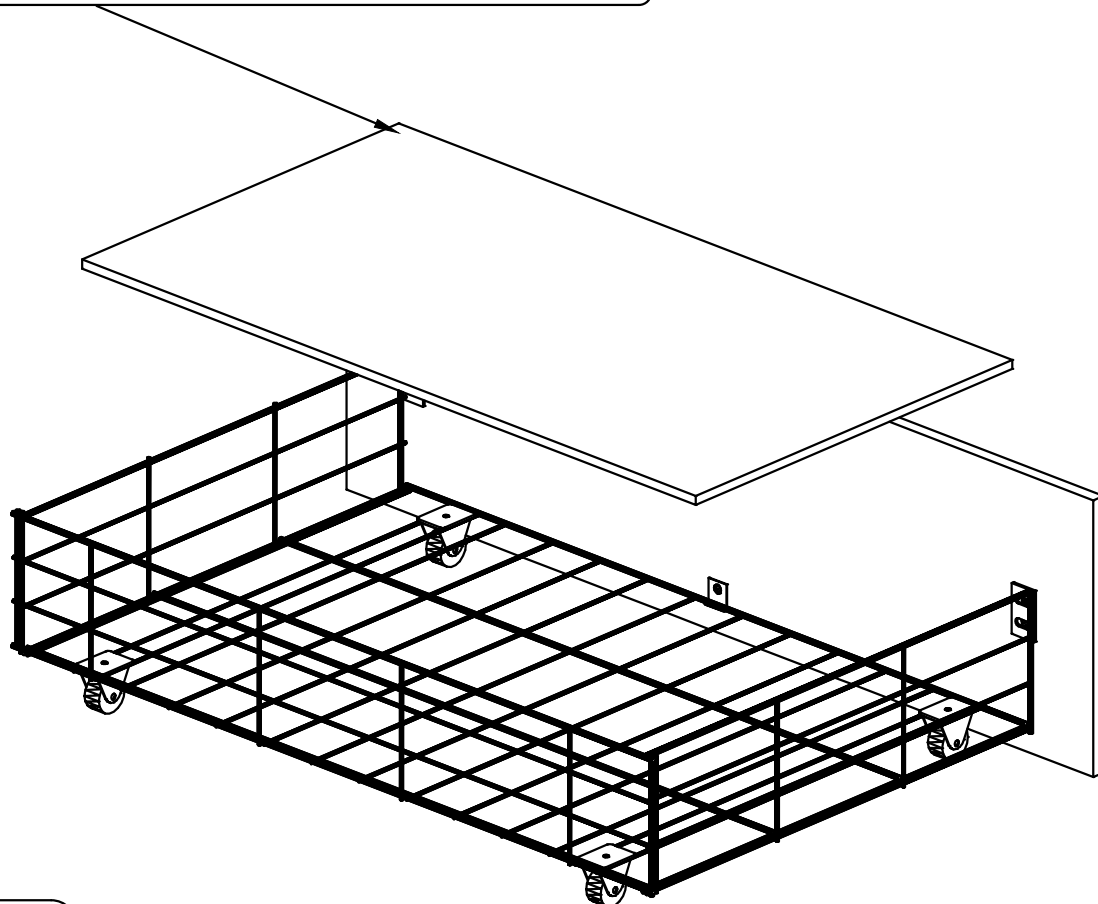

Step 26