


# Adjustable Metal Base Assembly Instructions


Full/Queen/King/Cal King sizes

## Step 1

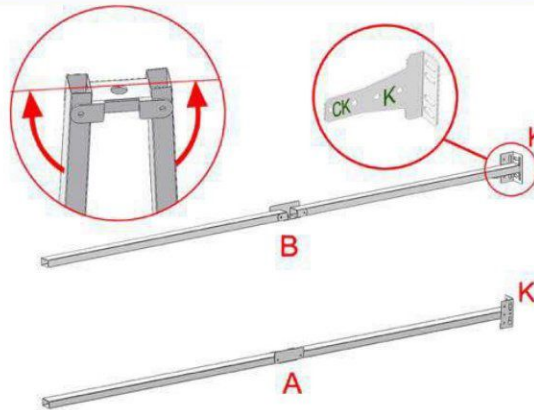


As shown in the figure, extend A and B, and lock K\*2 (headboard bracket) on A and B with L\*4 (small bolt).

## Step 2

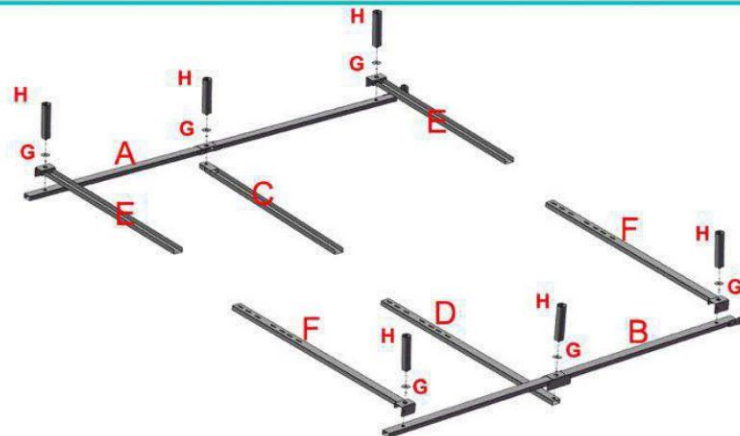


<1> Place E\*2 on the sides of A, place C\*1 under the middle of A, and lock H\*3 and G\*3 in the above three places to form one half.

<2> Place F\*2 on the sides of B, place D\*1 under the middle of B, and lock H\*3 and G\*3 in the above three places to form another half.

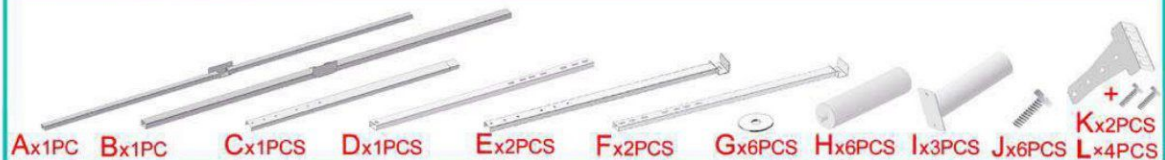

### Step 3

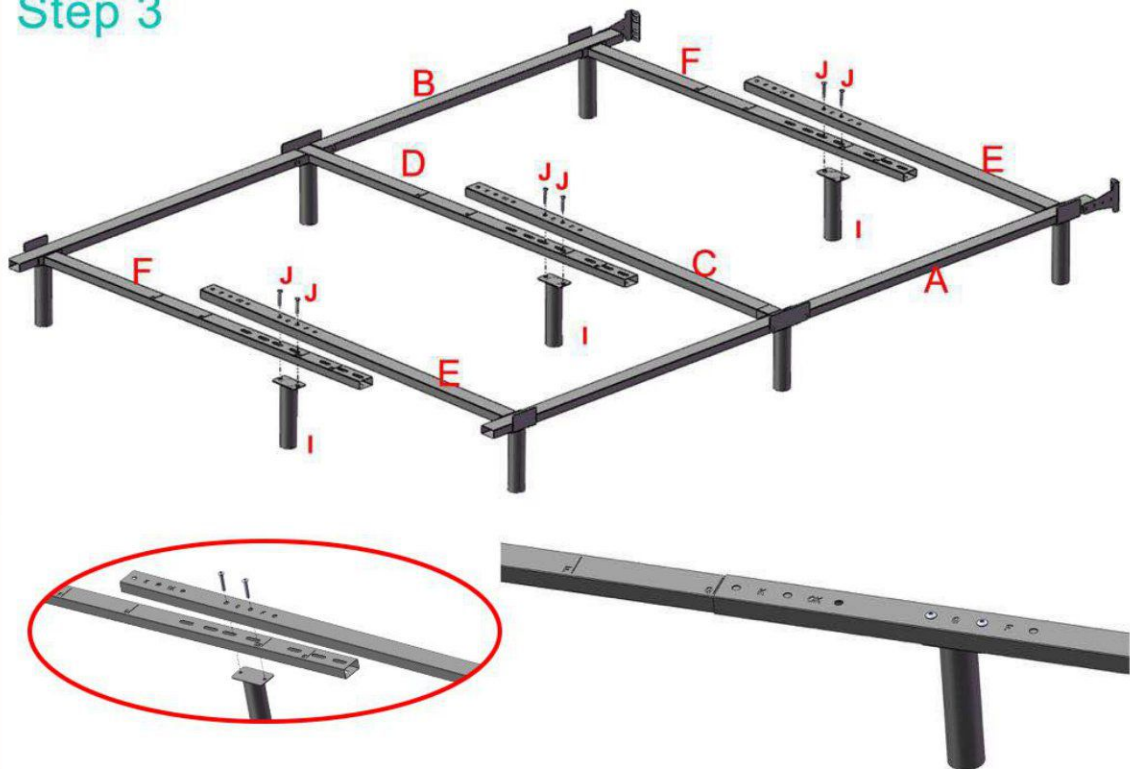

<1> Flip the left and right halves, place E\*2 on top of F\*2, and place C\*1 on top of D\*1.

<2> Adjust to the desired size. (For example, "Q size": Align the word "Q" on the C and D, and make sure that the end of the C is aligned with the tick of the word "Q" on D. If your box spring is too large or too small, you can move left and right according to actual needs. )

<3> Use J\*6 to lock I\*3 at the intersection of E and F, and the intersection of C and D.

### Step 4

