



ASSEMBLY INSTRUCTIONS:

- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
- 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
- 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
- 4- DO NOT USE ABRASIVES SOLUTIONS;

ASSEMBLY INSTRUCTIONS

BOX 09


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	6	SHOE RACKS

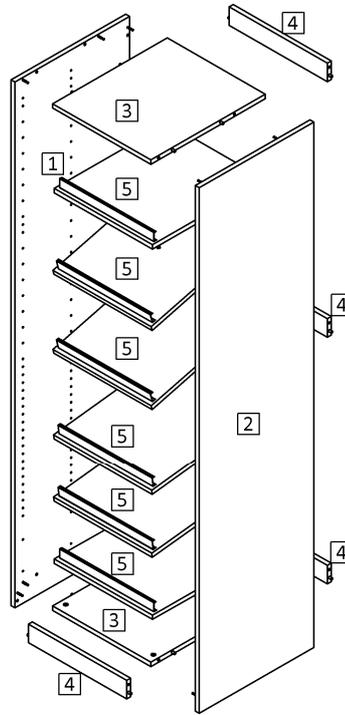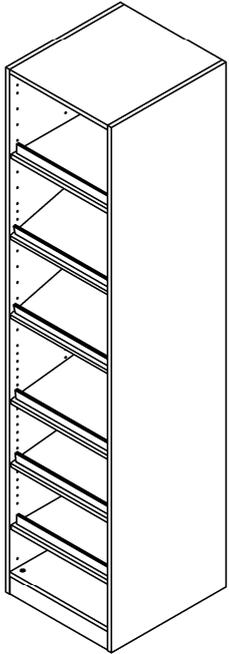




CABINET ASSEMBLY

CABINET HARDWARES	16	16	16
CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16	

**STEP 01
PREPARATION OF THE SIDE PANELS**

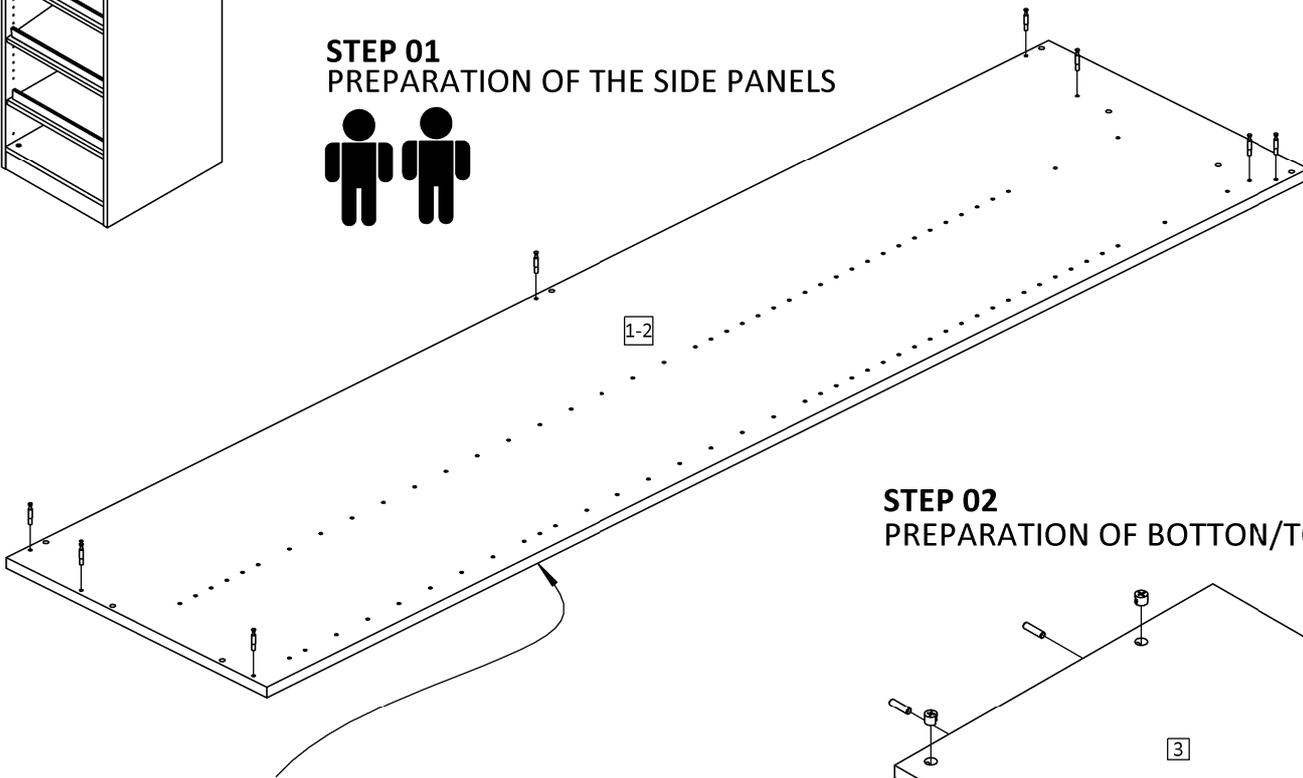


**STEP 02
PREPARATION OF BOTTOM/TOP PANELS**

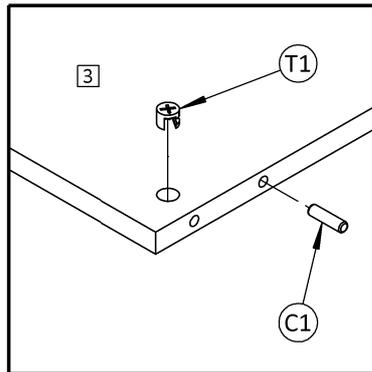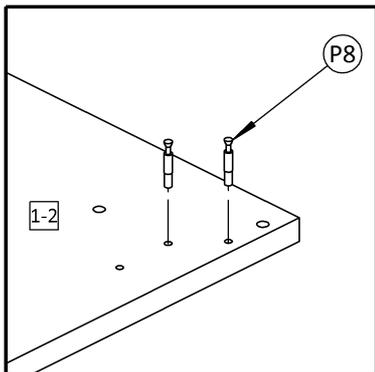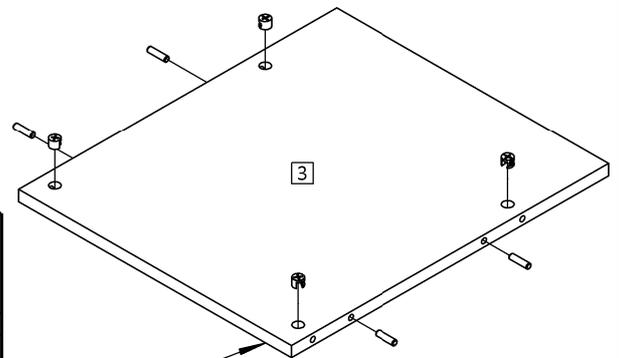


ASSEMBLY INSTRUCTIONS

BOX 09

STEP 03
PREPARATION OF THE FRAMES

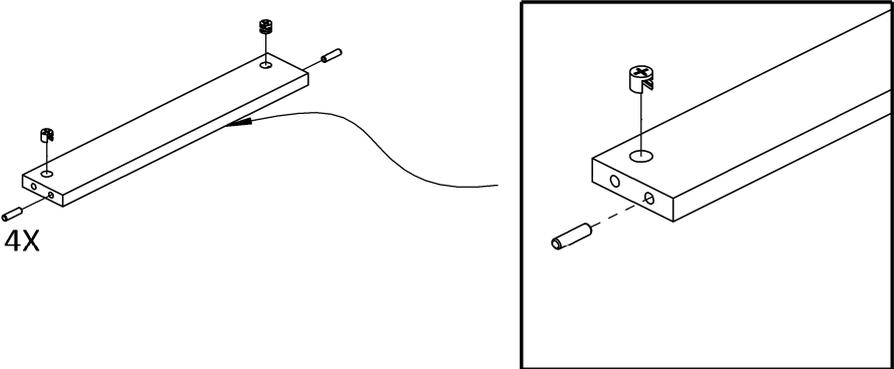



STEP 04
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

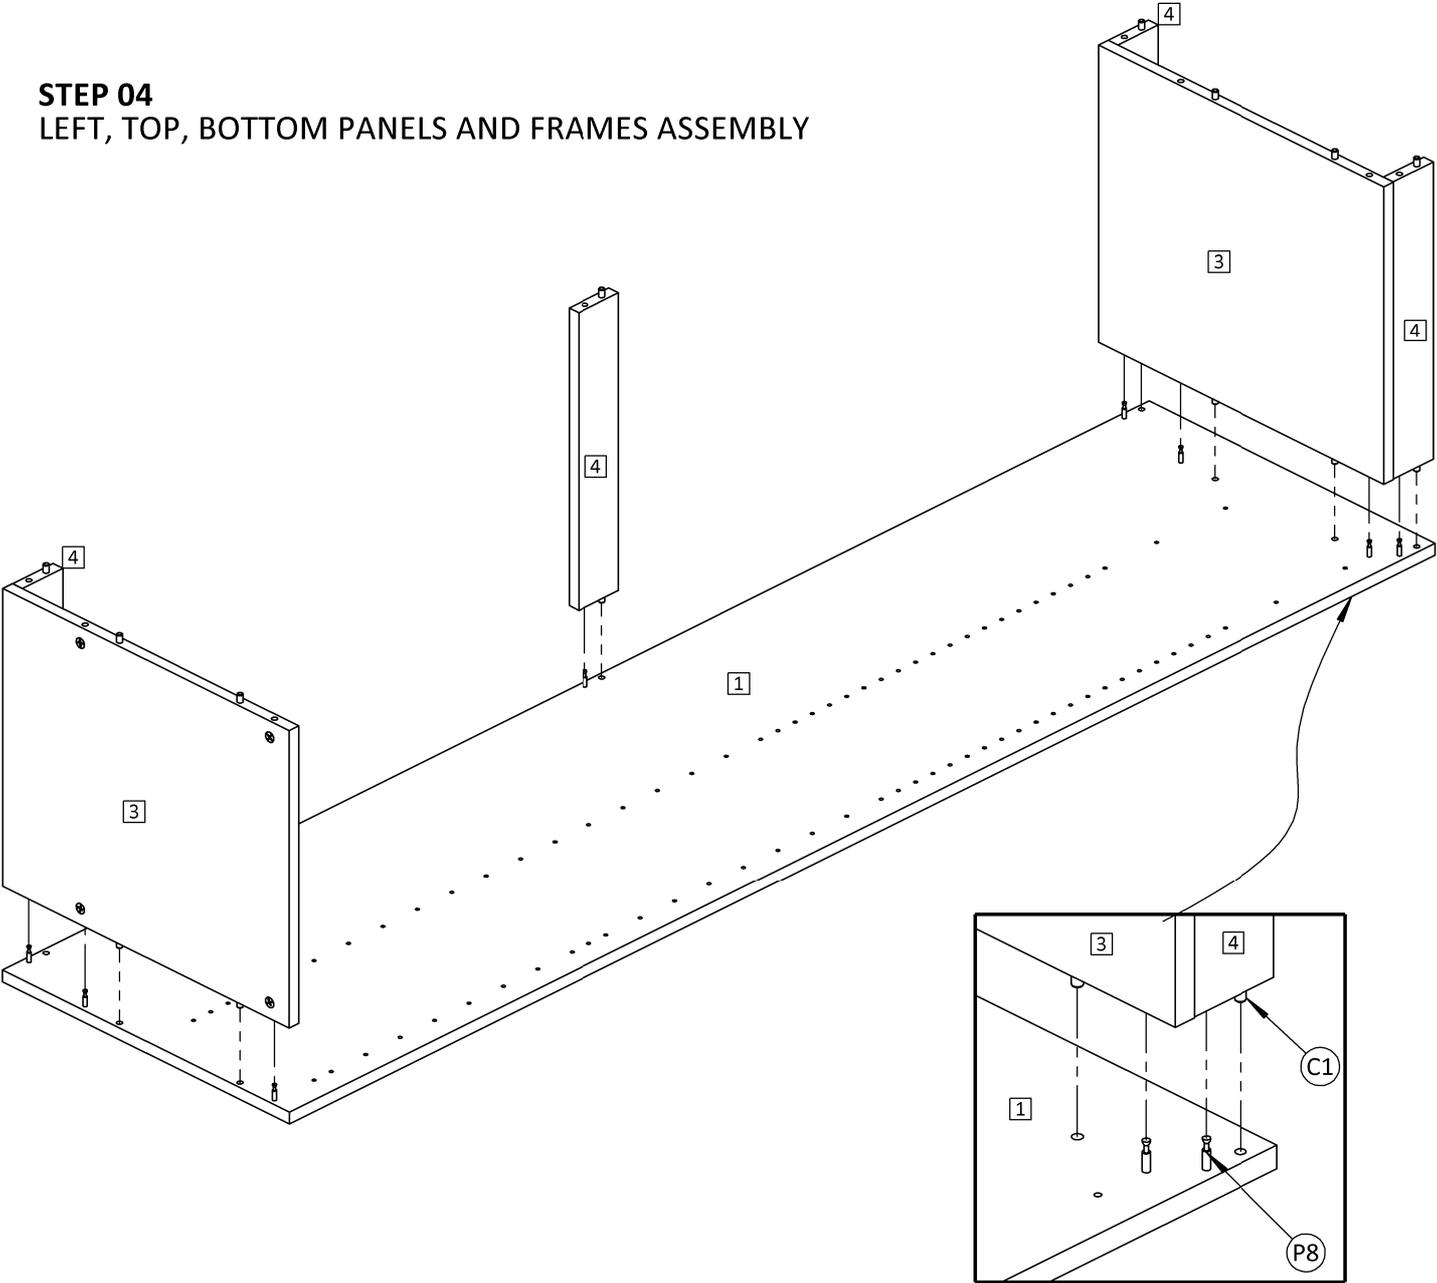


ASSEMBLY INSTRUCTIONS

BOX 09

STEP 05 RIGHT SIDE PANEL ASSEMBLY

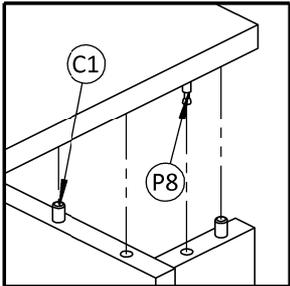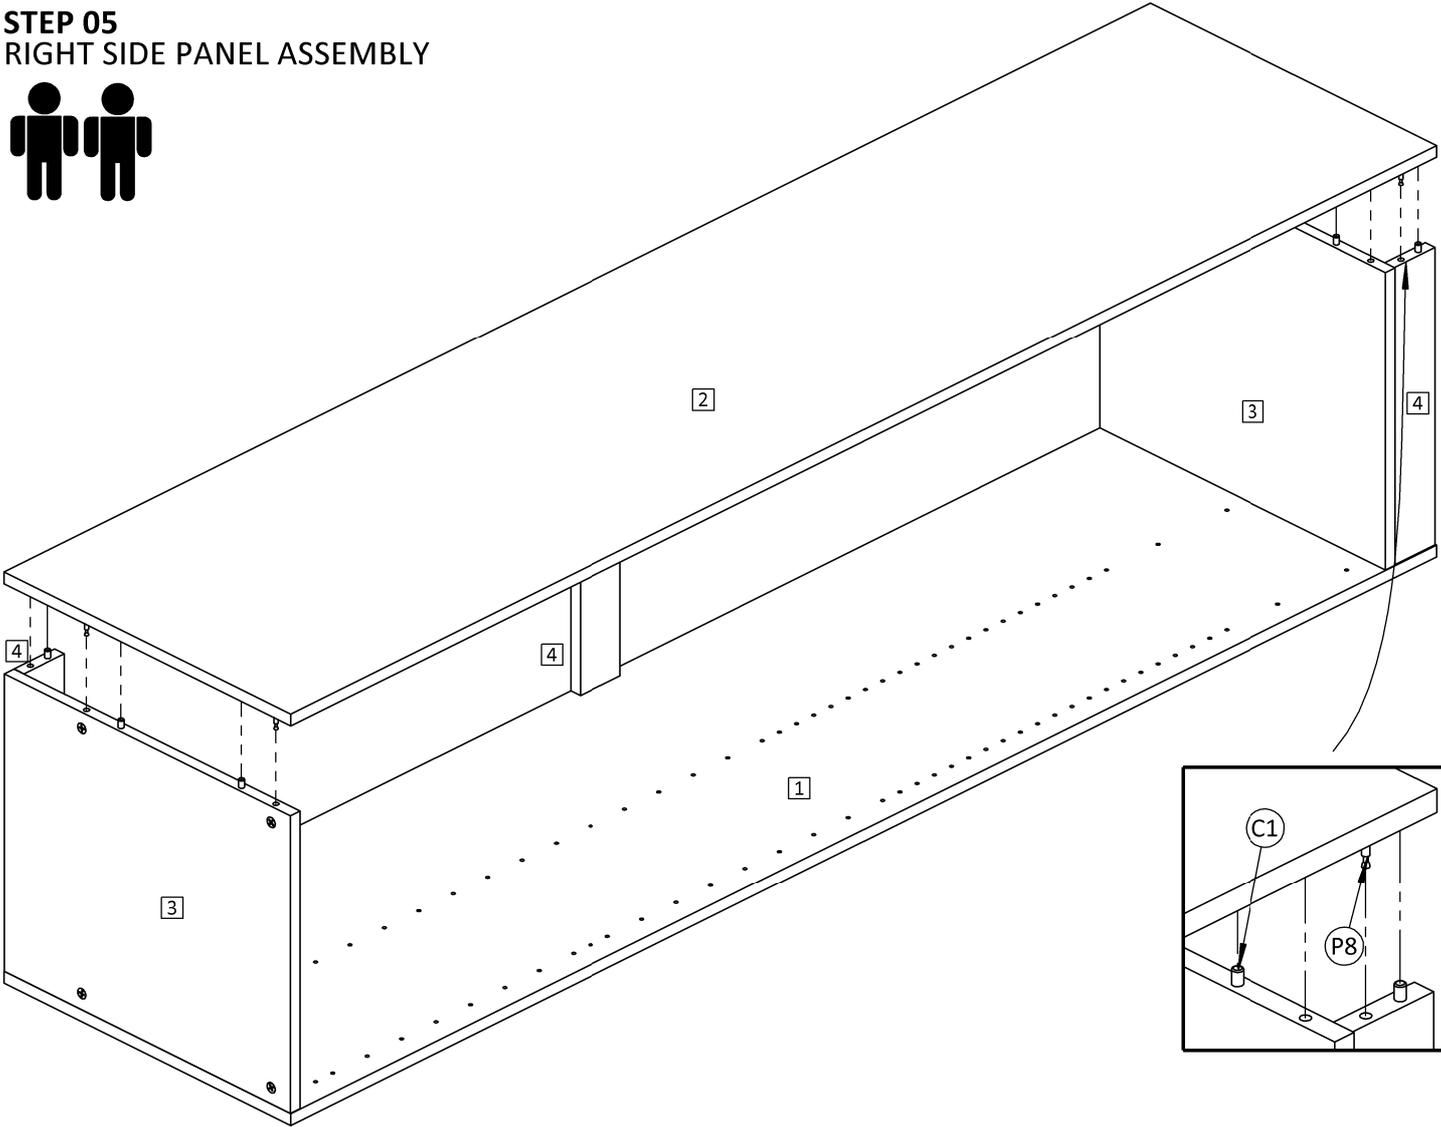



SHOE RACK ASSEMBLY Item 5 - Shoe Rack

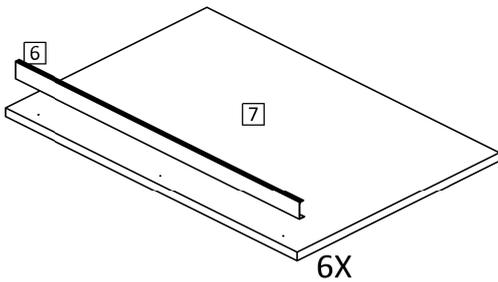

PART LIST		
PART NUMBER	QTY	DESCRIPTION:
6	6	METAL FILLER
7	6	SHOE RACK



STEP 06 SHOE RACK ASSEMBLY

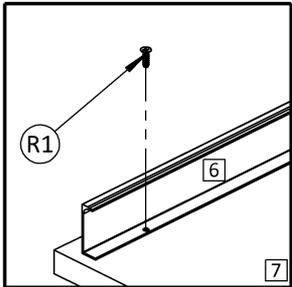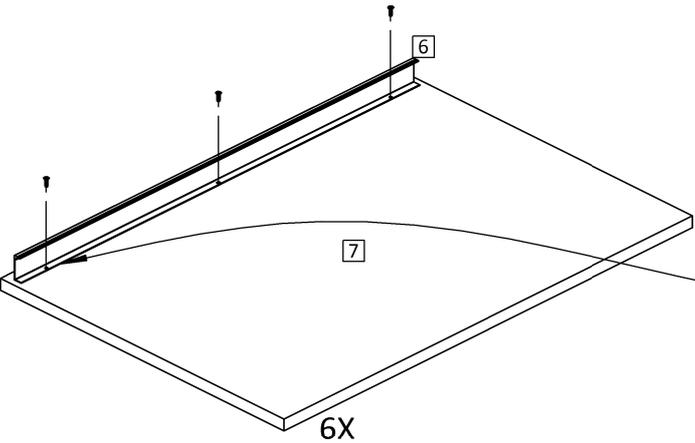

STEP 07
FIXING THE CABINET ON THE WALL

FIXING THE CABINET

DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG



ASSEMBLY INSTRUCTIONS
BOX 09




IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!



FIXING HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

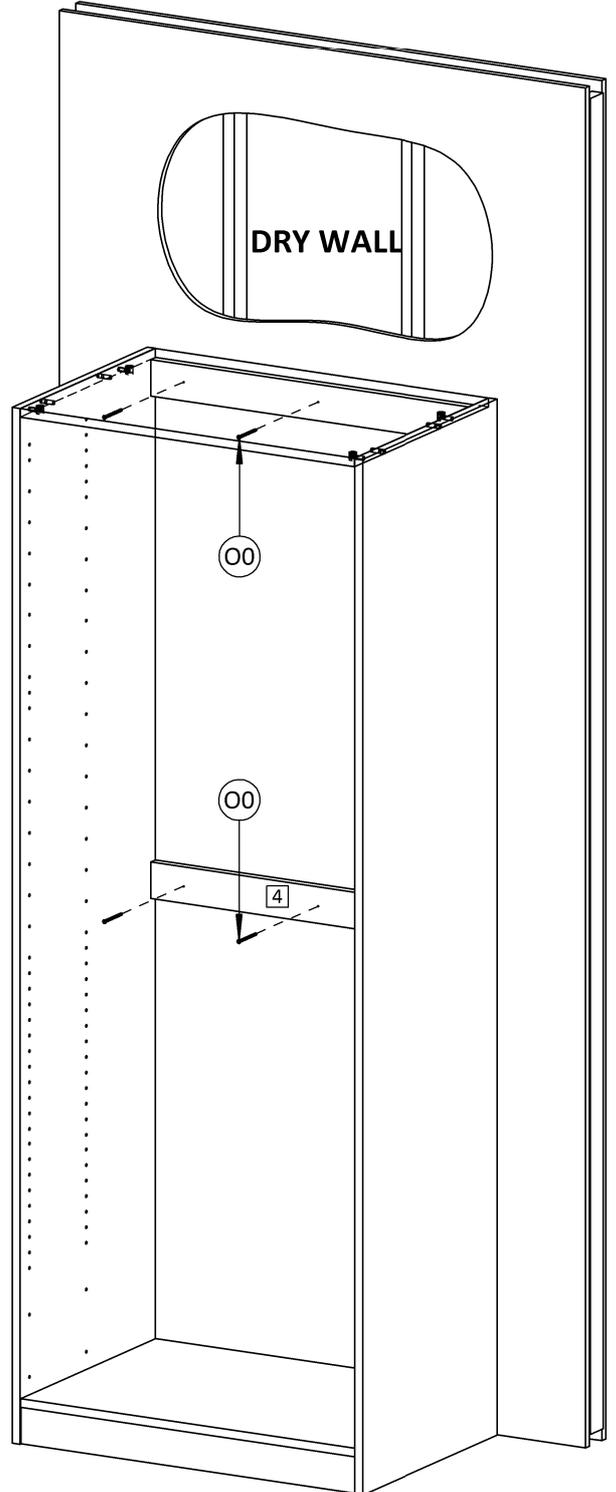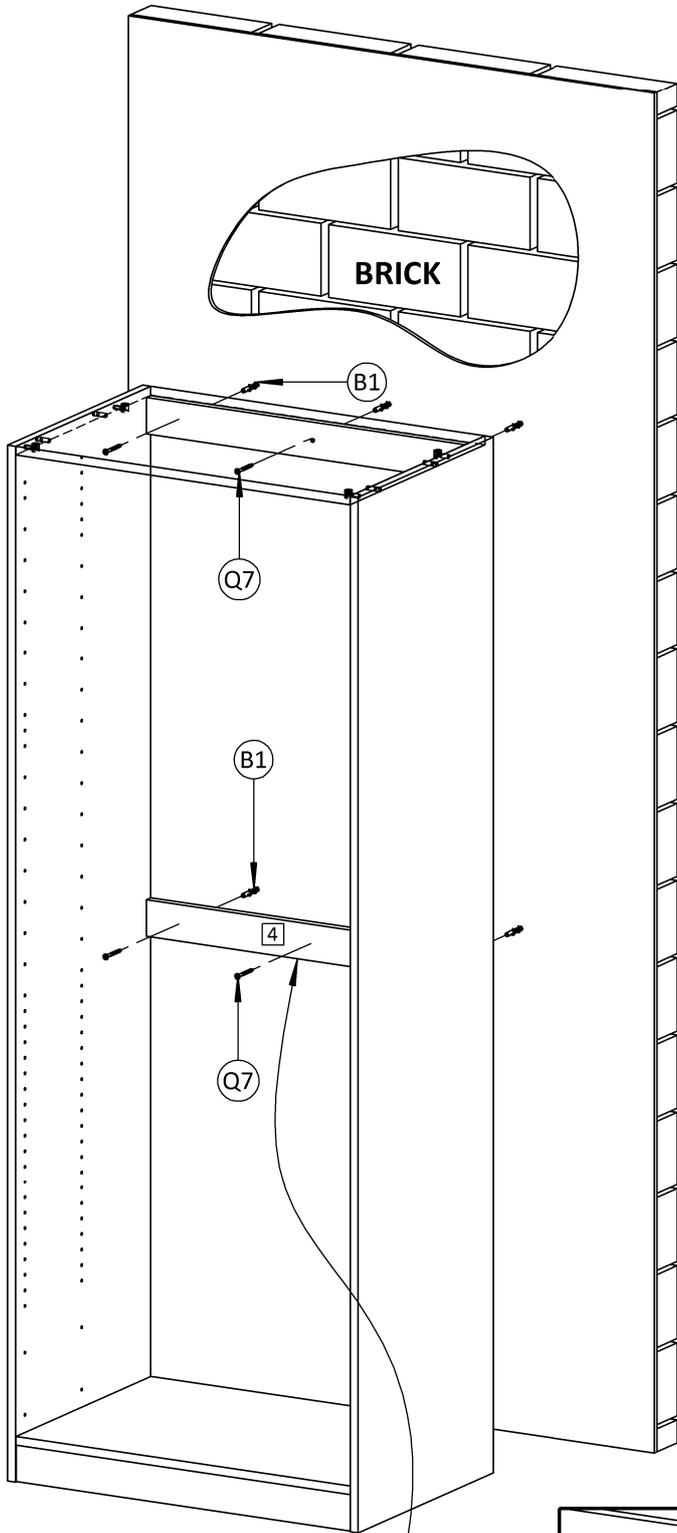




SCREW IN THE CENTER
OF THE FRAME

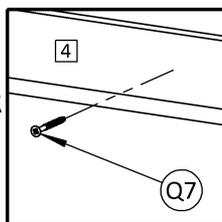

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND

STEP 08
JOINING THE CABINETS


ASSEMBLY INSTRUCTIONS
BOX 09

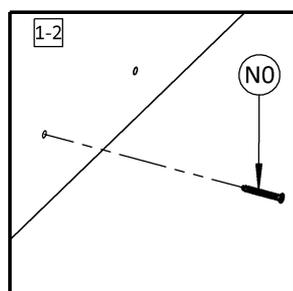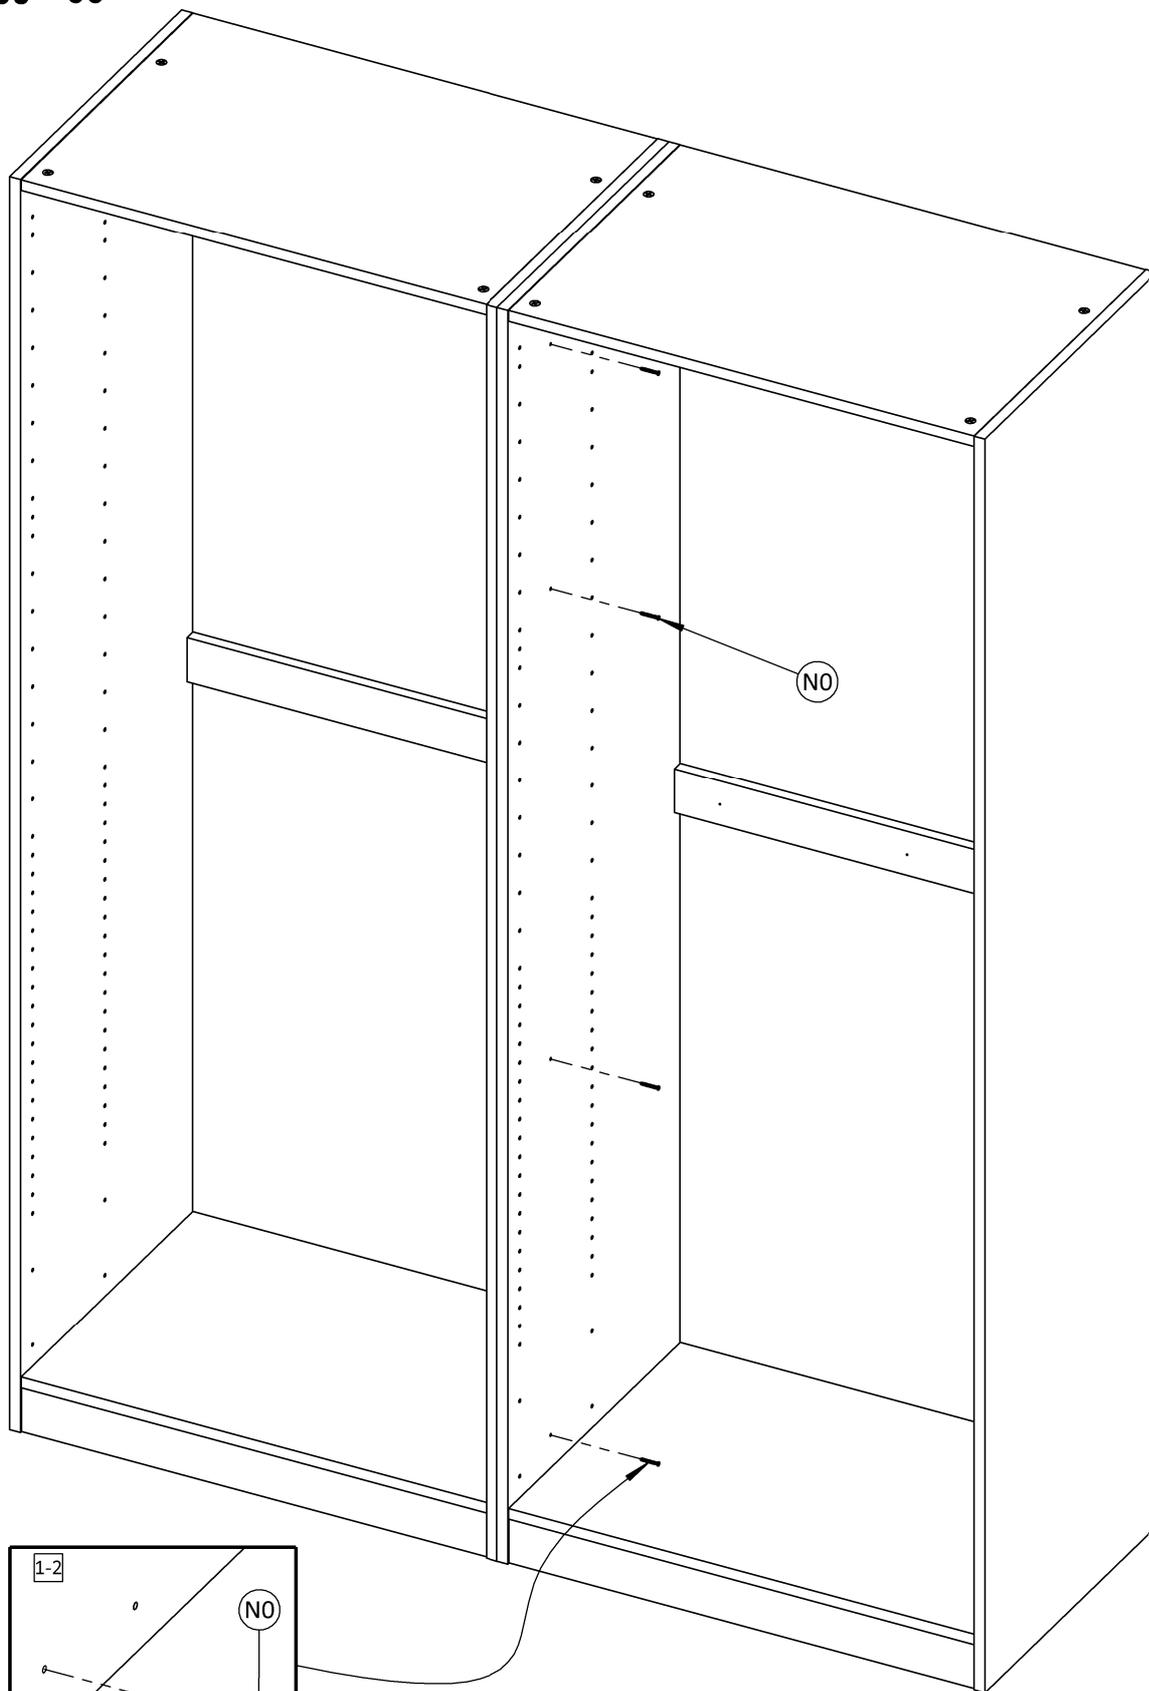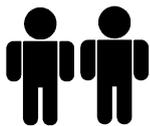


FIXING THE SHOE RACK INSIDE THE CABINET

STEP 09
FIX THE SHOE RACK SUPPORTS
ON THE SIDE PANNELS


FIXING SHOE RACK HARDWARES	12	12	12
			
	SHELF SUPPORT	SHOE RACK PIN	SCREW 15/64 X 33/64

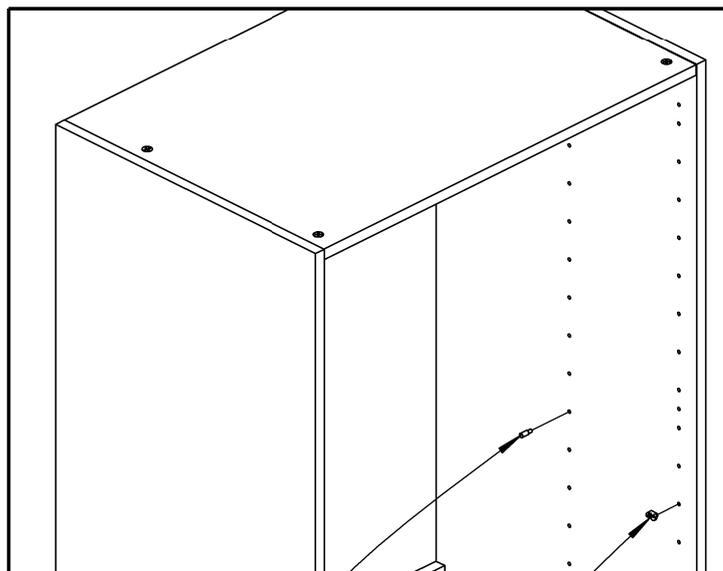



BACK

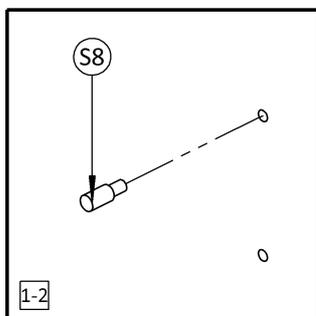

FRONTAL


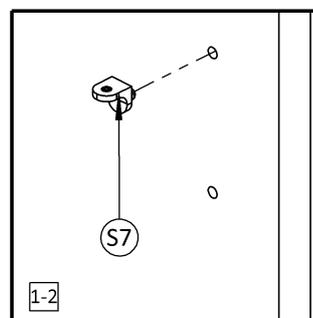


THE BACK PIN CAN BE FIXED UP 1,2" OR 2,5"
IN RELATION TO THE FRONTAL SUPPORT

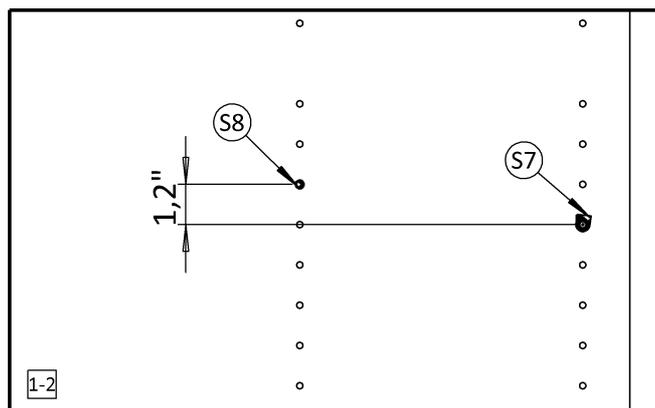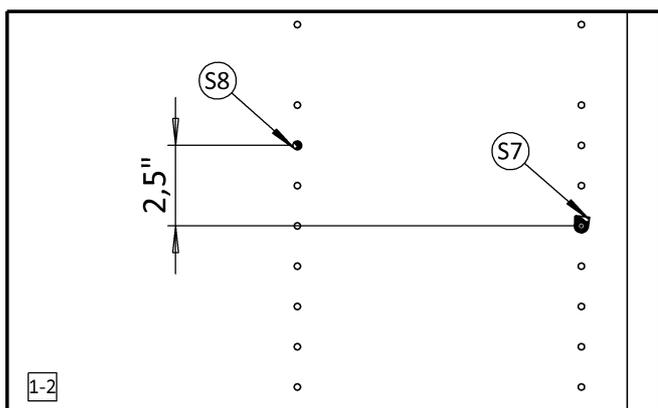

STEP 10
FIX SHOE RACK INSIDE THE CABINET

ASSEMBLY INSTRUCTIONS
BOX 09

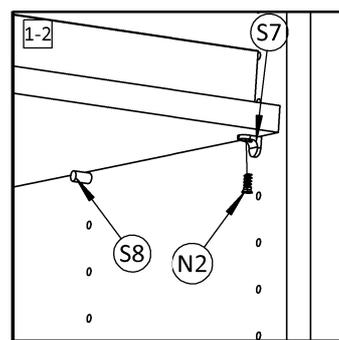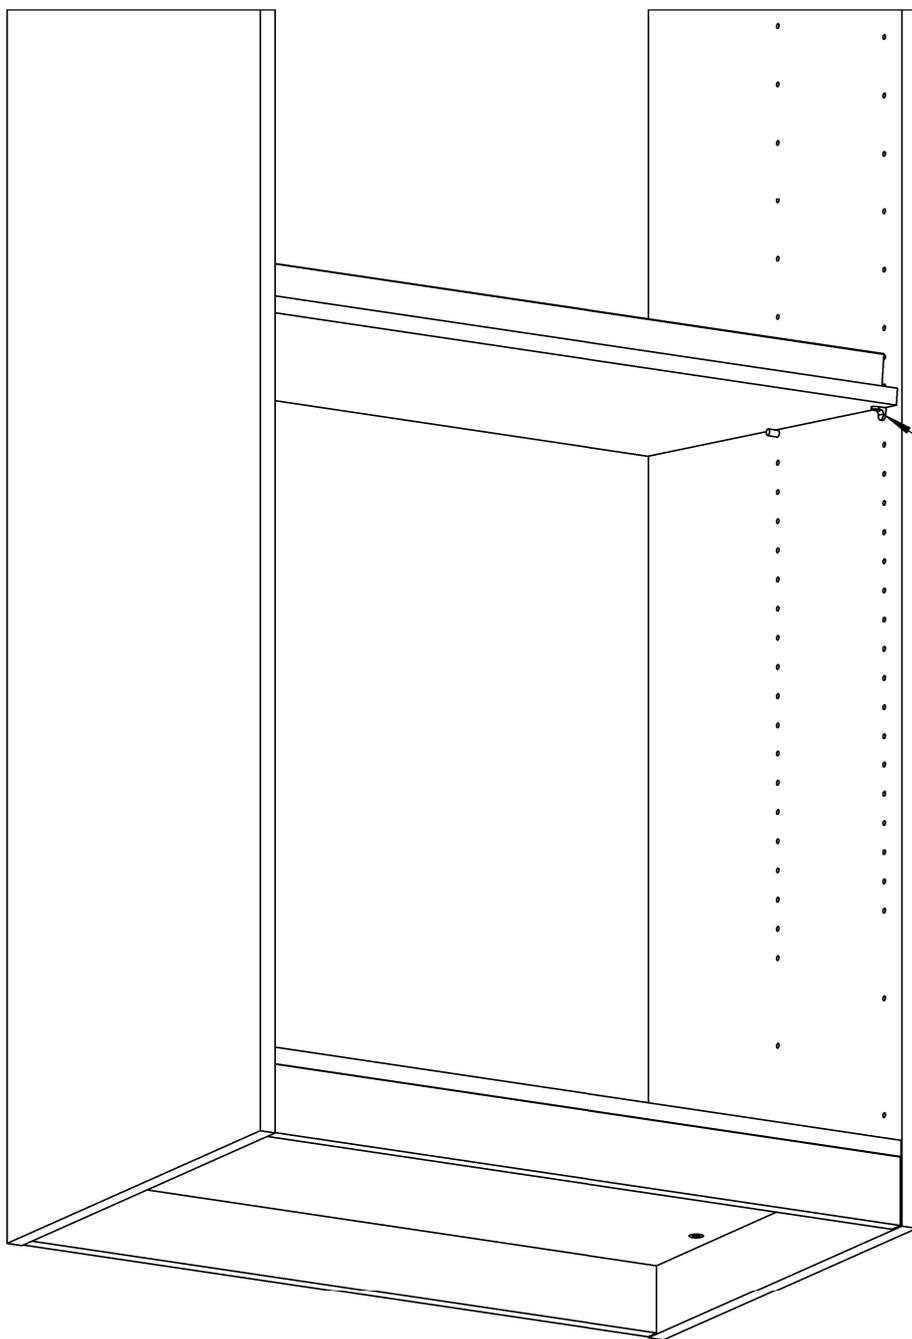

FIX THE SHOE RACK SUPPORTS
ON THE SIDE PANNELS