




Assembly Instruction

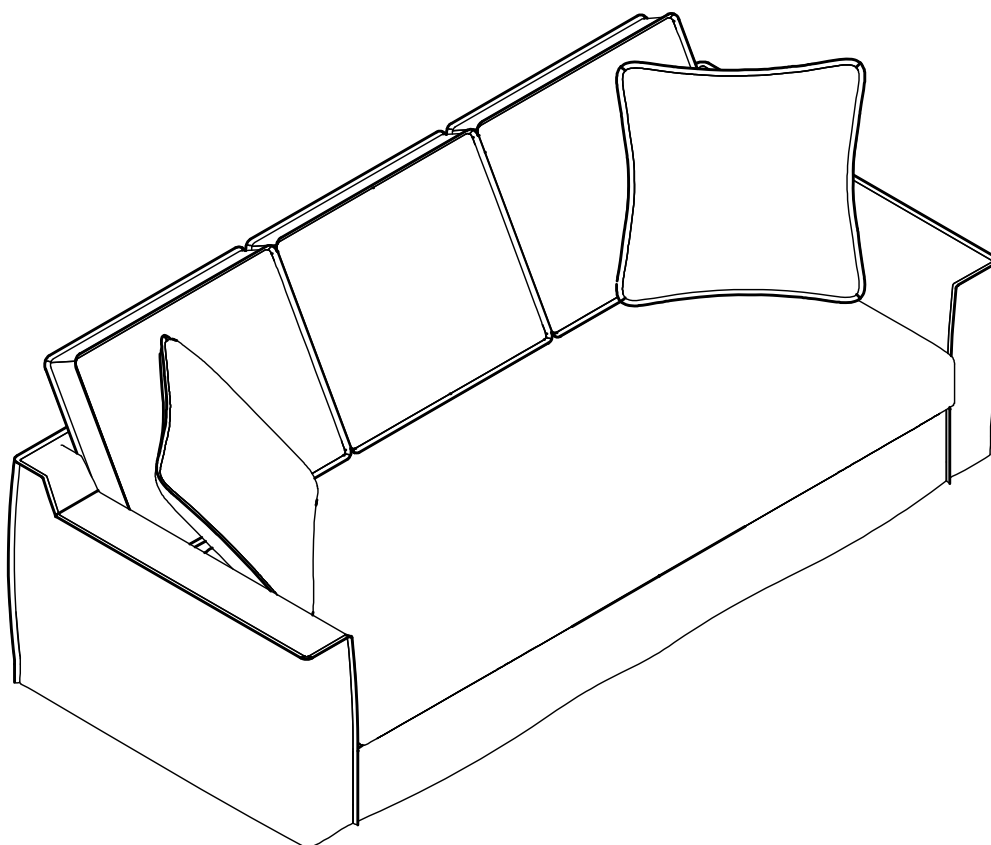


PARTS

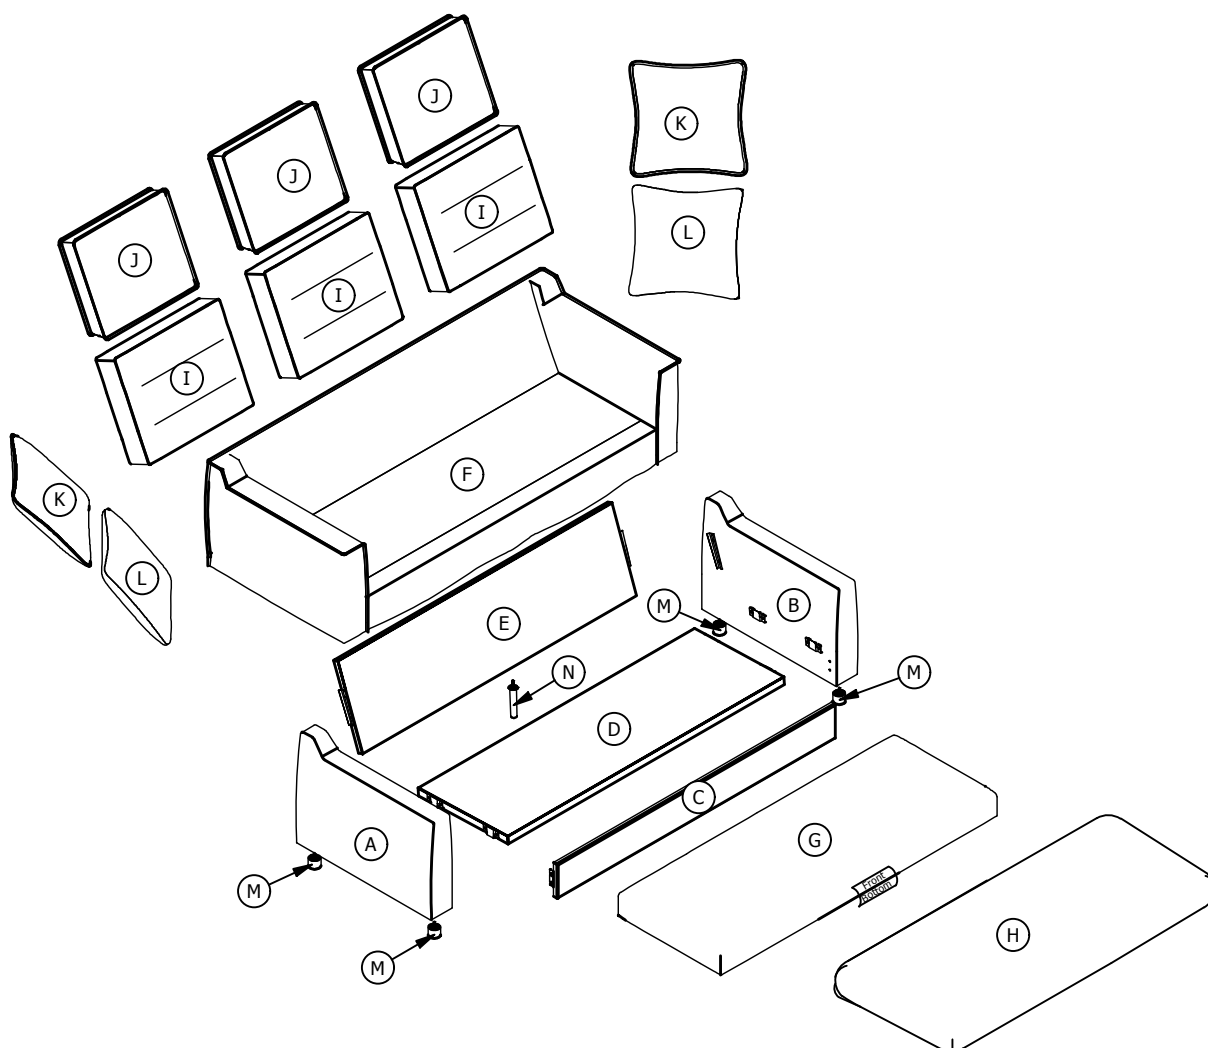


PARTS LIST

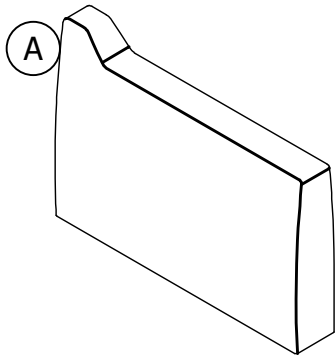


Armrest X 1 PC

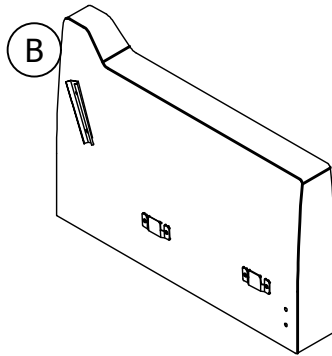


Armrest X 1 PC

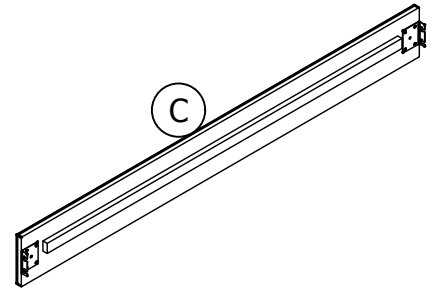


Front Rail X 1 PC

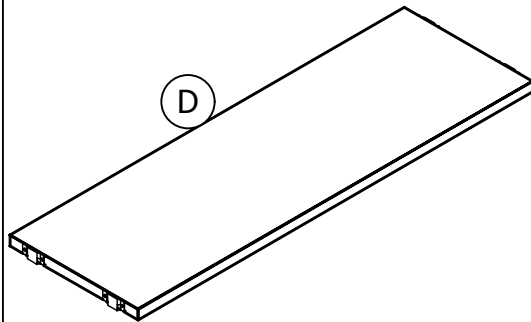


Seat Panel X 1 PC

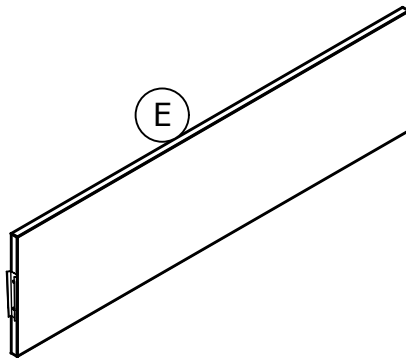


Back X 1 PC

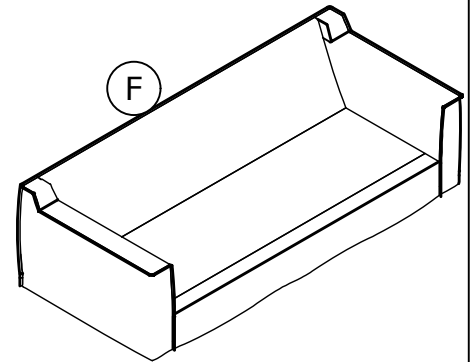


Sofa Slipcover X 1 PC

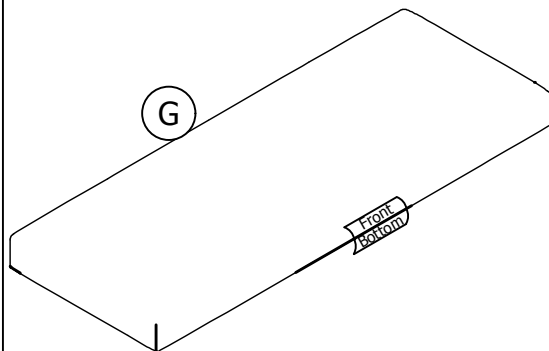


Seat Cushion X 1 PC

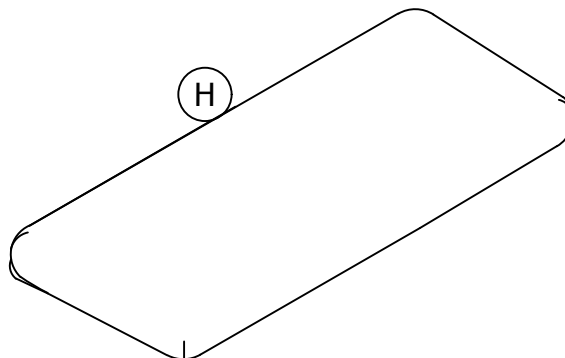


Seat Slipcover X 1 PC

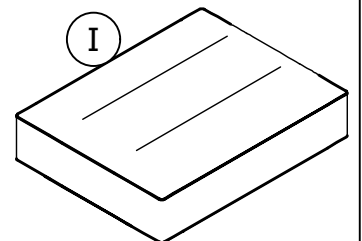


Back Cushion X 3 PCS

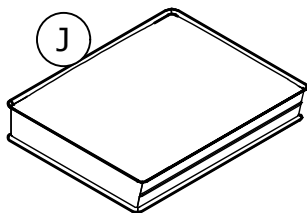


Back Slipcover X 3 PCS

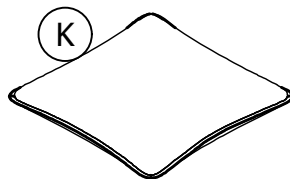


Pillow Slipcover X 2 PCS

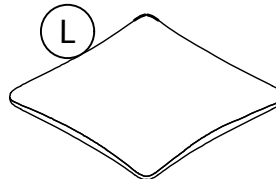

Pillow X 2 PCS

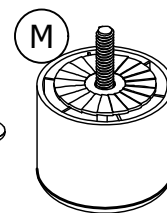


Leg X 4 PCS

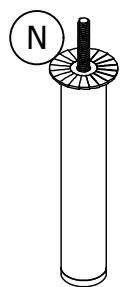


Support Leg X 1 PC

HARDWARE

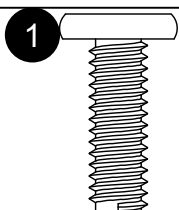


5/16" X 23mm
X 4

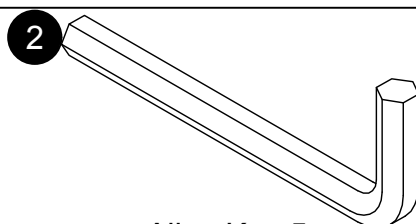


Allen Key 5mm
X 1

Place all parts on a clean, smooth surface.


STEP 1:Manually screw **M** x 4 to **A** & **B**, as shown.

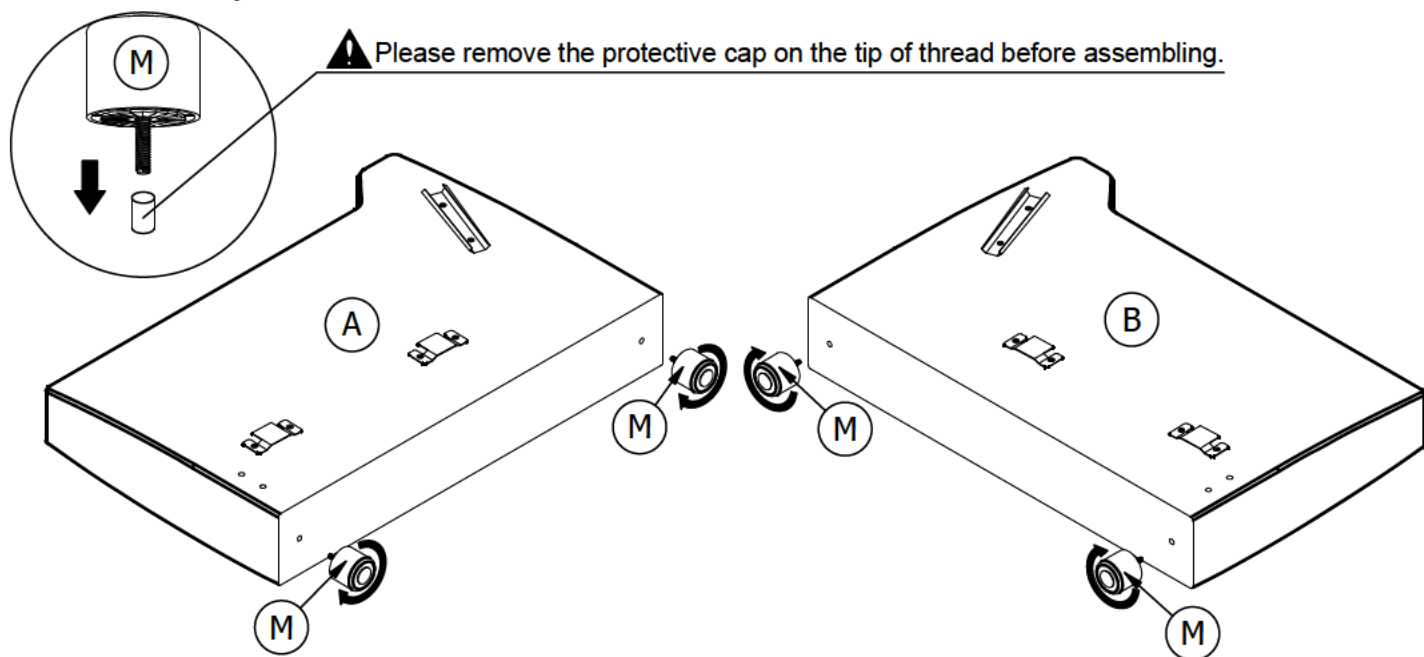


STEP 2: Attach **C** to **A** & **B** with **1**, as shown.

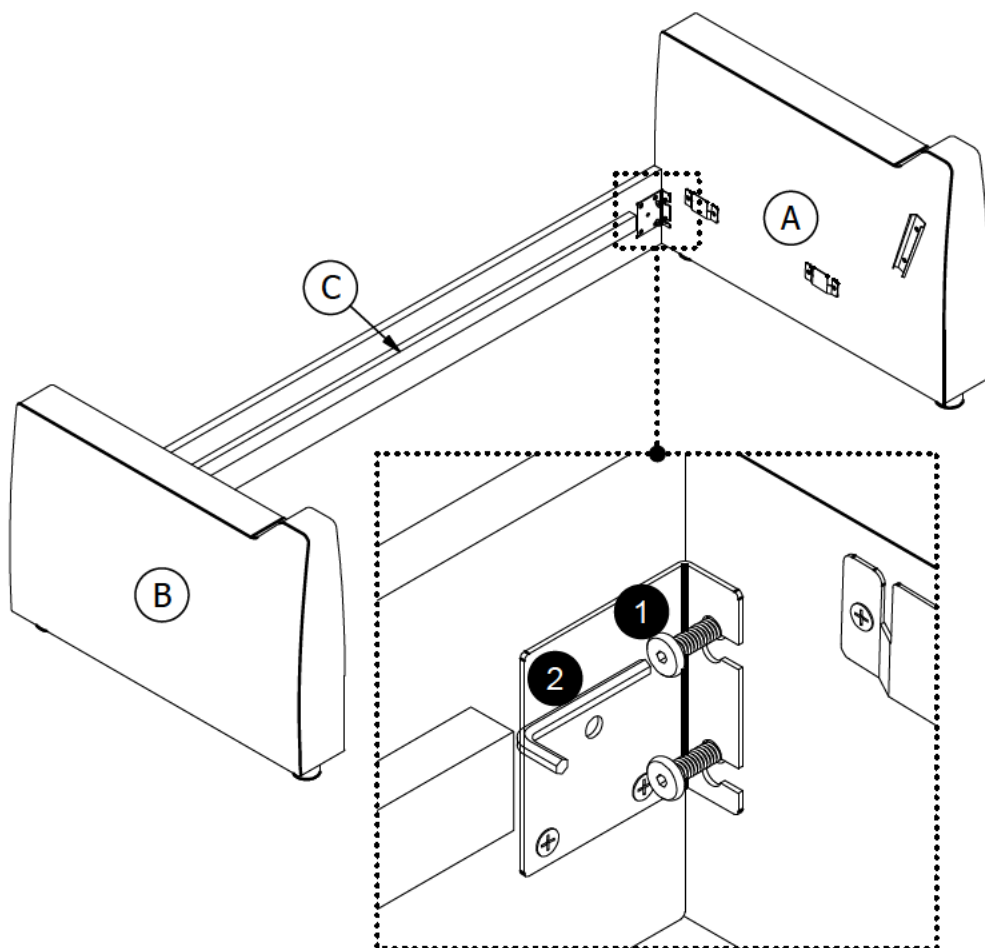

STEP 3: Manually screw **N** to **D**, as shown.

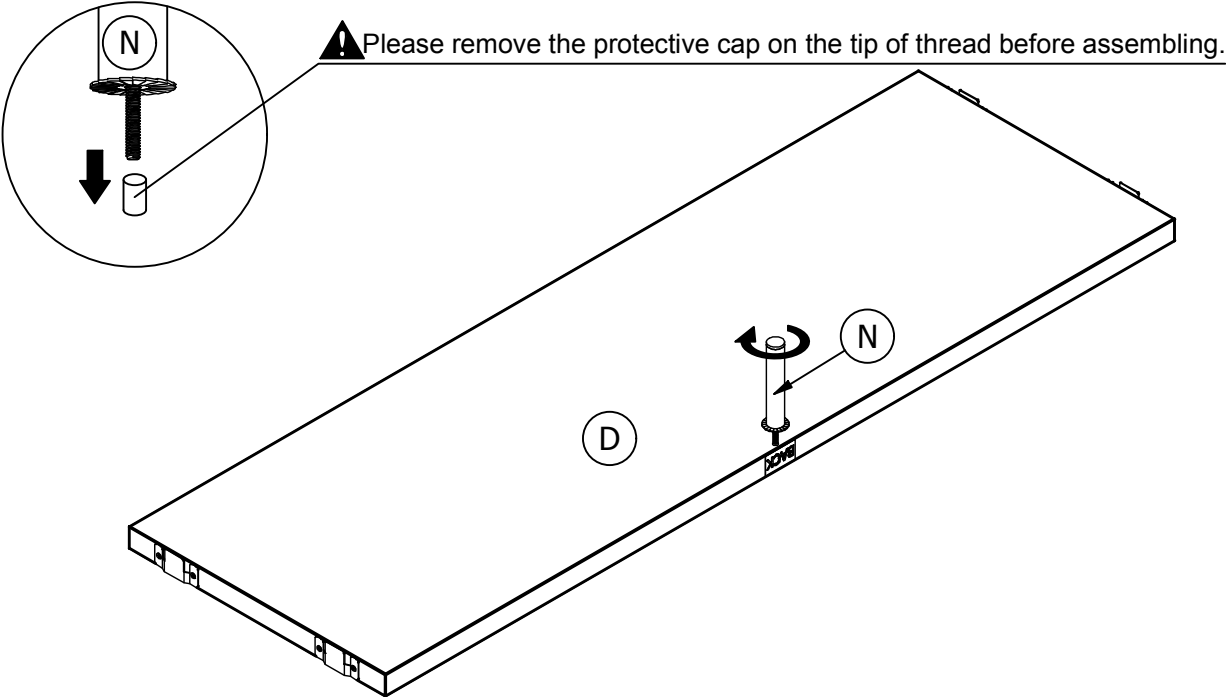


STEP 4:
Attach **D** to **A** & **B** by inserting the metal brackets on **D** into the metal glides on **A** & **B**, as shown. Push **D** with a downward force to secure it into place.

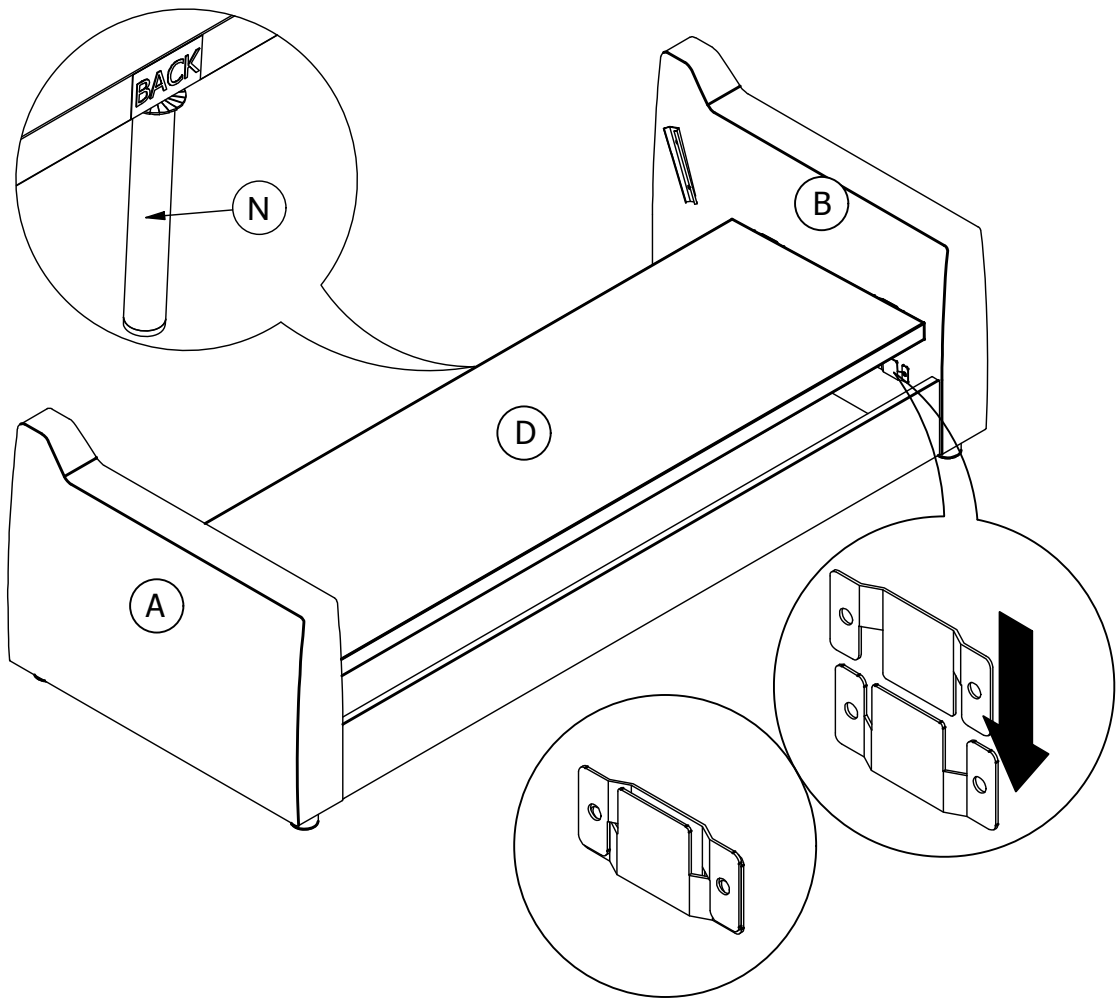


STEP 5:

Attach **E** to **A** & **B** by inserting the brackets on **E** into the metal glides on **A** & **B**. Push **E** with a downward force to secure it into place.

Note: Both sides must be inserted at the same time. This step is best performed with 2 people.

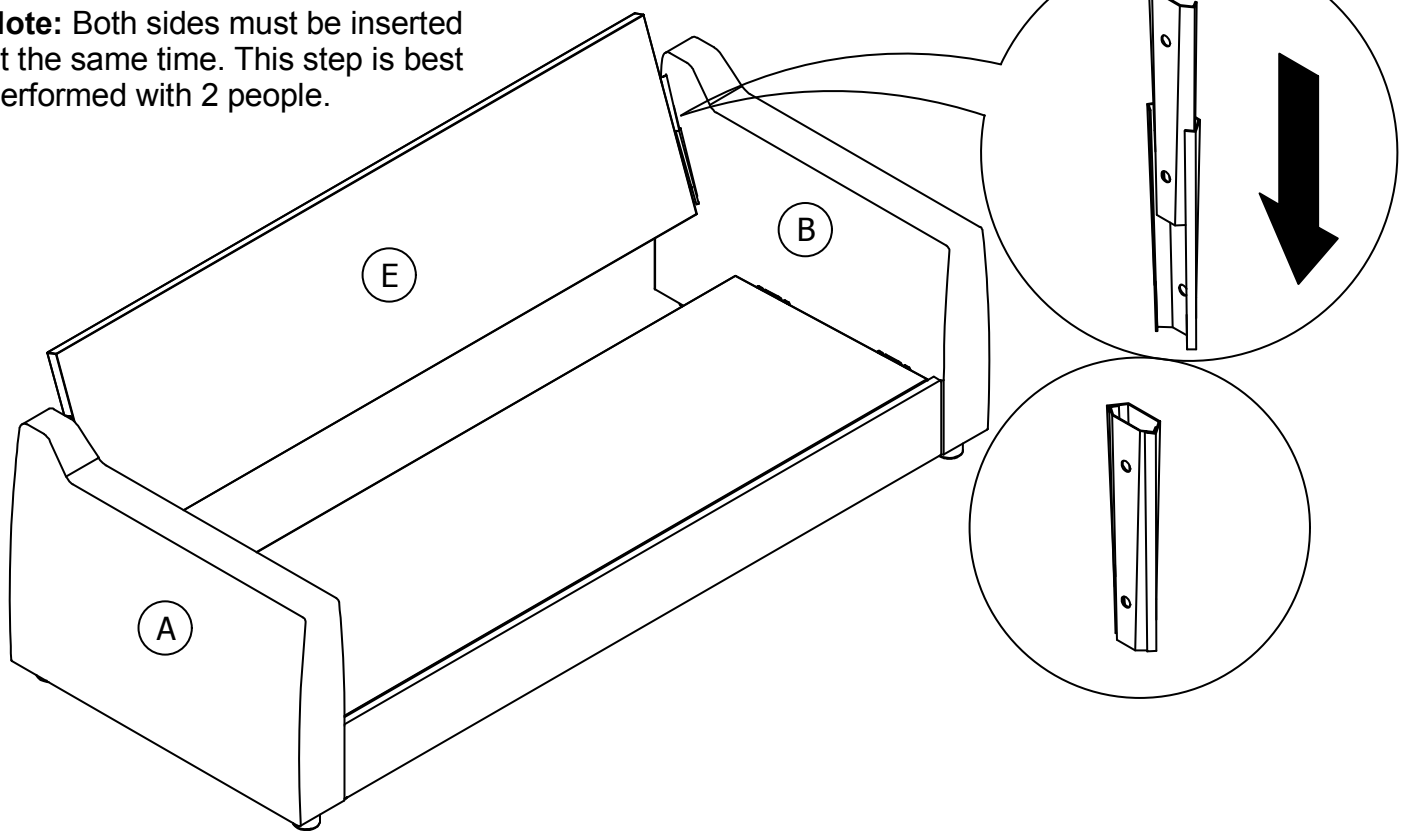**STEP 6:** Put the sofa slipcover **F** on the sofa.

Note: If necessary, iron the fabric cover with a steam iron to loosen wrinkles.

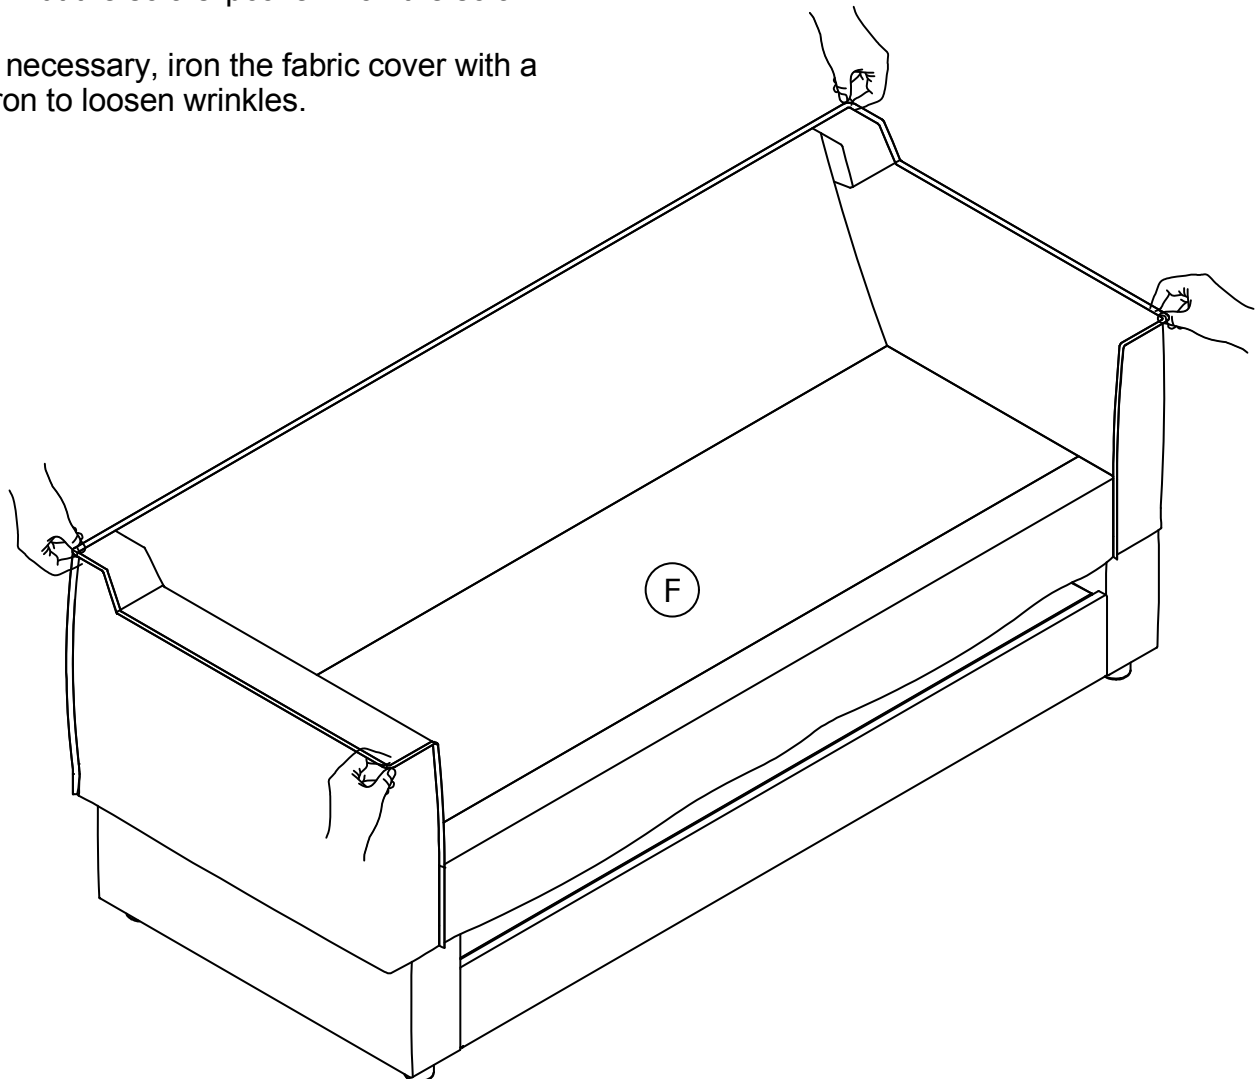


Step 7: Remove the cushions from their vacuum sealed package.



7.1 Open the zipper on **H** and insert **G** into **H** following the orientation as indicated in left view, close the zipper.

7.2 Open the zipper on **J** and insert **I** x 3 into **J** x 3, close the zipper.


7.3 Open the zipper on **K** and insert **L** x 2 into **K** x 2, close the zipper.

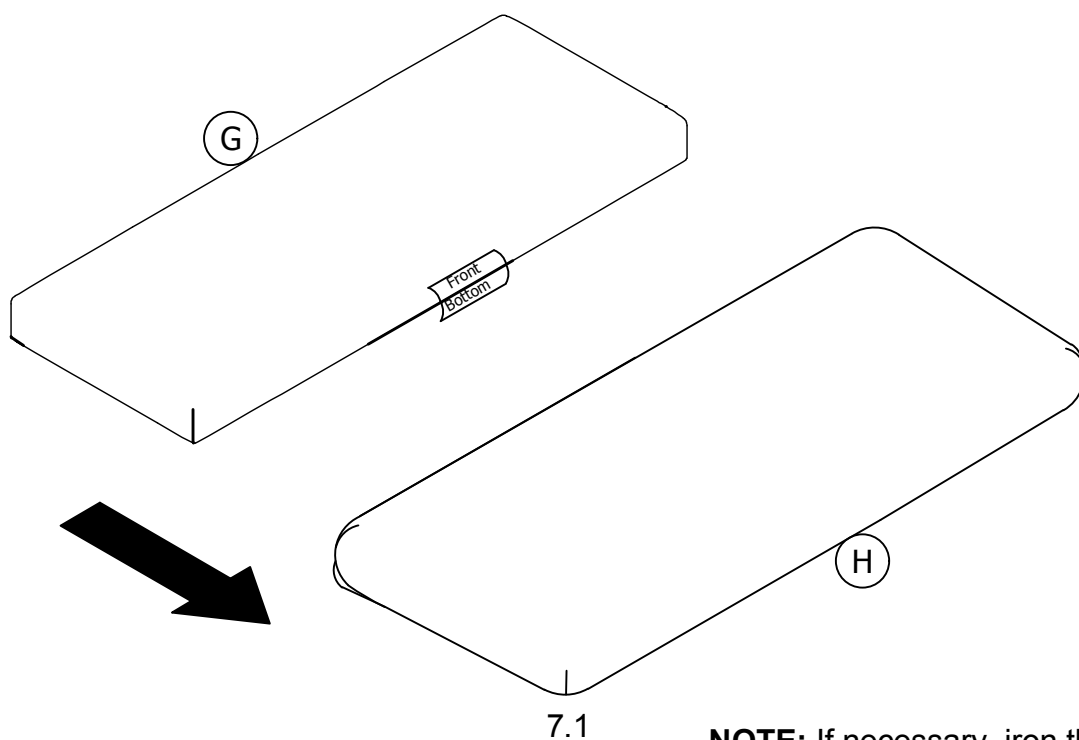

NOTE: If necessary, iron the fabric cover with a steam iron to loosen wrinkles. After unpacking all components, allow 72 hours for the compressed foam or polyester pillow fill to spring back. Blowing with a hair dryer or patting the mat with your hands will speed up the process.

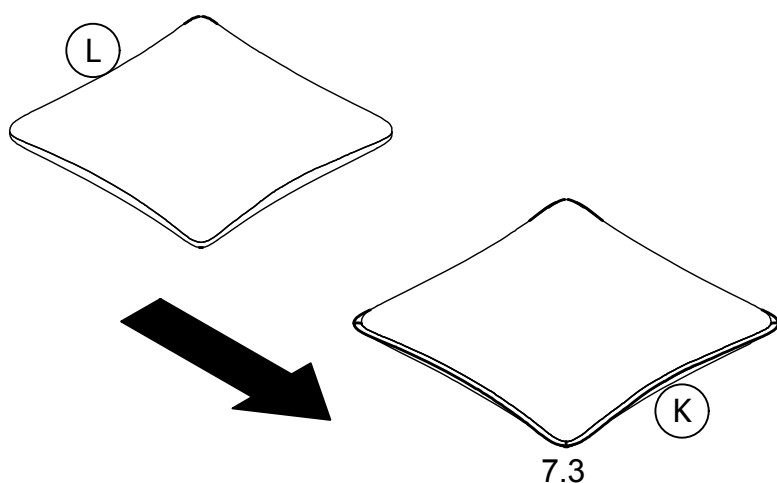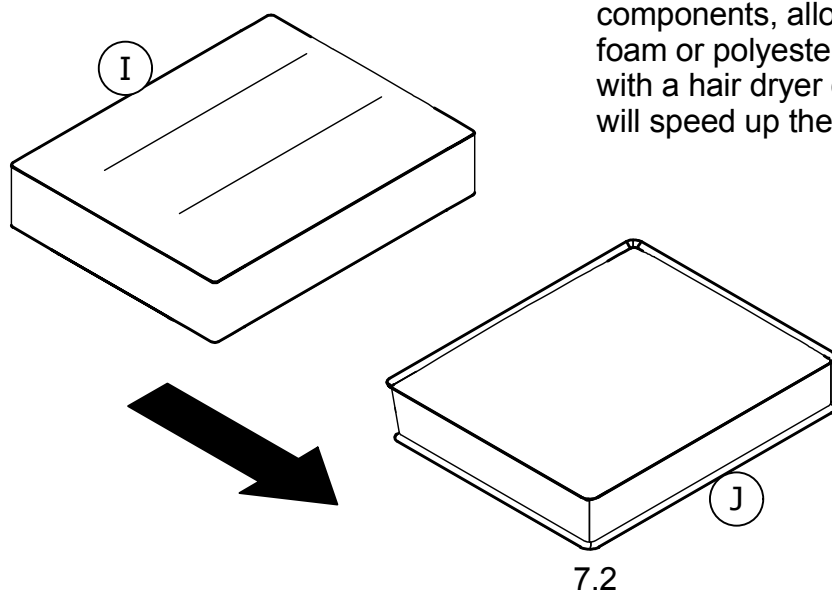

Step 8: Place (G & H), (I & J) x 3 and (K & L) x 2 onto the sofa.

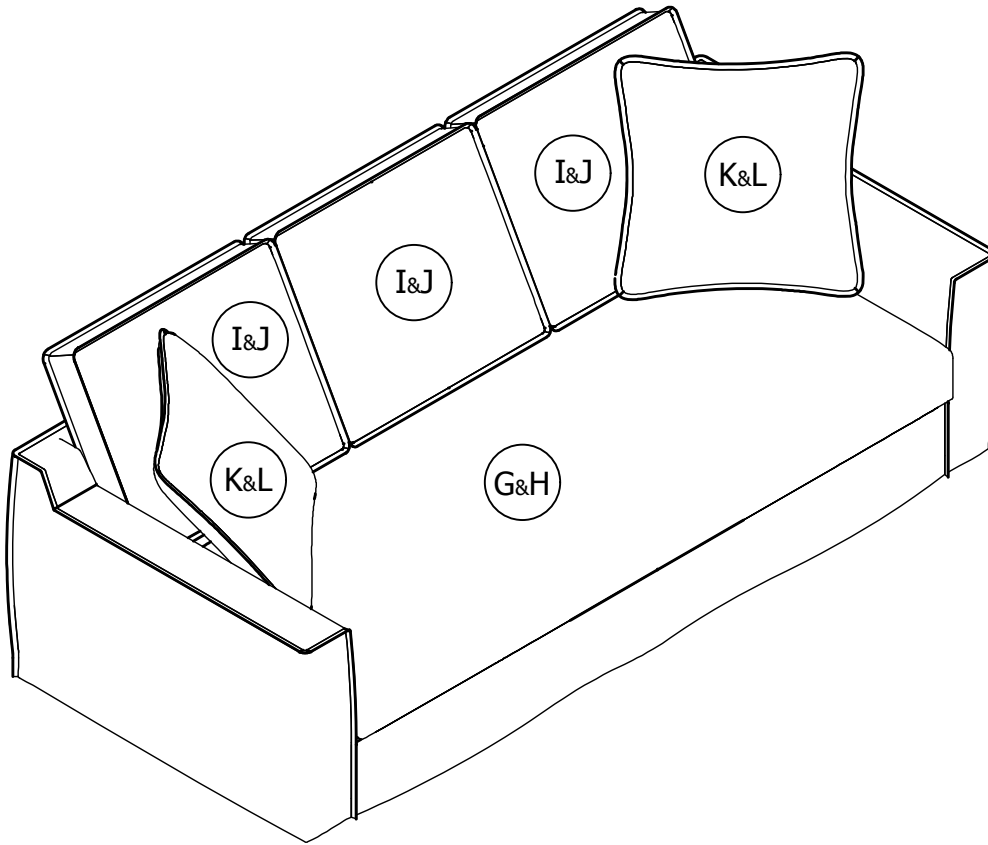

Helpful Hints

- Move your new furniture carefully, with two people lifting and carrying the unit to its new location.
- Your furniture can be disassembled and reassembled to move.
- Clean the product with a soft damp cloth. DO NOT use harsh chemicals or abrasive cleaners.

