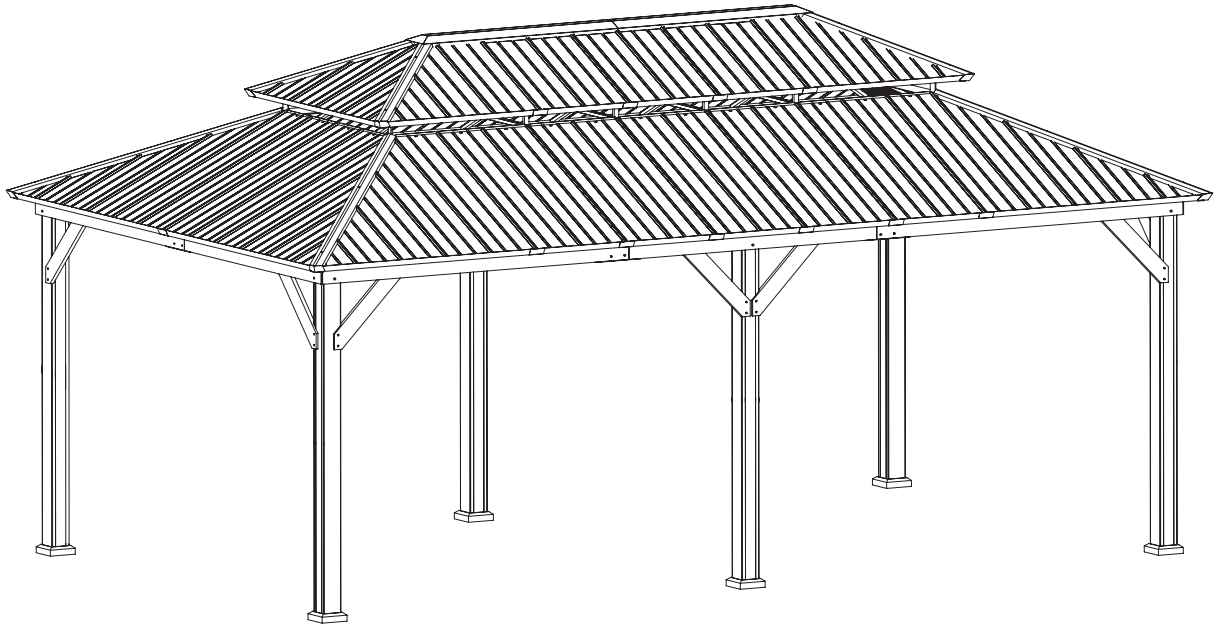


MODEL:IG10600013-1220



OWNER'S MANUAL

Rosewood 12' x 20' Cedar Framed Hard Top Gazebo

TABLE OF CONTENTS

ASSEMBLY GUIDE.....	02
USING YOUR PRODUCT.....	05

December 9, 2024

QUESTIONS?



E-mail: support@modernshade.org



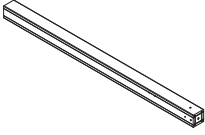
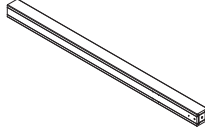

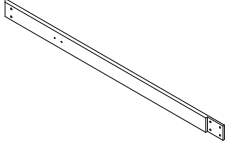
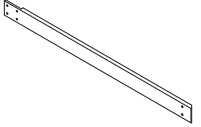
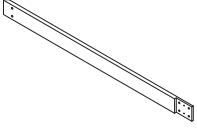
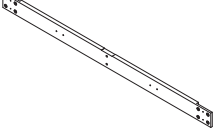





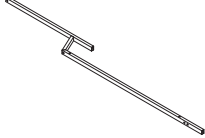











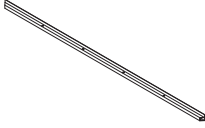










Toll Free: 1-888-666-3070



Mon-Fri: 9:00 ---17:00 PST.

ASSEMBLY GUIDE

PARTS LIST

A1 Post 1 (4pieces) 	A2 Post 2 (2pieces) 	B Foot Base (6pieces) 	C Foot Cover (6pieces) 	D5 Cross Beam 5 (4pieces) 	D7 Cross Beam 7 (2pieces) 
P0010000701	P0010000801	P0030000301	P0020000301	P0040001901	P0040002101
D8 Cross Beam 8 (2pieces) 	D13 Cross Beam 13 (2pieces) 	E1 Support Bracket 1 (6pieces) 	E2 Support Bracket 2 (6pieces) 	F1 Roof Rib 1 (4pieces) 	F3 Roof Rib 3 (4pieces) 
P0040002201	P0040002901	P0050000501	P0050000601	P0070000202	P0070000302
G1 Middle Cross Beam 1 (6pieces) 	G2 Middle Cross Beam 2 (8pieces) 	H1 Roof Support 1 (4pieces) 	H2 Roof Support 2 (4pieces) 	H6 Roof Support 6 (16pieces) 	H8 Roof Support 8 (4pieces) 
P0080000102	P0080000302	P0090000102	P0090000202	P0090000302	P0090000402
H9 Roof Support 9 (2pieces) 	J1 Roof Upper Border 1 (2pieces) 	J2 Roof Upper Border 2 (2pieces) 	J3 Roof Upper Border 3 (6pieces) 	J4 Roof Upper Border 4 (2pieces) 	K1 Connector 1 (2pieces) 
P0090000502	P0090000602	P0090000702	P0090000802	P0090001002	P0090001102
K2 Connector 2 (2pieces) 	K3 Connector 3 (2pieces) 	L1 Roof Lower Border 1 (2pieces) 	L2 Roof Lower Border 2 (2pieces) 	L3 Roof Lower Border 3 (2pieces) 	L4 Roof Lower Border 4 (2pieces) 
P0090001202	P0090001402	P0090001502	P0090001602	P0090001702	P0090001802
L9 Roof Lower Border 9 (16 pieces) 	M1 Connector 1 (6pieces) 	M2 Connector 2 (8pieces) 	M3 Connector 3 (4pieces) 	M4 Connector 4 (44pieces) 	M5 Connector 5 (16pieces) 
P0090001902	P0060001401	P0060001501	P0060001701	P0060000501	P0060000602

ASSEMBLY INSTRUCTIONS

- Please carefully unpack each of the components and hardware. check the components against the parts list and make sure there are no missing parts. lay pieces on cardboard or a soft mat to help protect the pieces from scratches.

⚠ CAUTION

Watch for sharp edges when handling the pieces, wear gloves to avoid injury.

STEP 01# Slide foot base **B** and foot cover **C** onto post **A1**. Use four (4) **[AA]** bolts to attach foot base **B** to post **A1**. Repeat with the other three (3) posts **A1** and two (2) posts **A2**.

- For ease of assembly, it is recommended to have 3 or more people and allow enough time to completely finish the assembly. assembly can take 6-8 hours. a step-ladder is required for assembly (not included).
- Follow step by step instructions, and follow all safety warnings provided with your tools.
- DO NOT tighten screws until all the screws and washers are properly installed. tighten screws securely, do not over tighten.
- Gazebo should not be used in inclement weather and high winds.

STEP 02# Attach four (4) **[JJ]** screw nuts to each end of cross beam **D13**. Use four (4) **[FF]** bolts and four (4) **[LL]** flat washers to attach cross beam **D5** to connector **M1** and cross beam **D13**. Repeat with the other crossbeam **D5** and connector **M1** with the other end of cross beam **D13**.

