







 Armrest seat frame with cushion(1)	 Backrest(1)	 Back cushion(1)	 Sofa foot (4)
 8*85 Screw(4)	 M5*100*40 Wrench	 16mm Gasket (4)	


STEP 1: Insert the backrest into the seat frame



STEP 2: Turn over the sofa base and install the sofa feet

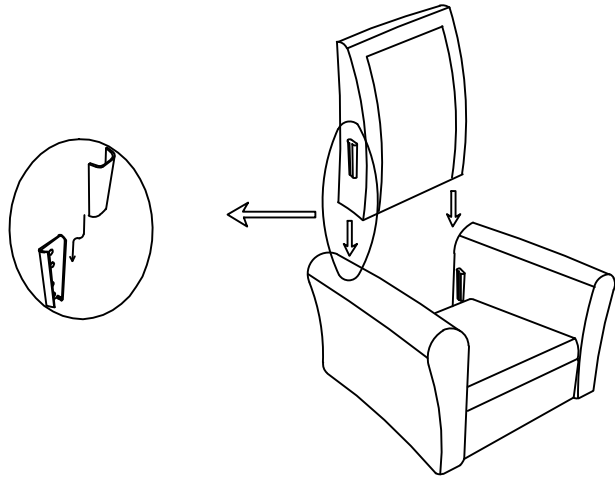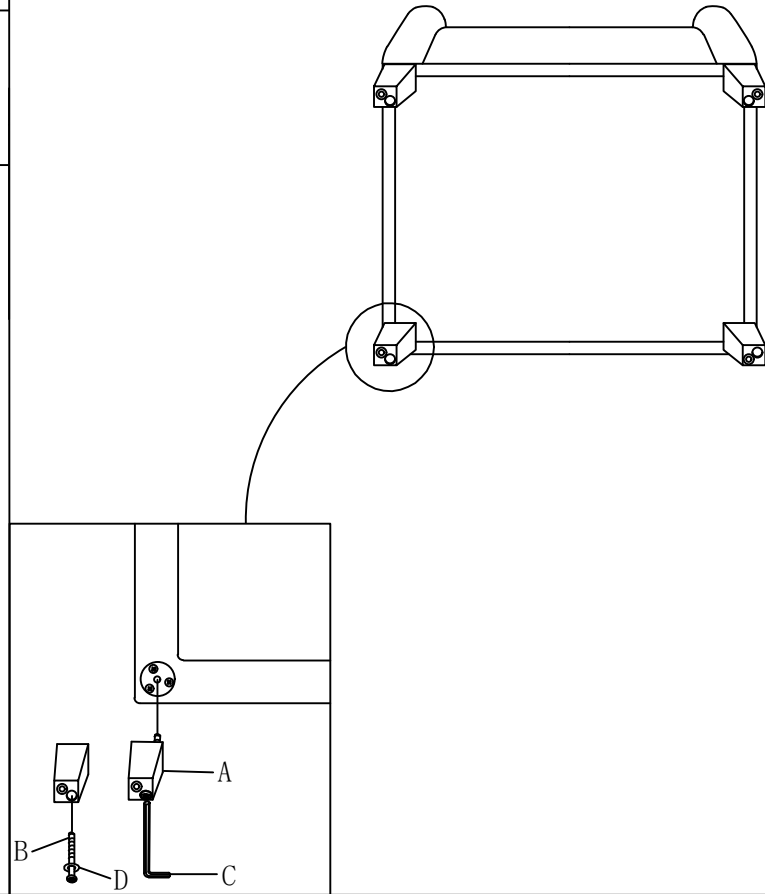

STEP 3: Put the back cushion on the sofa

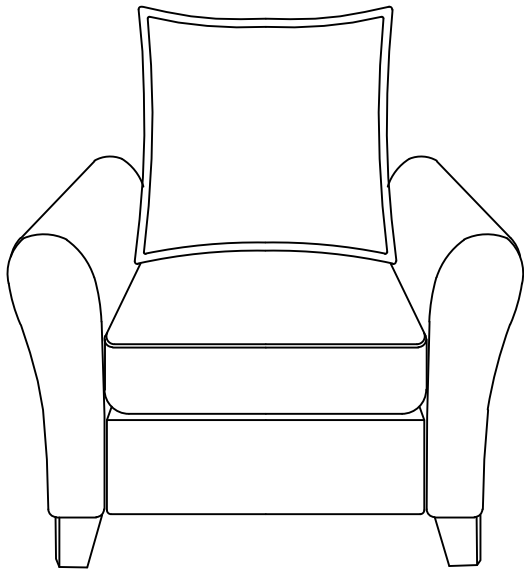

STEP 4: Assembly completed

