
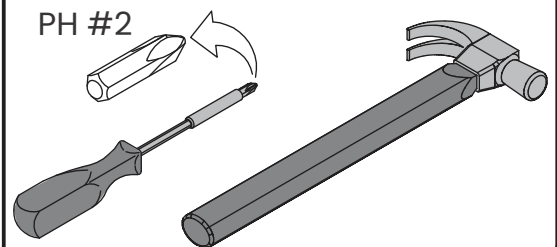
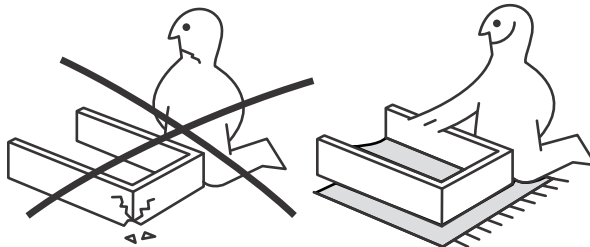
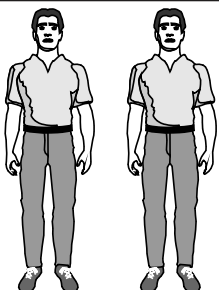


ASSEMBLY GUIDE

URBAN 3-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

SKU 7131D - Raised Panel Doors / SKU 7131M - Mirrored Doors - White
SKU 7135D - Raised Panel Doors / SKU 7135M - Mirrored Doors - Gray
SKU 7137D - Raised Panel Doors / SKU 7137M - Mirrored Doors - Black

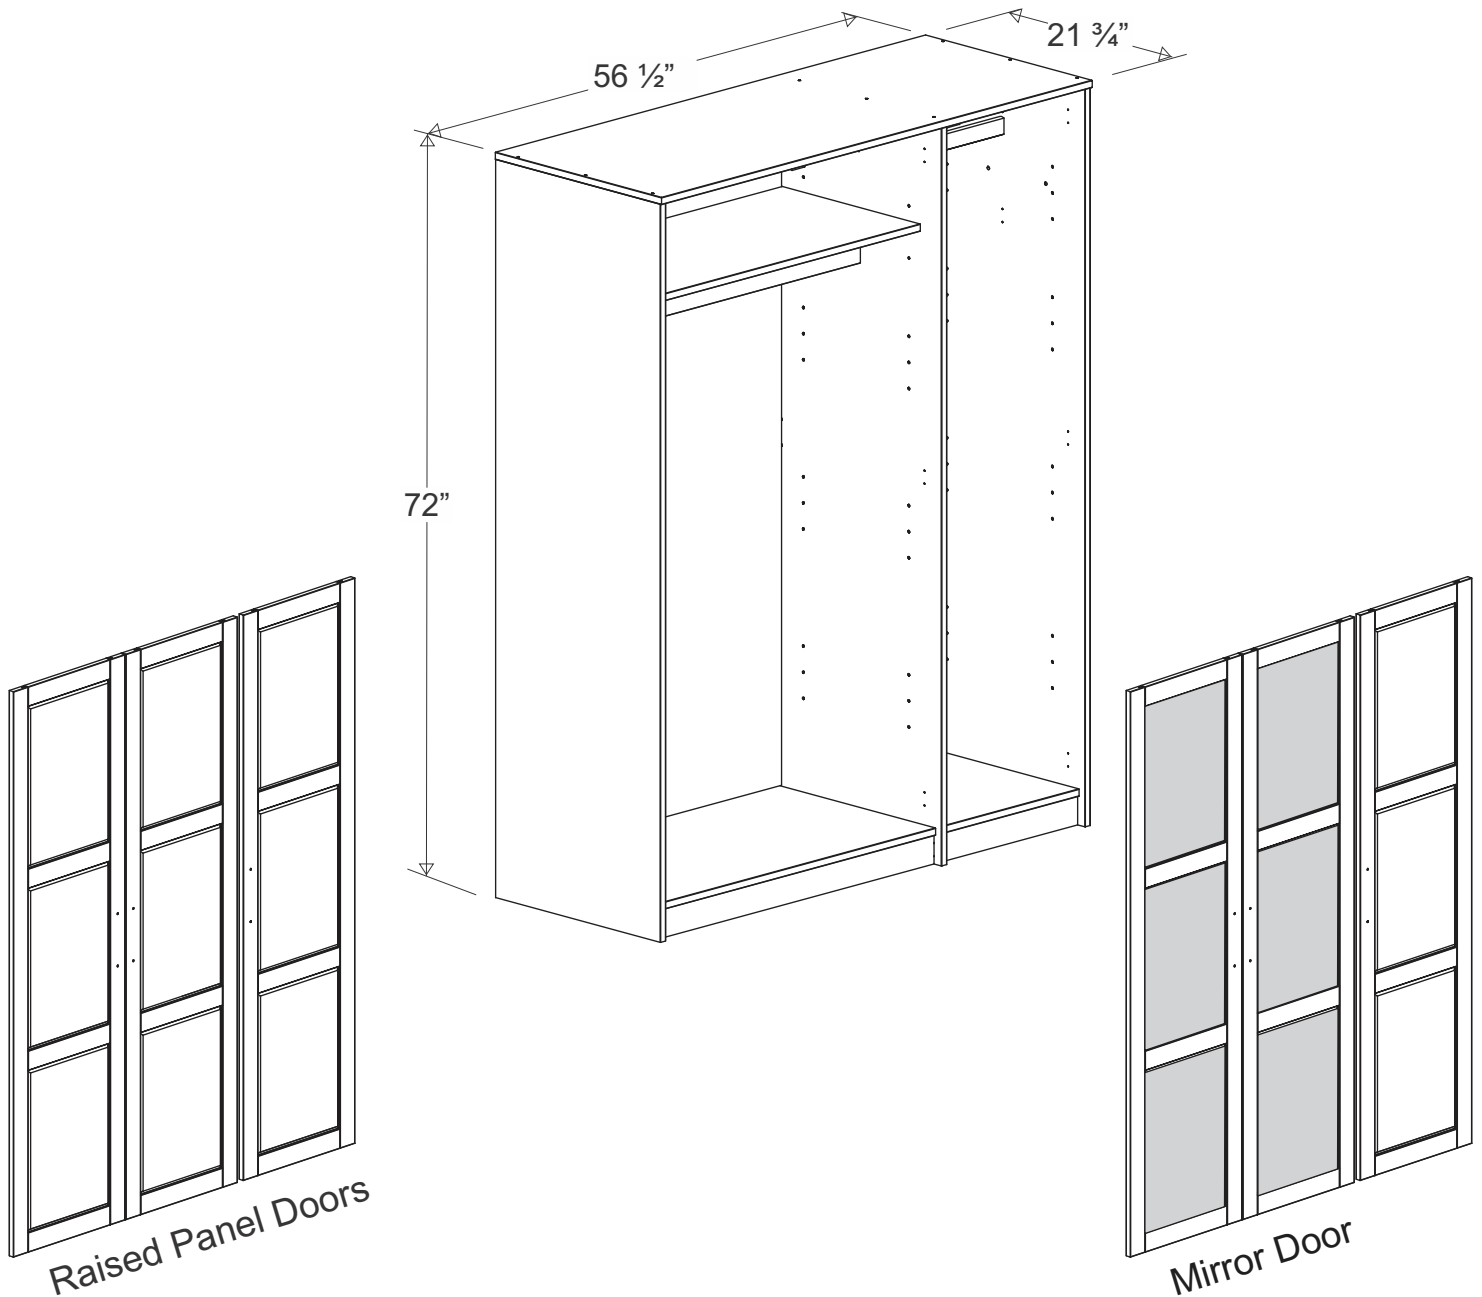


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com for assistance.










Assembly Tips


- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

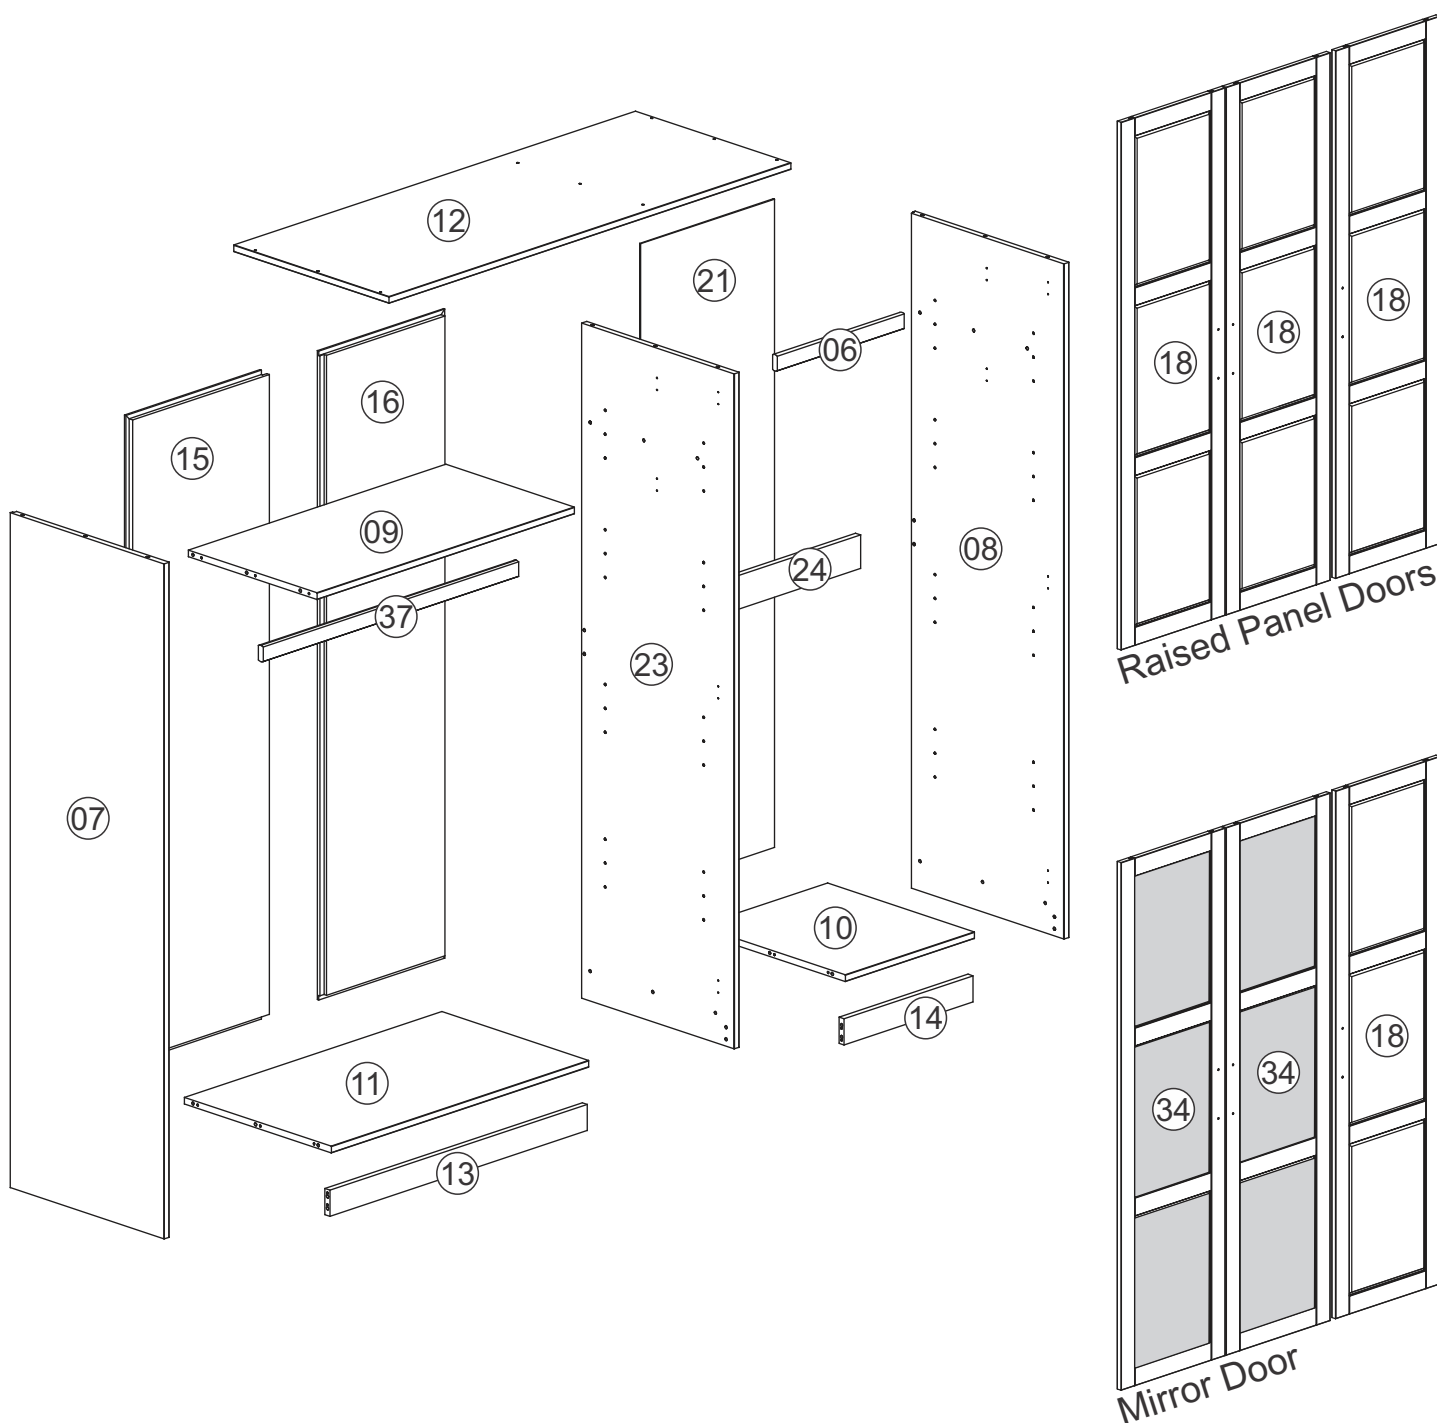

Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	31+2
A16	 4,0x40	09+1
A25	 M4x25	06+1
A44	 3,5x14	54+3
C2	 8,0x25	39+2
D3	 45x27x12	02
D10		04
D27		05+1
D35	 50x13x1,2	02
F16		09
G1	 10x10	57
H12		03

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



**WARNING:
CHOKING HAZARD**

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.





WARNING:

Important Safety Notice:


This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.


01)

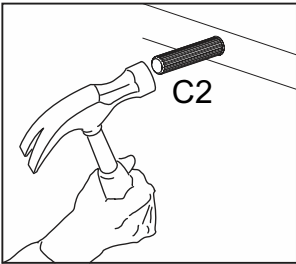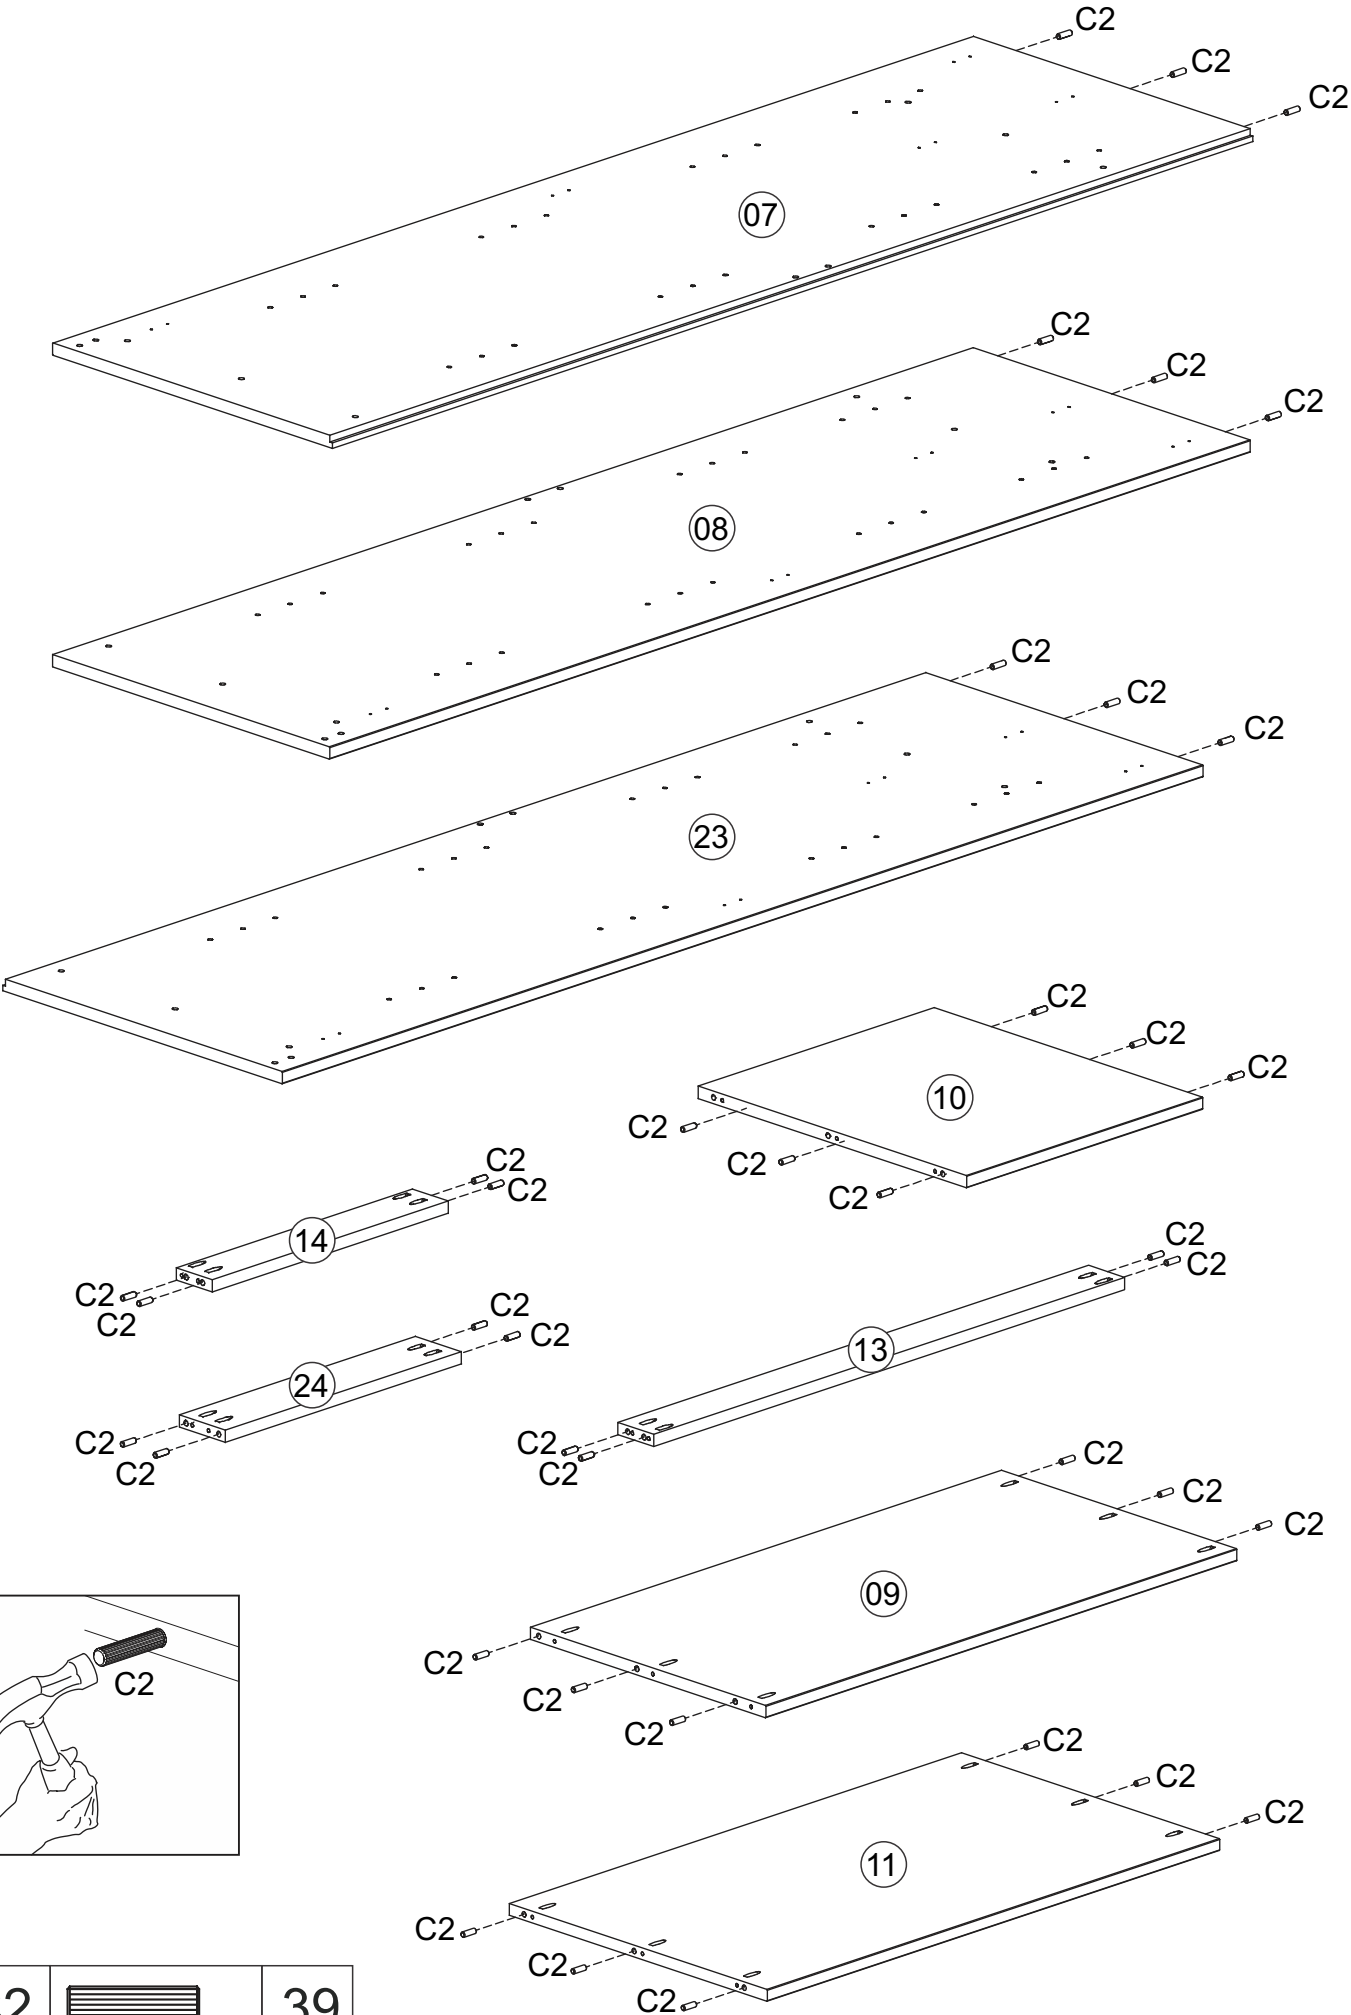


C2		39
8,0x25		


02)

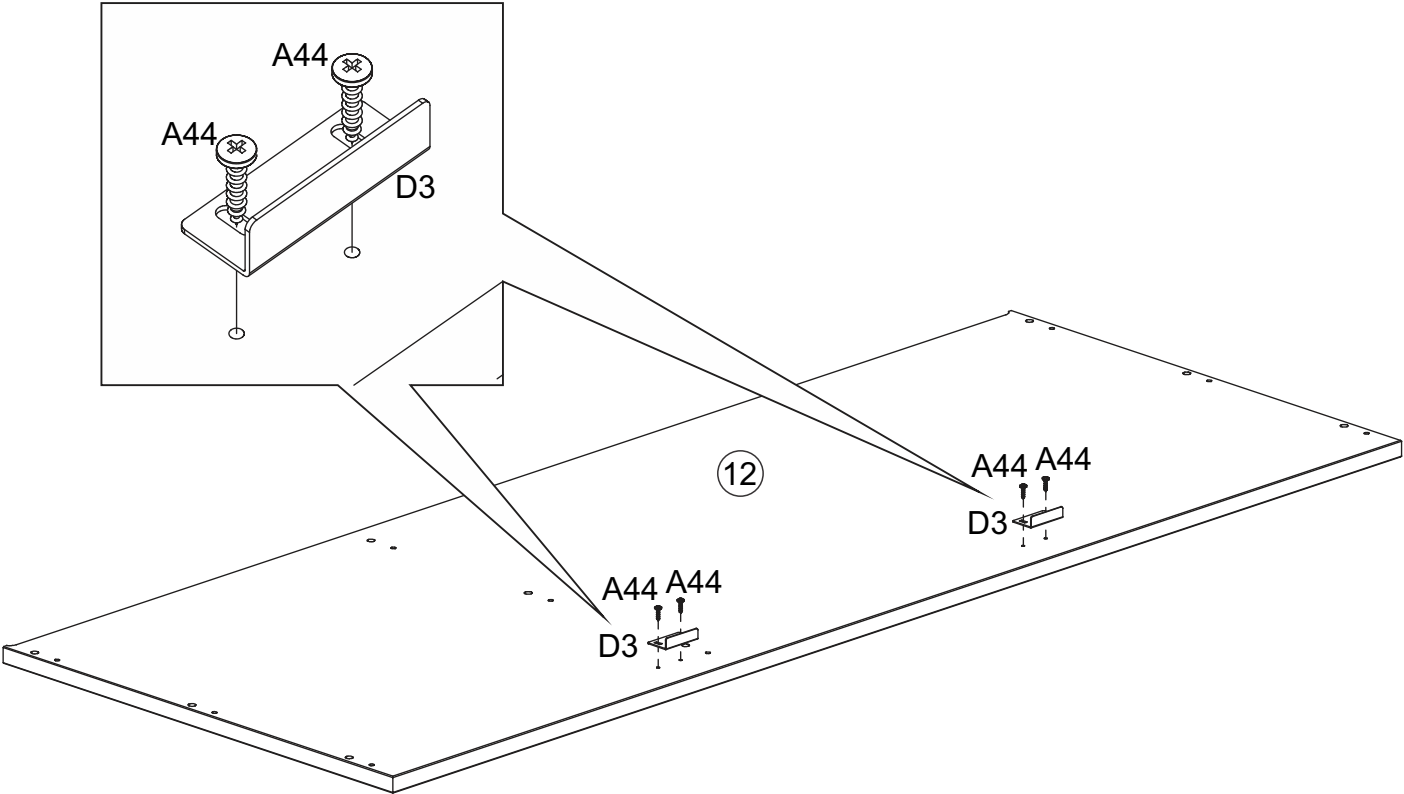


A44	 3,5x14	04	D3		02
-----	---	----	----	---	----

03)

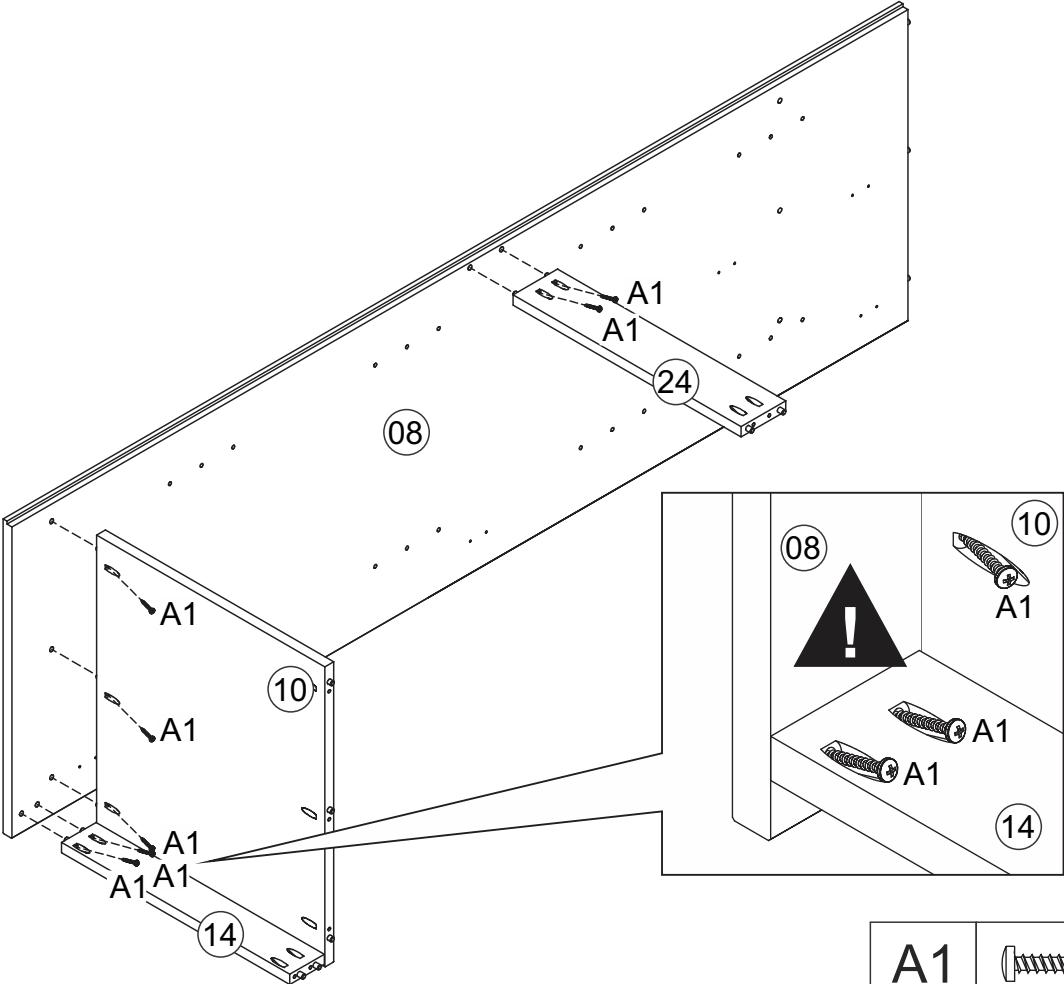


A1	 4,0x30	07
----	---	----


04)

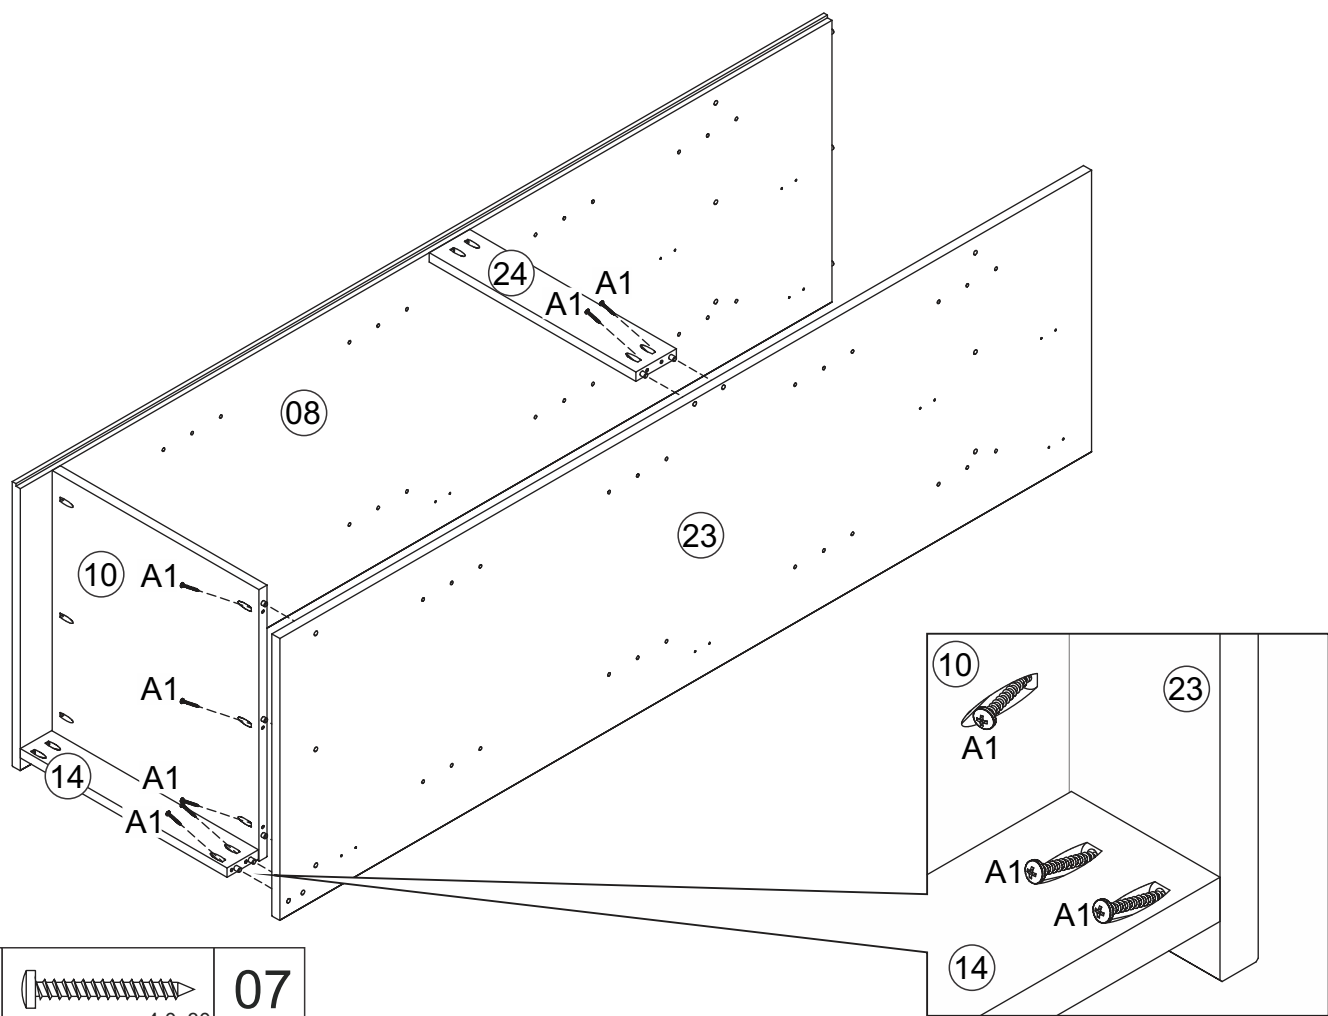


05)

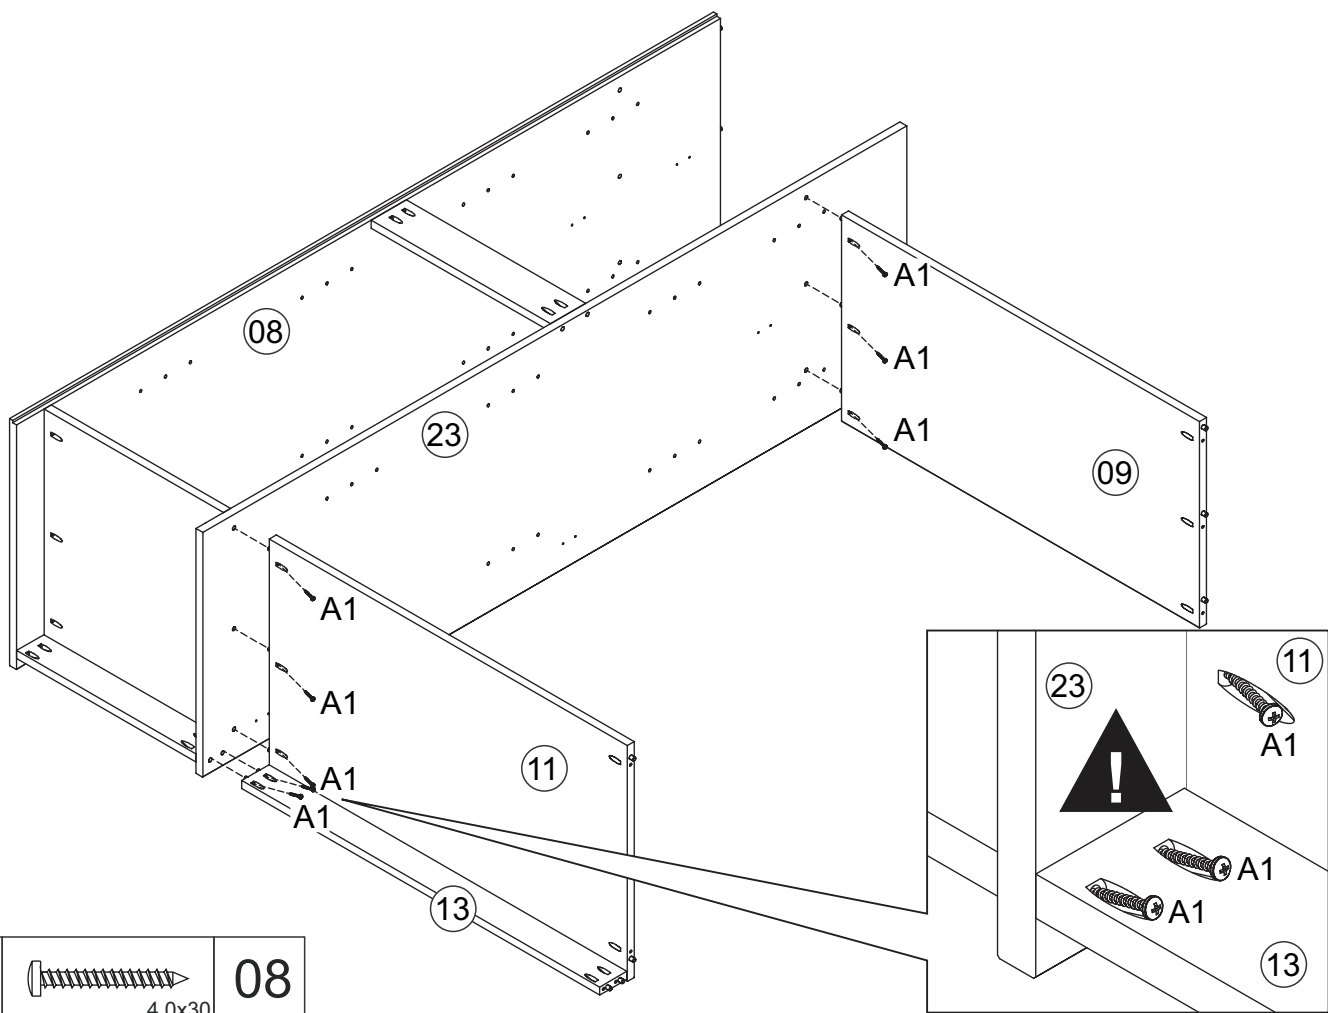


06)

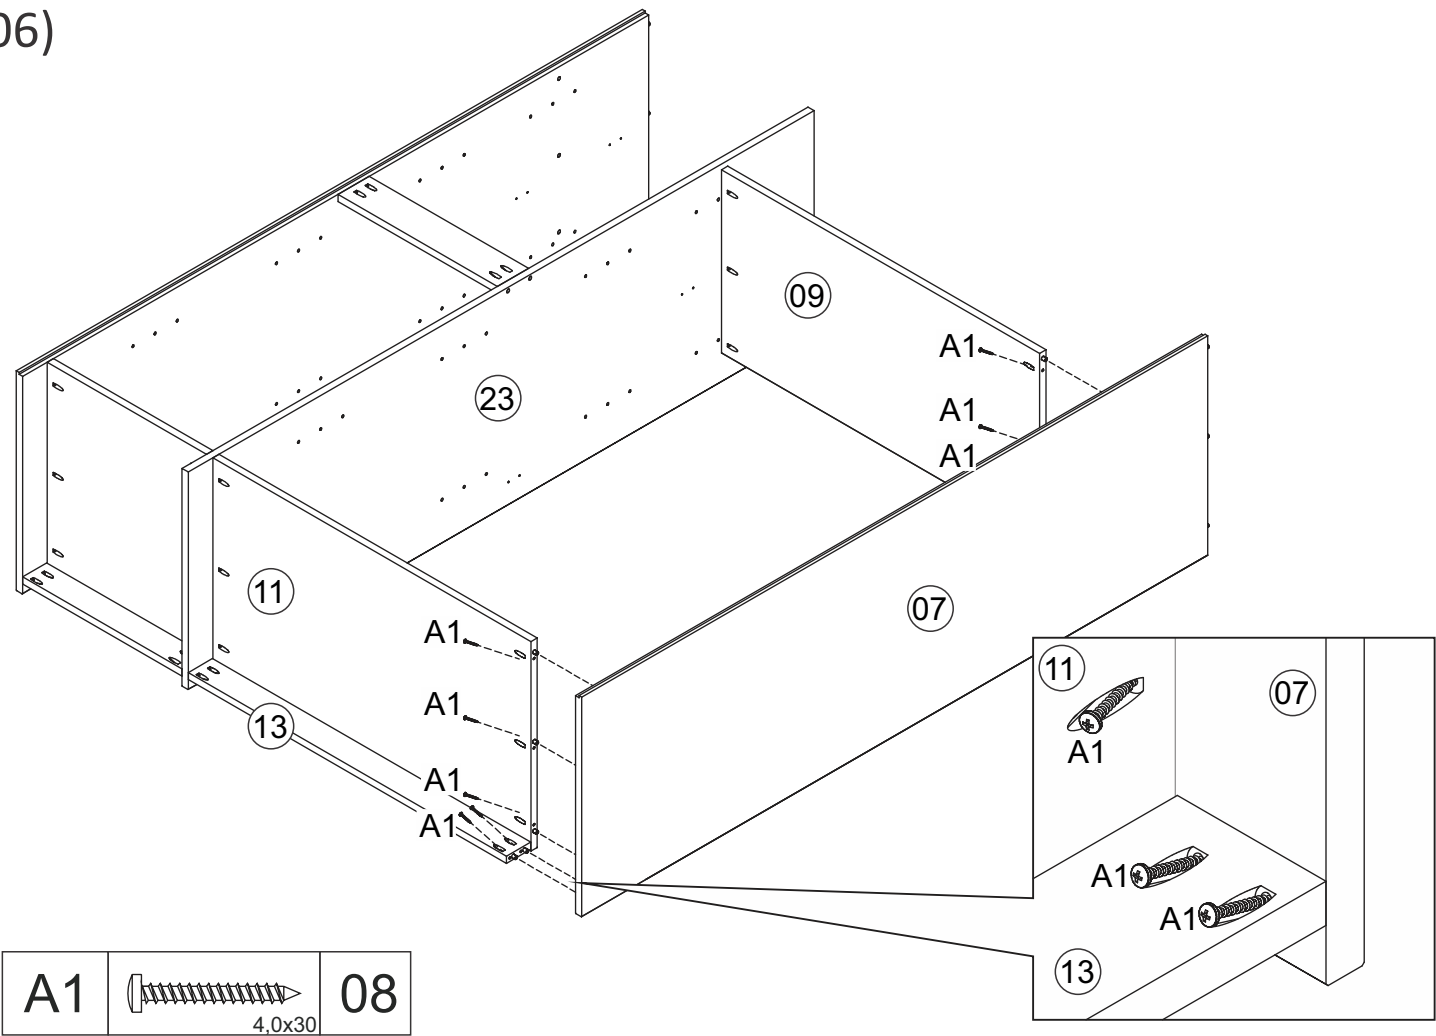


07)

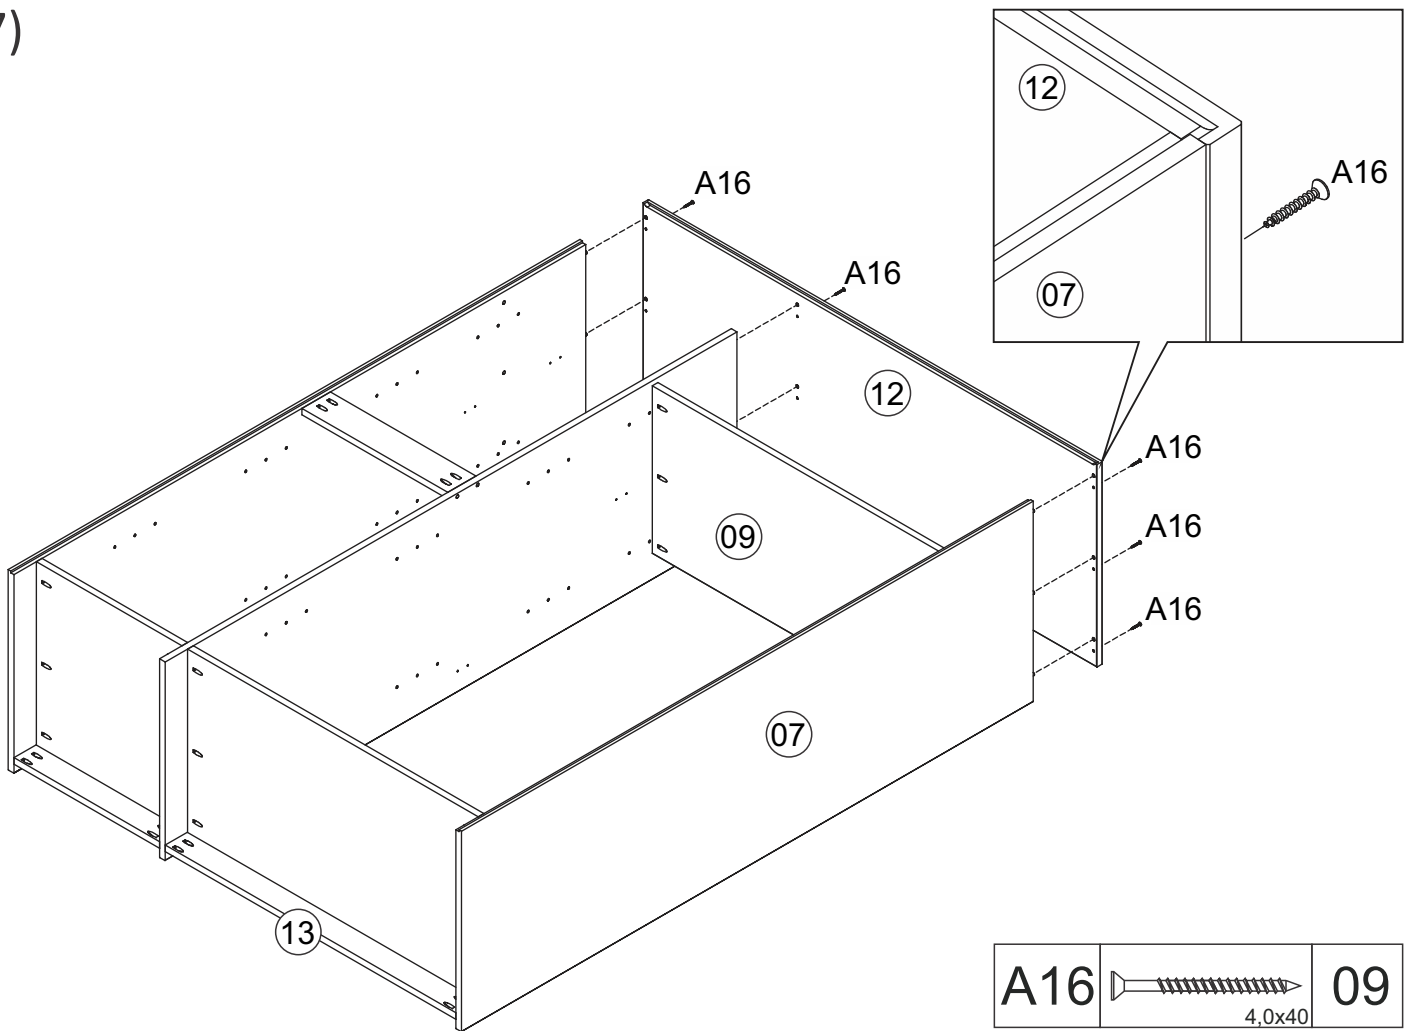


08)

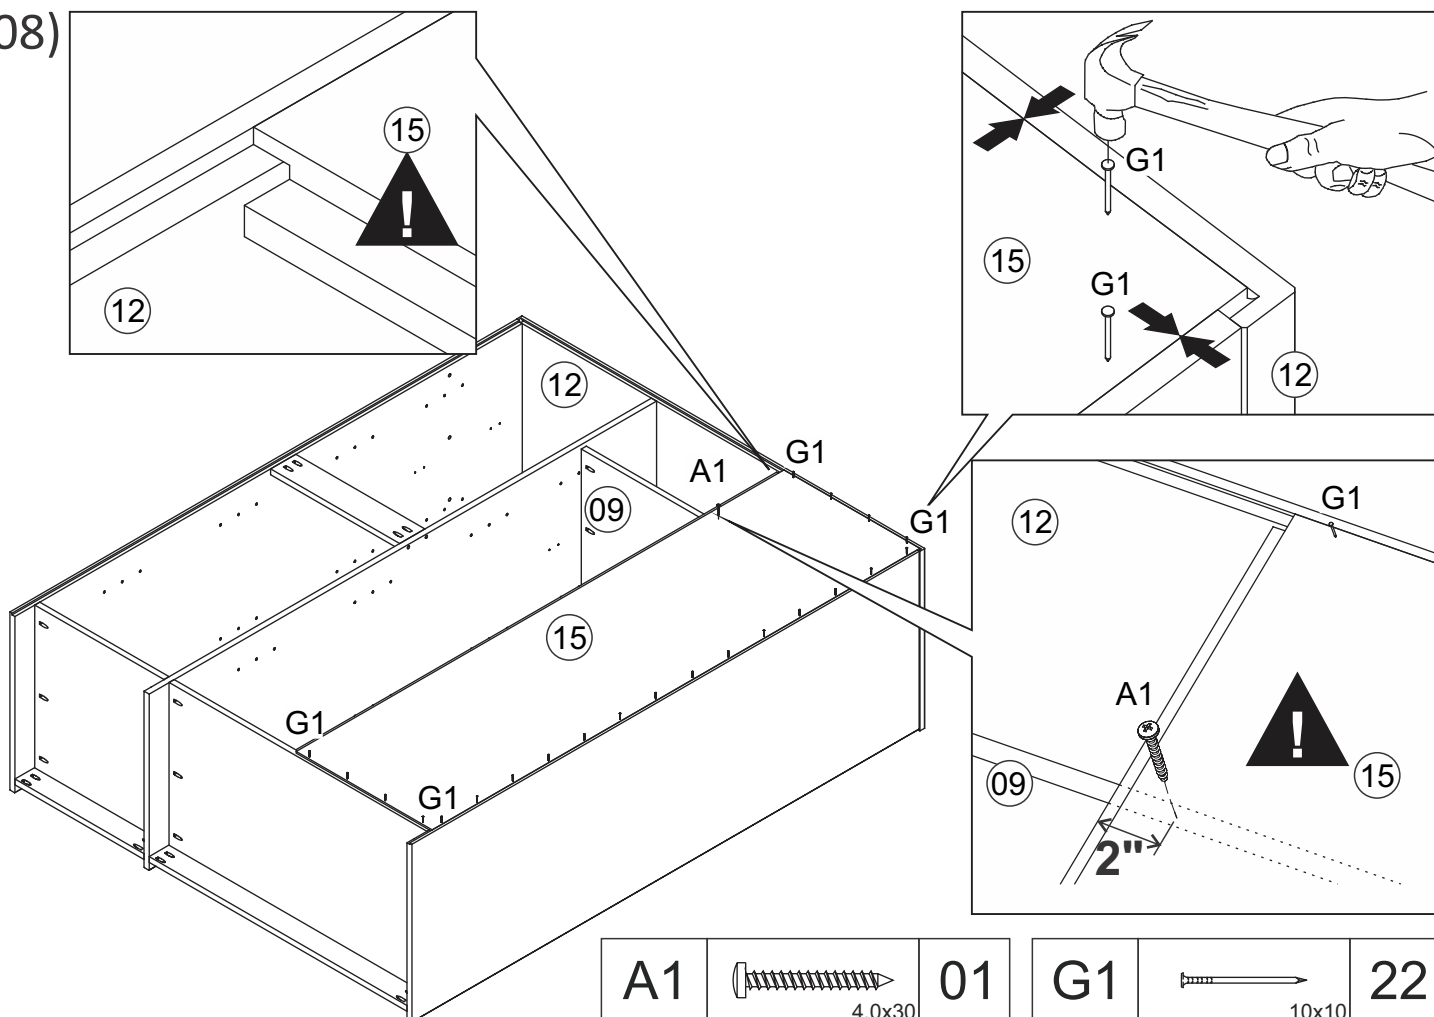


09)

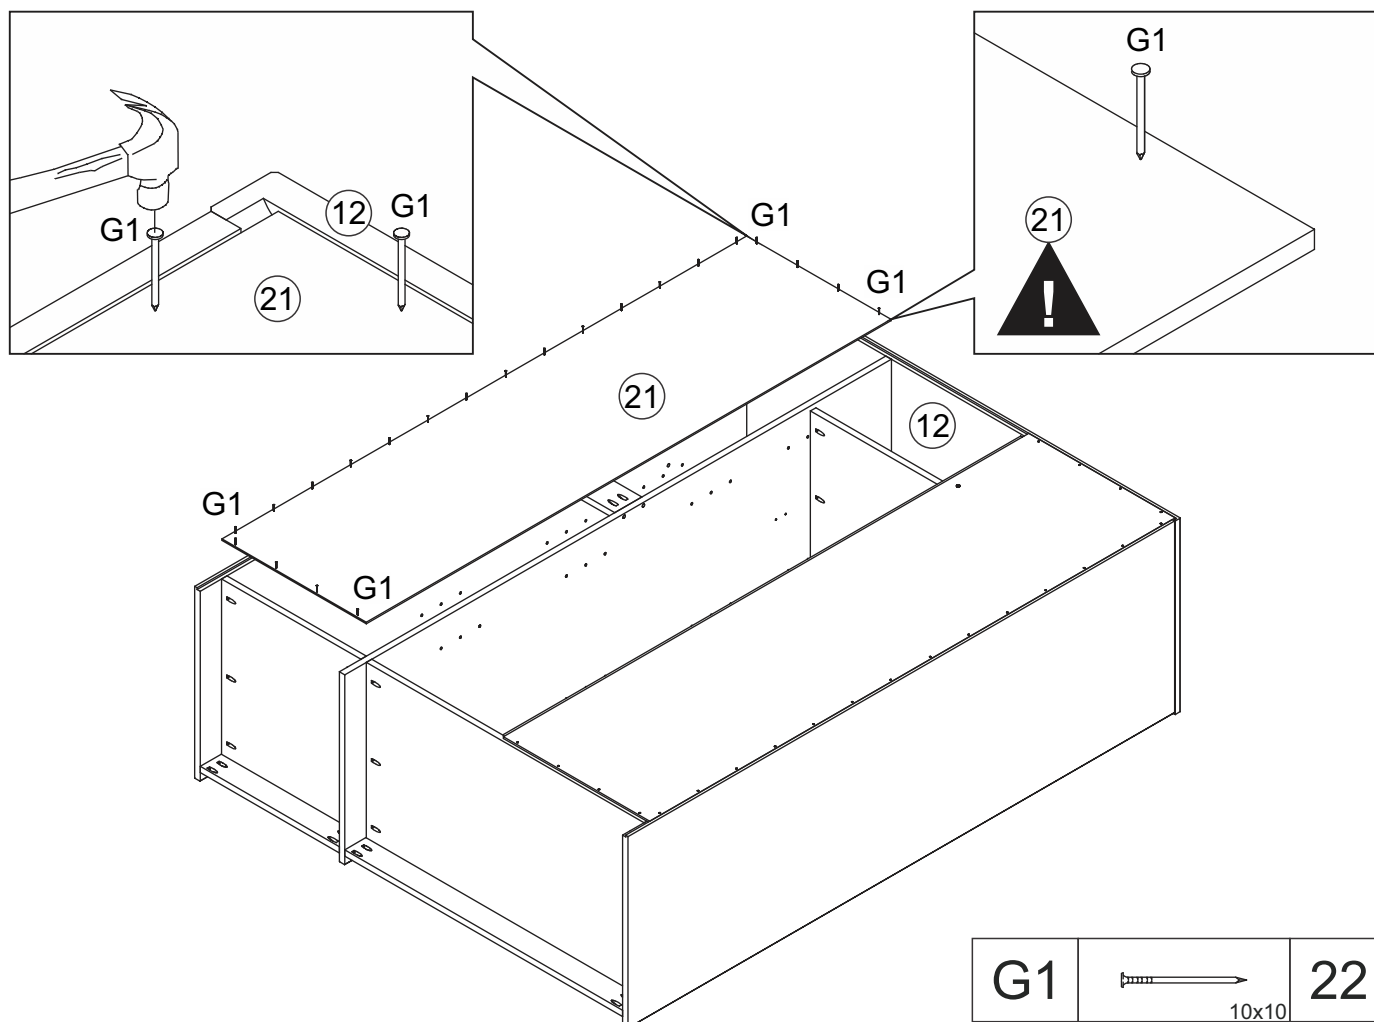

10)


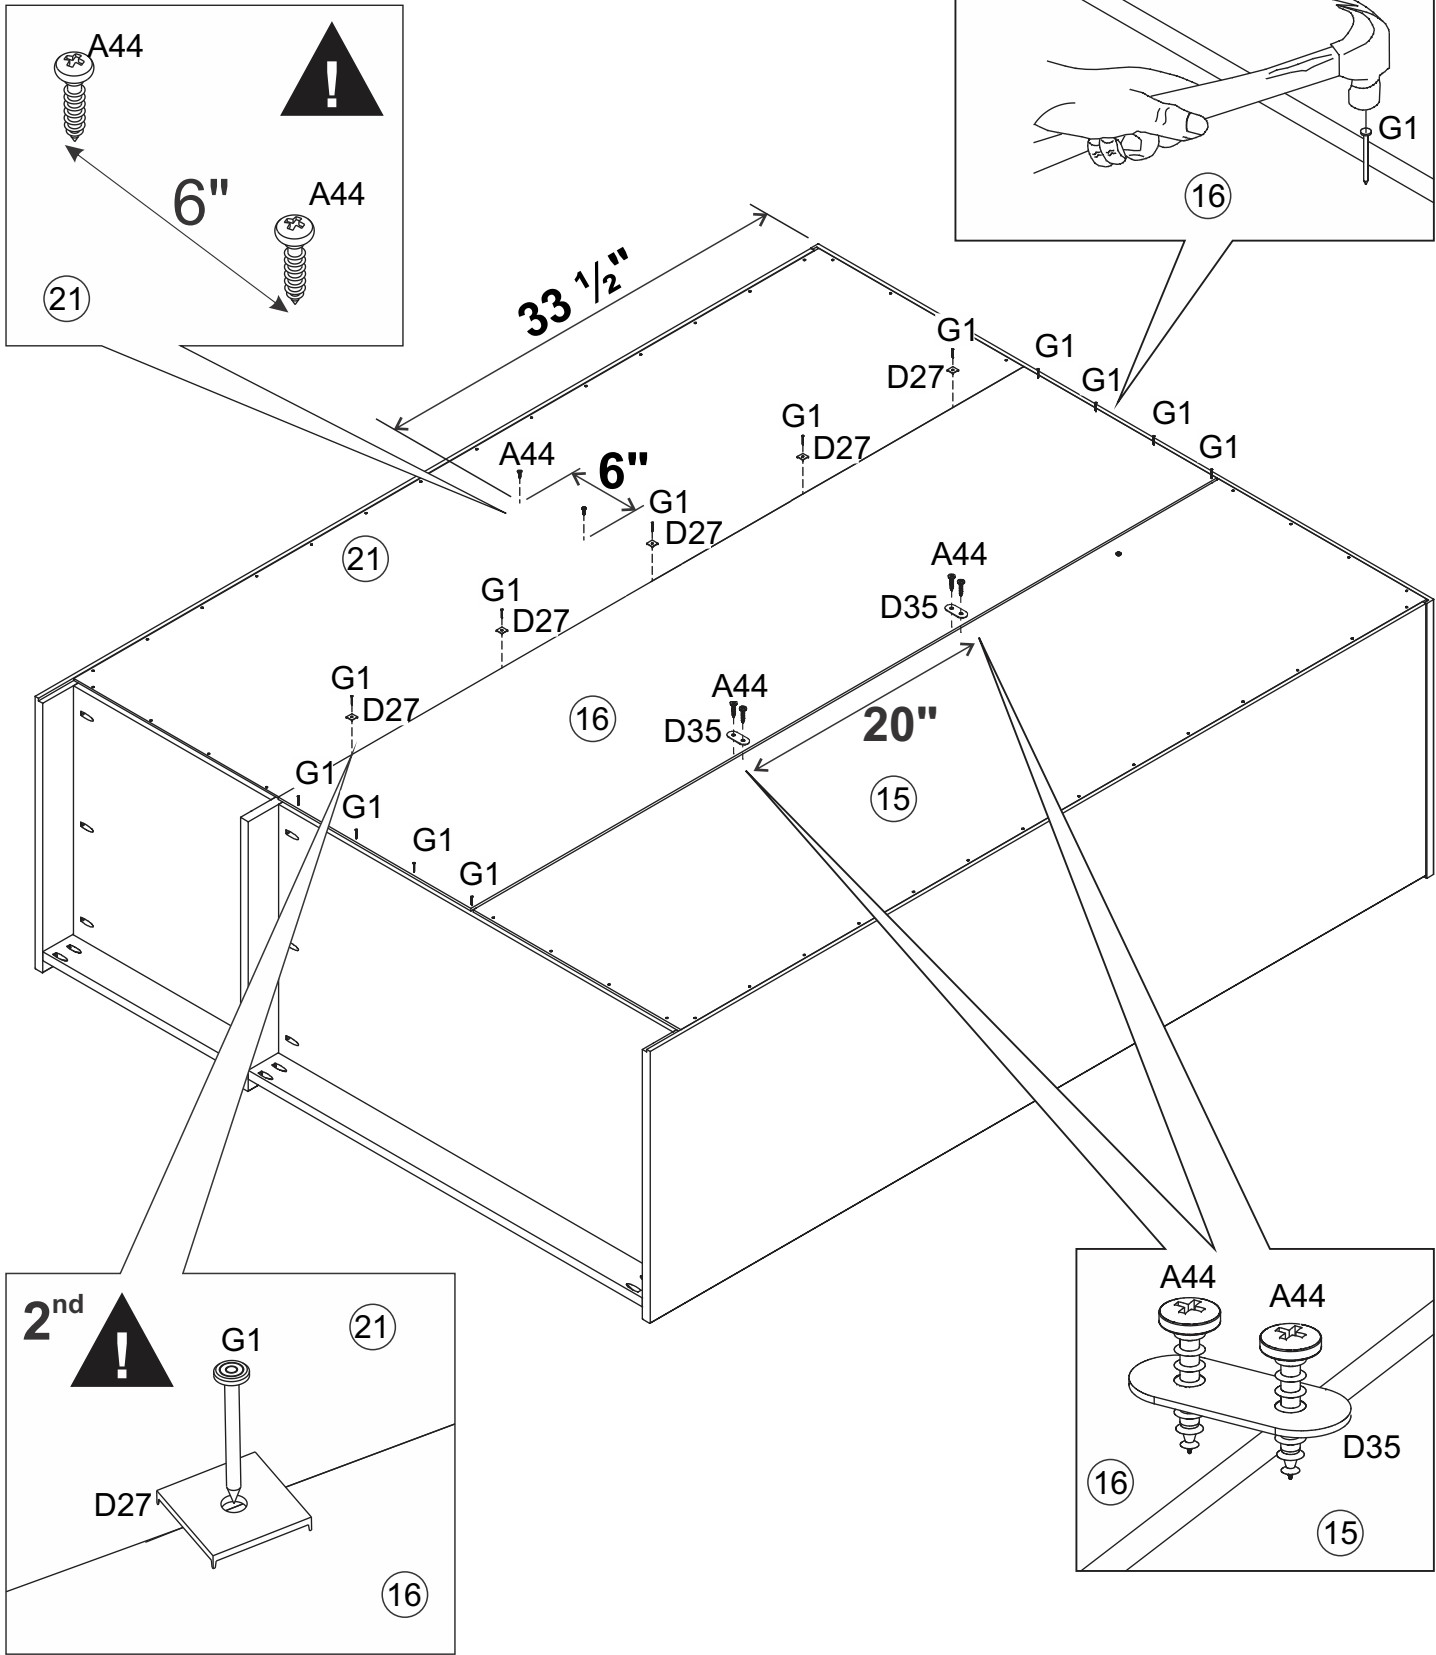



A44	 3.5x14	06
D27		05

D35		02
-----	---	----




G1	 10x10	13
----	--	----

11)

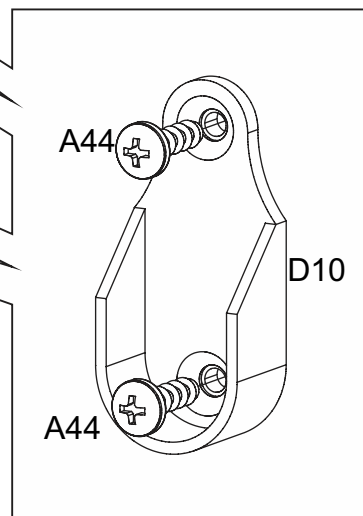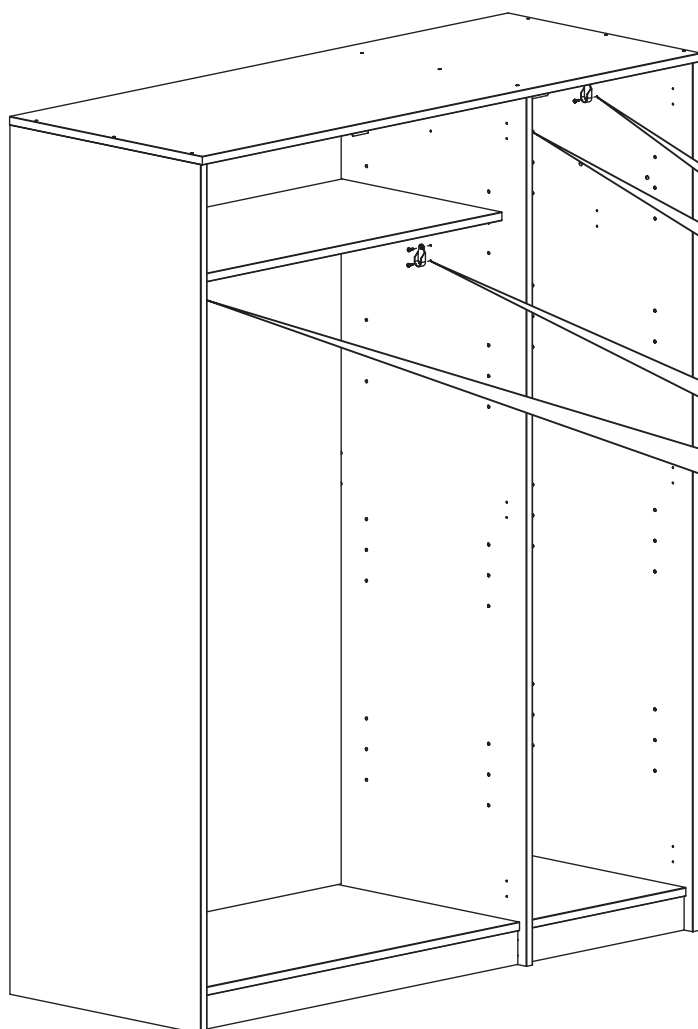


A44	 3,5x14	08
D10		04

12)

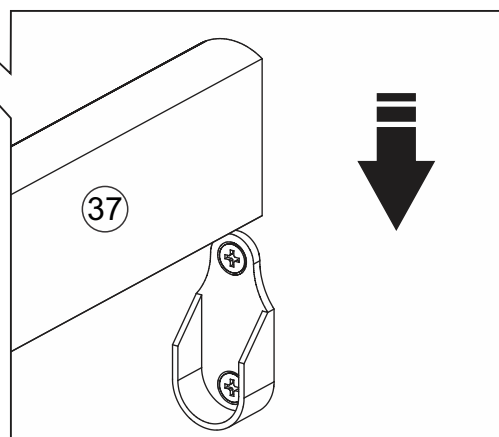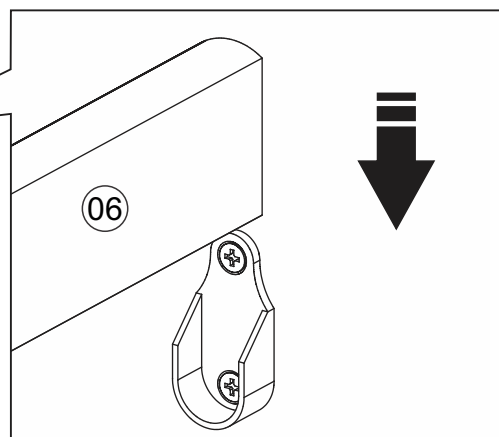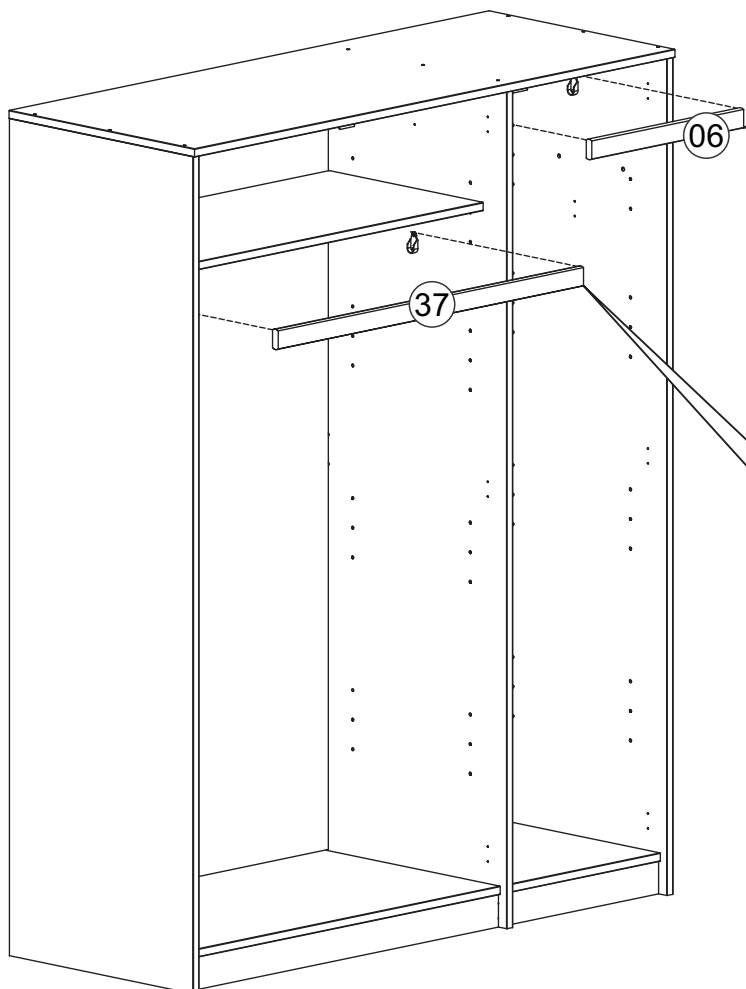


13)

If the hinge (F16) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

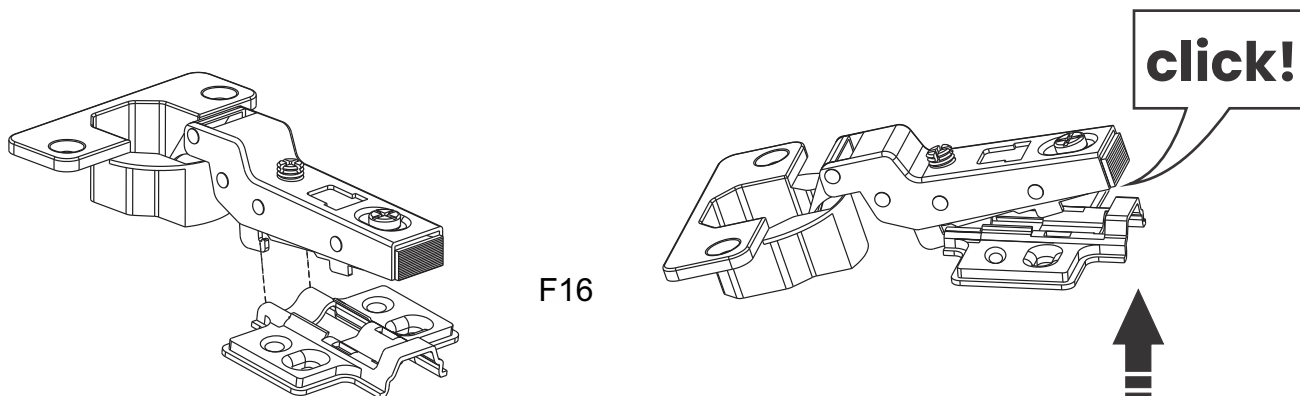


14)
3x

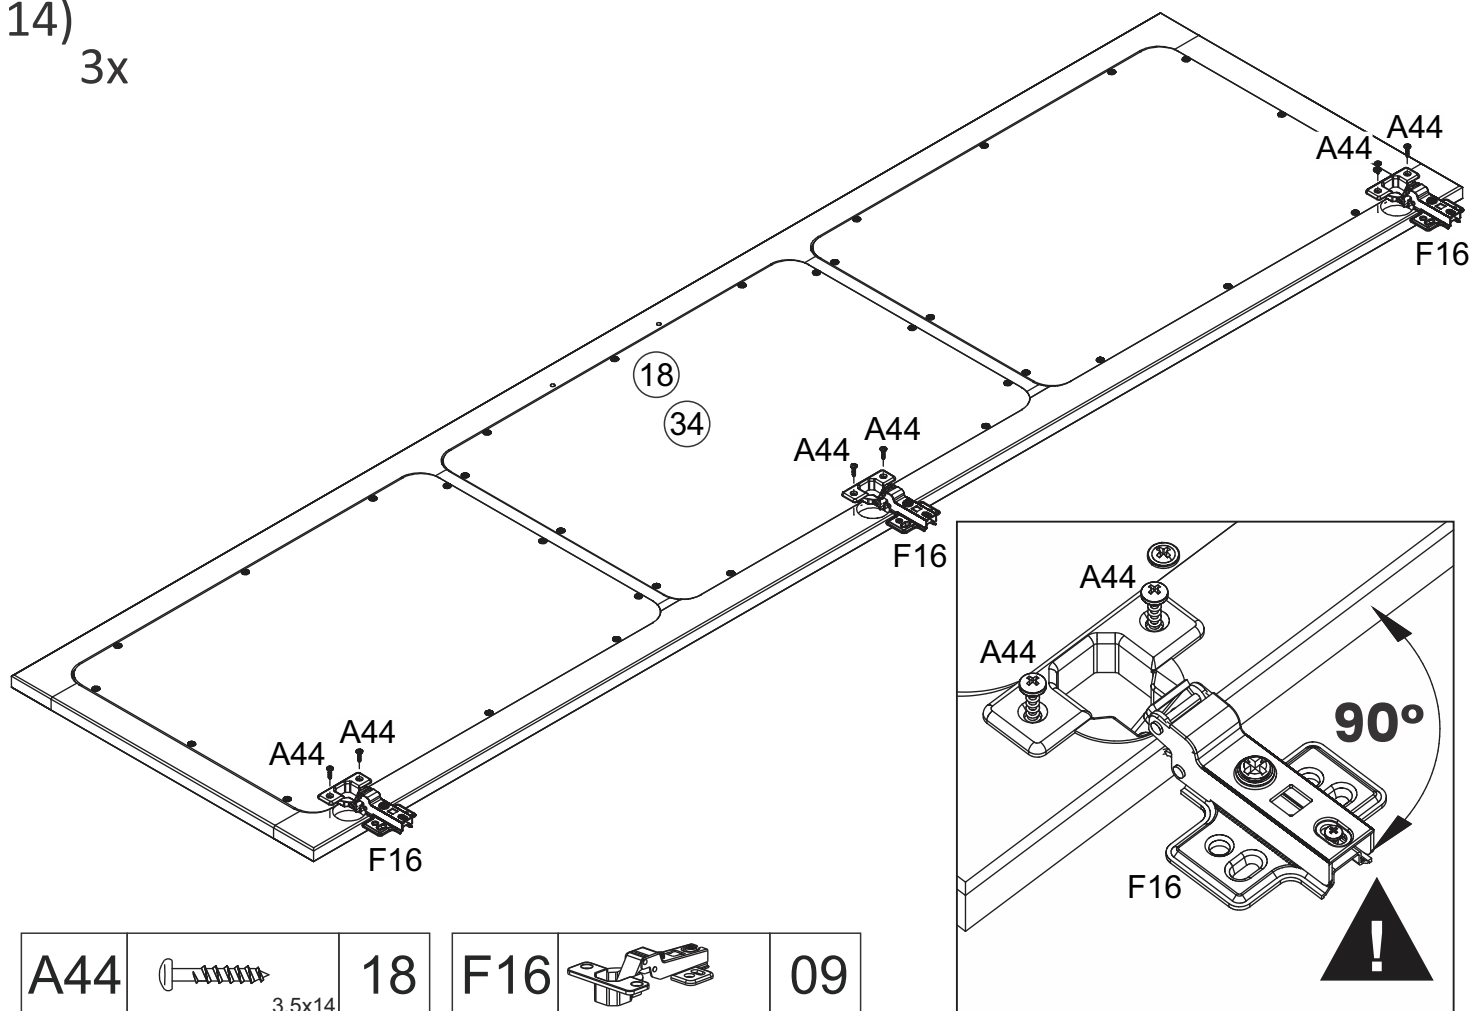


A44		18	F16		09
-----	---	----	-----	---	----


3,5x14


15)

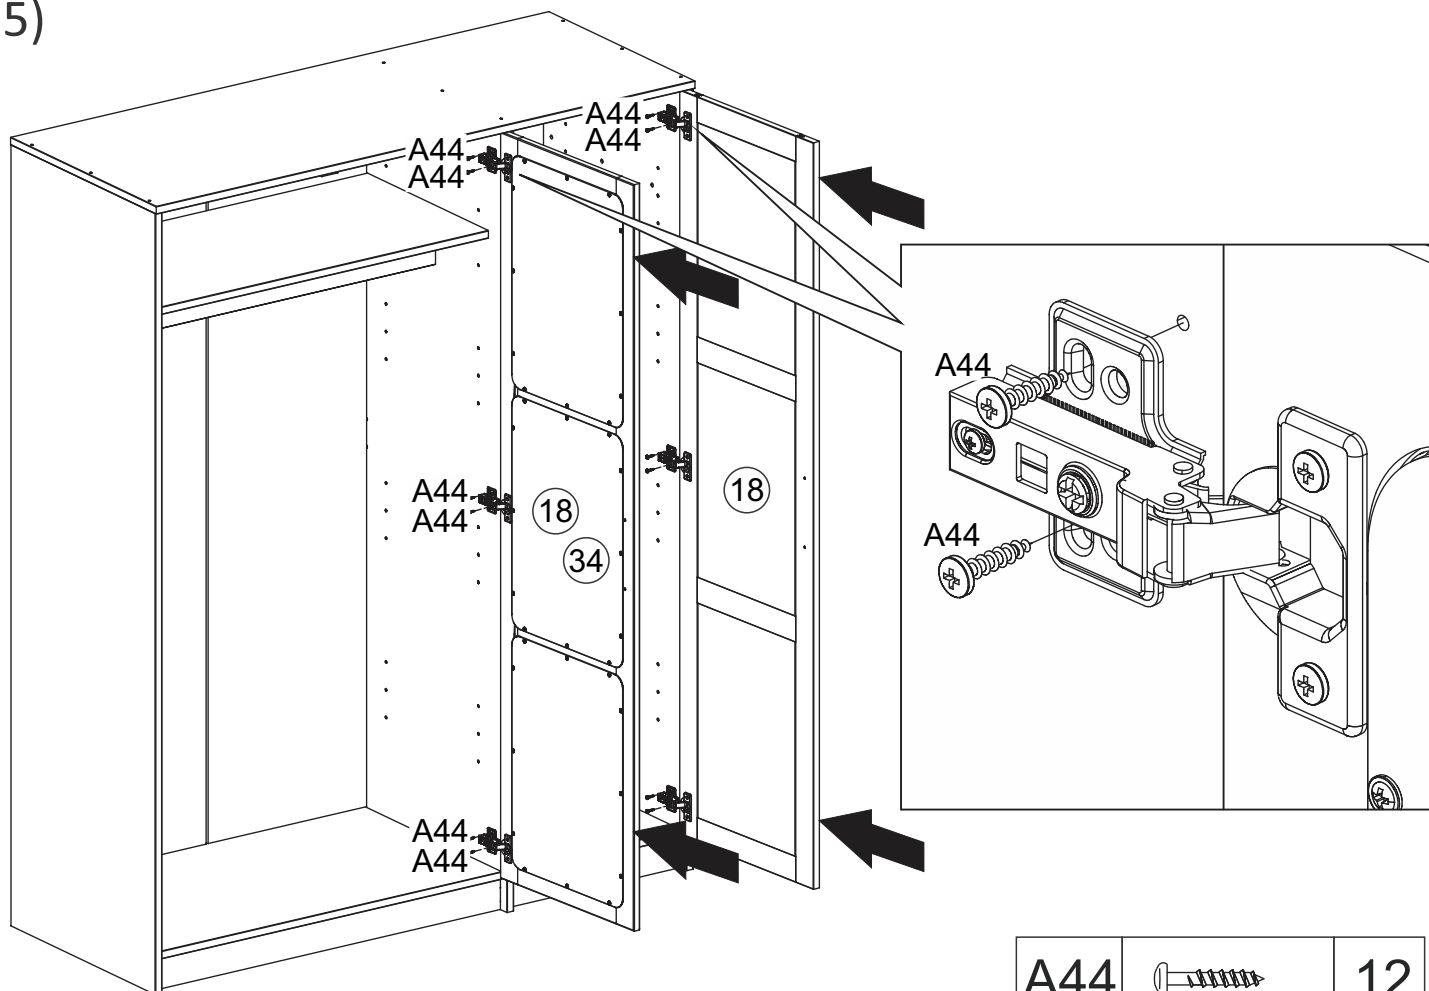


16)

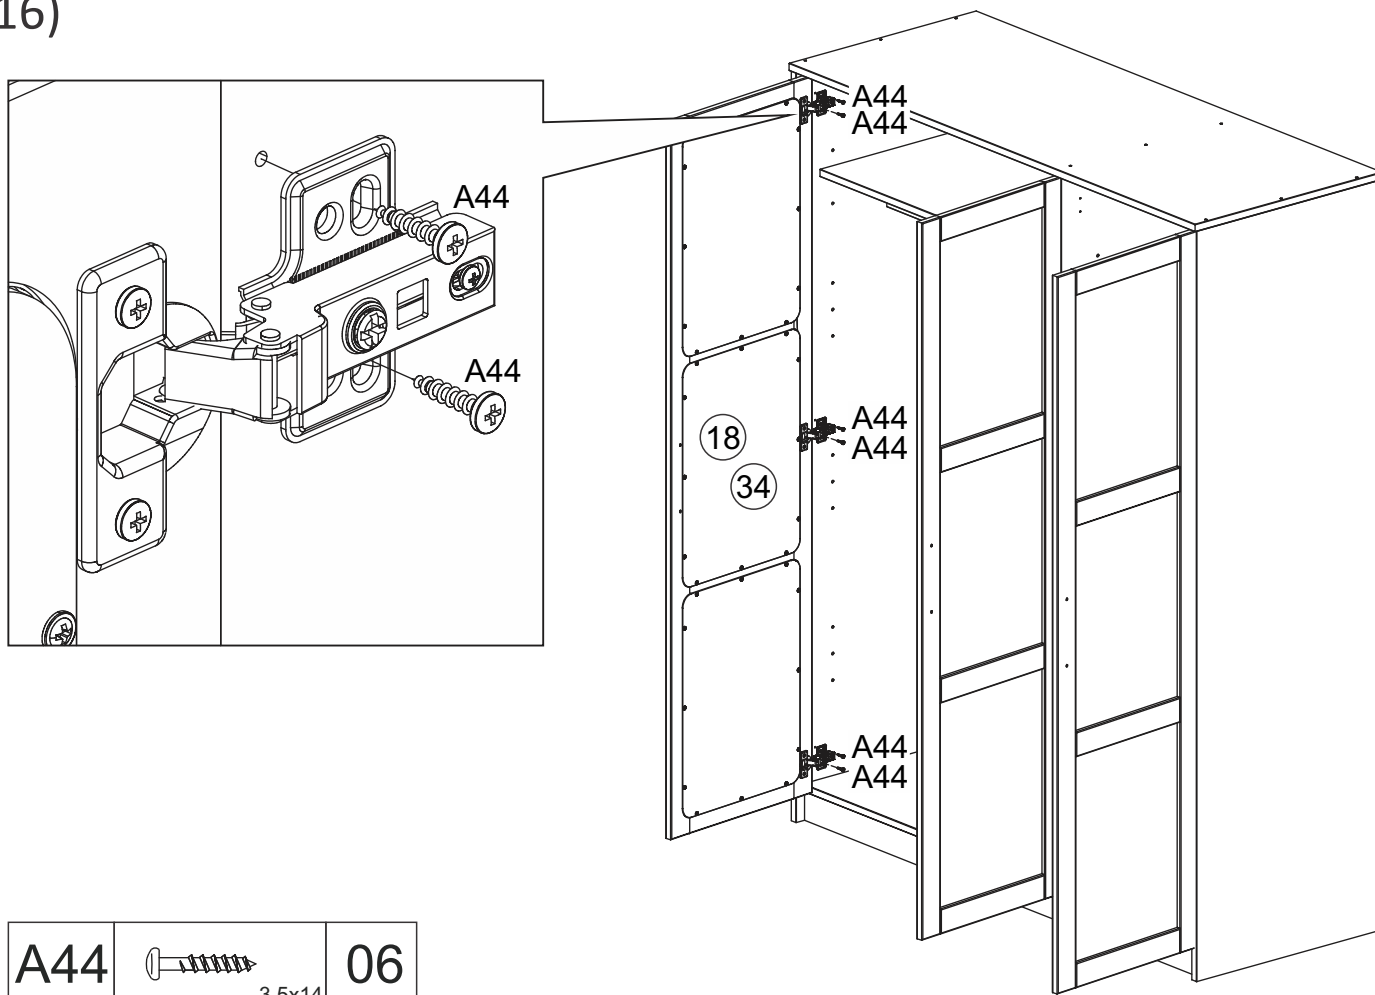




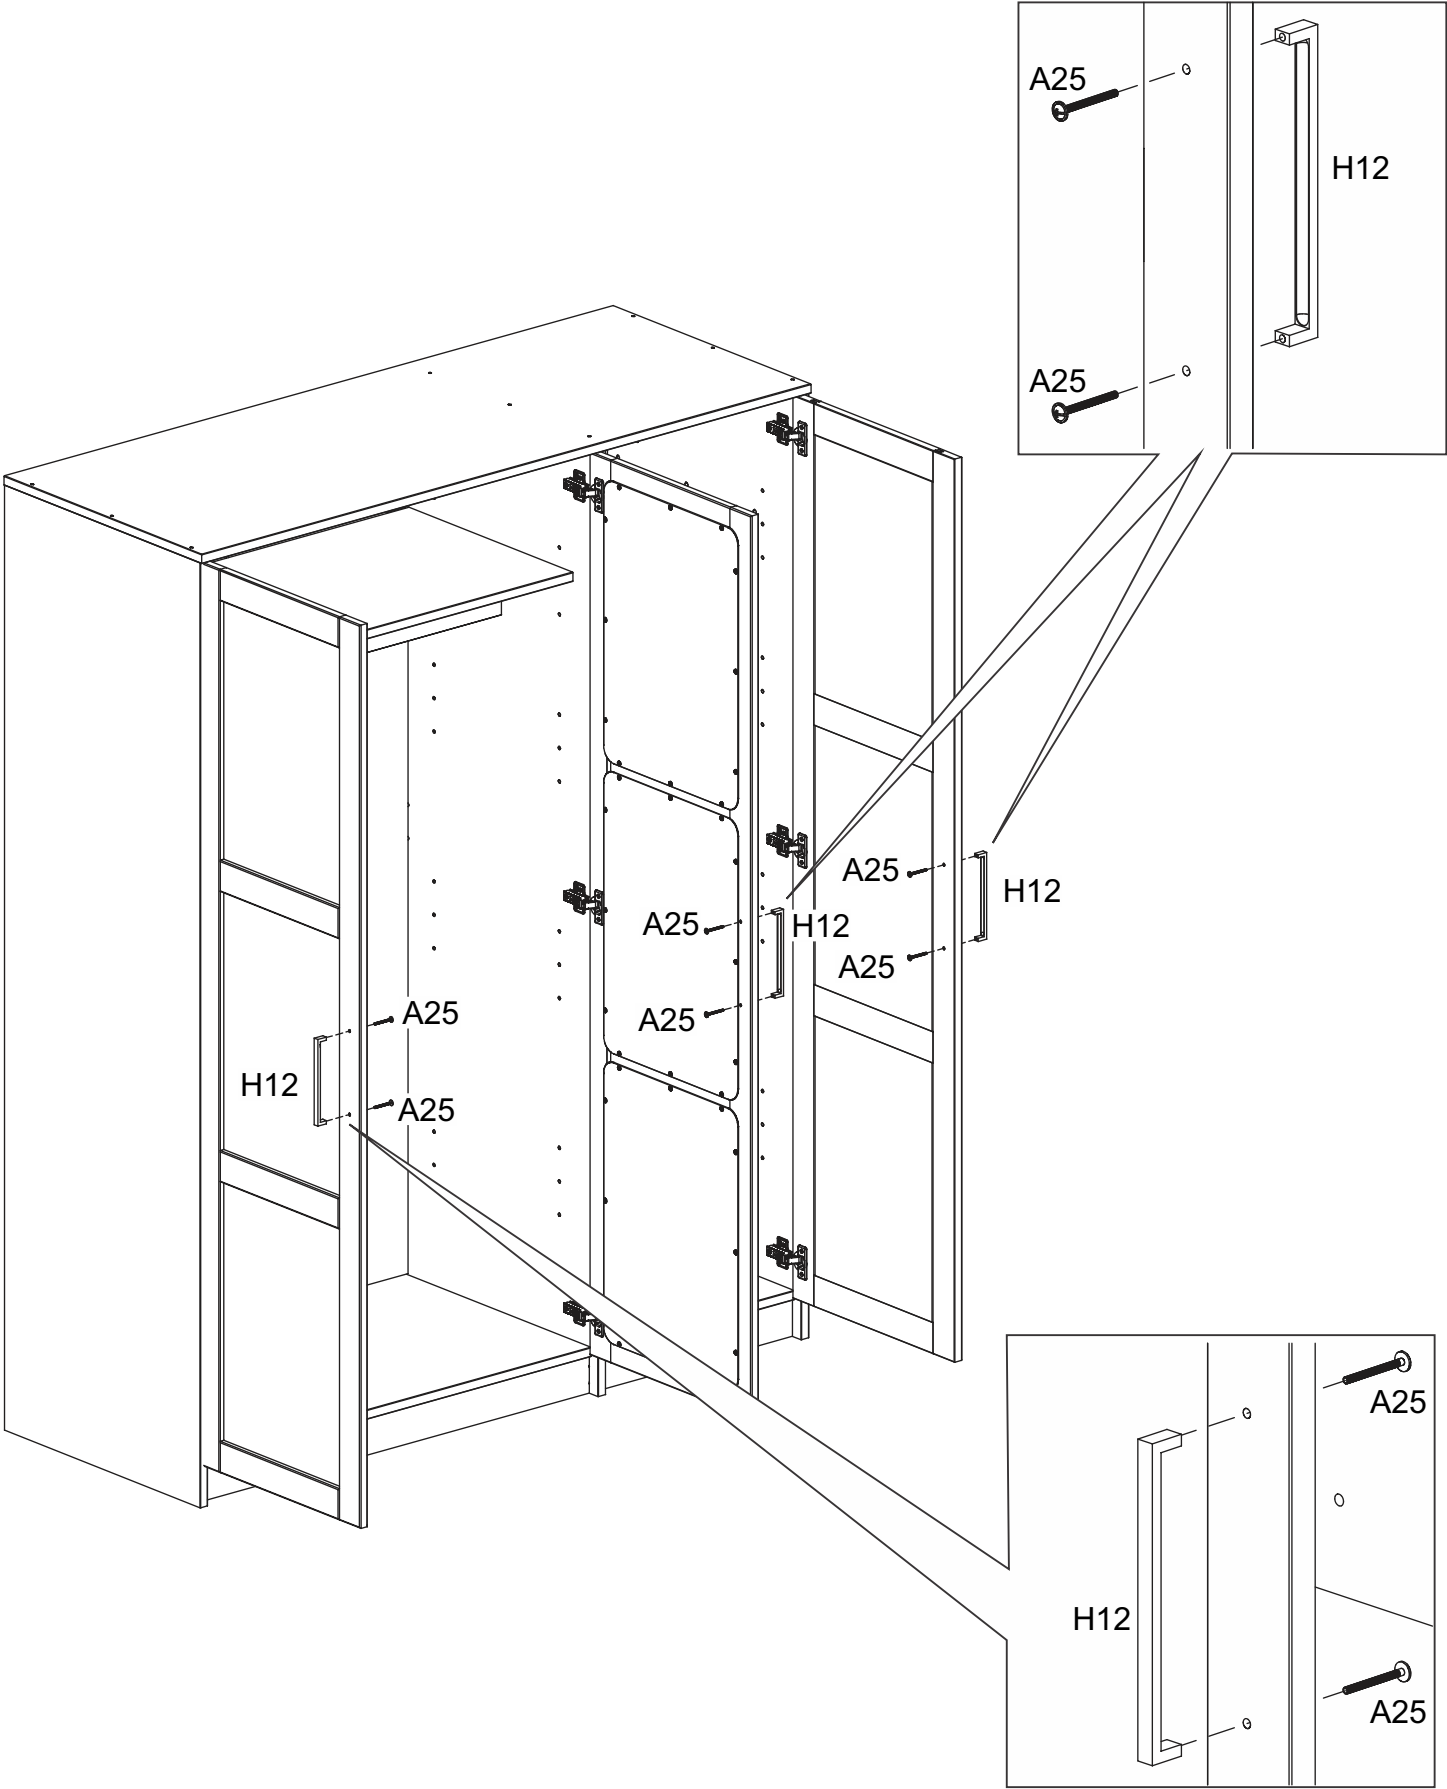


A25	 M4x25	06	H12		03
-----	--	----	-----	--	----


18) Align Crooked Doors

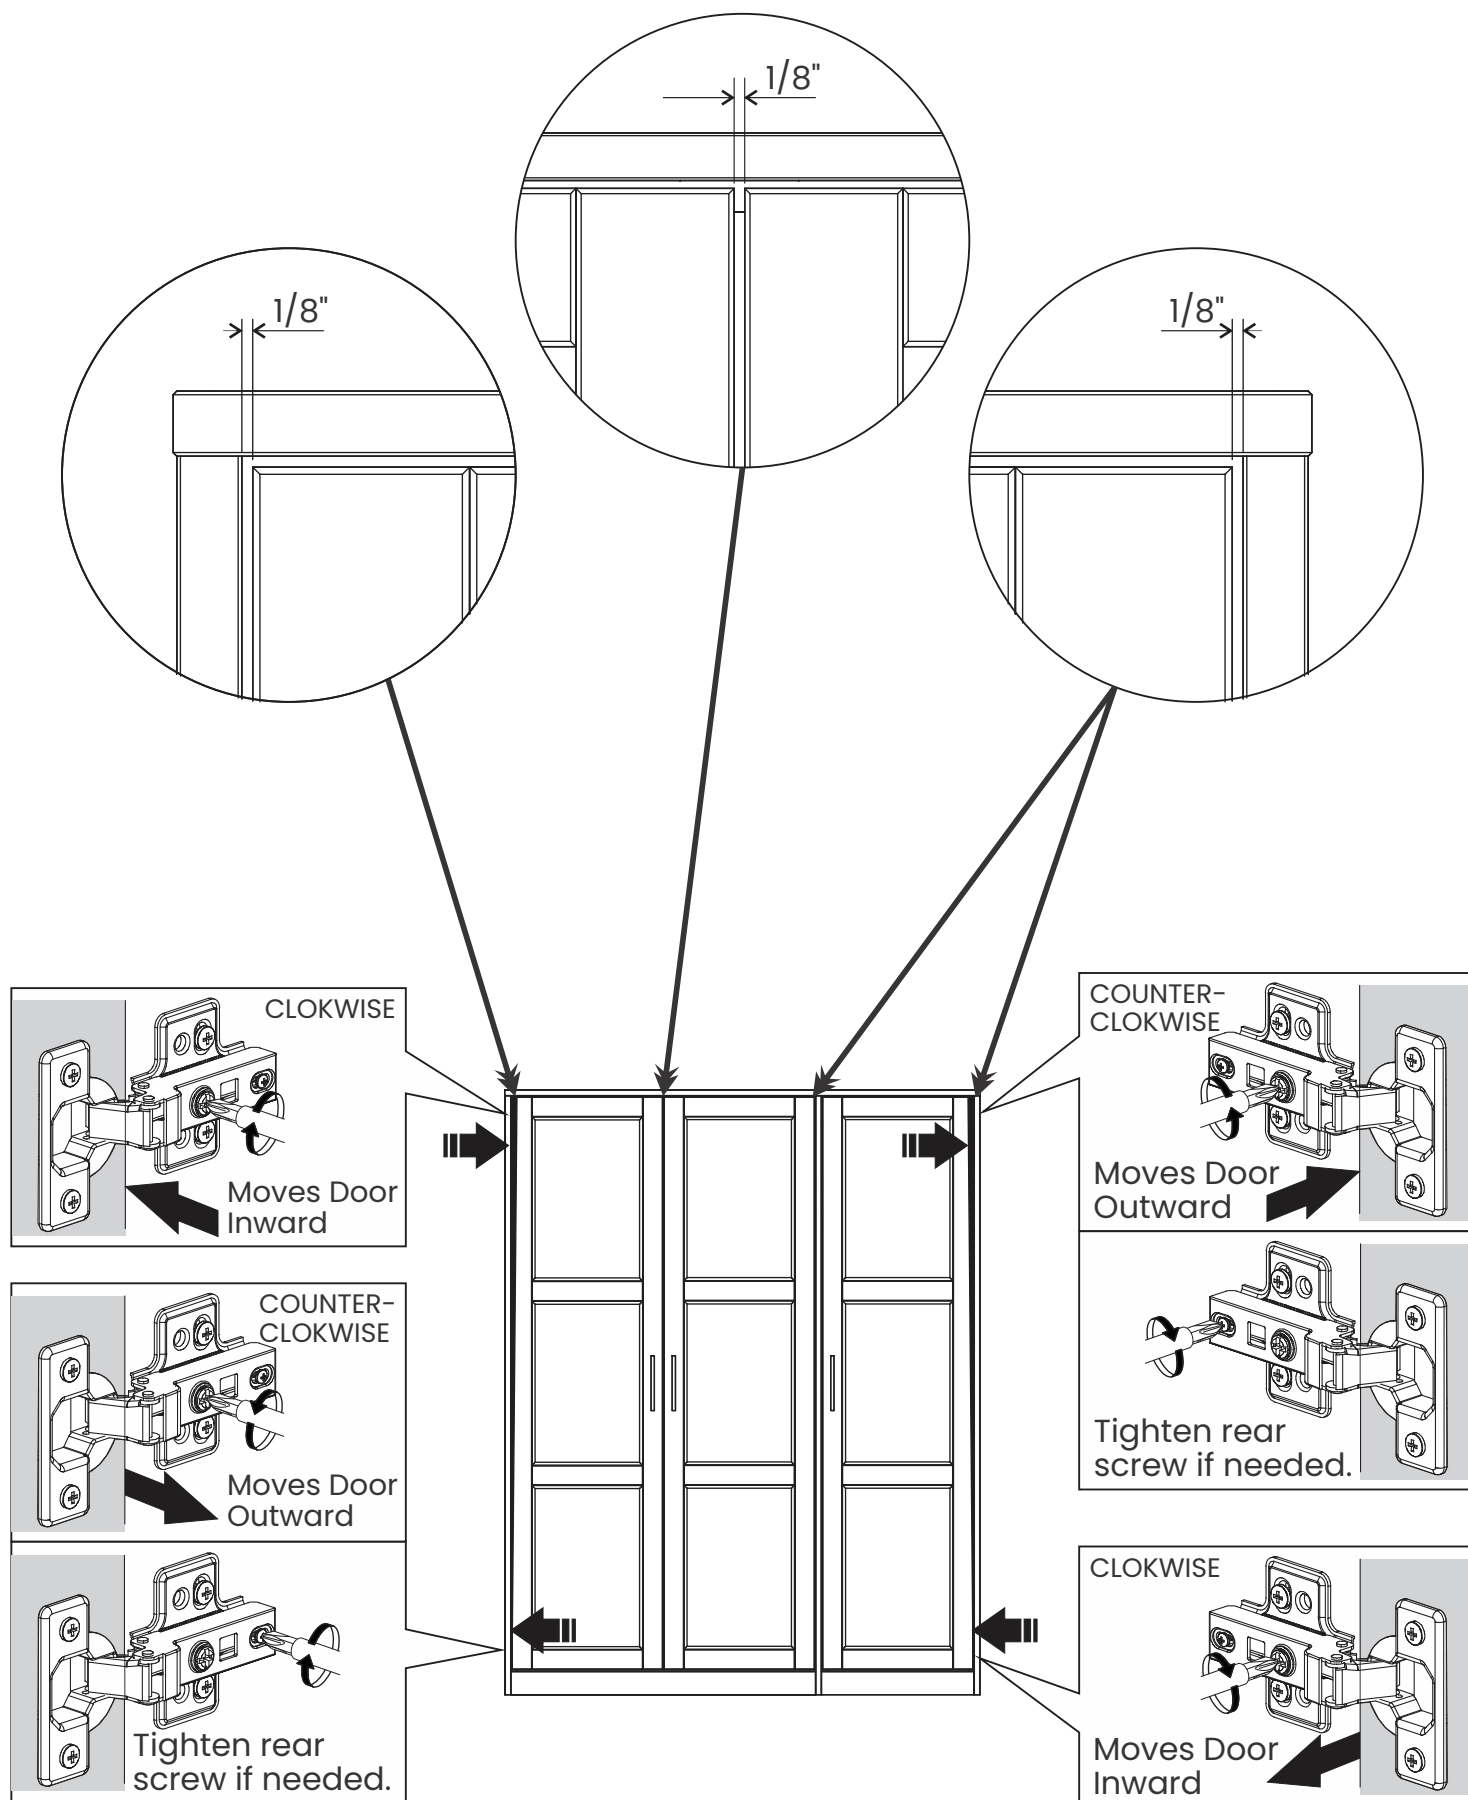


19) To align the doors with the sides of the wardrobe

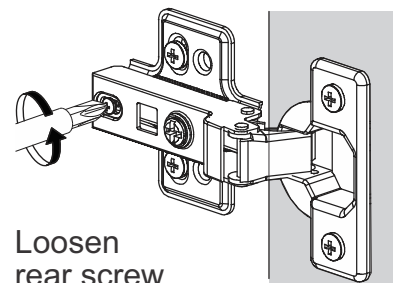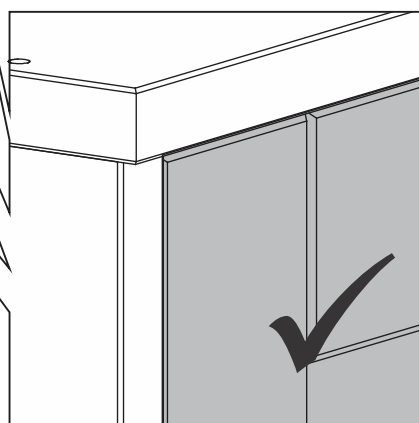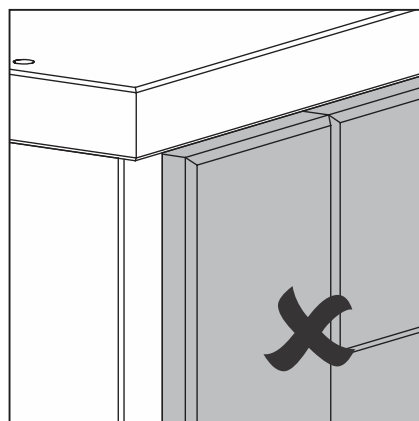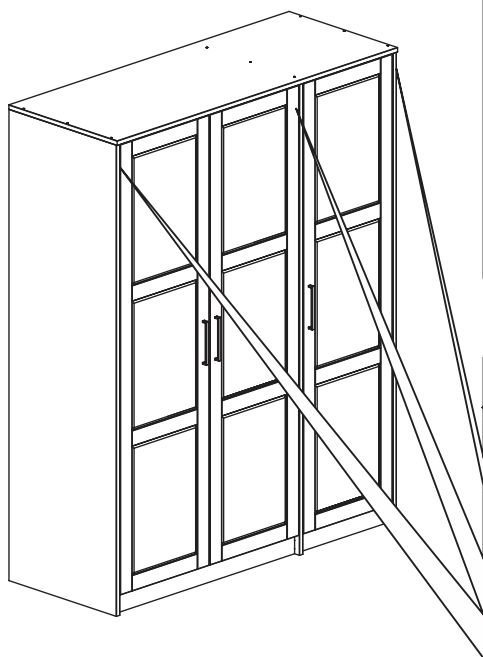

Loosen rear screw




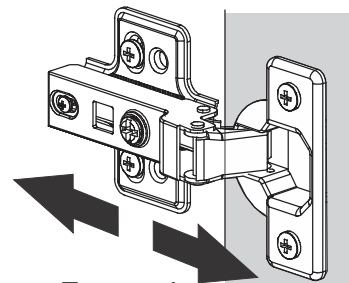


Move Forward or Backward

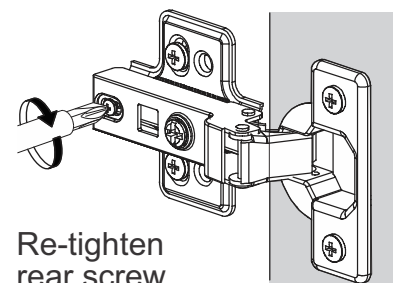


Re-tighten rear screw


20) Adjusting the space between the door and the top.

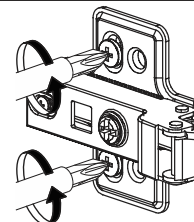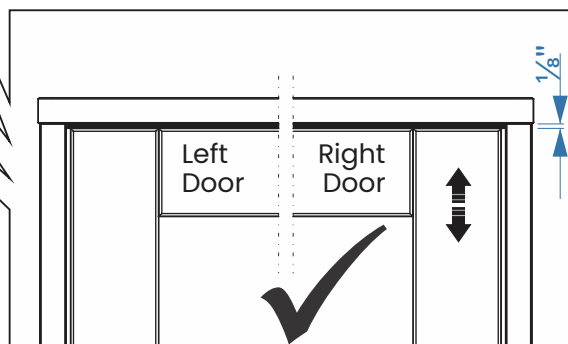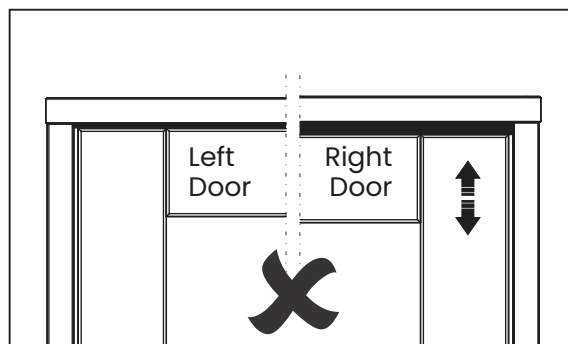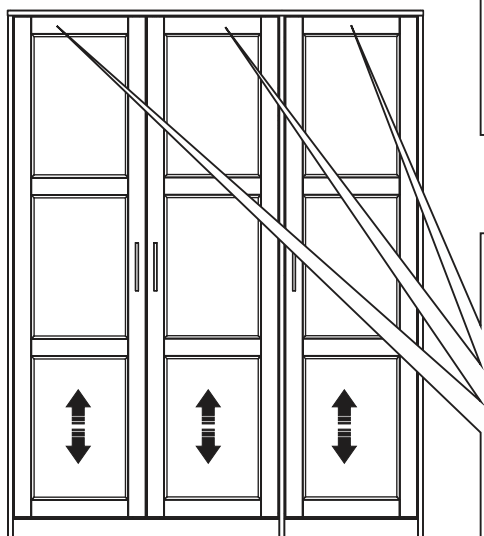

Loosen top and bottom screw on all hinges.





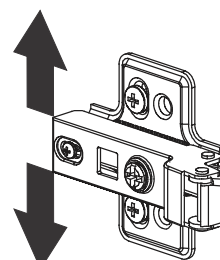


Adjust Height: Move Up or Down

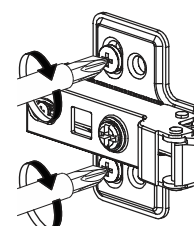

Re-tighten screws on all hinges.

21) Tip-over Restraint Kit Installation

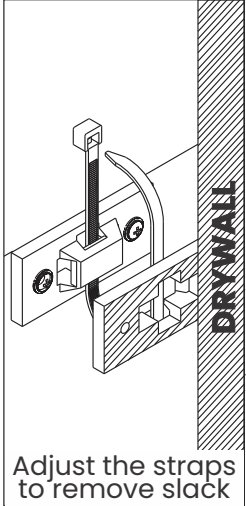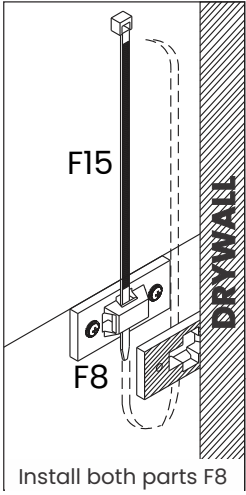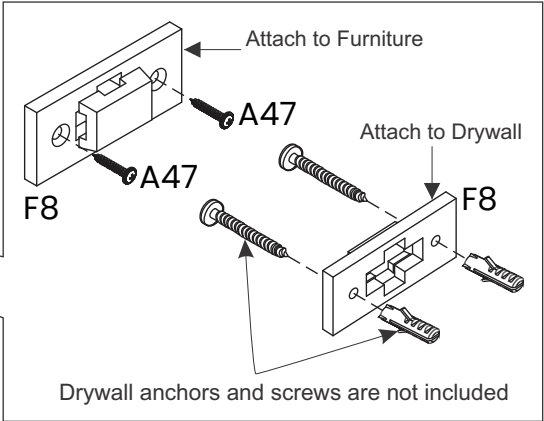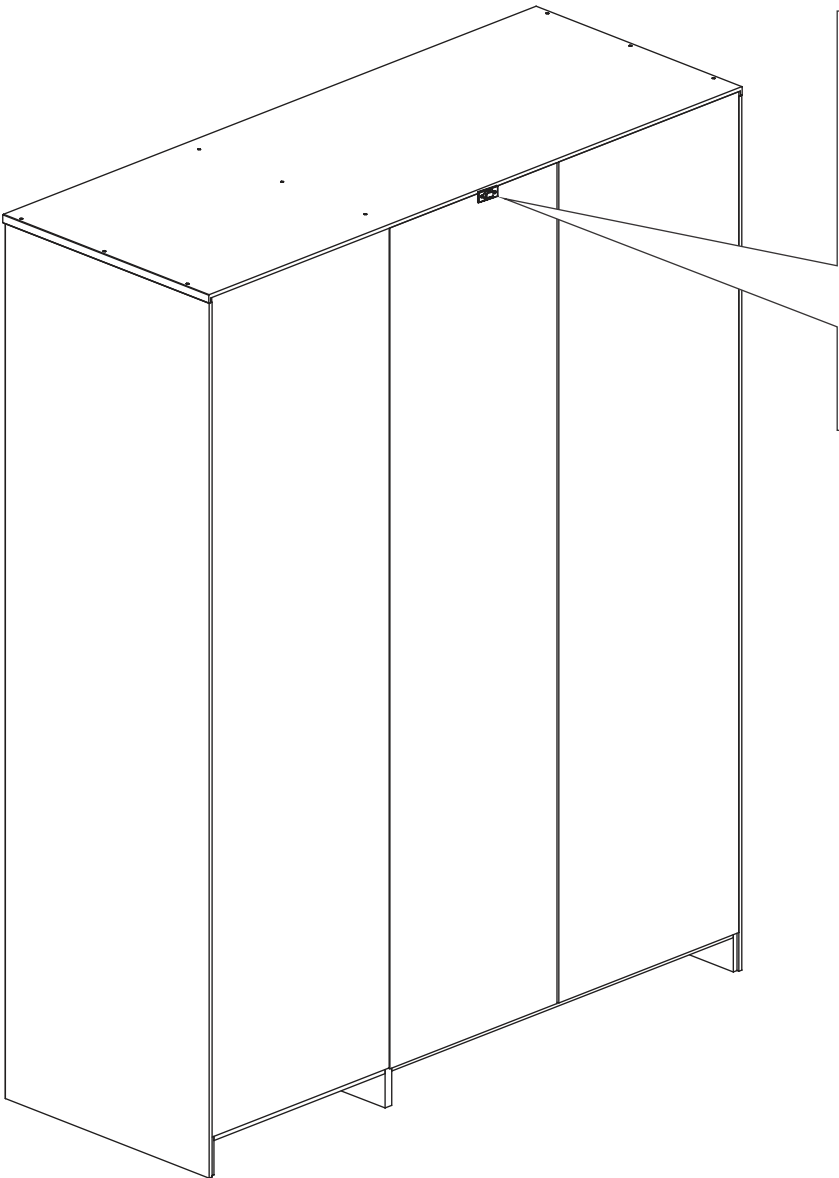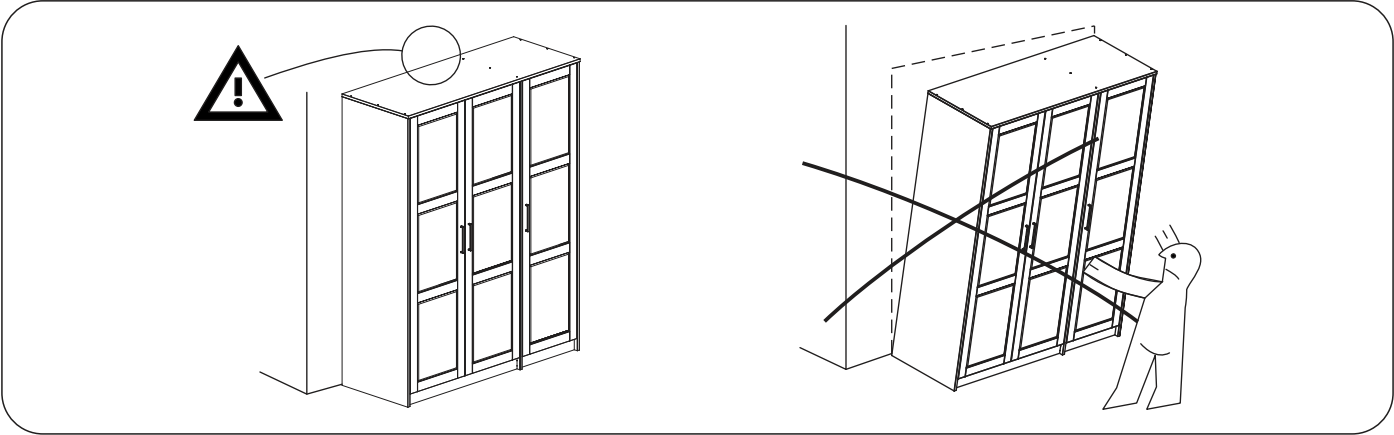

A47	 3,0x20	2
F8		2
F15		1