


Polybird




SIDE CHAIR P10-R


TOOLS

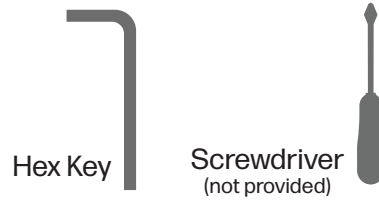

HARDWARE

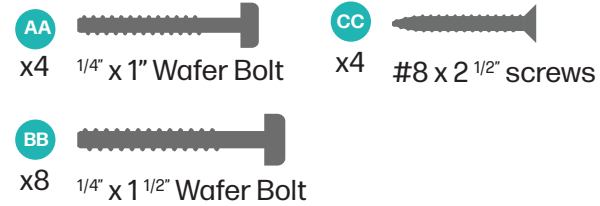


PARTS

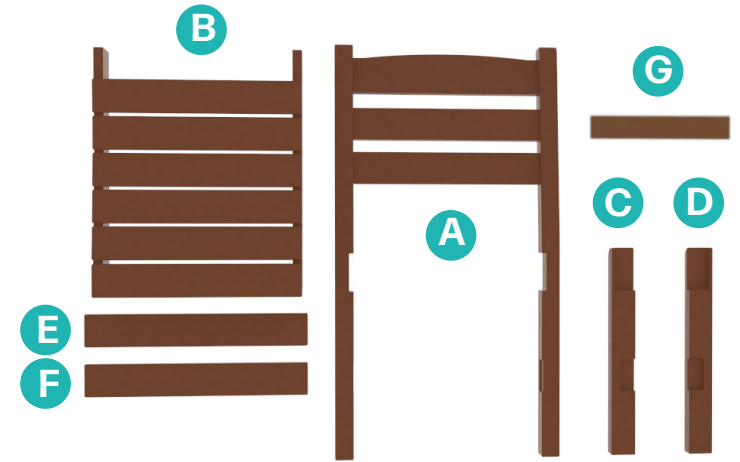

Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

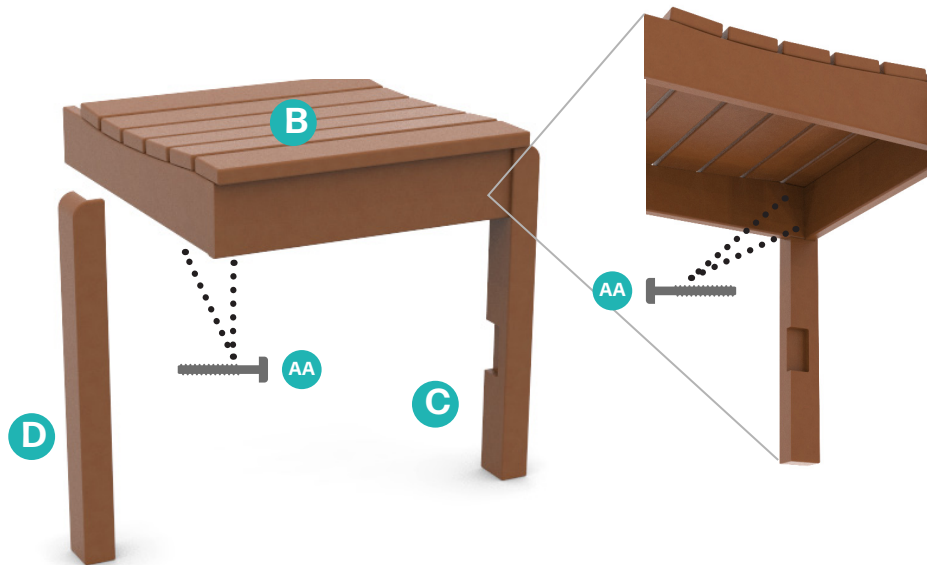


Attach front legs C & D to seat B using two 1/4" x 1" wafer bolts (AA) per leg, as shown.




The chair assembly should look like this.

2

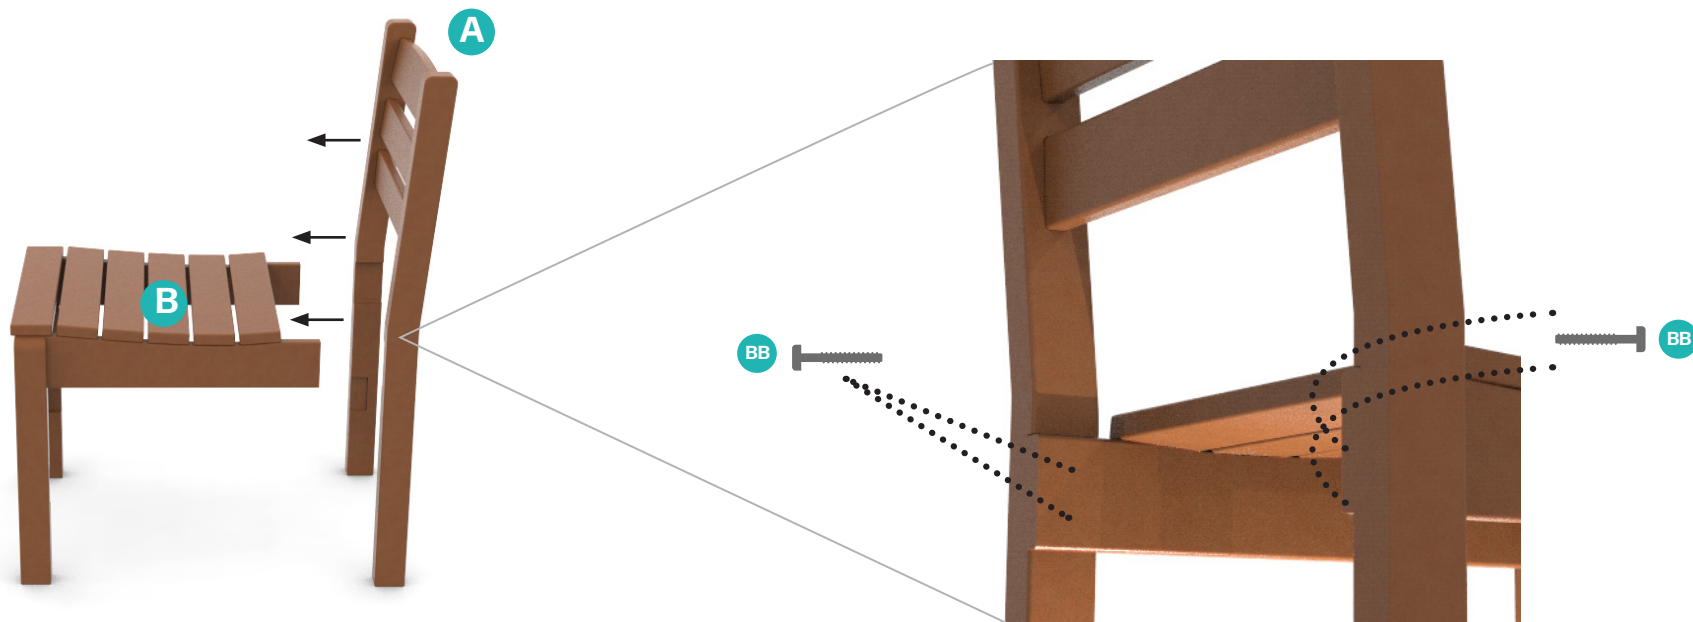


Attach seat back A to chair assembly from step 1. Using four $\frac{1}{4}$ " x $1\frac{1}{2}$ " wafer bolts (BB), secure seat back A to seat B, as shown.

3

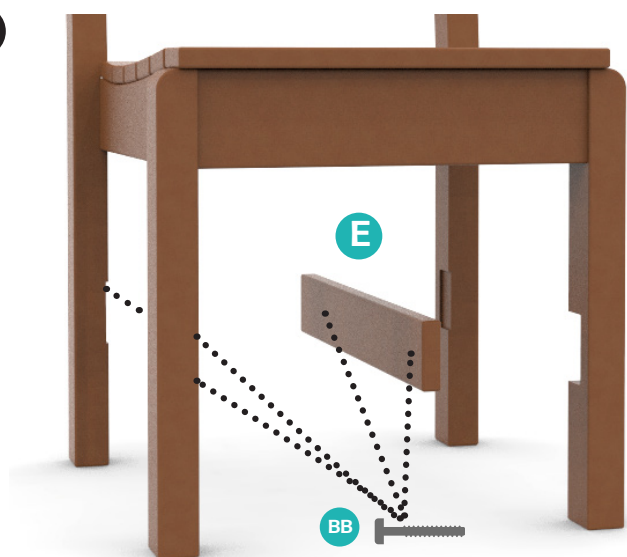

Attach crossbraces E & F by fitting in notches in legs C & D. Use four $\frac{1}{4}$ " x $1\frac{1}{2}$ " wafer bolts (BB) to secure crossbraces.

4

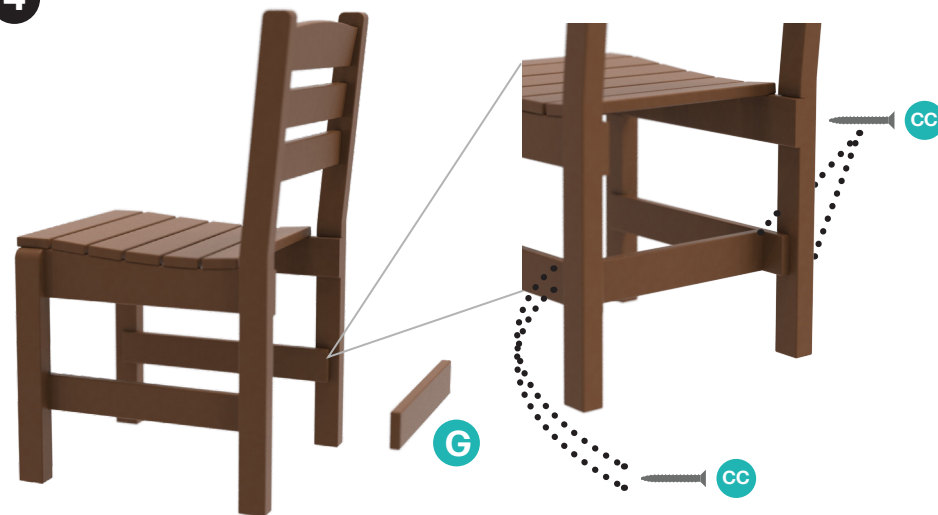

Attach brace G to crossbraces using two $2\frac{1}{2}$ " screws (CC) on each side.

We hope you enjoy your new piece of furniture for years to come!