


ASSEMBLY INSTRUCTIONS

EEI-6604

V0.02.08.23

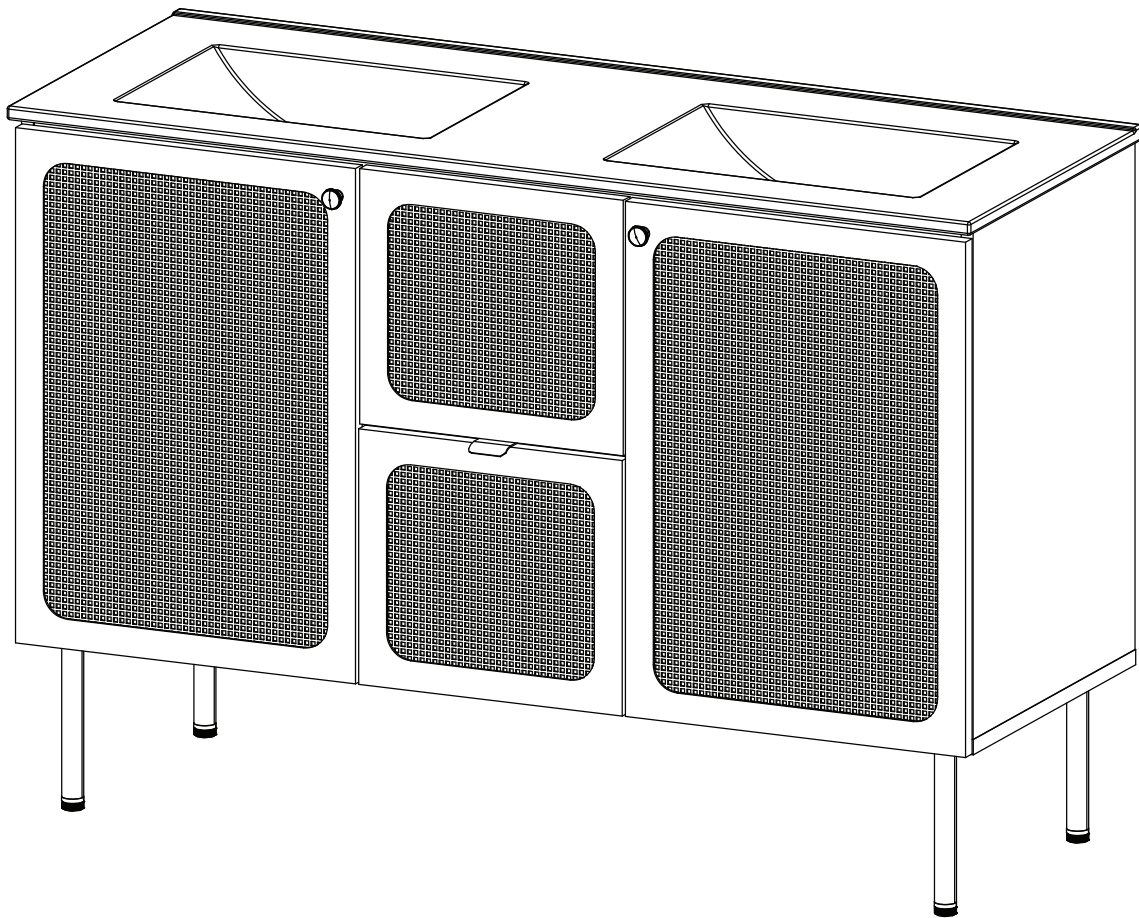

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 120 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.


For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Bottom Board	x1	10	Side Drawer Left	x1
2	Side Board Left	x1	11	Side Drawer Right	x1
3	Side Board Right	x1	12	Back Drawer	x1
4	Center Board Left	x1	13	Bottom Drawer	x1
5	Center Board Right	x1	14	Fake Front Drawer	x1
6	Support Board 1	x1	15	Support Board 3	x1
7	Adjustable Shelf	x2	16	Back Board 1	x1
8	Support Board 2	x2	17	Back Board 2	x1
9	Front Drawer	x1	18	Door Left	x1
			19	Door Right	x1

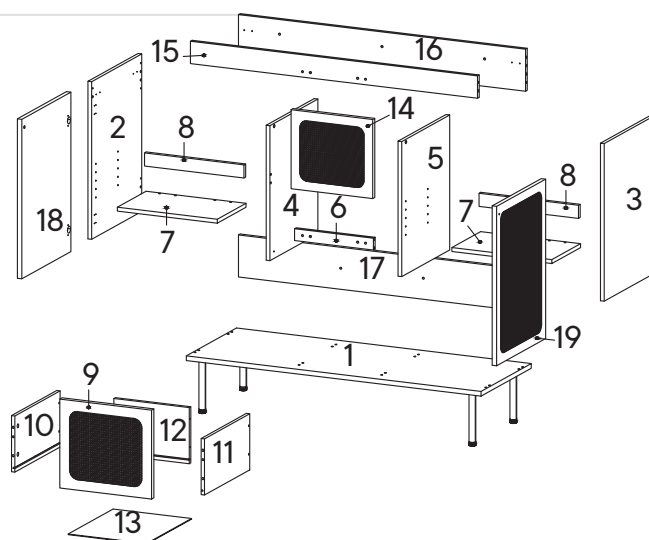

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x14	L		Screw M 8 x 39 mm	x4	W		Screw M 4 x 13 mm	x2
B		Cam Lock Ø15 mm	x10	M		Screw M 4.5 x 12.5 mm	x60	X		Silicon Bumper	x4
C		Cam Lock Ø12 mm	x4	N		JCN Nut	x2	RM35A		Drawer Runner	x1
D		Wood Dowel Ø8 x 30 mm	x28	O		Screw M 6 x 15 mm	x2	BO45		Bracket	x2
E		Wood Dowel Ø6 x 30 mm	x2	P		Screw M 3.5 x 13 mm	x6	BC67		Bracket	x4
F		Wood Dowel Ø8 x 20 mm	x4	Q		Screw M 6.4 x 25 mm	x4	HS26A		Hinge	x4
G		Screw M 7 x 50 mm	x19	R		Screw M 6 x 10.5 mm	x18	US11		Anti Deflection Bar	x1
H		Allen Key	x2	S		Wedge	x4	LM20A1		Leg	x4
I		Door Knob	x2	T		Screw M 3.5 x 15.5 mm	x4				
J		Screw M 4 x 22 mm	x2	U		Drawer Pull	x1				
K		Shelf Support	x8	V		Foam/Rubber Pad	x10				

What you need:

Phillips Head Screwdriver

You may also need:

- + Power Drill
- + Level
- + Silicone Adhesive or Caulk
- + Drywall Anchors and Screws
- + Other Wall-Mounting Hardware

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
- E** Wood Dowel Ø6 x 30 mm x2

COMPONENTS

- 9** Front Drawer x1
- 10** Side Drawer Left x1
- 11** Side Drawer Right x1

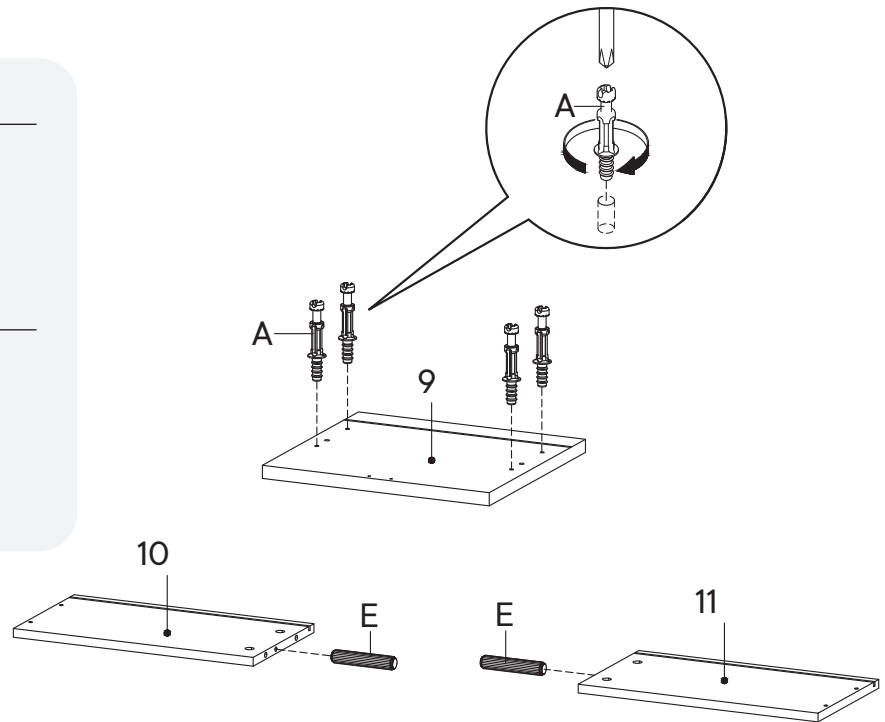


Step 2

HARDWARE

- C** Cam Lock Ø12 mm x4

COMPONENTS

- 9** Front Drawer x1
- 10** Side Drawer Left x1
- 11** Side Drawer Right x1
- 13** Bottom Drawer x1

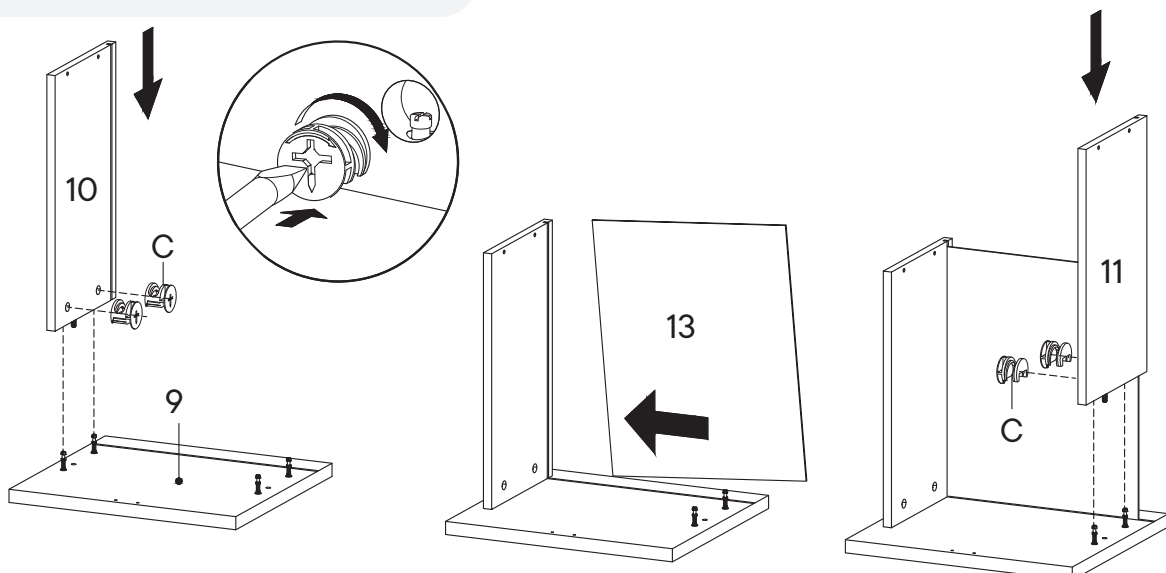



Step 3

HARDWARE

L	Screw M 8 x 39 mm	x4
U	Drawer Pull	x1
W	Screw M 4 x 13 mm	x2
X	Silicon Bumper	x2

COMPONENTS


12	Back Drawer	x1
-----------	-------------	----

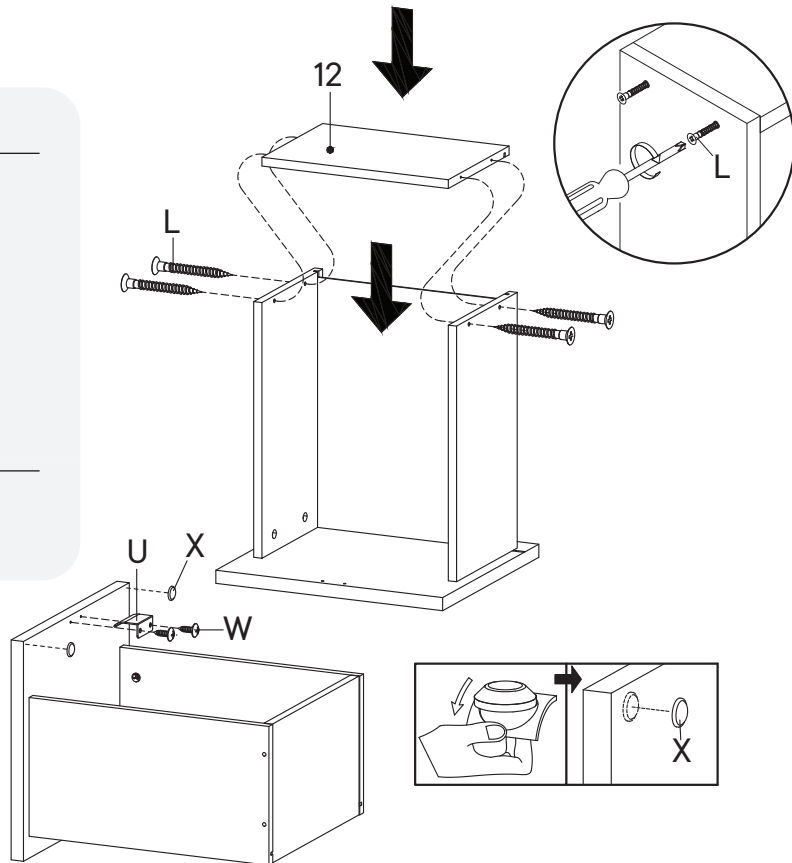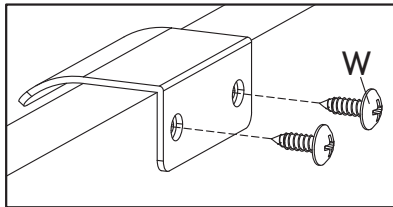

Step 4

HARDWARE

P	Screw M 3.5 x 13 mm	x6
S	Wedge	x4
T	Screw M 3.5 x 15.5 mm	x4
RM35A	Drawer Runner	x1

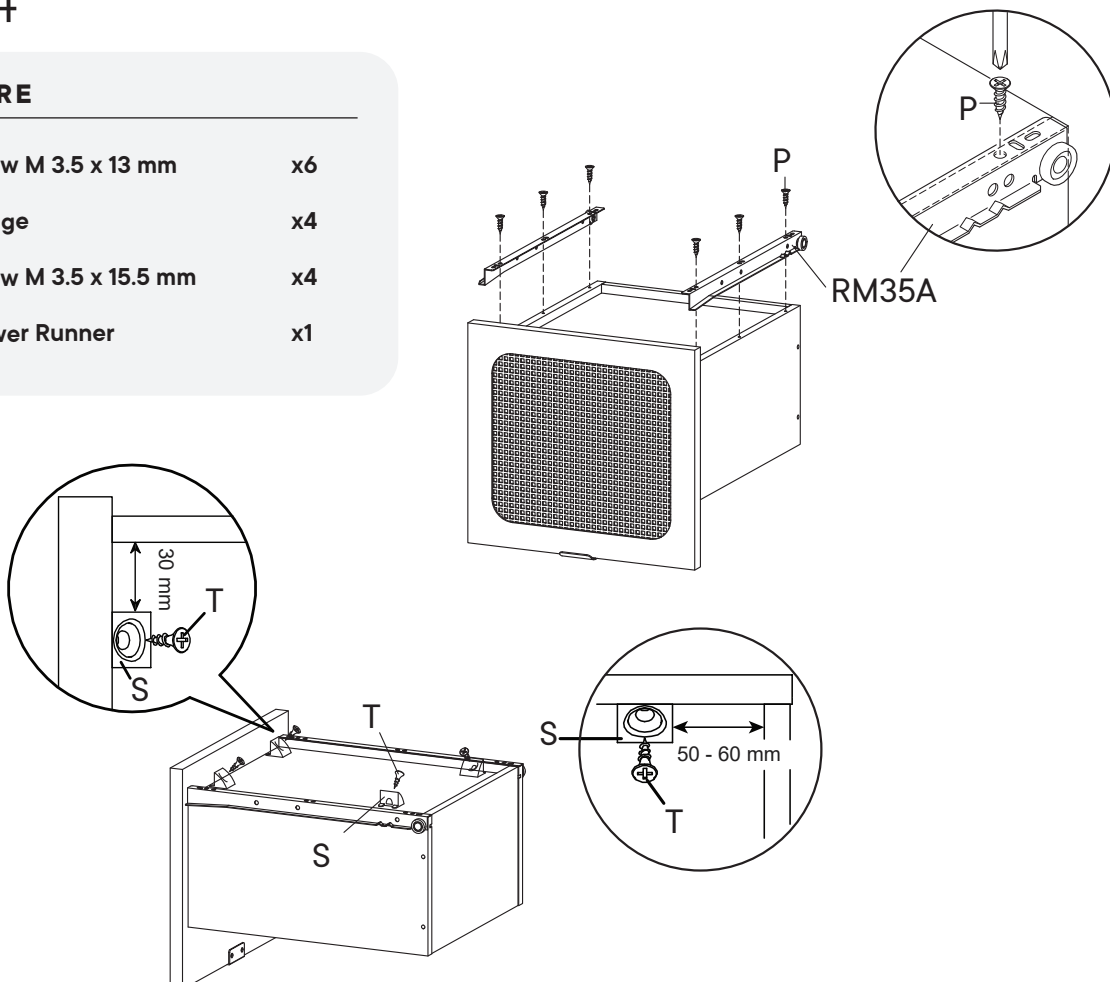


Step 5

HARDWARE

D	Wood Dowel Ø8 x 30 mm	x16
M	Screw M 4.5 x 12.5 mm	x8

COMPONENTS

6	Support Board 1	x1
15	Support Board 3	x1
16	Back Board 1	x1
17	Back Board 2	x1

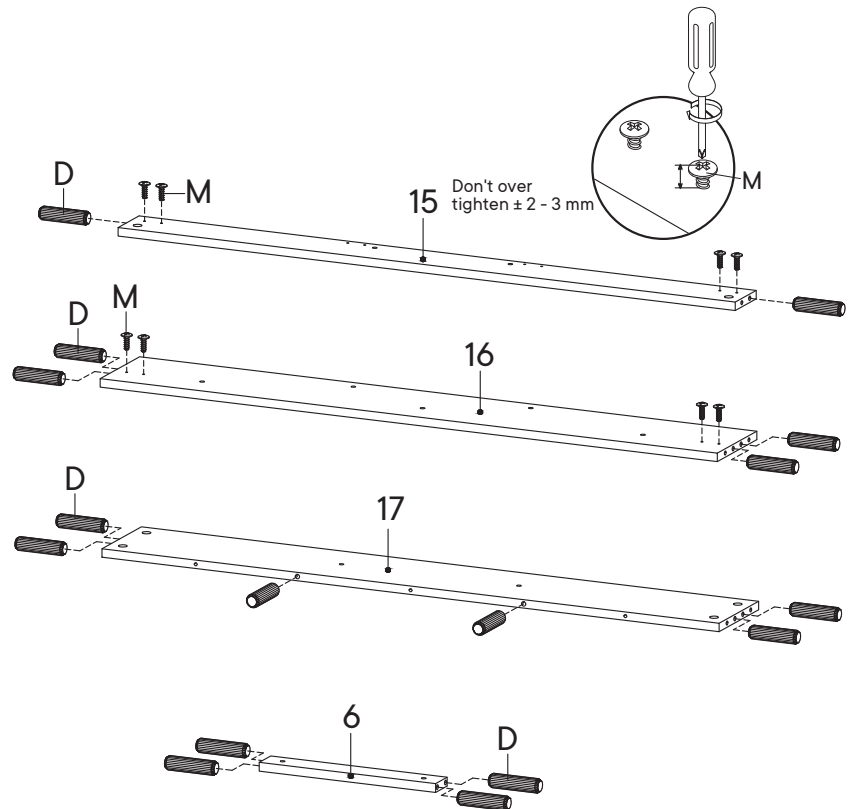


Step 6

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x10
D	Wood Dowel Ø8 x 30 mm	x4
M	Screw M 4.5 x 12.5 mm	x8

COMPONENTS

2	Side Board Left	x1
3	Side Board Right	x1

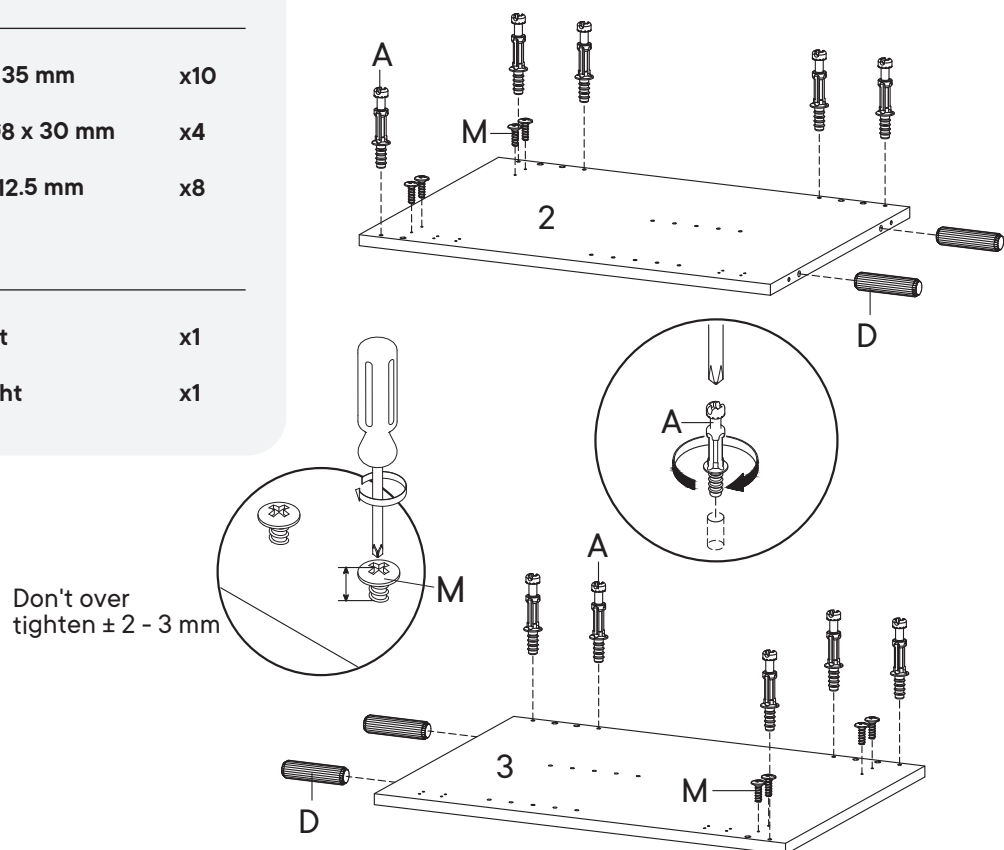


Step 7

HARDWARE

D	Wood Dowel Ø8 x 30 mm	x4
R	Screw M 6 x 10.5 mm	x4
RM35A	Drawer Runner	x1

COMPONENTS


4	Center Board Left	x1
5	Center Board Right	x1

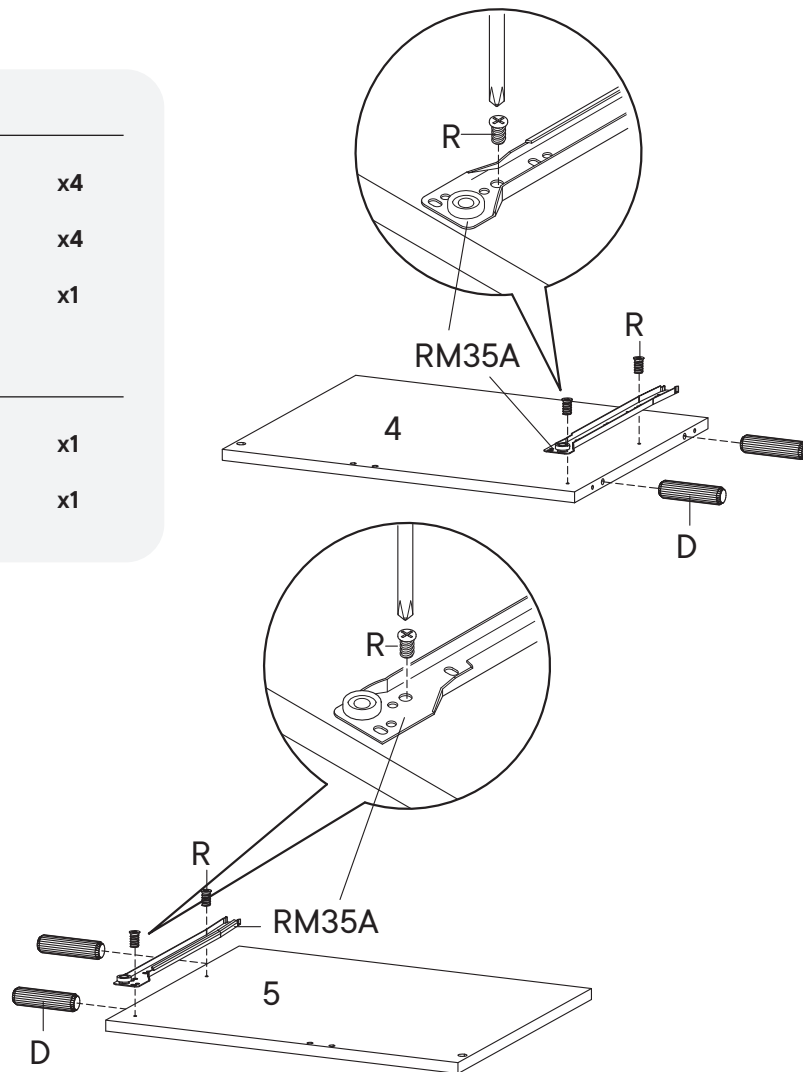

Step 8

COMPONENTS

4	Center Board Left	x1
5	Center Board Right	x1
6	Support Board 1	x1

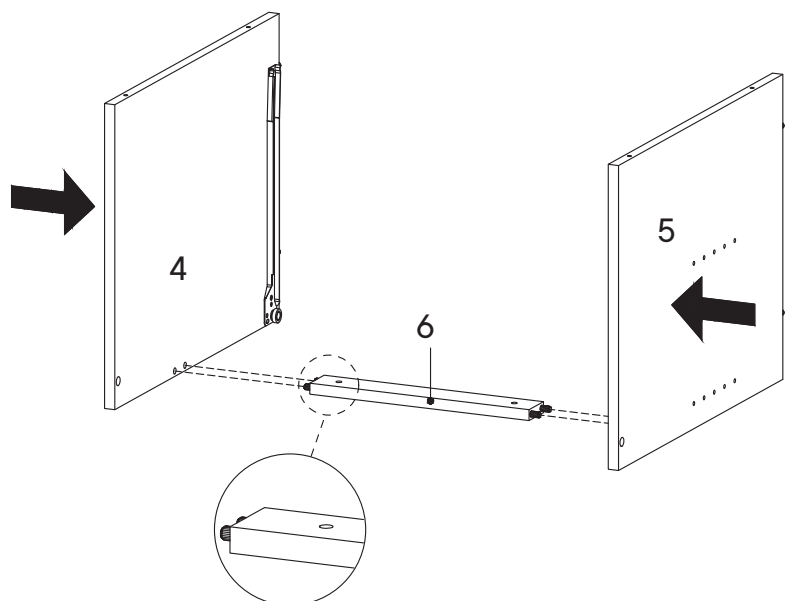

Step 9



HARDWARE

G Screw M 7 x 50 mm x2

H Allen Key x1

COMPONENTS

17 Back Board 2 x1

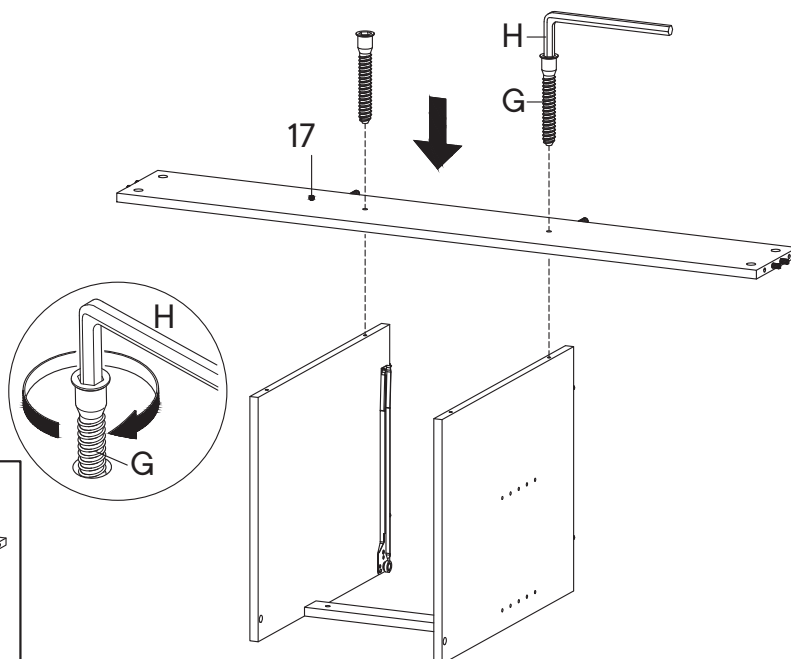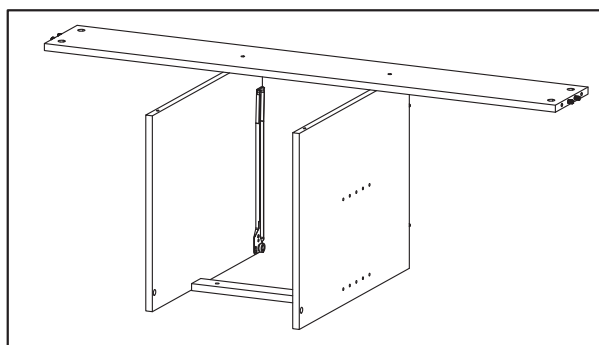

Step 10



HARDWARE

G Screw M 7 x 50 mm x2

H Allen Key x1

COMPONENTS

16 Back Board 1 x1

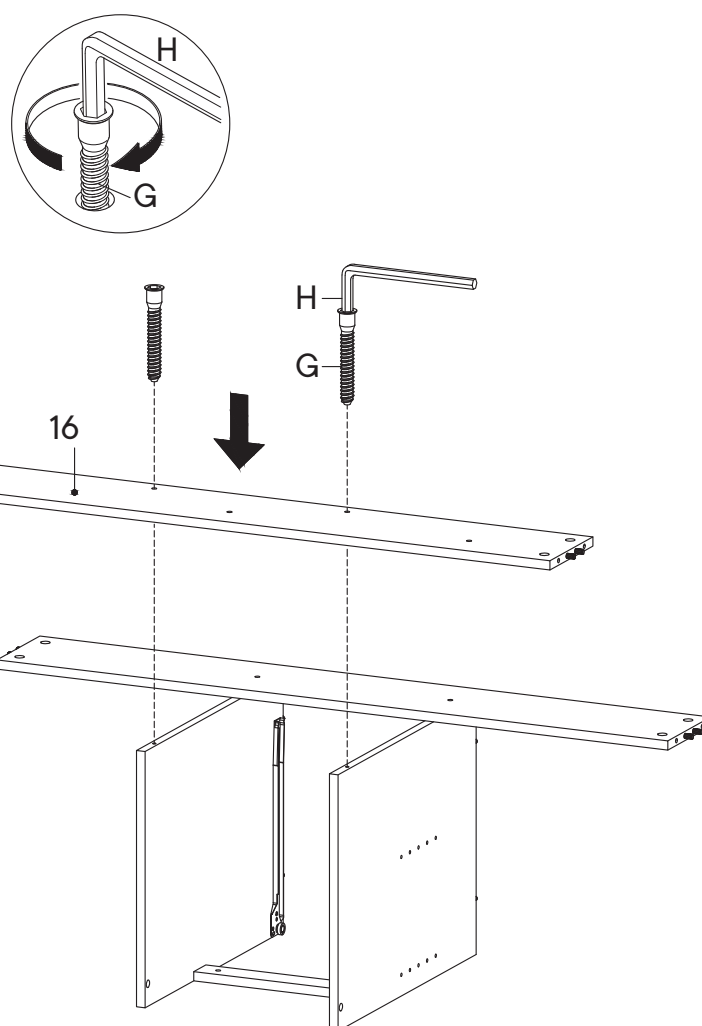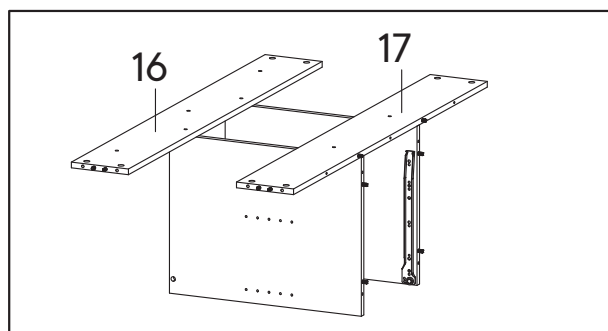


Step 11

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

3 Side Board Right x1

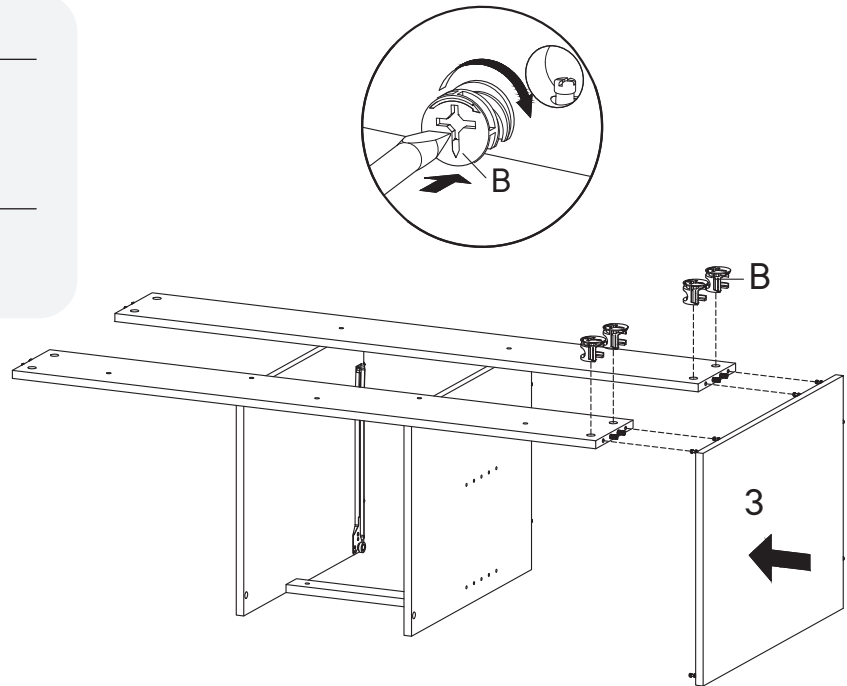


Step 12

HARDWARE

B Cam Lock Ø15 mm x1

COMPONENTS

15 Support Board 3 x1

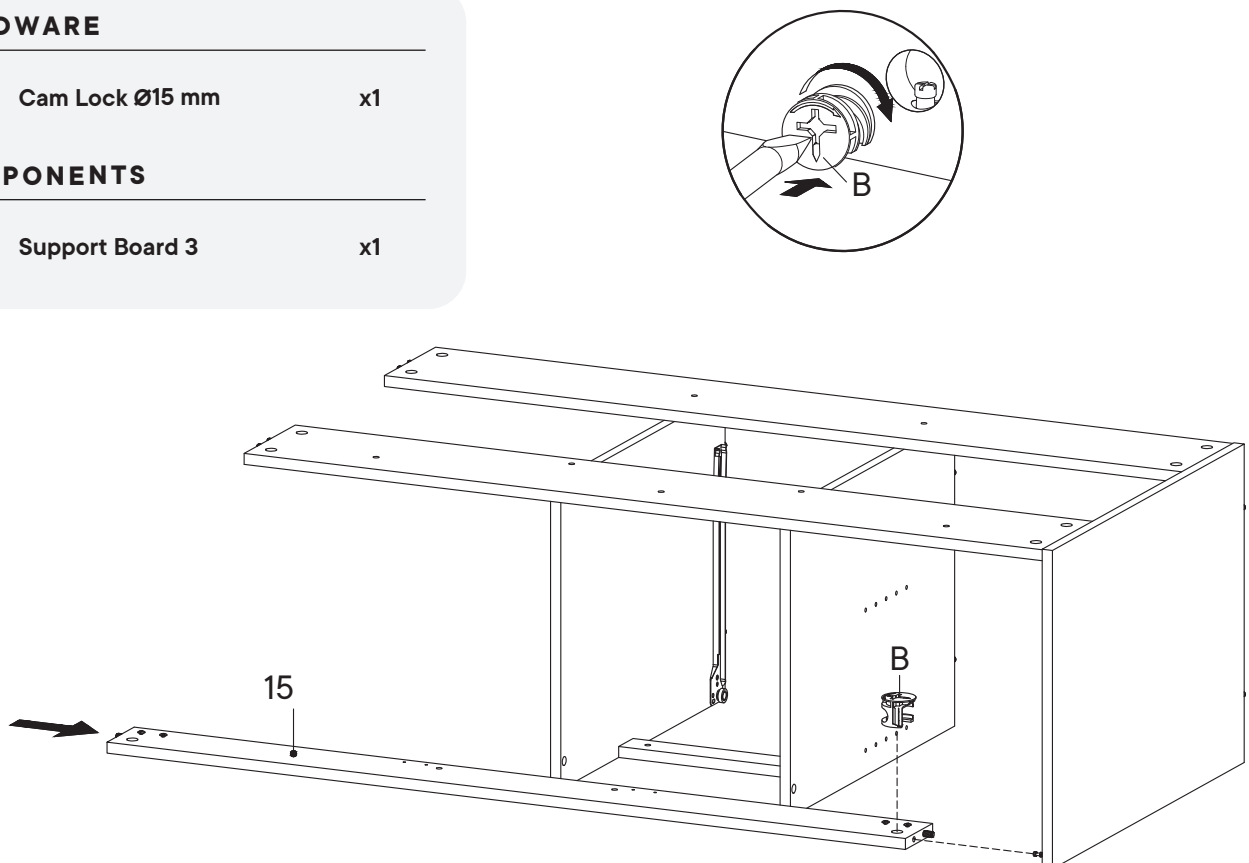


Step 13

HARDWARE

- B** Cam Lock Ø15 mm x5

COMPONENTS

- 2** Side Board Left x1

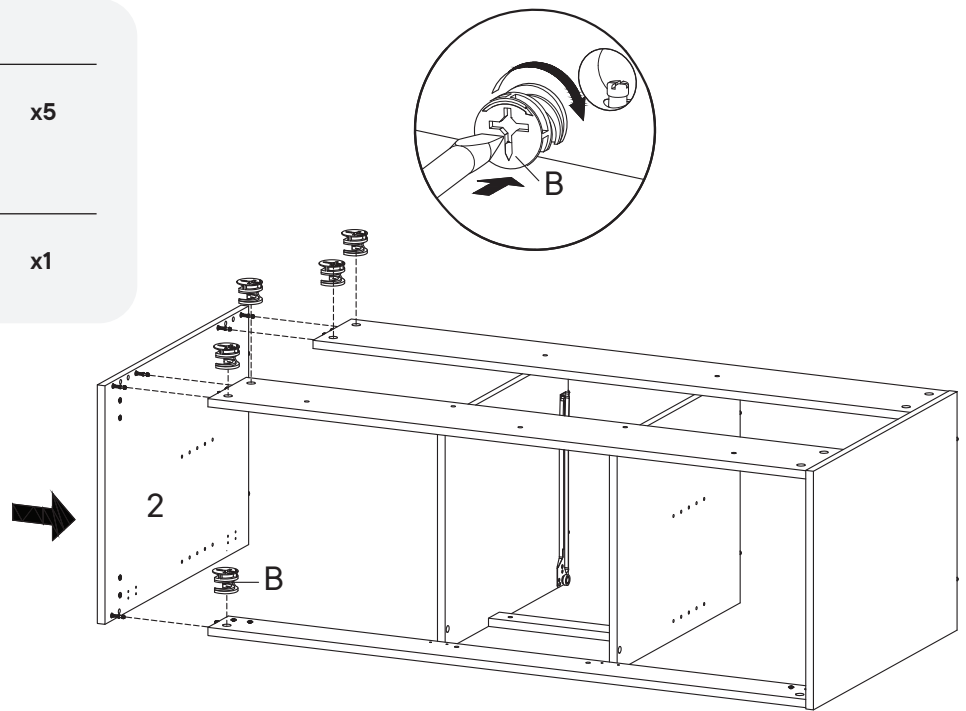

Step 14



HARDWARE

- G** Screw M 7 x 50 mm x11

- H** Allen Key x1

COMPONENTS

- 1** Bottom Board x1

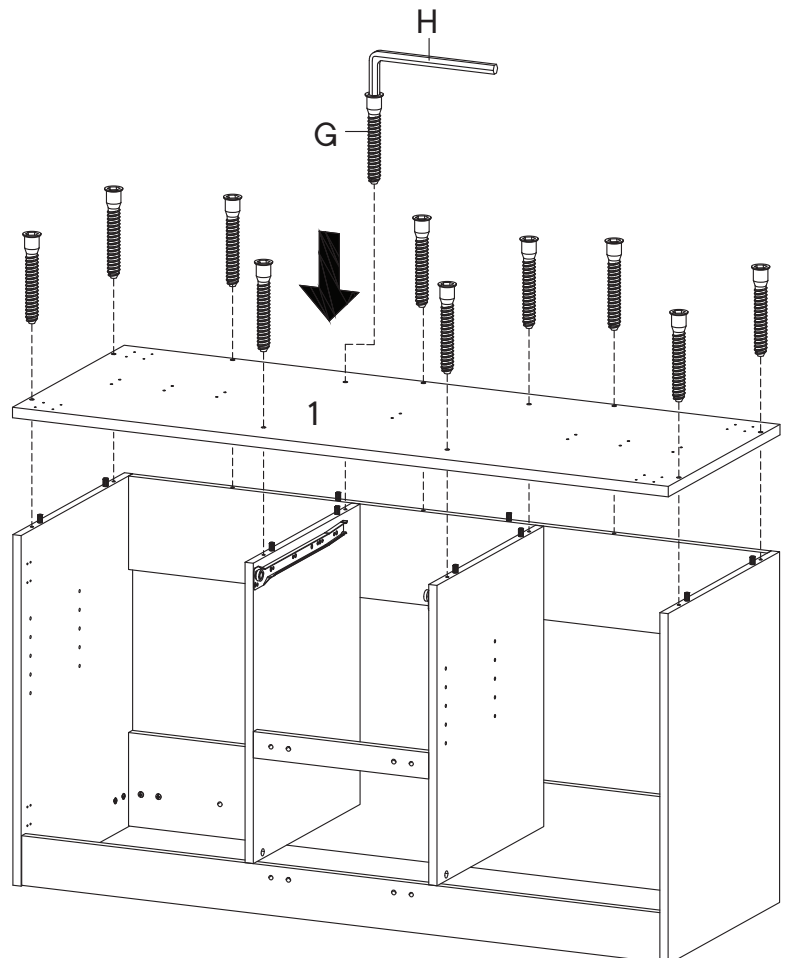
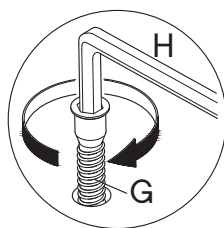


Step 15

HARDWARE

R Screw M 6 x 10.5 mm x14

US11 Anti Deflection Bar x1

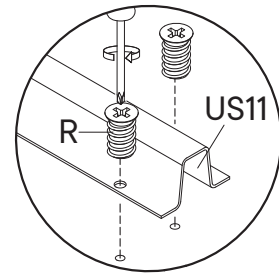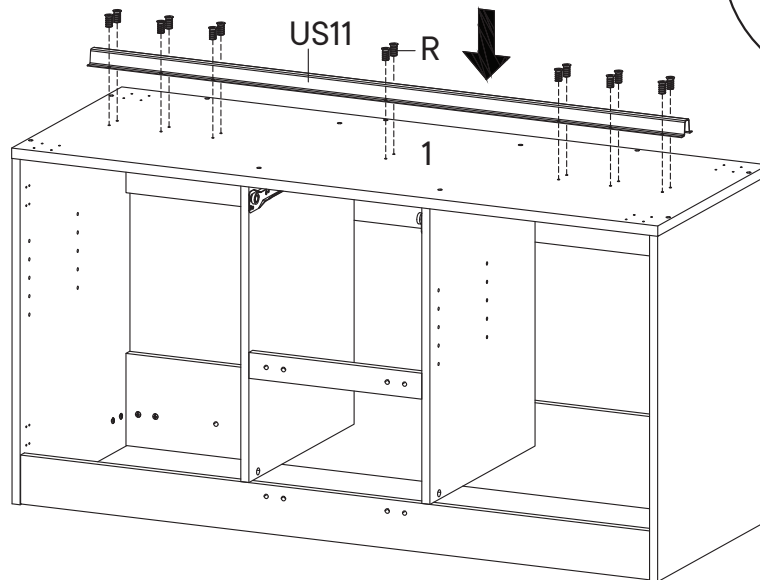


Step 16

HARDWARE

M Screw M 4.5 x 12.5 mm x16



LM20A1 Leg x4

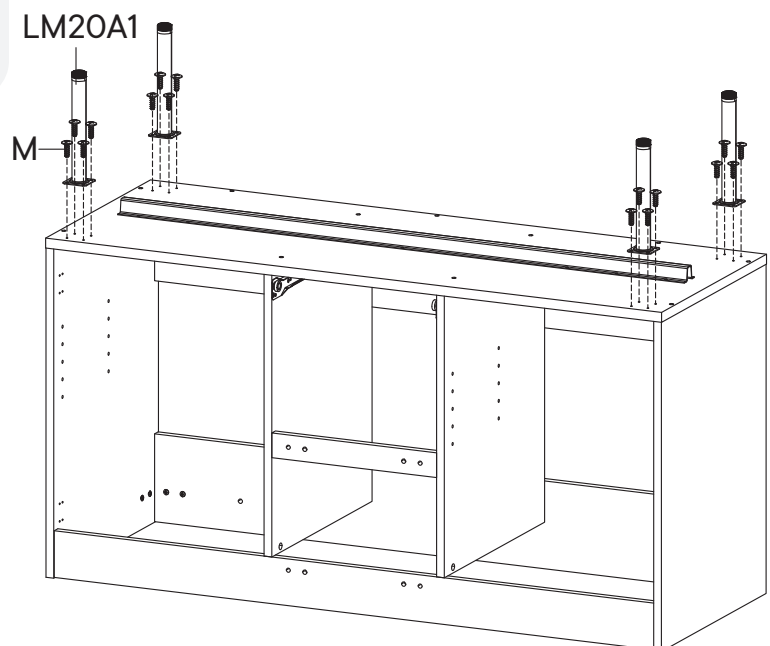

Step 17

HARDWARE



H	Allen Key	x2
N	JCN Nut	x2
O	Screw M 6 x 15 mm	x2
M	Screw M 4.5 x 12.5 mm	x4
BC45	Bracket	x2

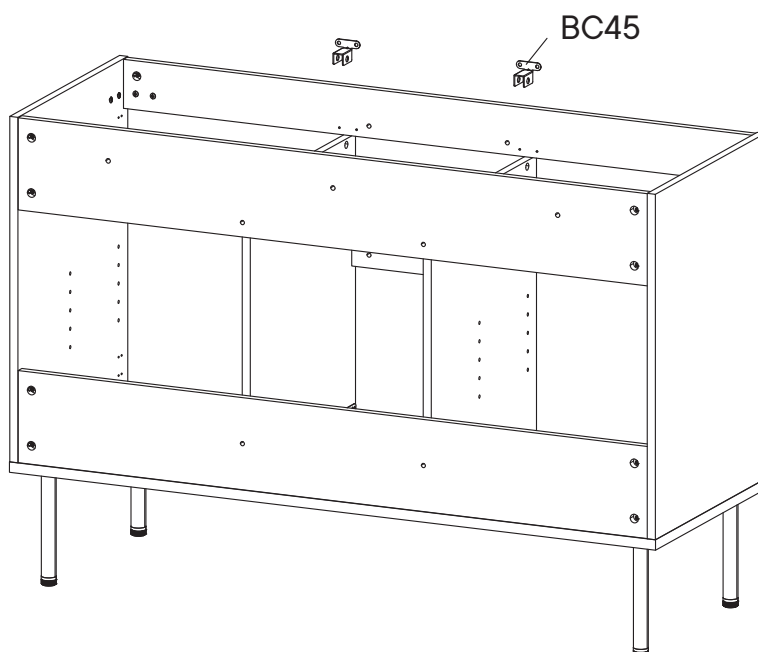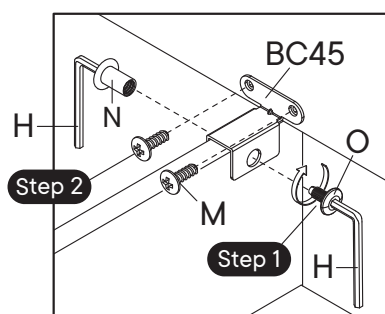


Step 18

HARDWARE

BC67	Bracket	x4
-------------	---------	----

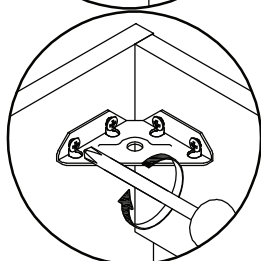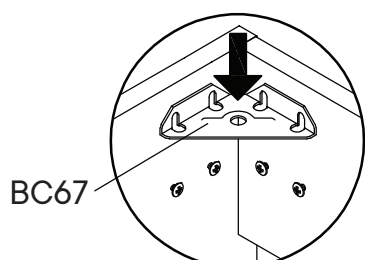

NOTE:
Tighten all the screw

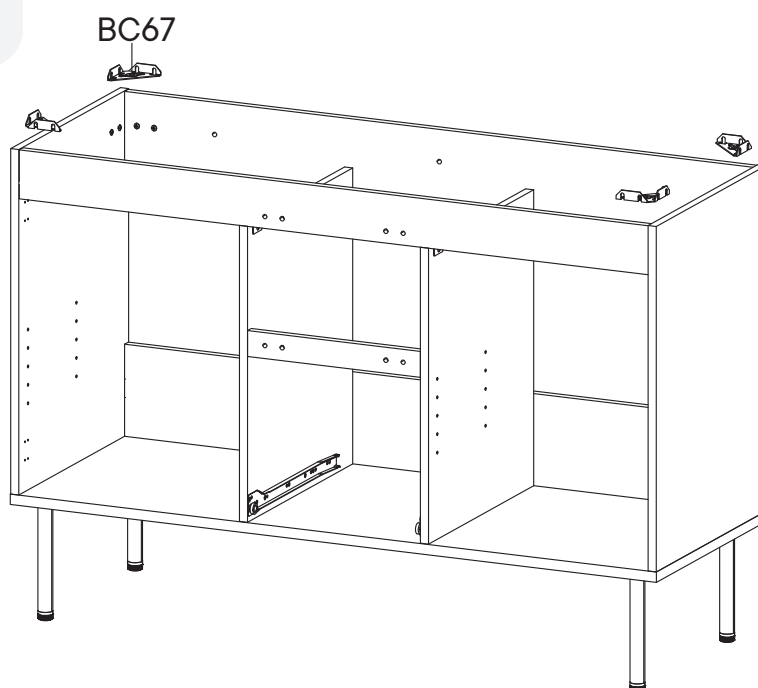




Step 19

HARDWARE

- F** Wood Dowel Ø8 x 20 mm x4
- H** Allen Key x1
- Q** Screw M 6.4 x 25 mm x4

COMPONENTS

- 14** Fake Front Drawer x1

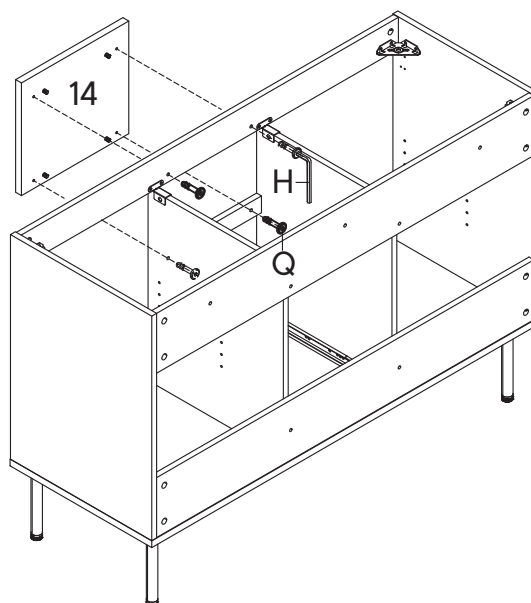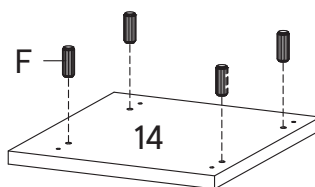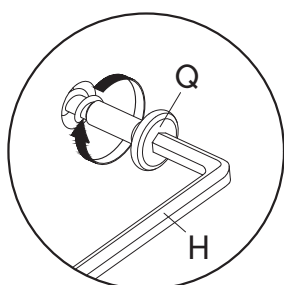




Step 20

HARDWARE

- D** Wood Dowel Ø8 x 30 mm x4
- G** Screw M 7 x 50 mm x4
- H** Allen Key x1

COMPONENTS



- 7** Adjustable Shelf x2
- 8** Support Board 2 x2

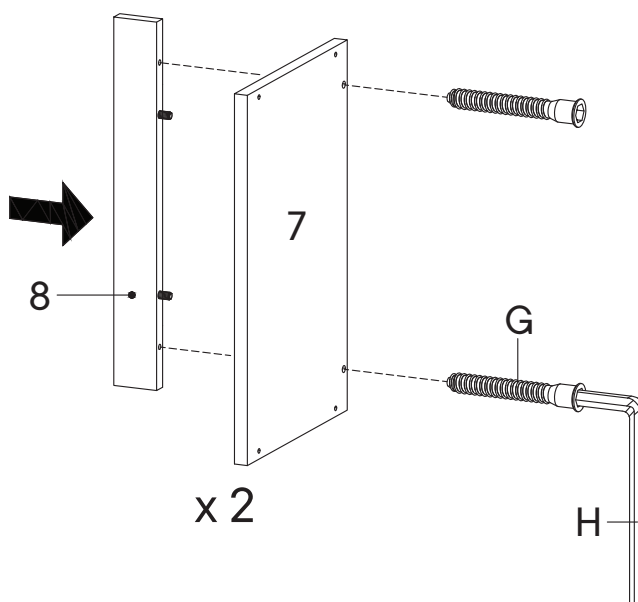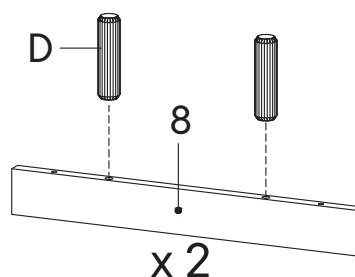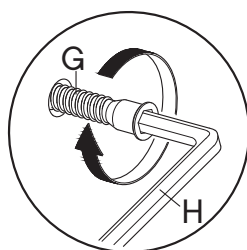

Step 21

HARDWARE



K Shelf Support x8

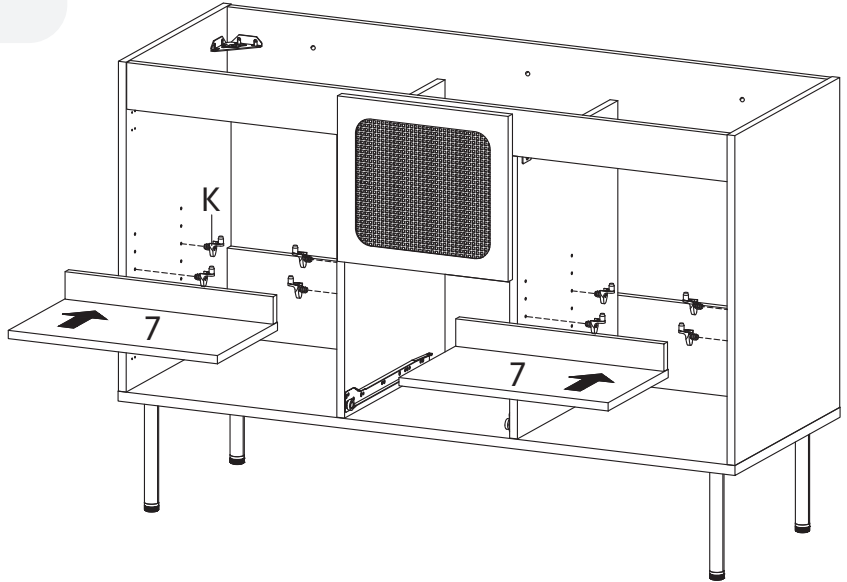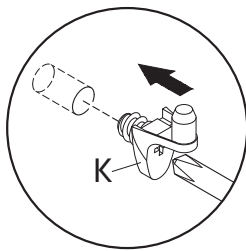


Step 22

HARDWARE

V Foam/Rubber Pad x10

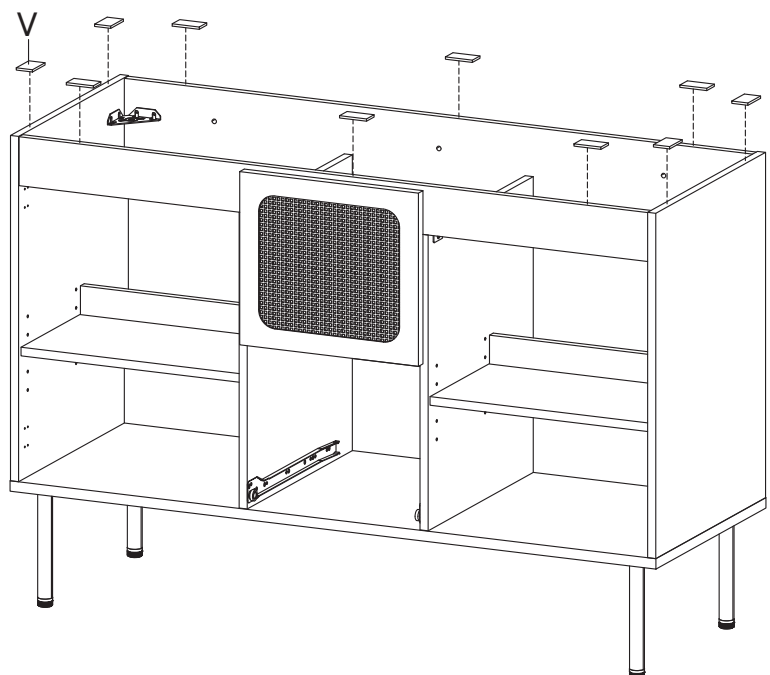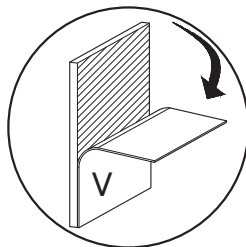

Step 23

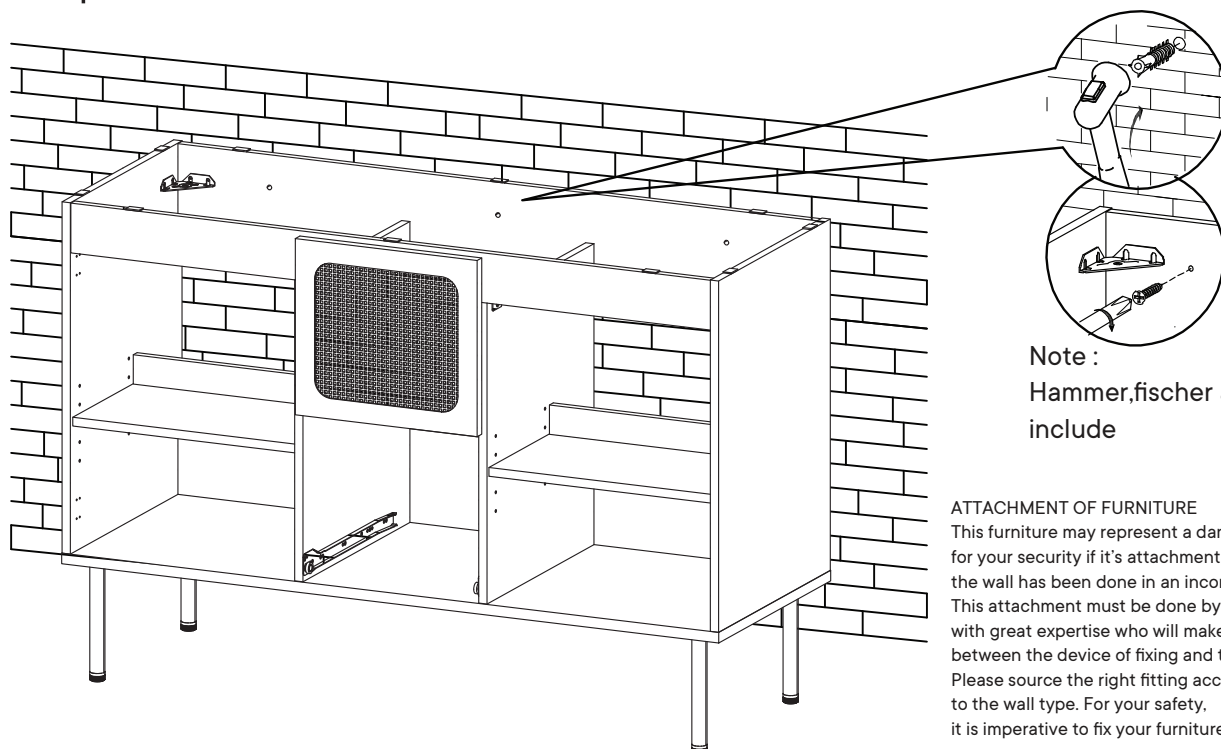


ATTACHMENT OF FURNITURE

This furniture may represent a danger for your security if its attachment on the wall has been done in an incorrect way. This attachment must be done by a person with great expertise who will make sure adequacy between the device of fixing and the wall. Please source the right fitting according to the wall type. For your safety, it is imperative to fix your furniture to the wall

Step 24

Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag

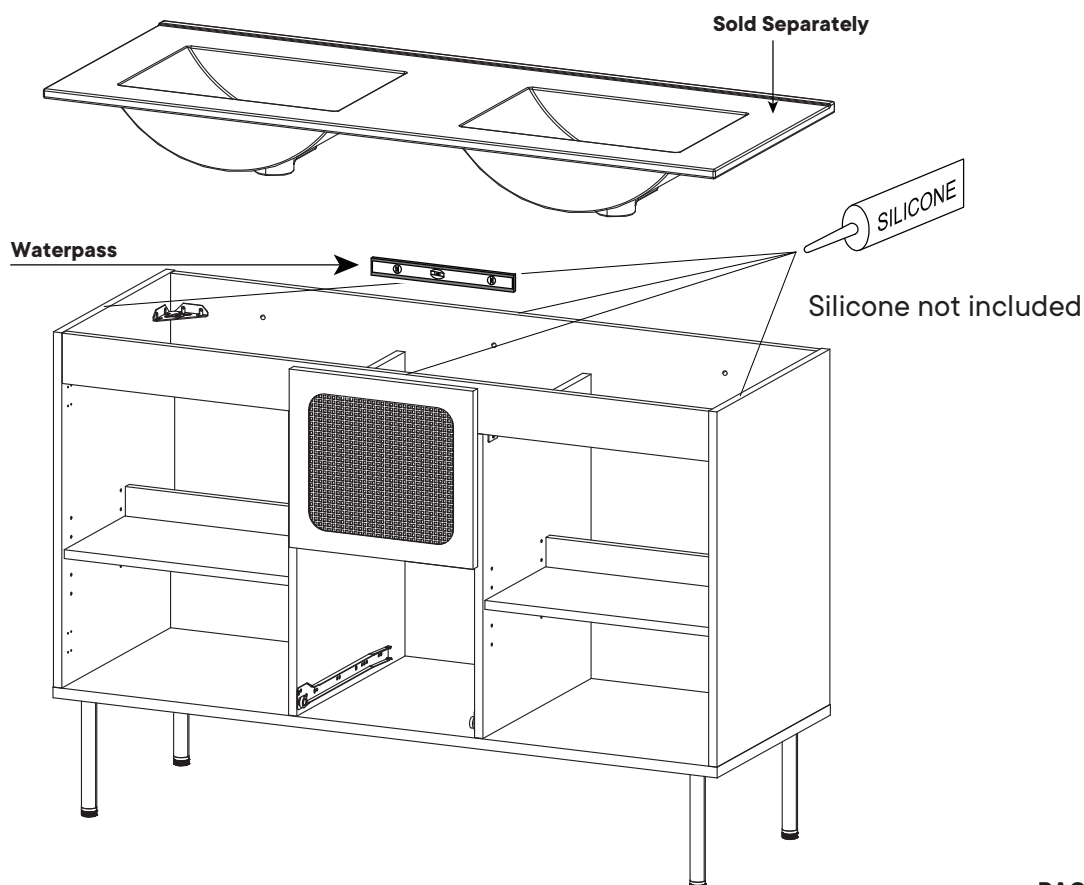


Step 25

HARDWARE

M	Screw M 4.5 x 12.5 mm	x8
HS26A	Hinge	x4

COMPONENTS

18	Door Left	x1
19	Door Right	x1

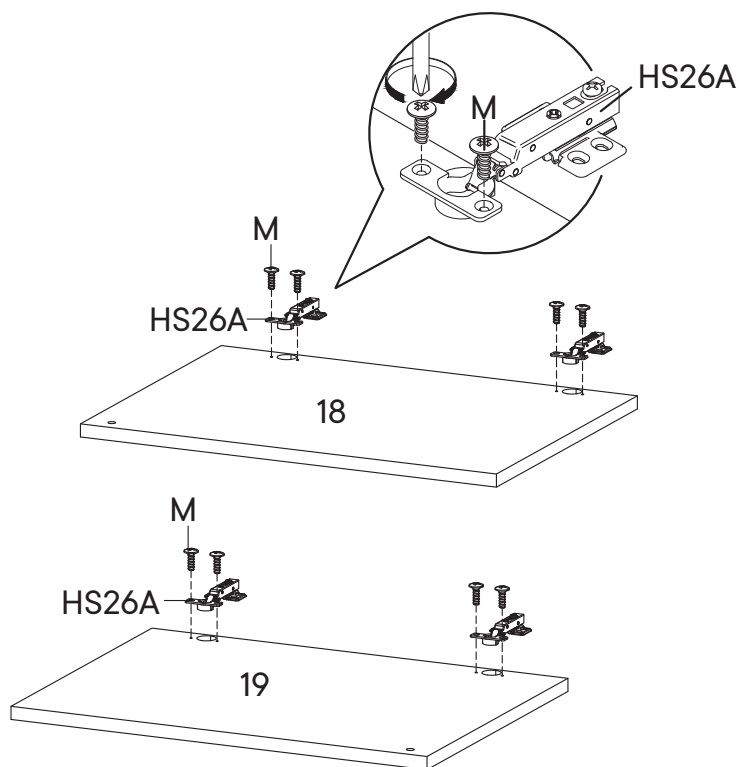






Step 26

HARDWARE



I	Door Knob	x2
J	Screw M 4 x 22 mm	x2
M	Screw M 4.5 x 12.5 mm	x16
X	Silicon Bumper	x2

COMPONENTS


18	Door Left	x1
19	Door Right	x1

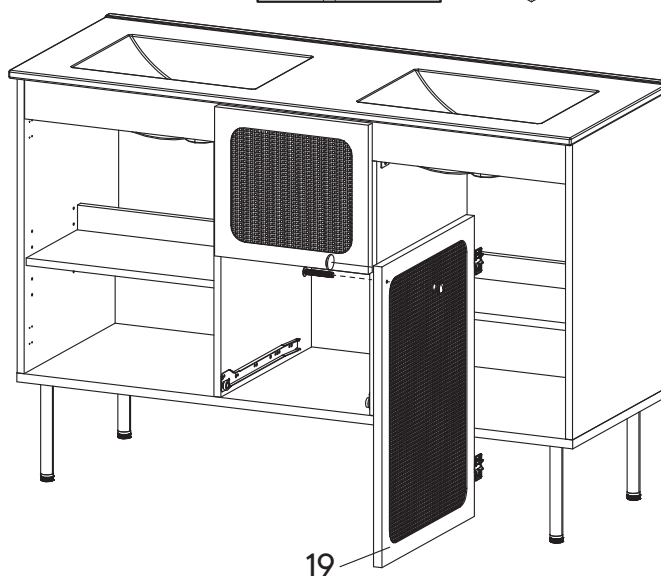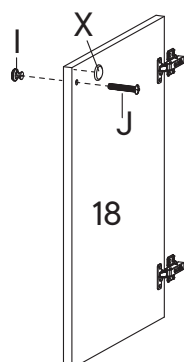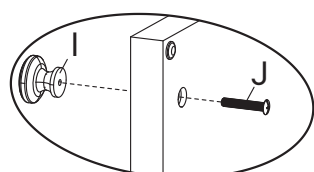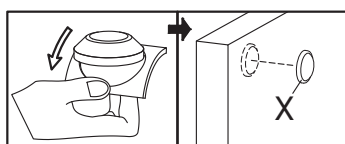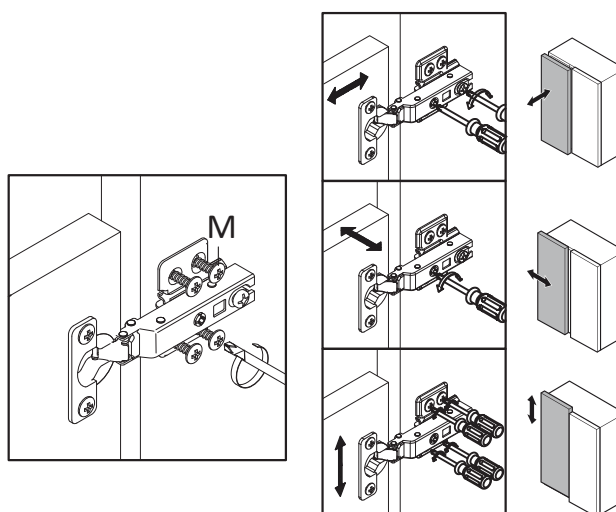

Step 27

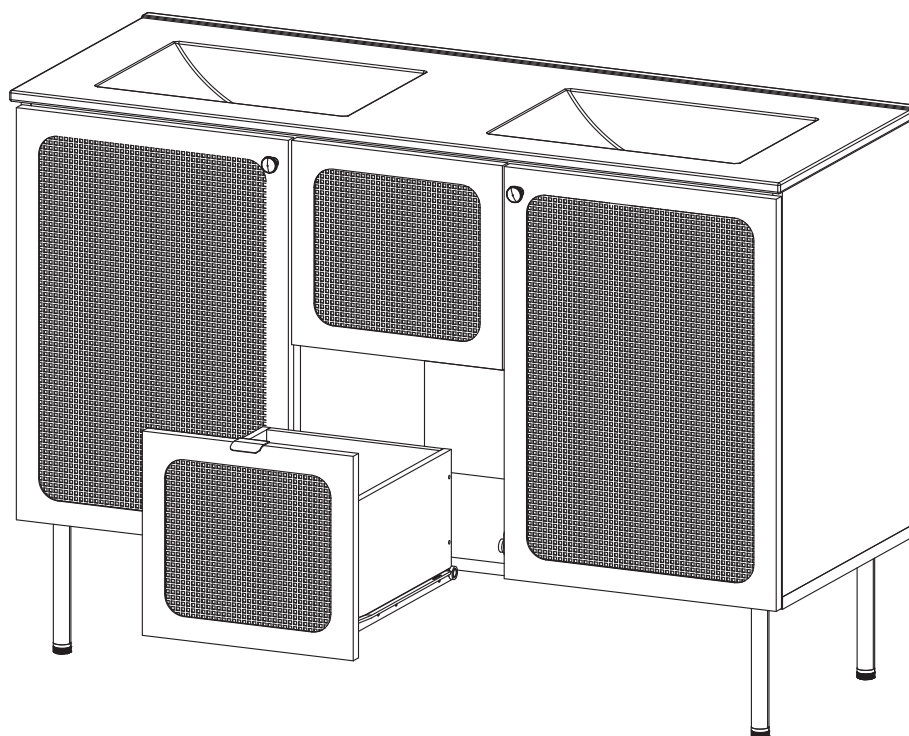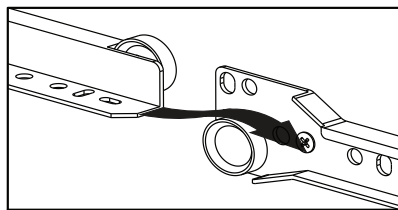


Step 28

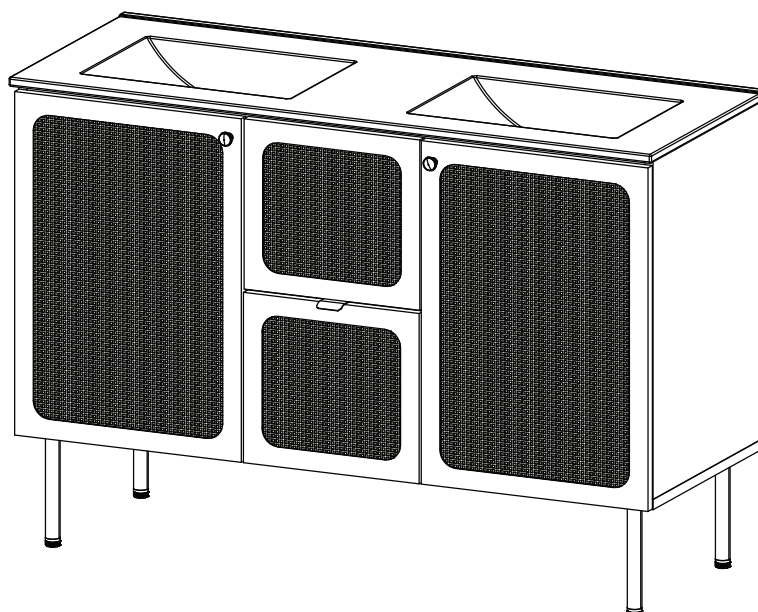

A quick note...

*modway

Your sink basin comes complete with a silver overflow ring.
If you'd like to remove this overflow ring, you can do so by hand.

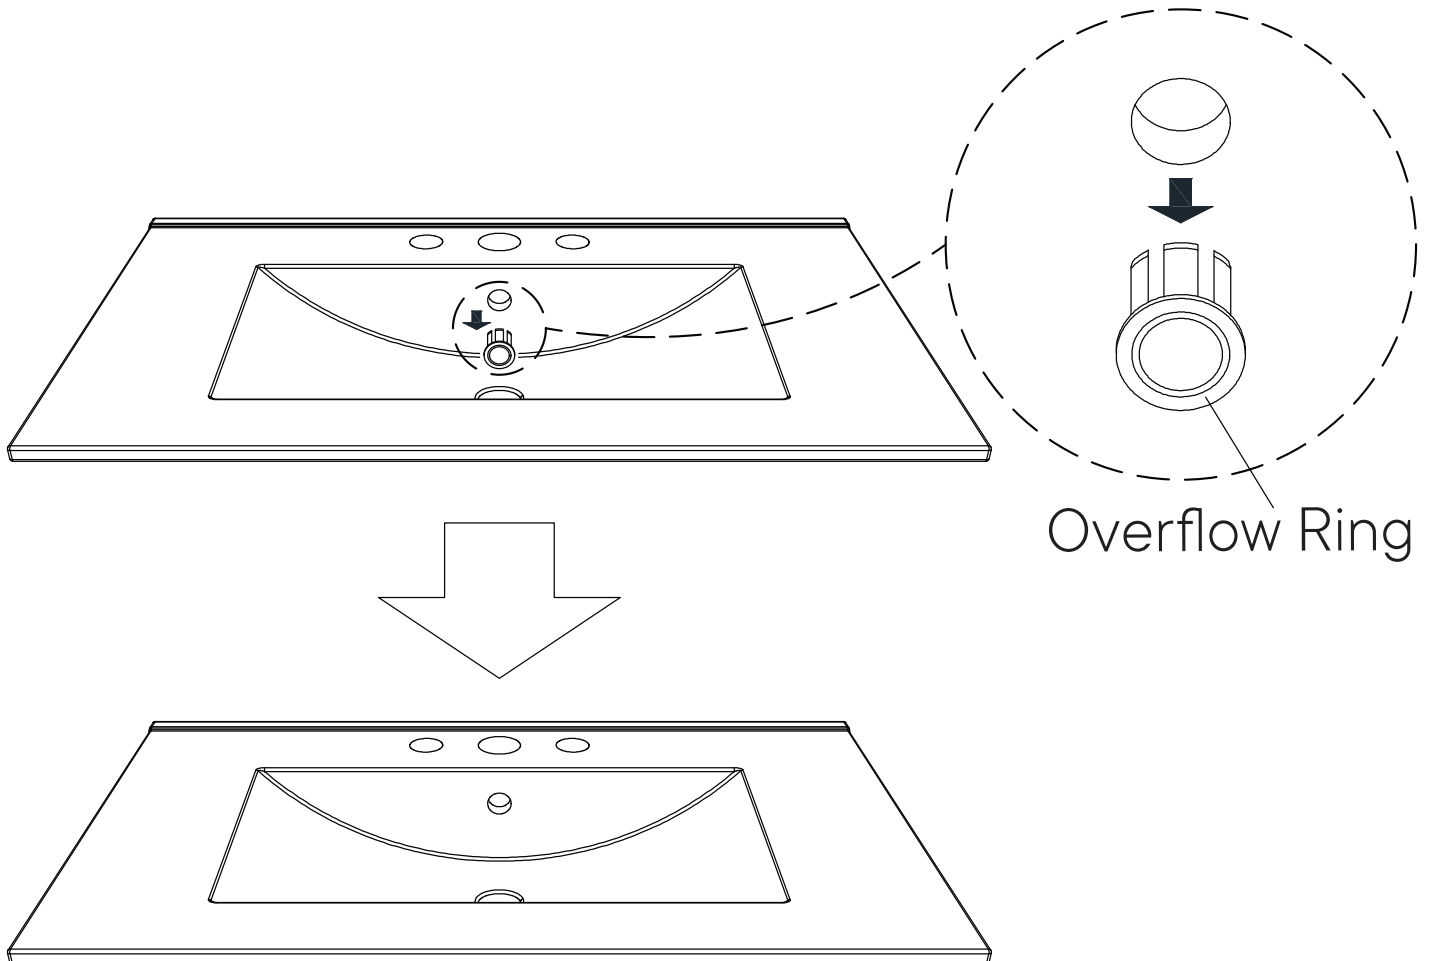

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Great job!

Cabinet assembly is complete.




CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.

Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

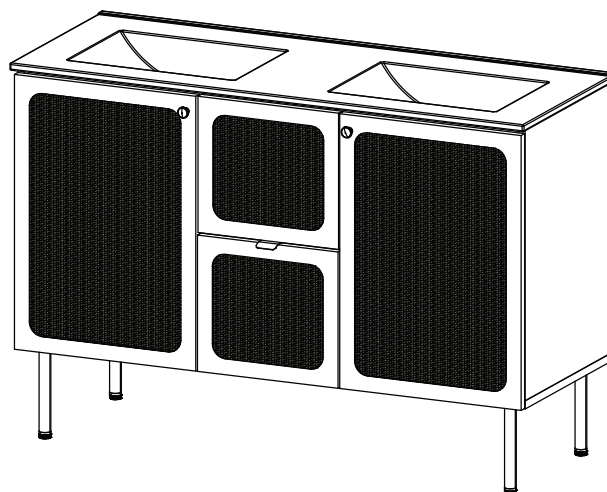

CONNECT WITH US!   

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.