









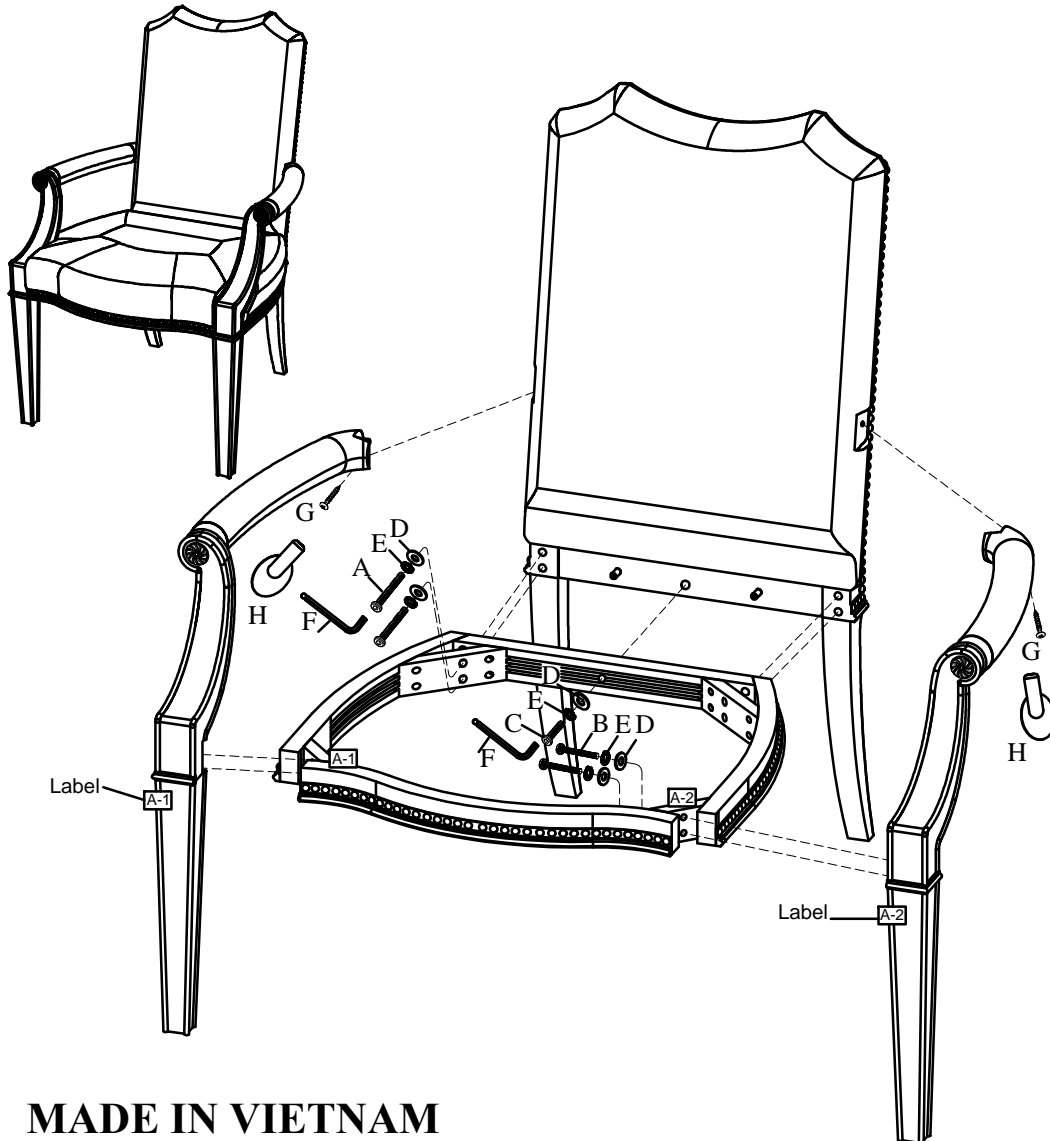
KINCAID[®]

—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com
phone :828-728-3261.

607-623 Upholstered Arm Chair Assembly Instruction Hardware List

CODE	DESCRIPTION	QTY
A	 Bolts $\text{Ø } 5/16'' * 3-1/4''$	4
B	 Bolts $\text{Ø } 5/16'' * 2''$	4
C	 Bolts $\text{Ø } 5/16'' * 1-1/2''$	1
D	 Flat Washer $\text{Ø } 5/16'' * 19$	9
E	 Lock Washer $\text{Ø } 5/16''$	9
F	 Allen Key 100*50*5 MM	1
G	 Screws #8 * 1-1/2"	2
H	 Chair Button	2



IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all crews and bolts until completely assembled.
- . Keep all hardware out of the reach of children

- Step 1: Assemble the seat frame with the chair back with flat washer (D), lock washer (E) and bolt (C). Do not tighten the bolt now.
- Step 2: Fasten the chair frame to the back leg with flat washer (D), lock washer (E) and bolt (A). Two bolts per leg. Tighten the bolts (A) and (C) with Allen key (F).
- Step 3: Attach Arm front leg to the apron and chair back and secure with flat washer (D), lock washer (E) and bolt (B) at apron side. Two bolts per leg. Tighten the bolts (B) with Allen key (F). Secure the arm side using screw (G), Phillips Head Screwdriver (not included), one screw per arm. Plug the Chair Button (H)

MADE IN VIETNAM