


TV Stand

Assembly Instructions - Please keep for future reference

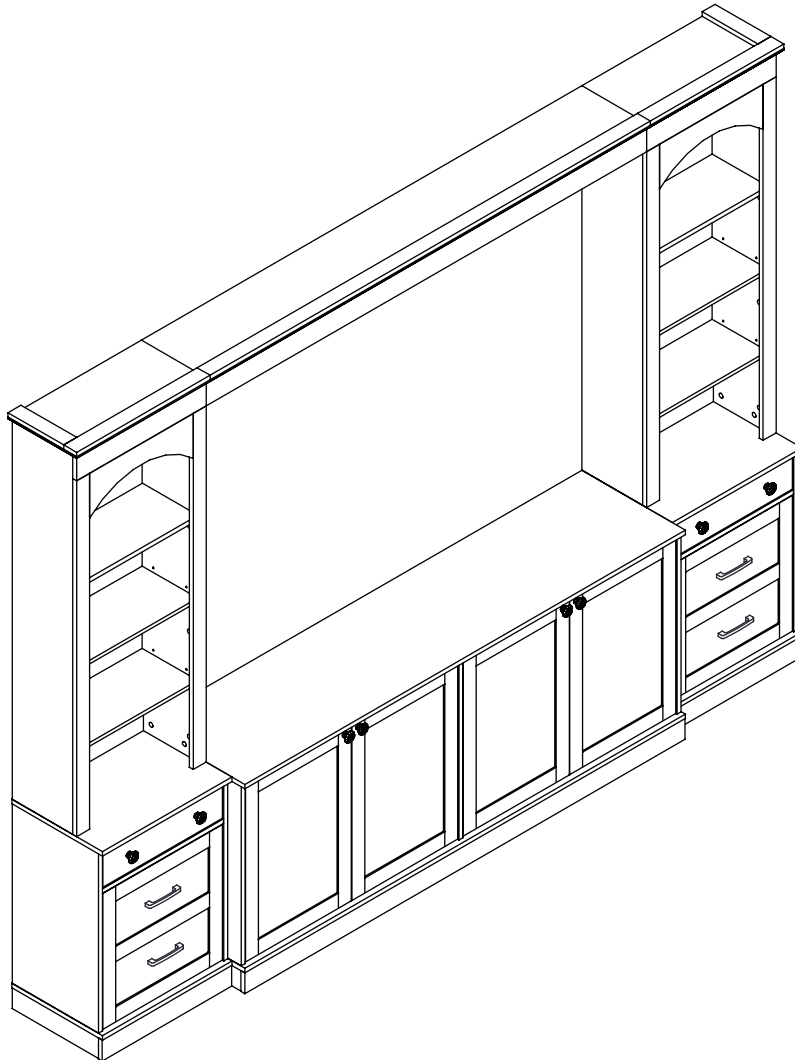

Dimensions

Width-107.48inch

Depth-15.75inch

Height-78.74inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

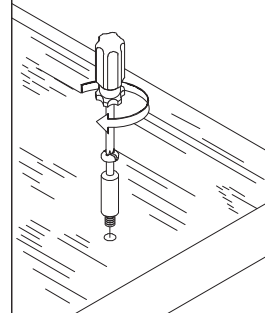

Step 2

Push the male camlock into the entry hole.

2

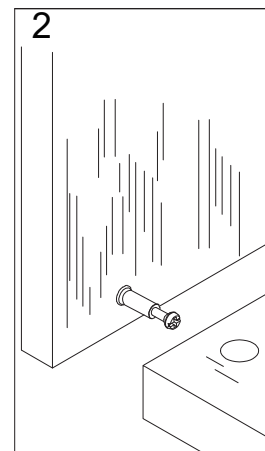


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

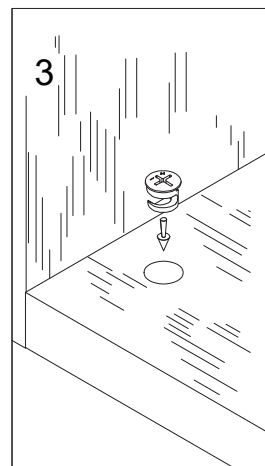


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

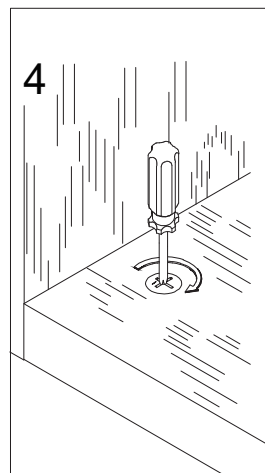










Assembly Instructions

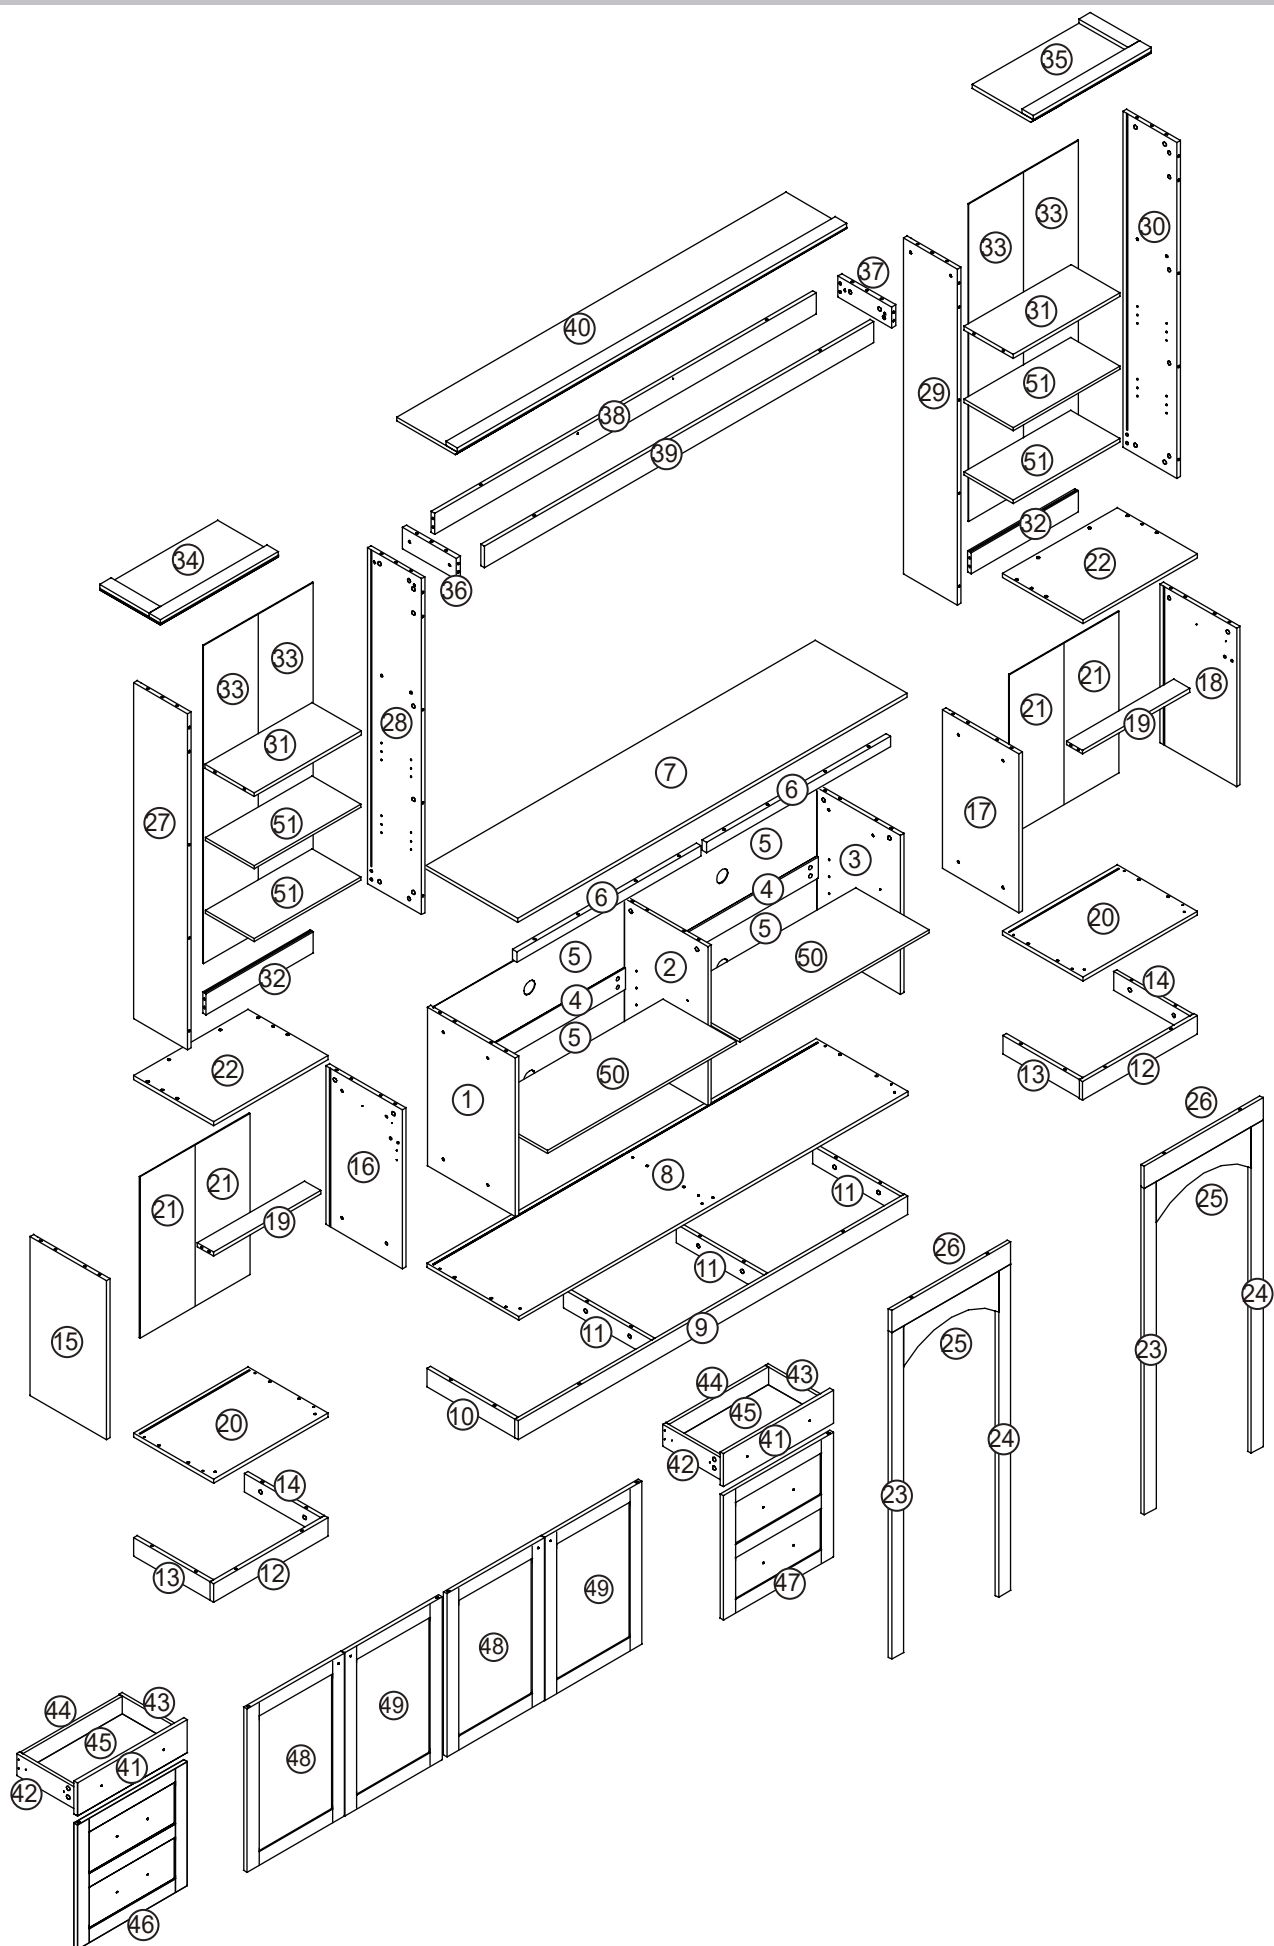

Assembly Instructions

There are 3 boxes of this product

















BOX-1: N721P427746

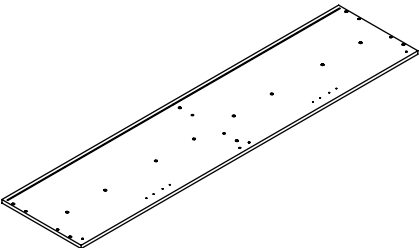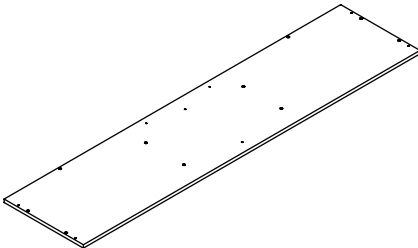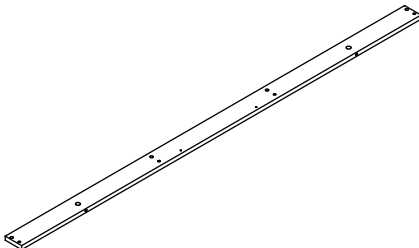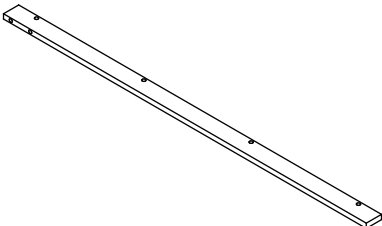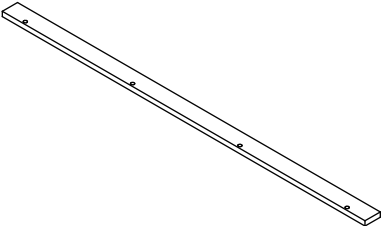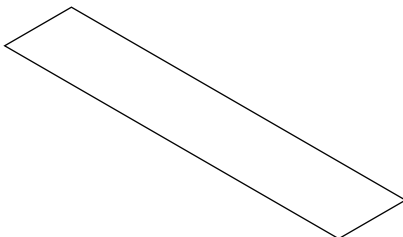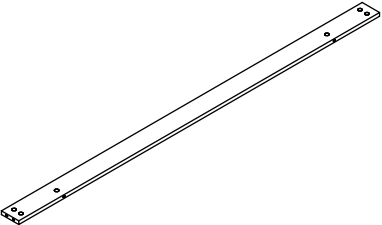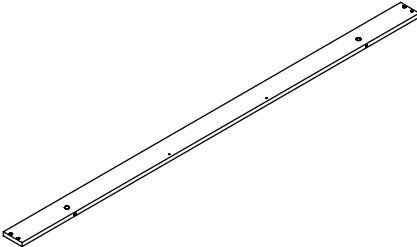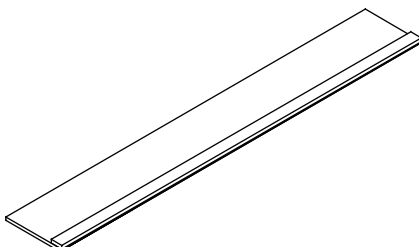 1700*400*15mm ⑦ X 1	 1700*400*15mm ⑧ X 1	 1700*70*15mm ⑨ X 1
 1190*50*15mm ②③ X 2	 1190*50*15mm ②④ X 2	 1201*239.5*3mm ③③ X 4
 1666*80*15mm ③⑧ X 1	 1700*80*15mm ③⑨ X 1	 1700*265*30mm ④⑩ X 1

Assembly Instructions

There are 3 boxes of this product




























BOX-2: N721P427747

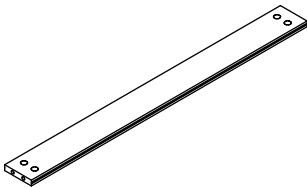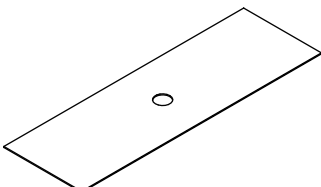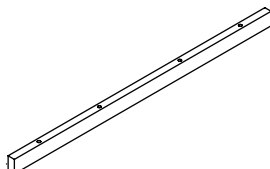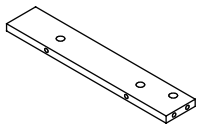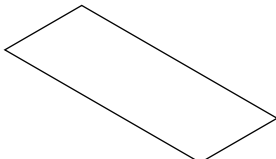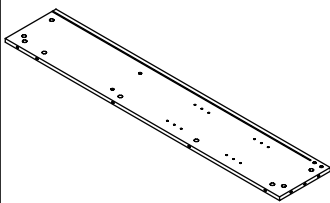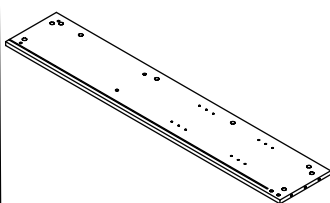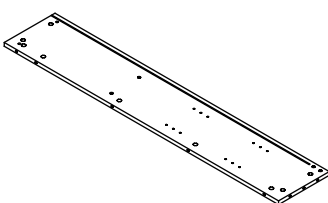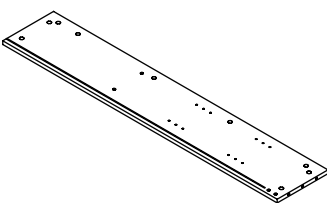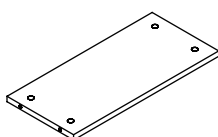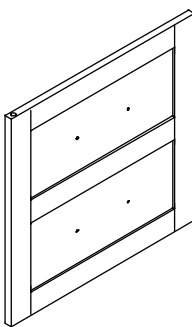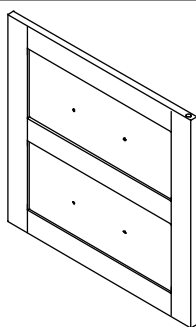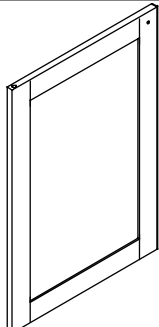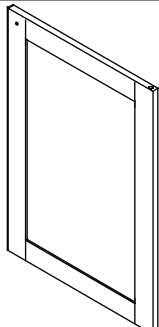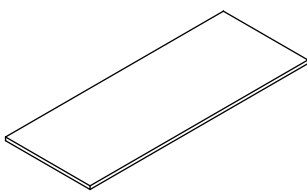 826*80*15mm ④ X 2	 836*271*3mm ⑤ X 4	 816*40*20mm ⑥ X 2	 384*70*15mm ⑩ X 1
 384*70*15mm ⑪ X 3	 610*239.5*3mm ⑫ X 4	 1270*235*15mm ⑳ X 1	 1270*235*15mm ㉔ X 1
 1270*235*15mm ㉙ X 1	 1270*235*15mm ㊱ X 1	 467*214*15mm ㊲ X 2	 462*453*15mm ㊴ X 1
 462*453*15mm ㊶ X 1	 594*409*15mm ㊸ X 2	 594*409*15mm ㊹ X 2	 825*320*15mm ㊿ X 2

Assembly Instructions

There are 3 boxes of this product












BOX-3: N721P427748

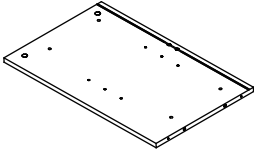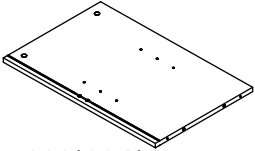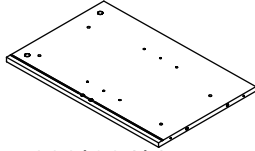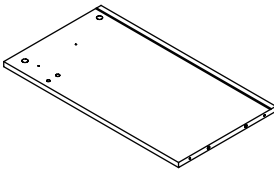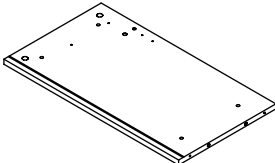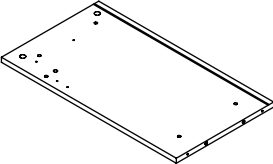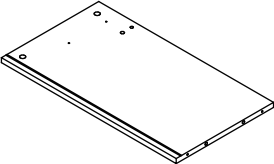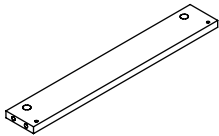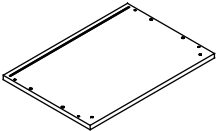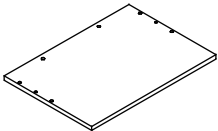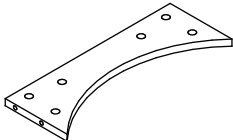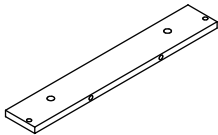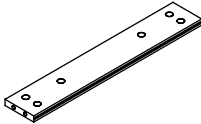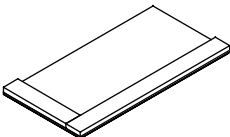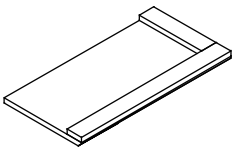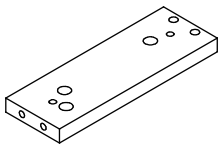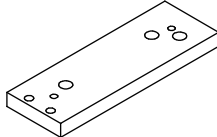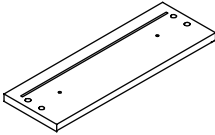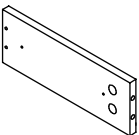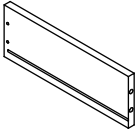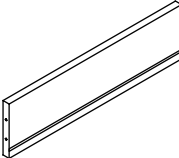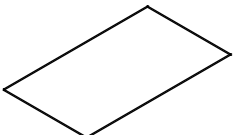 600*384*15mm ① X 1	 600*384*15mm ② X 1	 600*384*15mm ③ X 1	 500*70*15mm ⑫ X 2
 334*70*15mm ⑬ X 2	 334*70*15mm ⑭ X 2	 600*334*15mm ⑮ X 1	 600*334*15mm ⑯ X 1
 600*334*15mm ⑰ X 1	 600*334*15mm ⑱ X 1	 468*70*15mm ⑲ X 2	 500*350*15mm ⑳ X 2
 500*350*15mm ㉒ X 2	 400*150*15mm ㉕ X 2	 500*80*15mm ㉖ X 2	 468*80*15mm ㉚ X 2
 515*265*30mm ㉜ X 1	 515*265*30mm ㉝ X 1	 235*80*15mm ㉞ X 1	 235*80*15mm ㉟ X 1
 462*120*15mm ㉑ X 2	 250*80*12mm ㉒ X 2	 250*80*12mm ㉓ X 2	 419*80*12mm ㉔ X 2
 430*248*3mm ㉗ X 2	 465.5*214*12mm ㉘ X 4	 Hardware Pack X1	



Components-Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

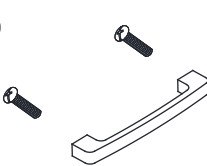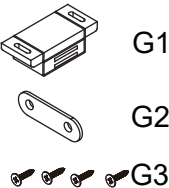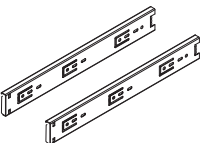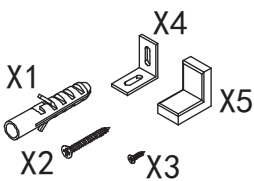(A)  Cam Bolt x 142+3	(B)  Cam Bolt x 8+2	(C)  Cam Lock x 150+4	(D)  8*30mm Dowel x 52+2
(E)  Handle x 4	(F)  Handle x 8	(G)  door holder x 6	(H)  5*40mm Screw x 14+2
(J)  4*35mm Screw x 8+2	(K)  225mm Drawer slide x 2	(L)  Rotating shaft x 12+1	(M)  Metal shelf support x 24+2
(N)  Perfect Fit x 54	(O)  felt x 55+2	(P)  Angle iron x 6	(R)  6*25mm Screw x 12+1
(S)  Clamp plate nut x 12+1	(T)  6*50mm Screw x 8+1	(U)  Back panel buckle x 52+2	(V)  3.5*12mm Screw x 80+3
(X)  Anti dumping x 4 set	(Y)  Screwdriver x 2		


Step 1

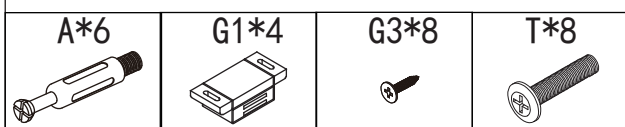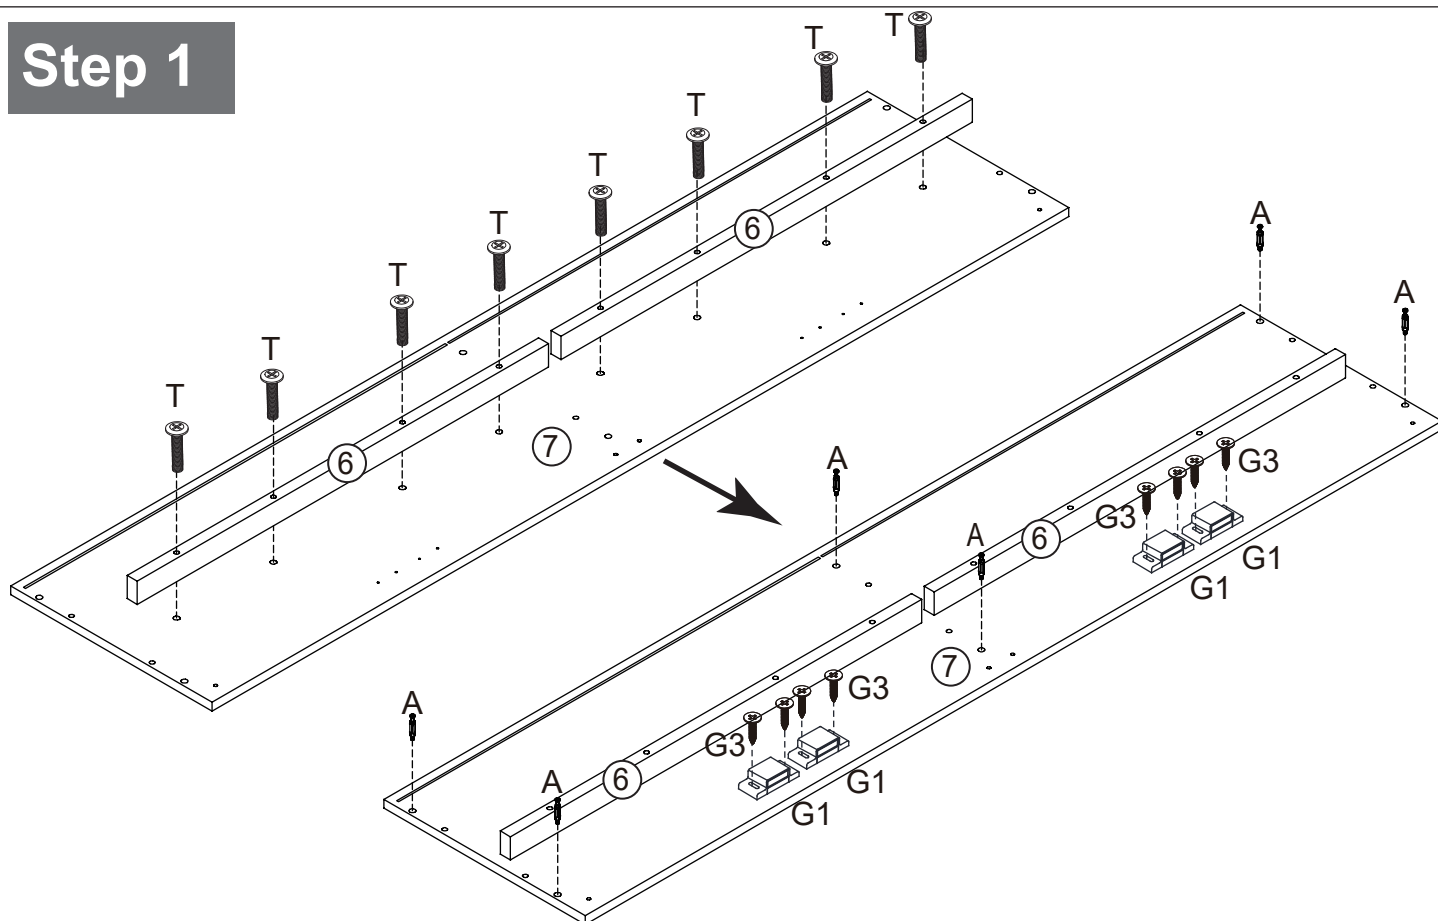


Step 2

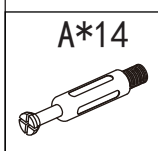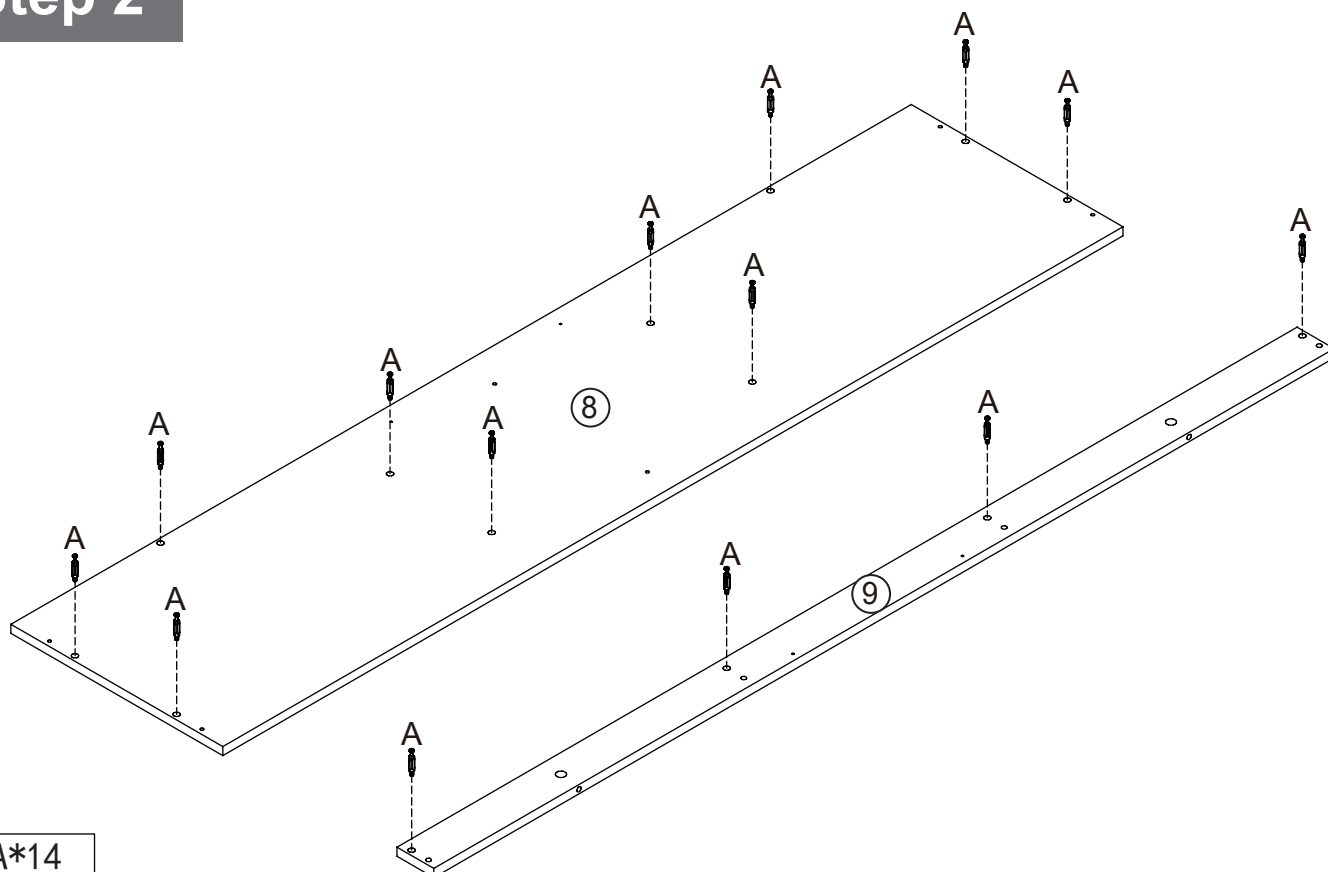


Step 3

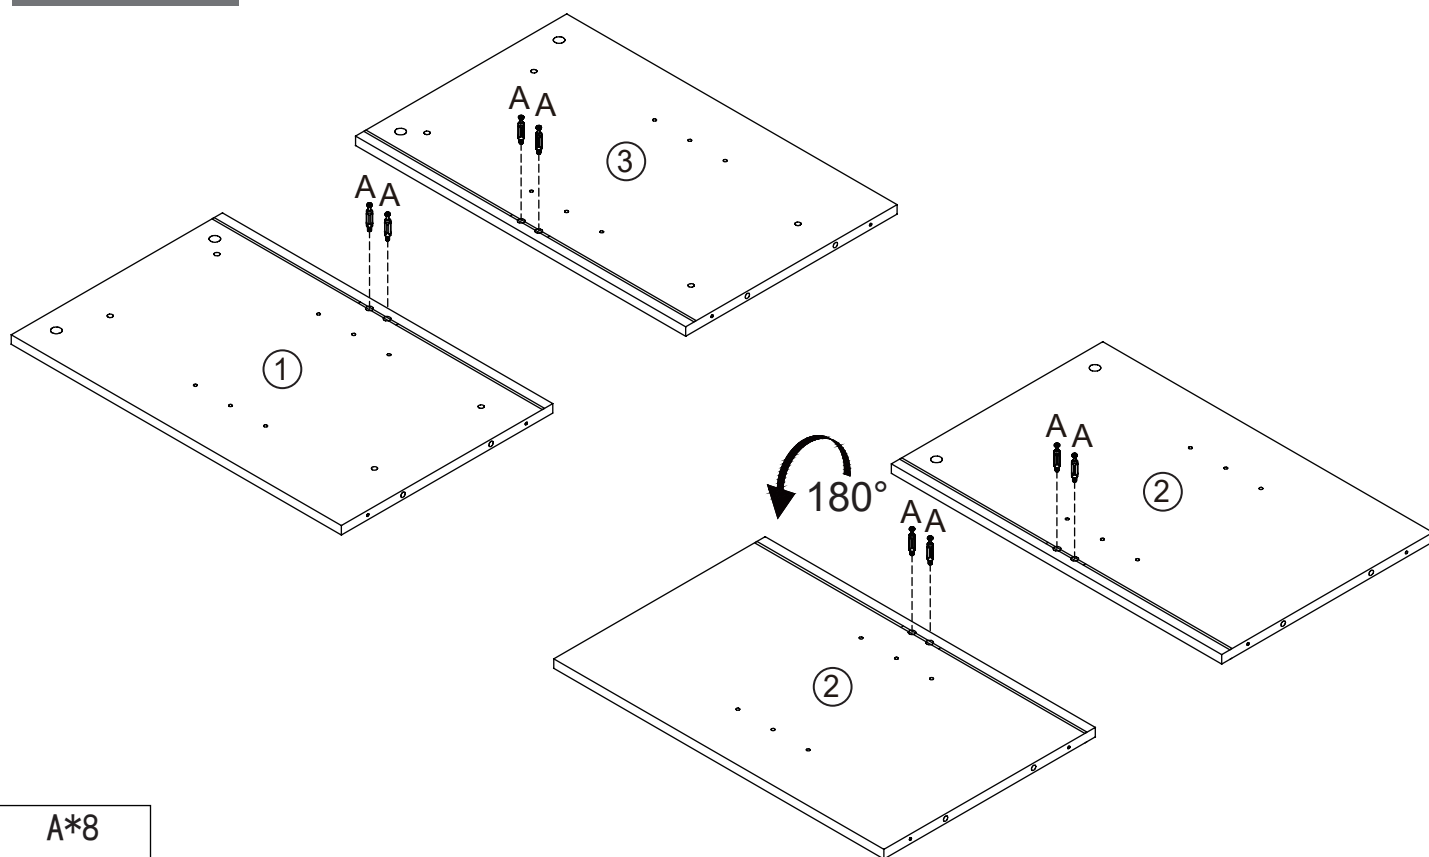

A*8





Step 4

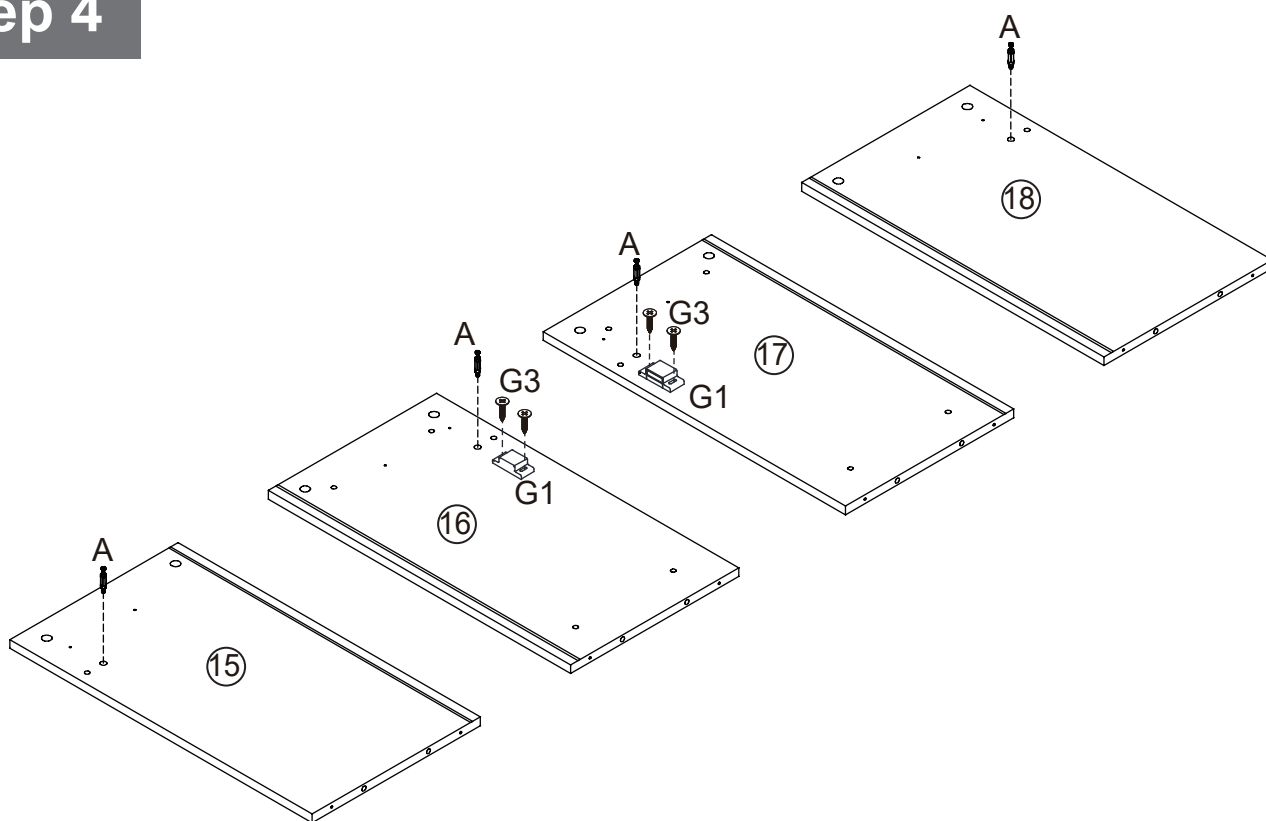


A*4

G1*2


G3*4




Step 5 Step X2

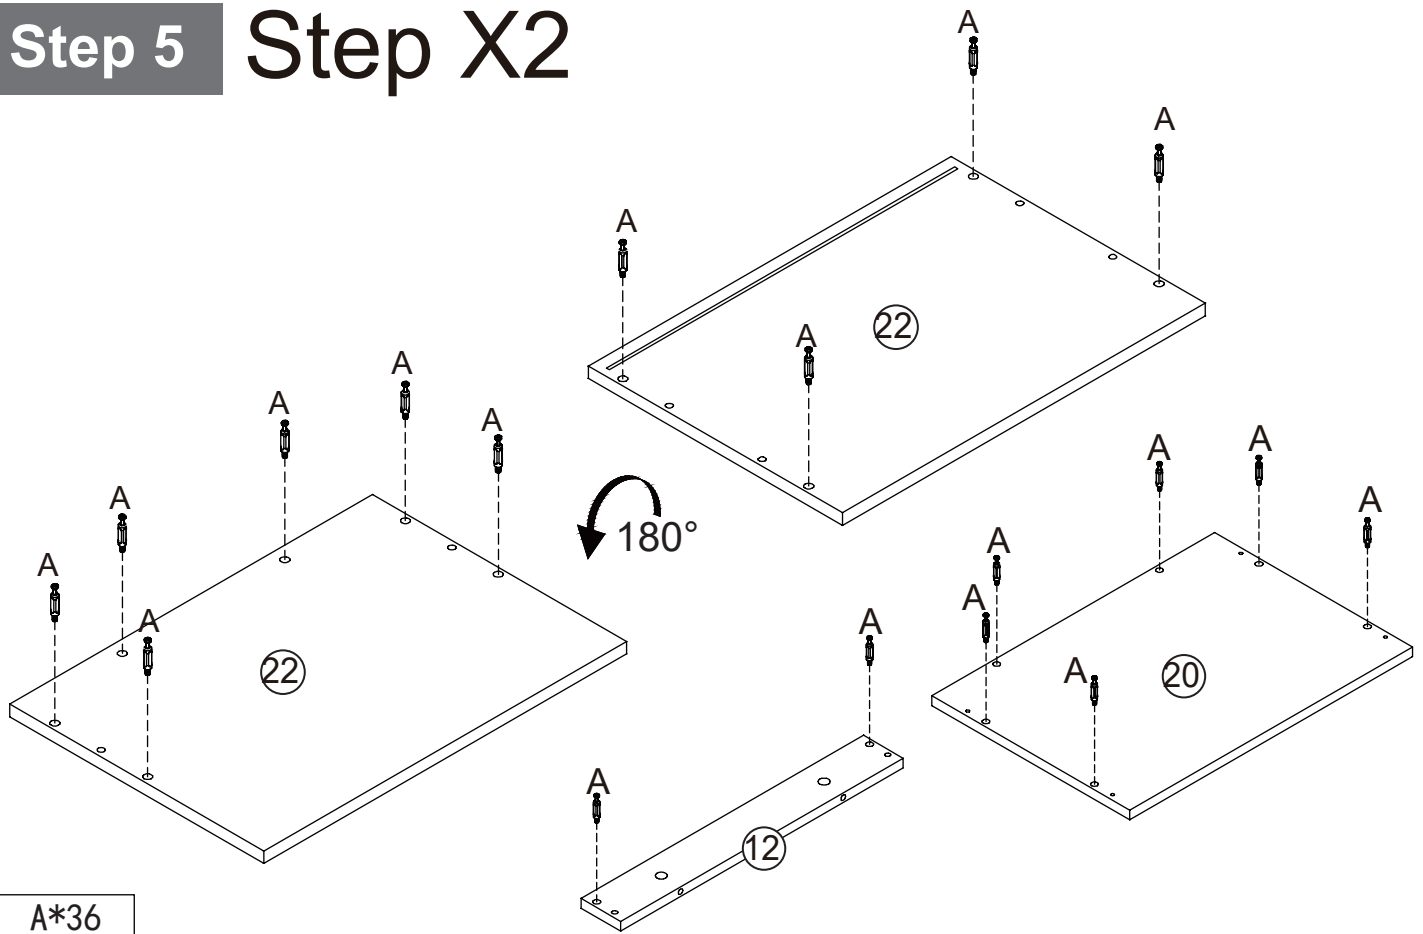


A*36




Step 6 Step X2

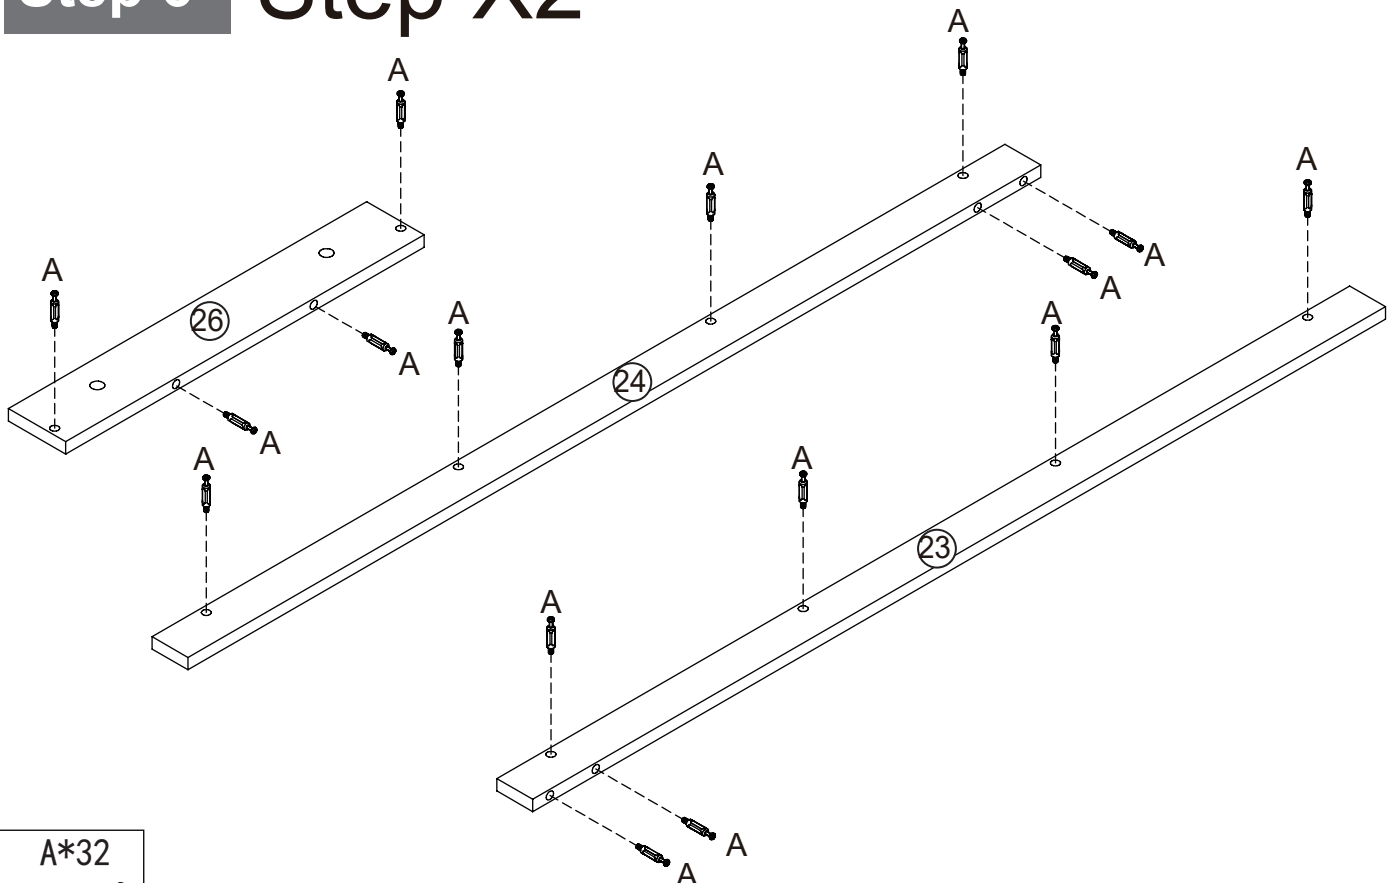


A*32




Step 7

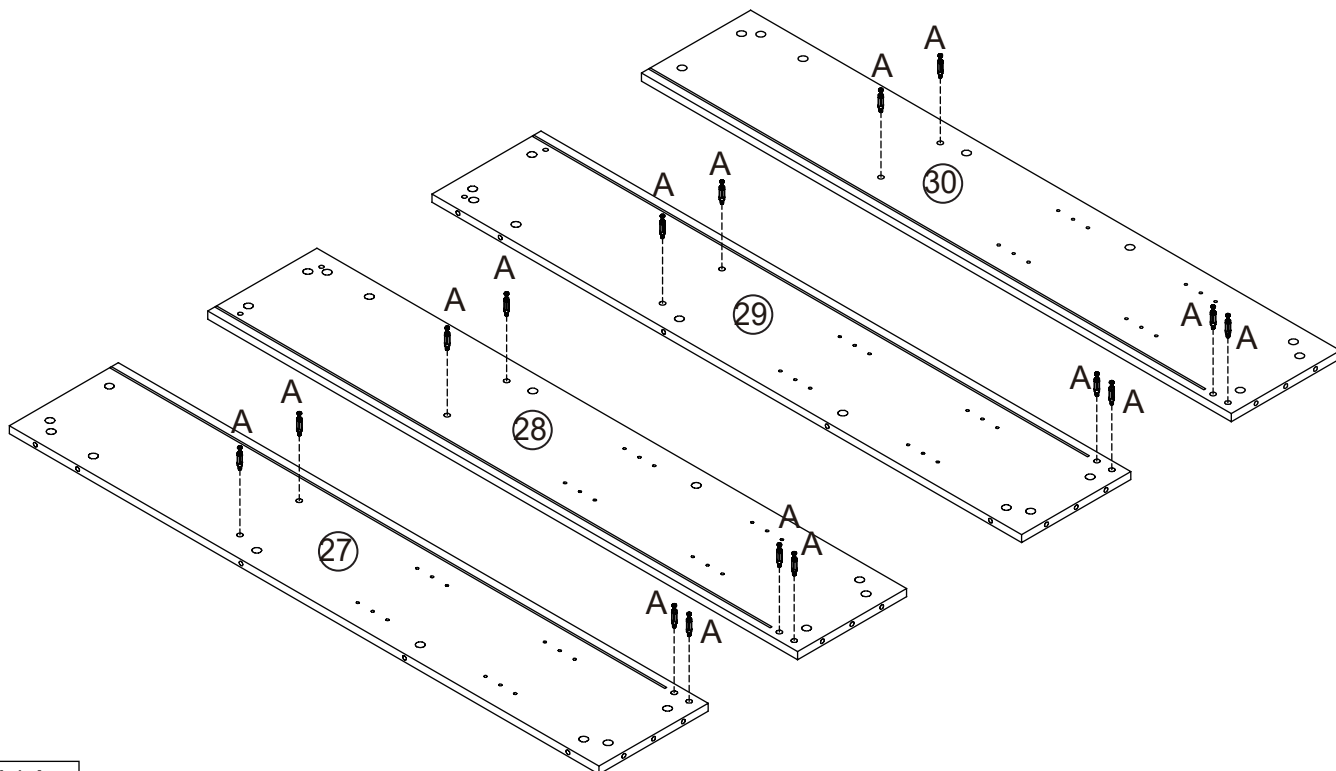


A*16




Step 8

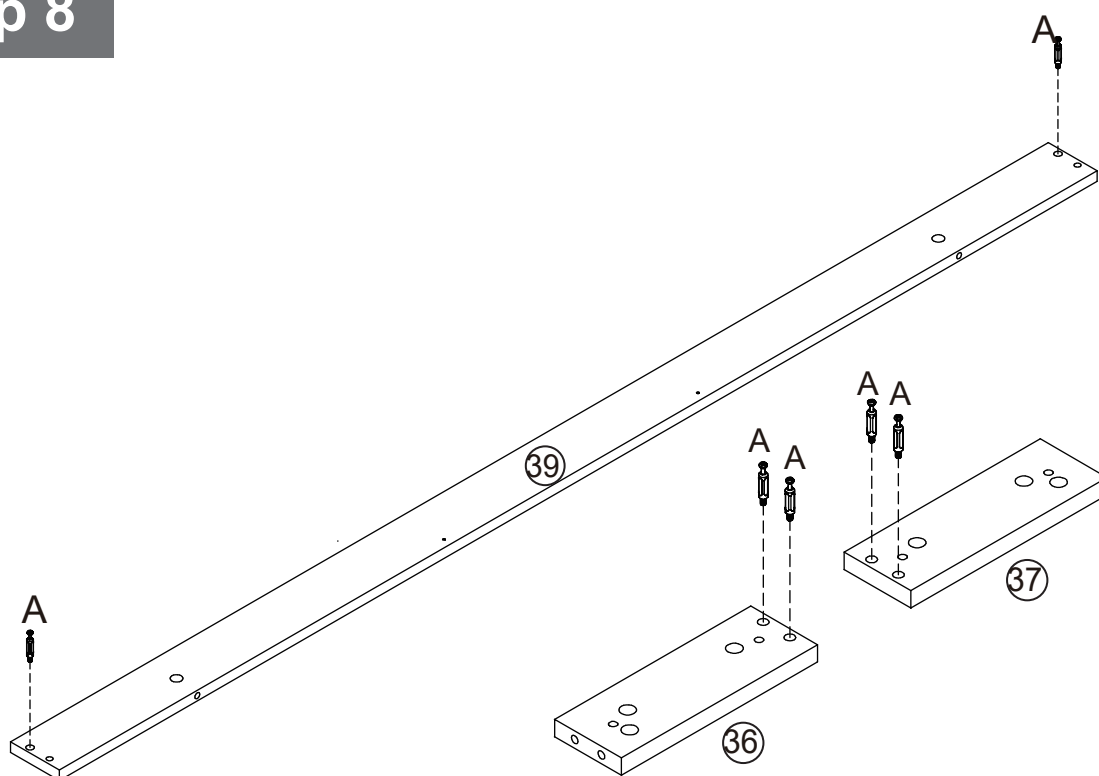


A*6




Step 9

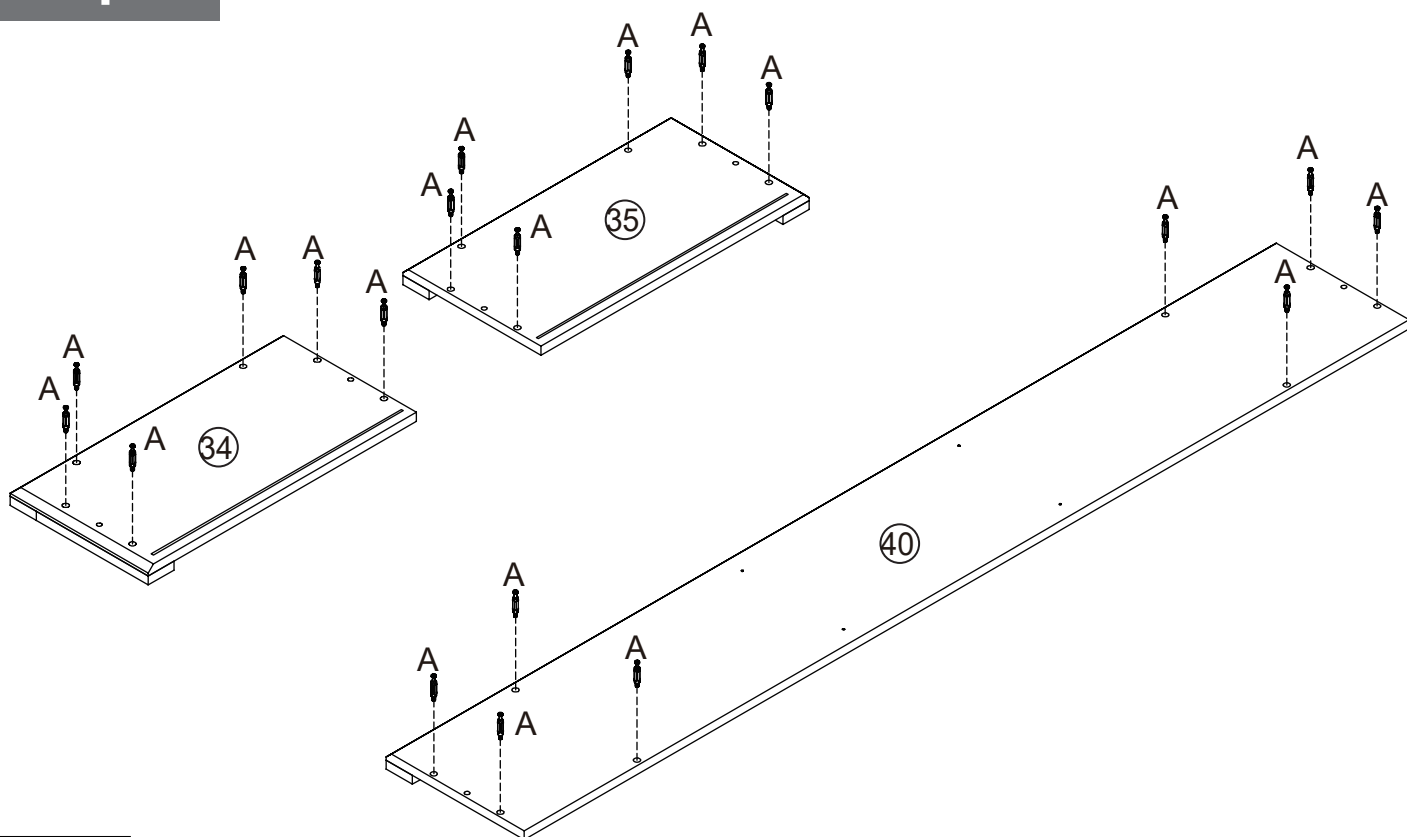


A*20



Step 10 Step X2

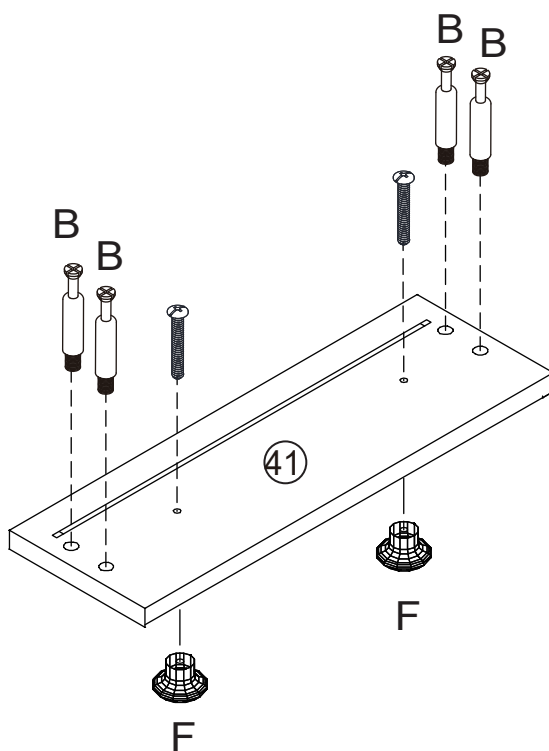


B*8



F*4



Step 11

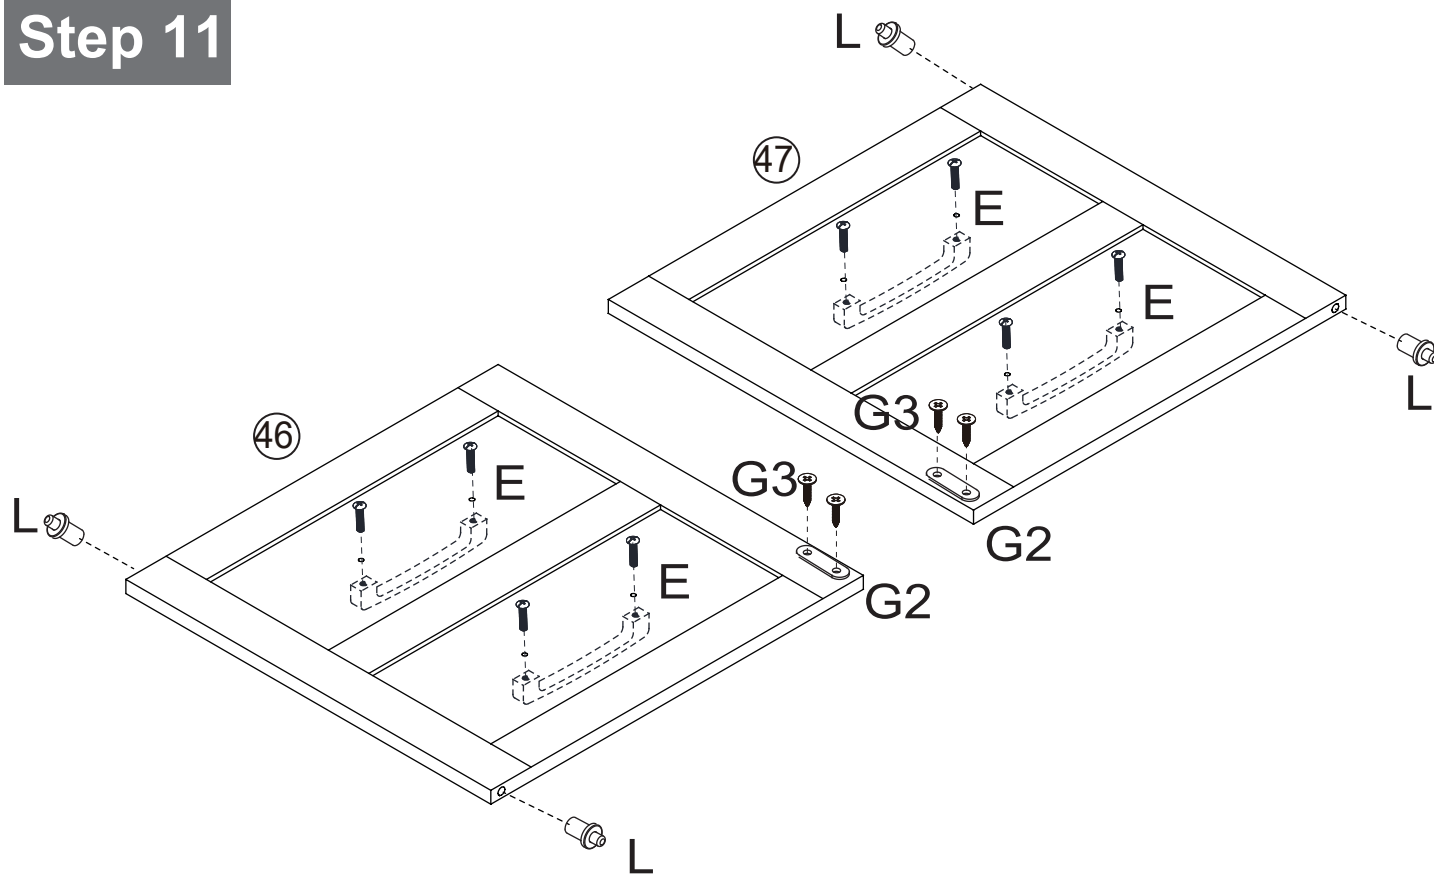


G2*2



G3*4




E*4



L*4



Step 12 Step X2

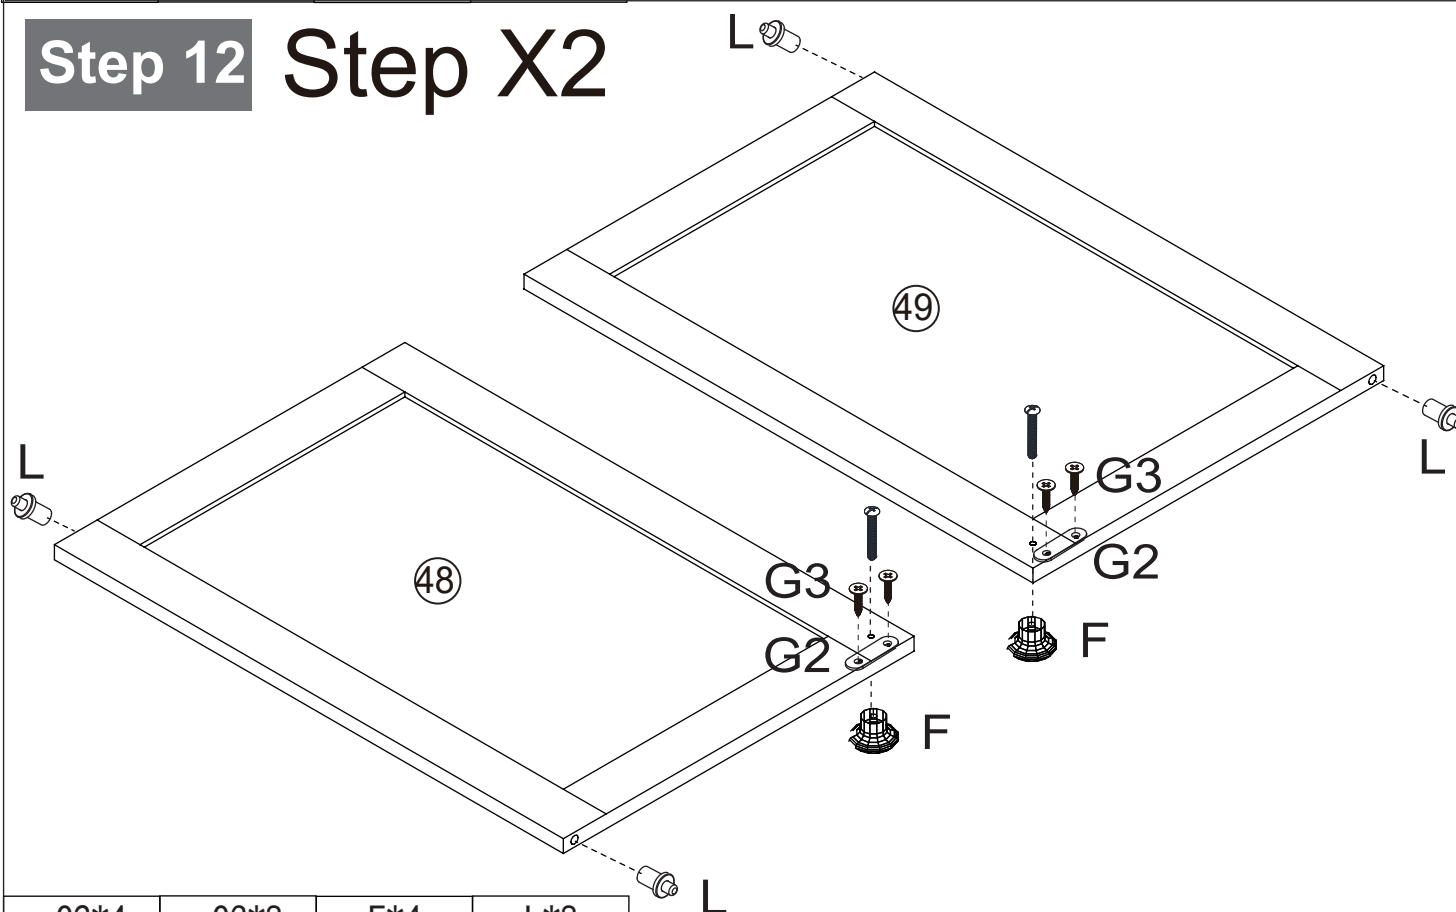

G2*4




G3*8






F*4




L*8




Step 13

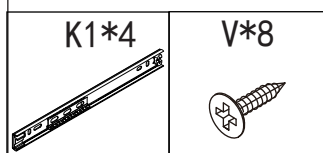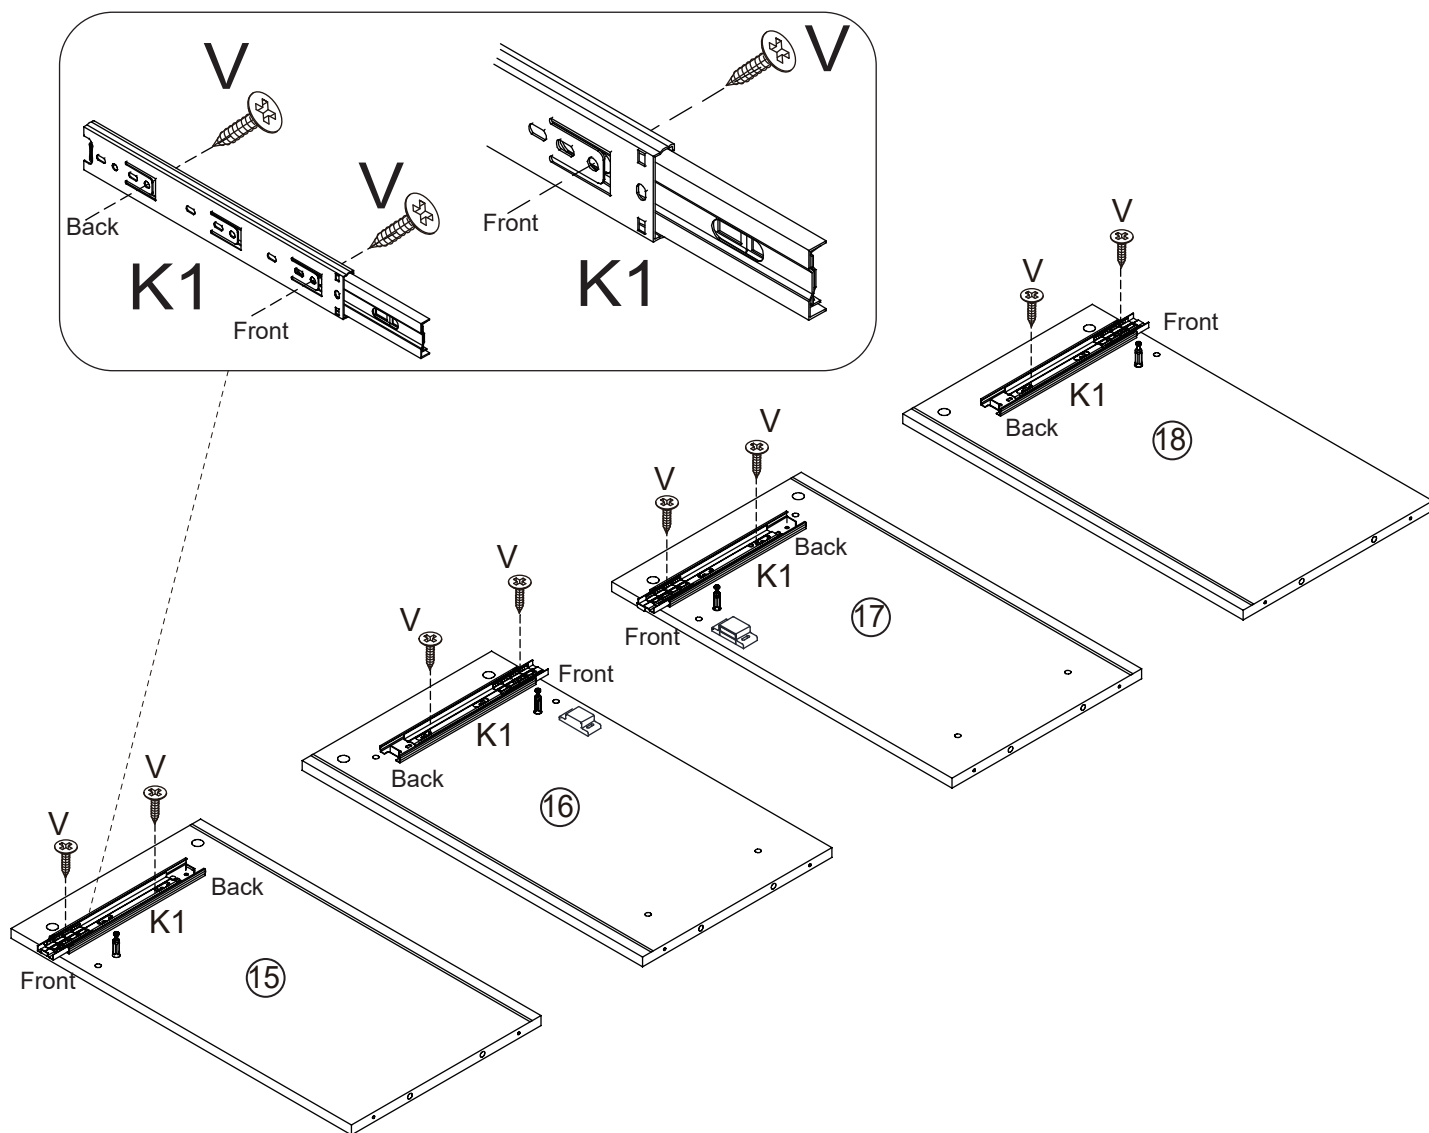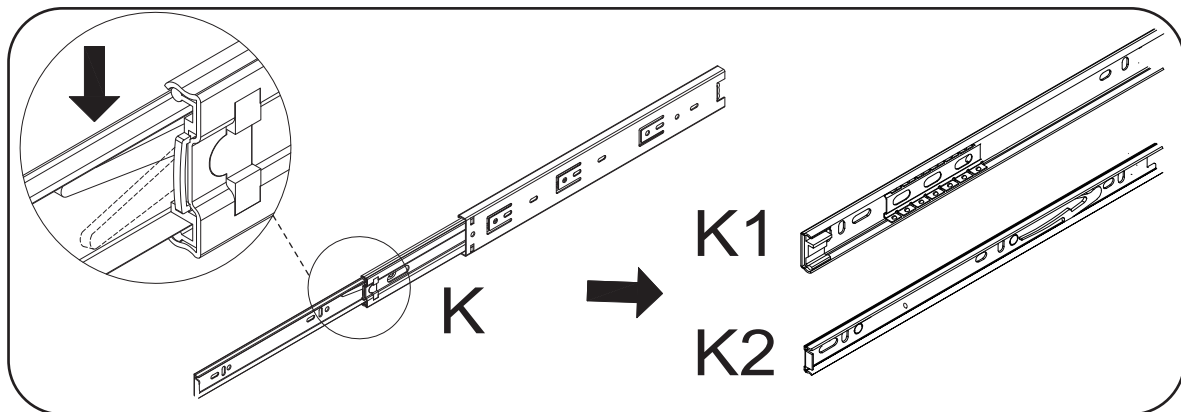


Step 14

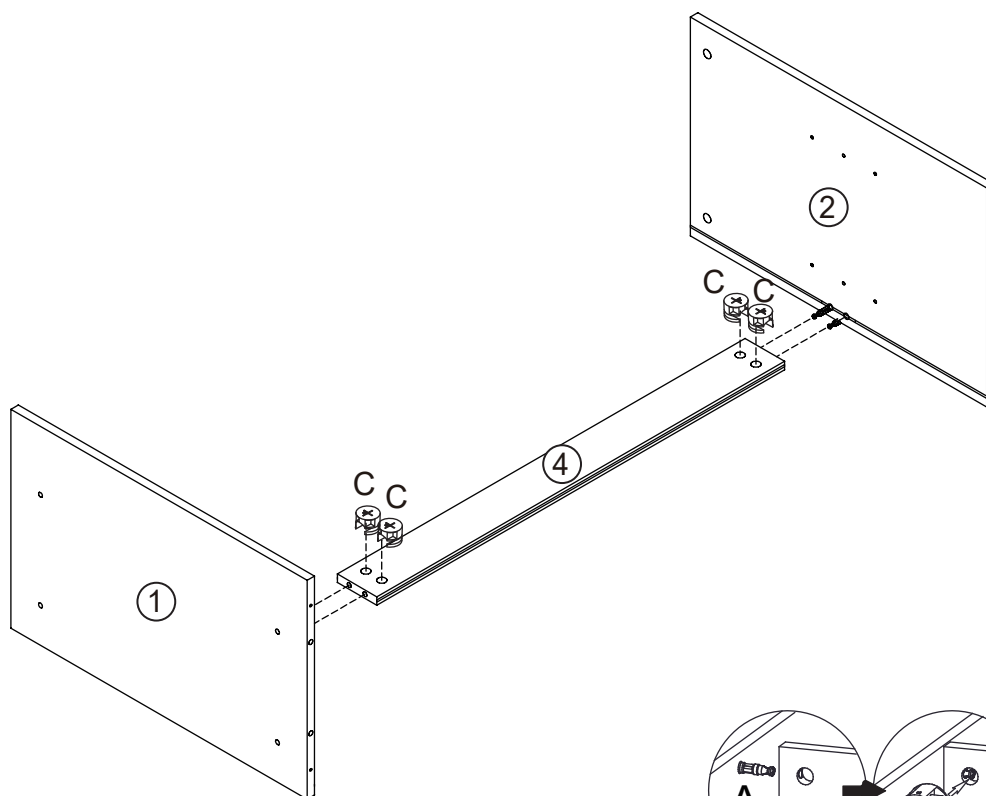


C*4

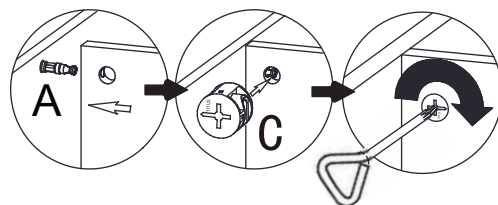


Step 15

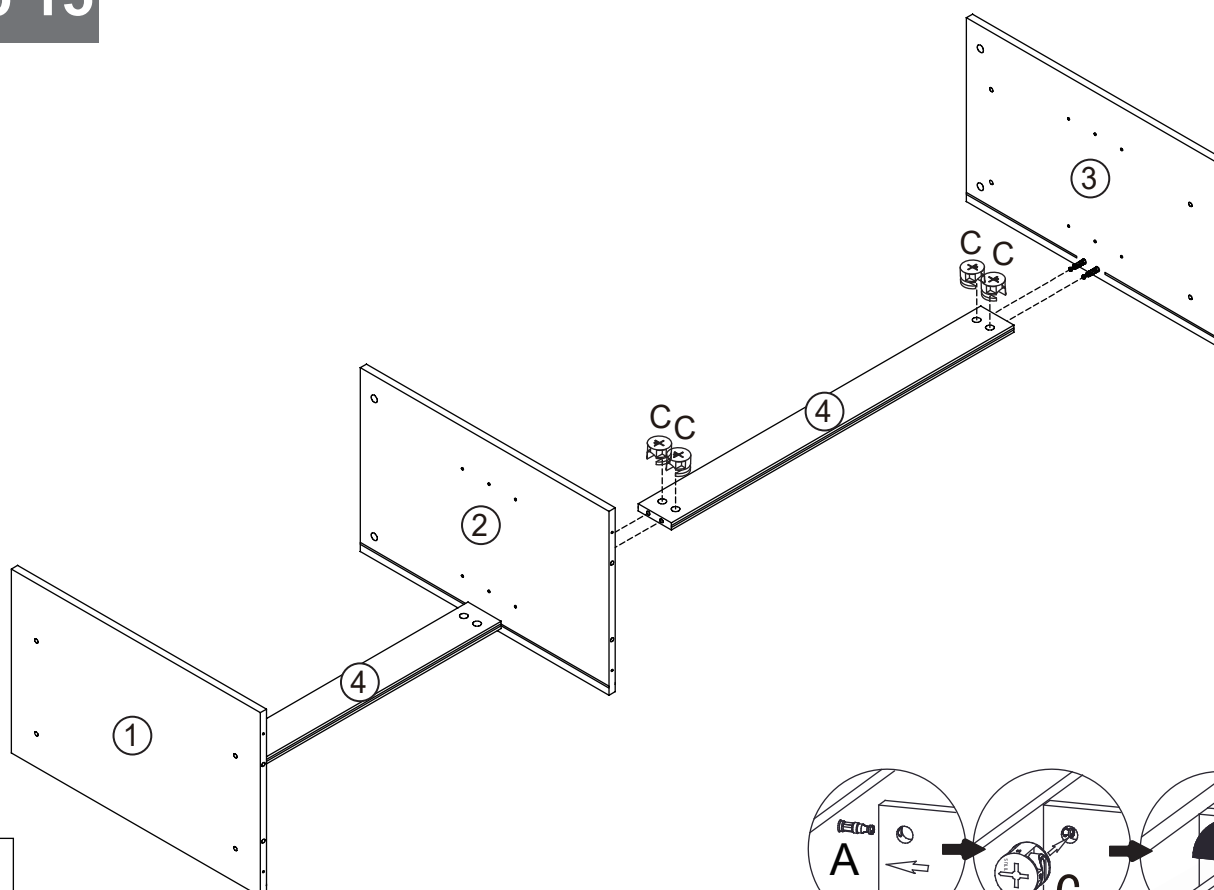


C*4

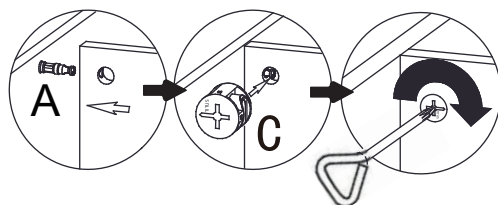

Step 16

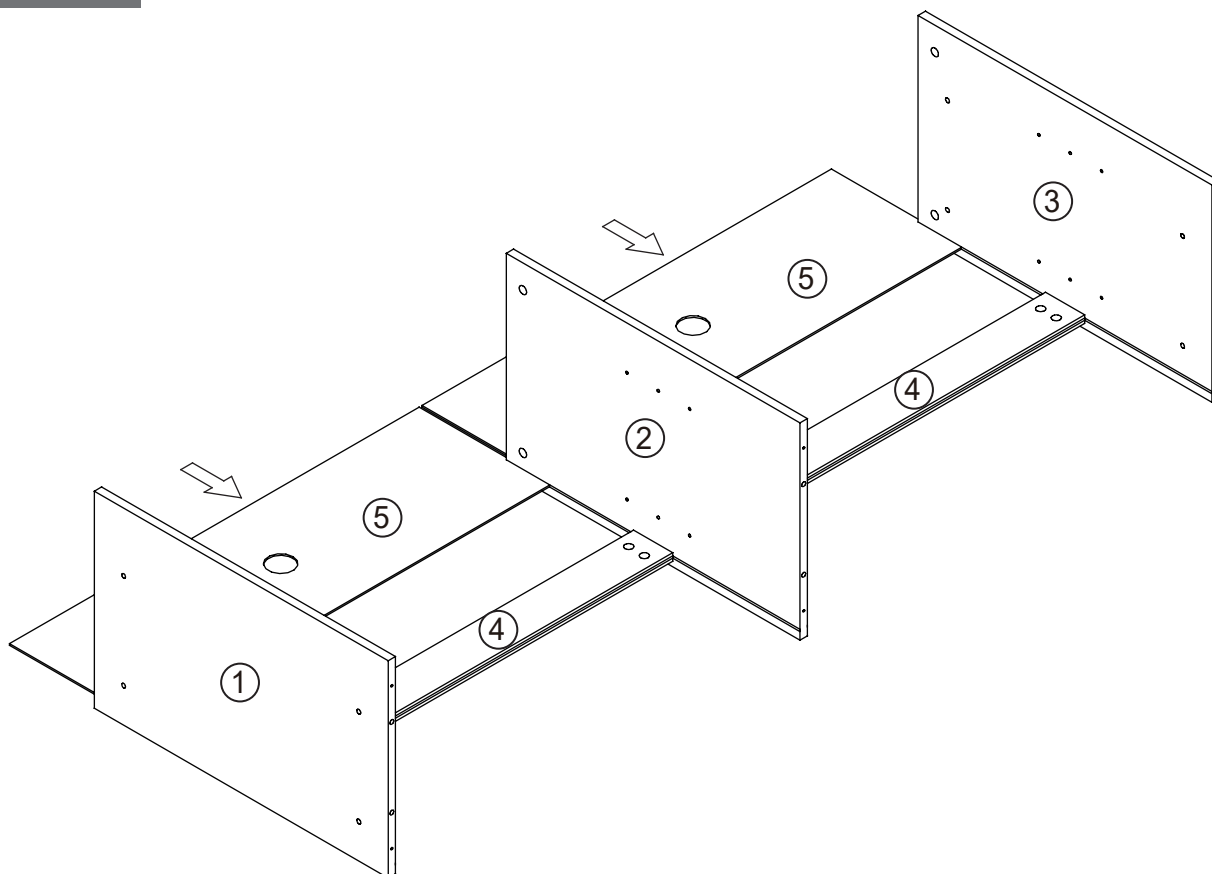



Step 17

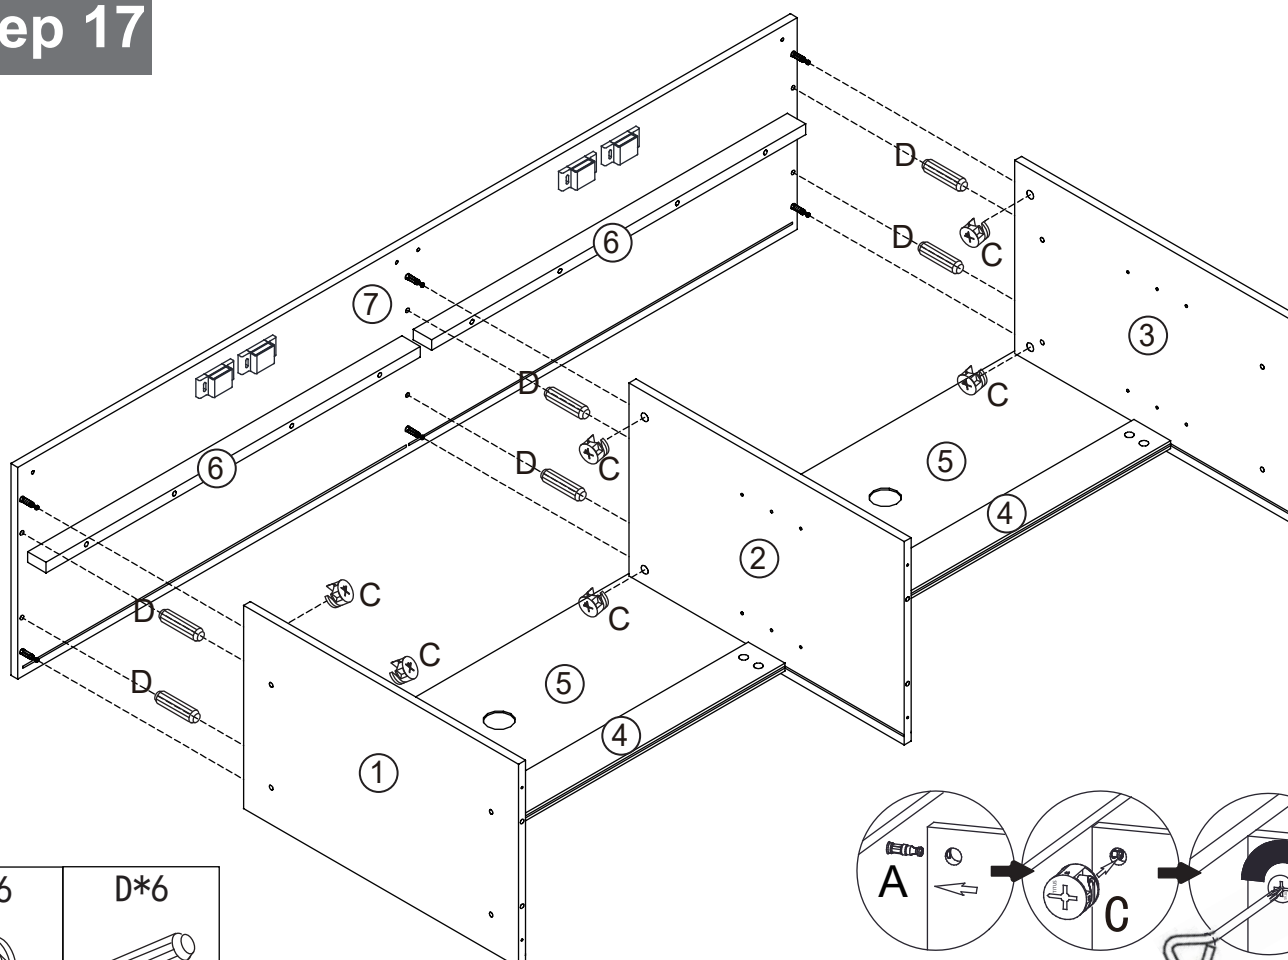


C*6




D*6

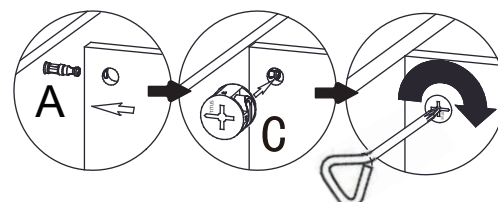


Step 18

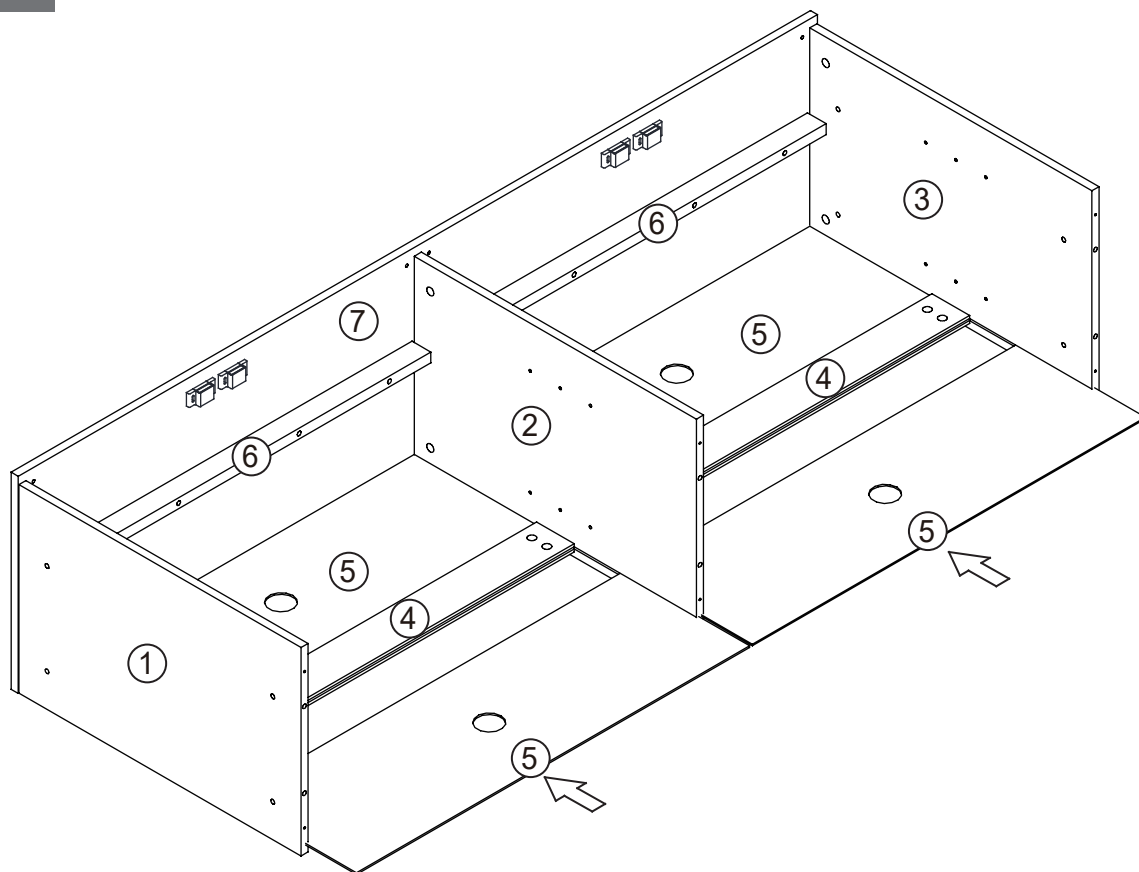

Step 19

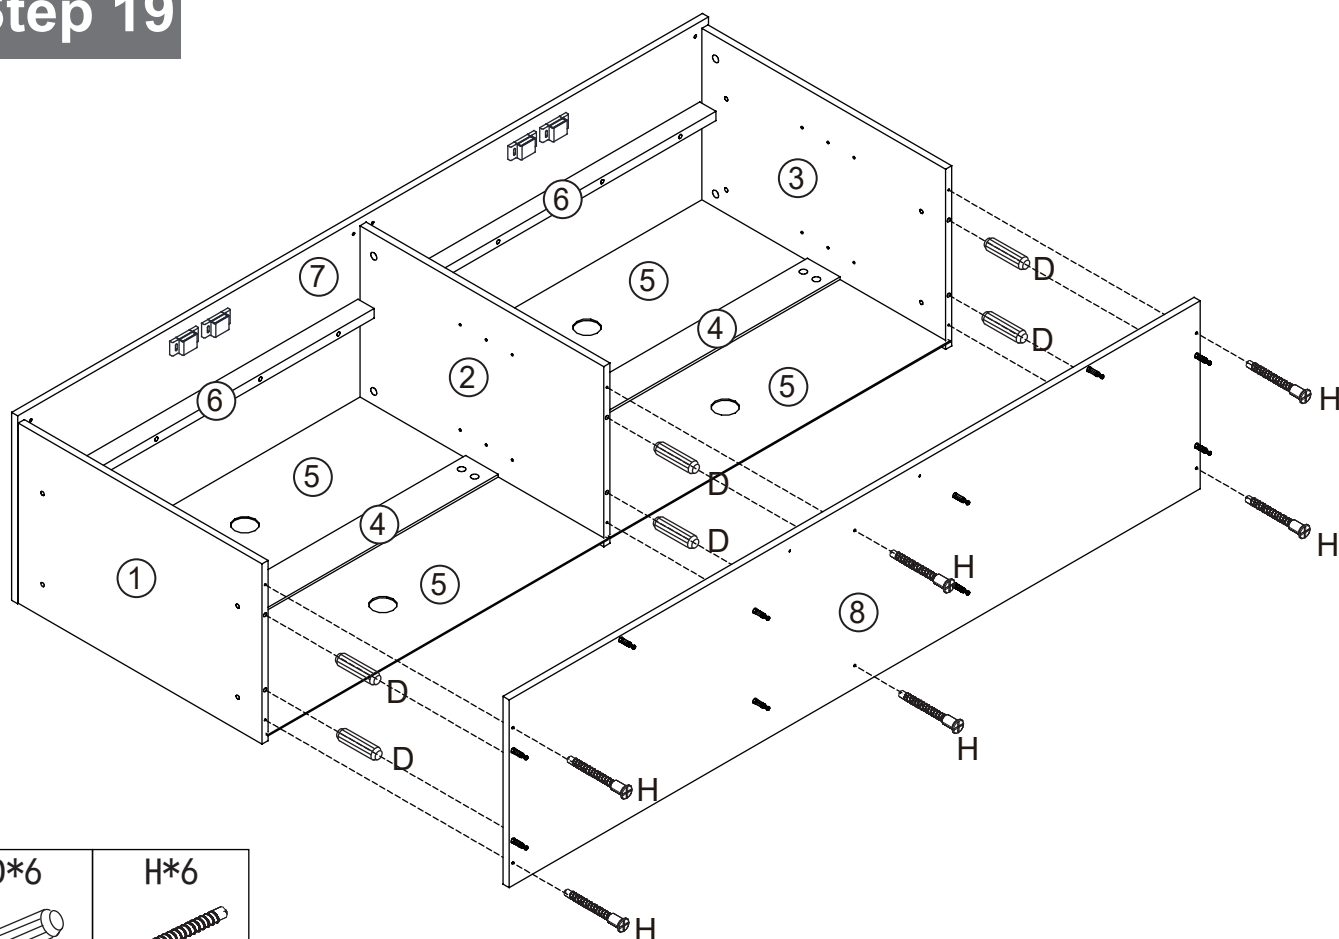



Step 20

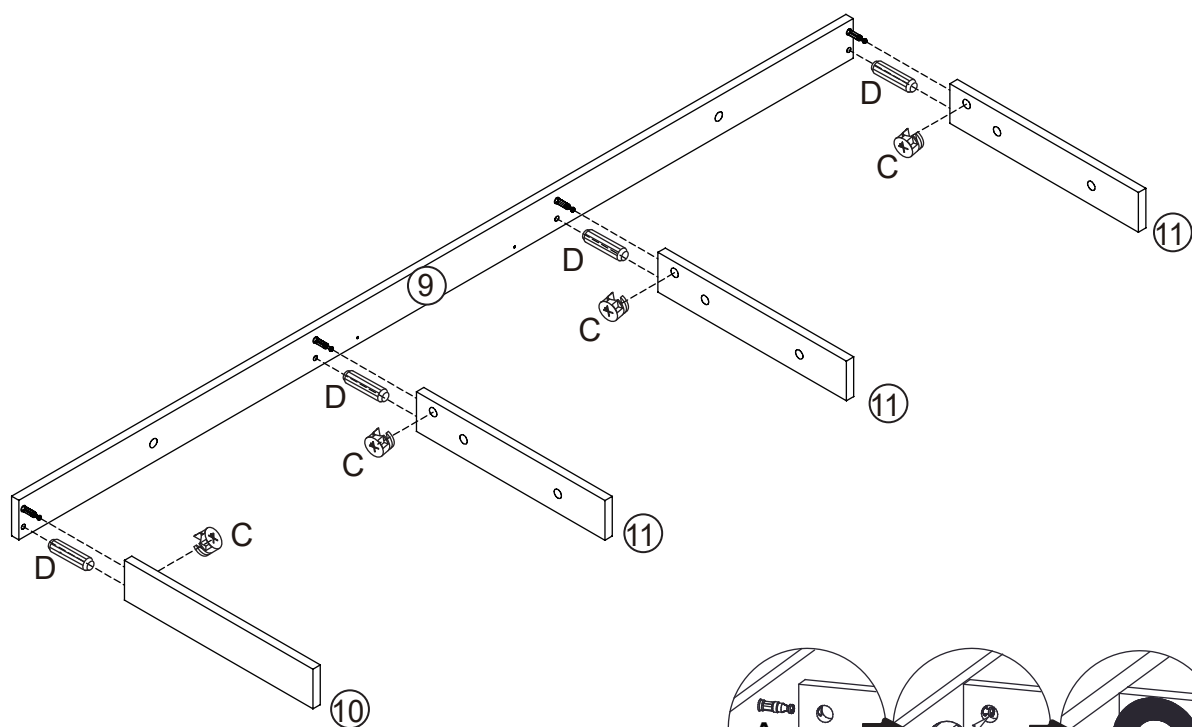


C*4




D*4

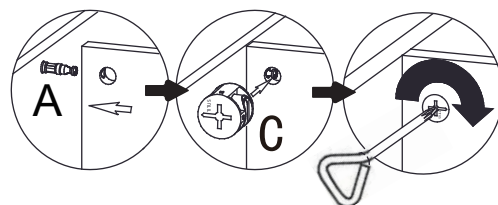


Step 21

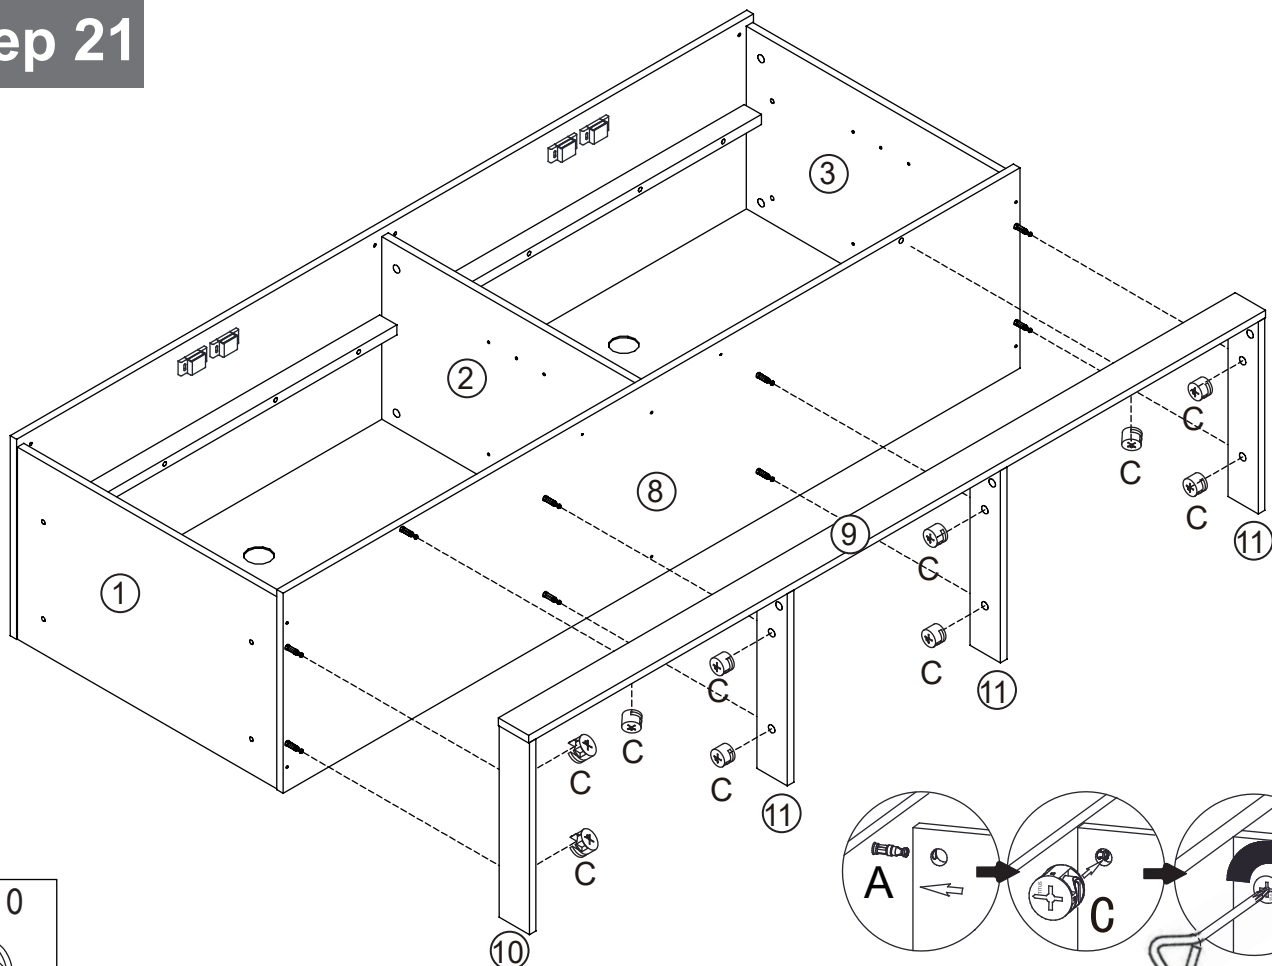

C*10

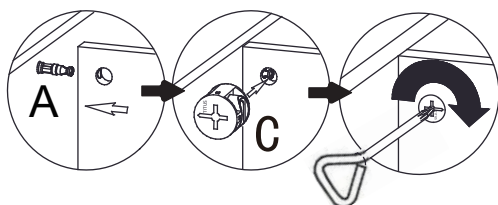

Step 22

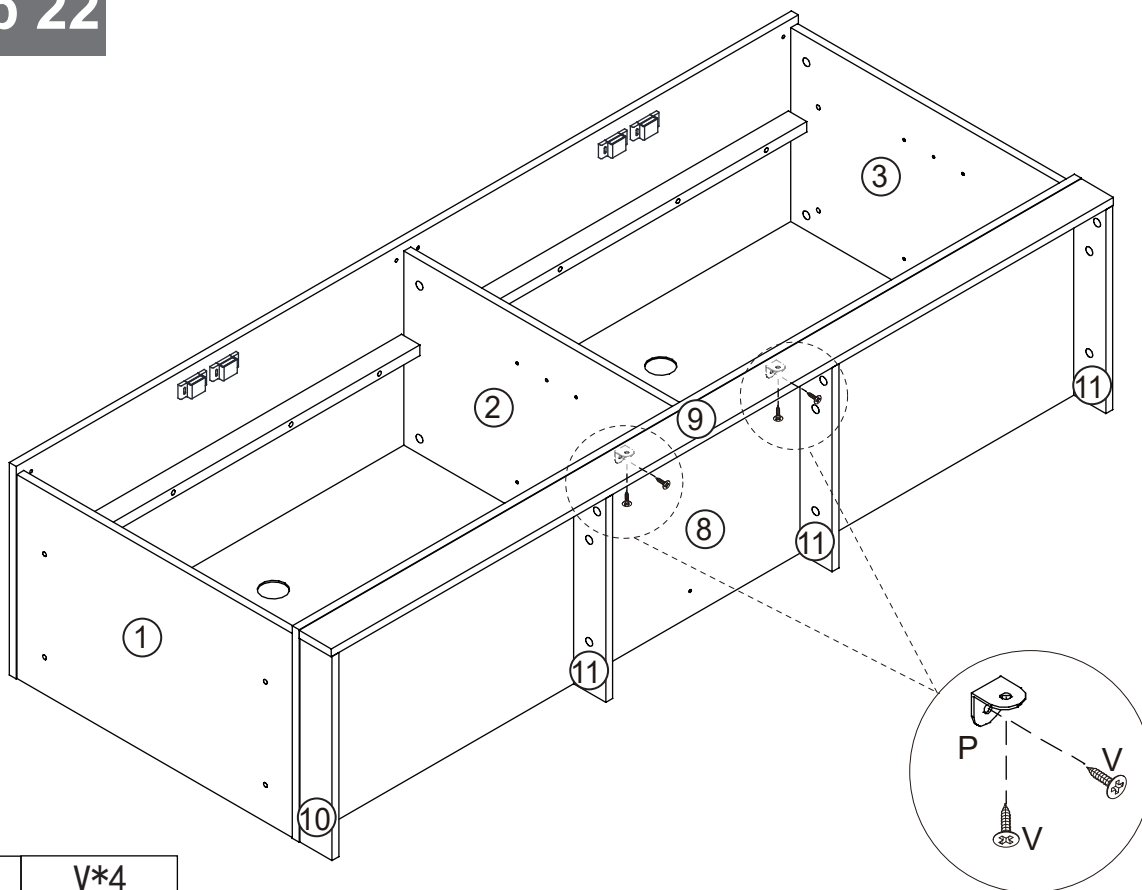


P*2



V*4




Step 23

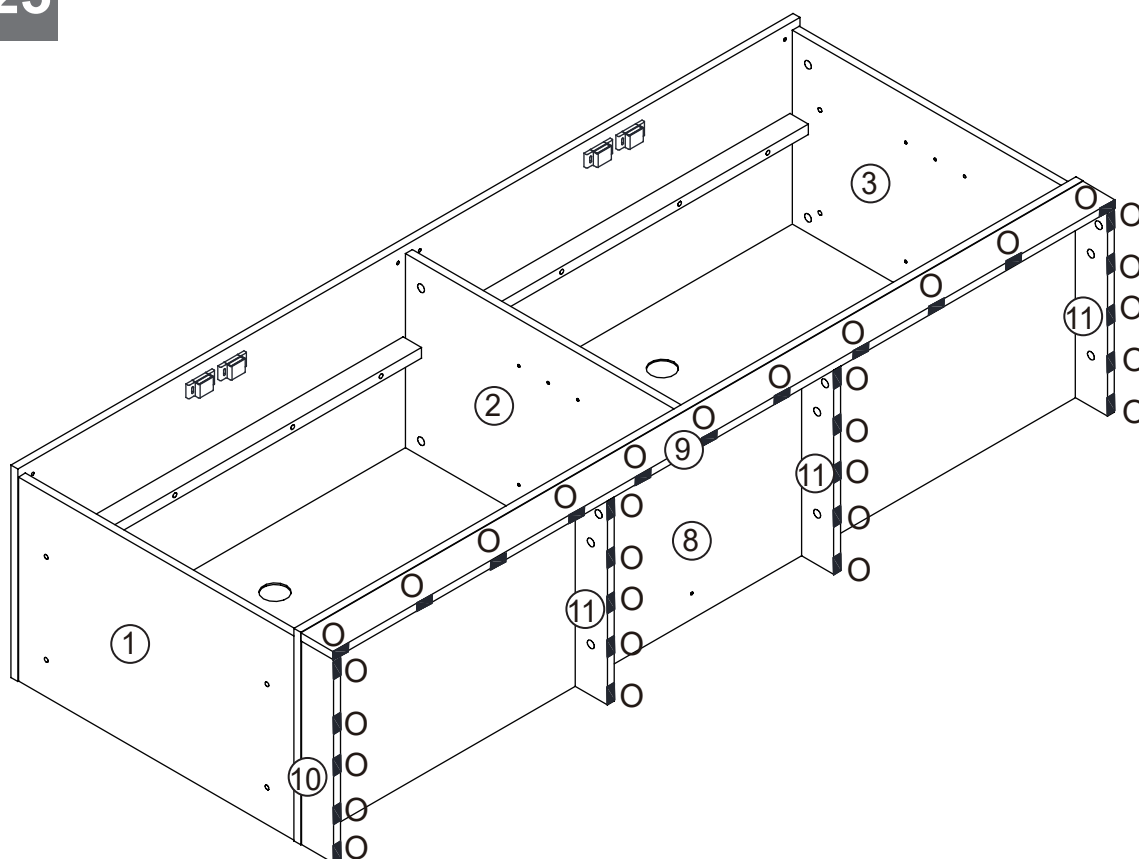

0*31





Step 24 Step X2

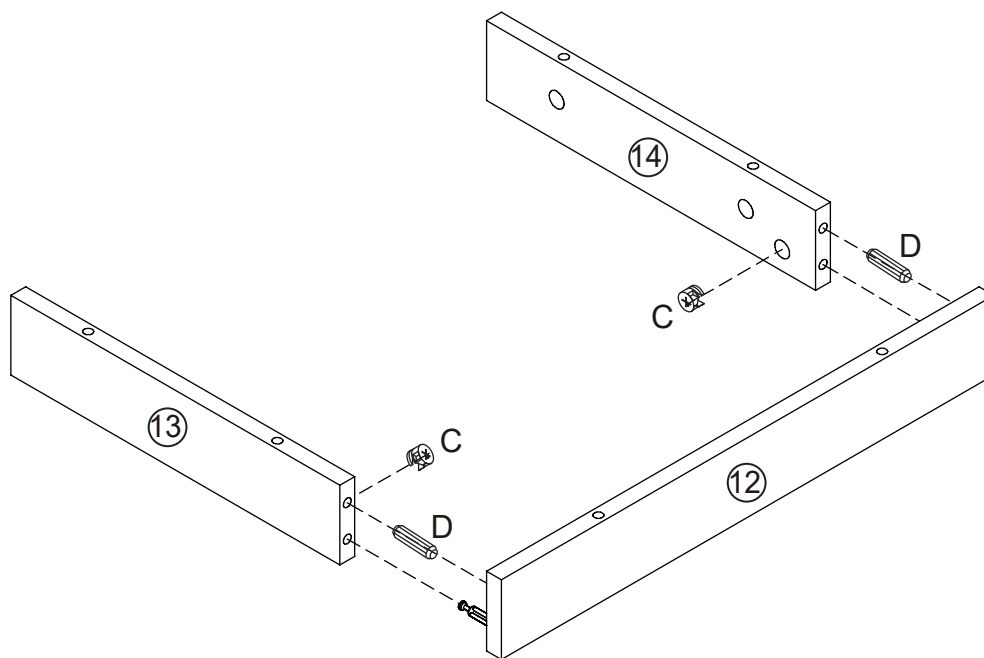


C*4




D*4

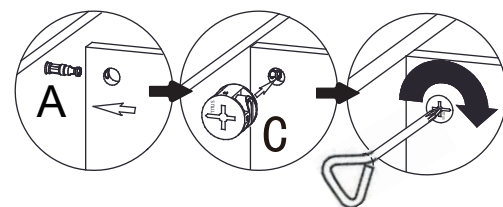


Step 25 Step X2

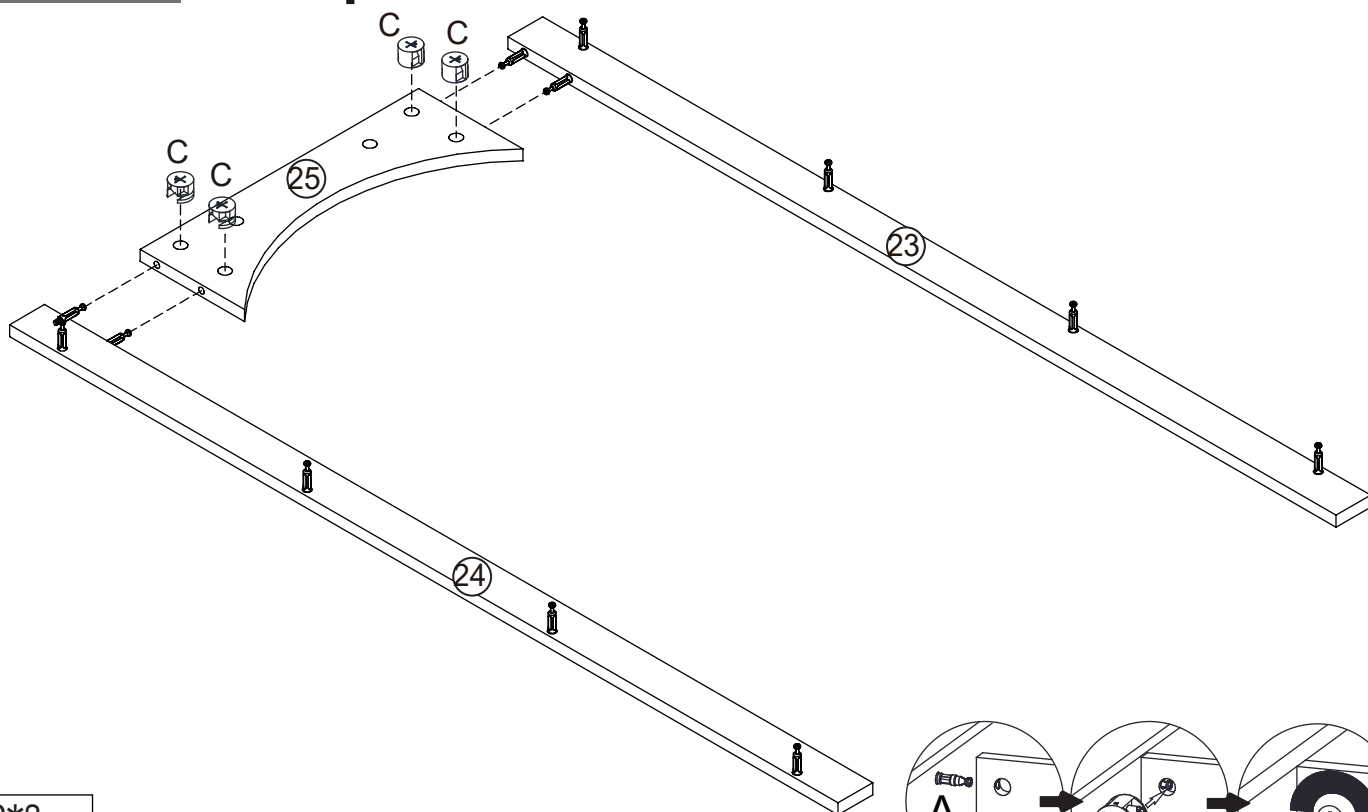


C*8

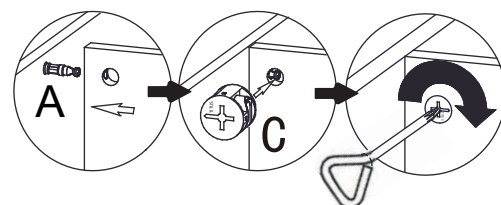


Step 26 Step X2

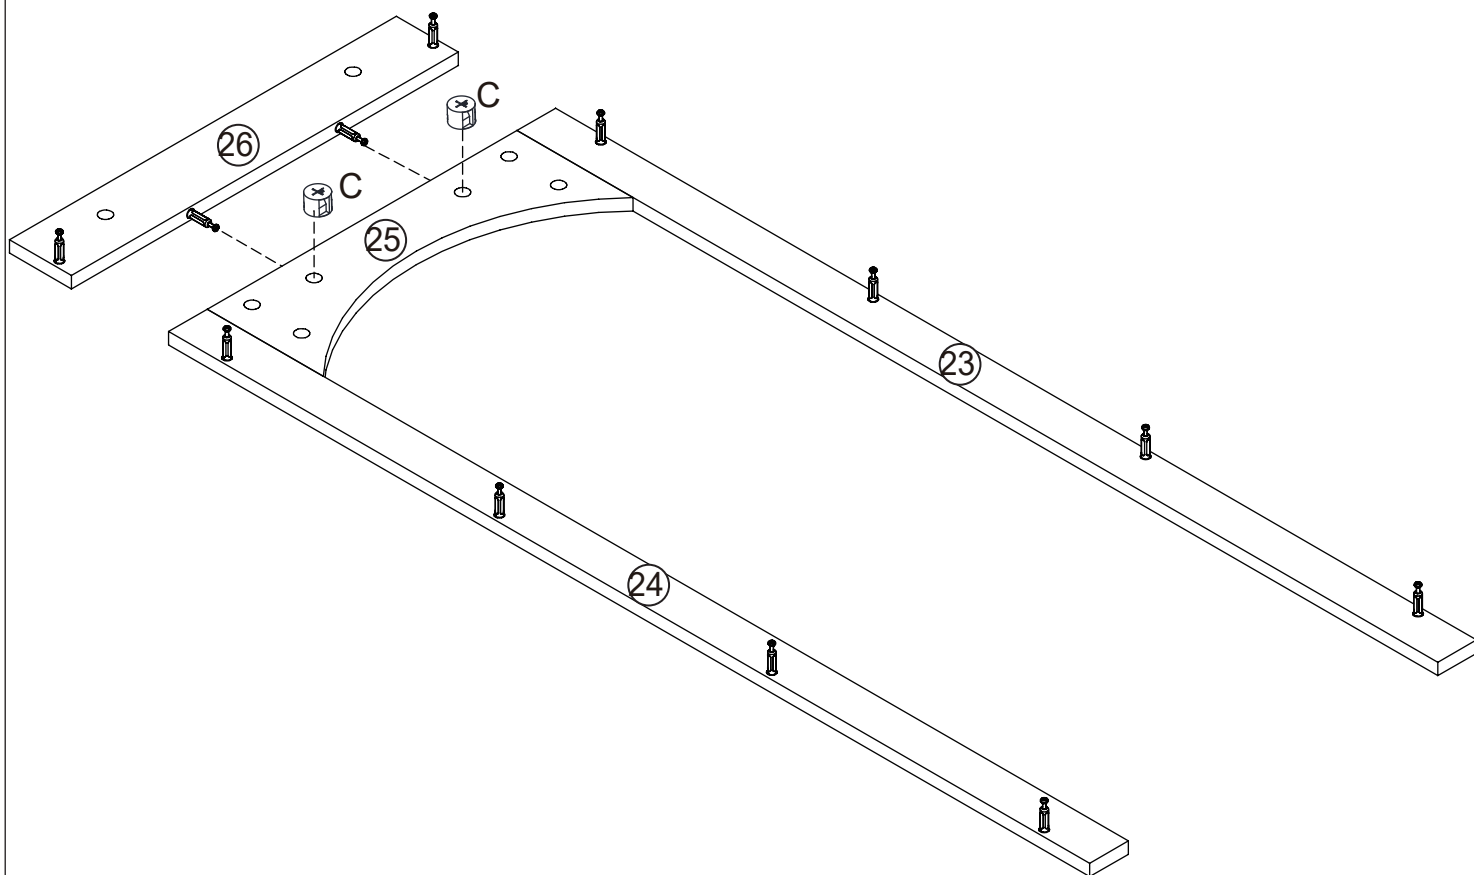

C*4

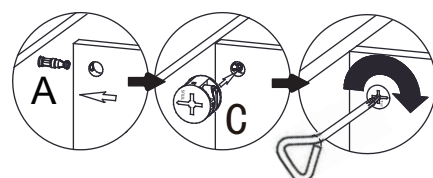



Step 27

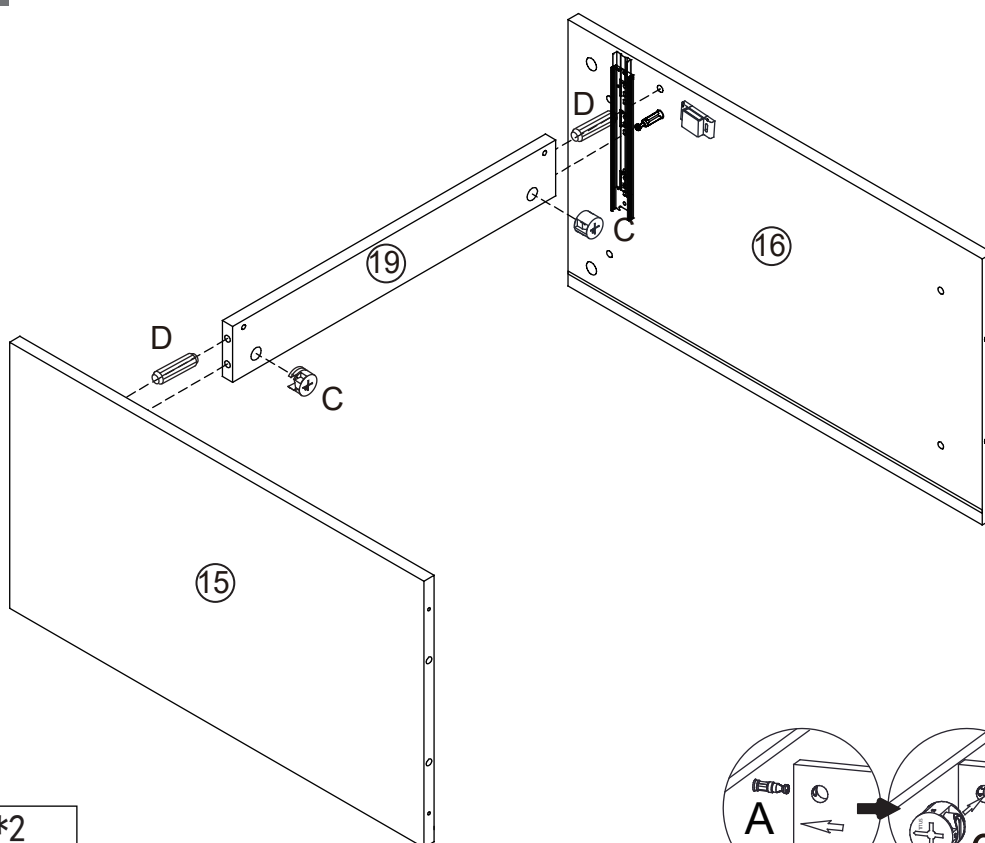


C*2




D*2

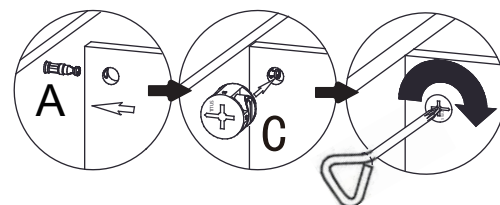

Step 28

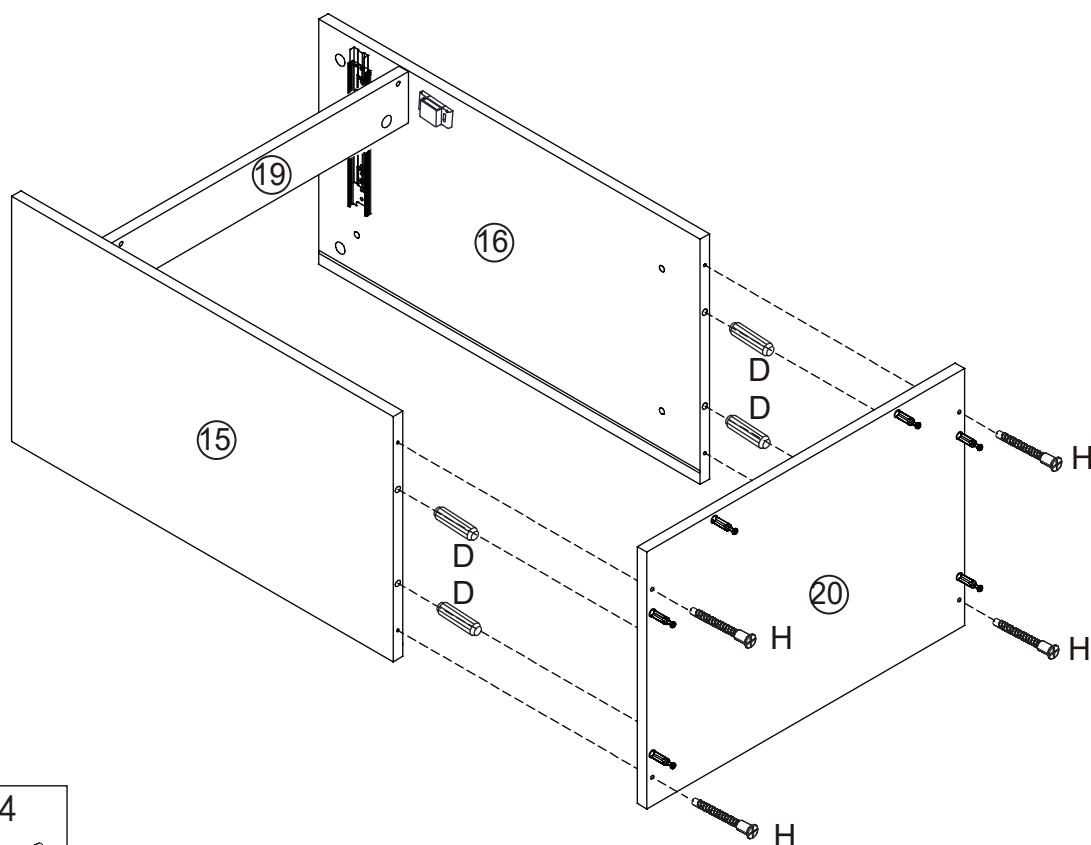


D*4



H*4




Step 29

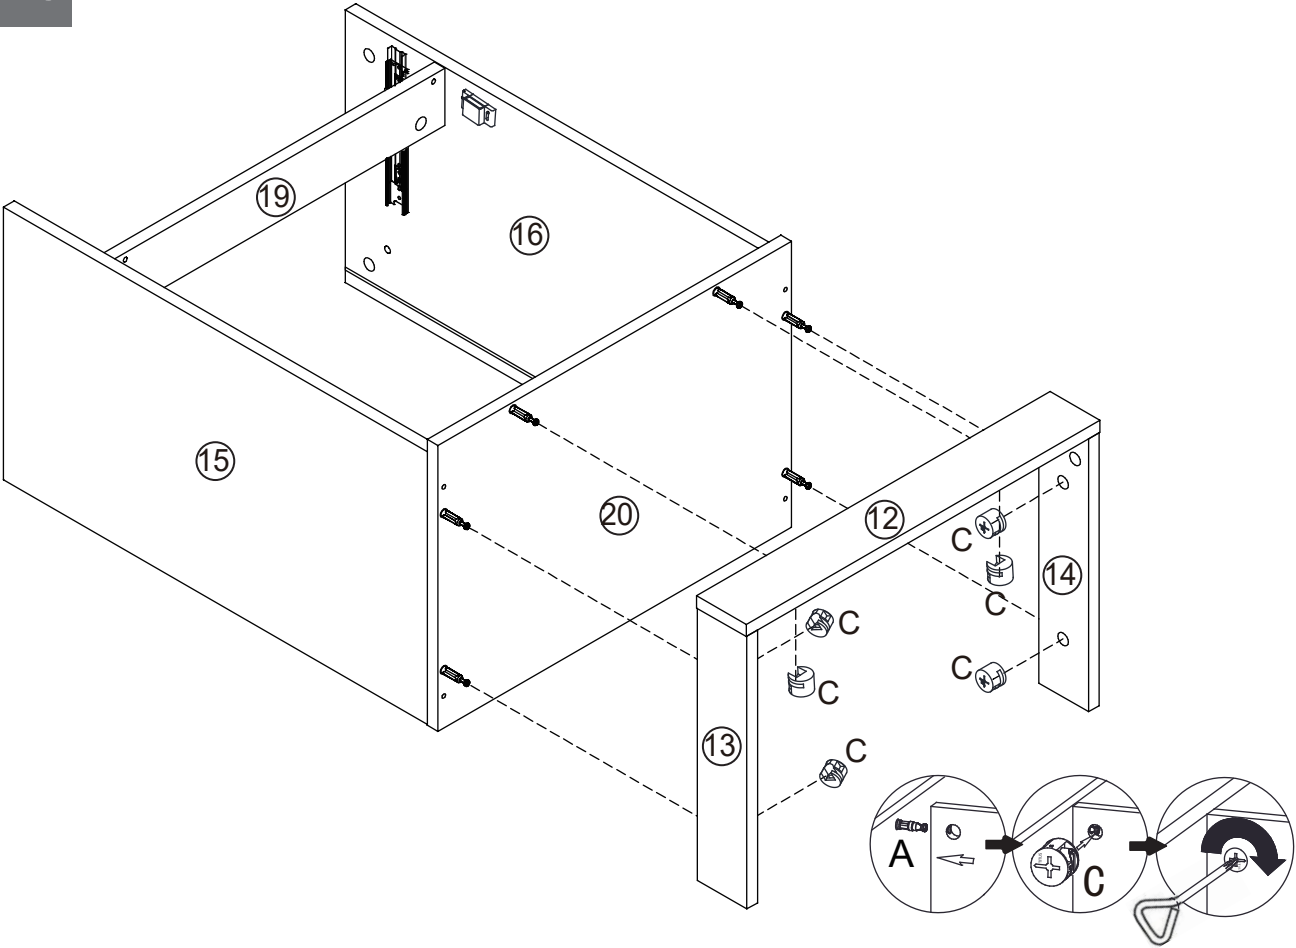

C*6




Step 30

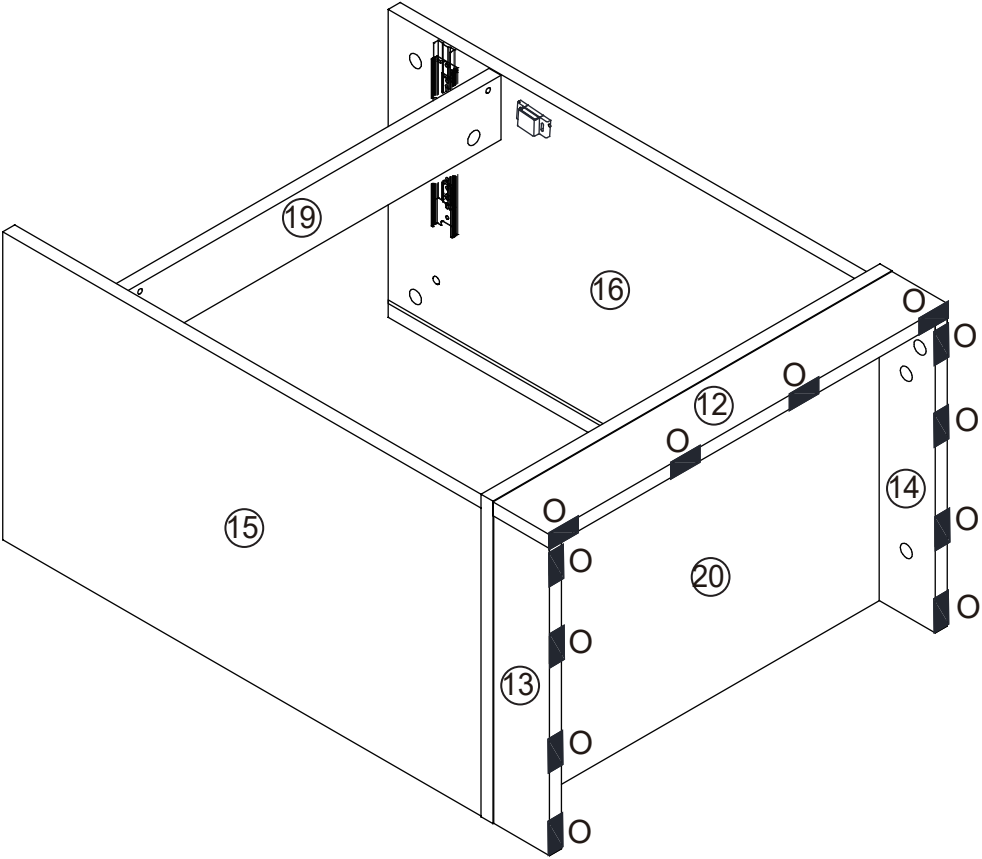


0*12



Step 31

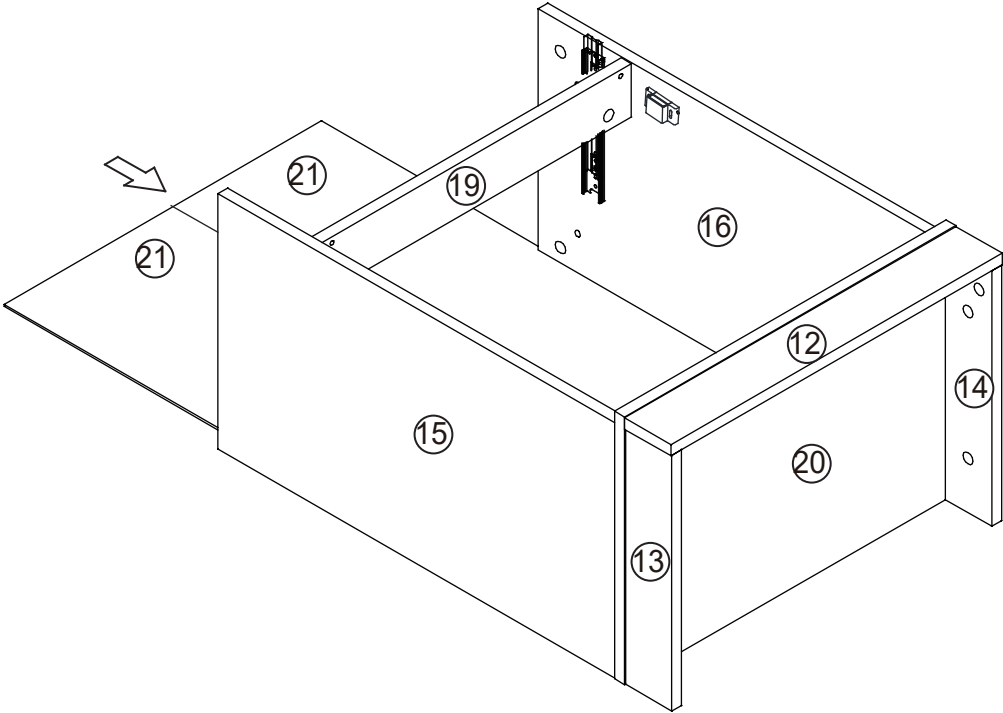



Step 32

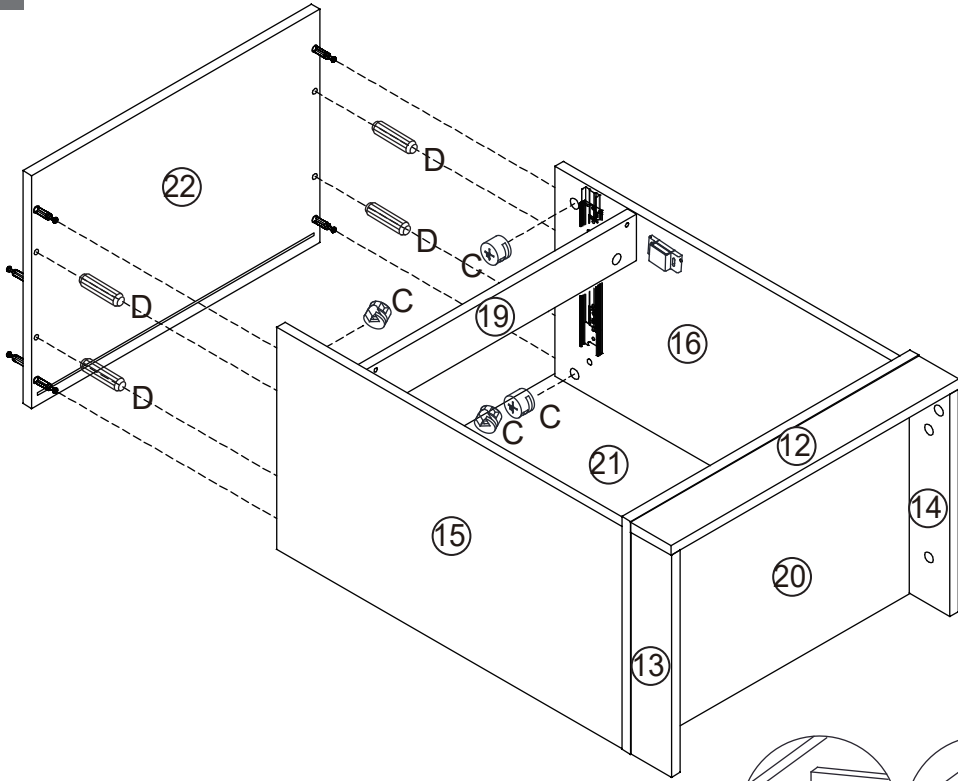


C*4




D*4

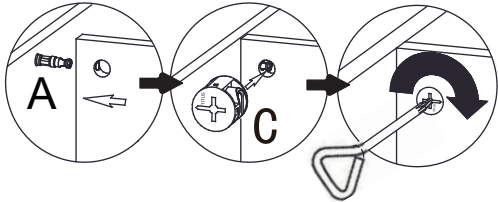


Step 33

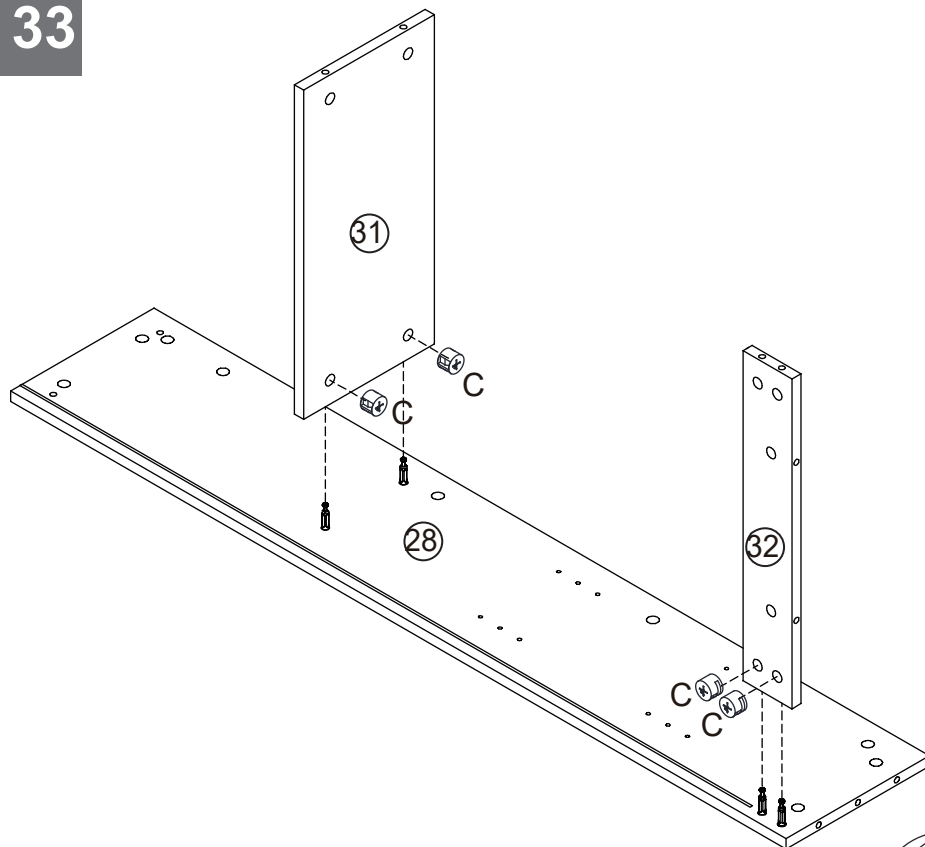


C*4

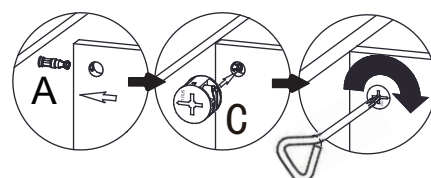


Step 34

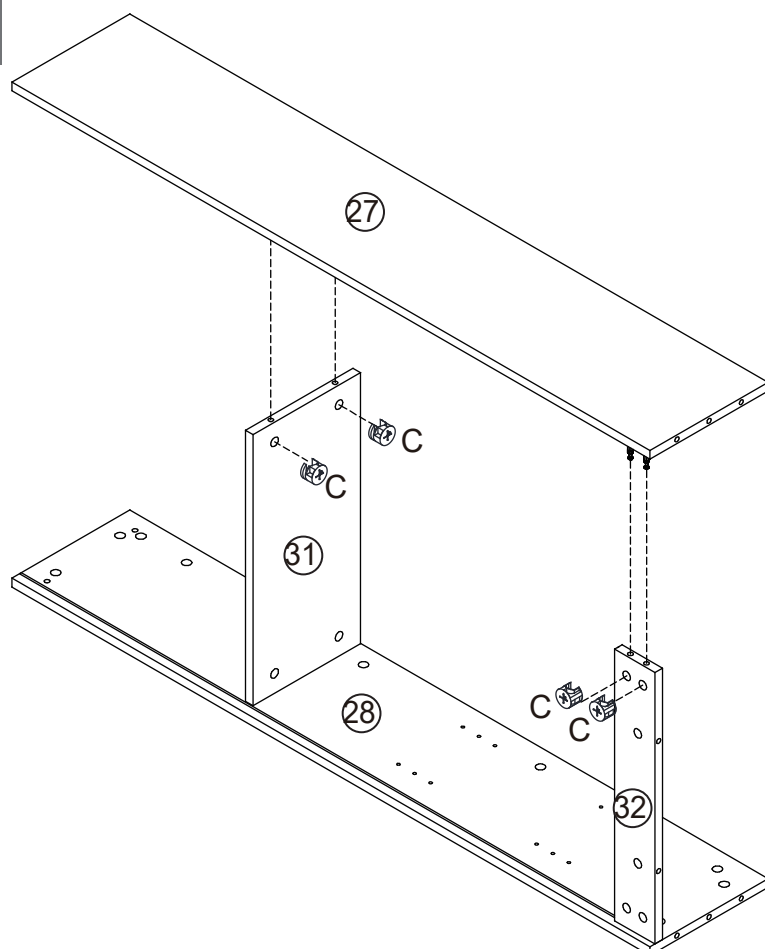


C*4

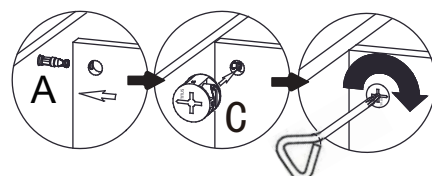


Step 35

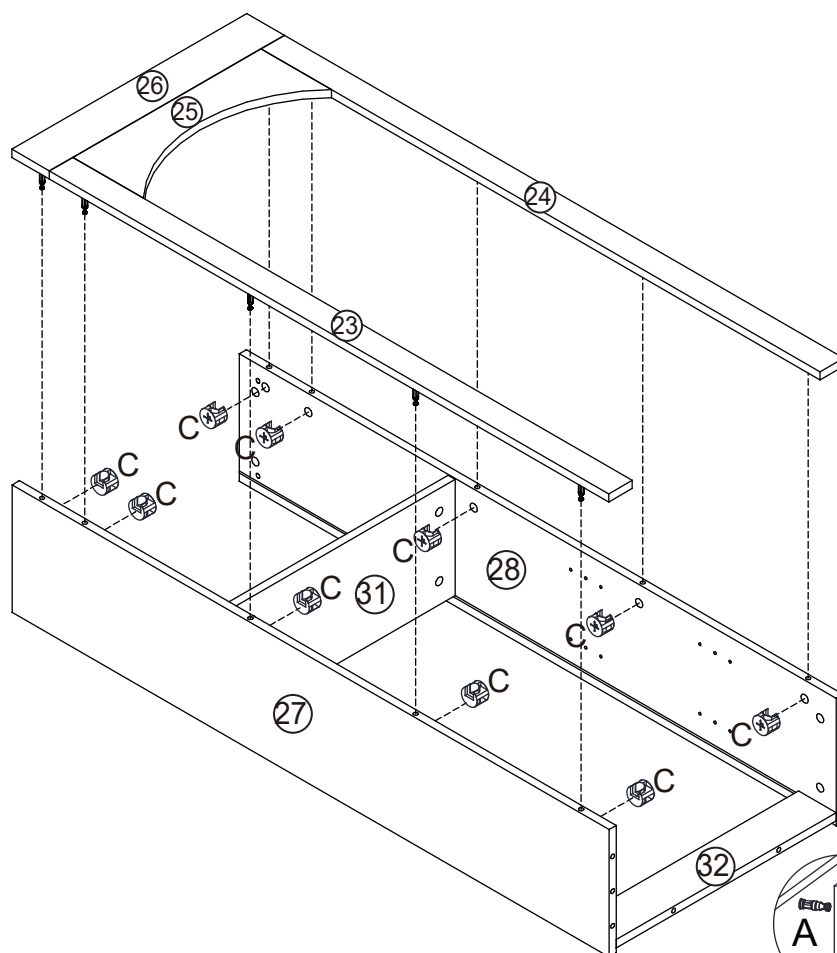



C*10

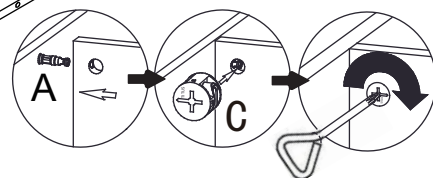

Step 36

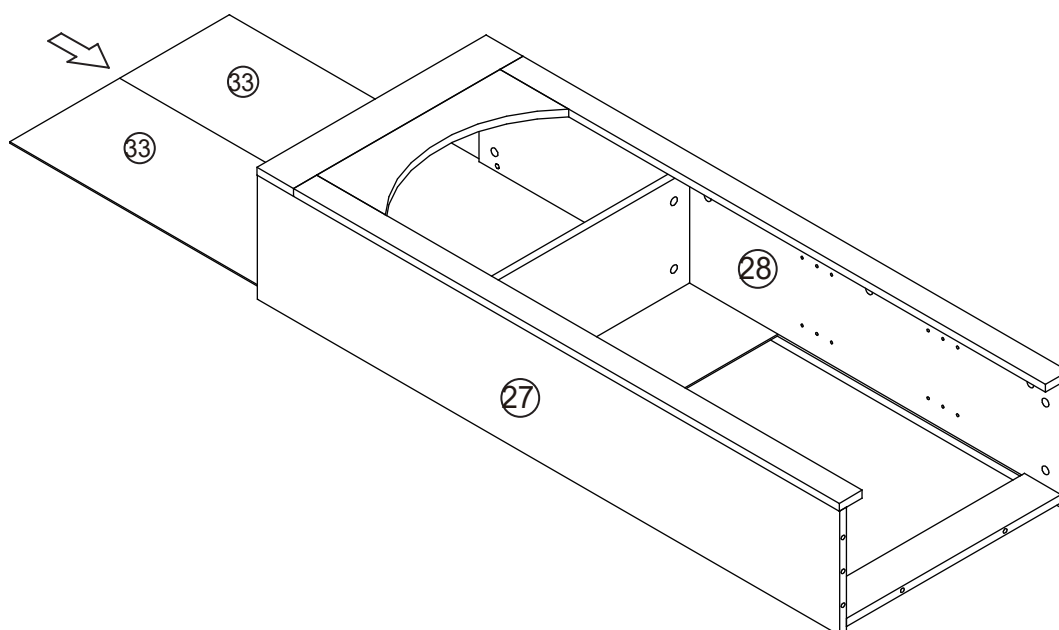


Step 37

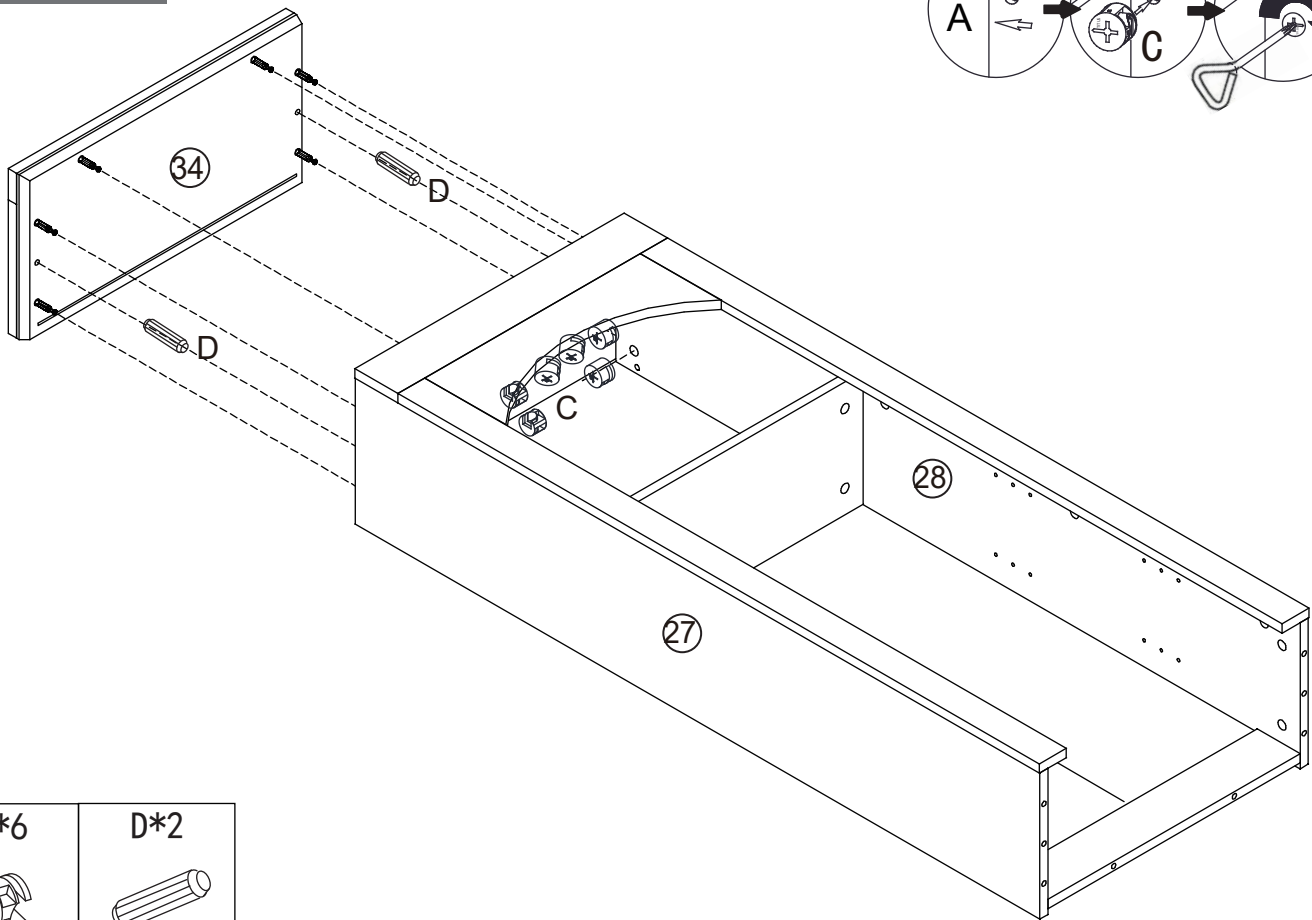
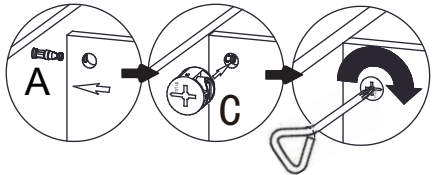


C*6

D*2




Step 38

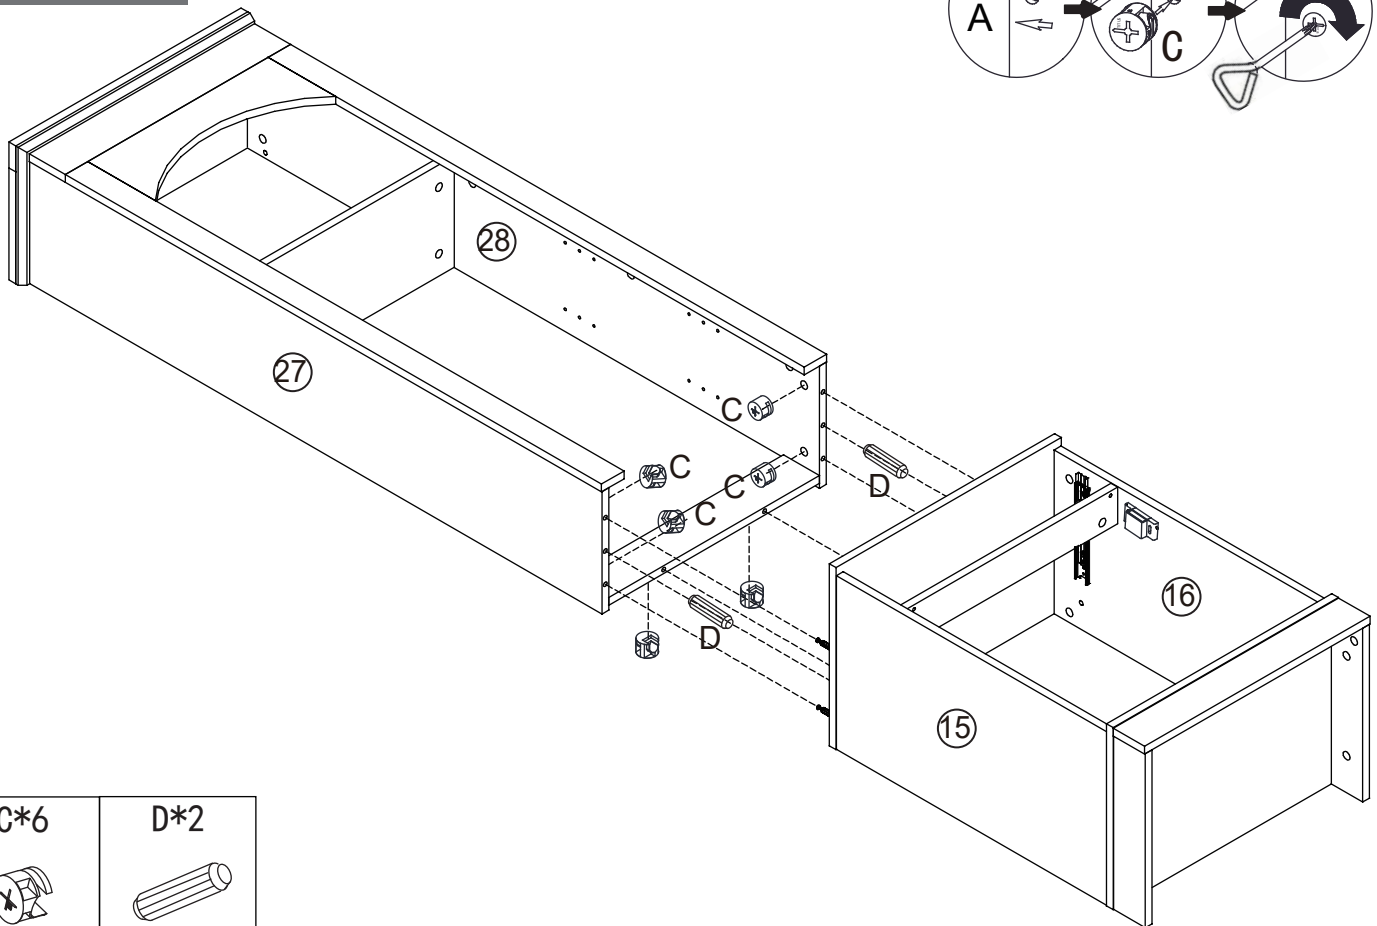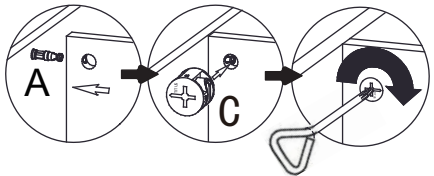


C*6

D*2





Step 39

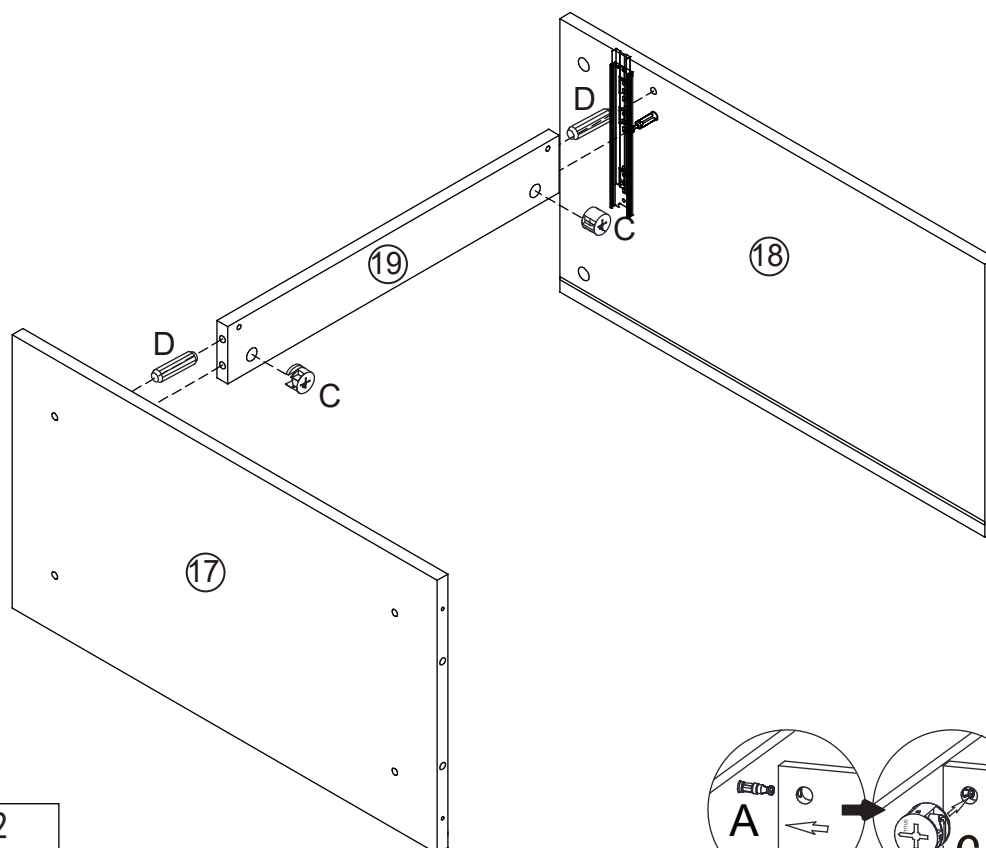


C*2




D*2

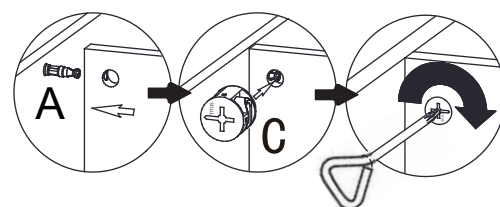

Step 40

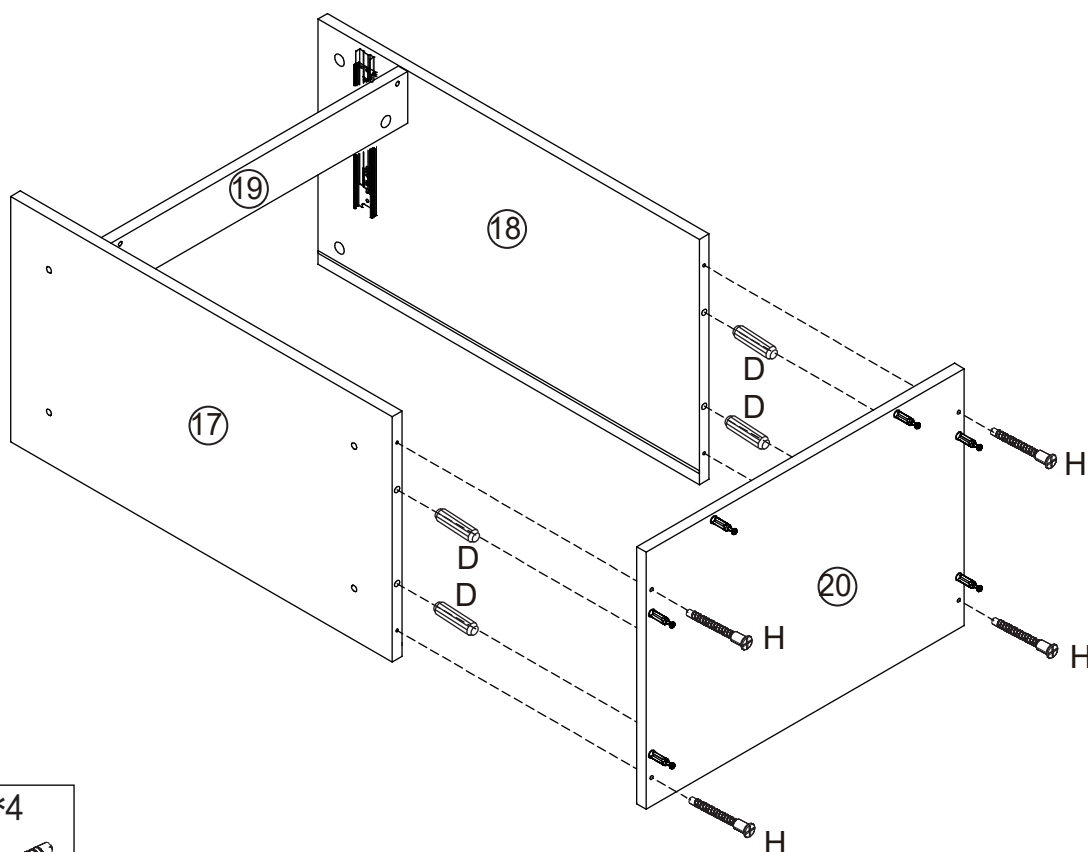


D*4




H*4




Step 41

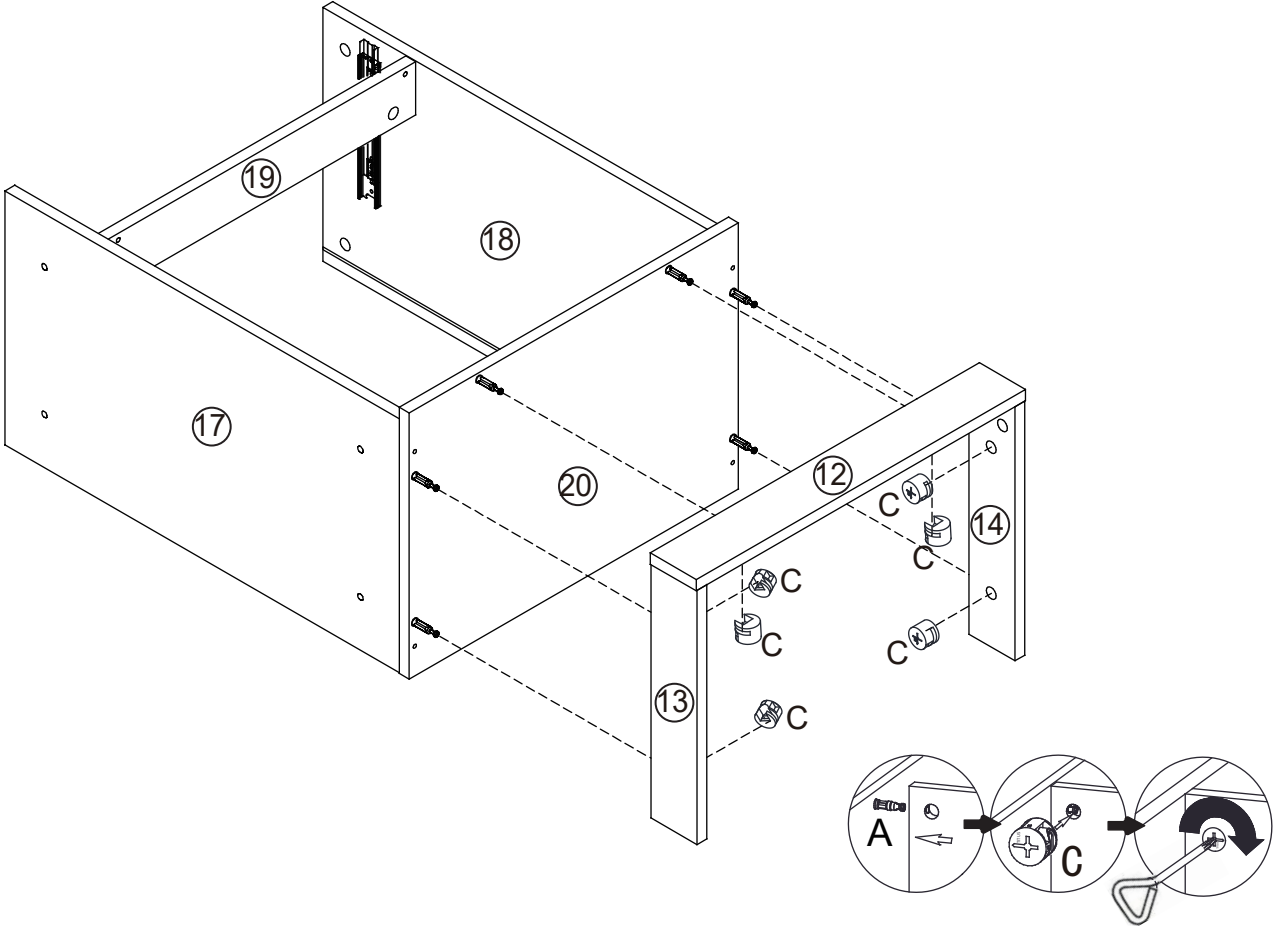


Step 42

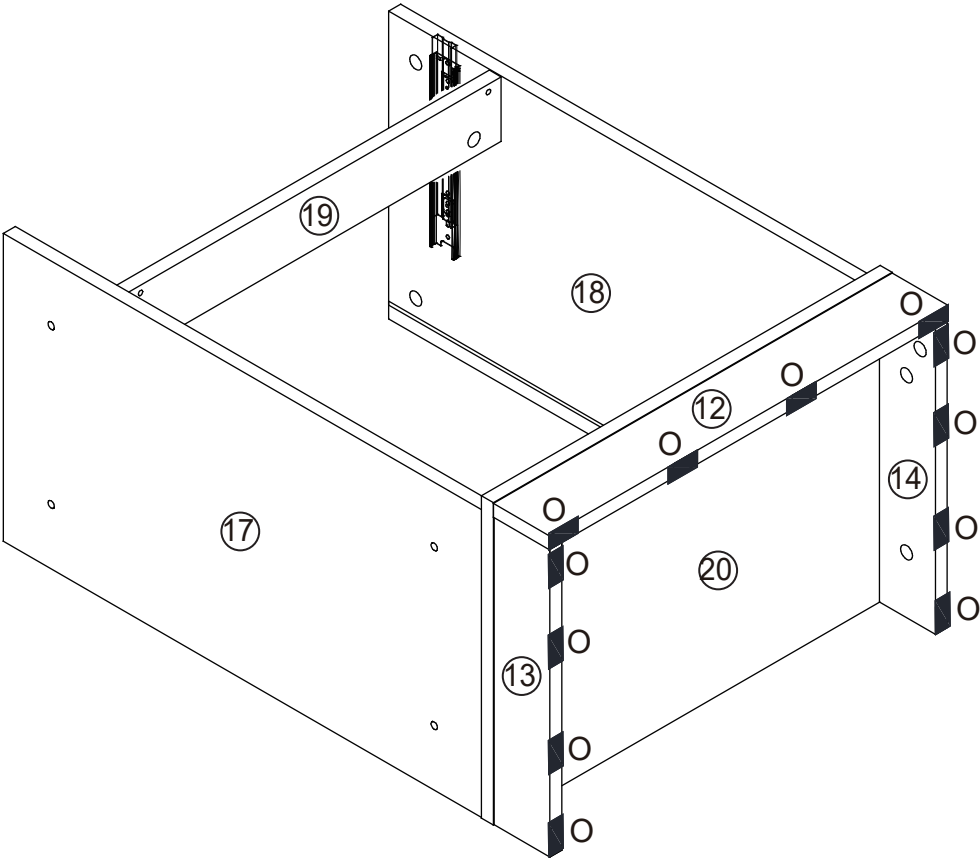


Step 43

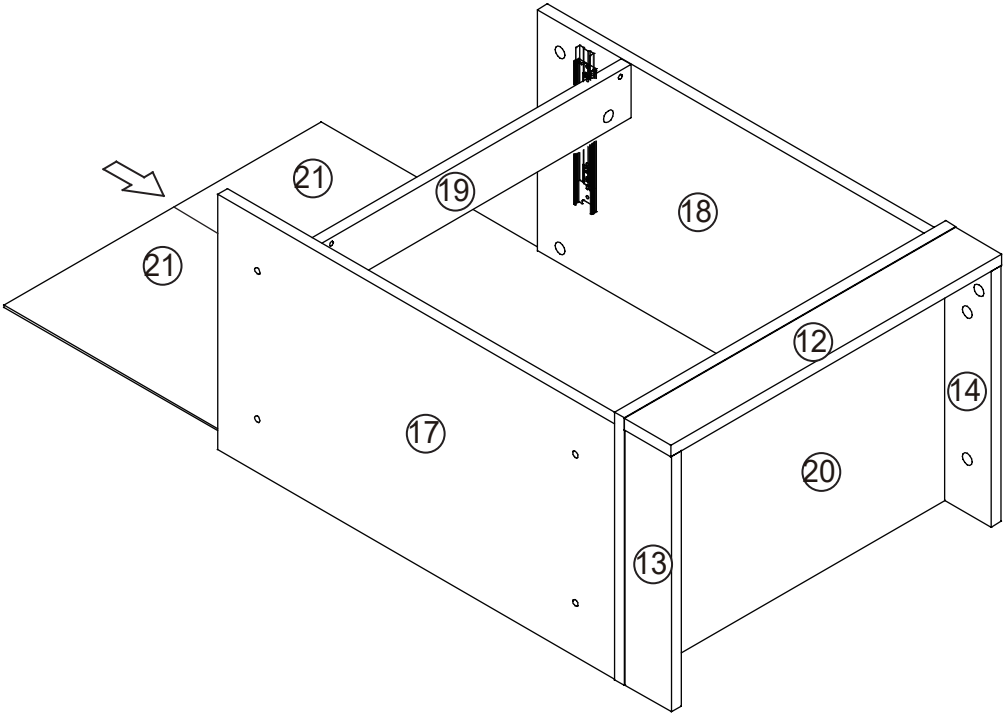


Step 44

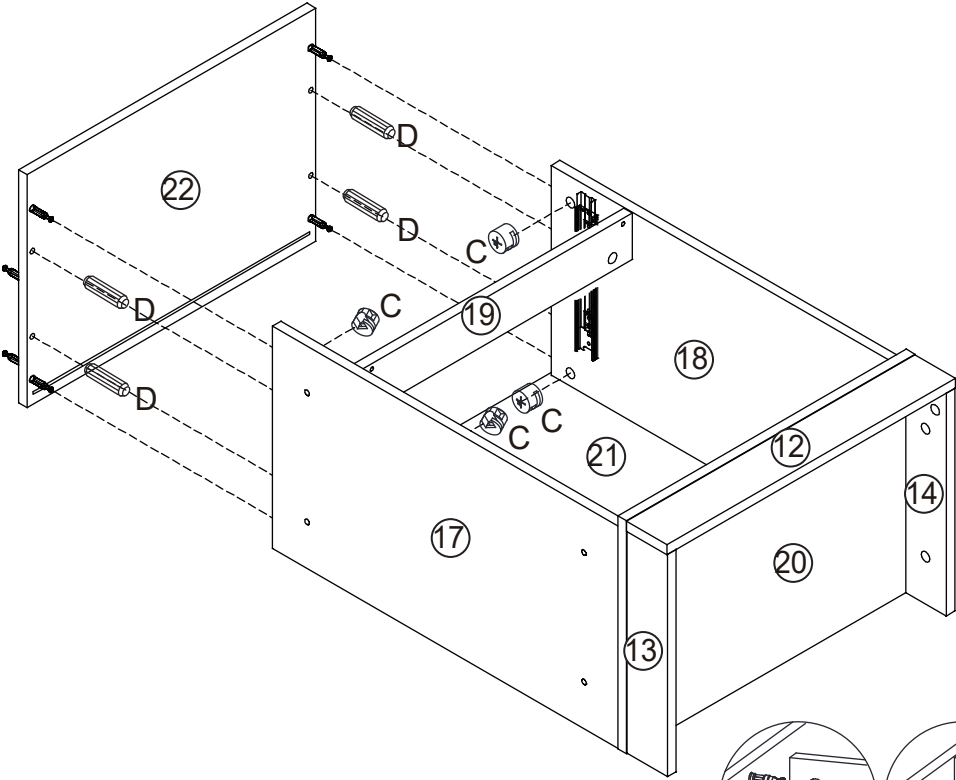


C*4	D*4
	

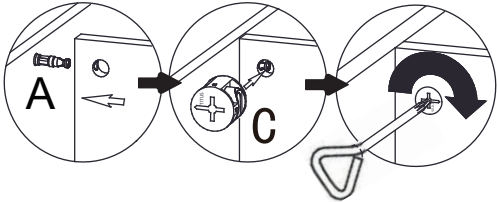


Step 45

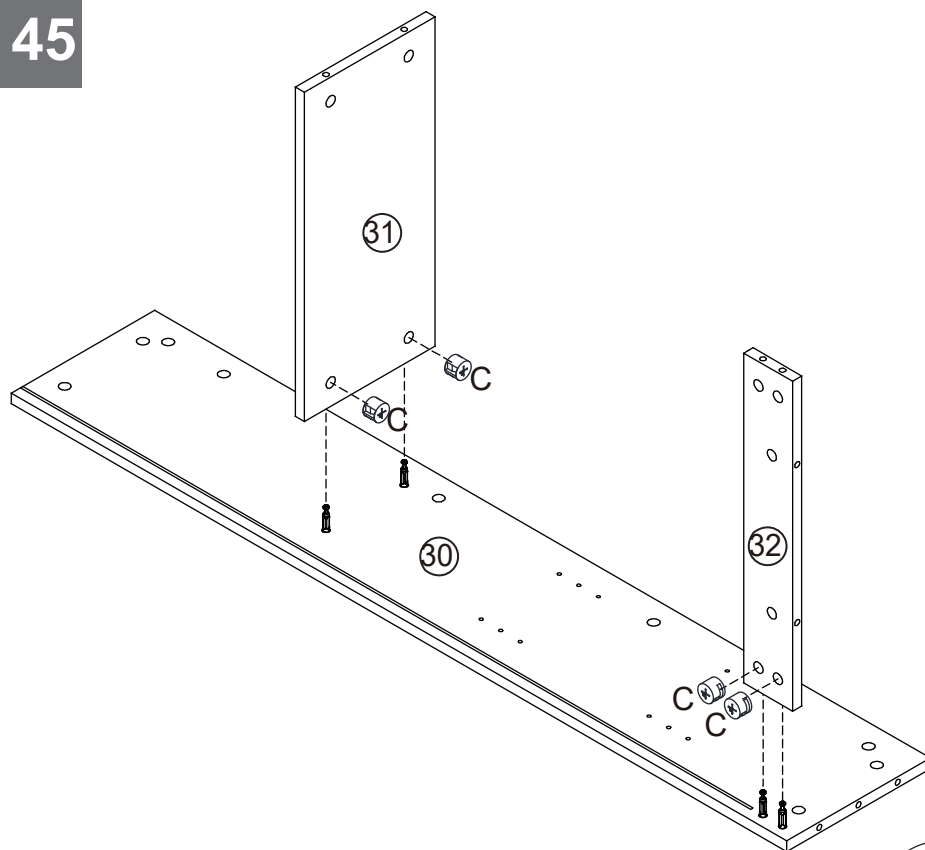


C*4

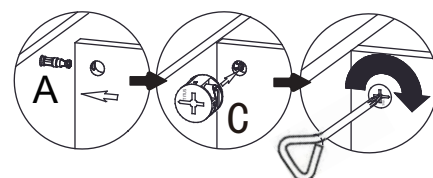


Step 46

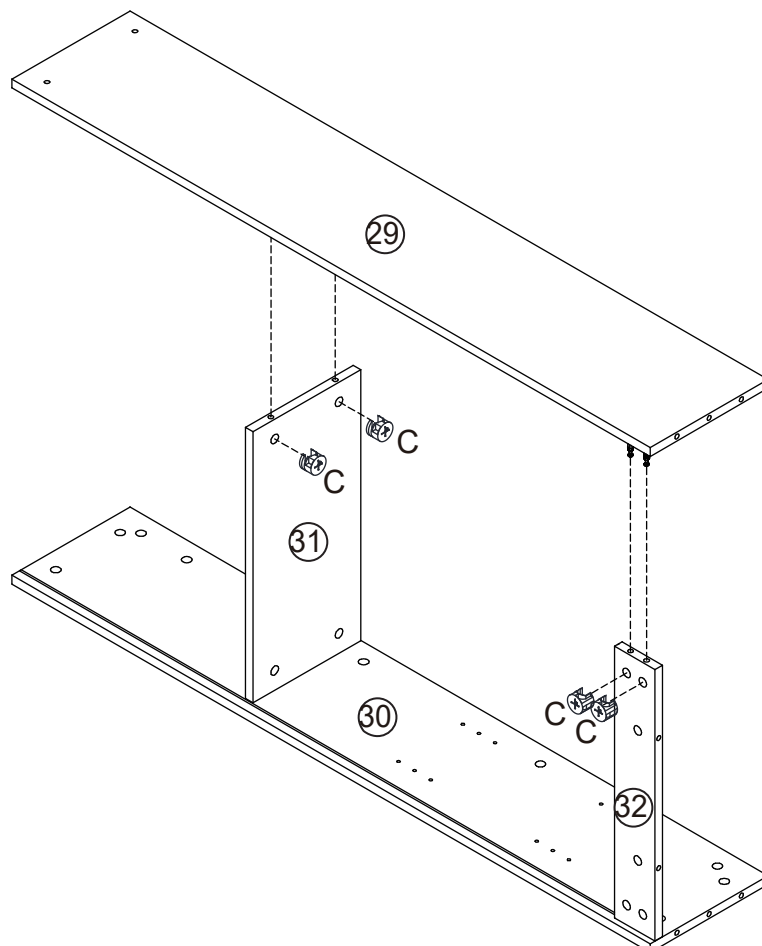


C*4

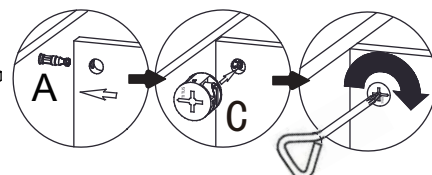


Step 47

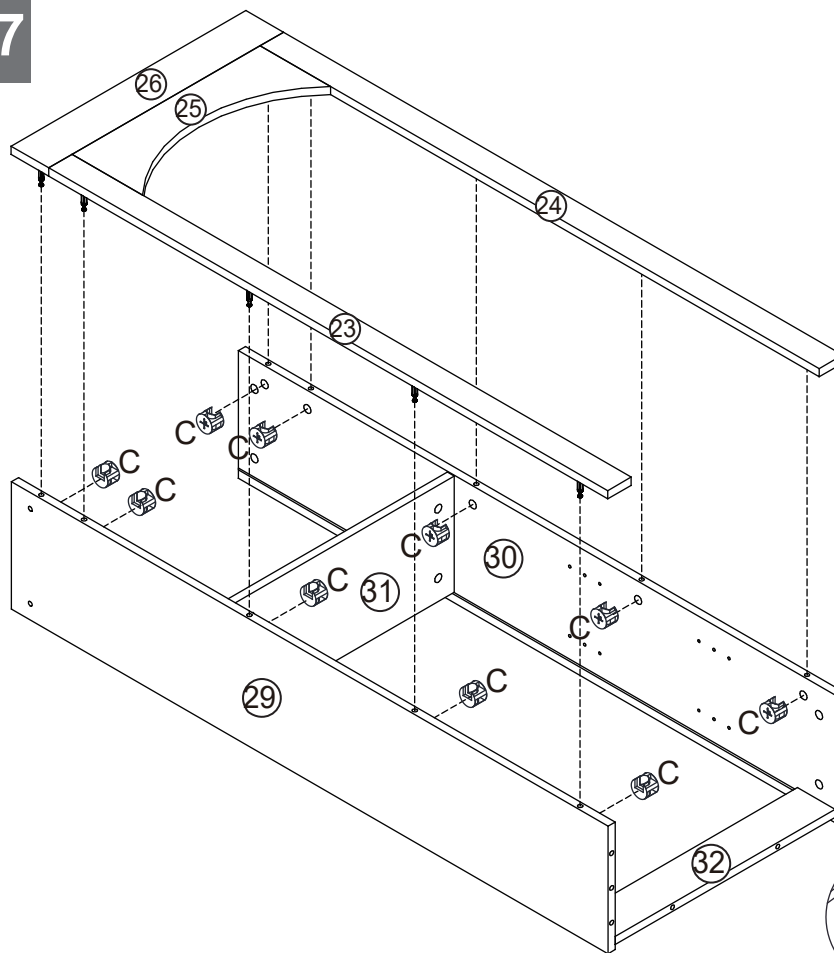


C*10

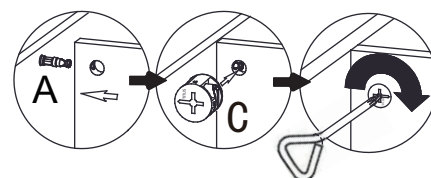

Step 48

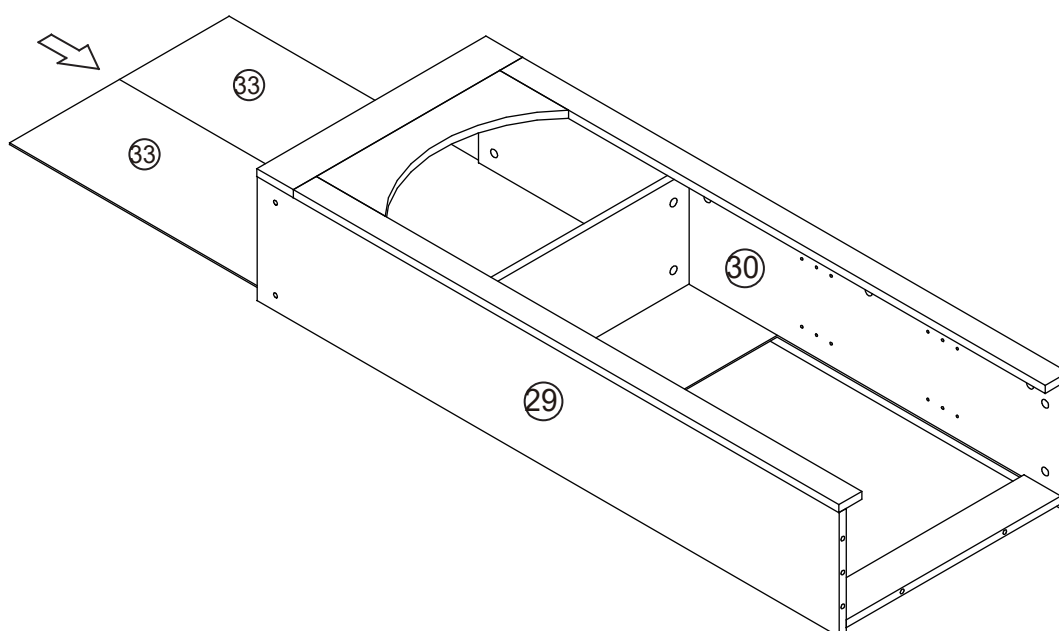


Step 49

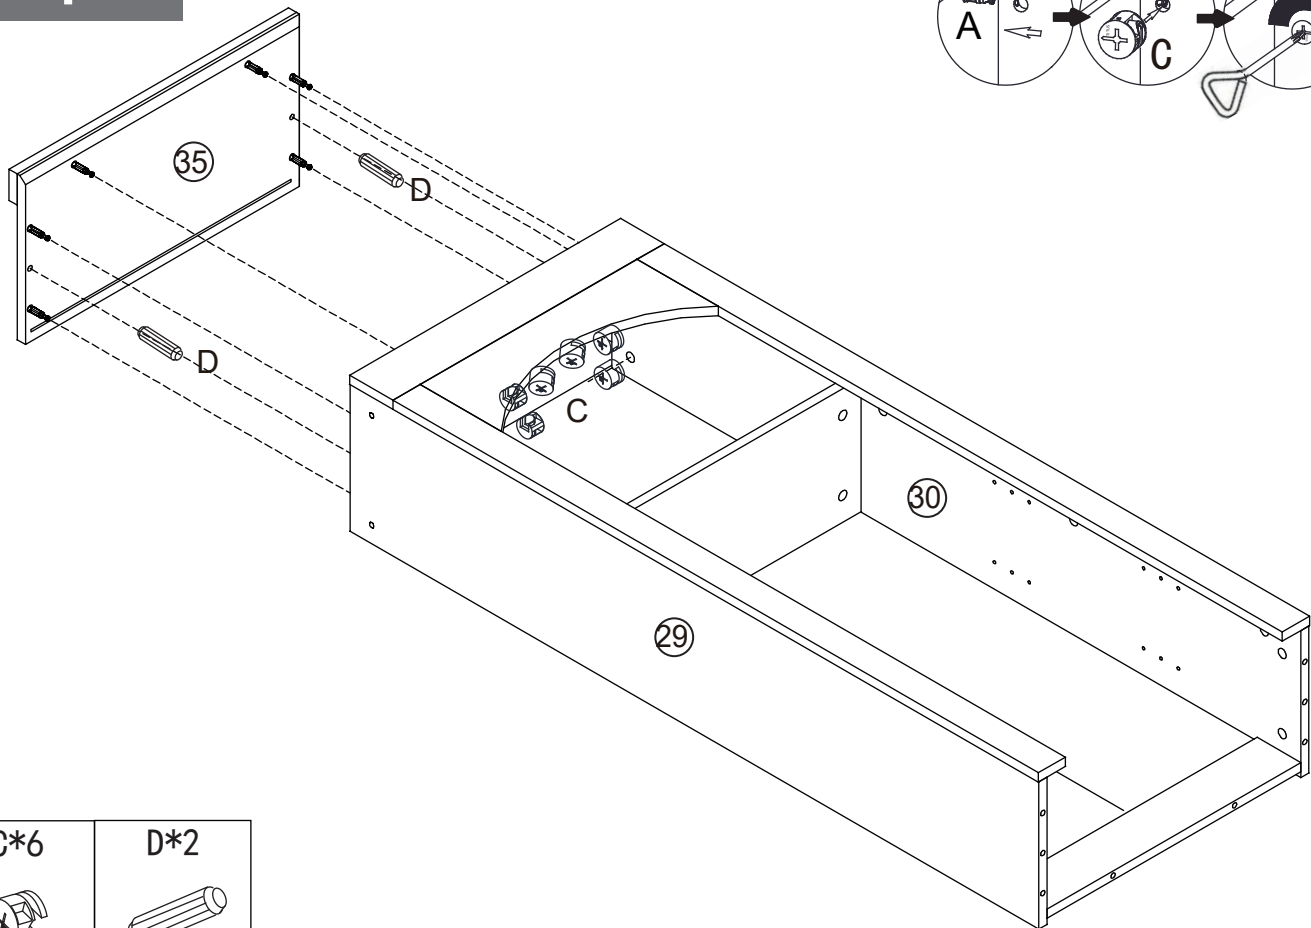


C*6



D*2




Step 50

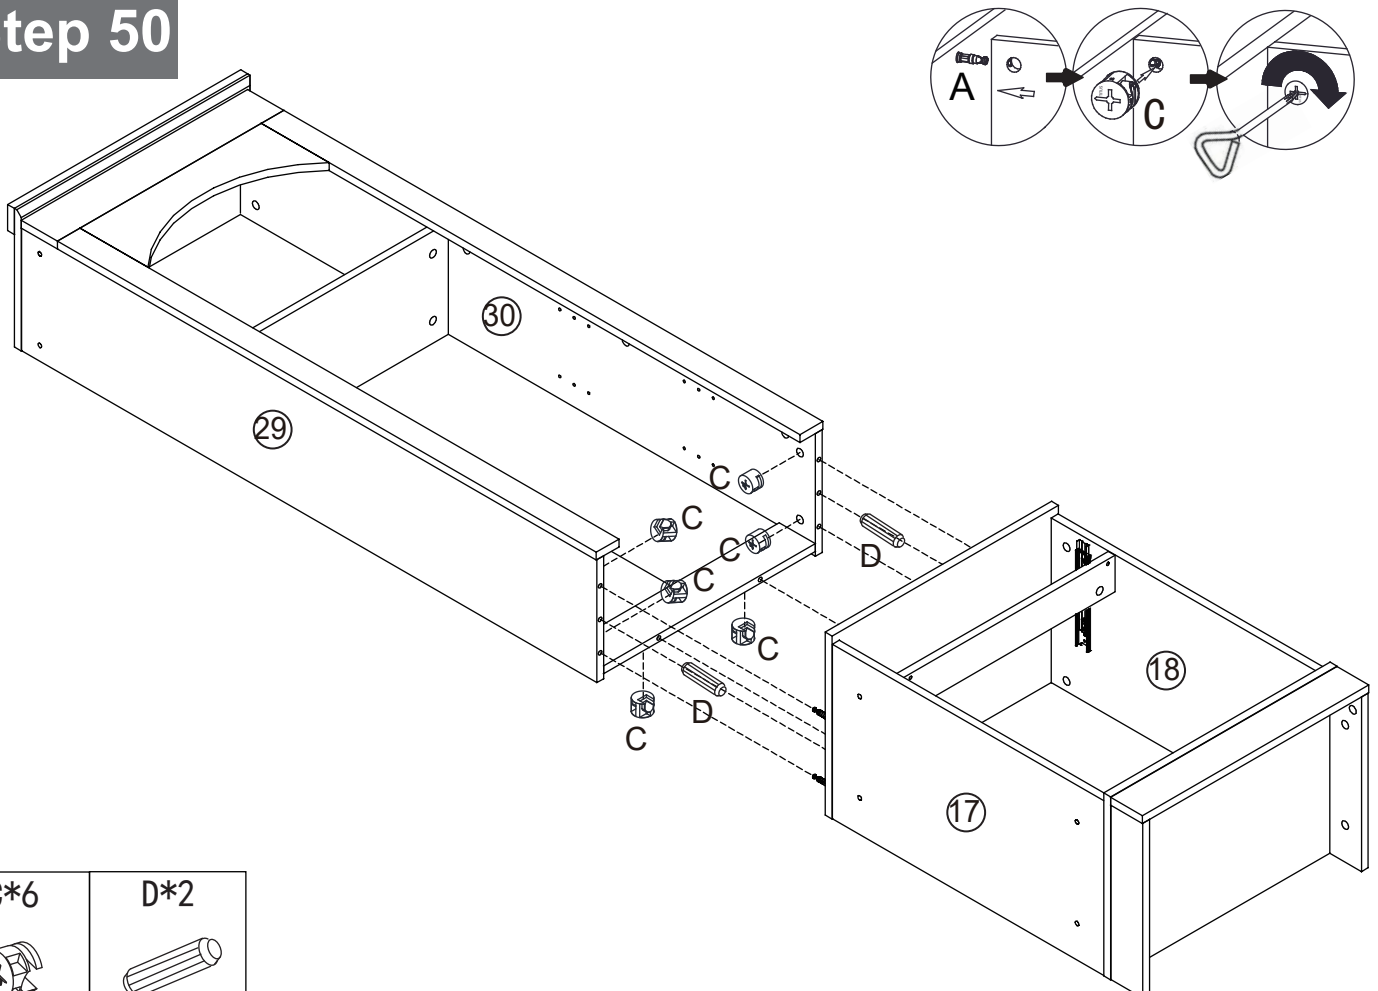


C*6




D*2




Step 51

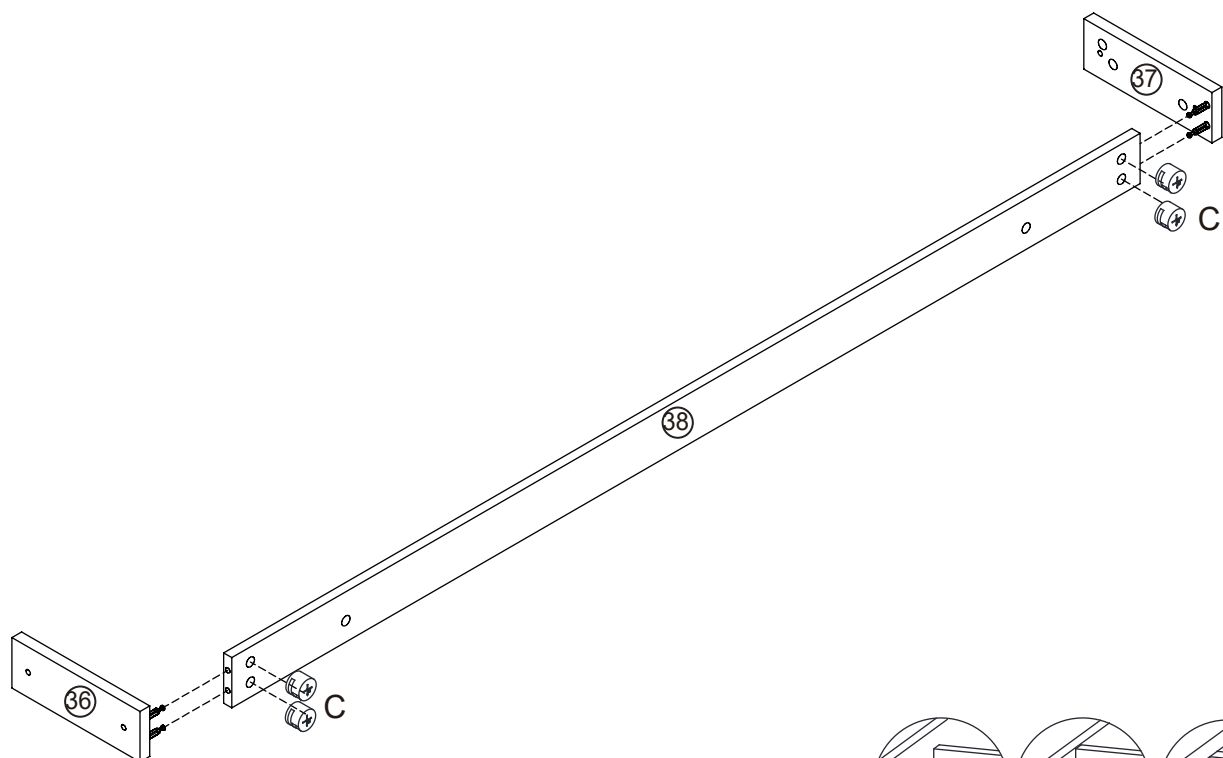

C*4

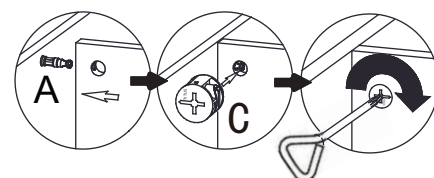



Step 52

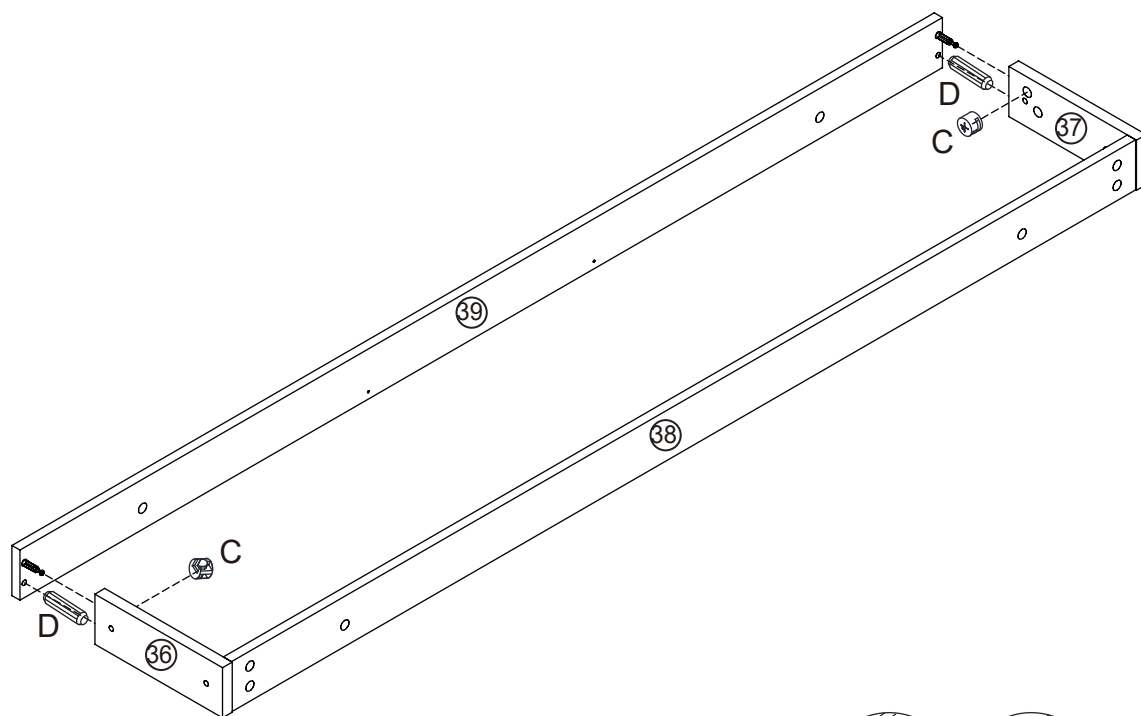


C*2



D*2

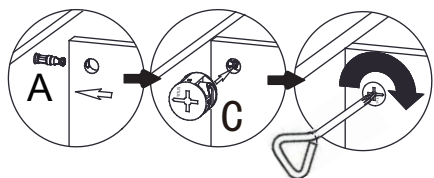



Step 53

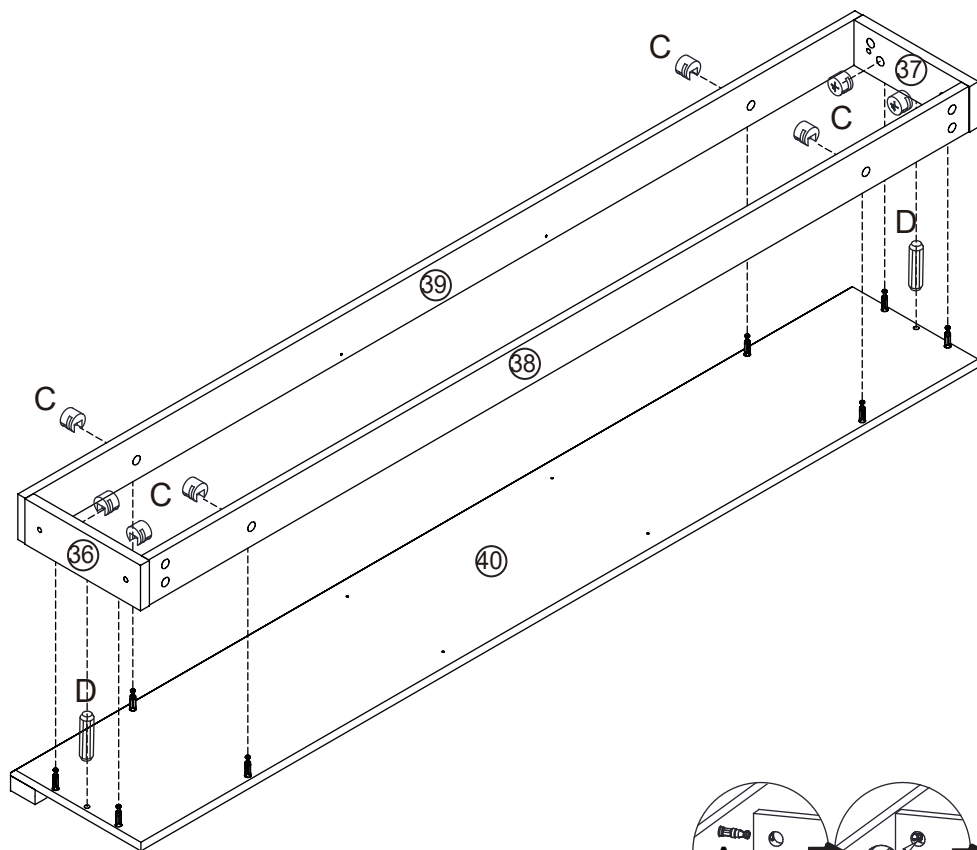


C*8



D*2

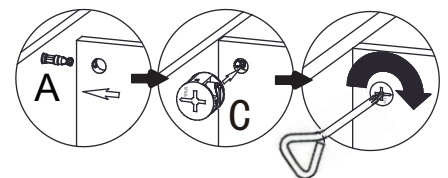

Step 54

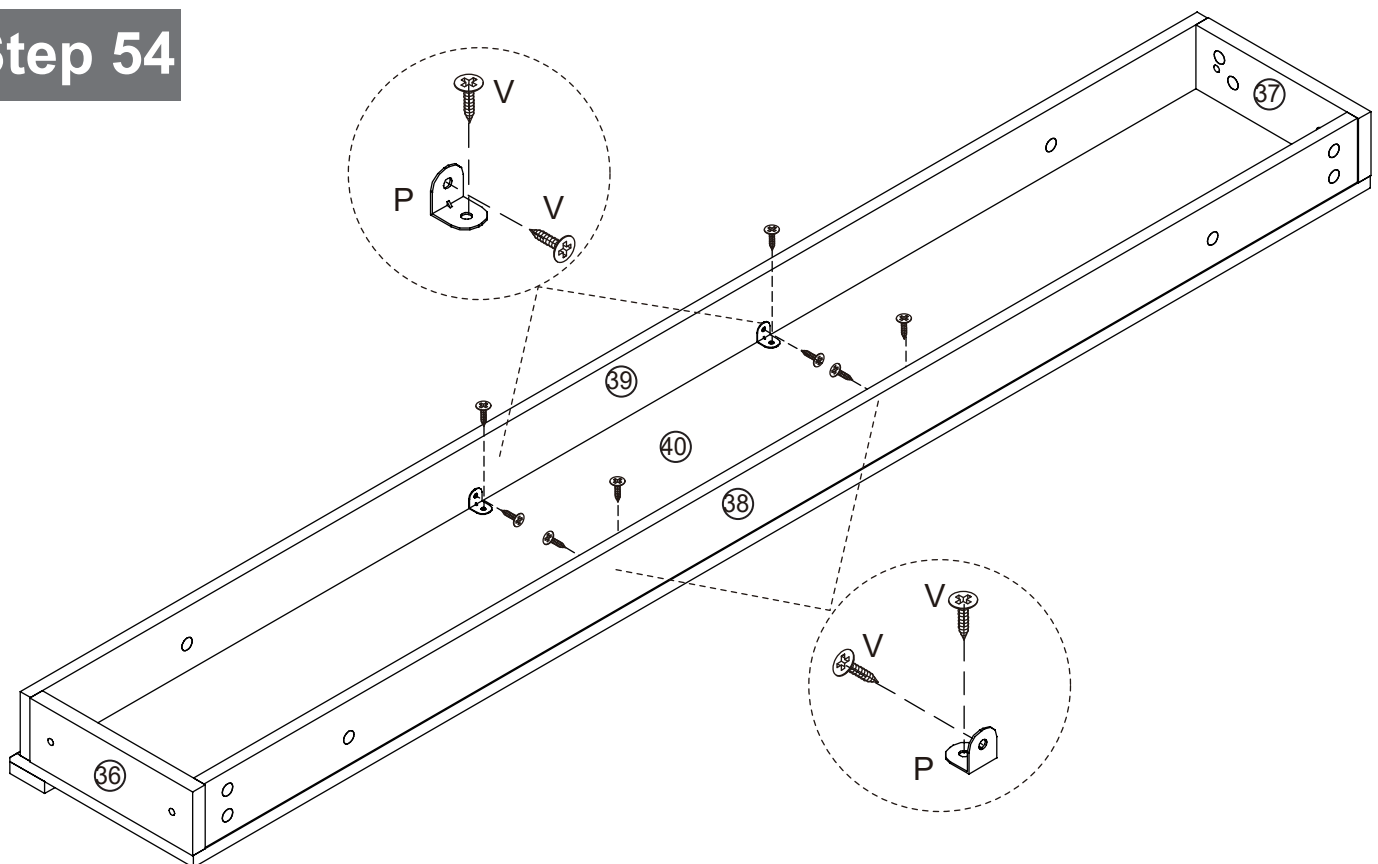

P*4




V*8




Step 55

It's better if two people work together on this step.

Please flip carefully!

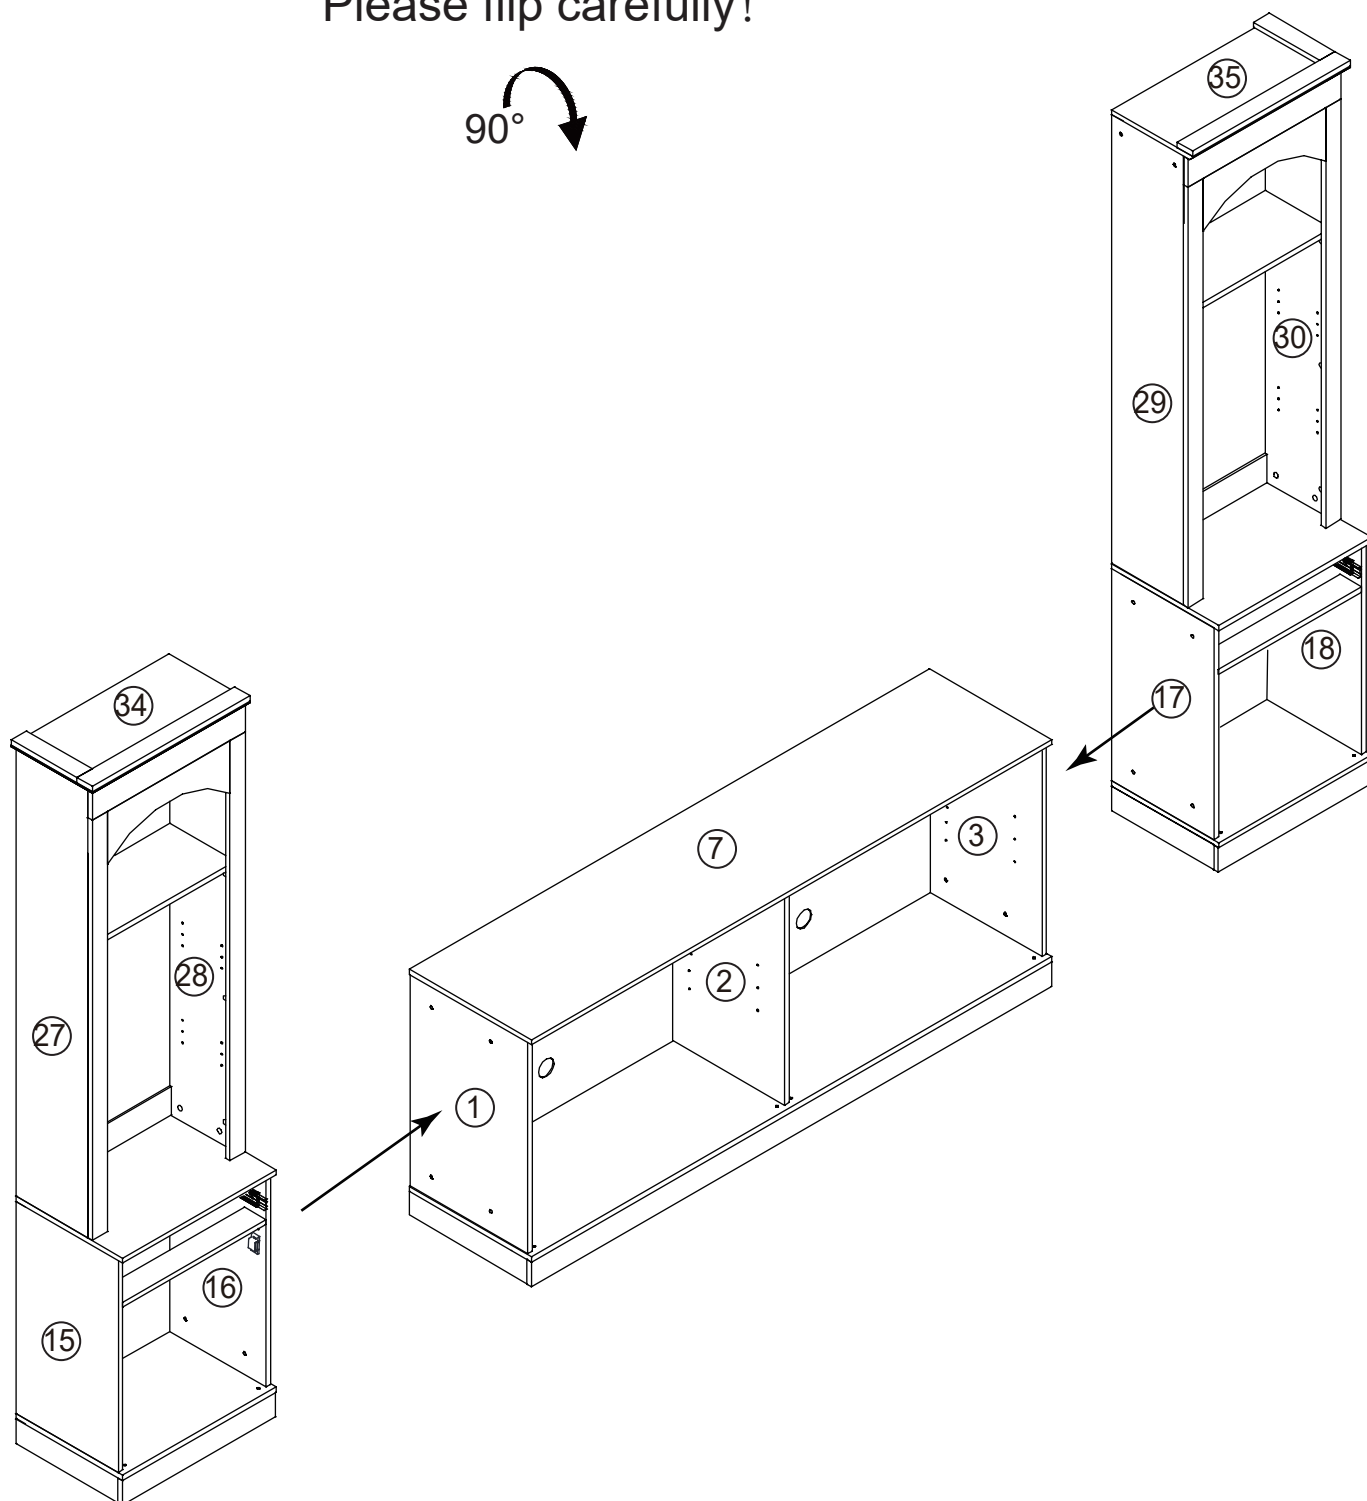

Step 56

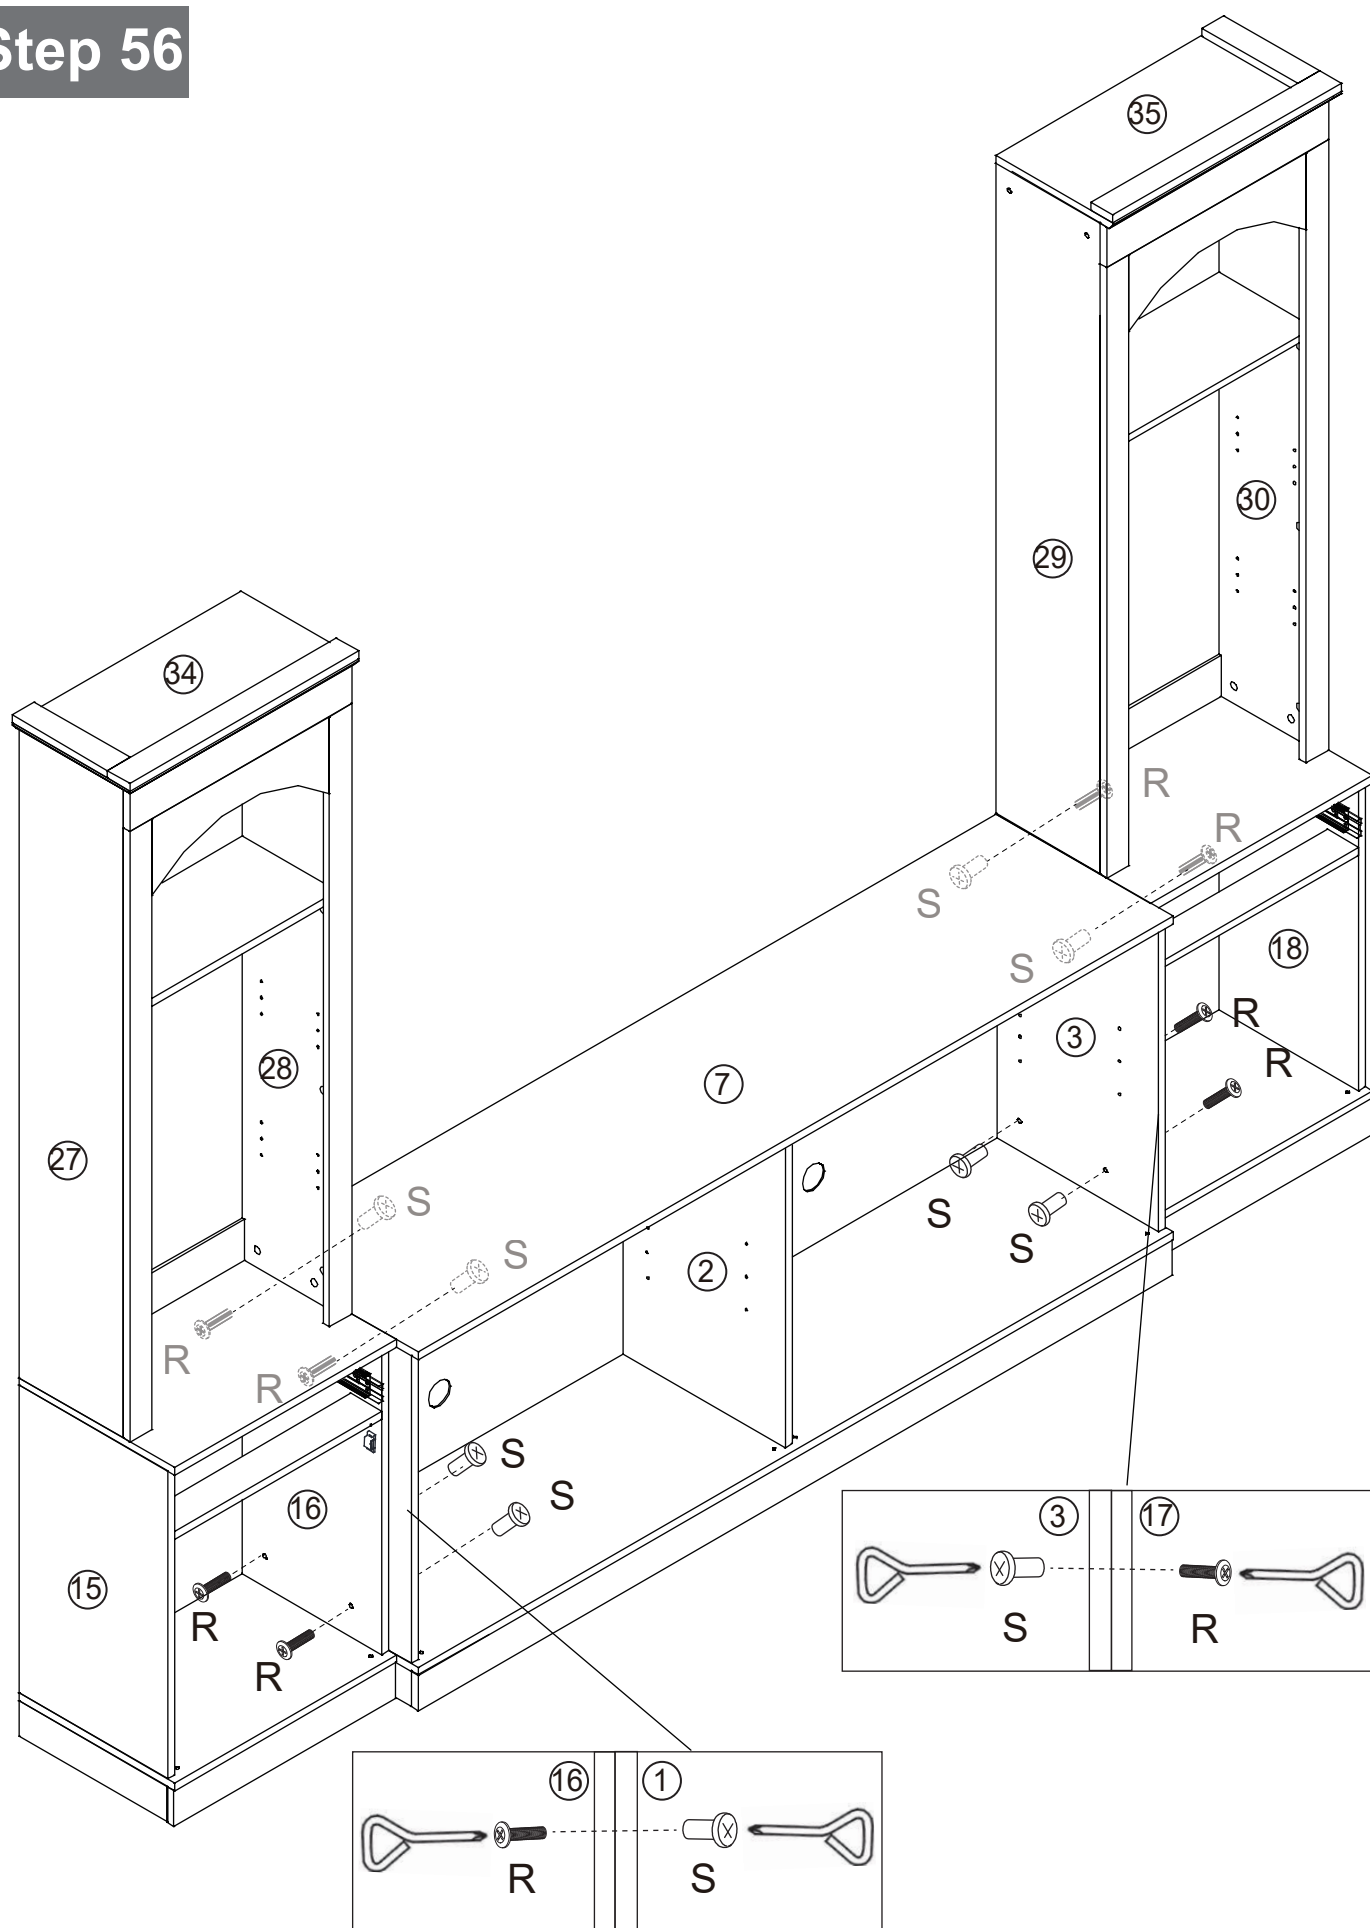

R*8







S*8




Step 57

It's better if three people work together on this step.

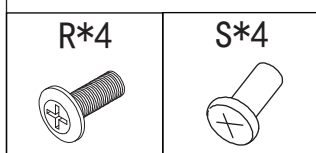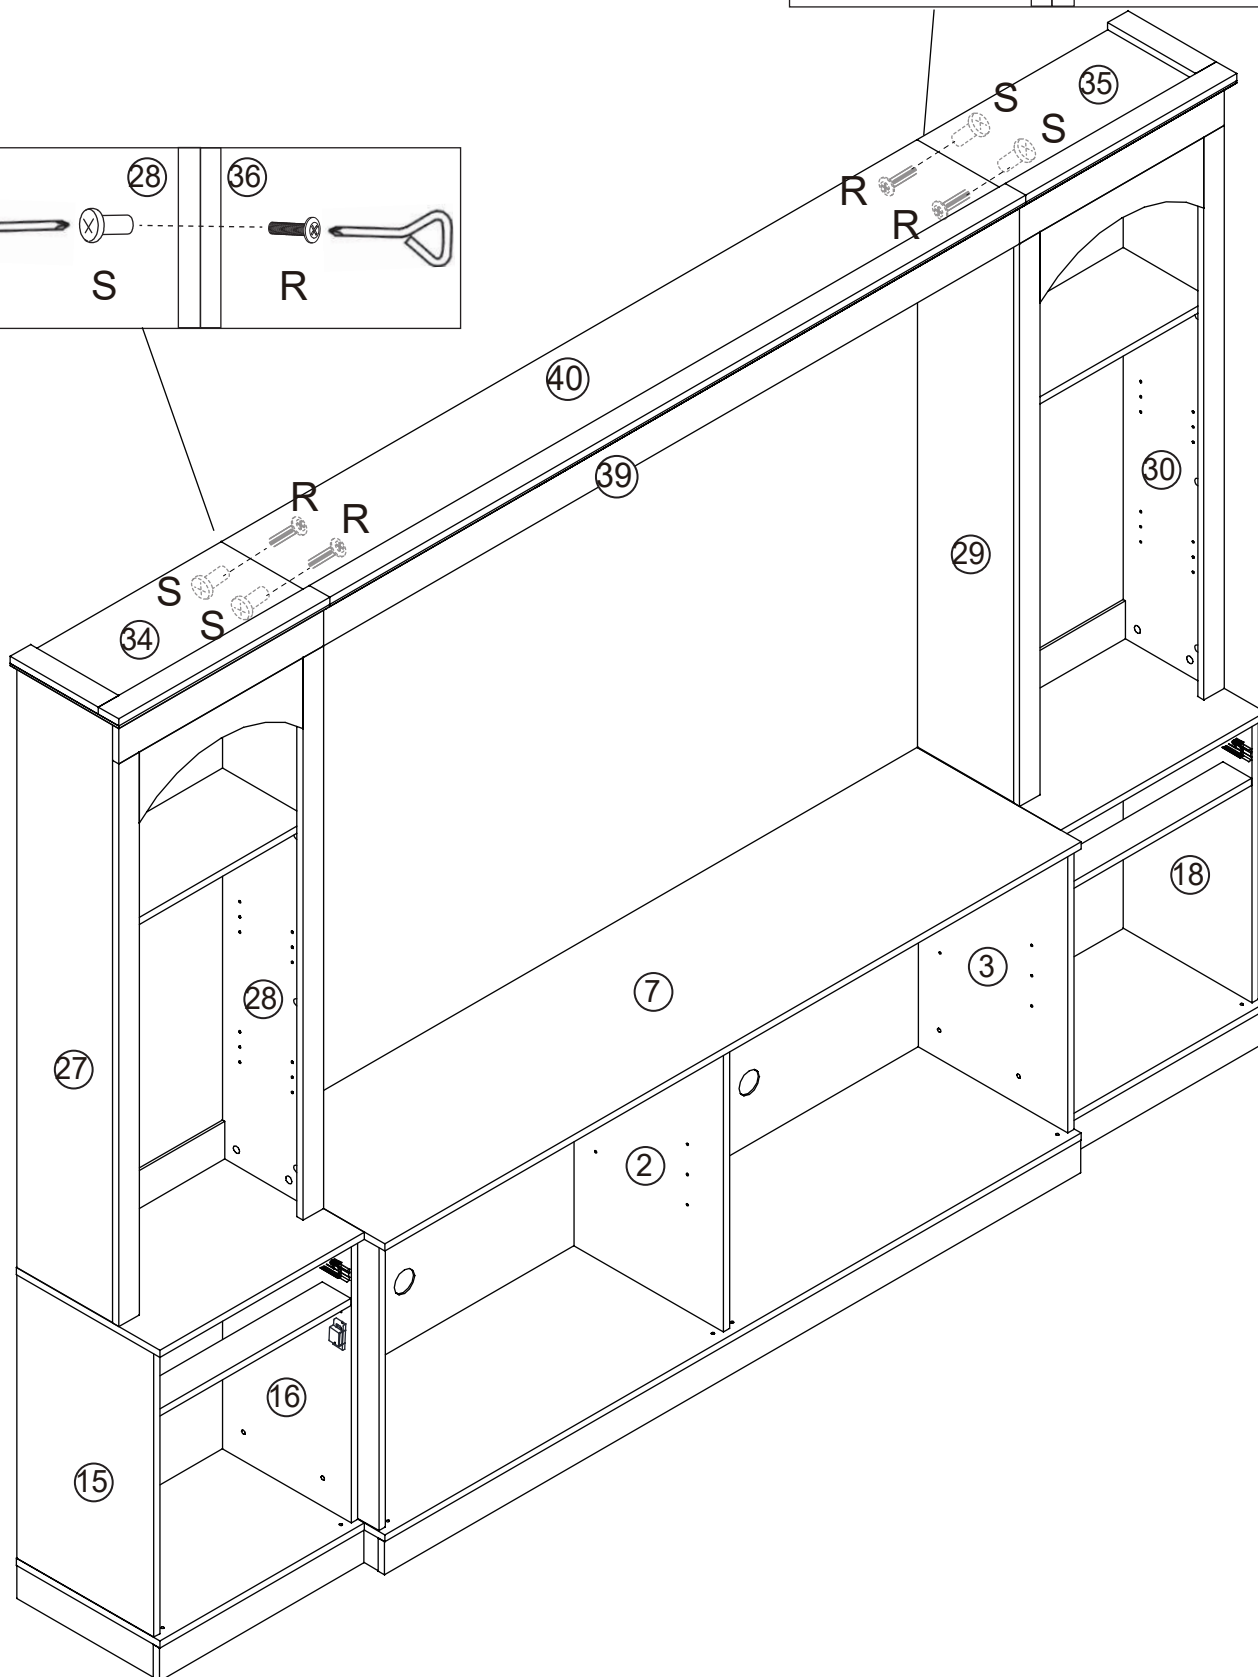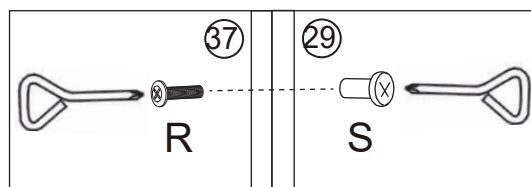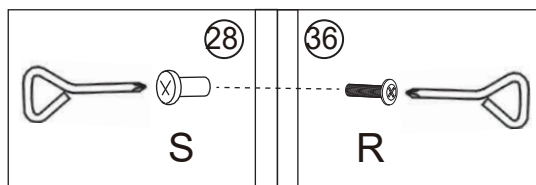

Step 58 Step X2

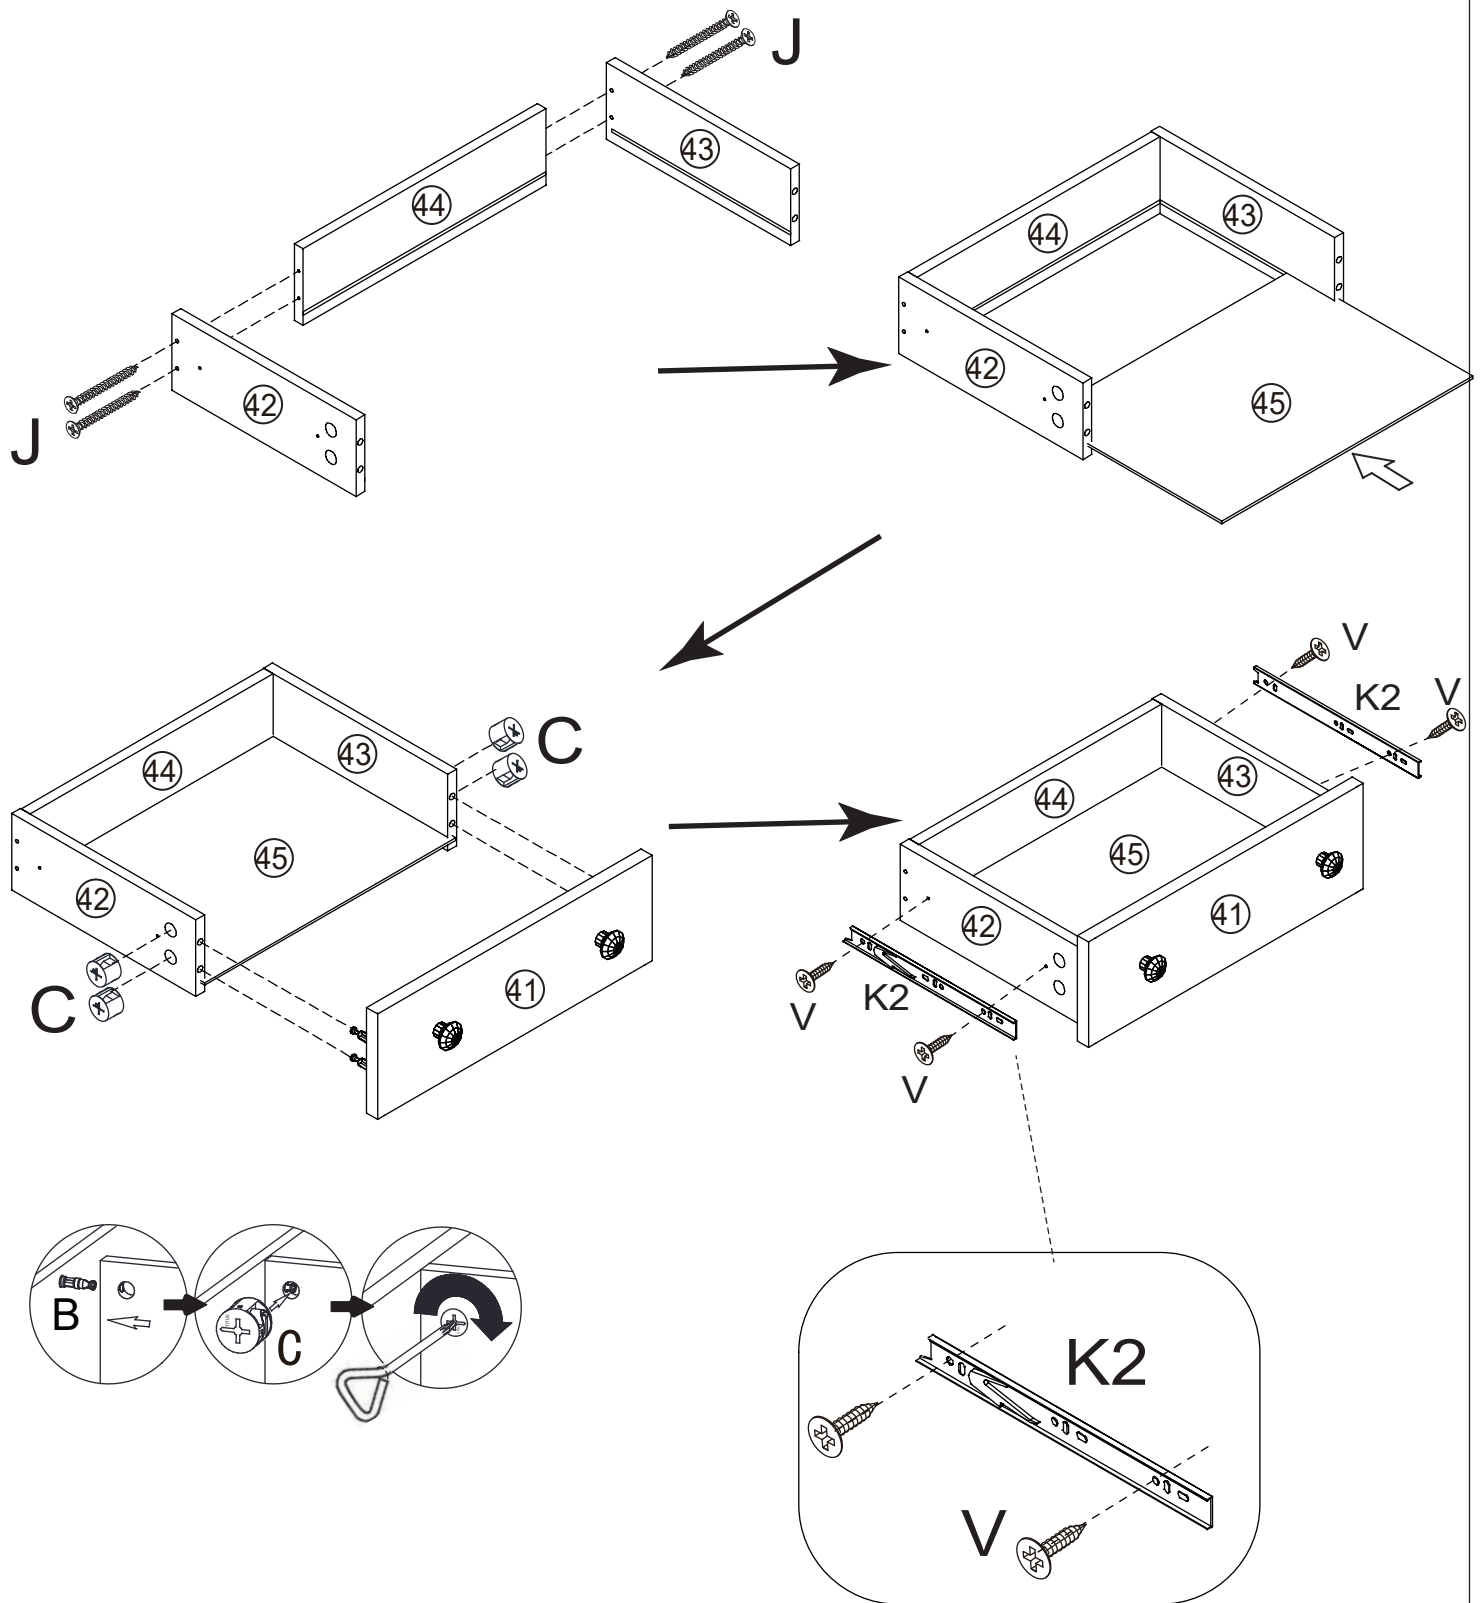

C*8



J*8









K2*4




V*8



Step 59

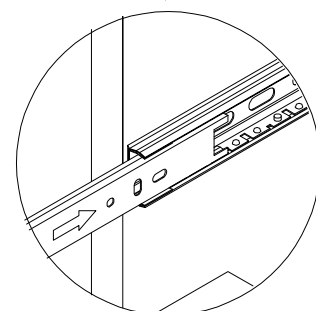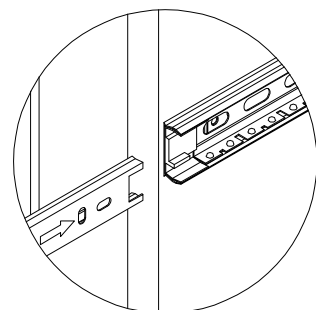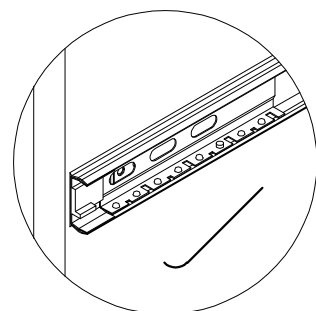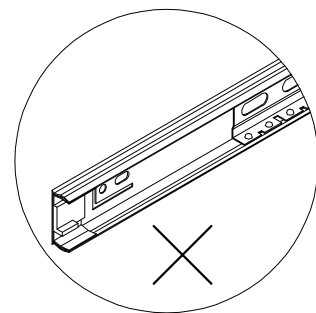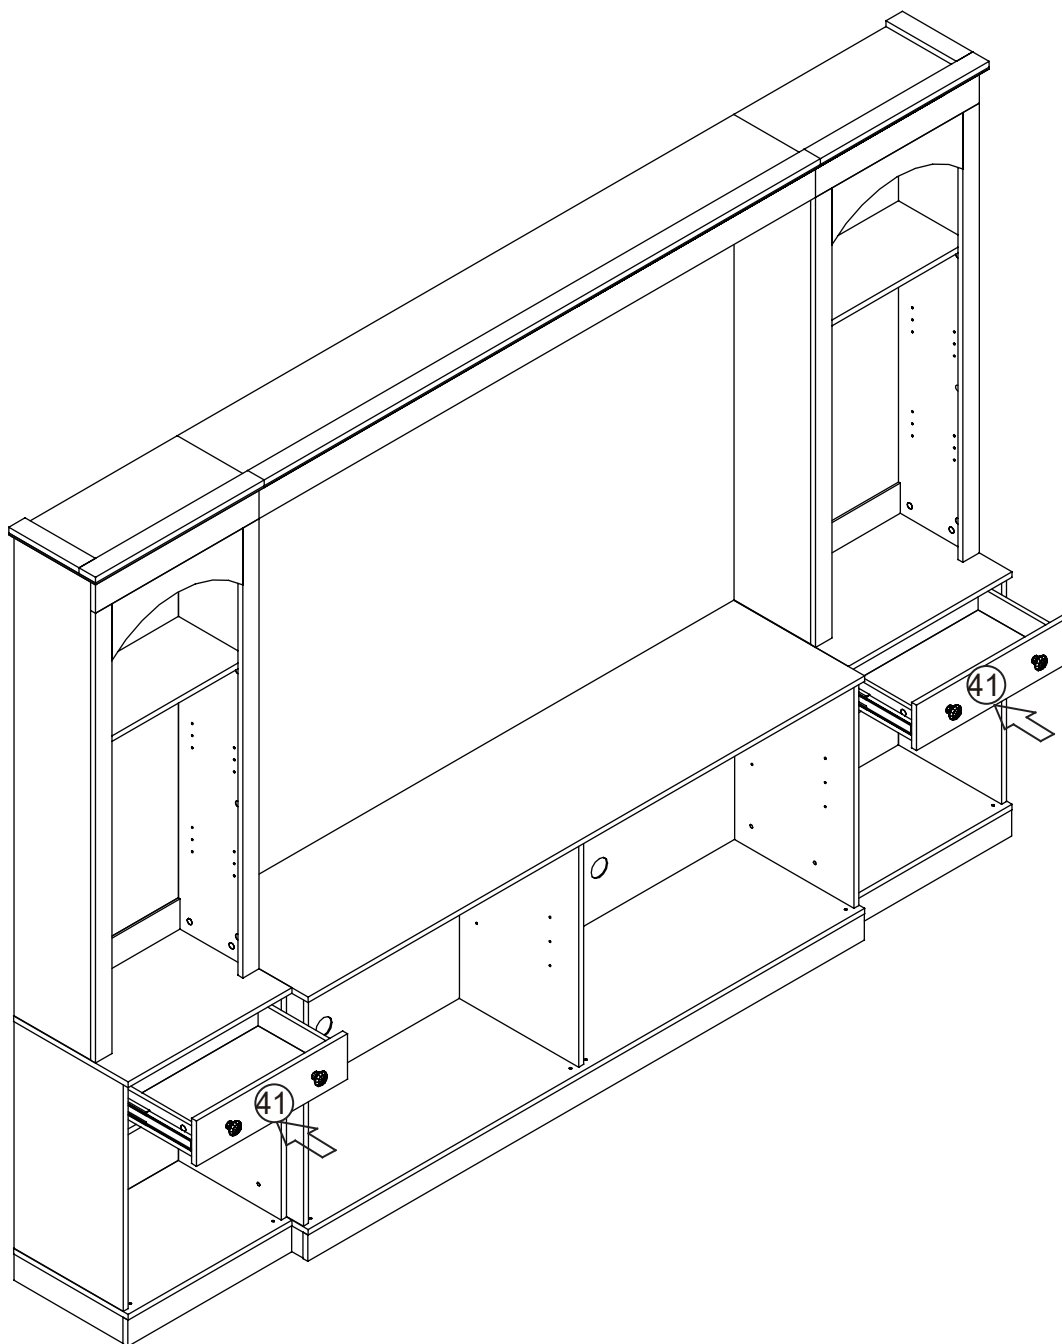


Step 60

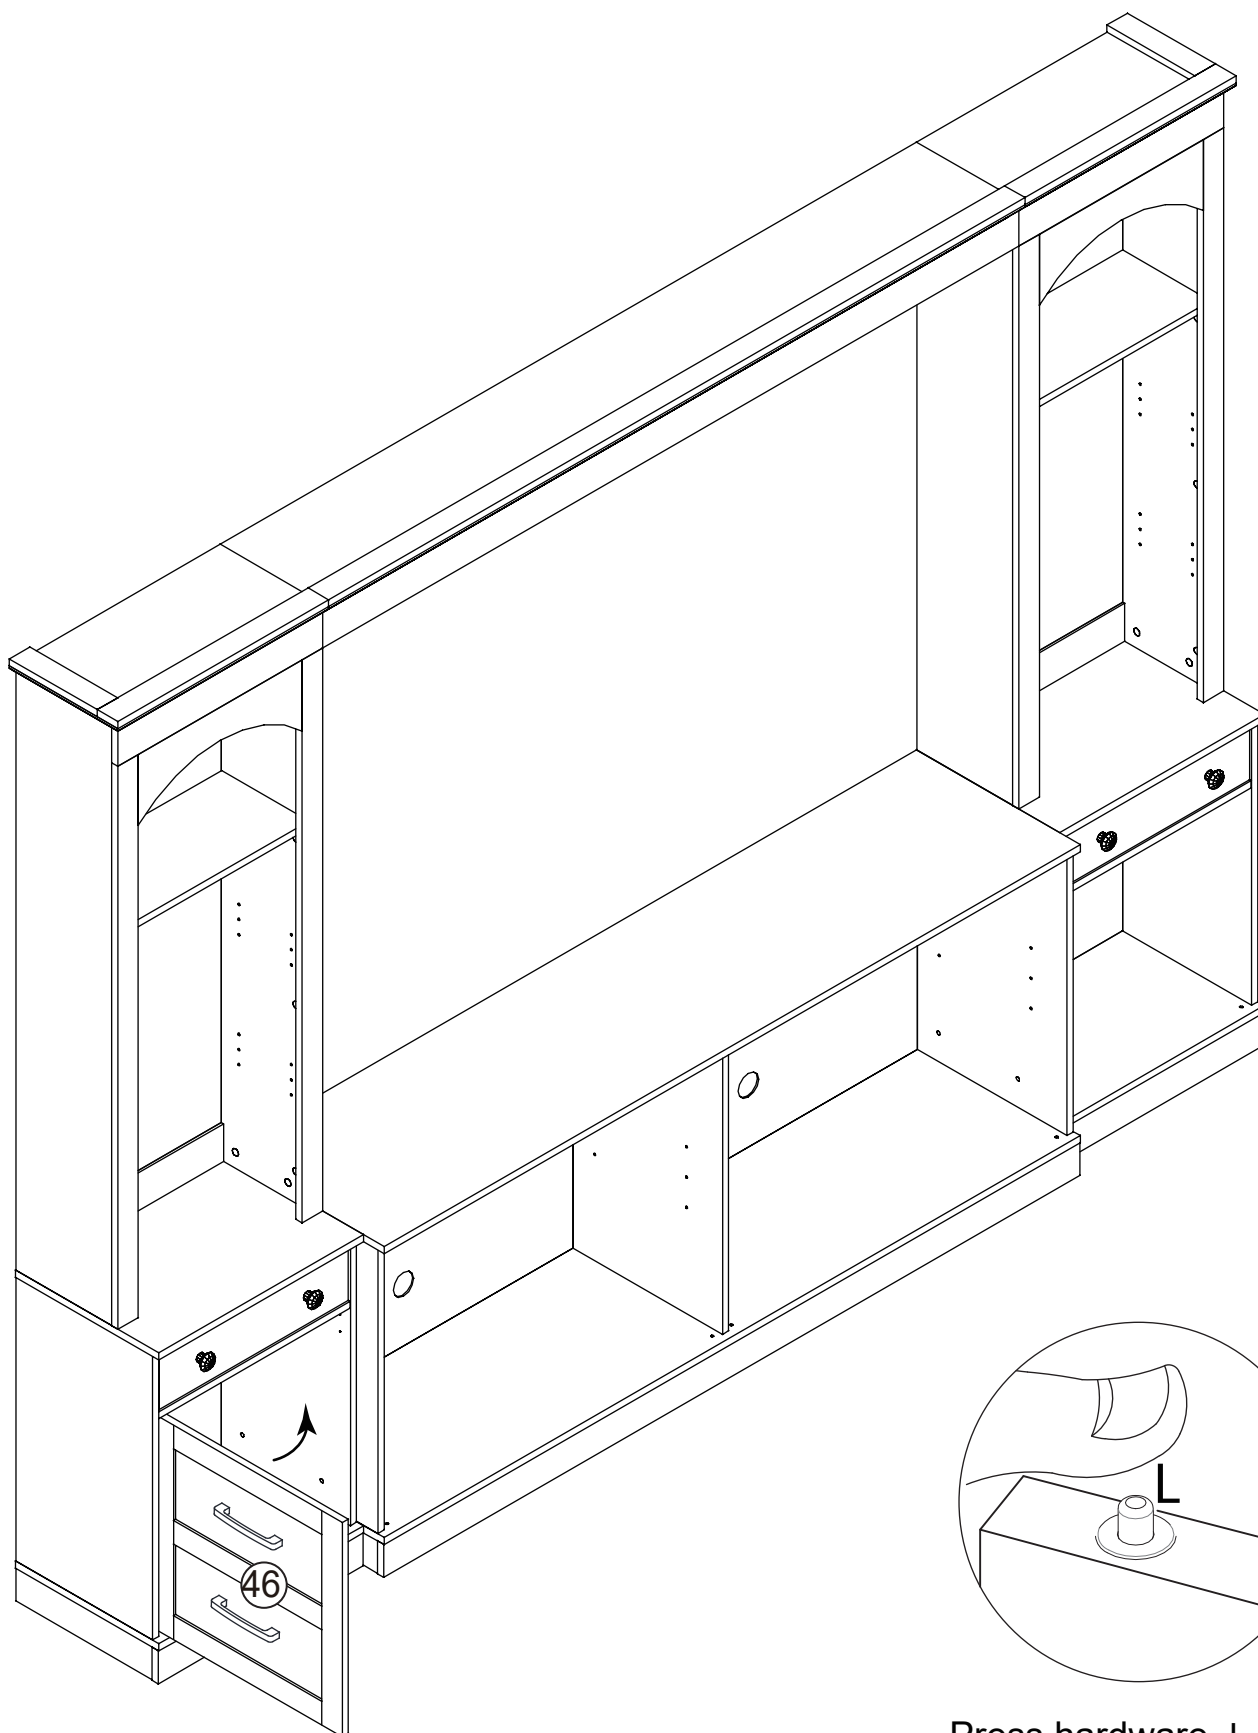


Press hardware L
and then slot in to
the hole at cabinet.

Step 61

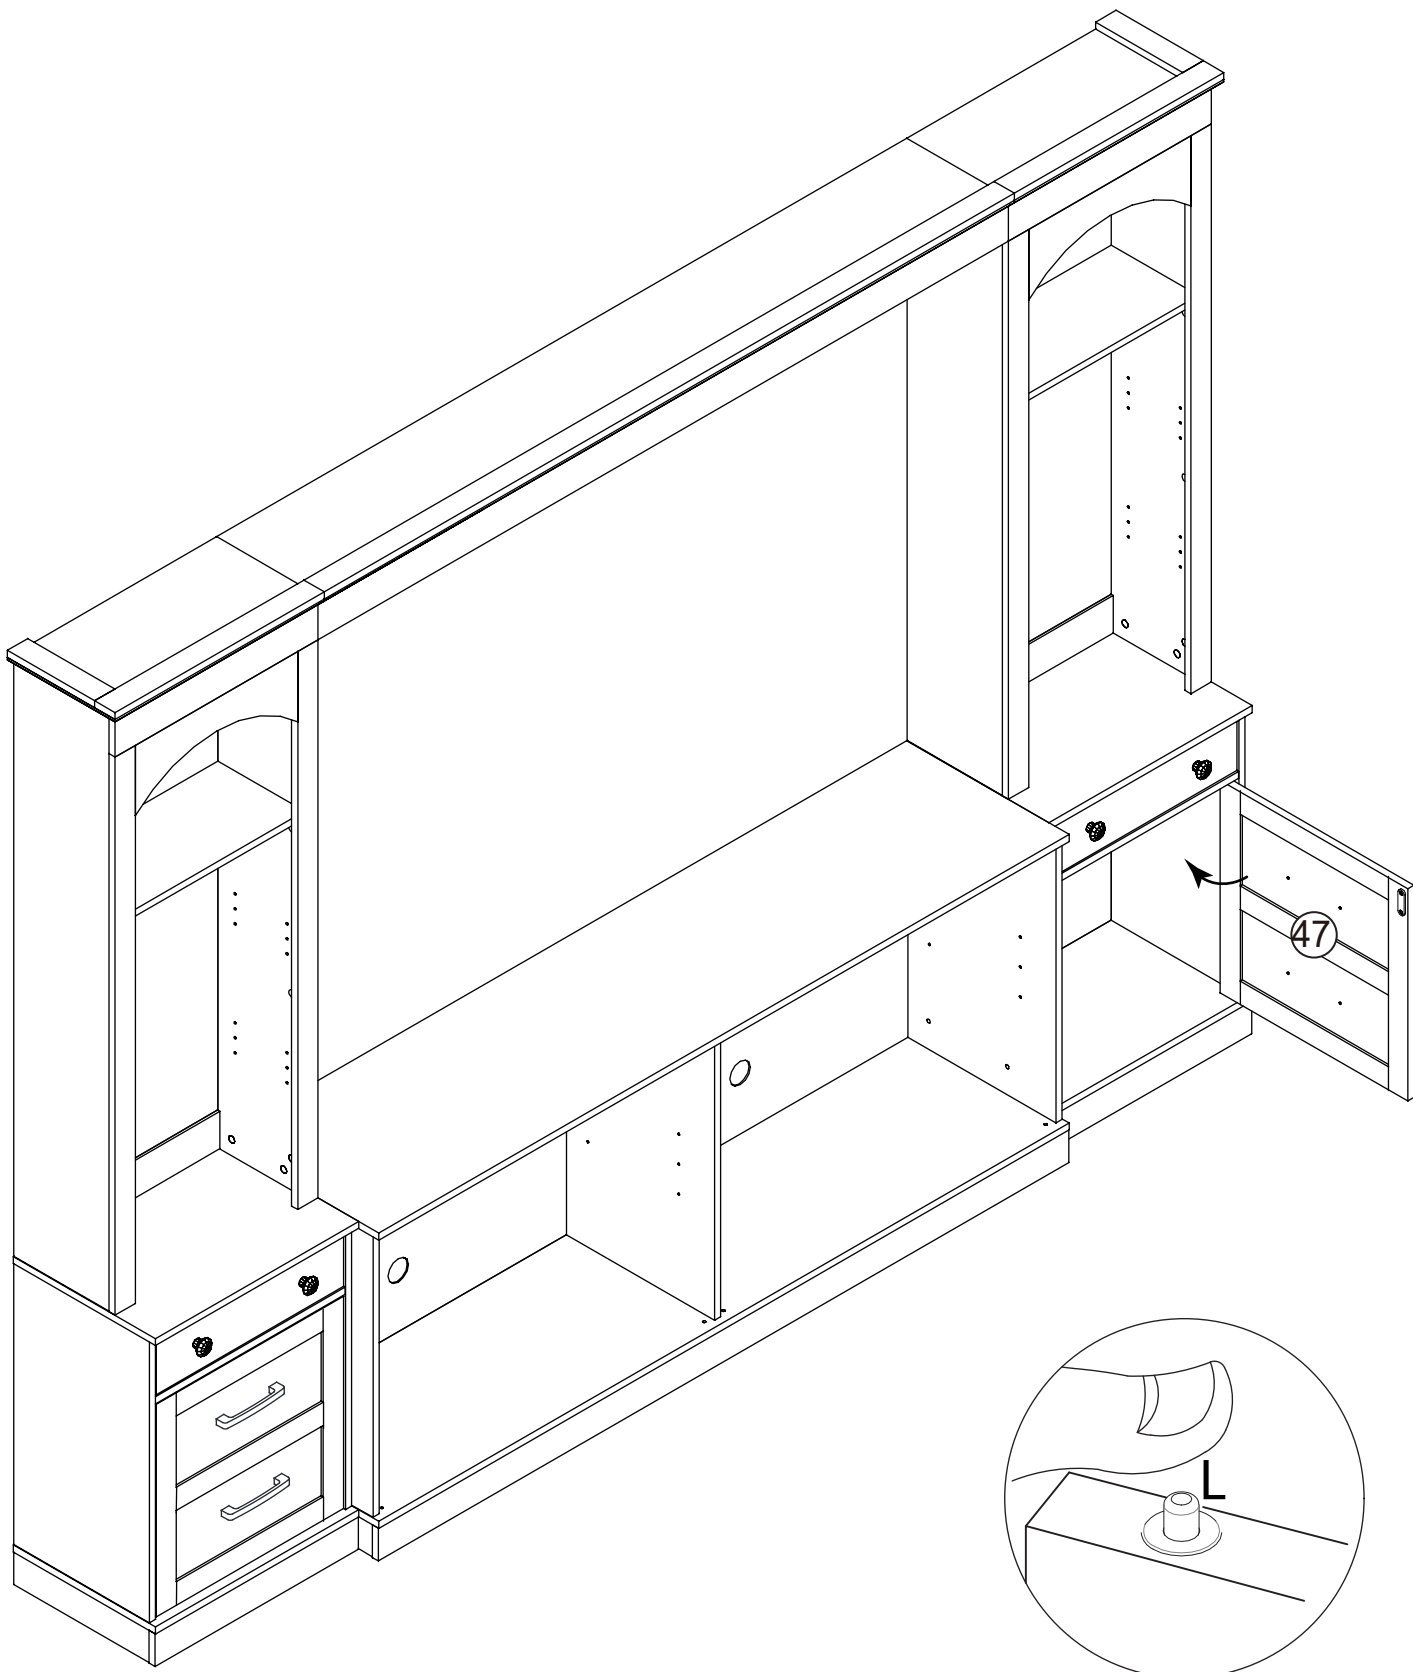


Press hardware L
and then slot in to
the hole at cabinet.


Step 62

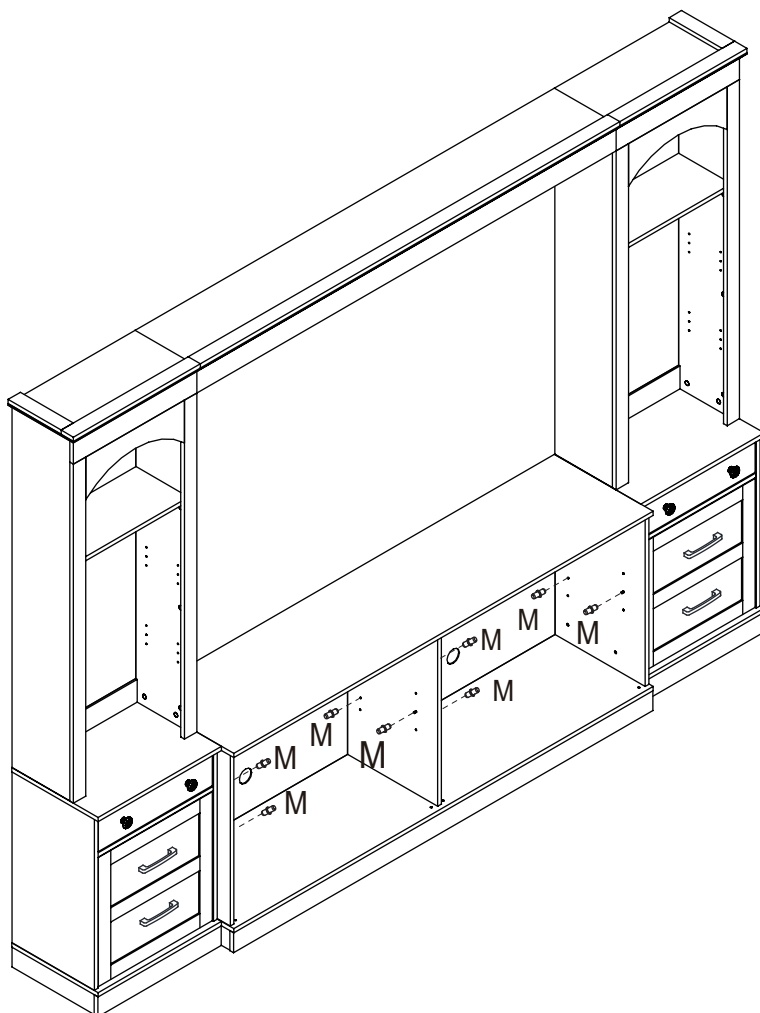



M*8




Step 63

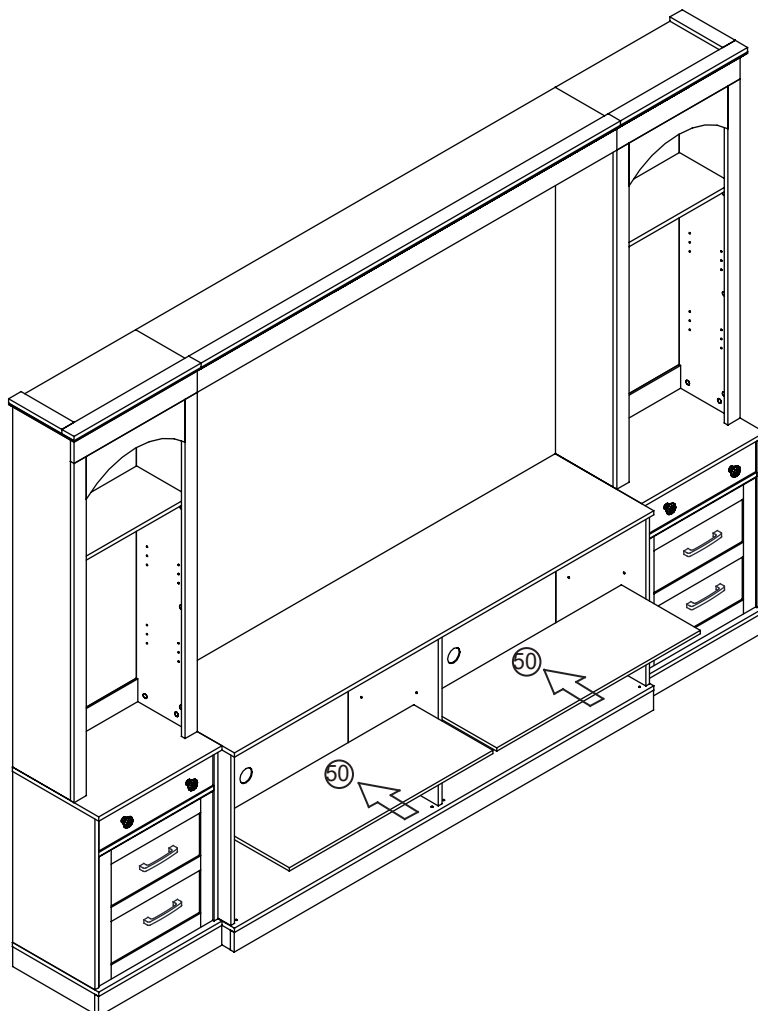


Step 64

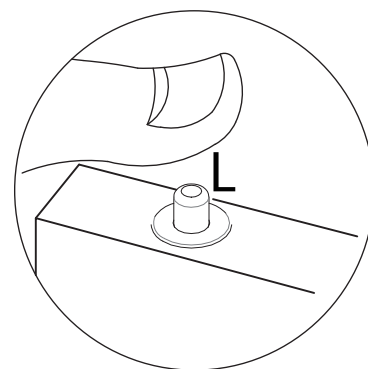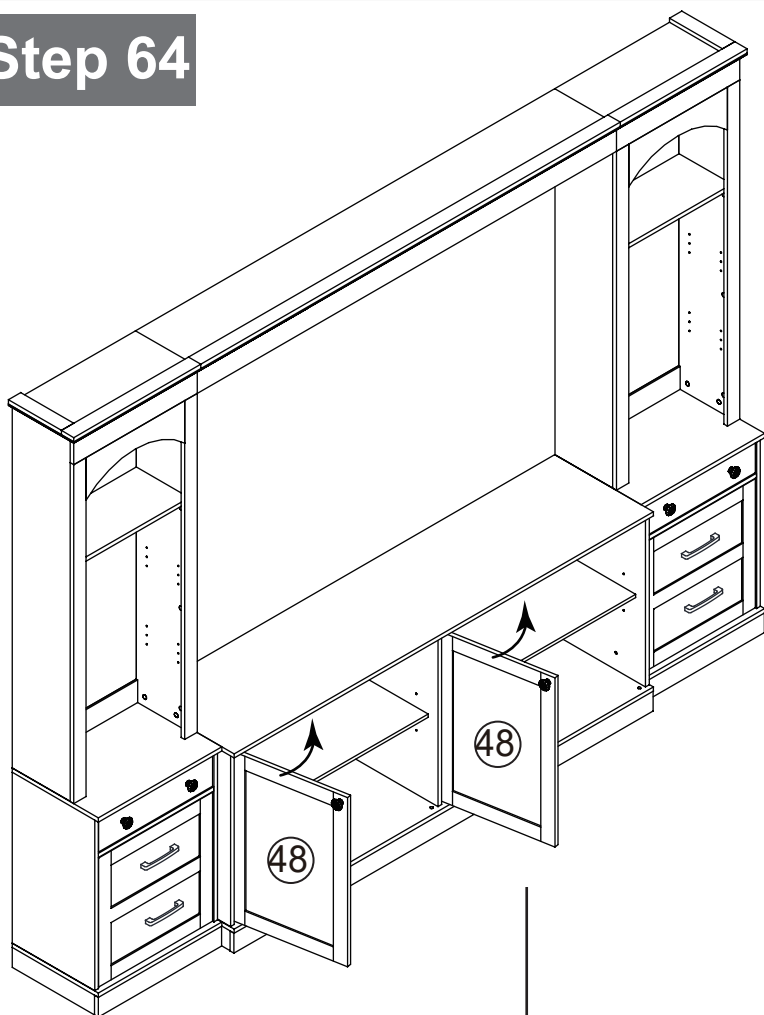

Press hardware L
and then slot in to
the hole at cabinet.

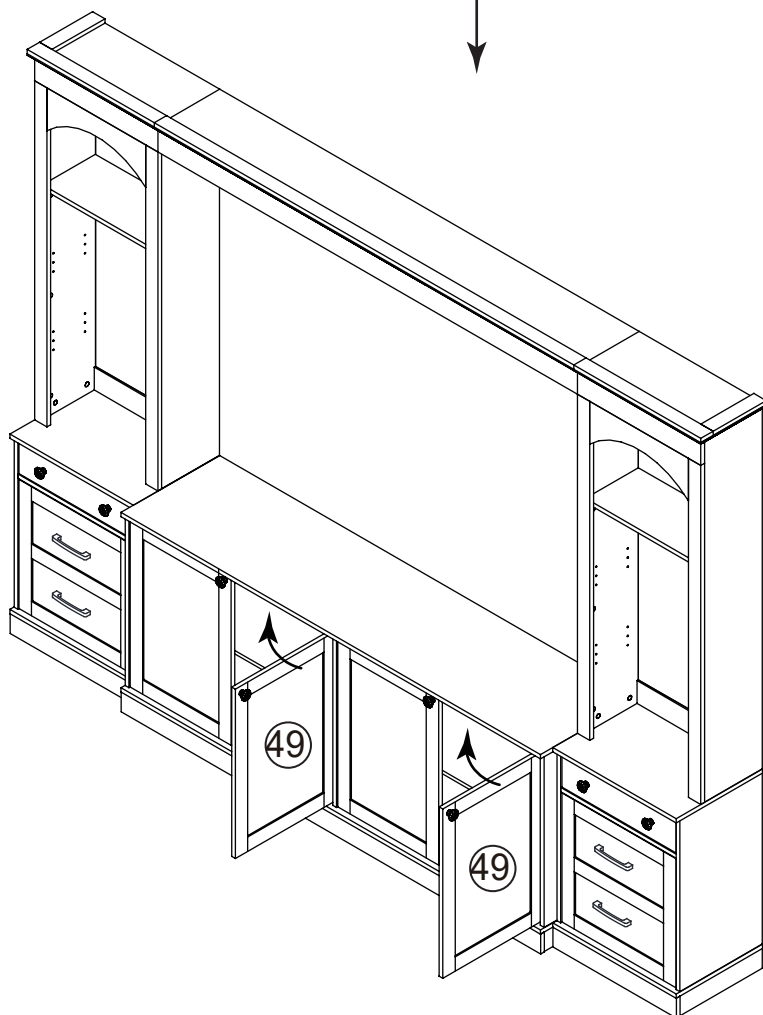


Step 65

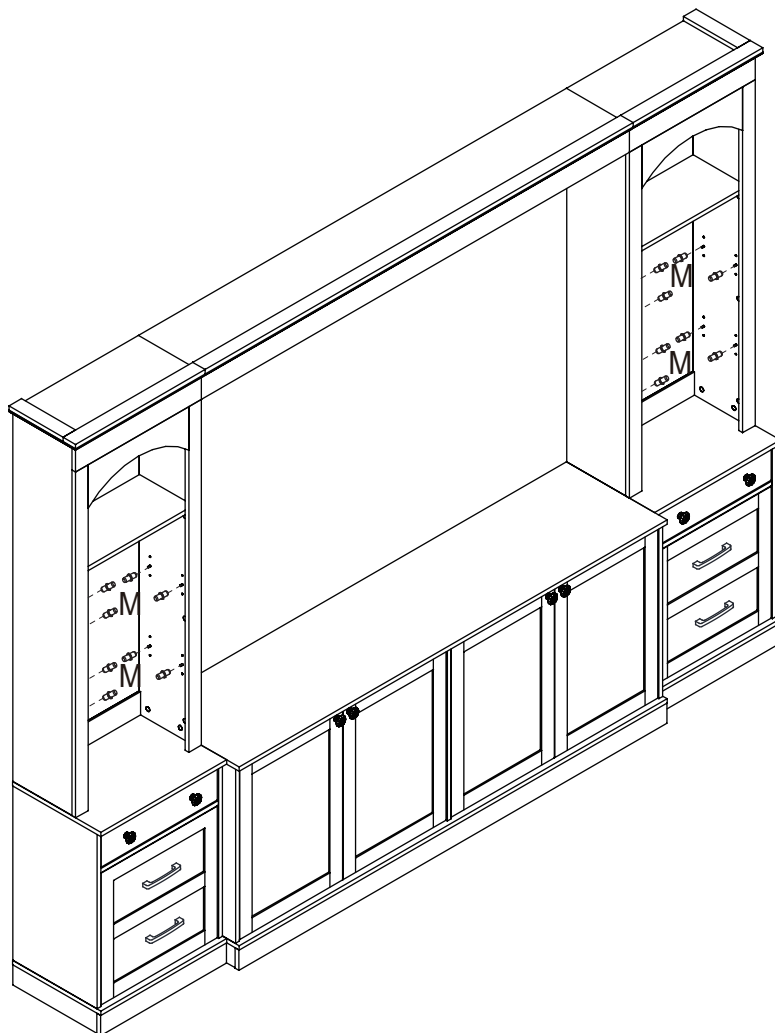


M*16



Step 66

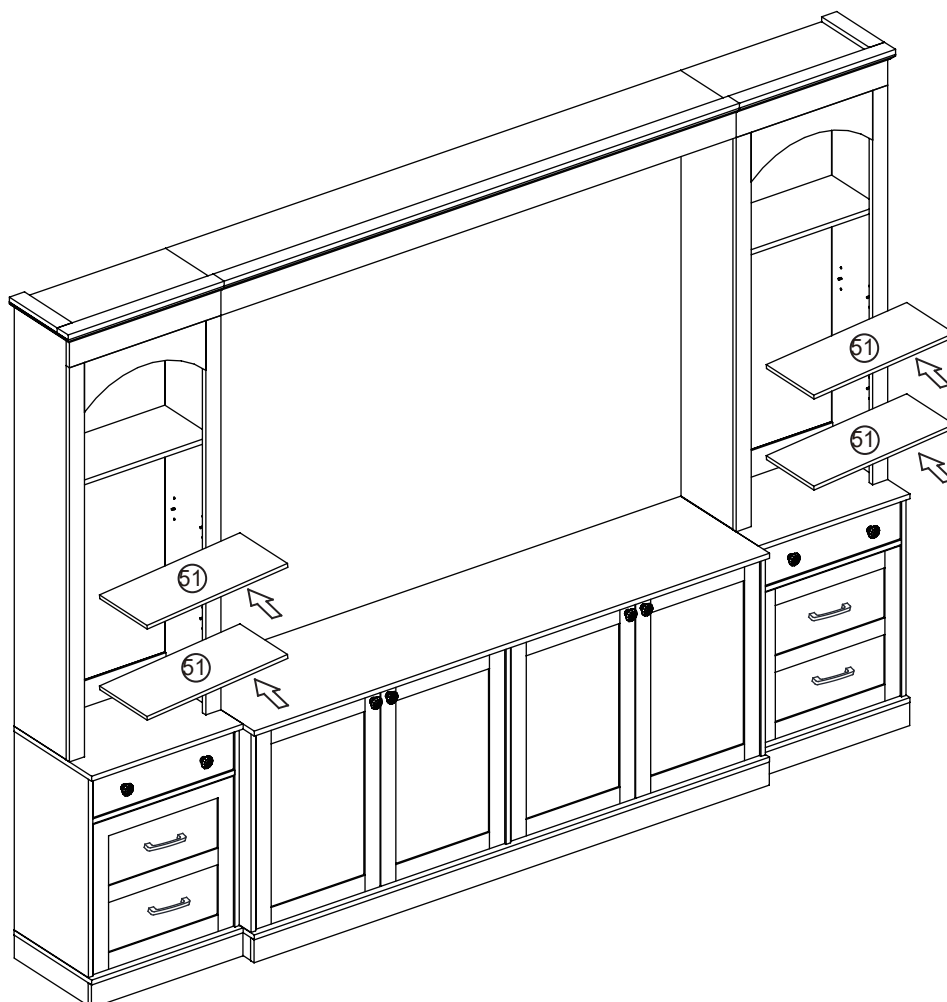

Step 67

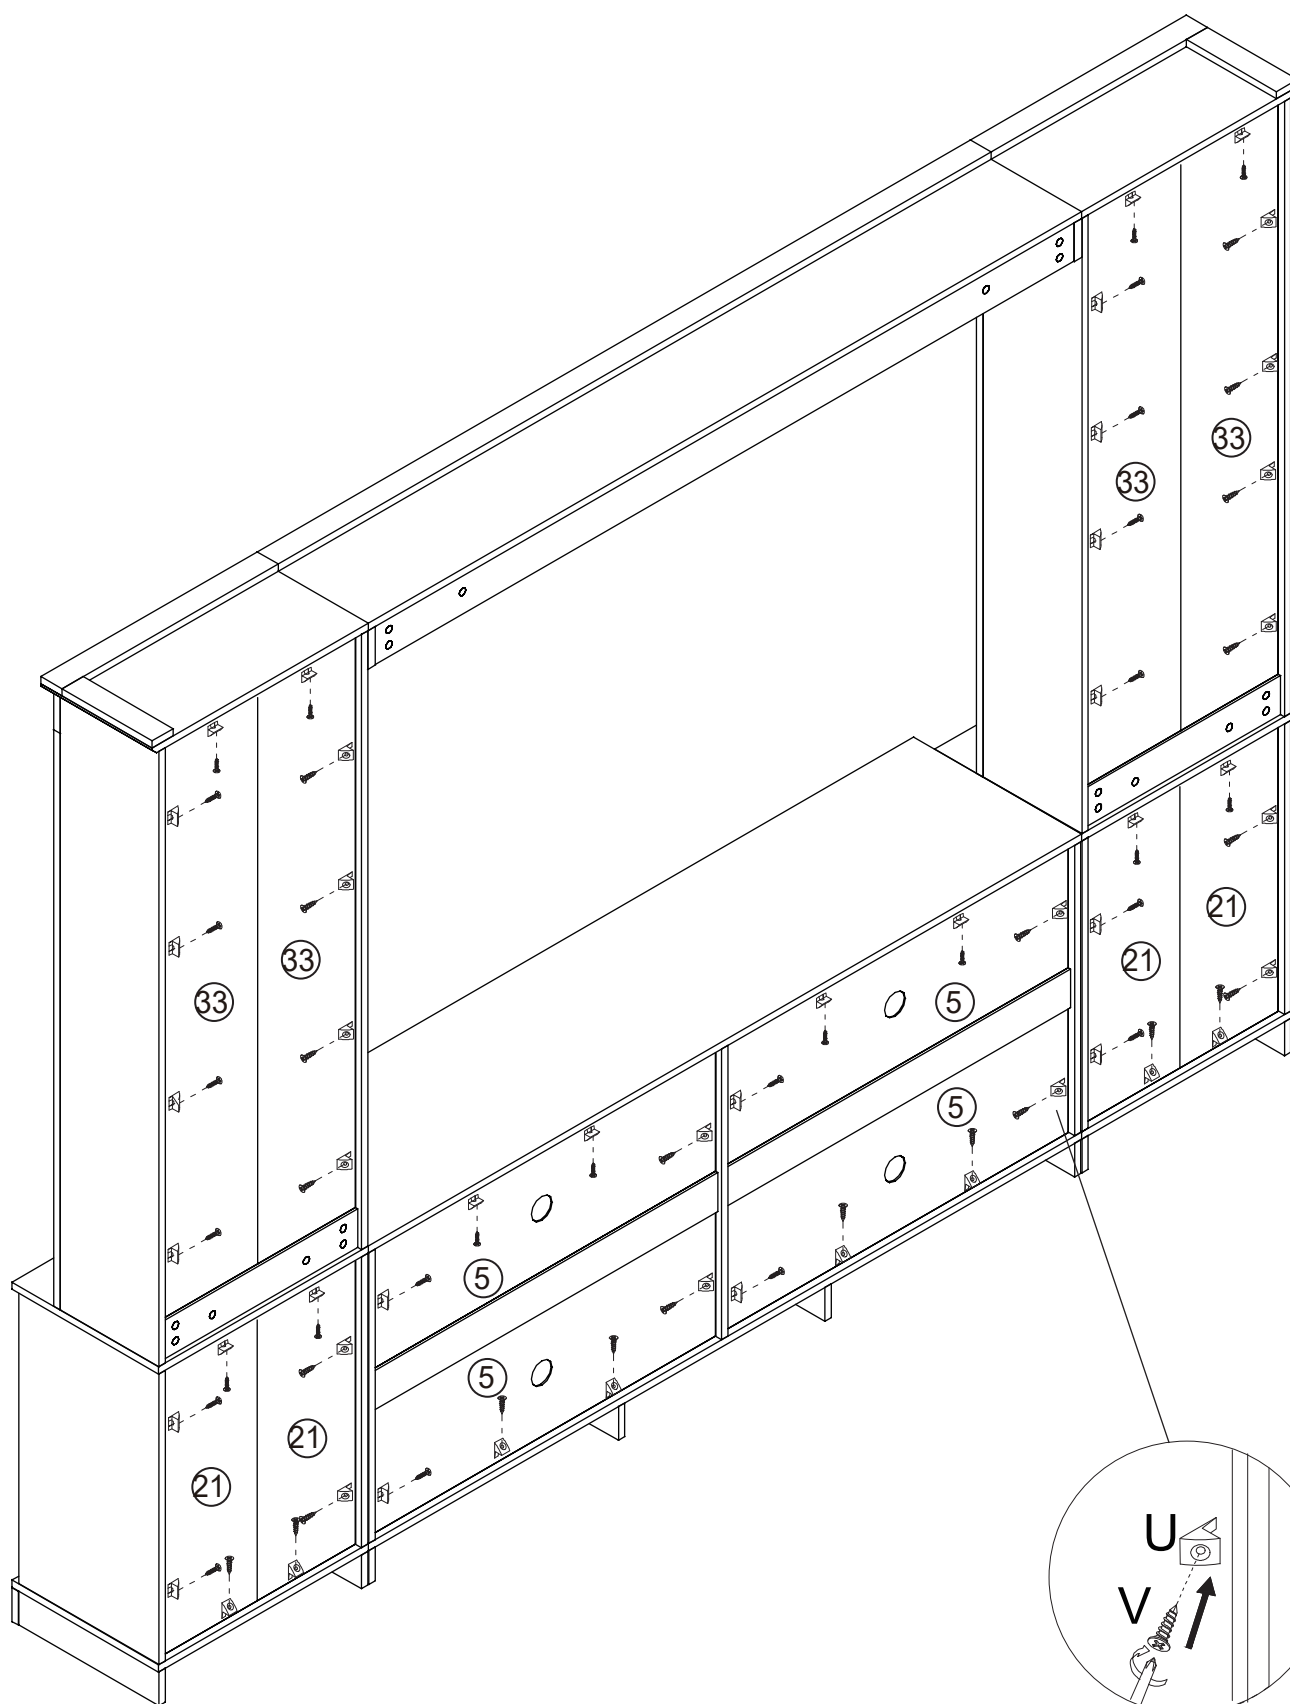

U*52





V*52



As the picture shows,
Fix hardware "U" into the gap with screws
to make the back panel more stable.

Step 68


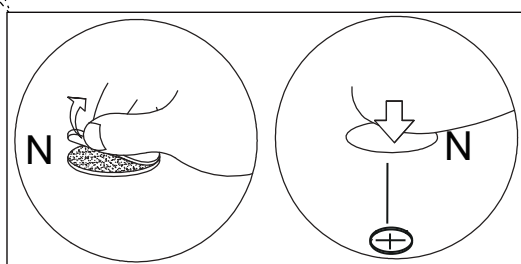
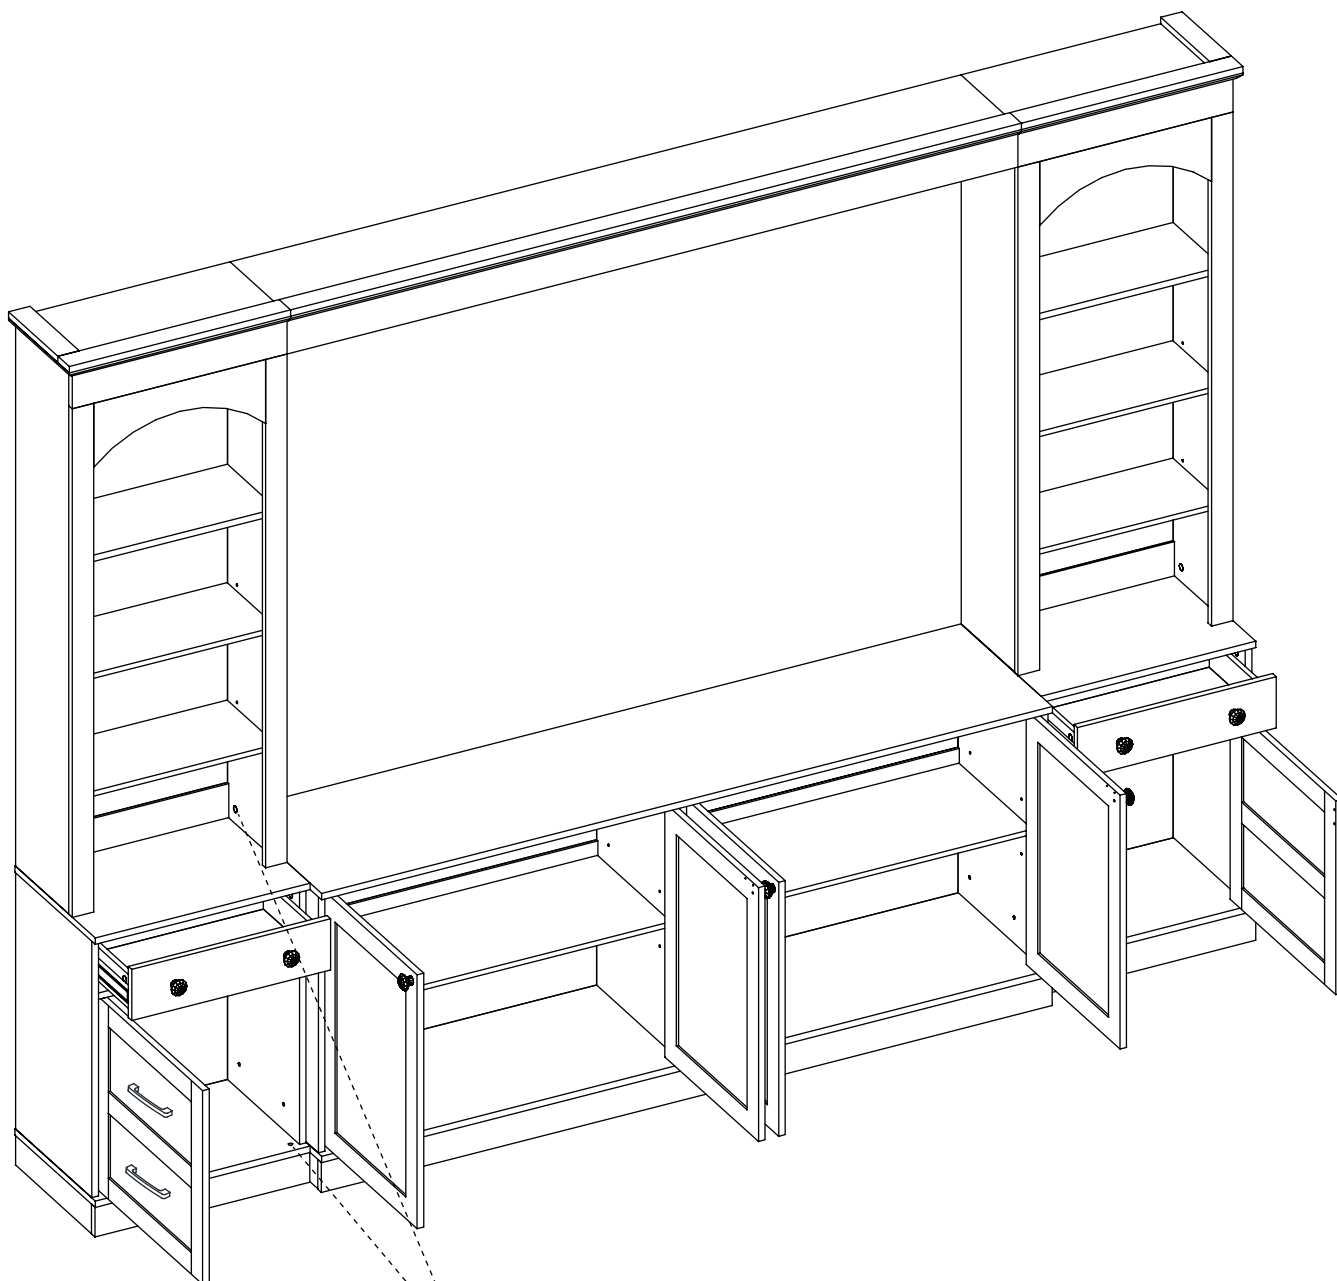


N*54



Please stick the hardware "N" on the exposed hole that makes your product more beautiful.

Step 69

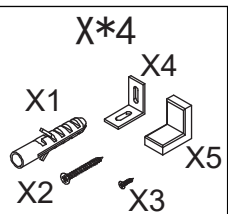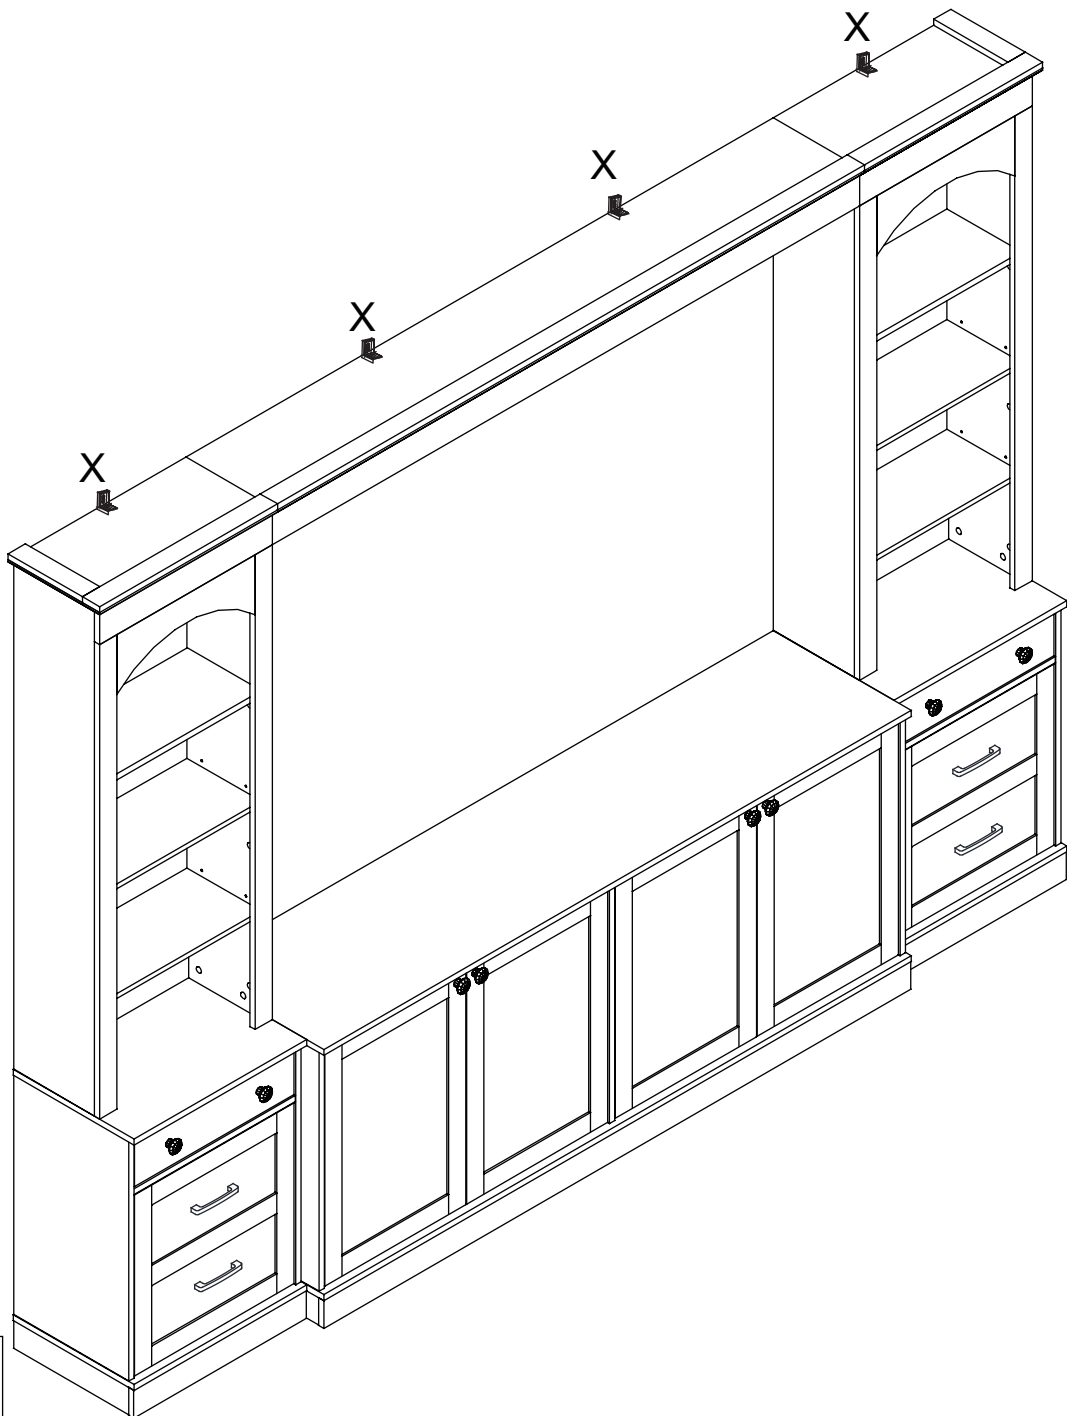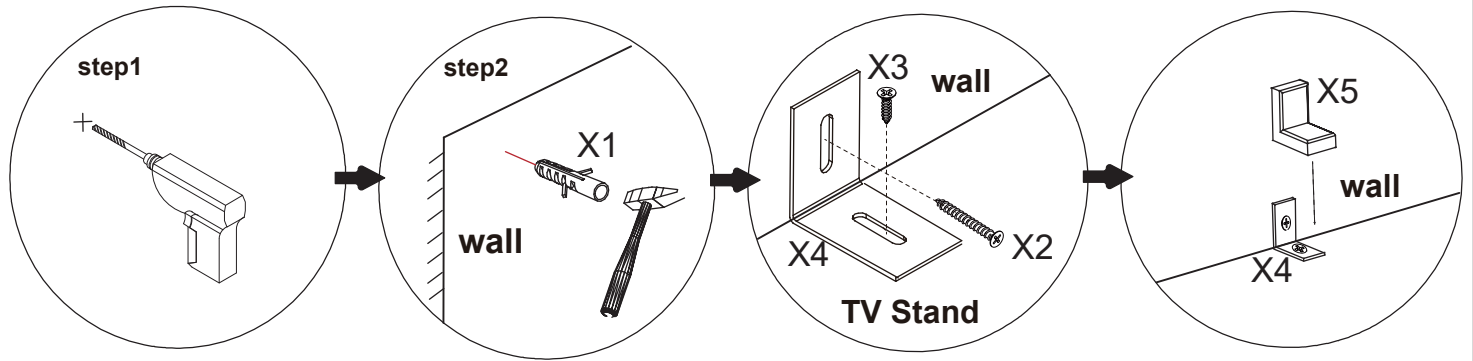

FINISH

