

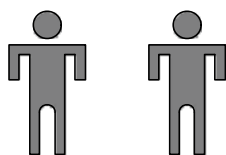


ASSEMBLY INSTRUCTIONS








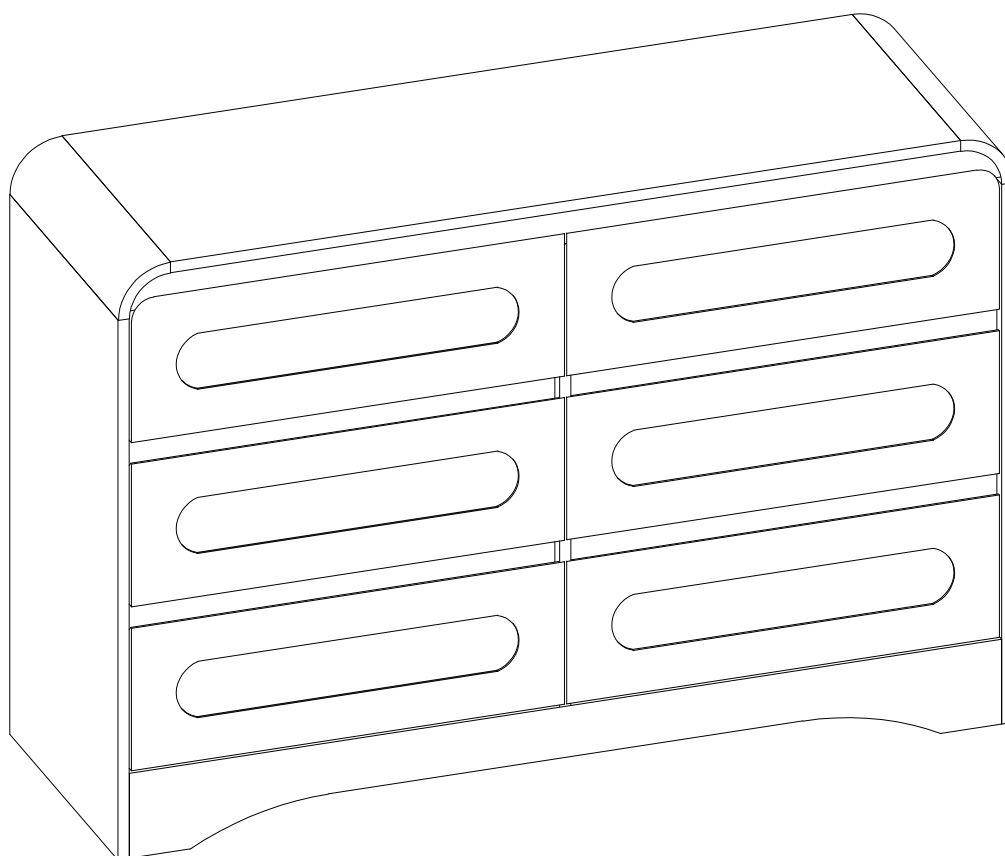


2 people for assembly


PACKAGE INCLUDE

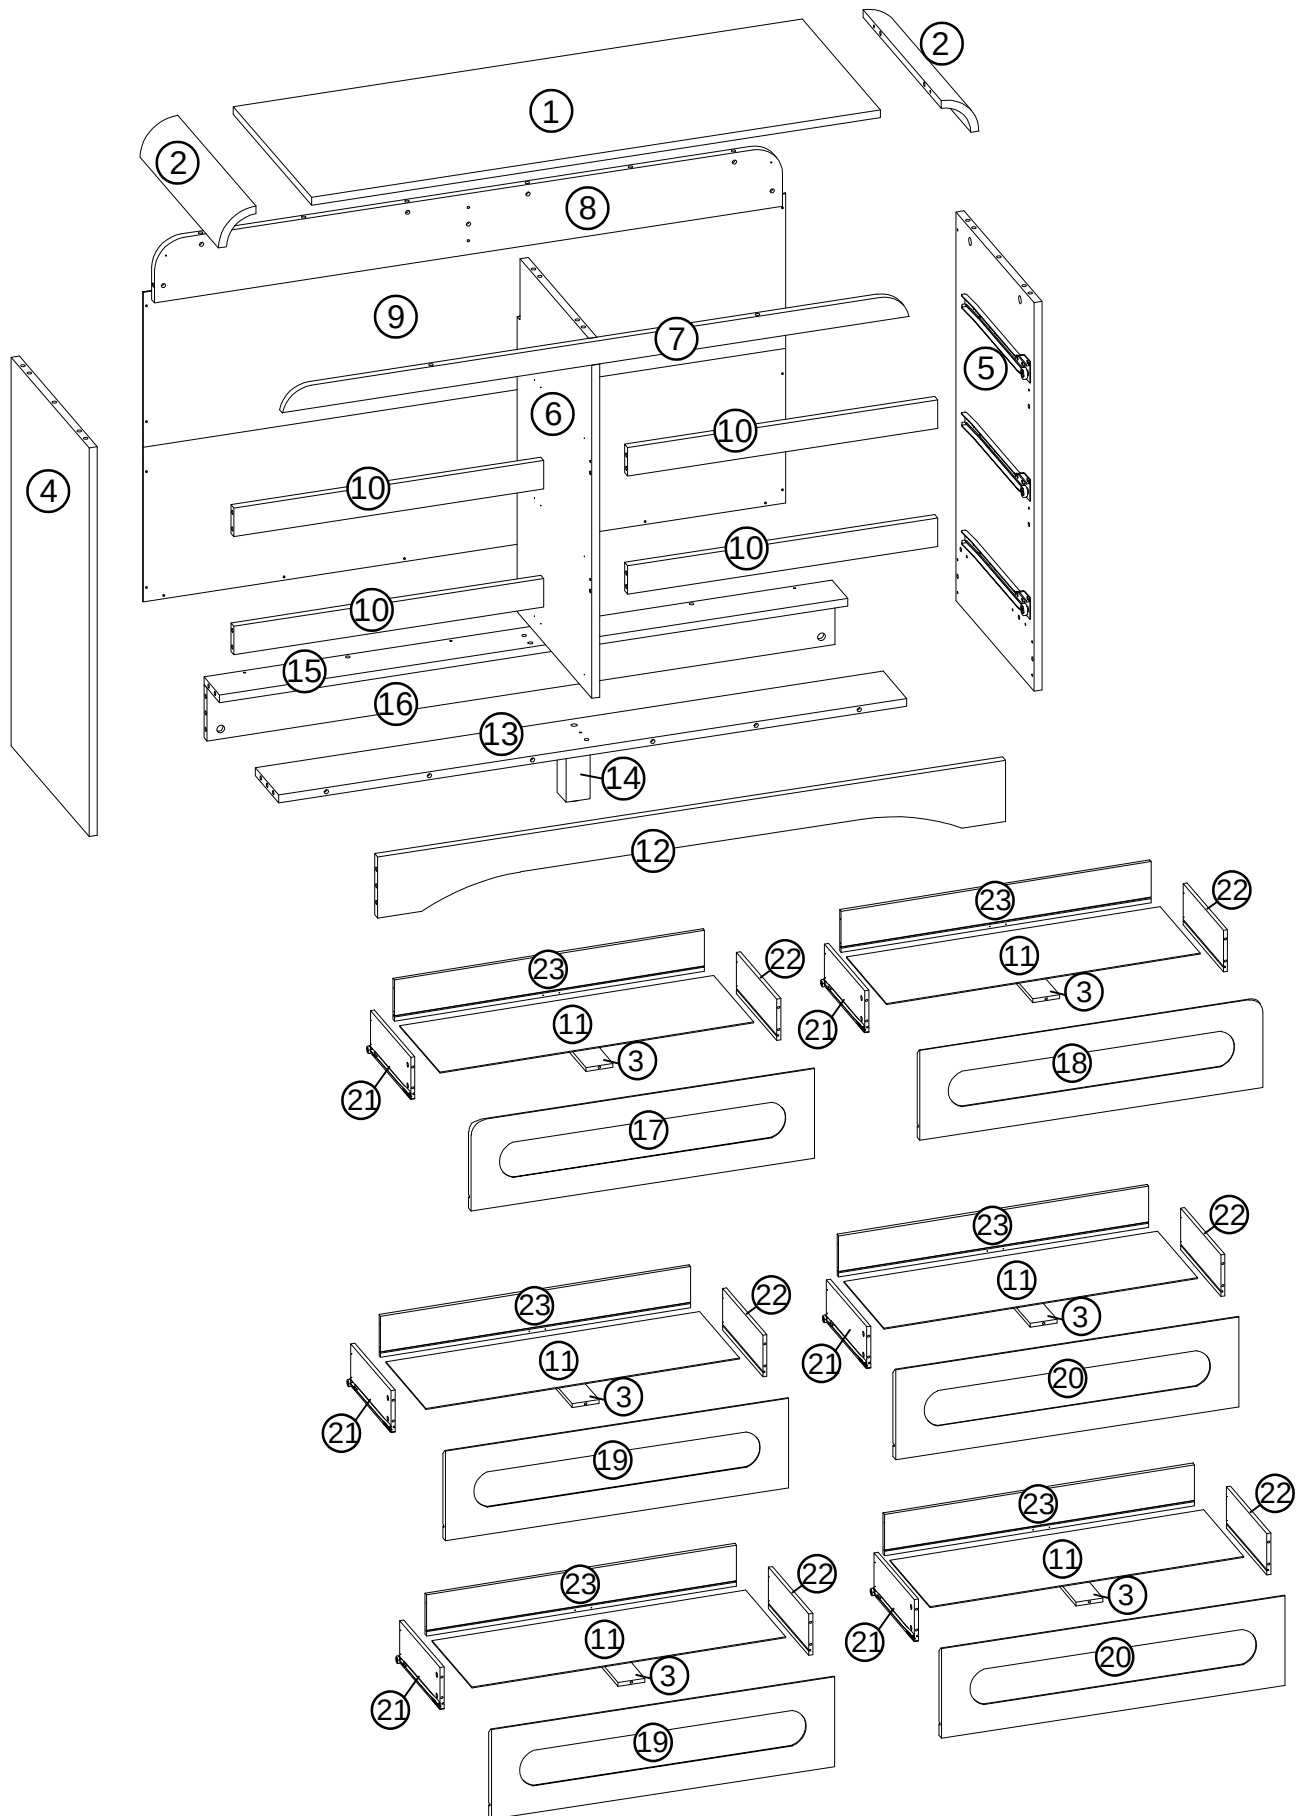


PACKAGE CONTENT

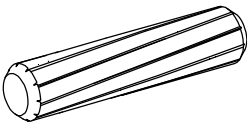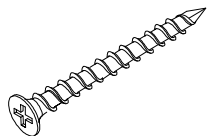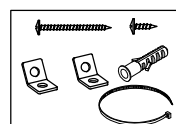Ø8X30MM  (A) 39X+1	Ø3.5X15MM  (B) 22X+1	Ø6X34MM  (C) 76X+2	Ø15X12MM  (D) 46X+2
Ø15X9MM  (E) 30X+1	Ø4X50MM  (F) 2X+1	Ø4X38MM  (G) 42X+2	 (H) 4X
Ø4X12MM  (I) 8X+1	 (J) 24X+1	 (K) 2X	


How to use the cam lock system

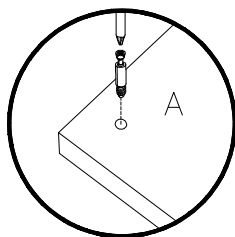


1. Screw cam bolt into panel

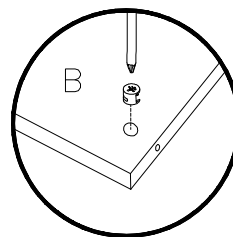


2. Push cam into panel - arrow feature on cam top points to panel edge

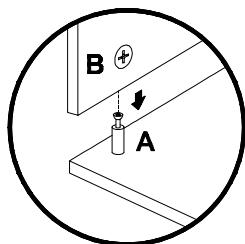

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

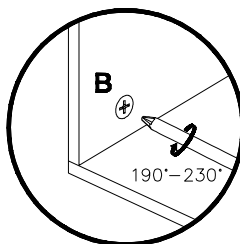


4. Rotate cam(s) clockwise 190°-230° to lock panels together

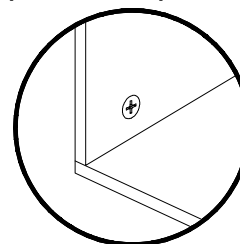

5. Panels should be tight against each other and connection should be rigid


Insert the wood dowel [A] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

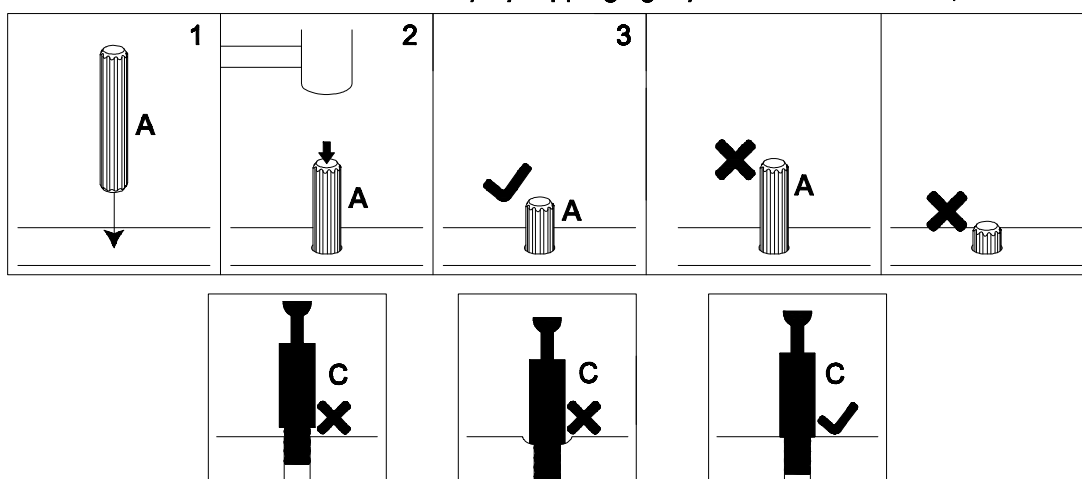

⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Now you can assemble the cabinet.

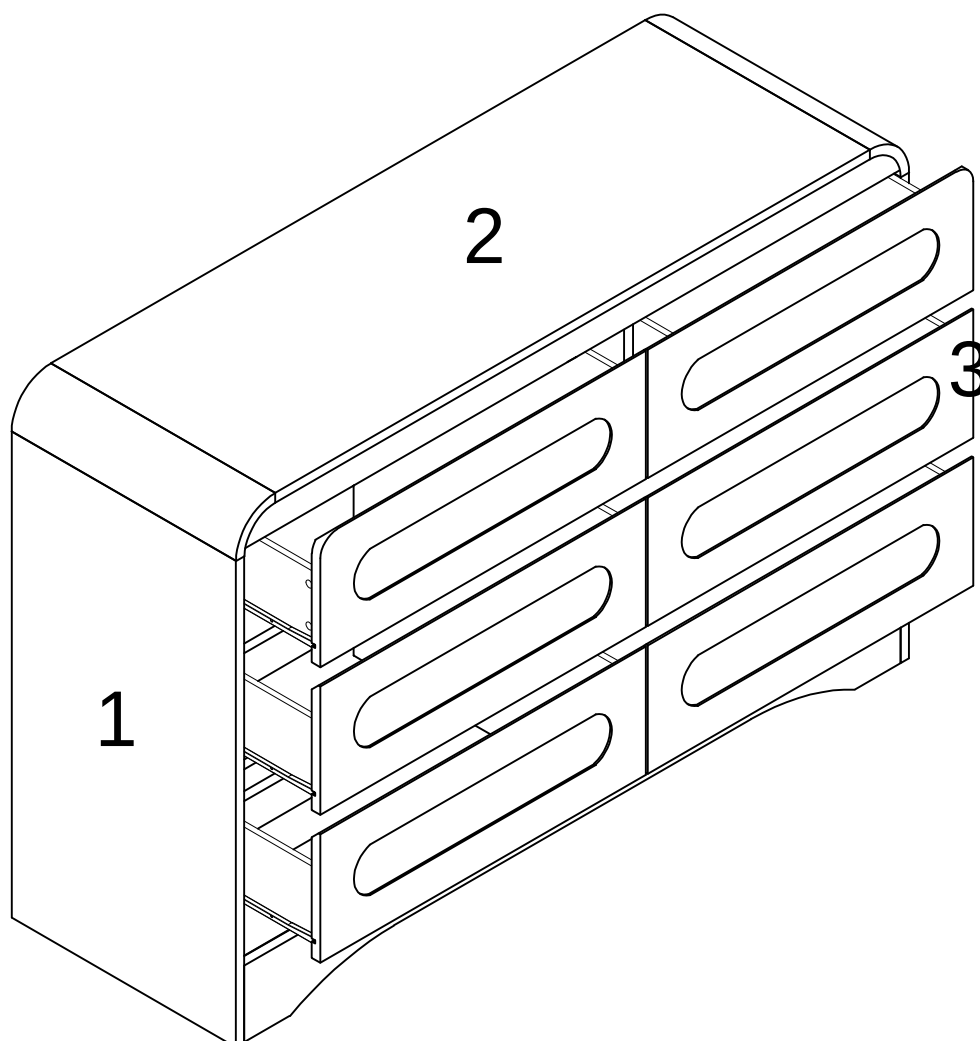





The installation process is divided into three parts:



1. Install the cabinet body
2. Install the curved cabinet top
3. Assemble the drawers

Tip:




Using an electric screwdriver will make assembly easier.

STEP 1

 ① X1	 ② X2
 C X18	 A X4
	 D X4


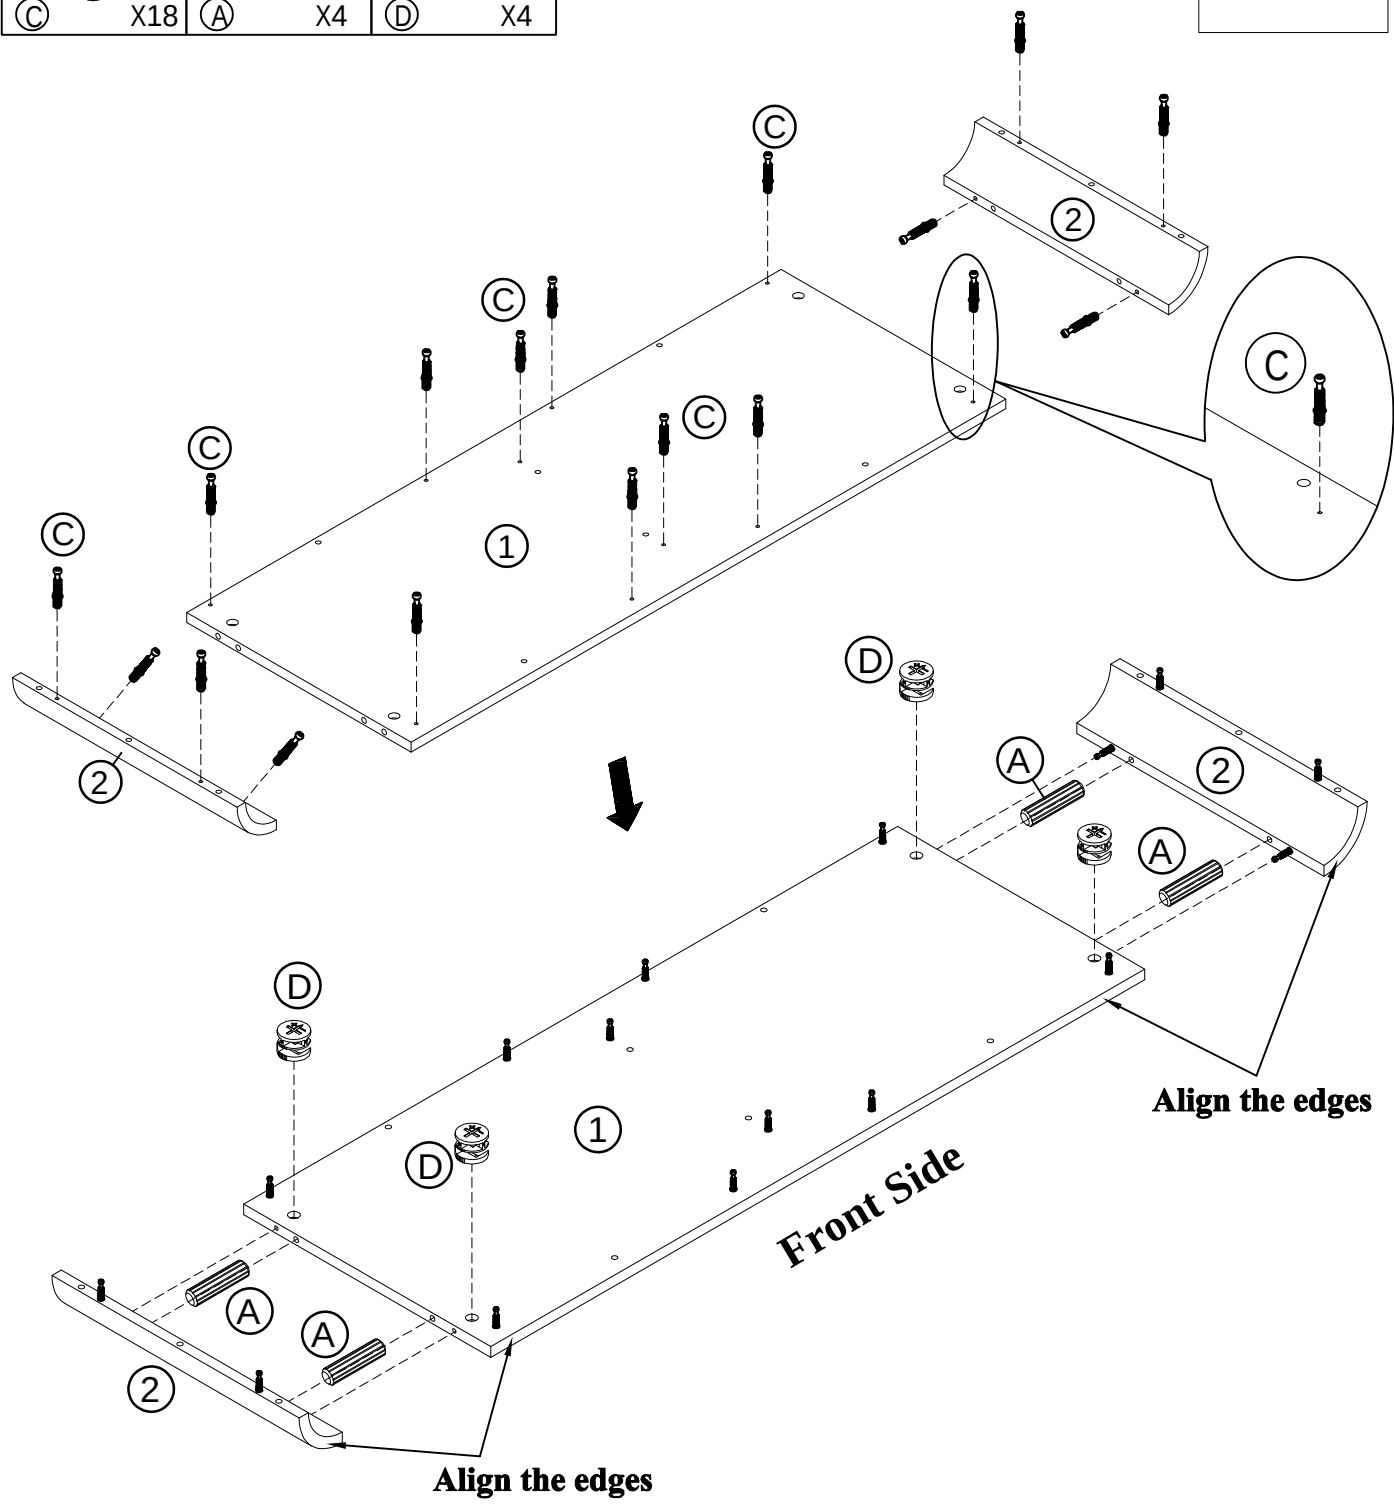
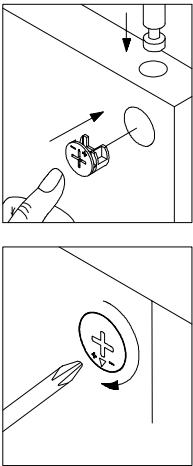


STEP 2

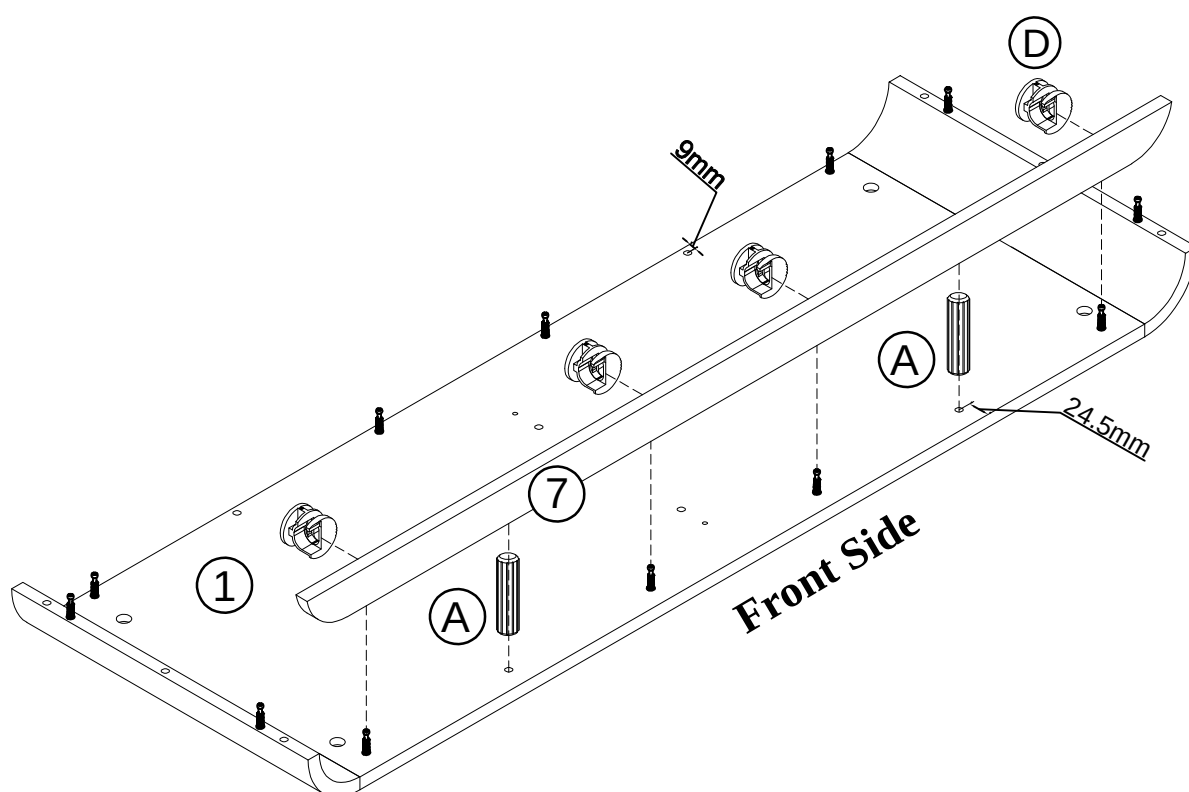
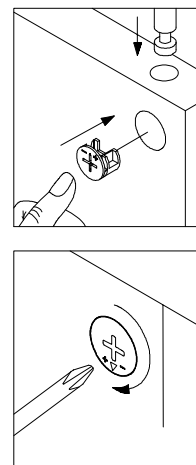
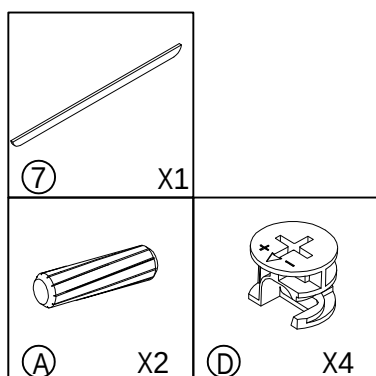


Note: When installing panel 7 onto panel 1, pay close attention to the edge spacing of the holes on panel 1.





STEP 3

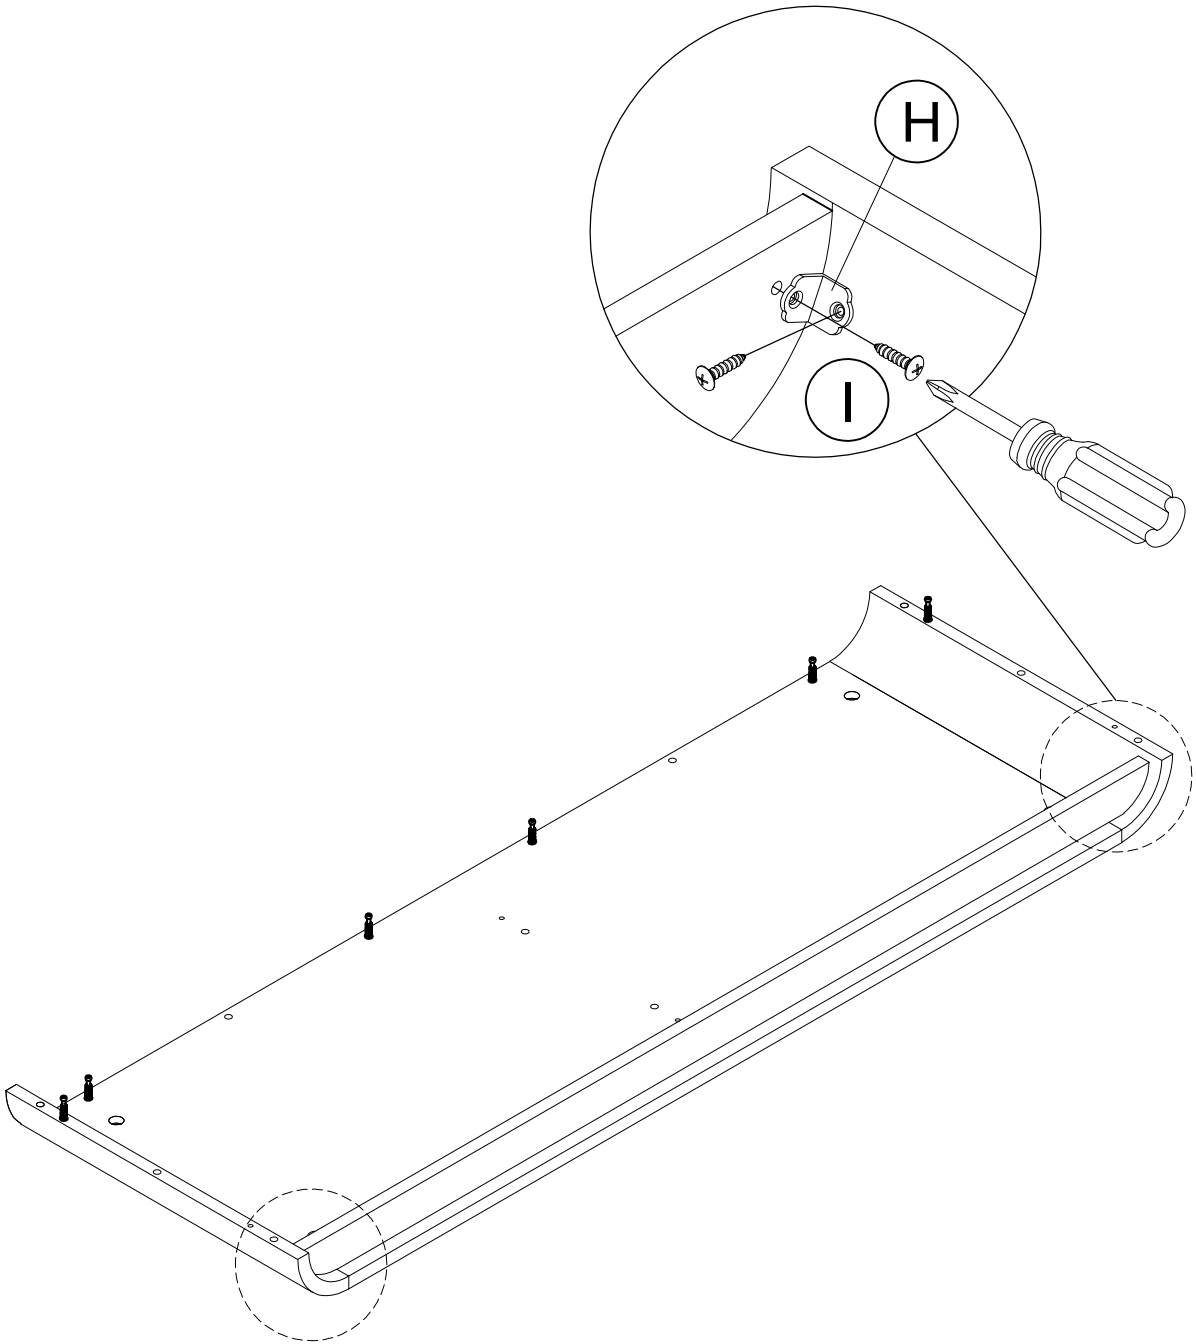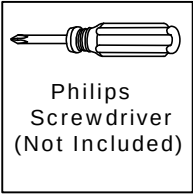
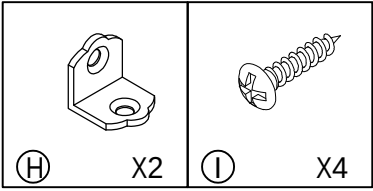


STEP 4

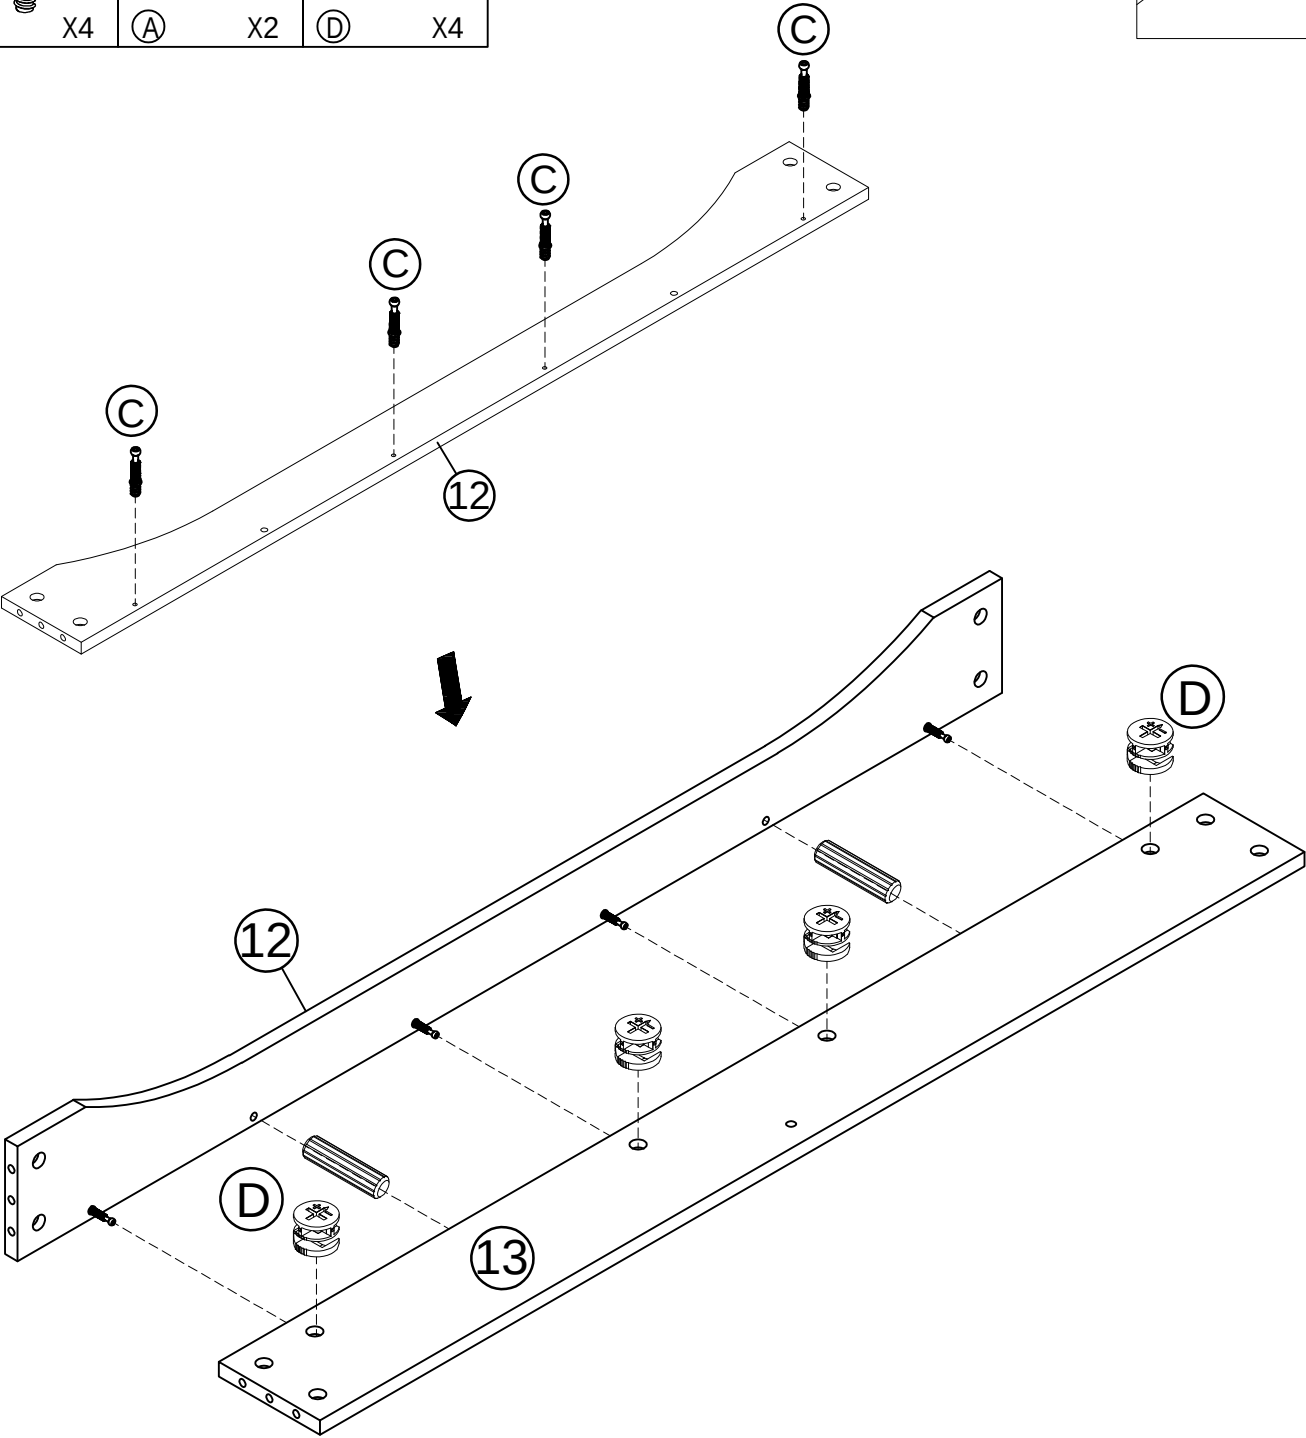
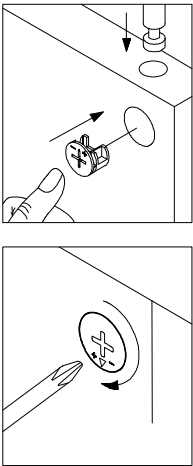
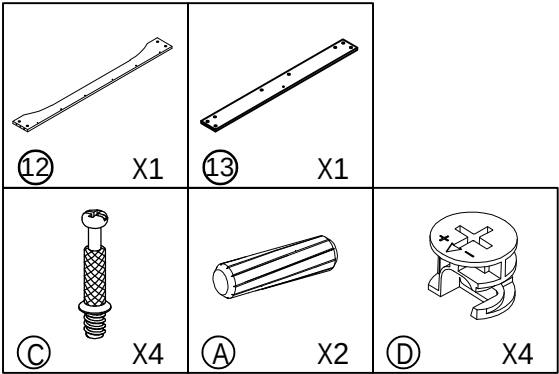


STEP 5

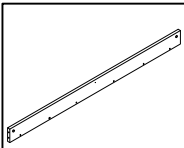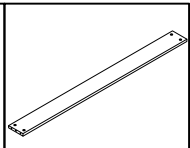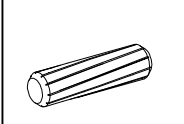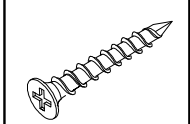 15 X1	 16 X1
 A X2	 G X4

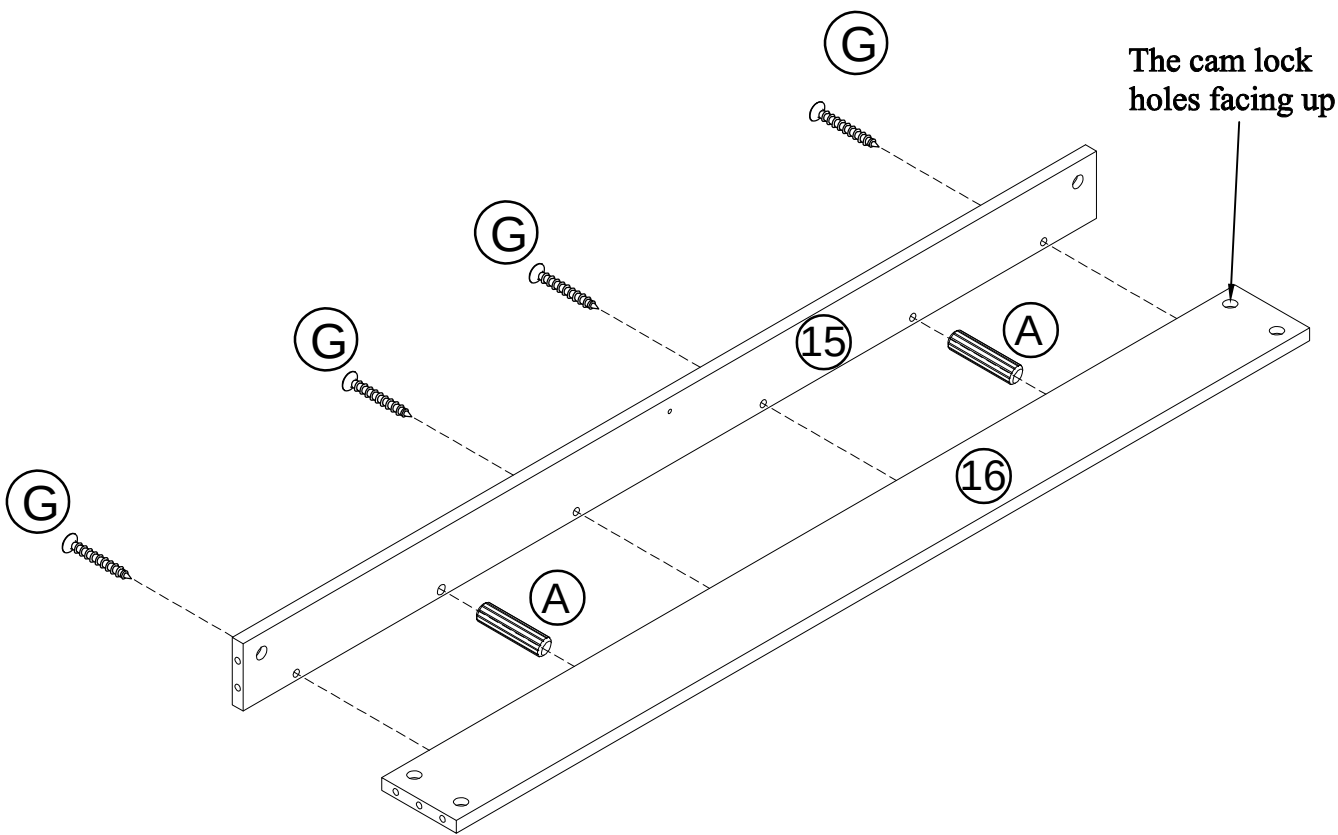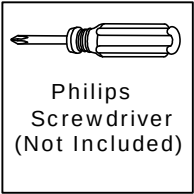


STEP 6

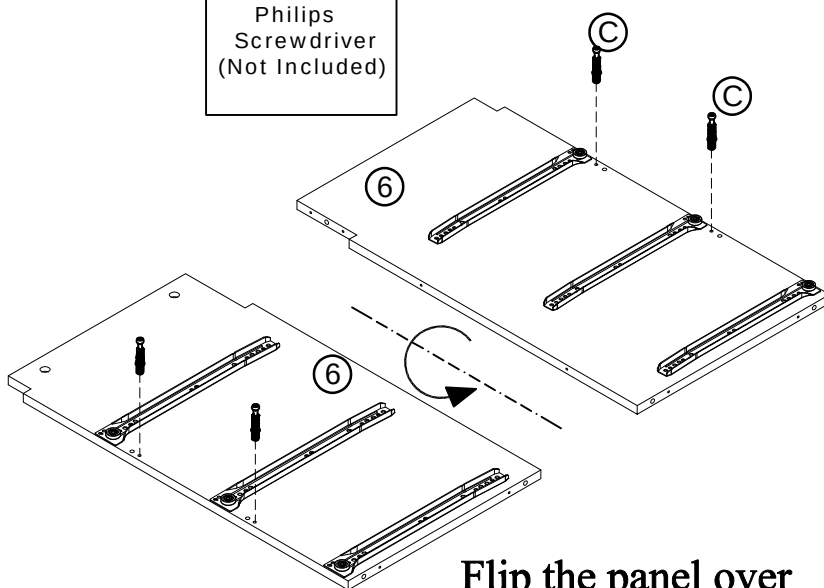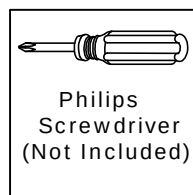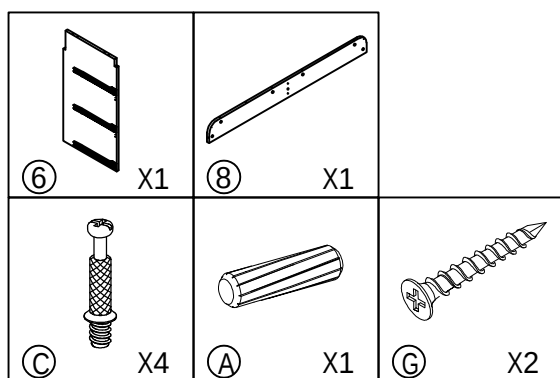


The curve edge facing up

Flip the panel over


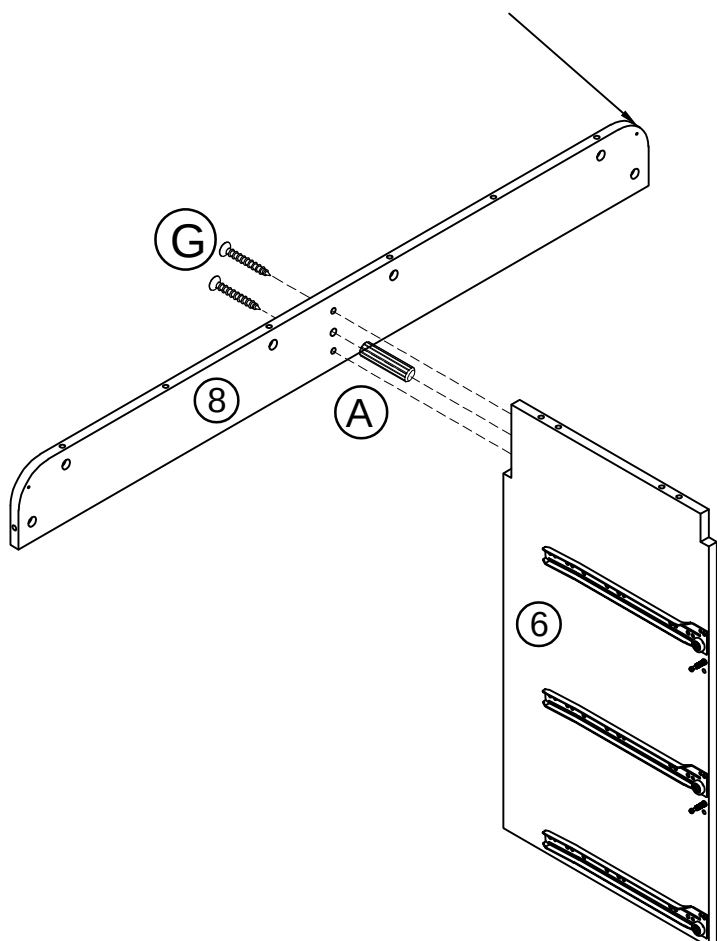


Note: ask for assistance on this step.

STEP 7






Philips
Screwdriver
(Not Included)







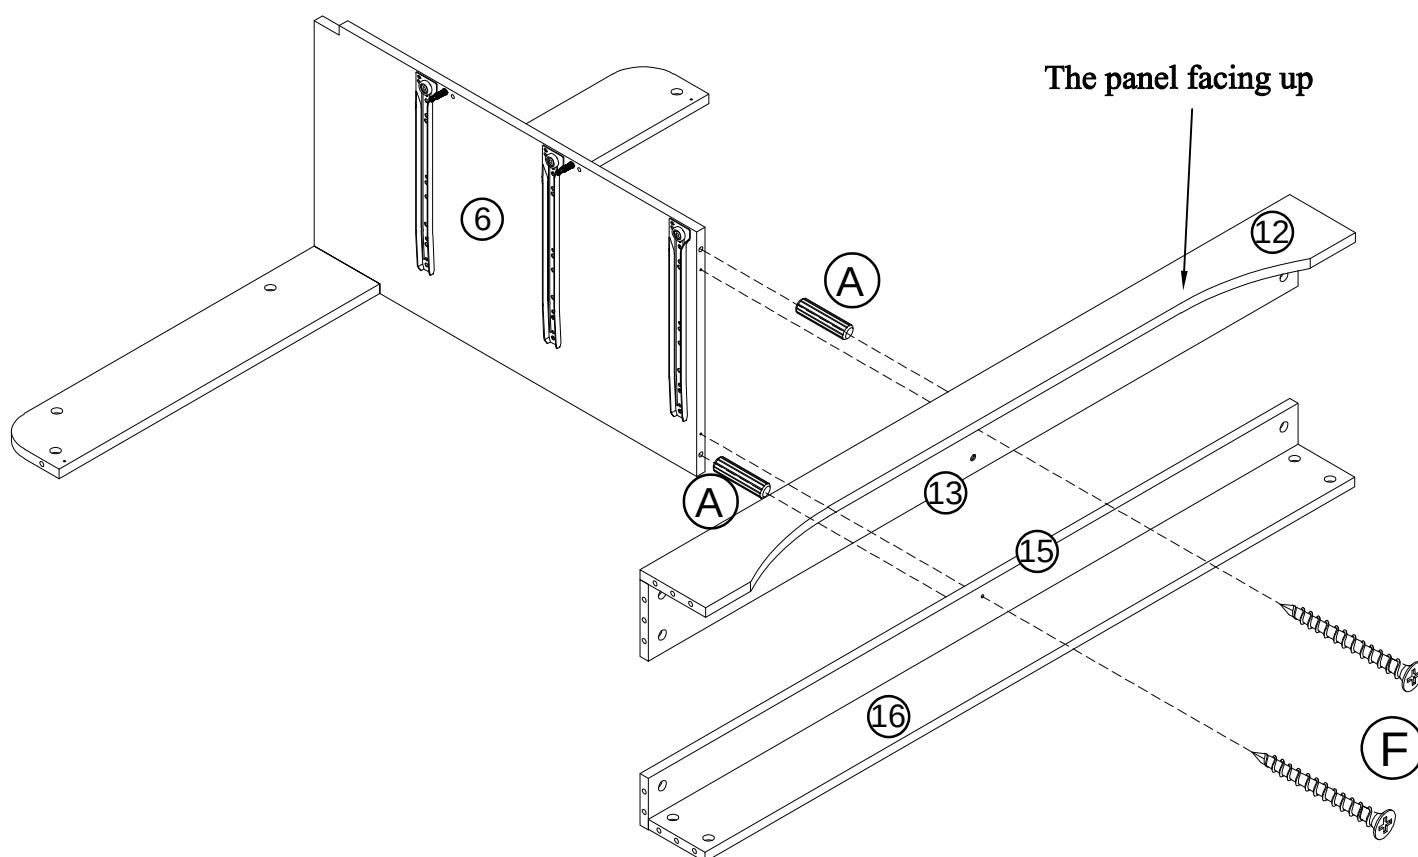
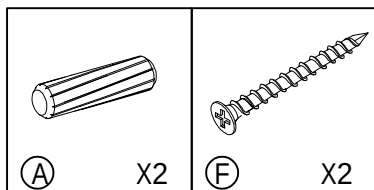


Note: ask for assistance on this step.

STEP 8

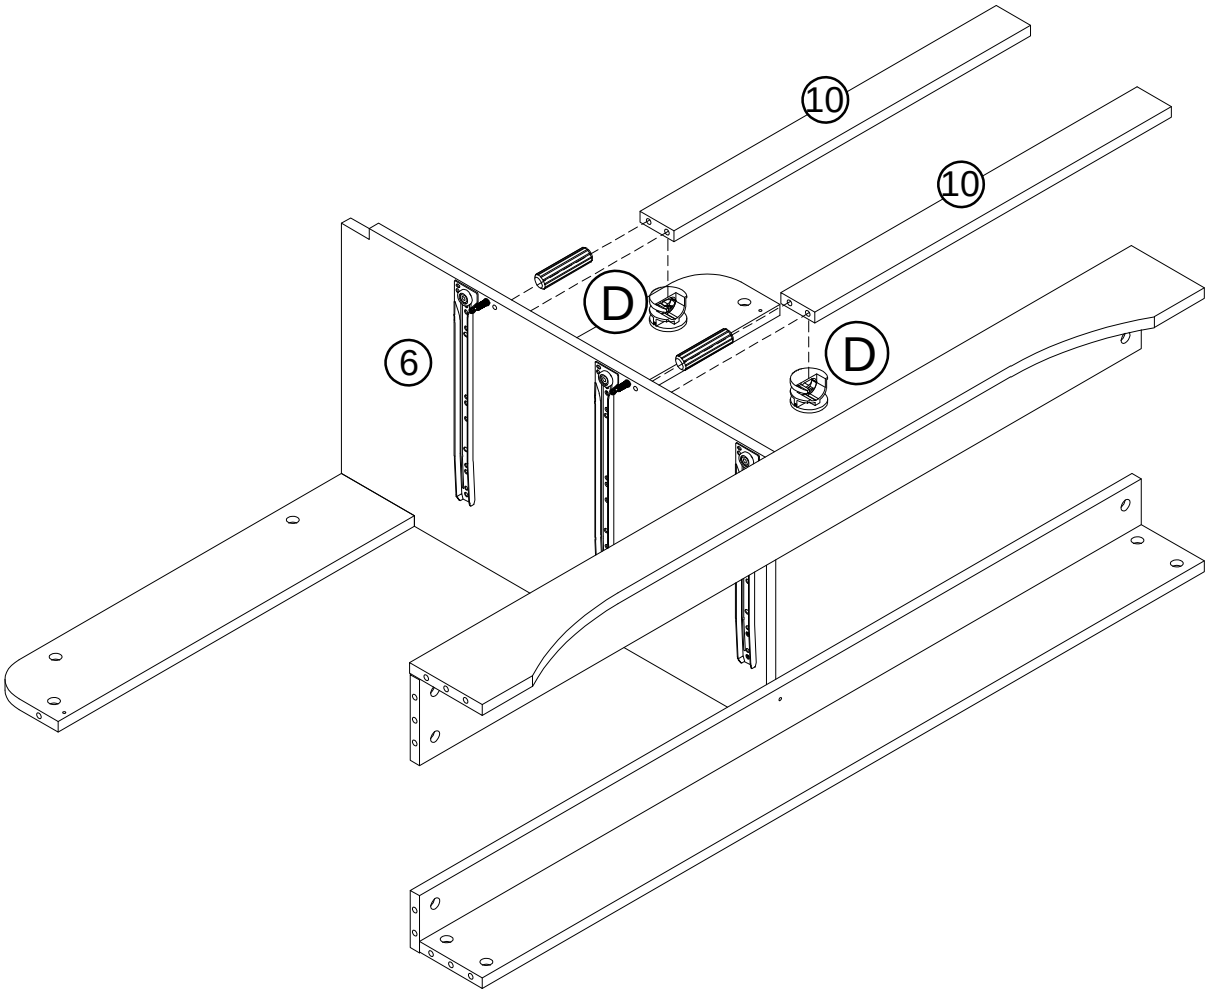
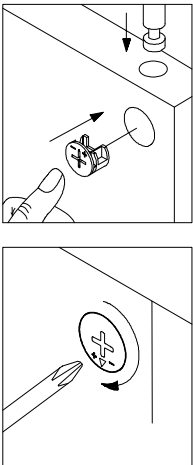
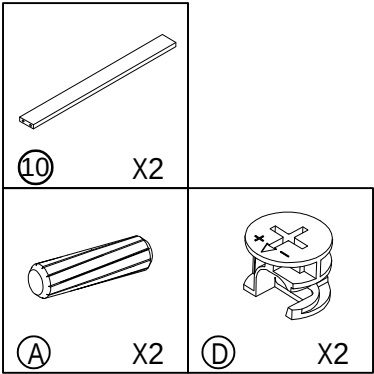


STEP 9

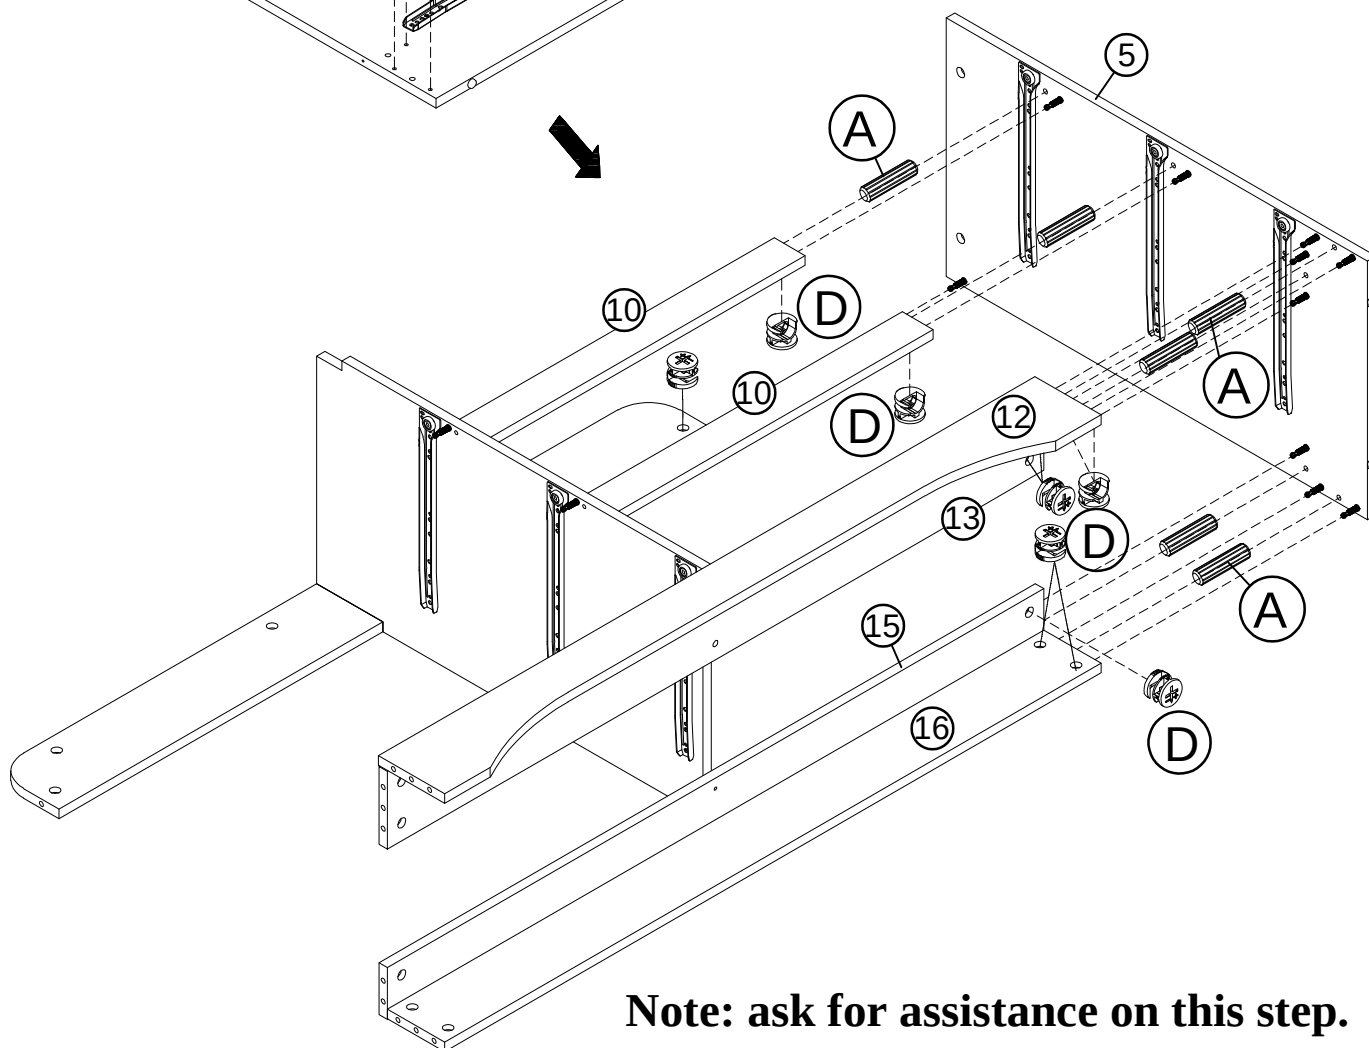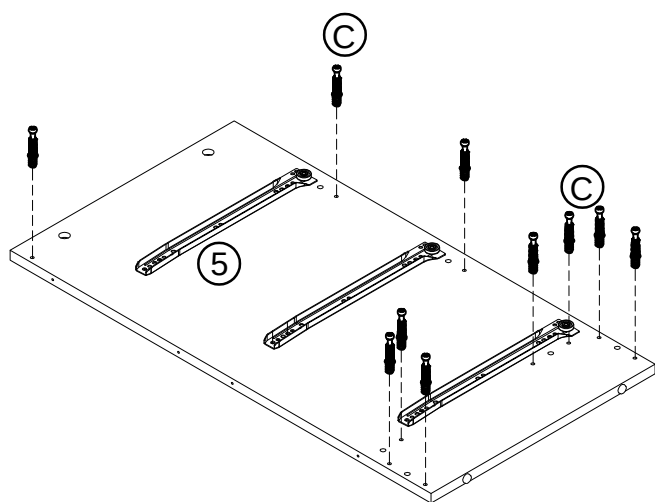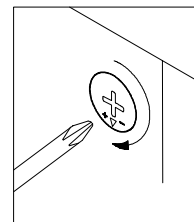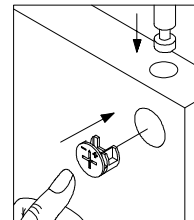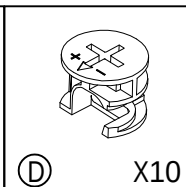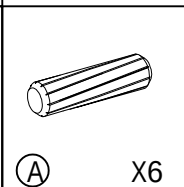
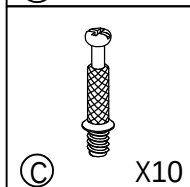
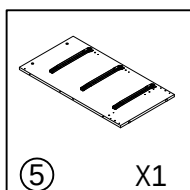


Note: ask for assistance on this step.

STEP 10

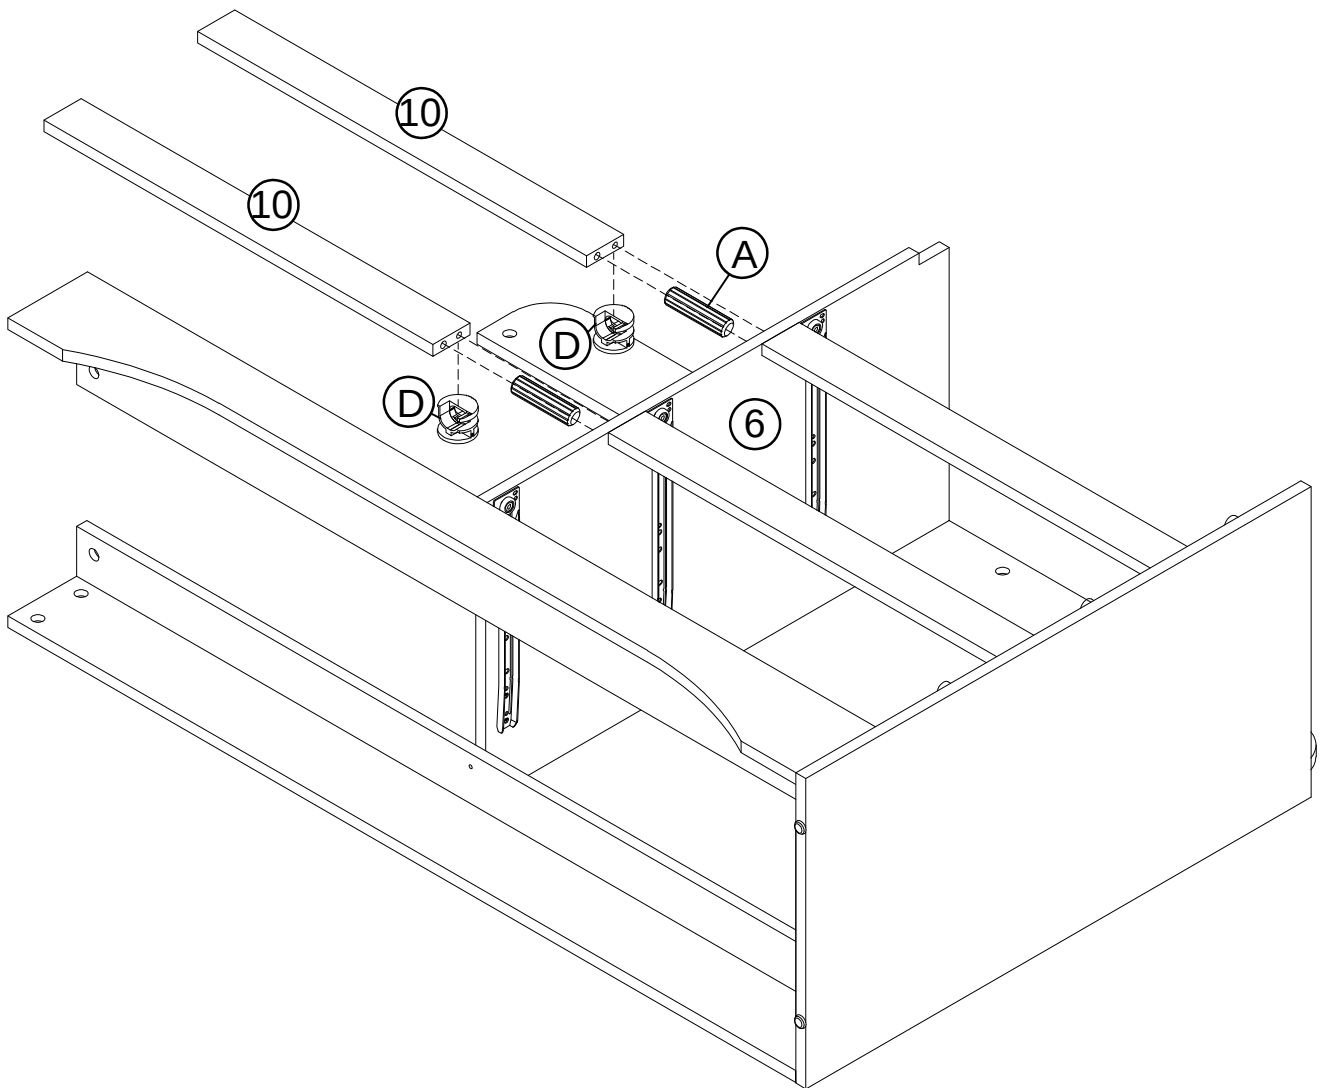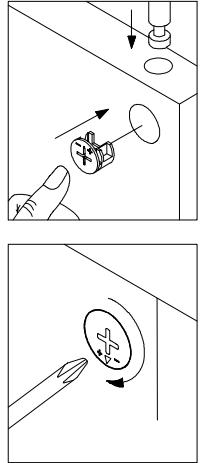
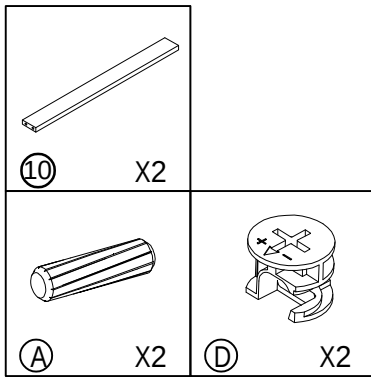


STEP 11

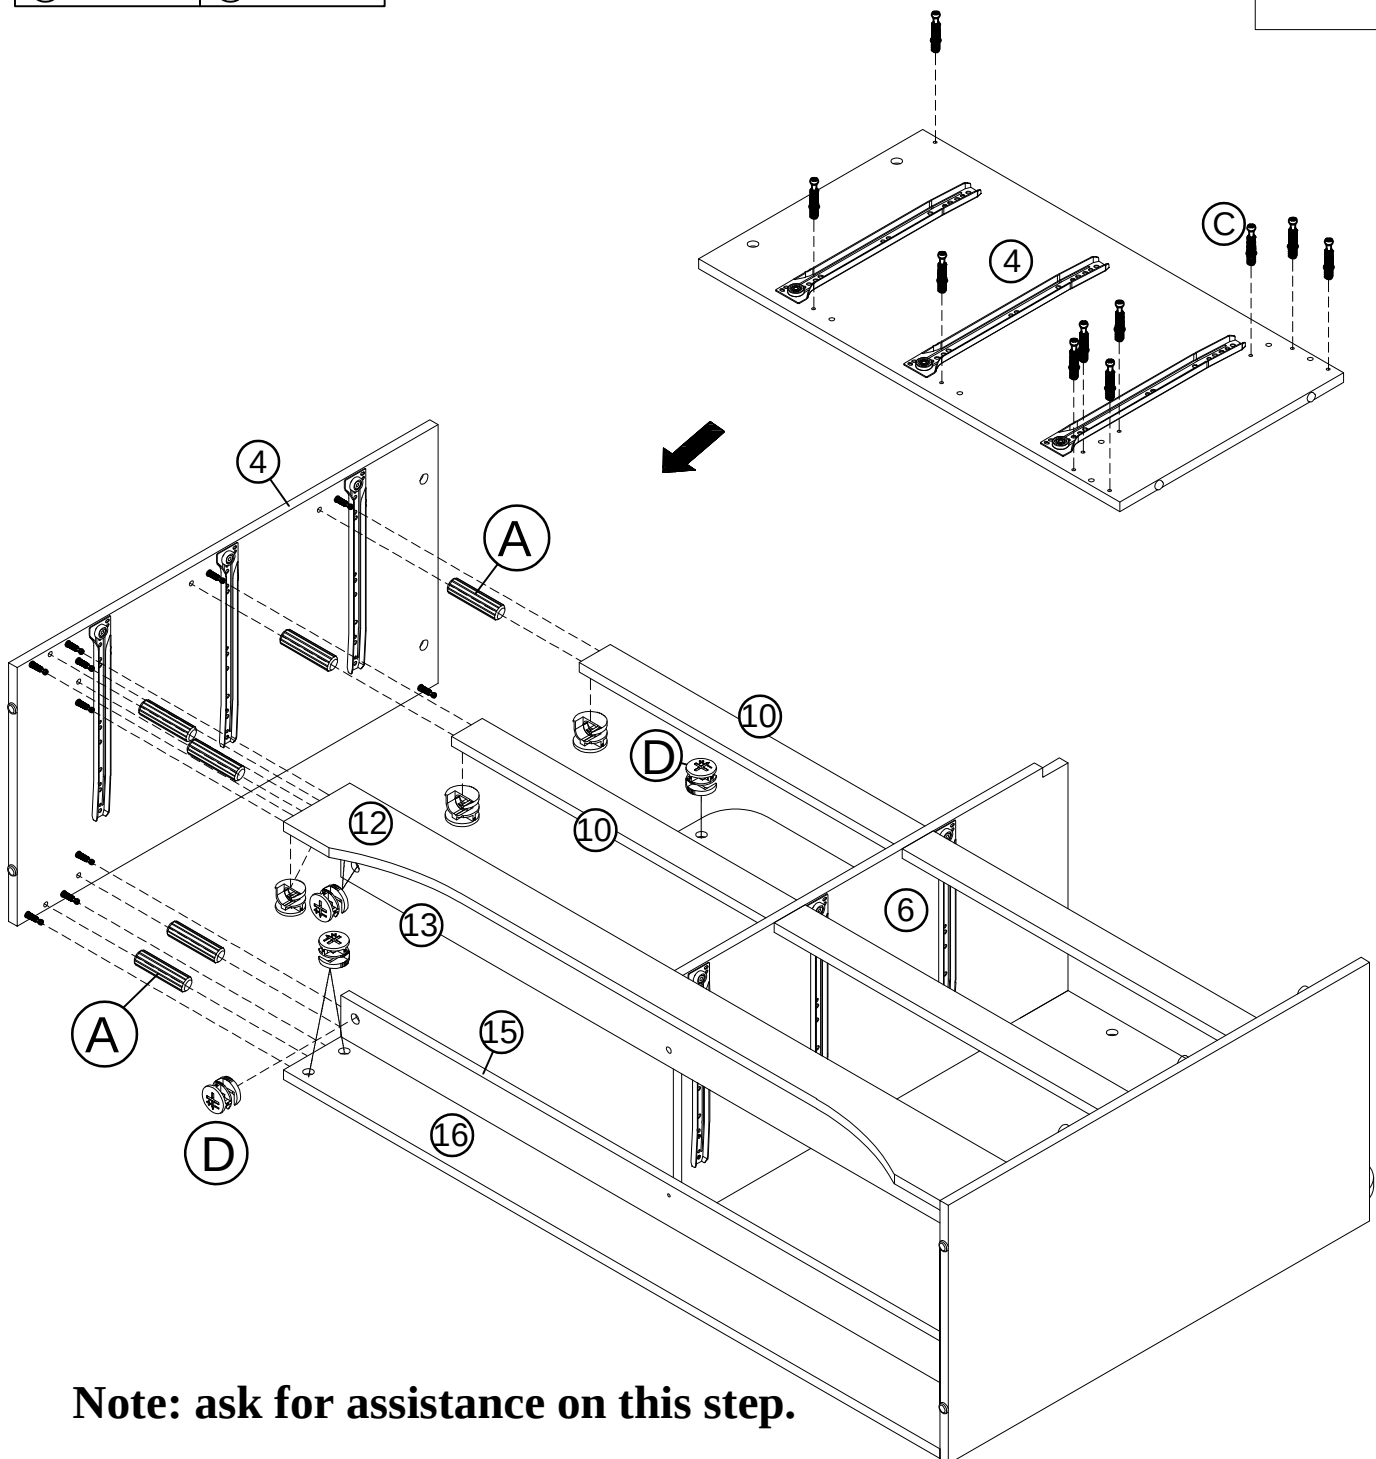
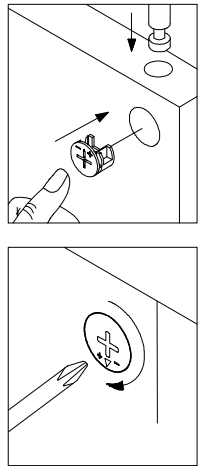
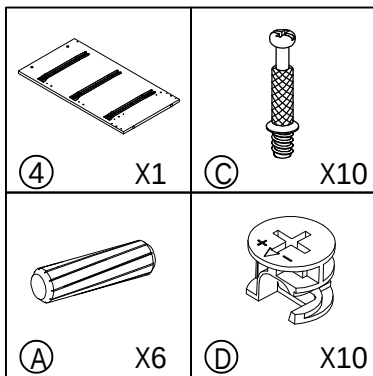


Note: ask for assistance on this step.

STEP 12


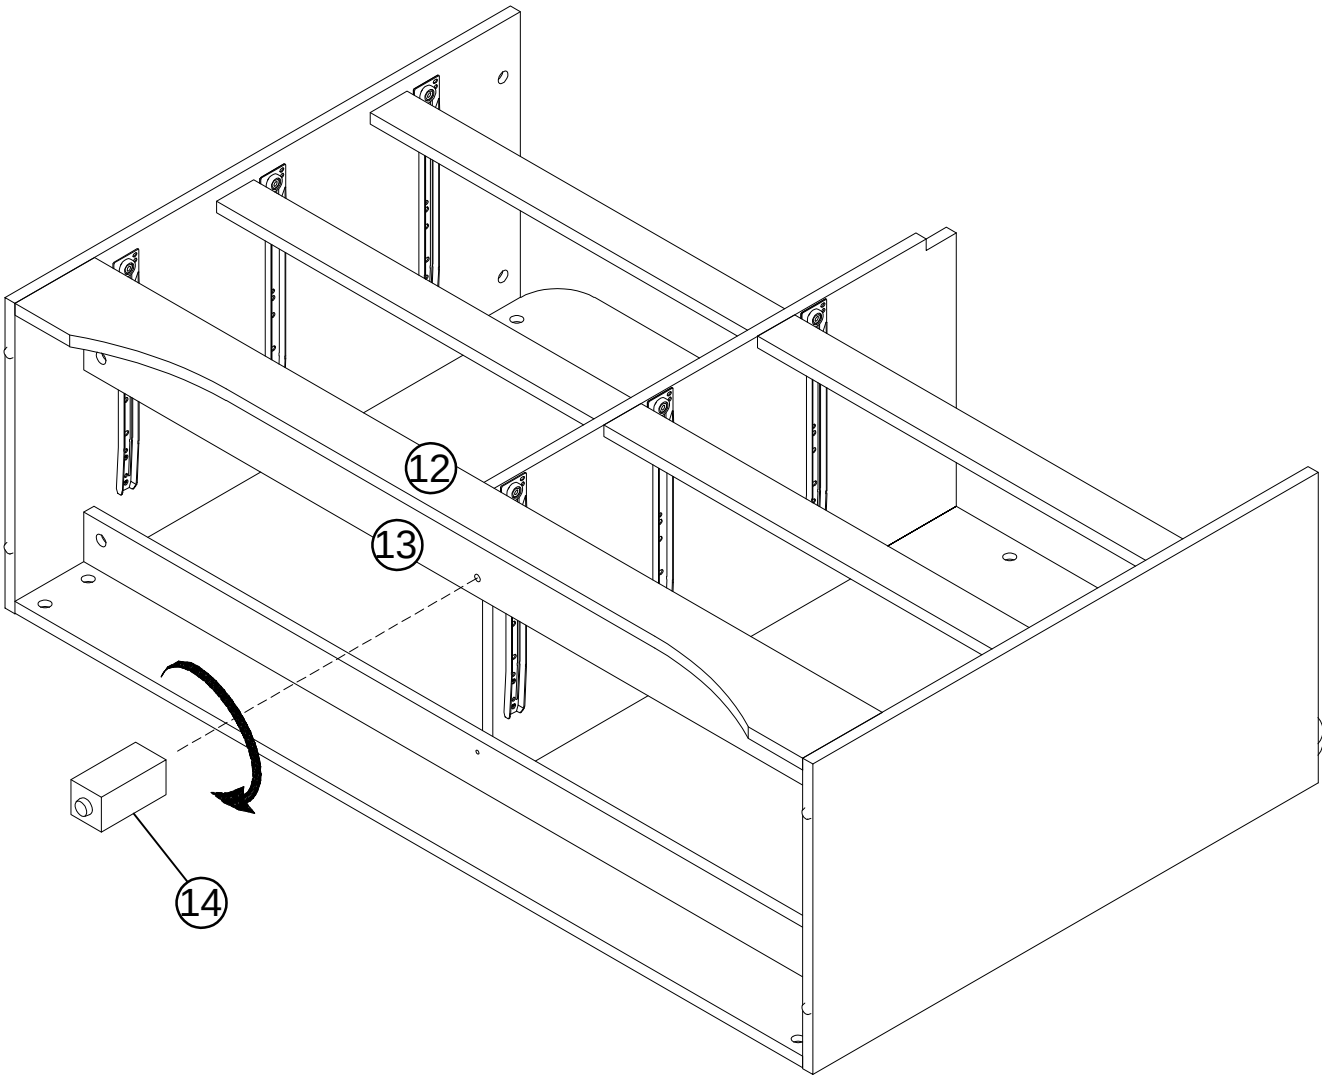
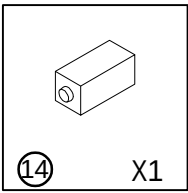


STEP 13

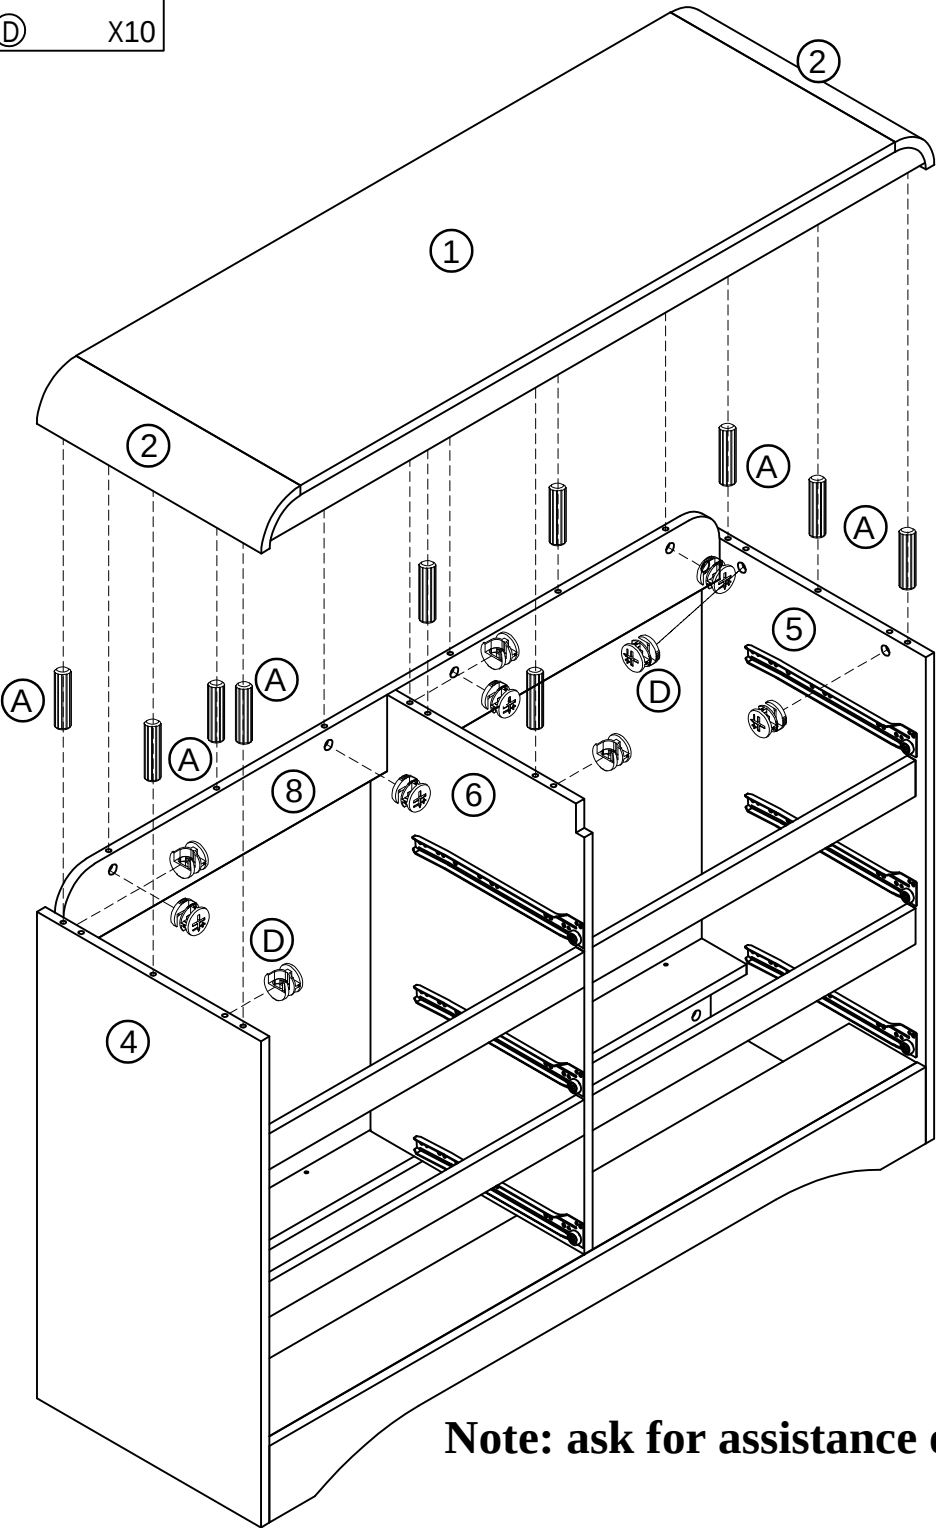
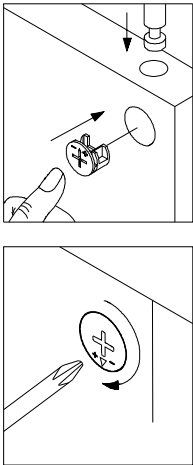
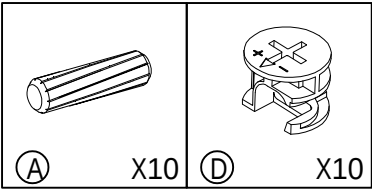


Note: ask for assistance on this step.






STEP 14

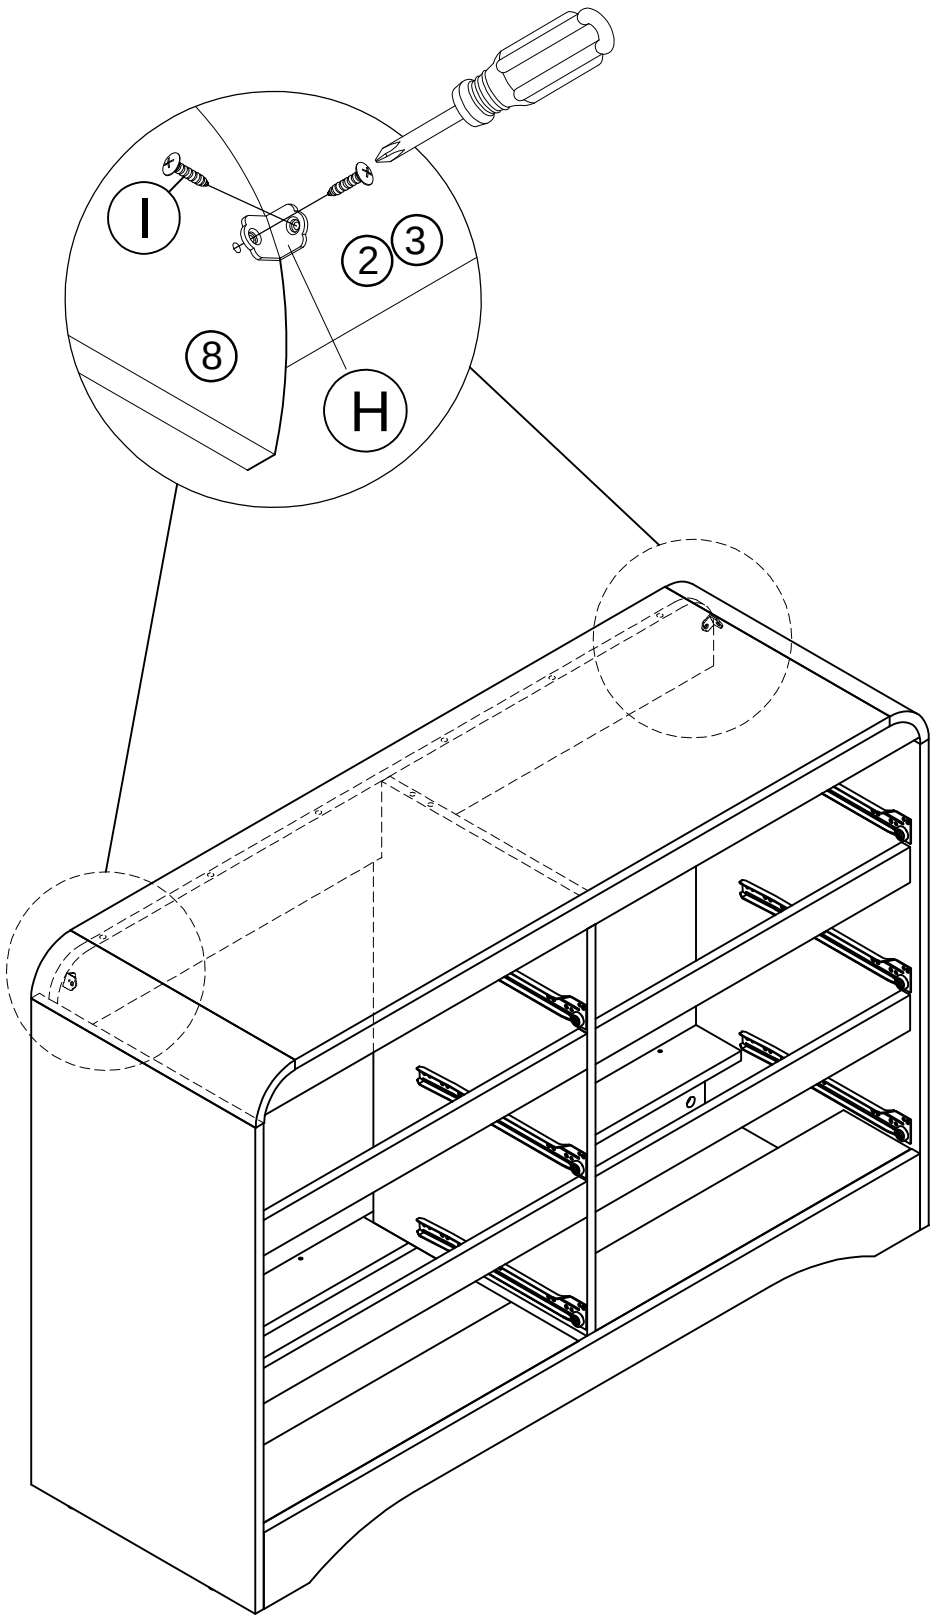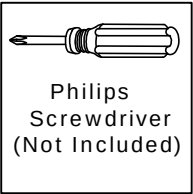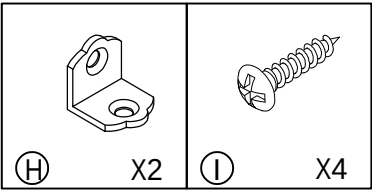


STEP 15

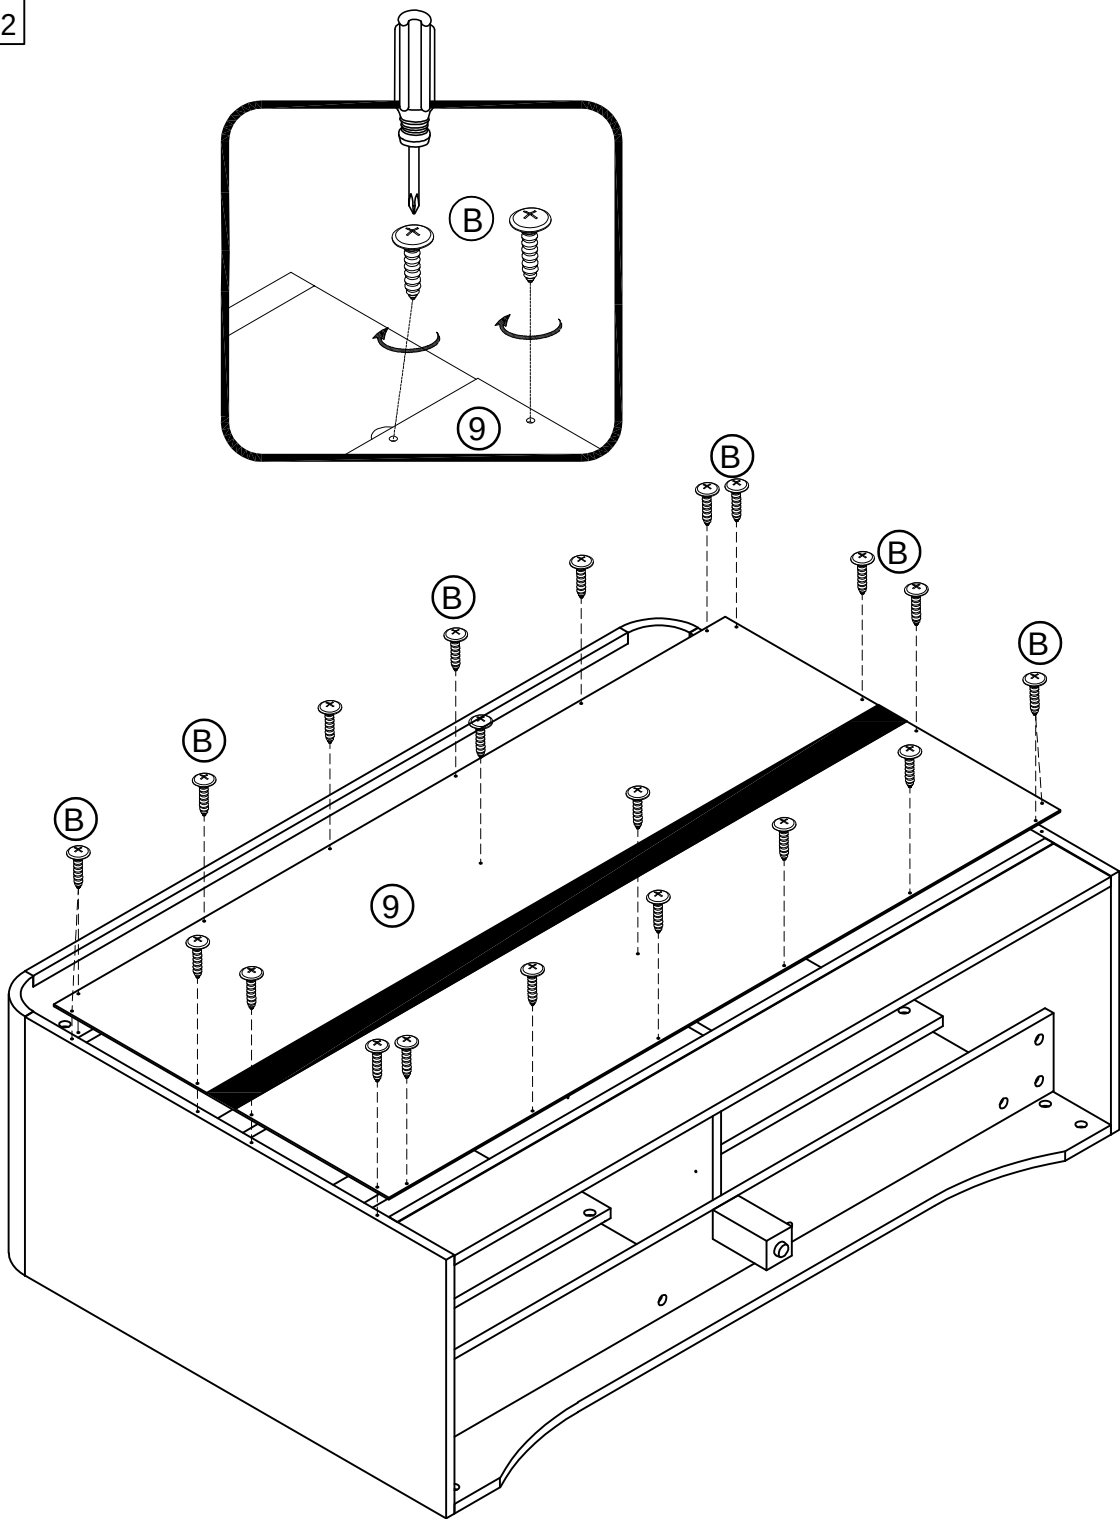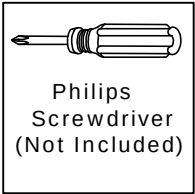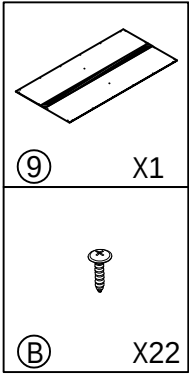



STEP 16

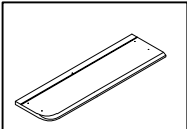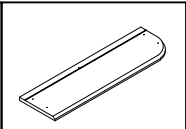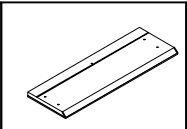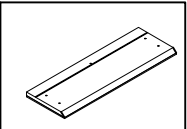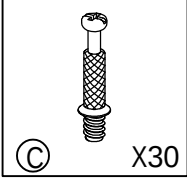 ①⑦ X1	 ①⑧ X1	 ①⑨ X2	 ②① X2
 C X30			






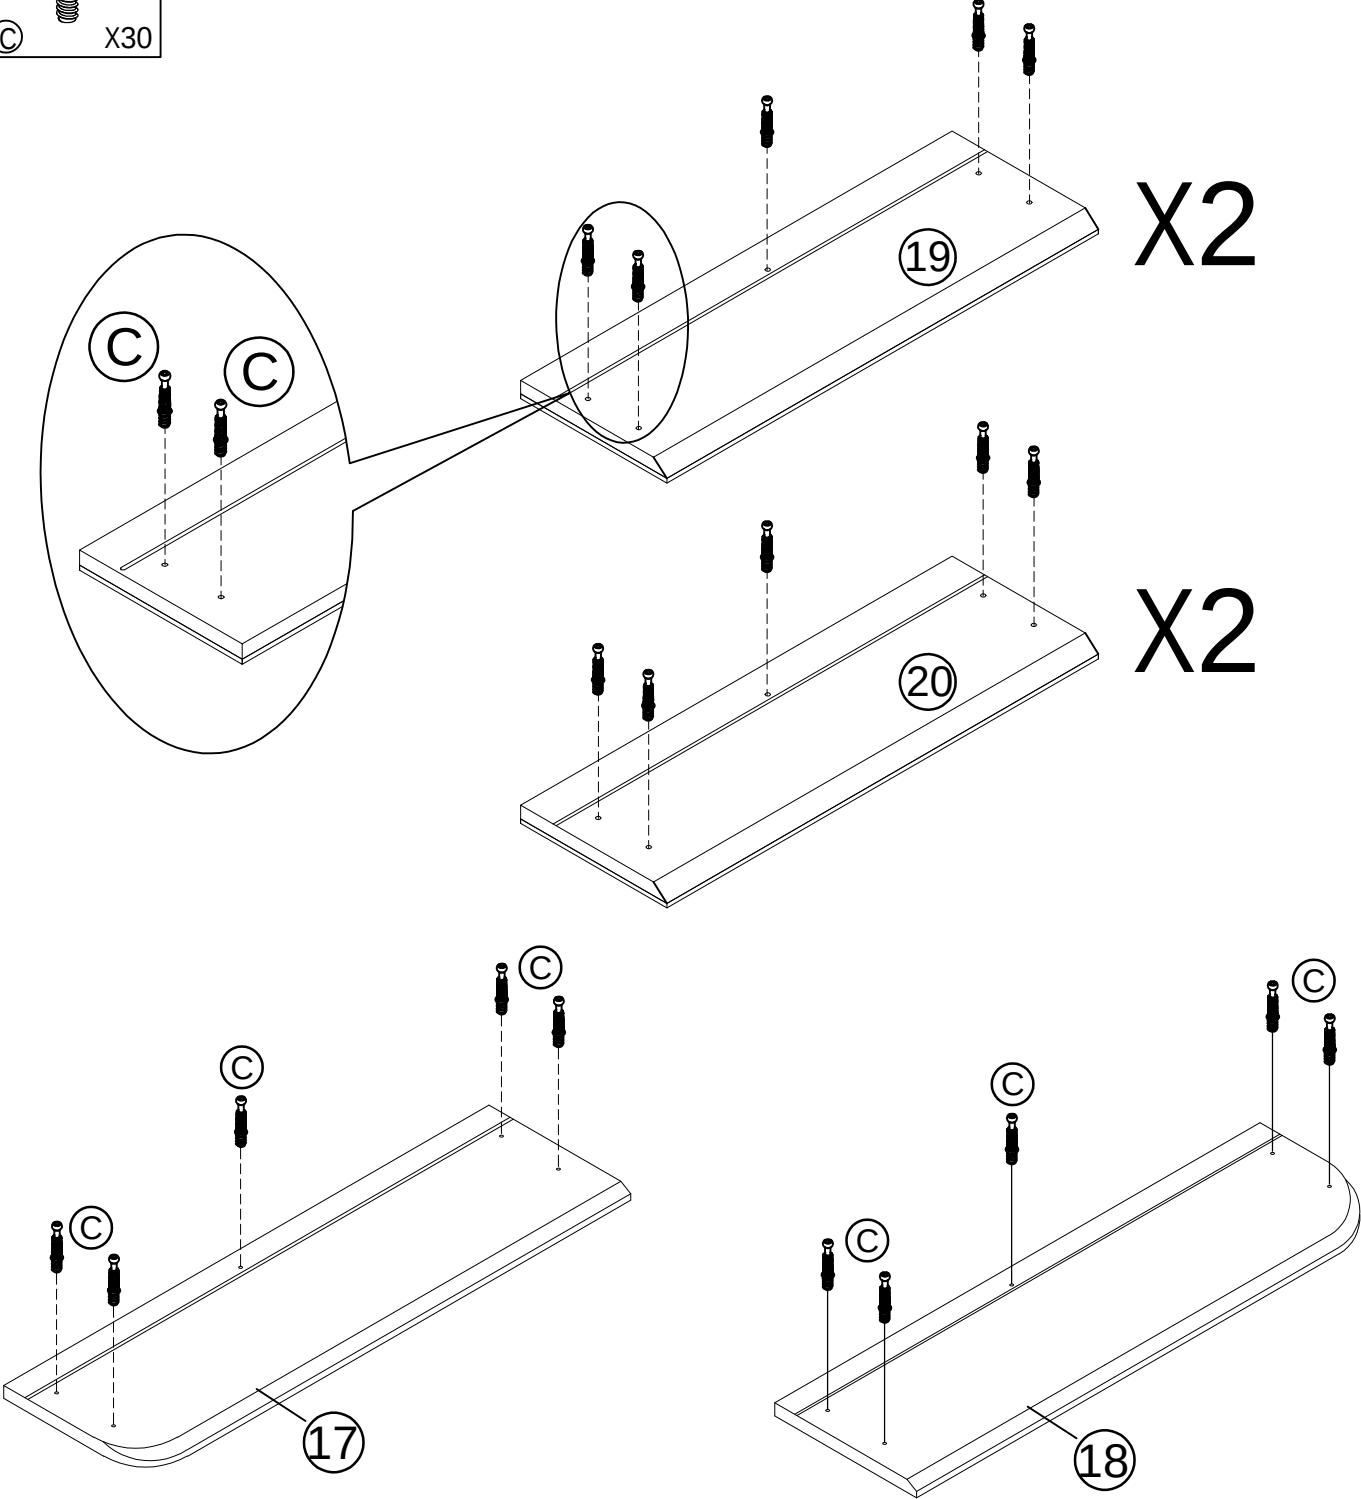


STEP 17


 ②1 X6	 ②2 X6	 ①1 X6	 ③ X6
 ⑤ X30	 ④ X24		

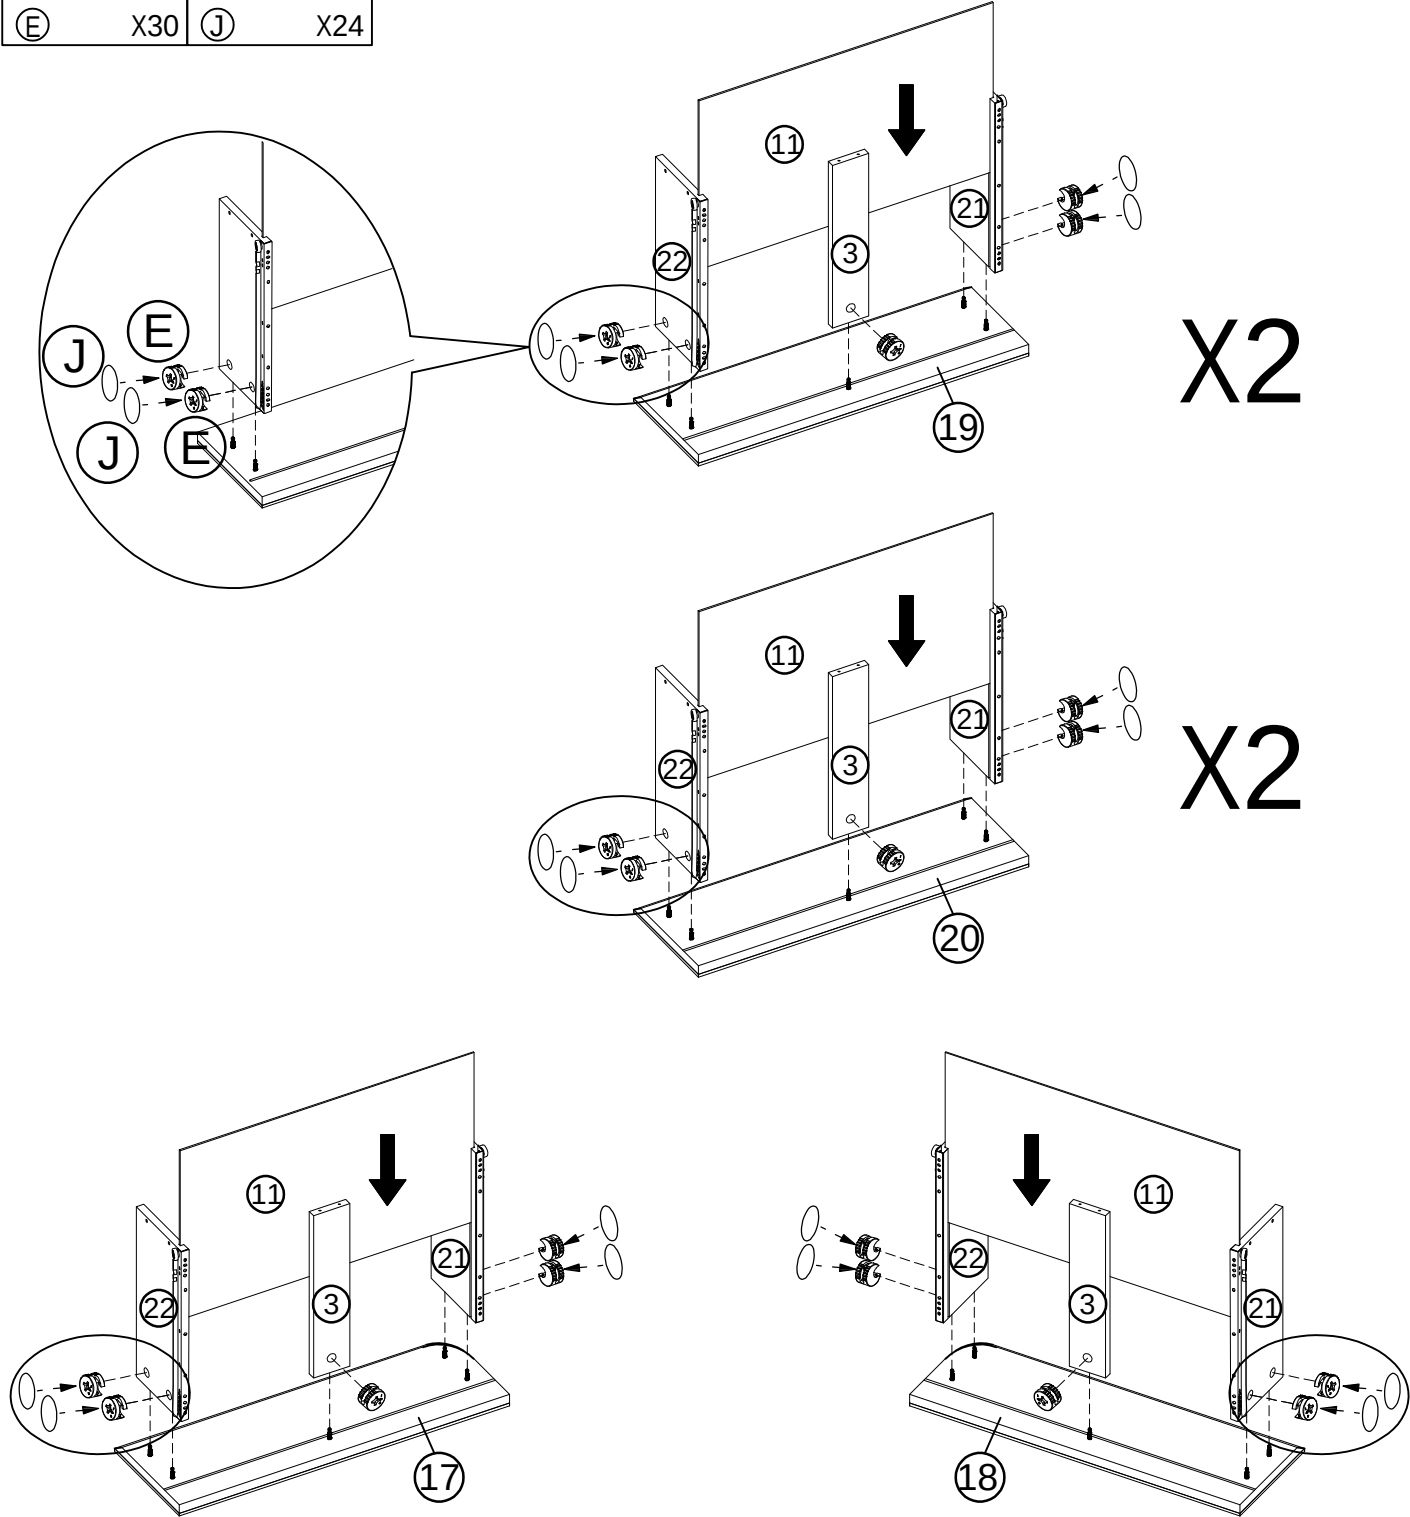



STEP 18

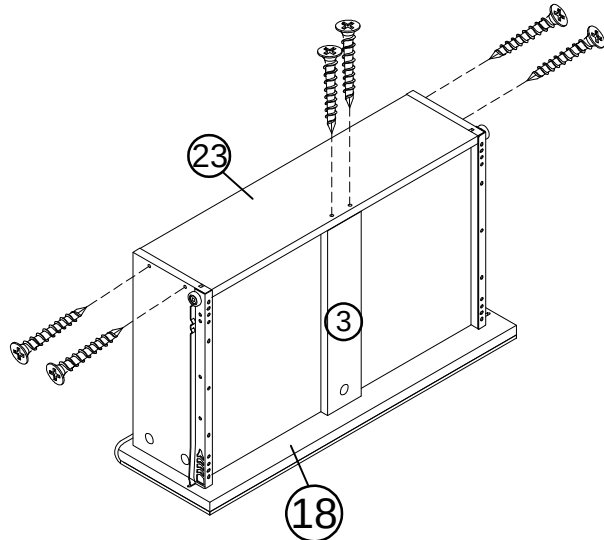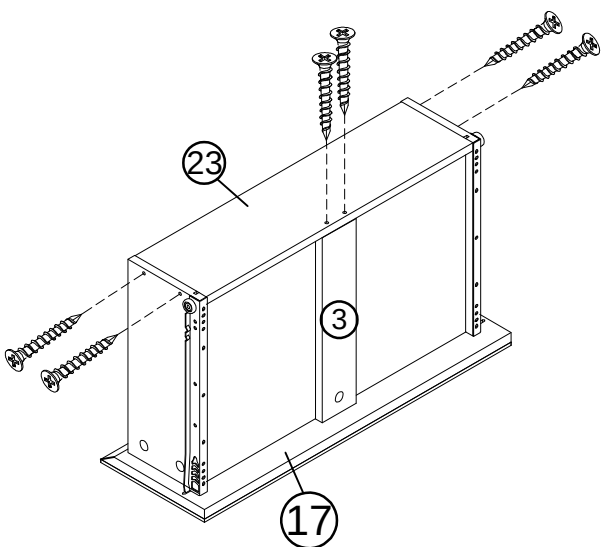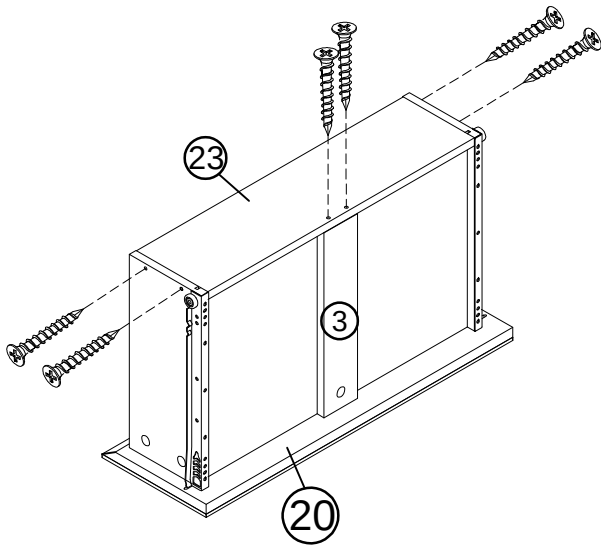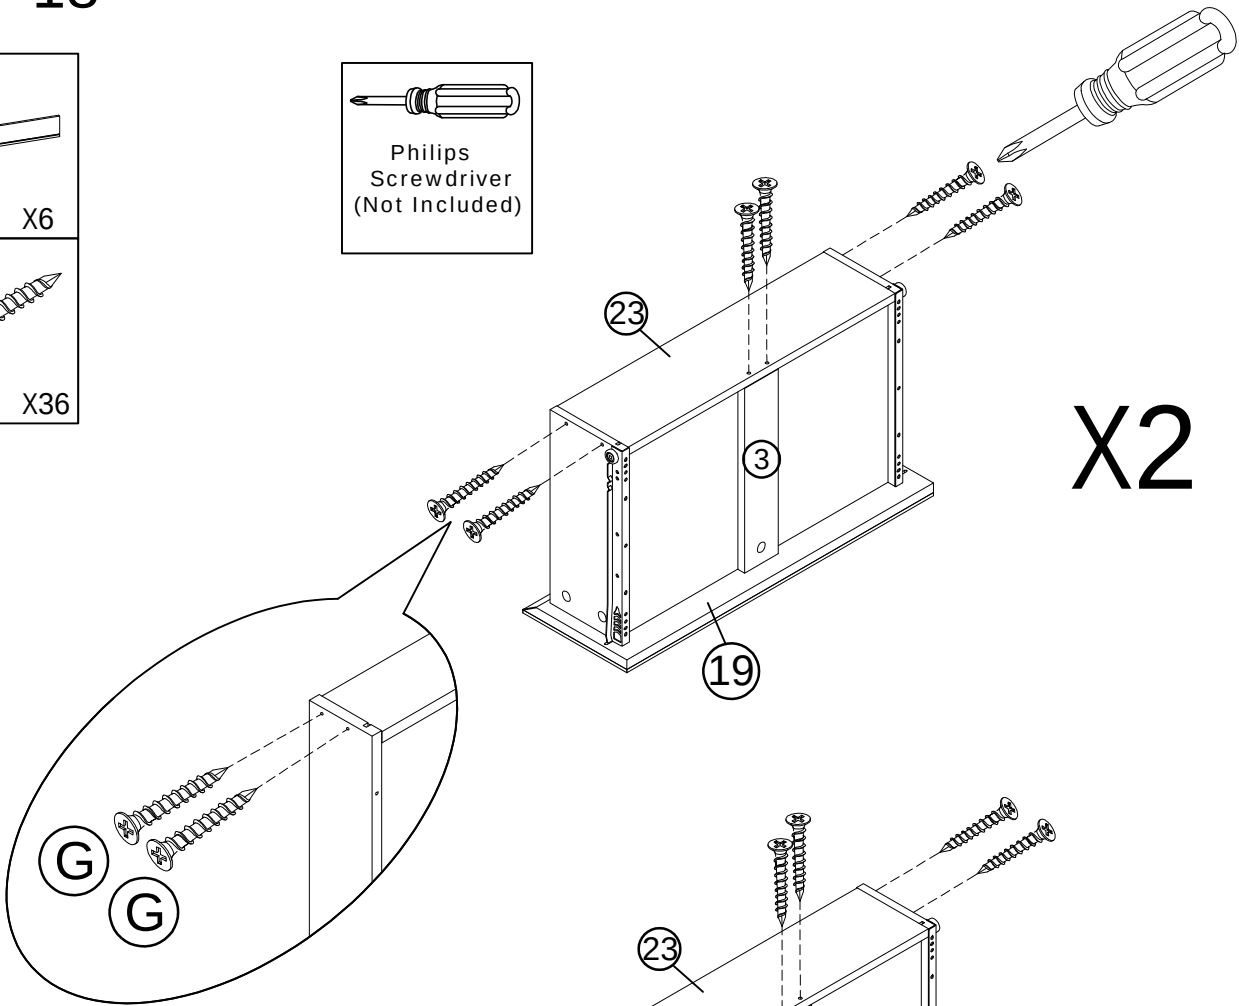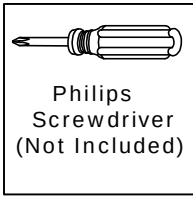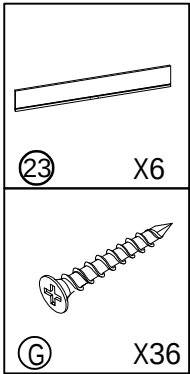

STEP 19

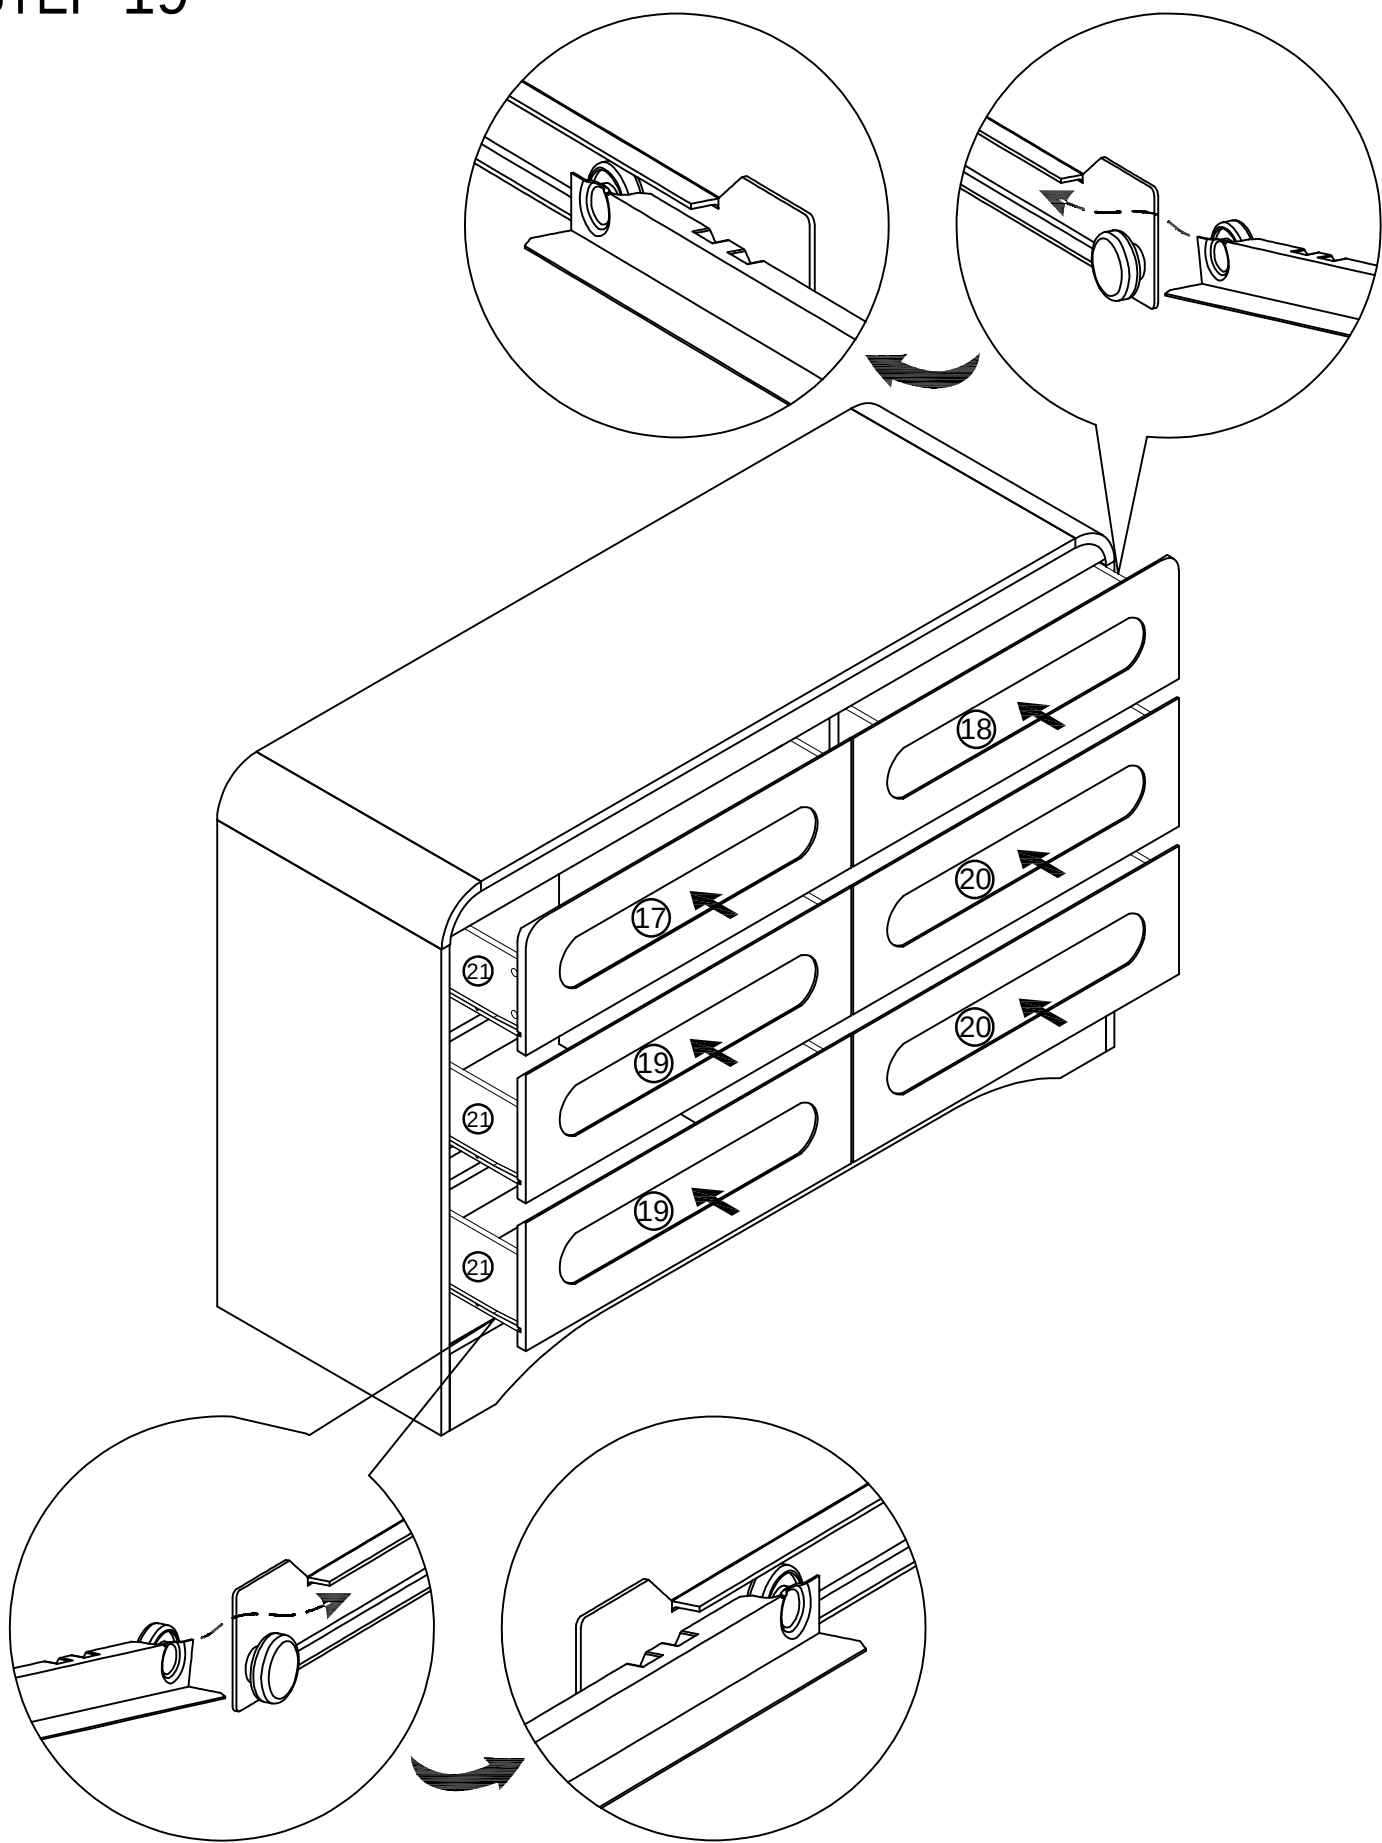

STEP 20

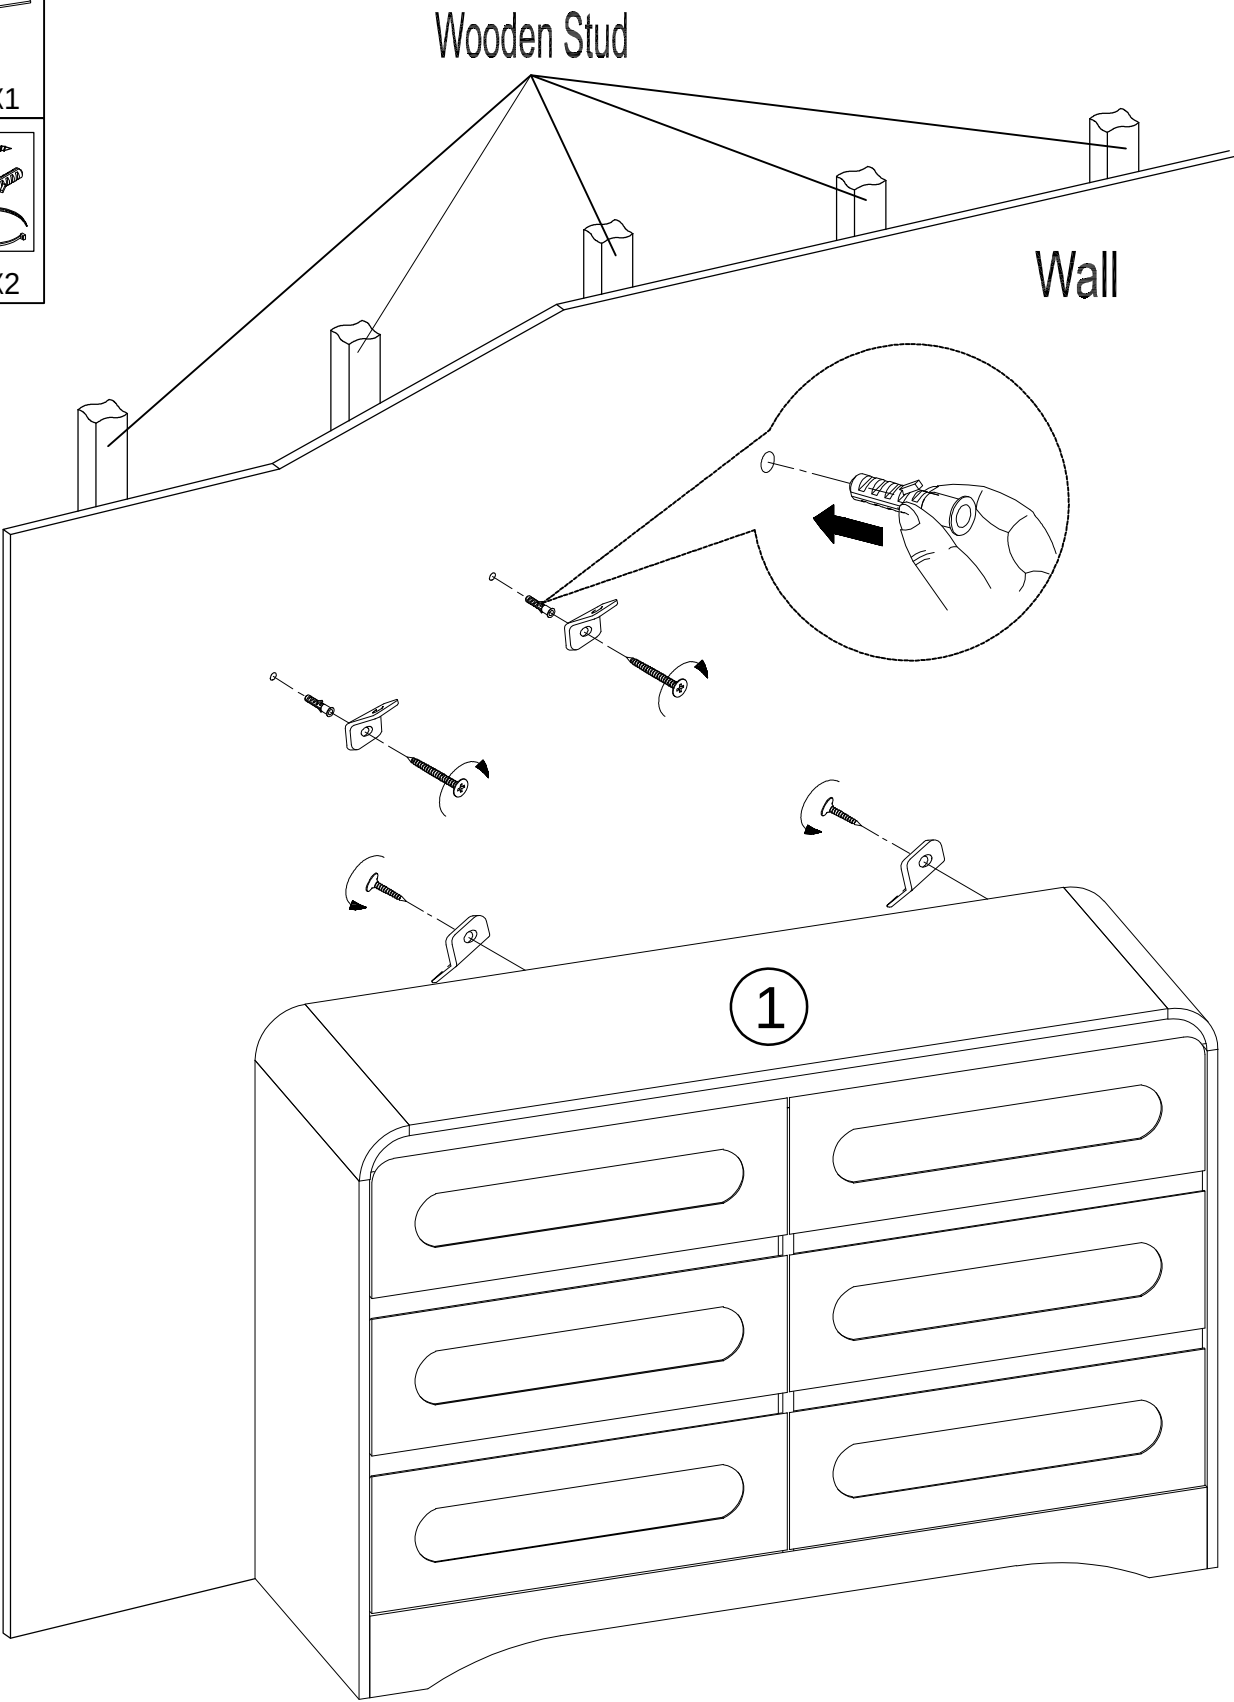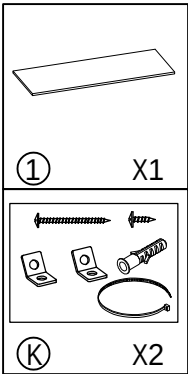

STEP 21

