


Assembly instructions

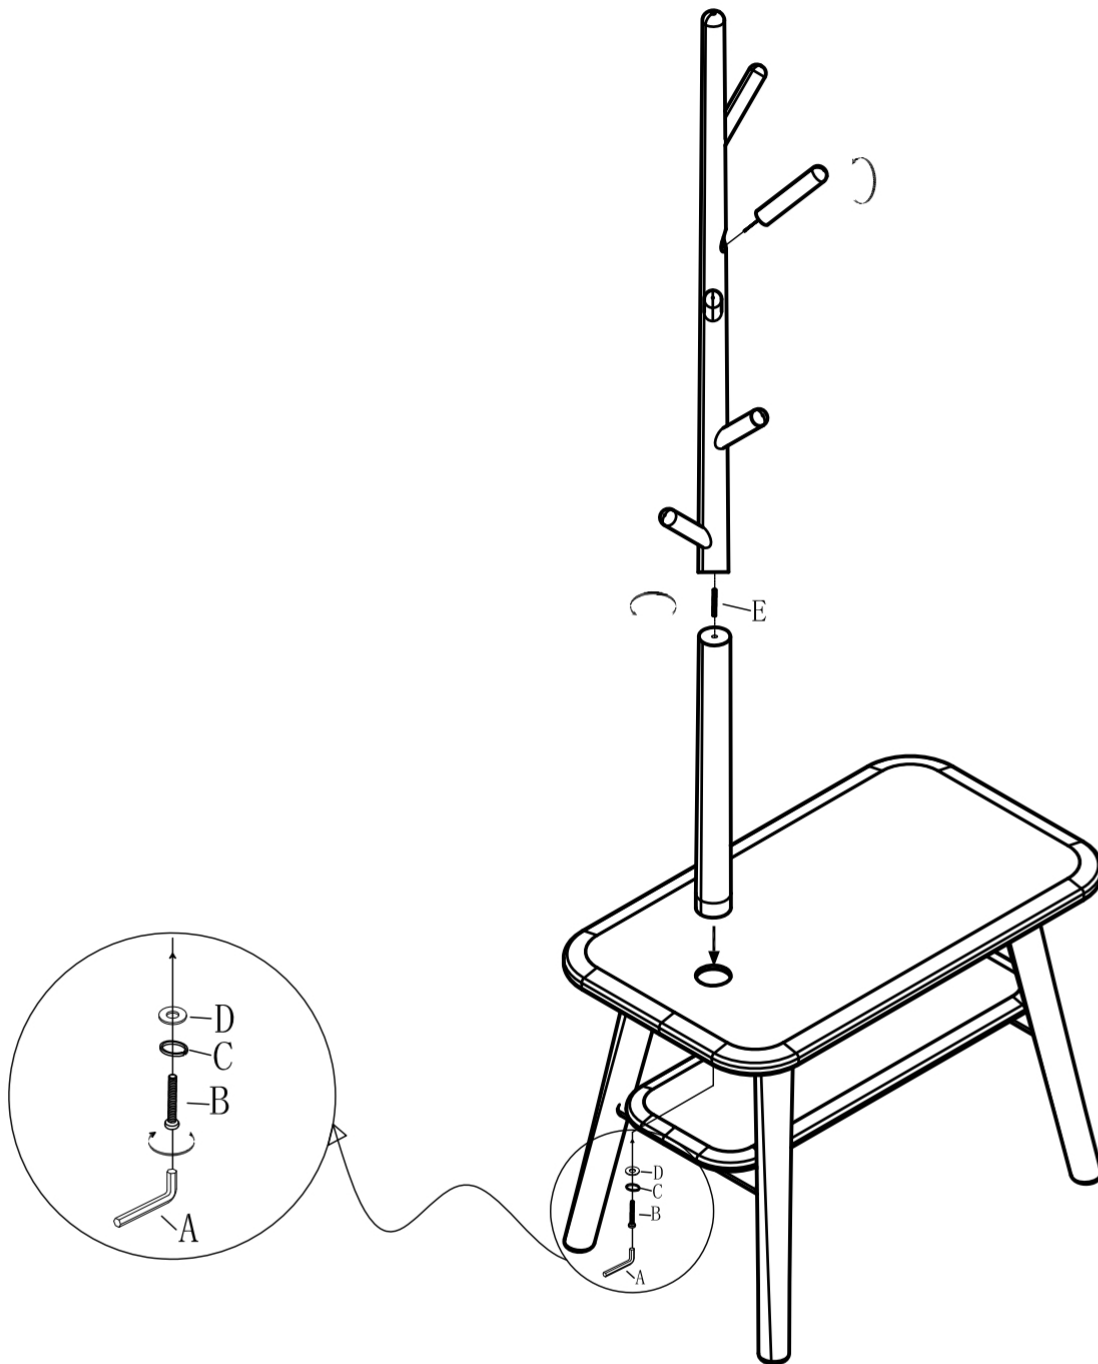

A: Hexagonal wrench 5#	B: Screws M8*40=1	C: Lock washer ø8=1	D: Flat washer ø8=1	E: Full-wire screw M8*40=1