Bed Assembly Guide

Step 1 - Fixing Gliders

Both bases should have one side with round corners and one side with square corners, the round corners remain on the outside and the square corners come together in the middle. this is so that you get a clean joint where the halves meet. Raise the bases on to their side so that you are facing the underside of the bases where the black material is visible (fig 1). Take the gliders and insert into the studs for the legs (fig 2), after inserting the gliders, tap firmly until you can hear a click which will indicate that the legs have secured home If you cannot hear a click do not worry as the gliders will click on when you turn the bed back into its correct position and sit near the edge to provide extra pressure

Fig 1

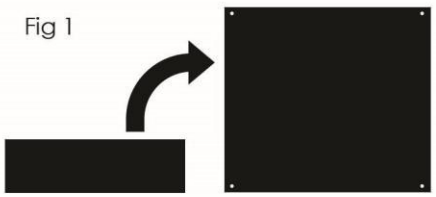


Fig 2

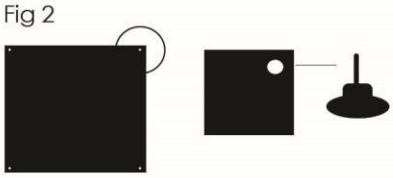



Fig 3



Step 2 - Fixing the U-Clips

While the bed is on its side and you are facing the black underside material, place the two U-Clips about 10cm from each edge in the centre where the two bases meet. If there is no gap in the material for the U-Clips (fig 4), you can easily slit the black underside material to allow for the clips to fasten securely over both base edges. Bring the bed into its proper position while supporting the bases at the central point where the clips have been placed. Please note that this step does not apply to small single and single beds as the base units for these sizes arrive in one piece.

Fig 4

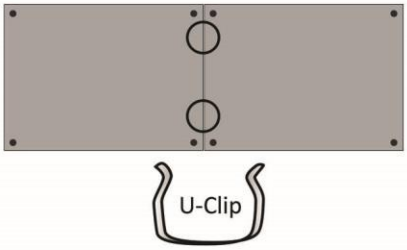

Step 3 - Fixing the Headboard

The headboard fitting on both bases is indicated by two stickers (fig 5.A) on the side with rounded corners, please remove these plugs on the base you want to fit the headboard, this should reveal the holes for the headboard bolts (fig 5.B). Place the plastic washer onto the bolt and fasten the bolt into the stud, it should catch the thread after a few turns. Line the woden struts (fig 5.C) upto the 4 stickers on the back of the headboard and attach the struts to the headboard using the small M5 screws. Then, place the wooden struts which have been fixed to the headboard and slide the struts over the bolt, making sure you keep the plastic washer on the outer side near the bolt head. Tighten the bolt enough so that it holds the headboard firmly against the bed, place the mattress onto the base and adjust the height of the headboard. Finally, tighten the bolts so that the headboard does not move.

Fig 5

