



DJ505946

A


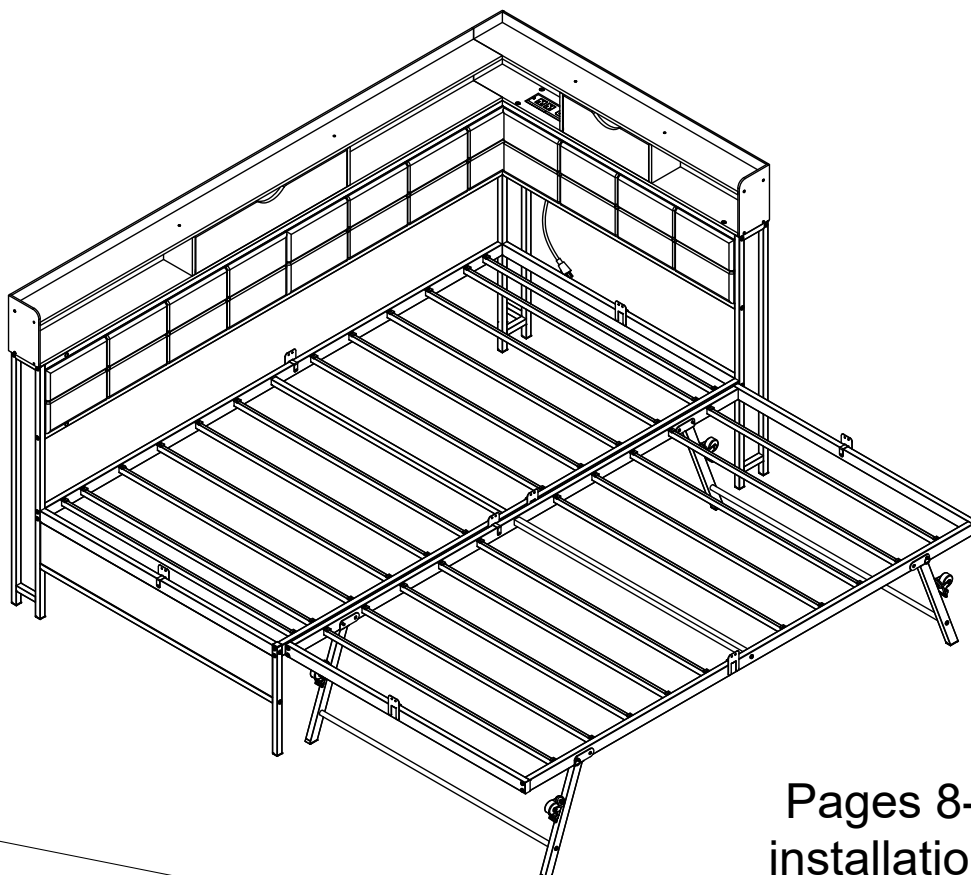


Pages 8-19 show
installation method A


B

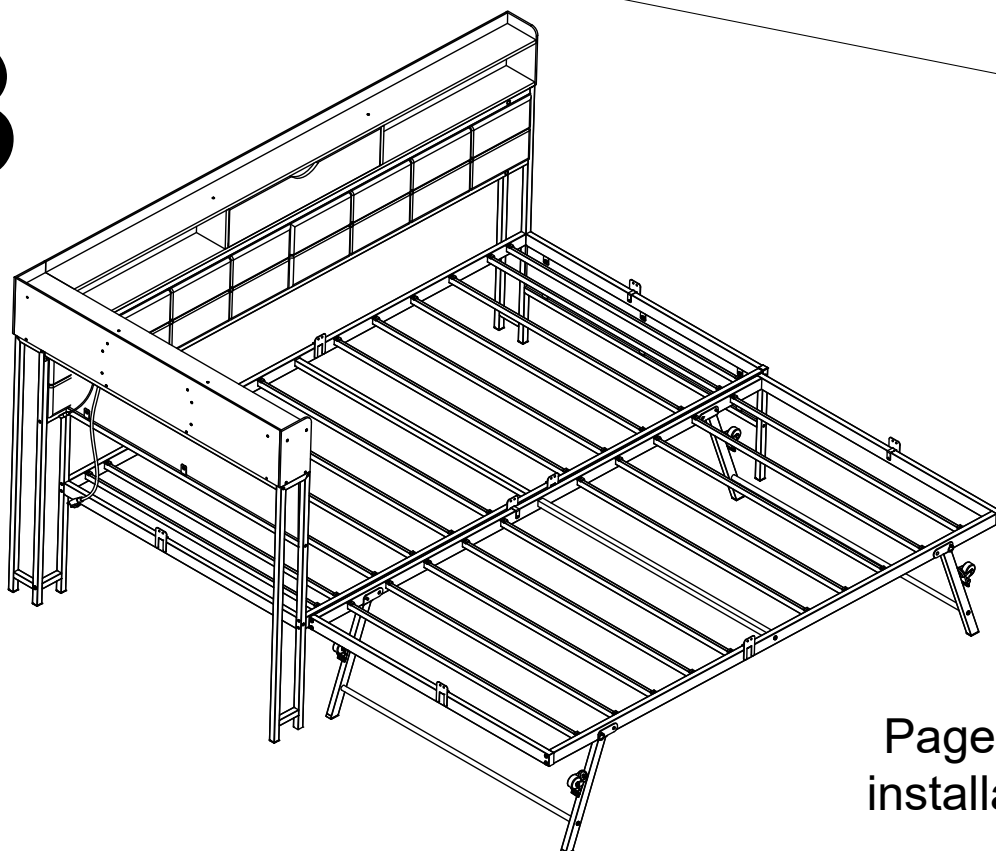


Pages 20-31 show
installation method B

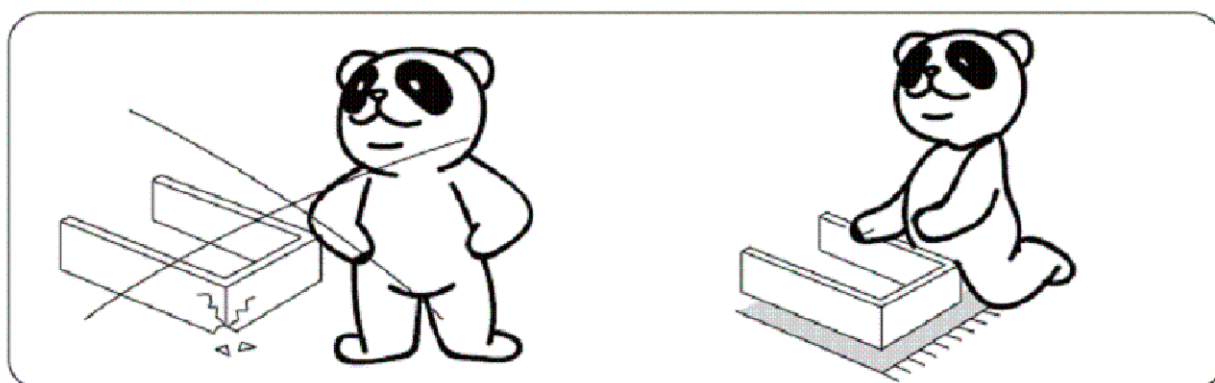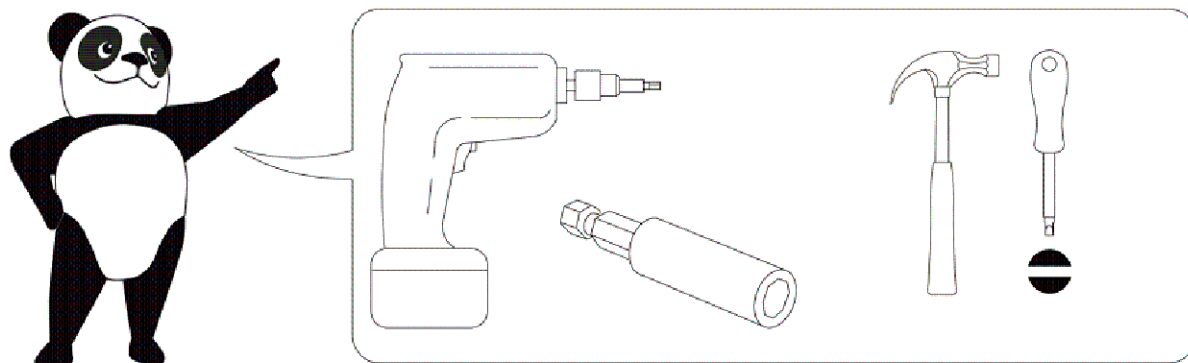

Violent installation is prohibited

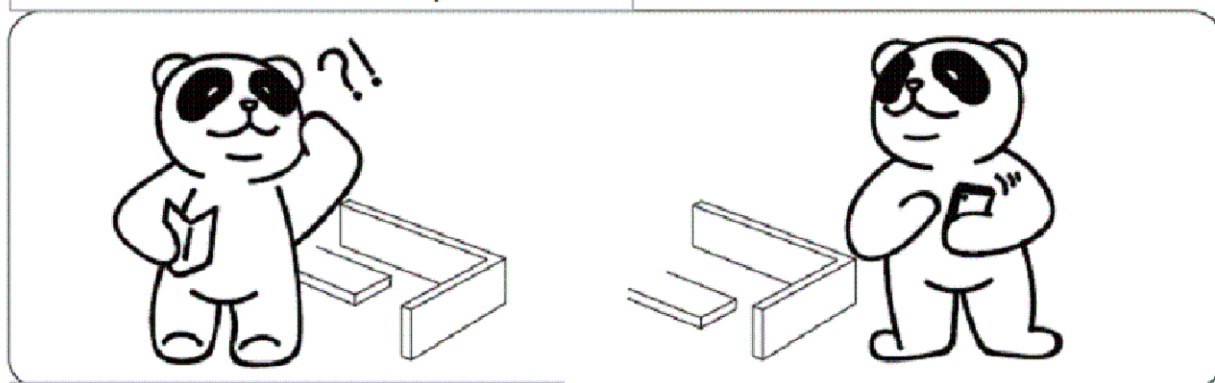

Please call if you need help

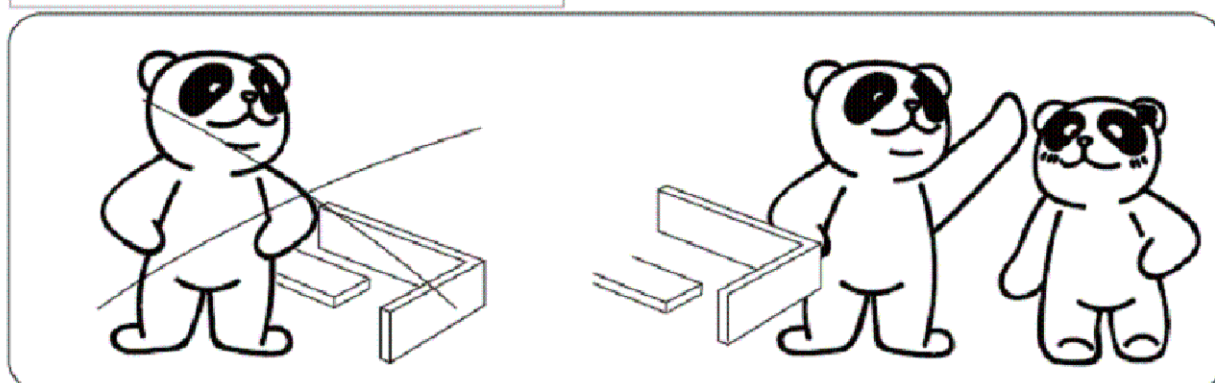


Multi-person cooperation is recommended

Install parts


PARTS LIST

BOX : A

PACKING DETAILS: TOTAL 2 BOXES



2 × 1




4 × 1



6 × 1




7 × 1




8 × 1




13 × 1




21 × 1




25 × 1

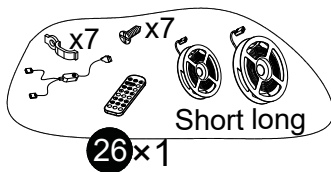


26 × 1

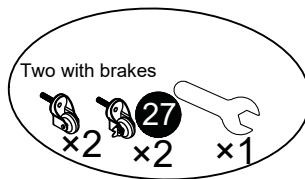


27




28 × 44




29 × 1




30 × 1



31 × 2




32 × 2



33 × 2



34 × 2




35 × 8

Install parts


PARTS LIST

BOX : A


PACKING DETAILS:TOTAL 2 BOXES




36×1




37×1




38×1




39×1




40×1



41×1



42×1



43×1



45×1



46×2



47×2



48×2



49×1

HARDWARE LIST



A

M3*12
x24+2



B

M5*35
x46+3



C

M6*10
x9+1



D

M6*15
x2+1



E

M6*28
x14+1



F

M6*40
x44+3



G

4#
x1



H

4#
x1



I

3#
x1



J

Ø8
x5




K

Ø7*23
x4



L

M4*12
x2+1



M

Ø6*40
x4+1



N

M6*15
x18+1

Install parts

BOX : B


PACKING DETAILS: TOTAL 2 BOXES




1 × 1




3 × 1



5 × 1



9 × 1



10 × 1




11 × 1



12 × 1



14 × 1



15 × 1



16 × 2




17 × 12




18 × 1



19 × 2




20 × 2



22 × 1



23 × 10



24 × 2




44 × 1

Note:

1, Should be assembled on flat ground to keep balance.

2. Before completing the installation, do not tighten the screws.

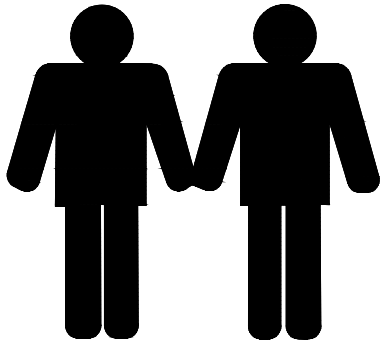

It needs at least two people to install




Before starting the assembly, you must read the whole manual and follow the instructions.

This set comes in 2 boxes. If you do not receive a full set of 2 boxes, please contact our customer service.


box A : 2, 4, 6-8, 13, 21, 25-43, 45-49, screw pack, instructions;

box B : 1, 3, 5, 9-12, 14-20, 22-24, 44, instructions.

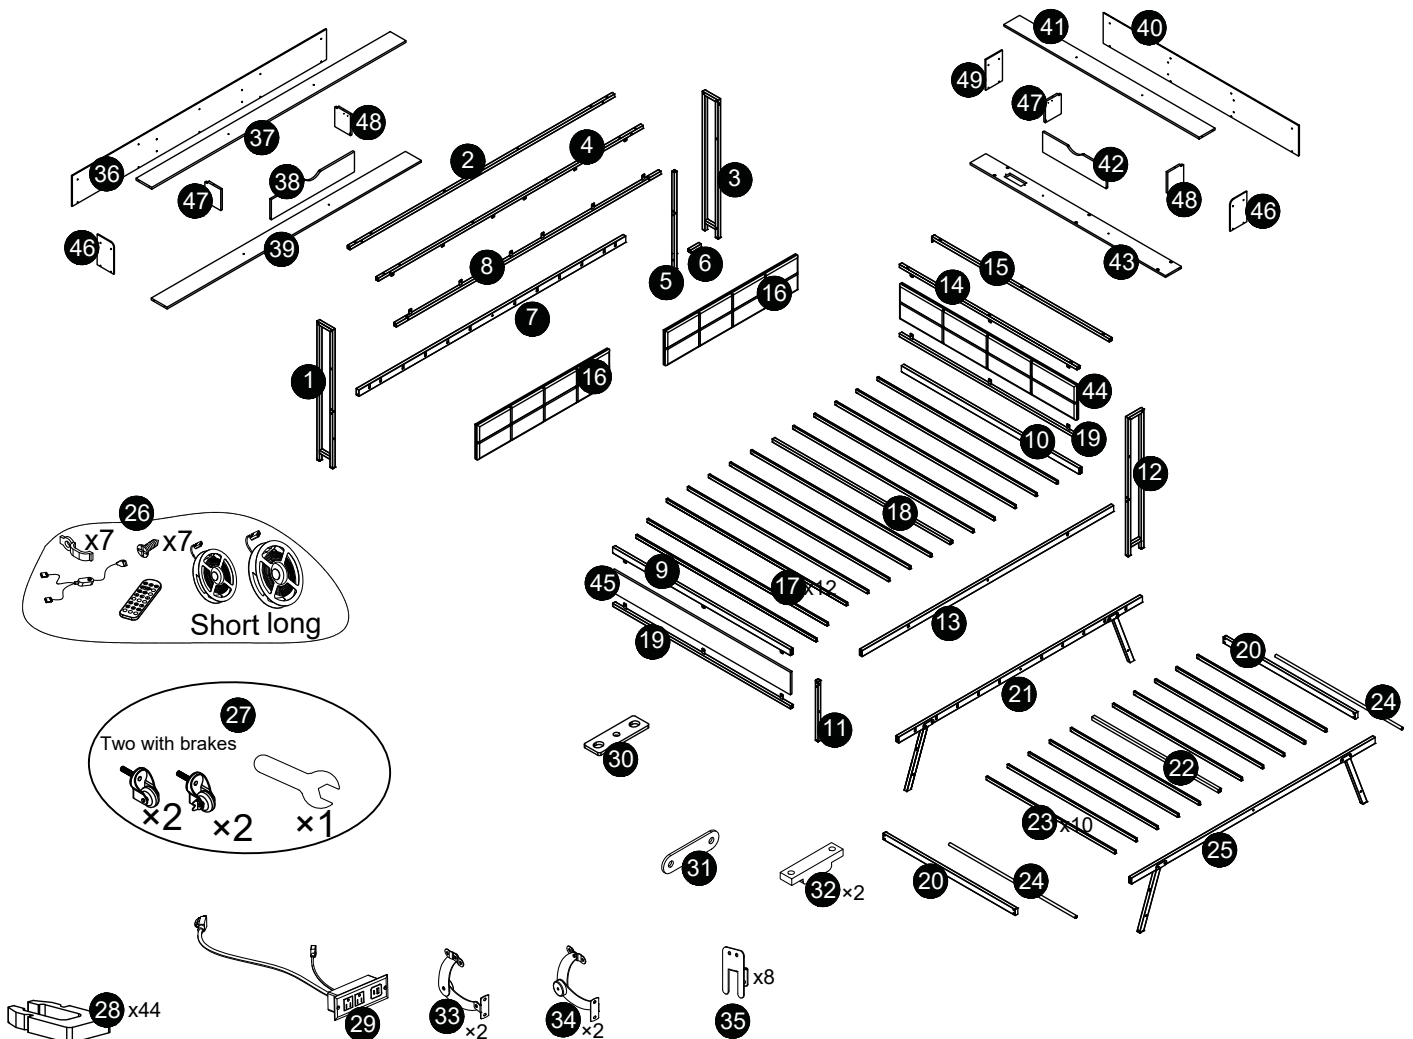


A

Pages 7-24 show installation method A

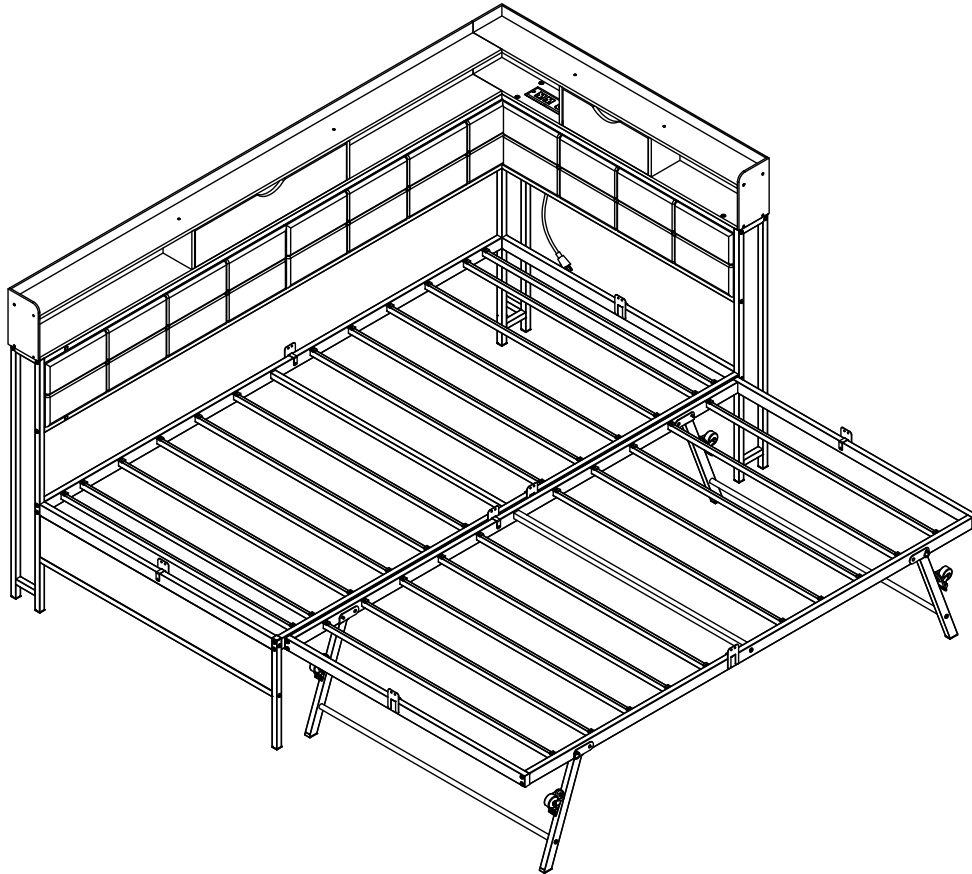

After the product assembly is completed,
check and tighten all screws

1

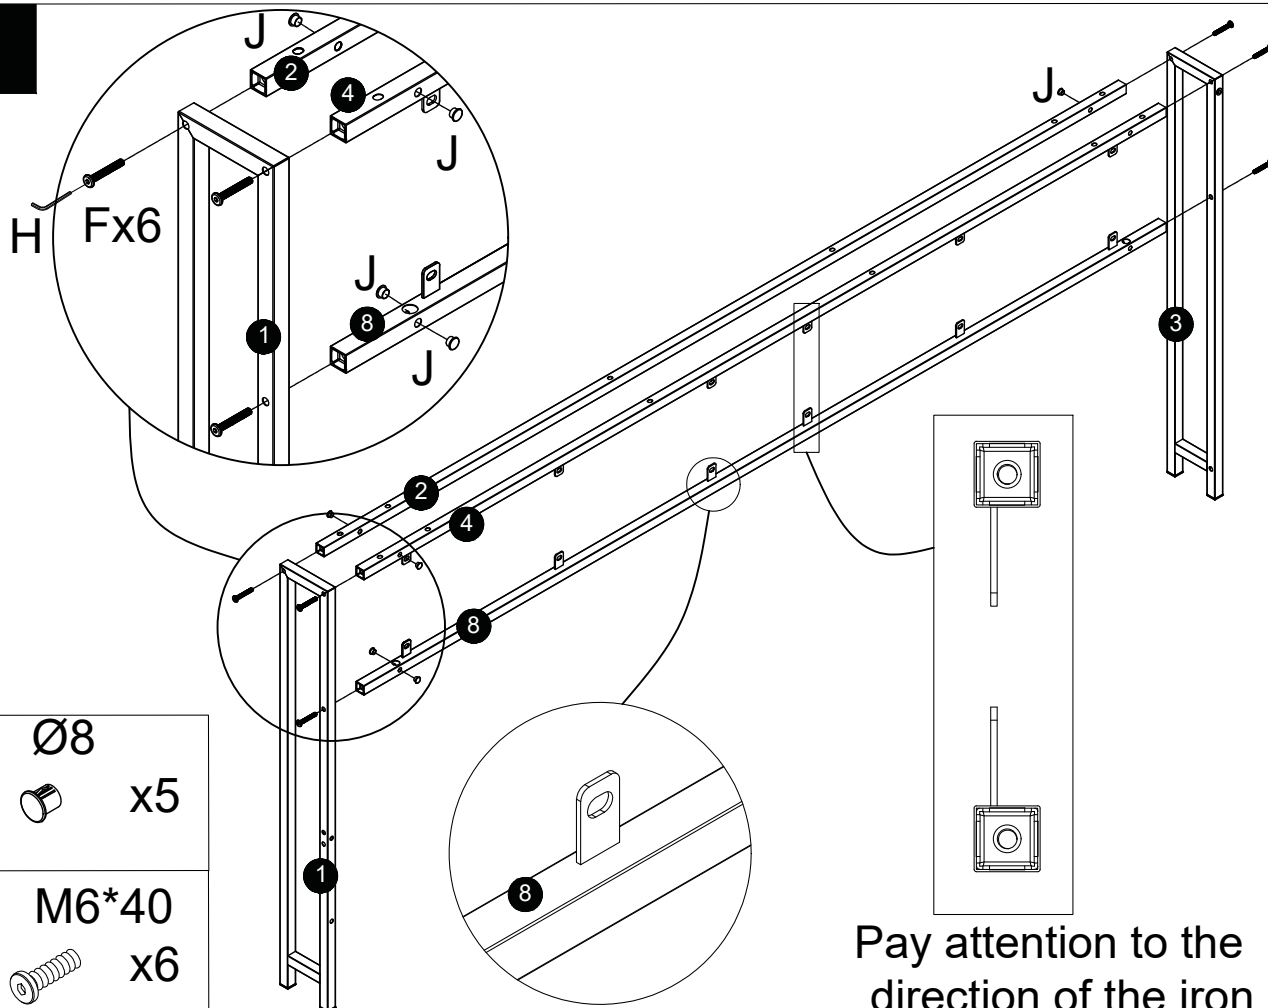


J Ø8
x5

F M6*40
x6


2

Pay attention to the direction of the iron sheet

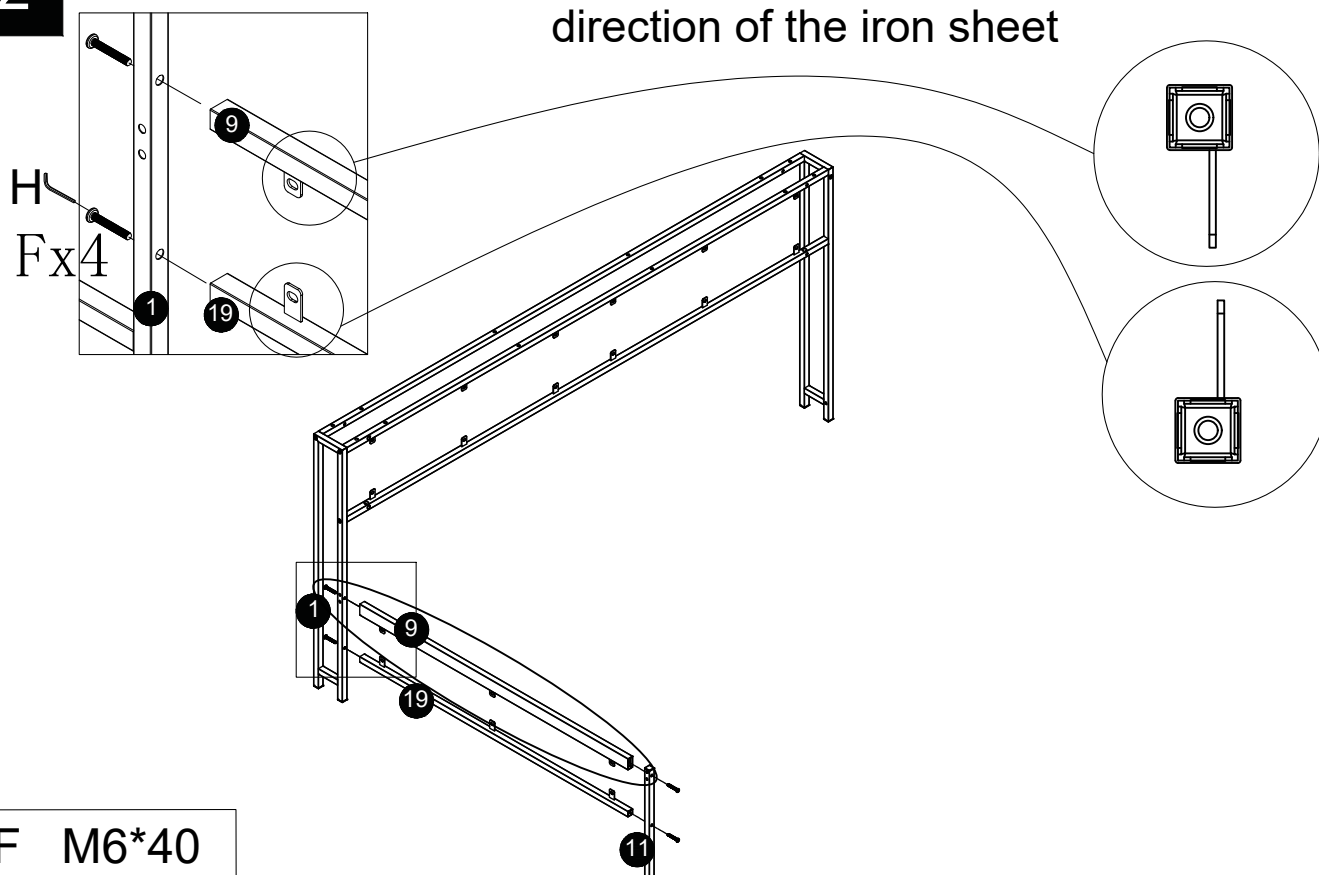


F M6*40
x4

3

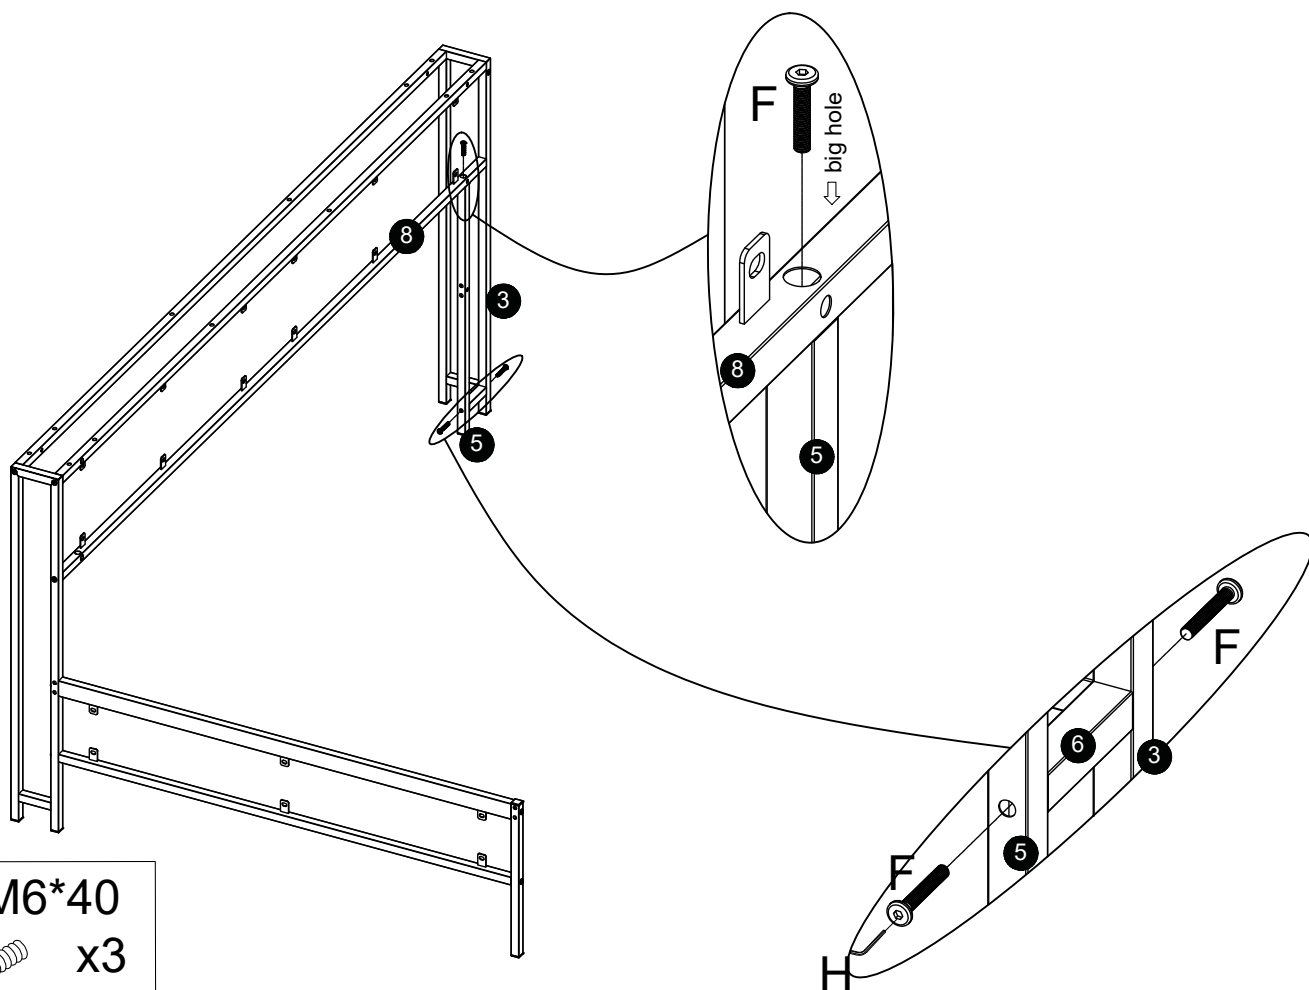

F M6*40
x3


4

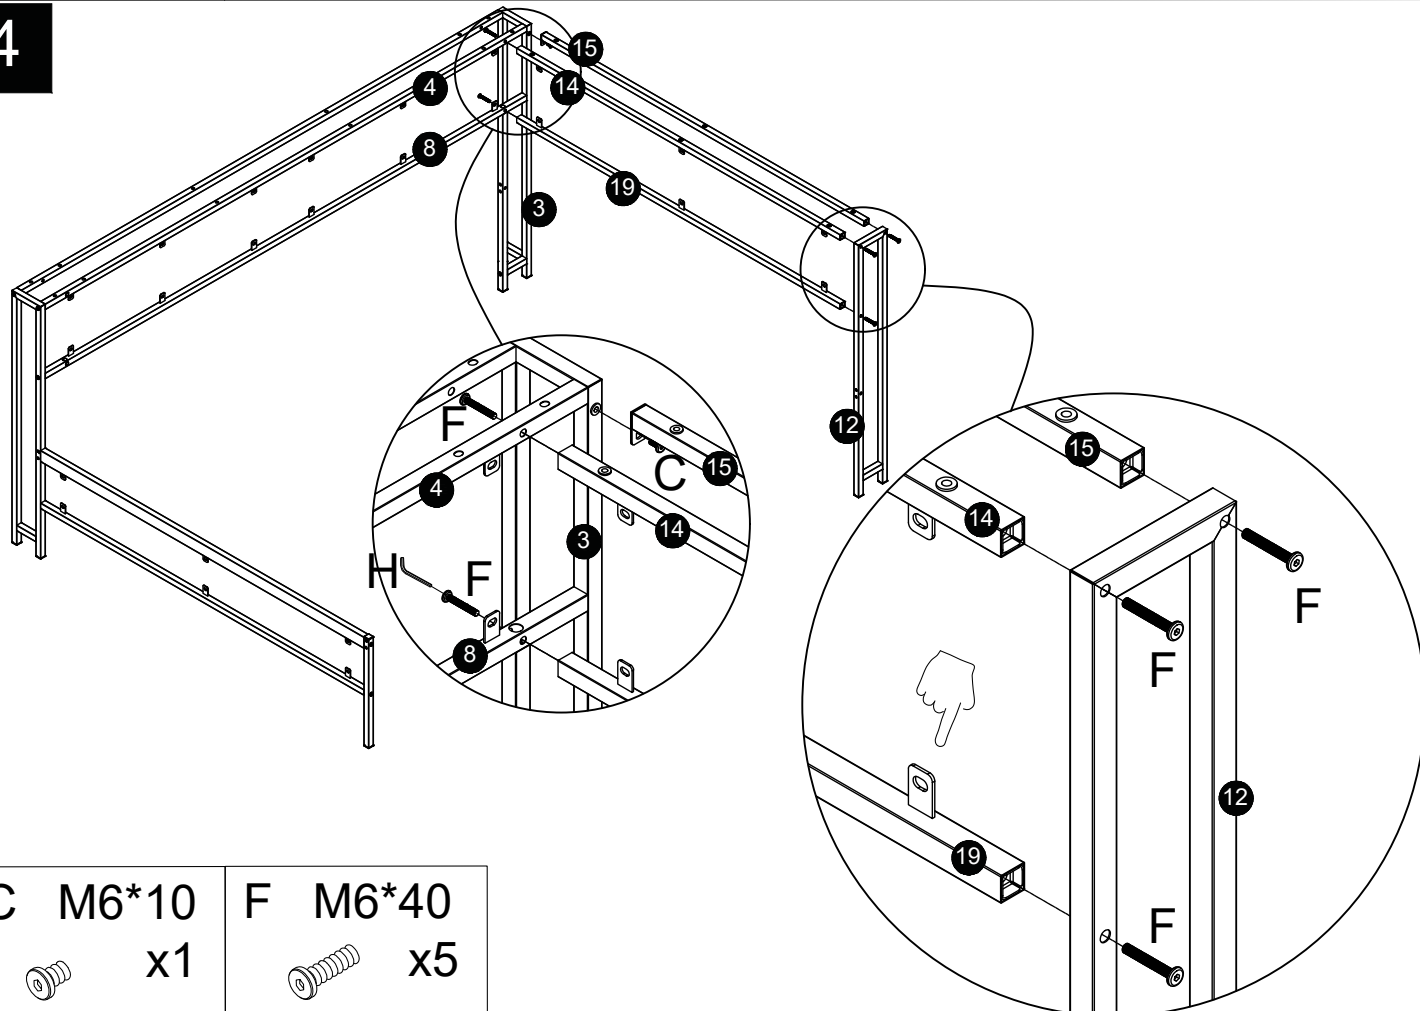

C M6*10
x1

F M6*40
x5


5

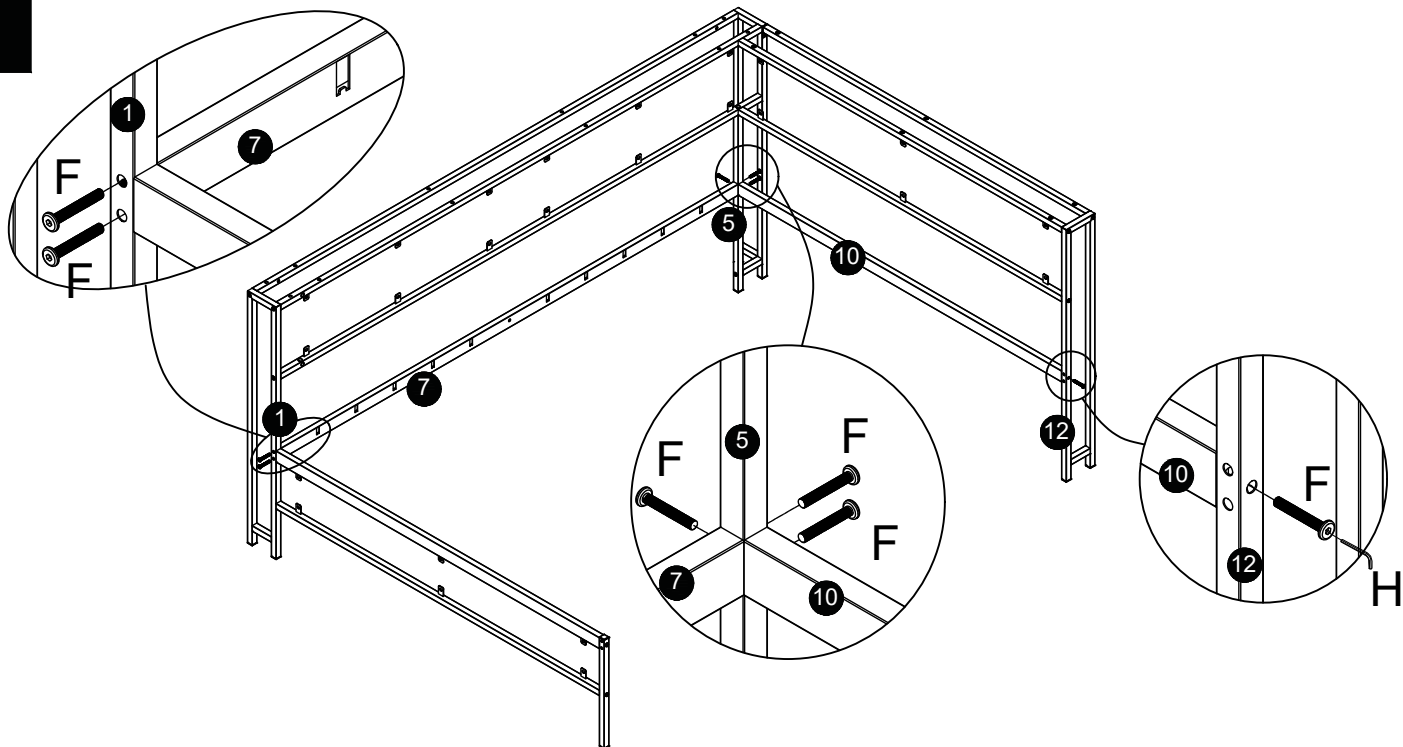

F M6*40
x6





6

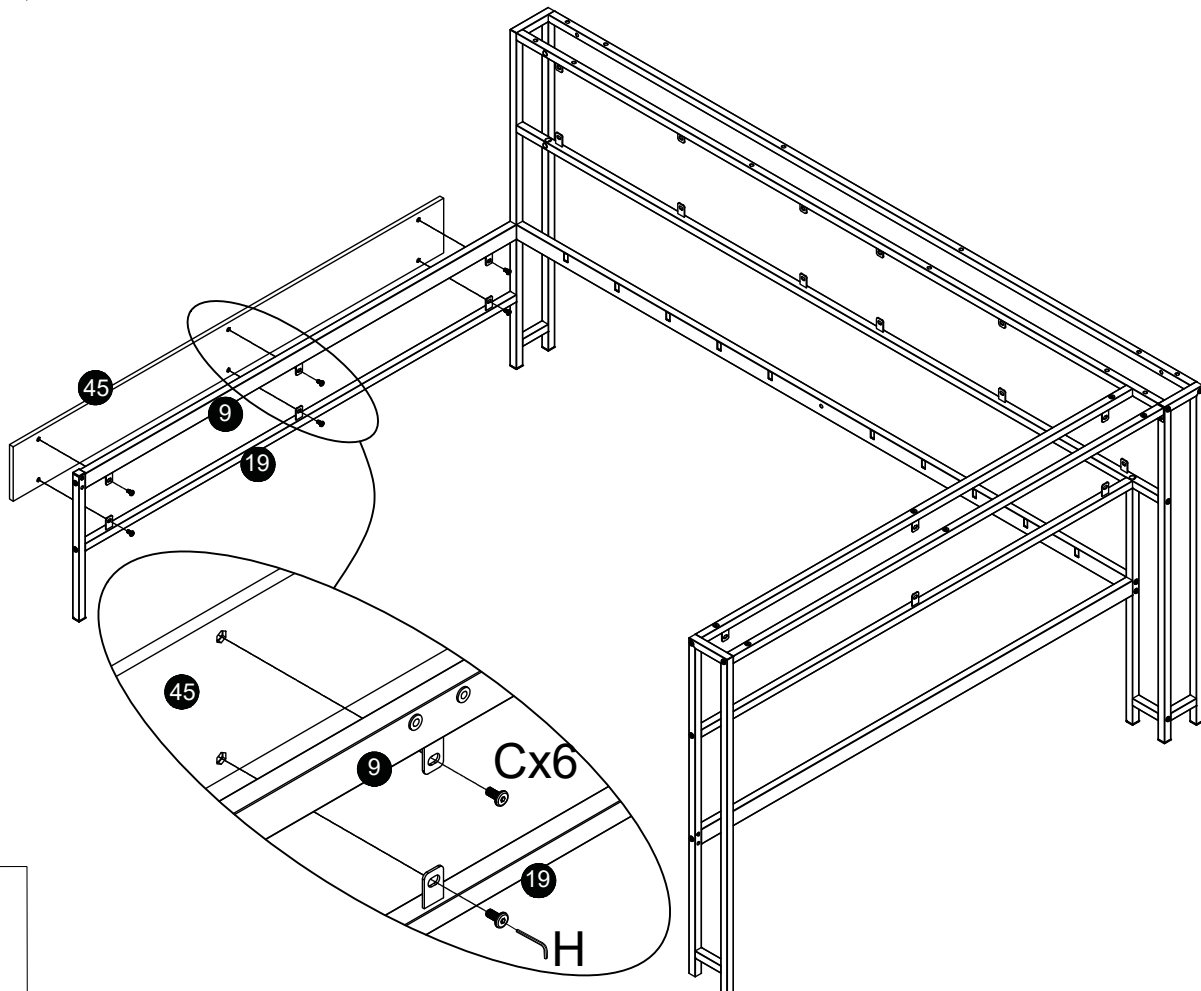




C M6*10
x6



7

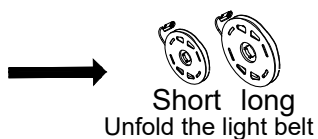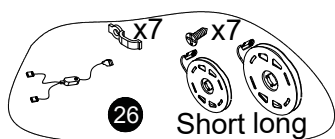


Tear off the end of the tape .Stick it in the position as shown

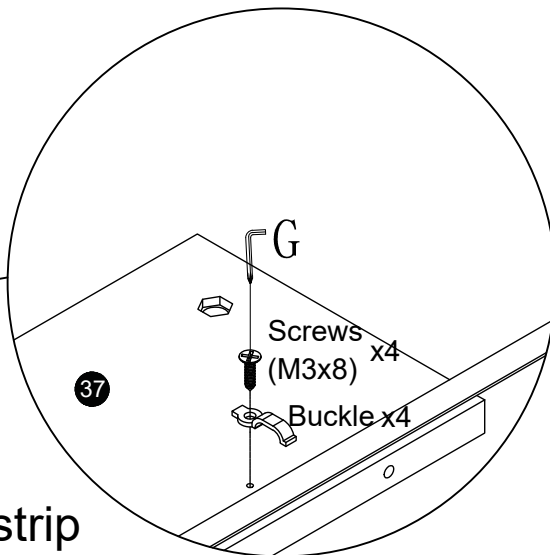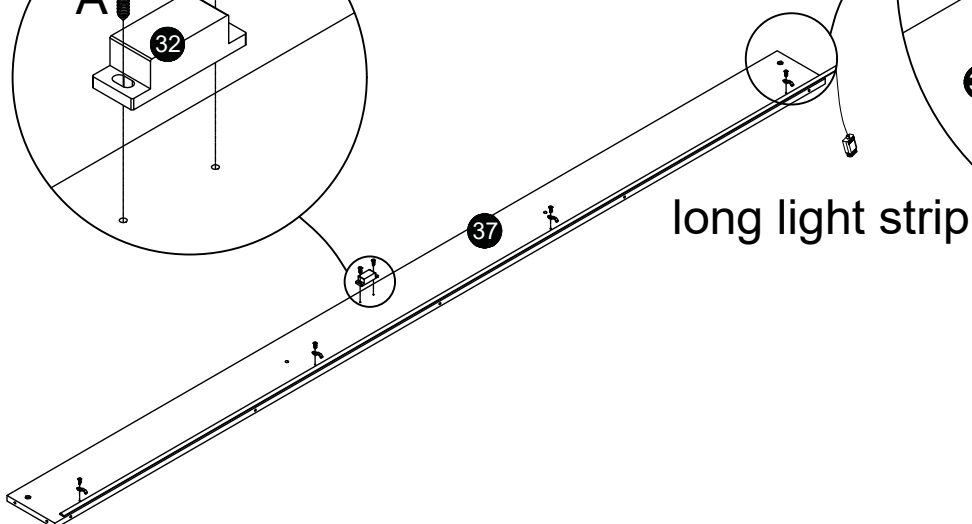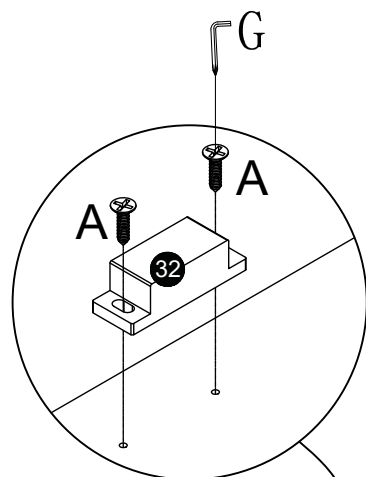

A M3*12
x2




8

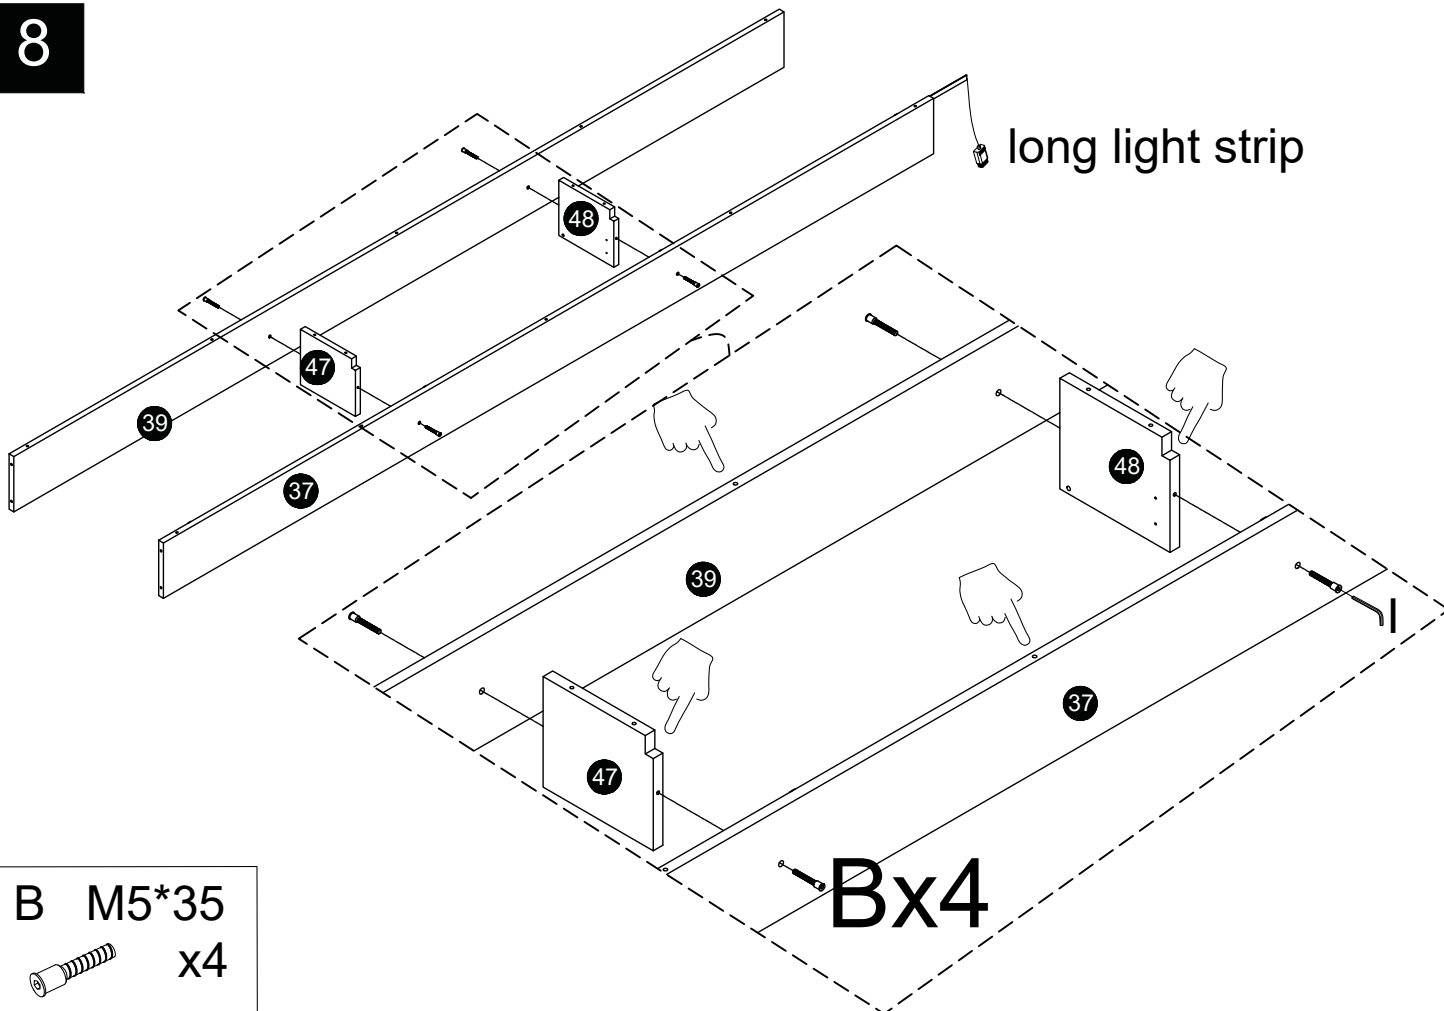


B M5*35
x4

9

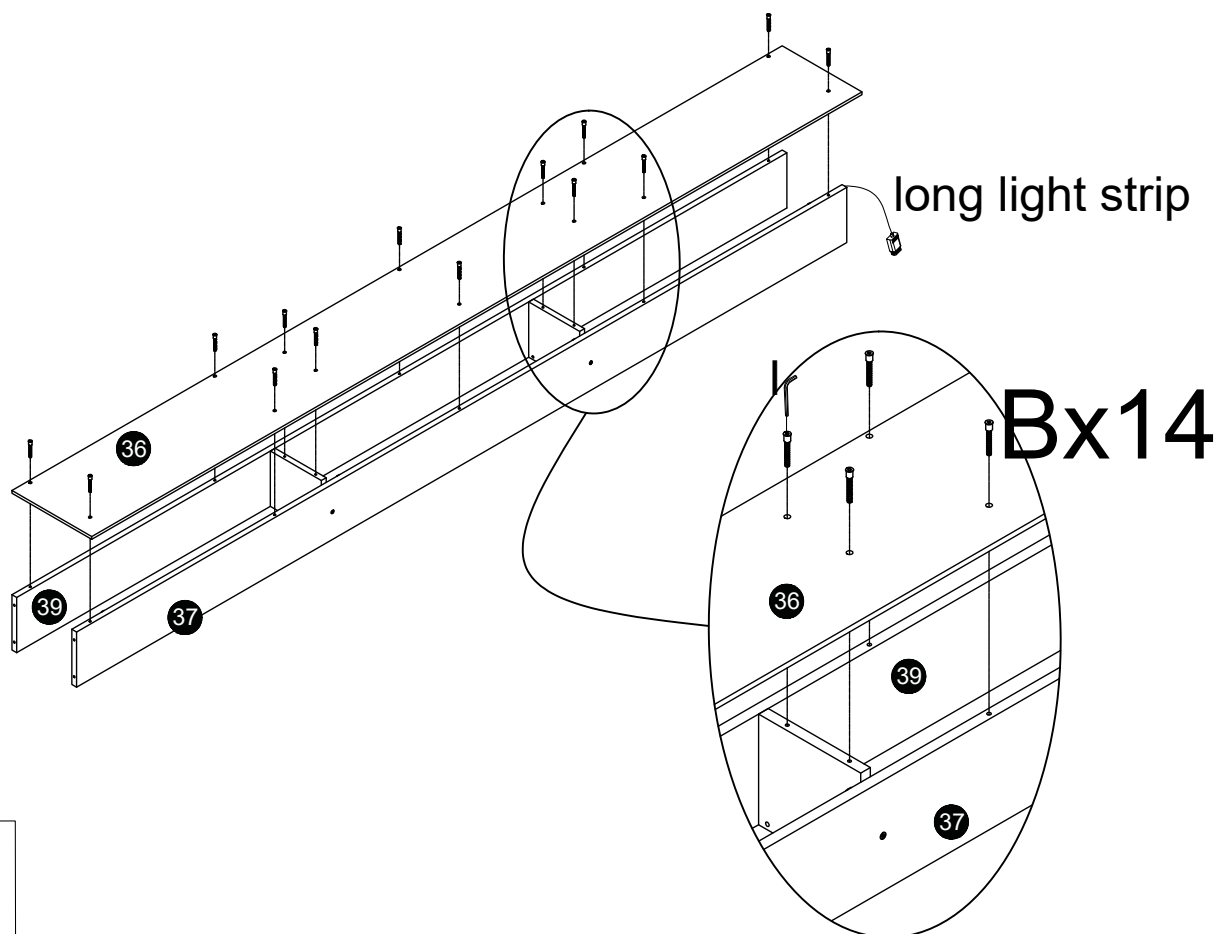





B M5*35
x14

10

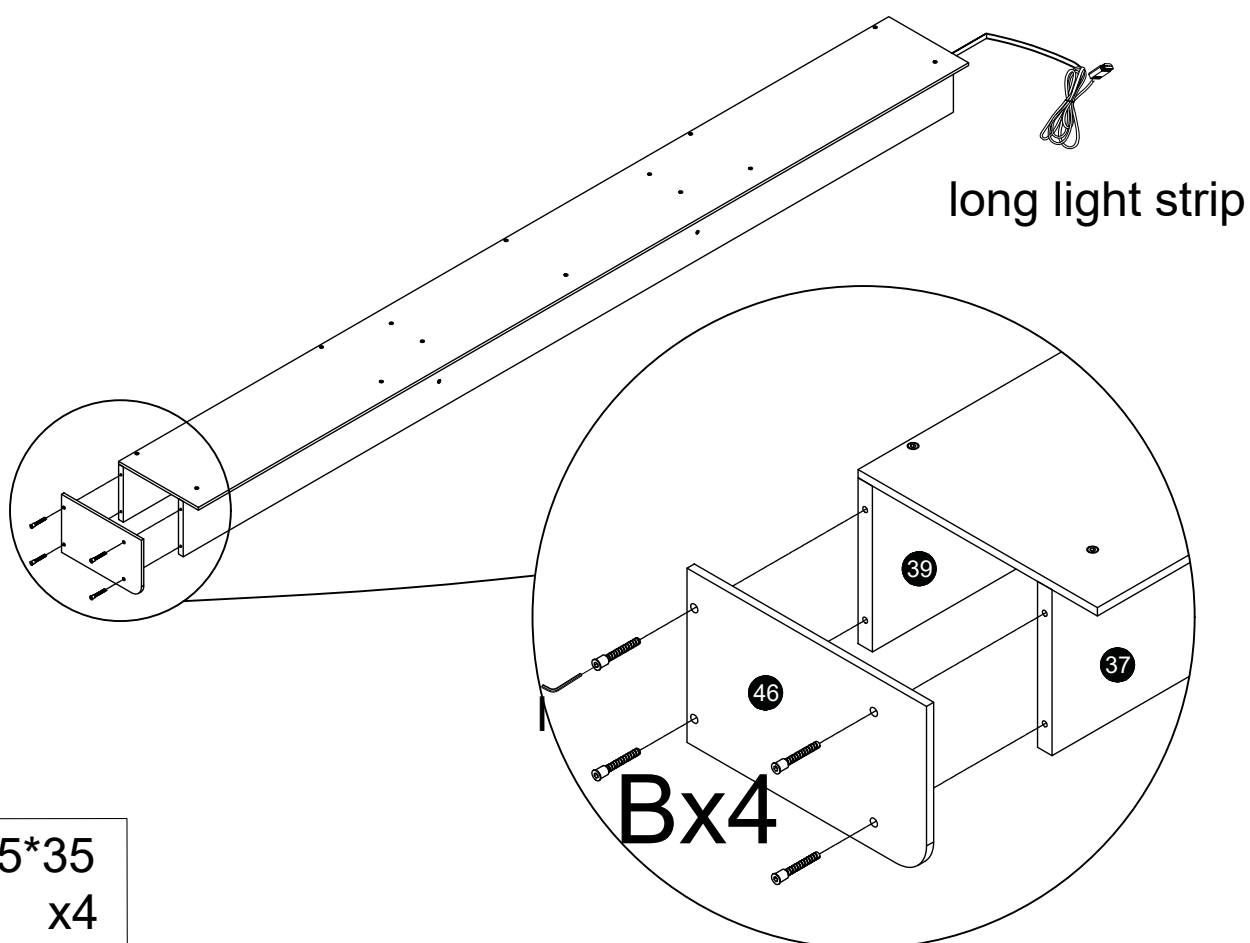

B M5*35
x4


11

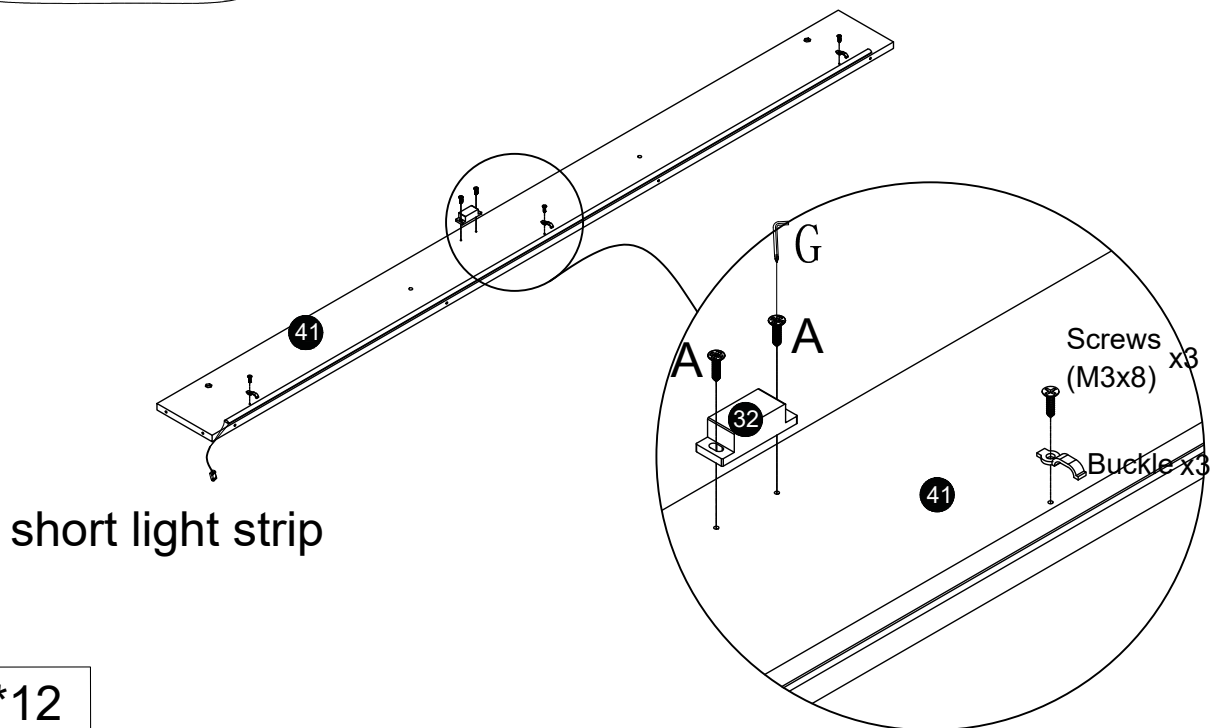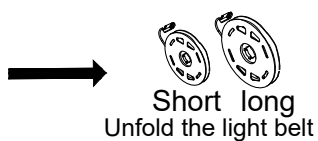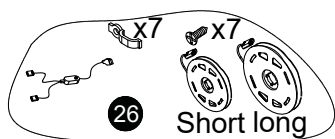

A M3*12
x2




12

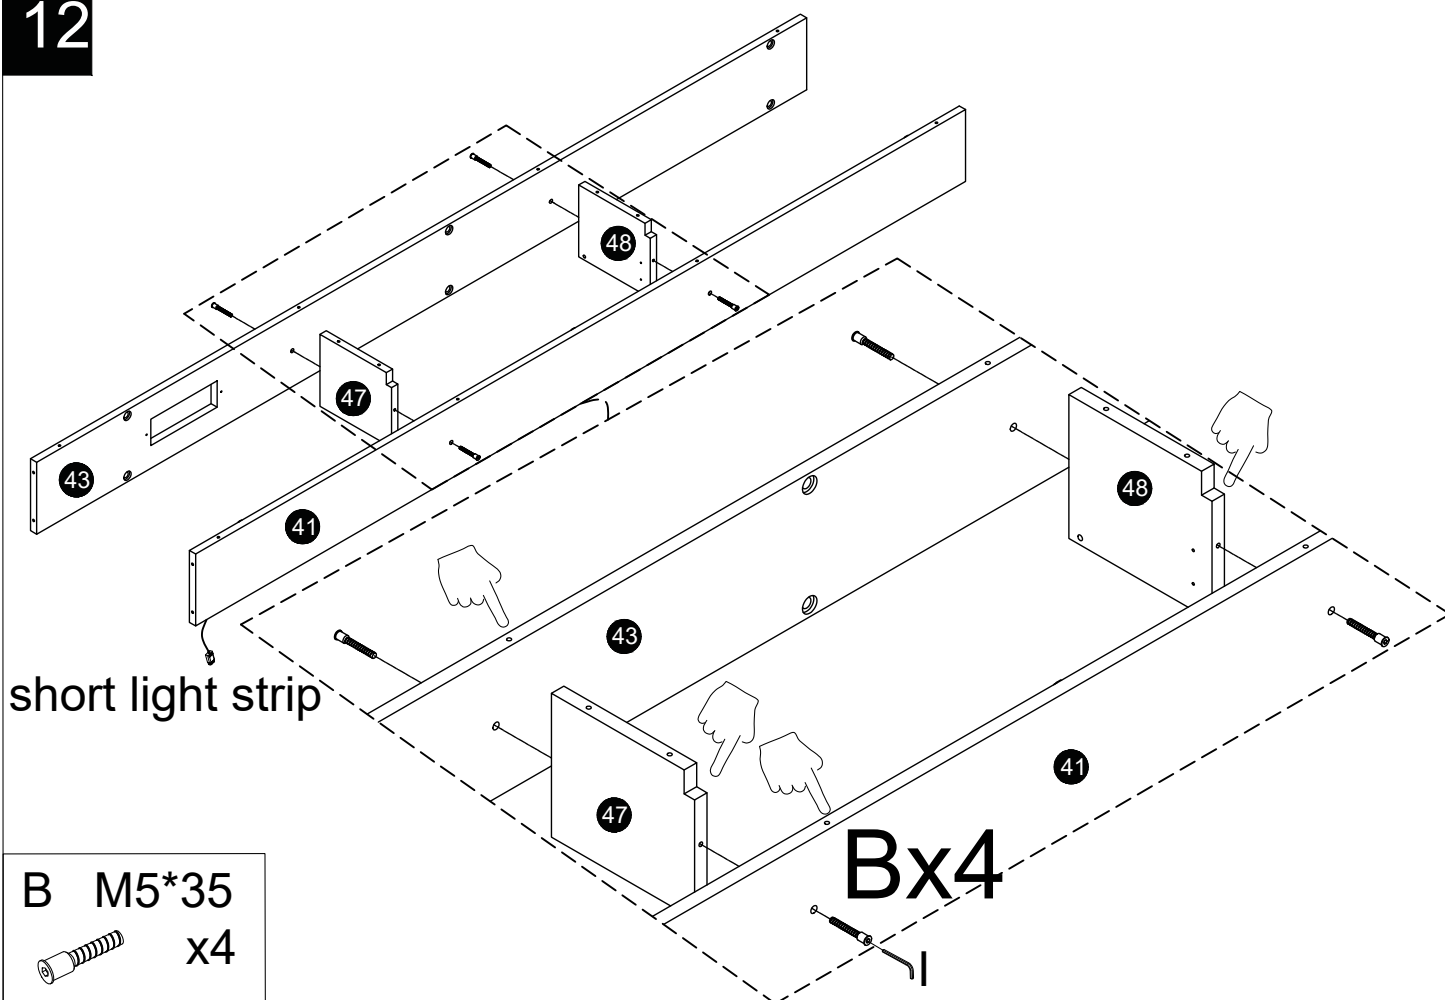

B M5*35
x4


Bx4

13

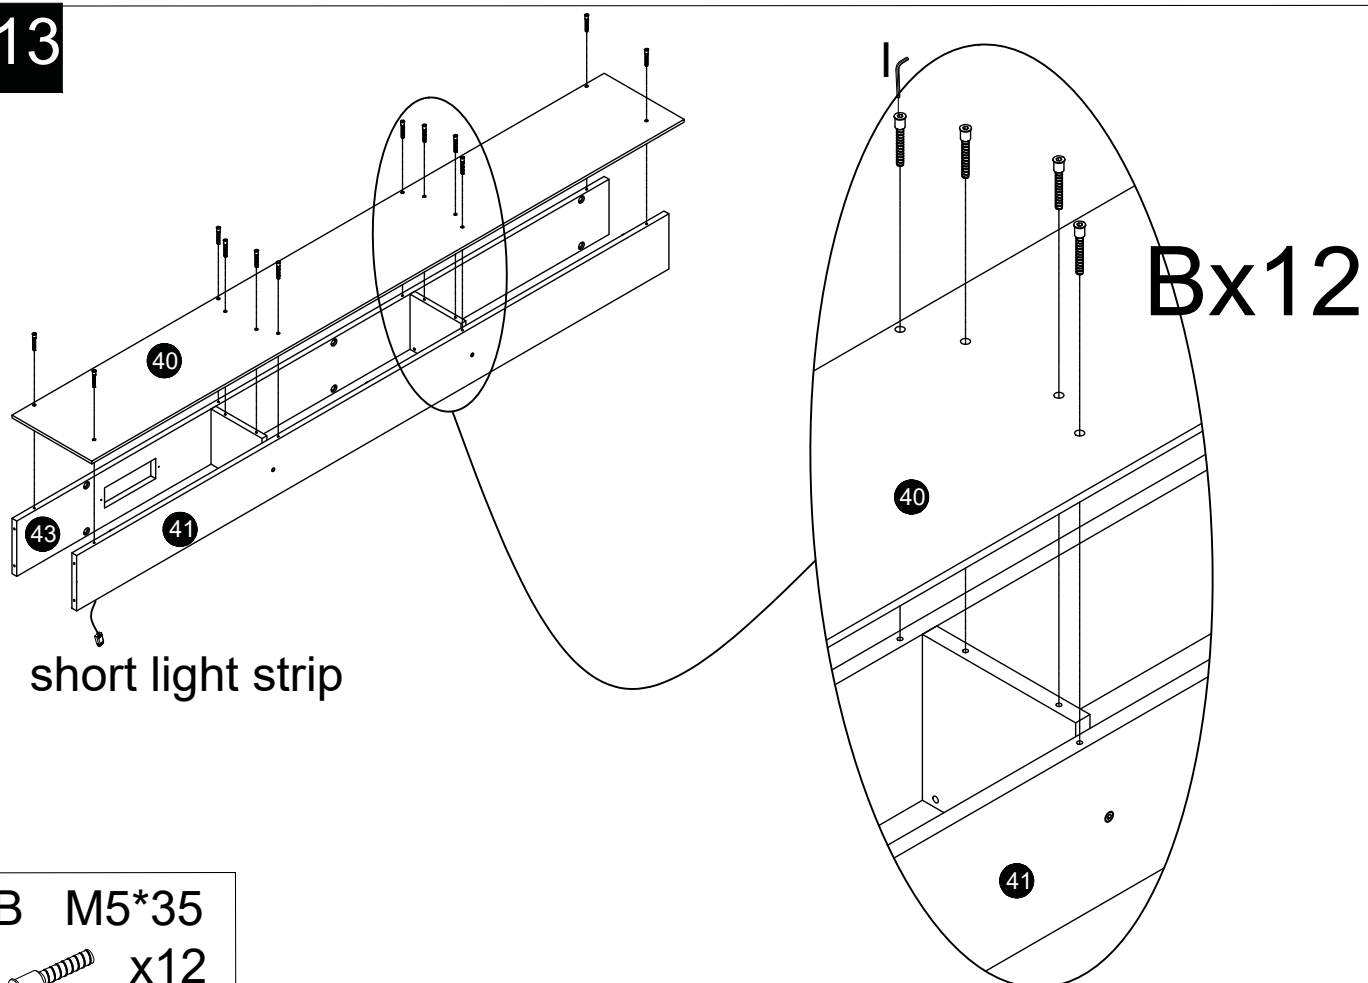


B M5*35
x12

14

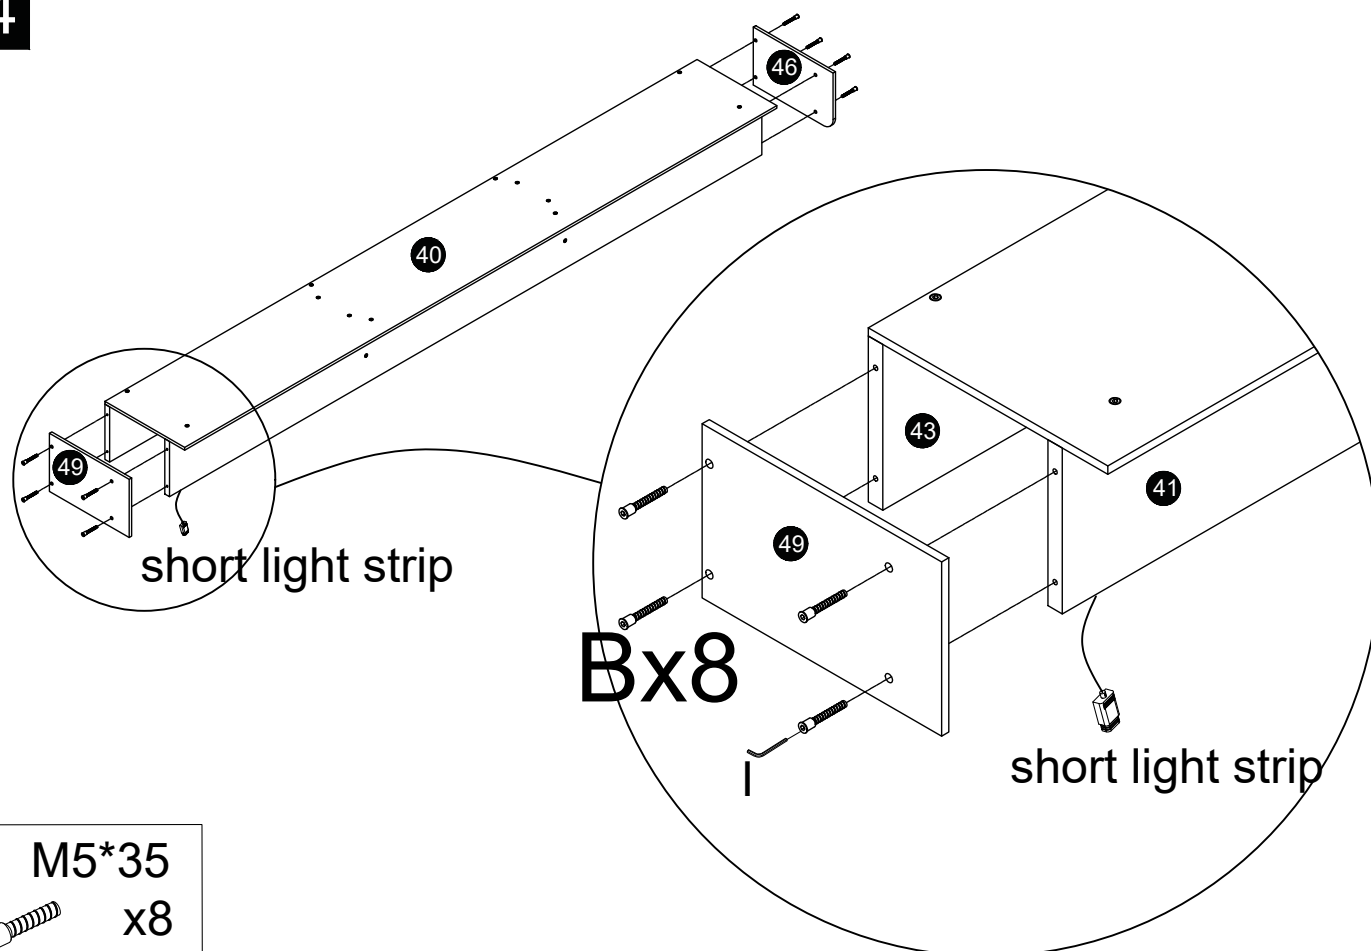

B M5*35
x8


15

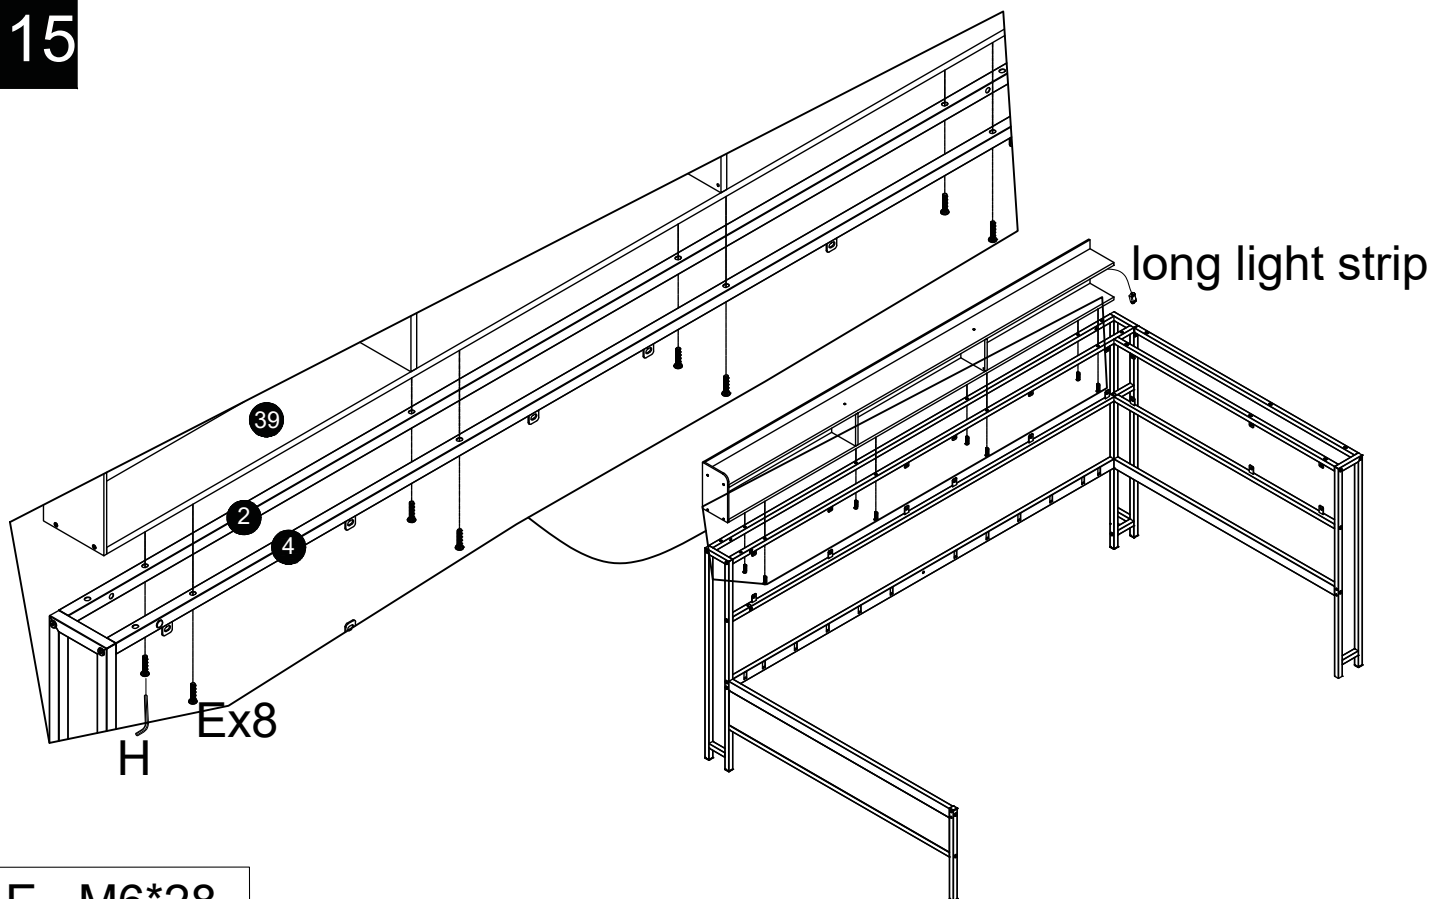

E M6*28
x8




16

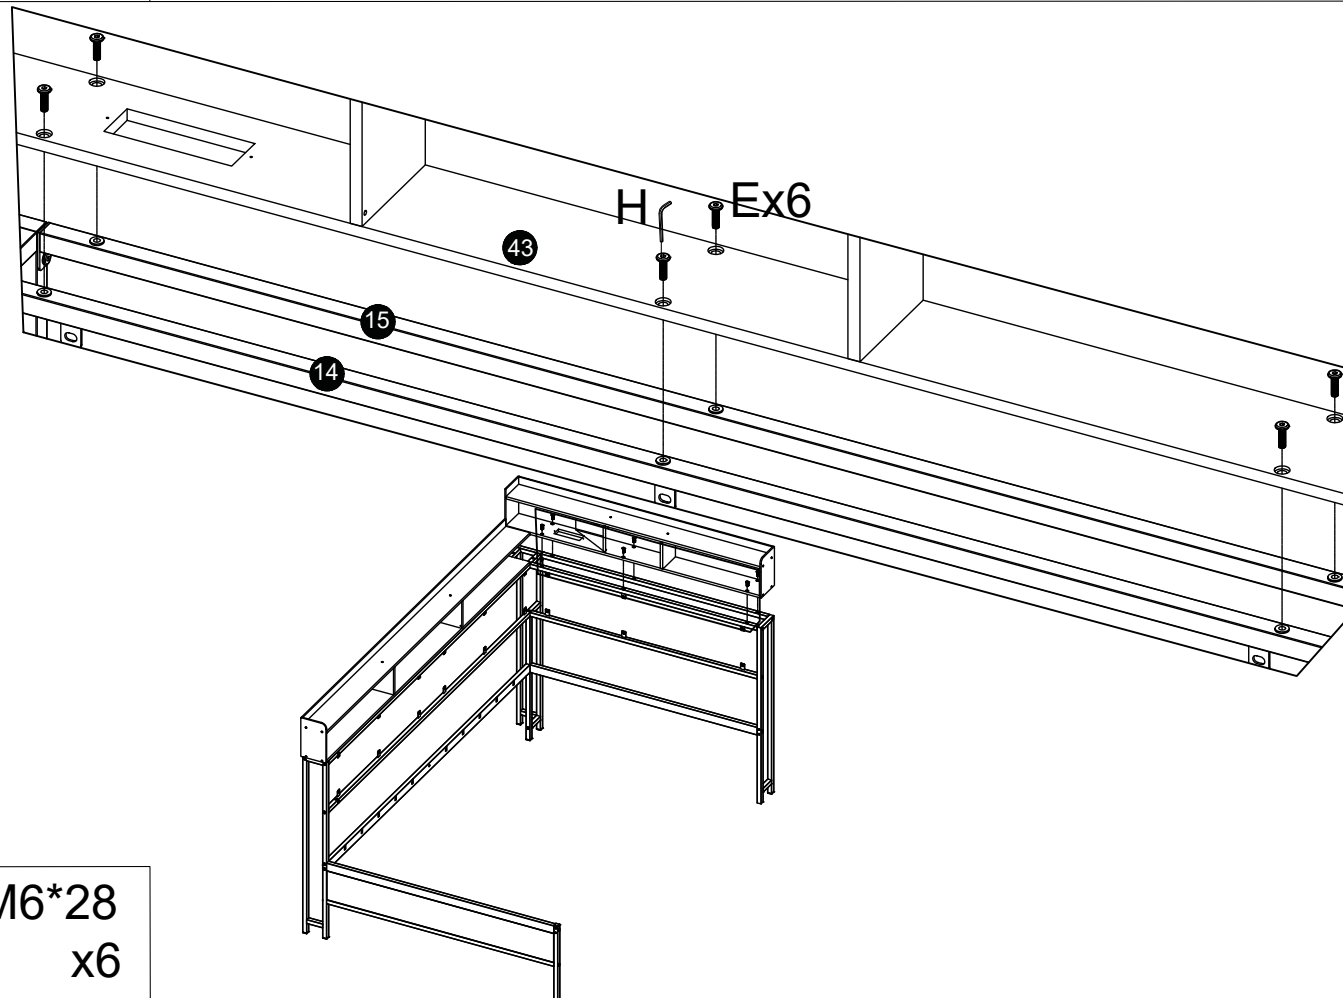

E M6*28
x6



17

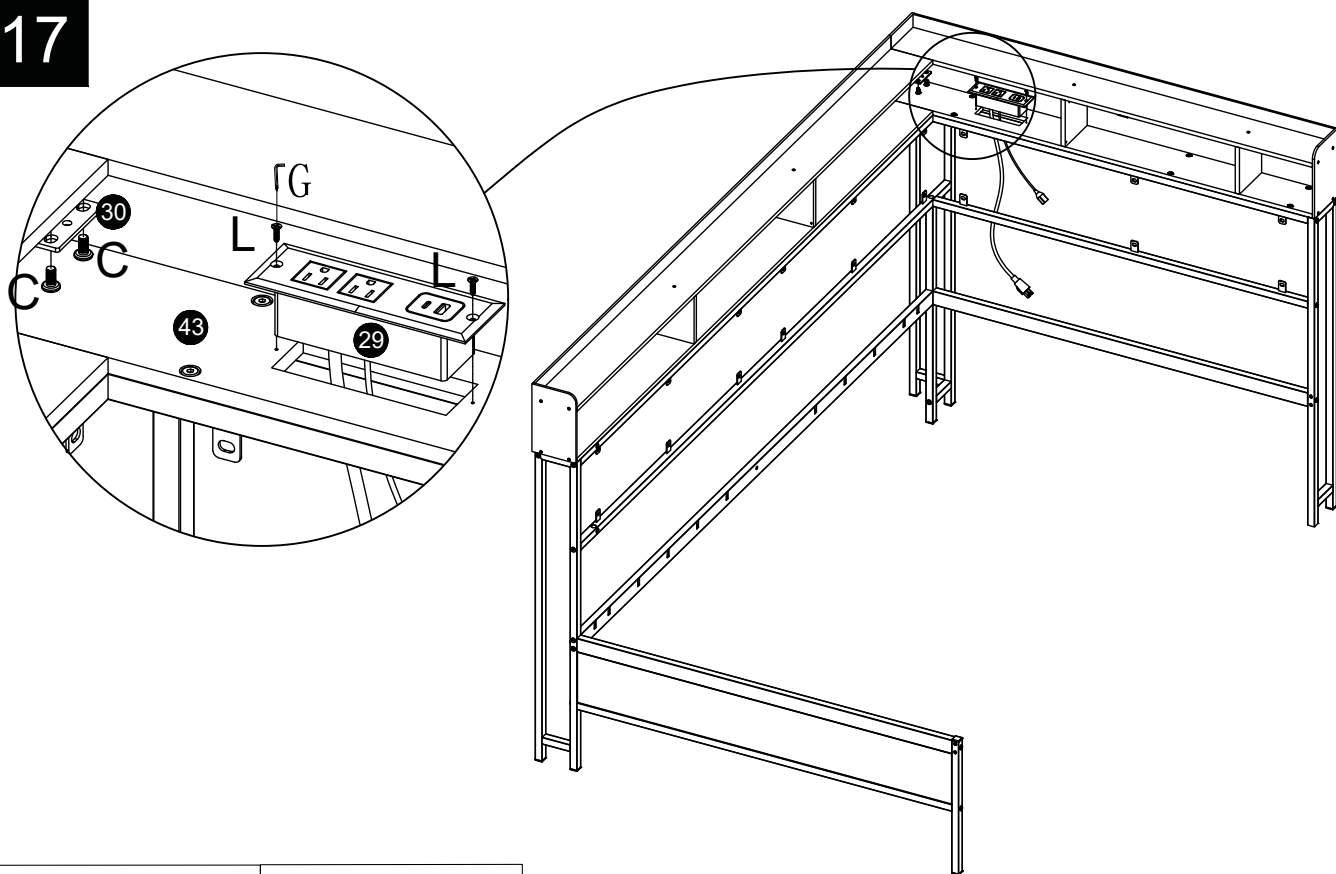

C M6*10




x2

L M4*12



x2

18

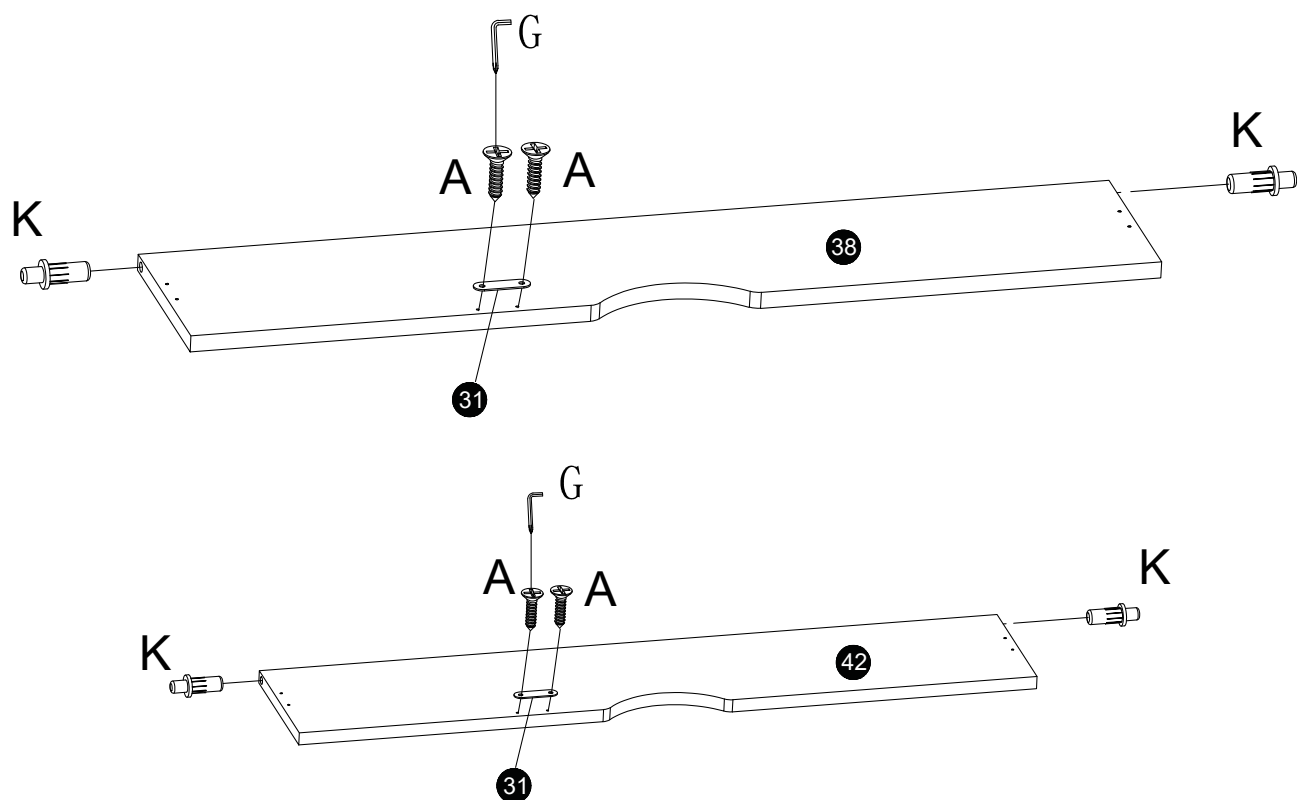

A M3*12




x4

K Ø7*23




x4

19



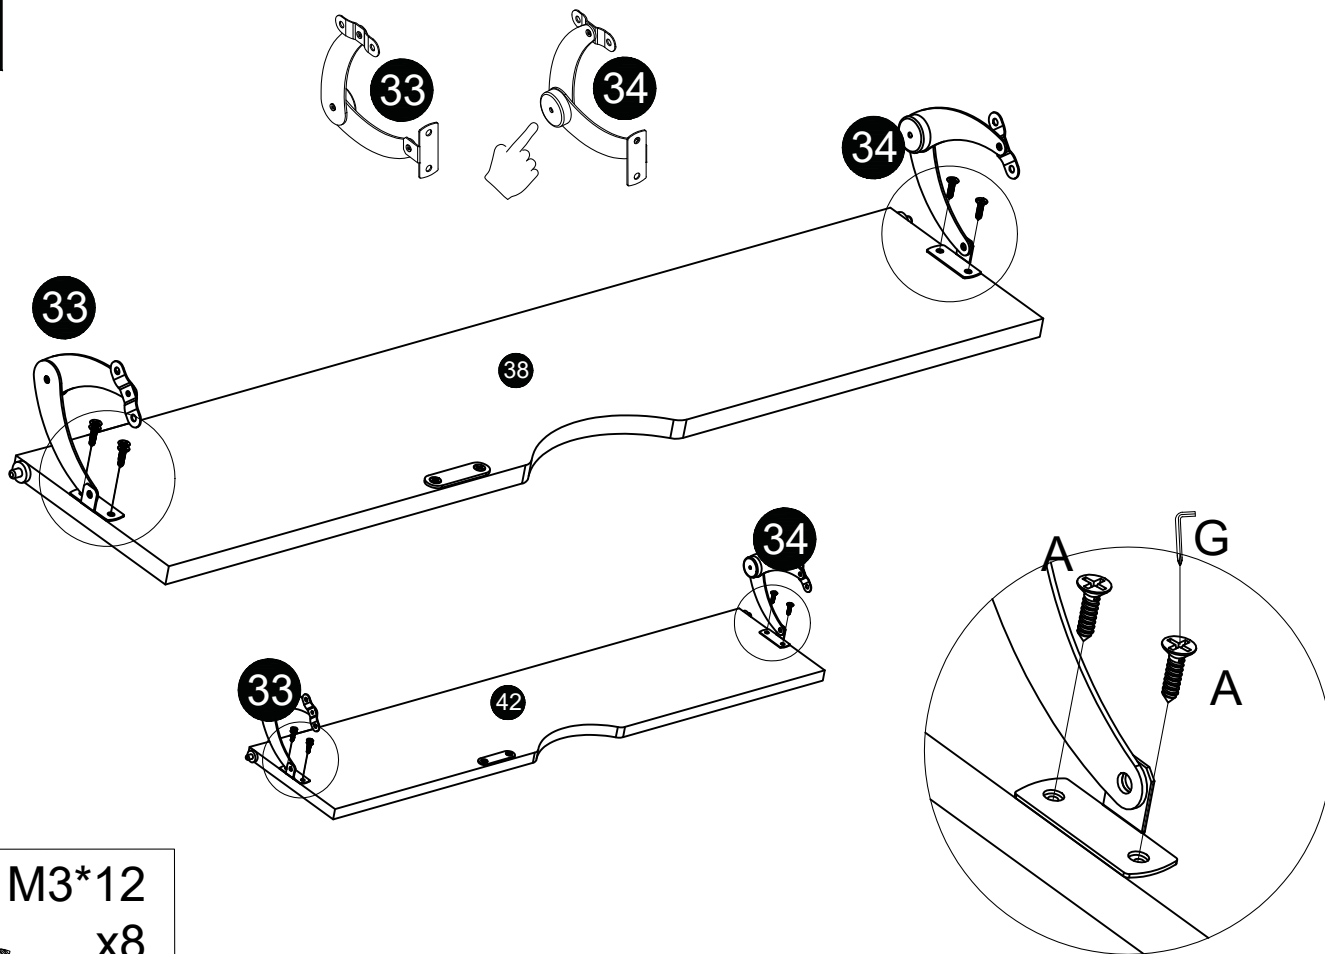


20

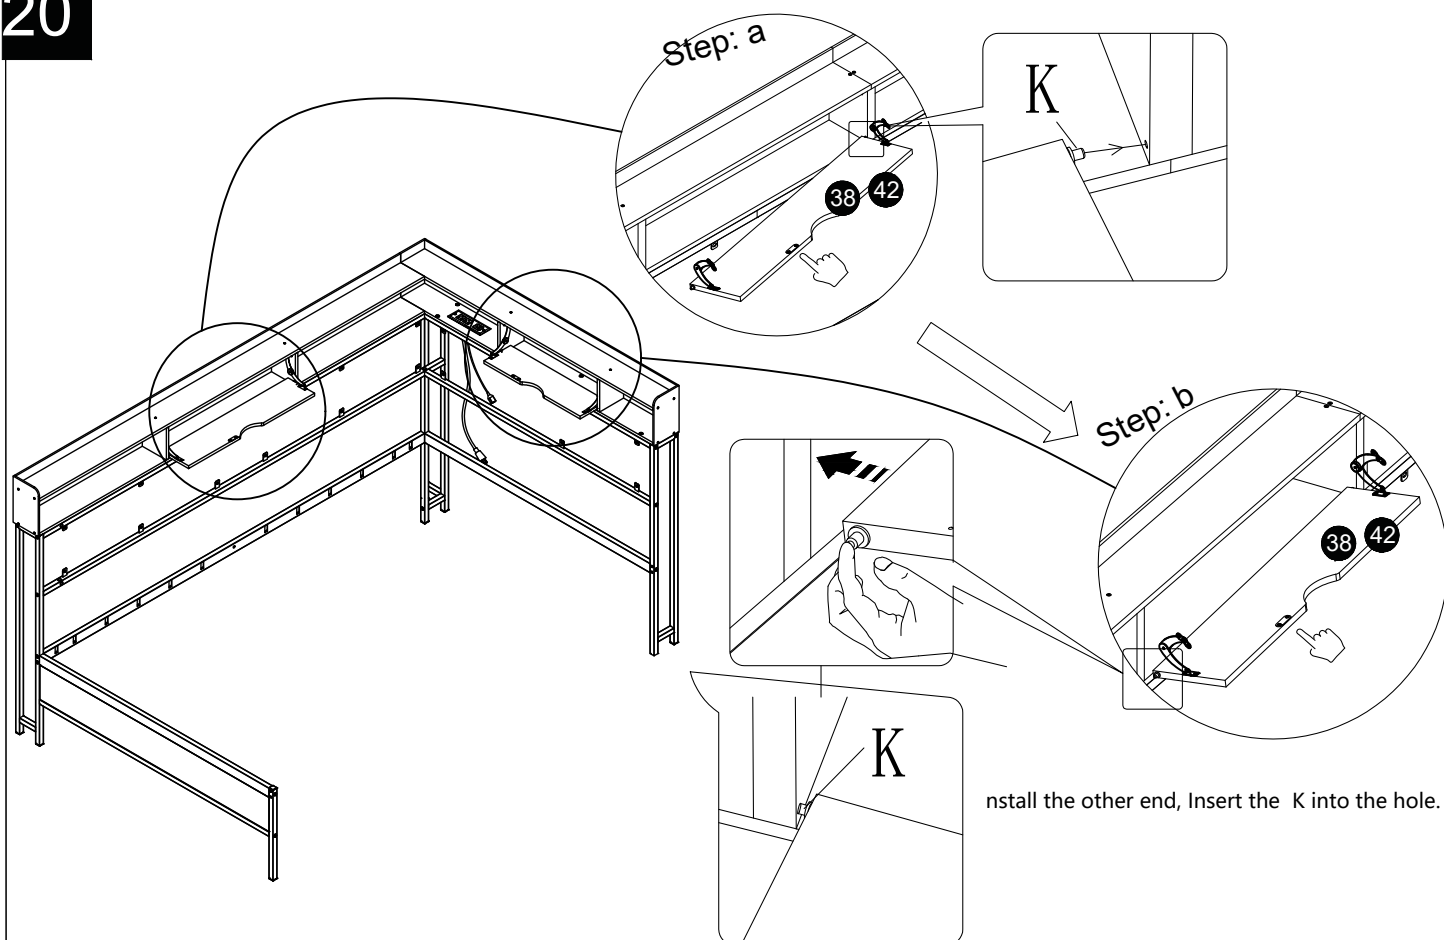

21


Pay attention to the installation direction of 33 34

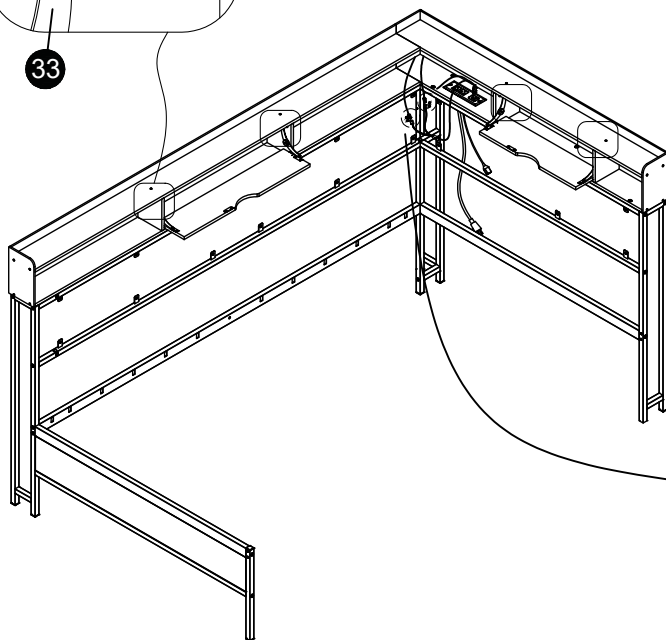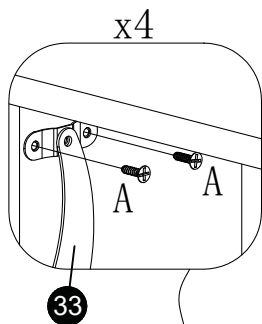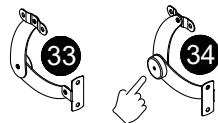

A M3*12
x8




22

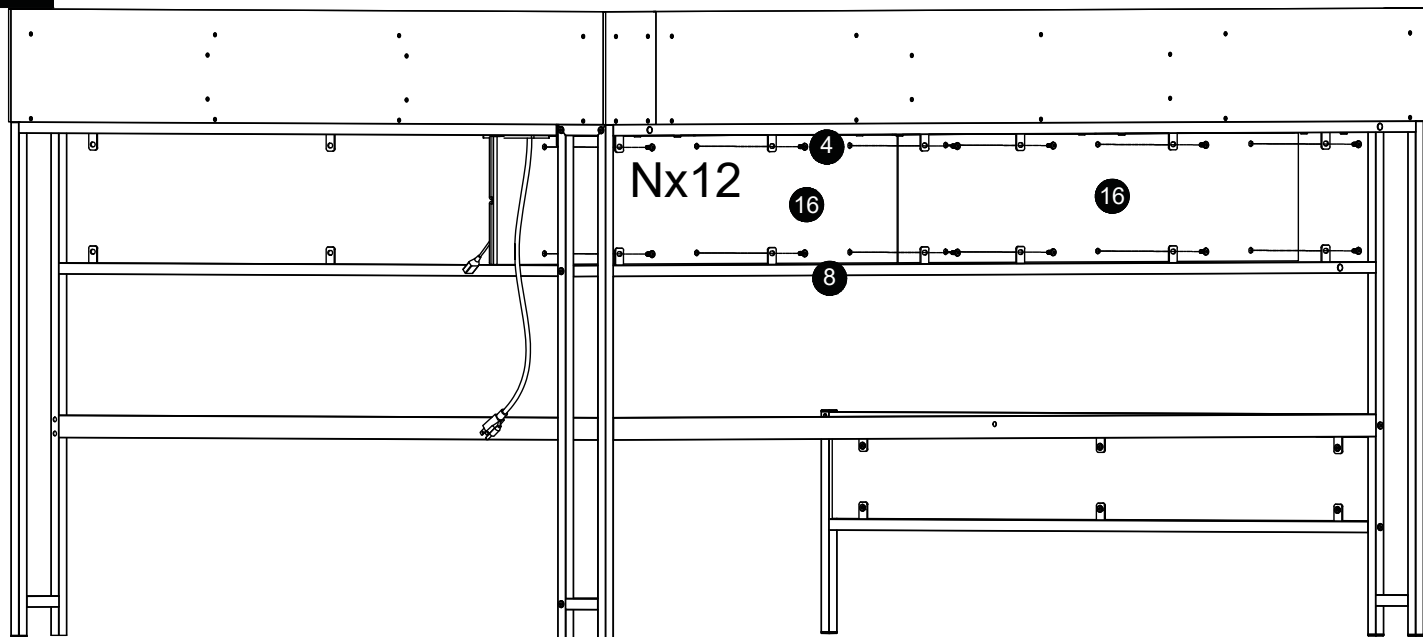

N M6*15
x12




23

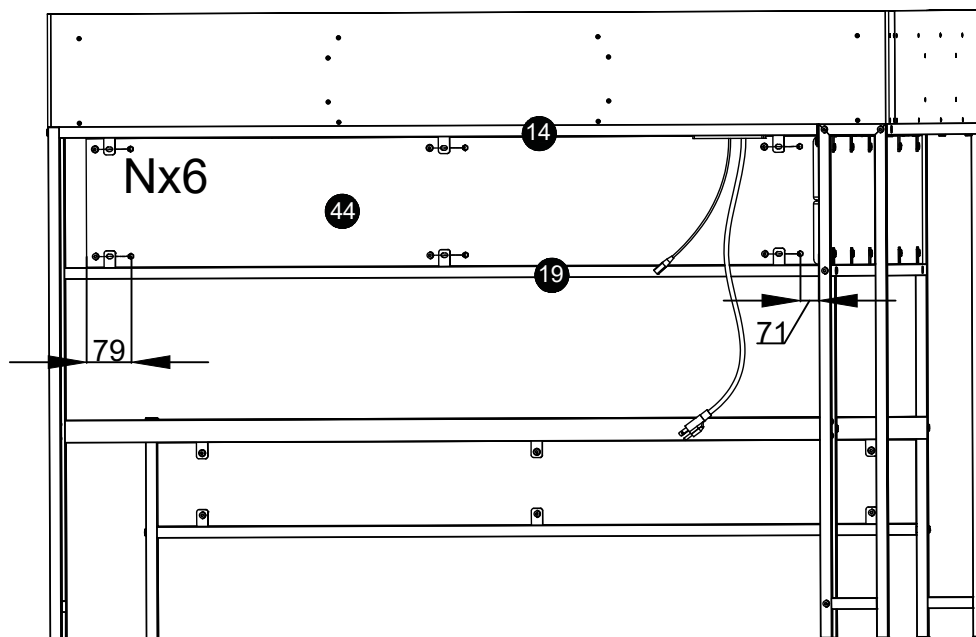

N M6*15
x6




24

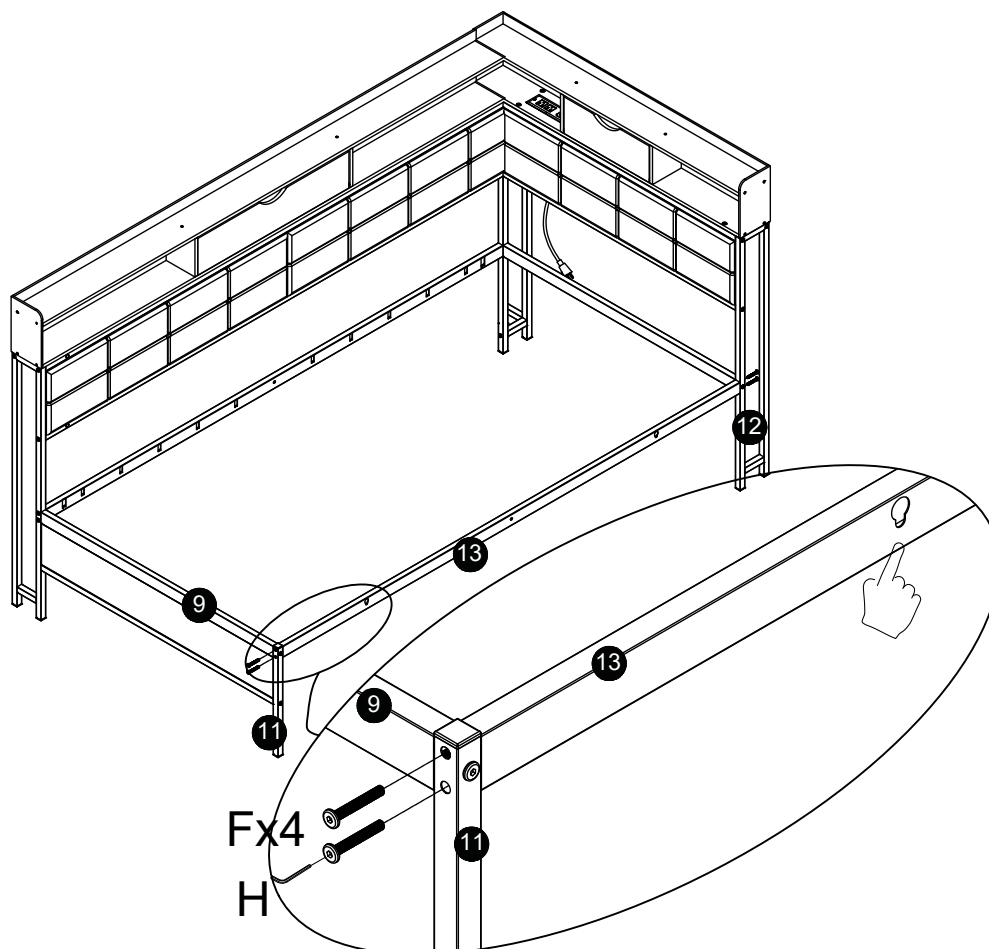

F M6*40
x4





25

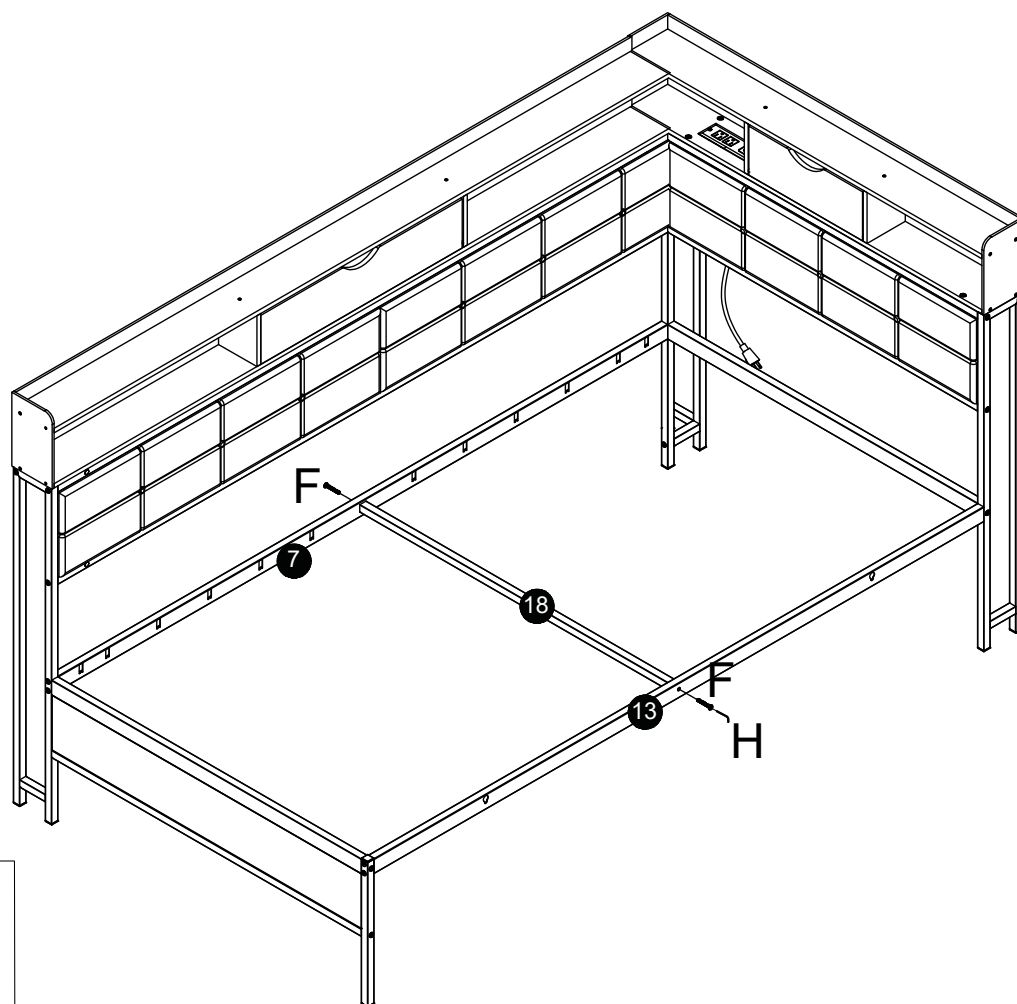


F M6*40
x2




26

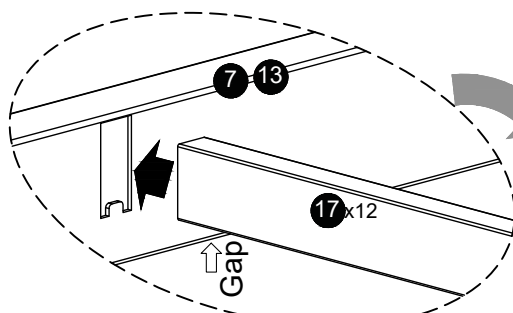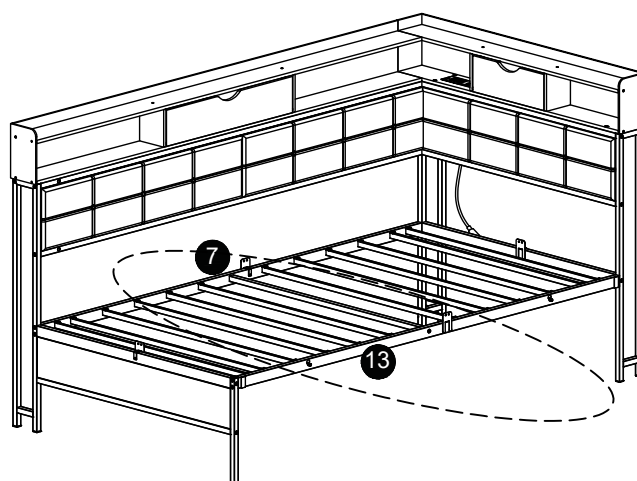


Insert into the snap position

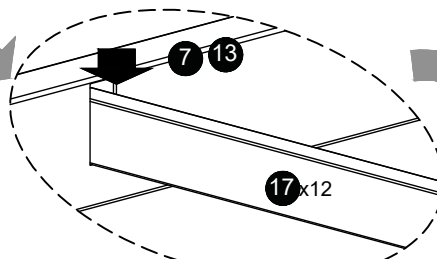


Press down on the gap in the bed slat.

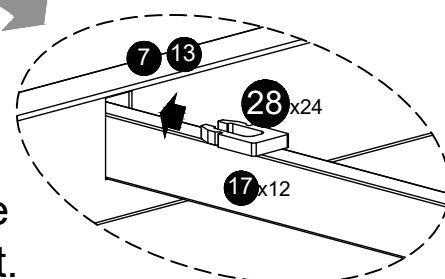

27

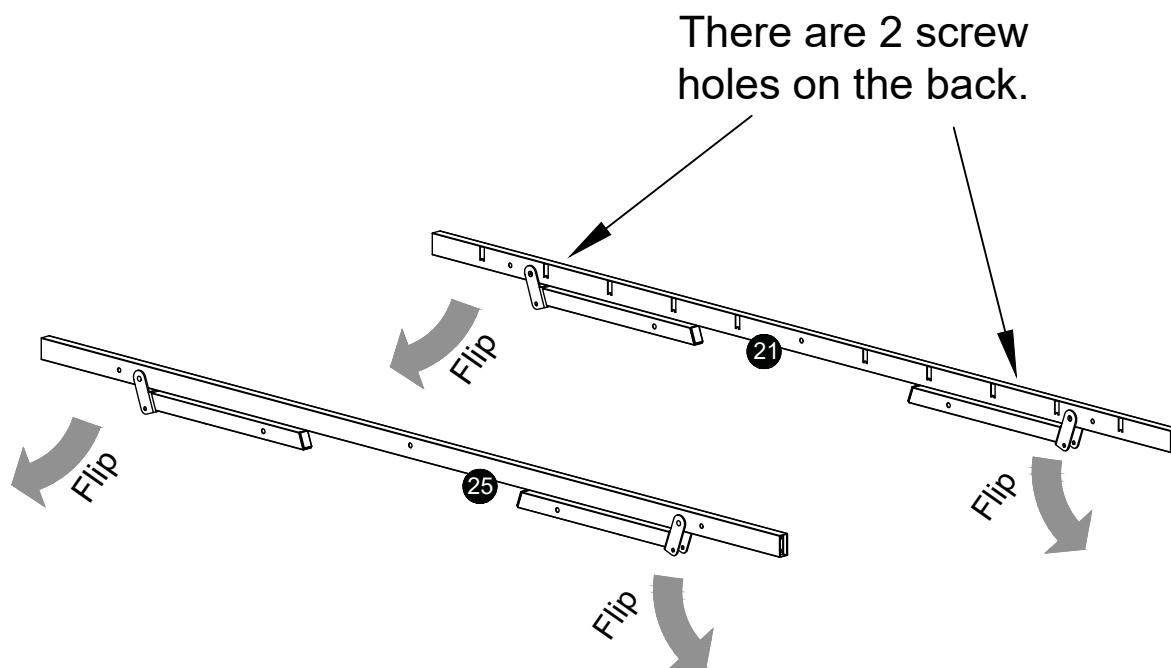


28

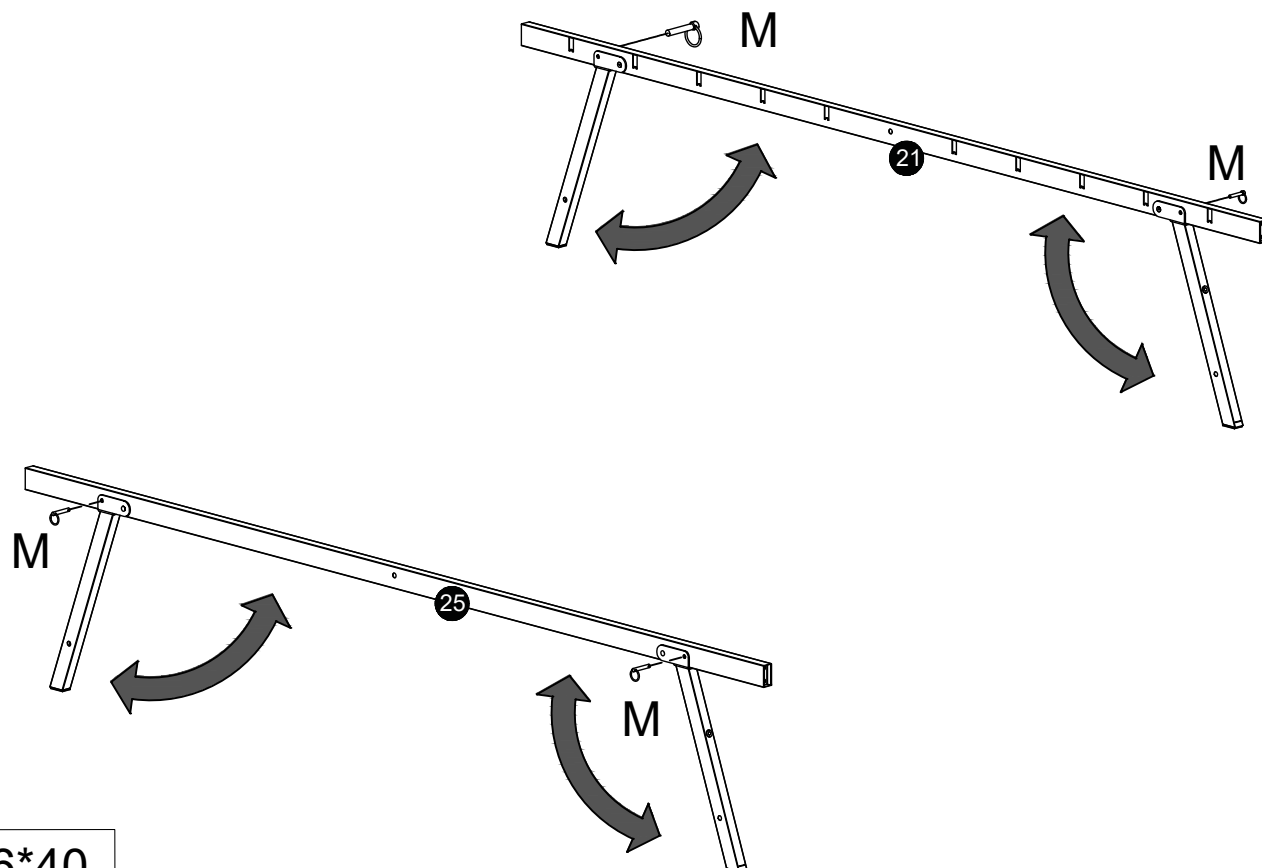

M Ø6*40
x4


29

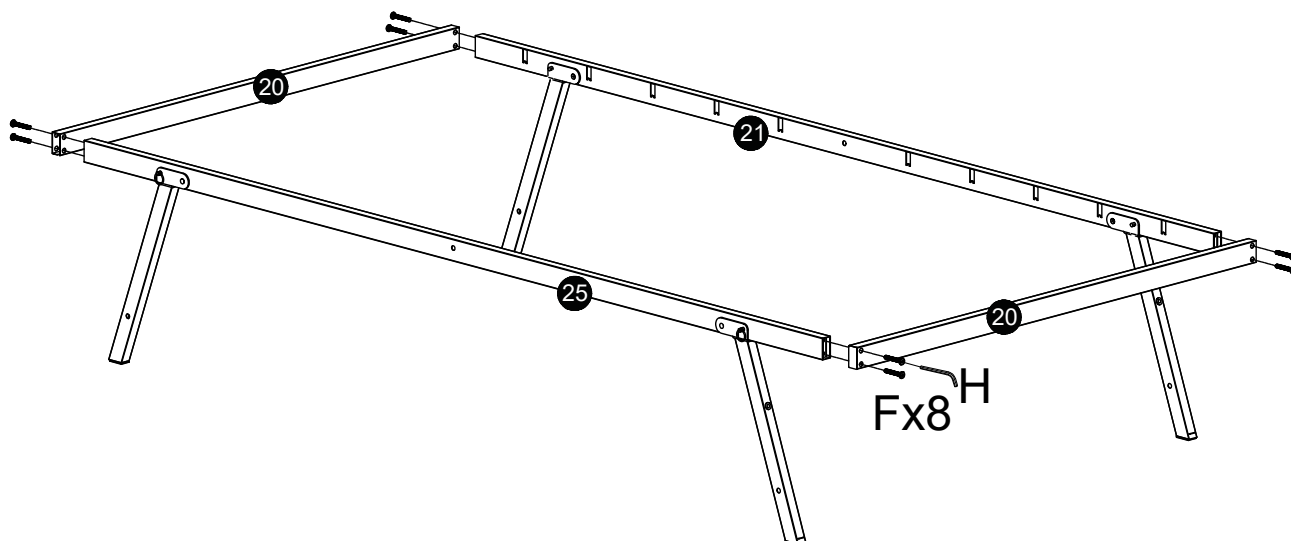


F M6*40
x8



30

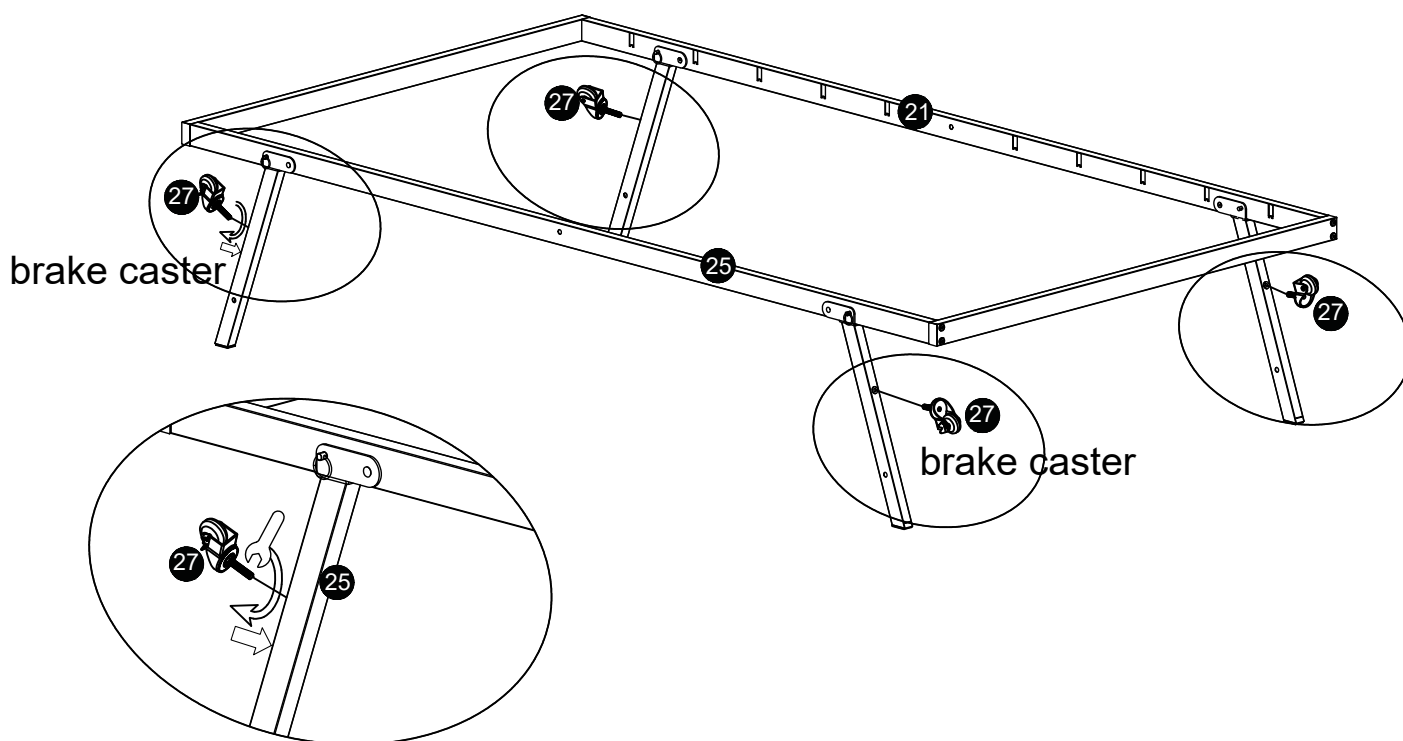


31

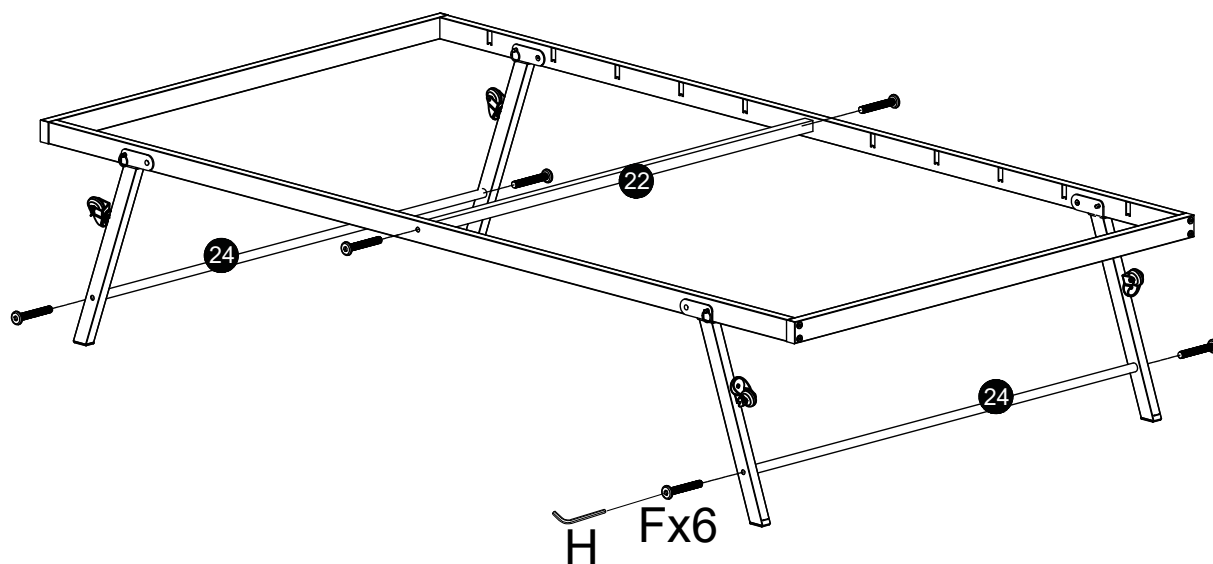


F M6*40
x6


32

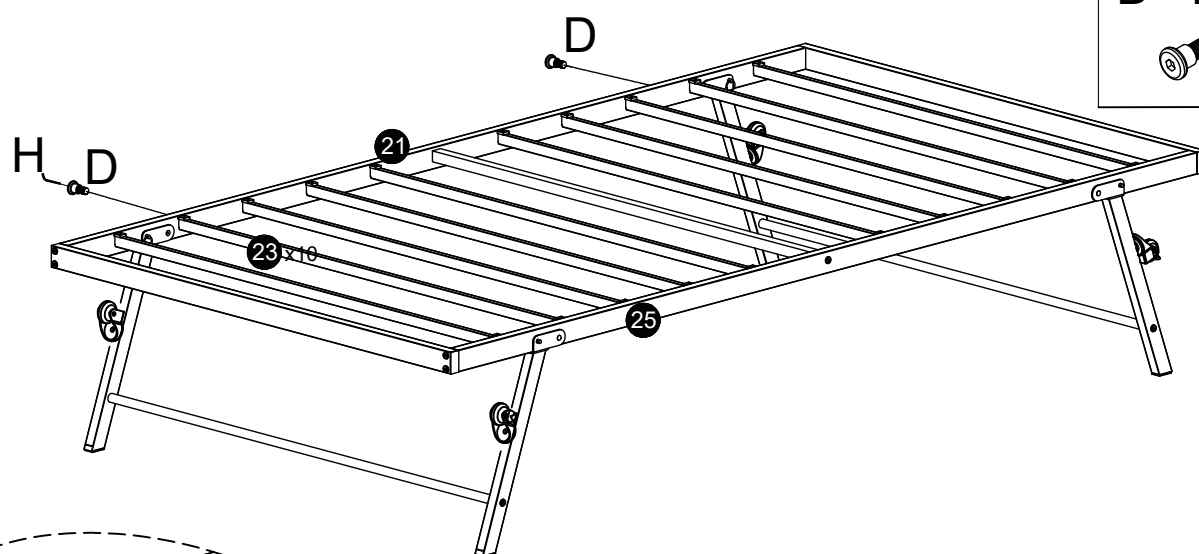


D M6*15
x2

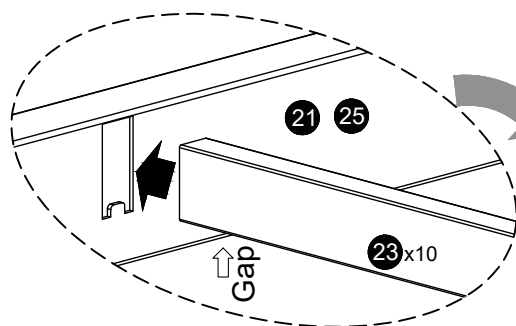


Insert into the snap position

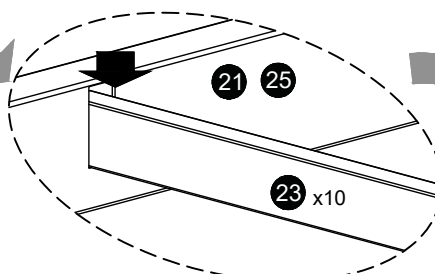


Press down on the
gap in the bed slat.

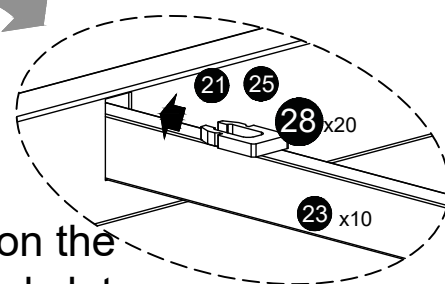

33

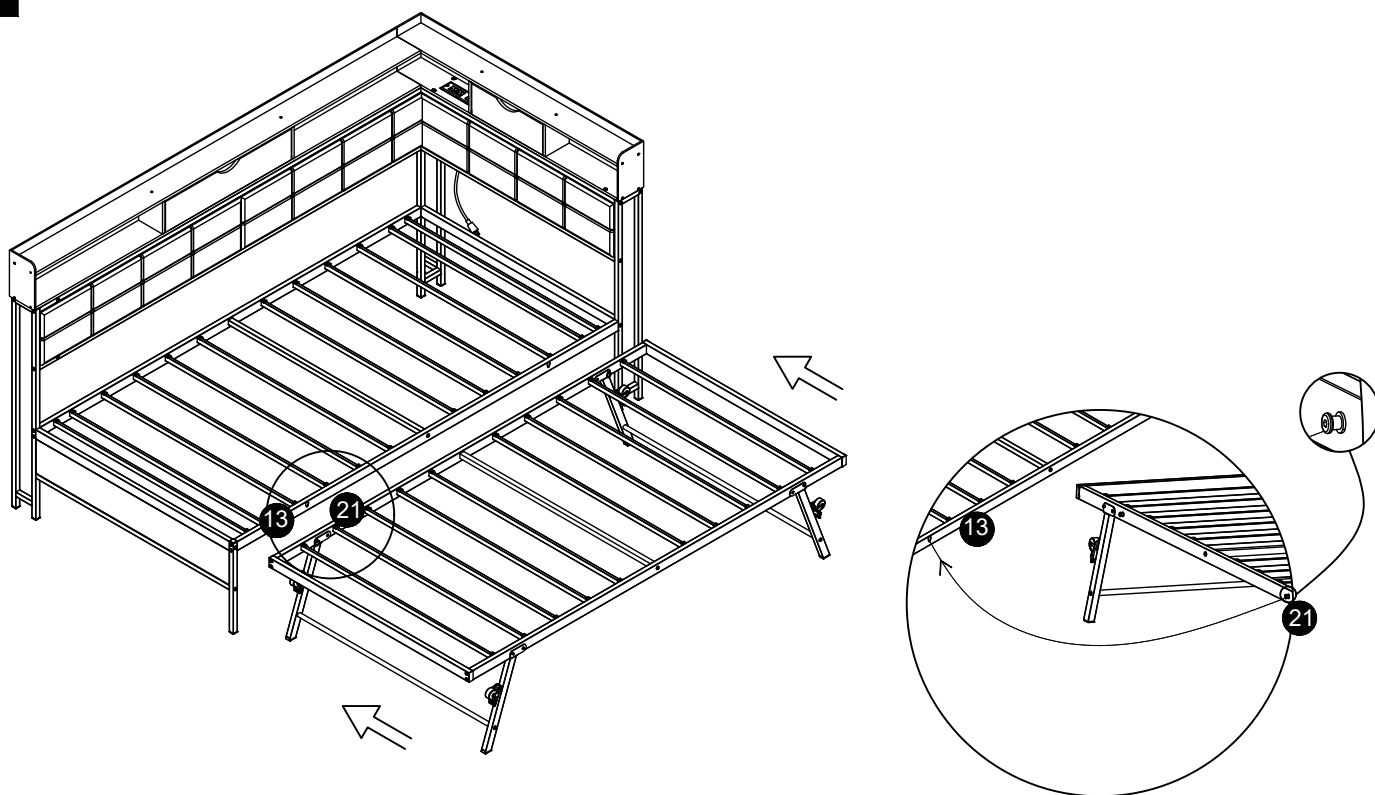


34

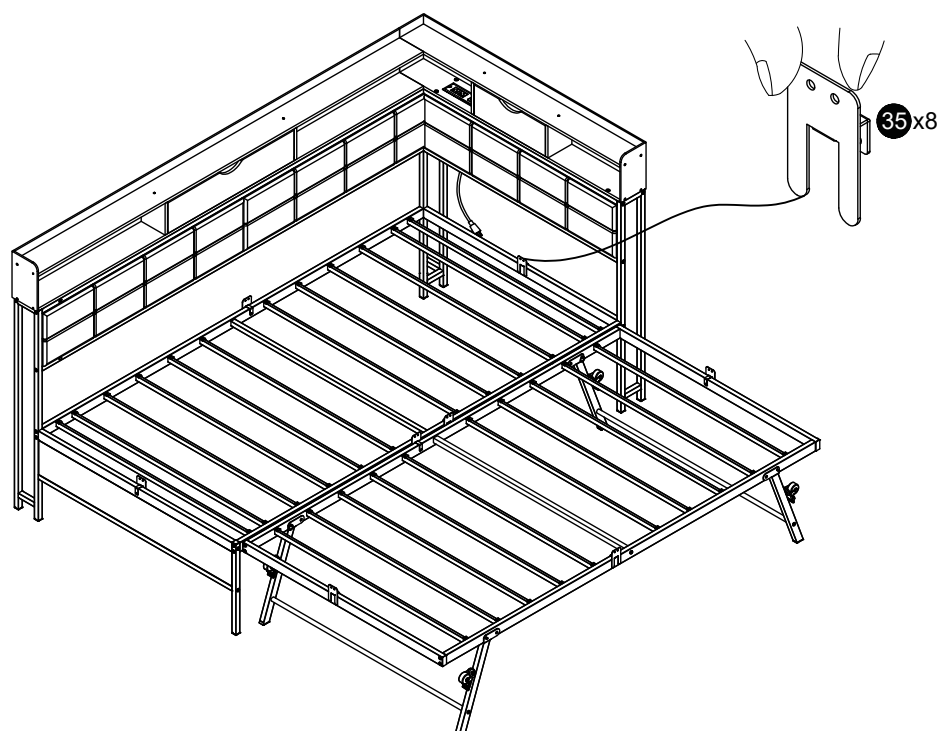


B

Pages 25-42 show installation method B

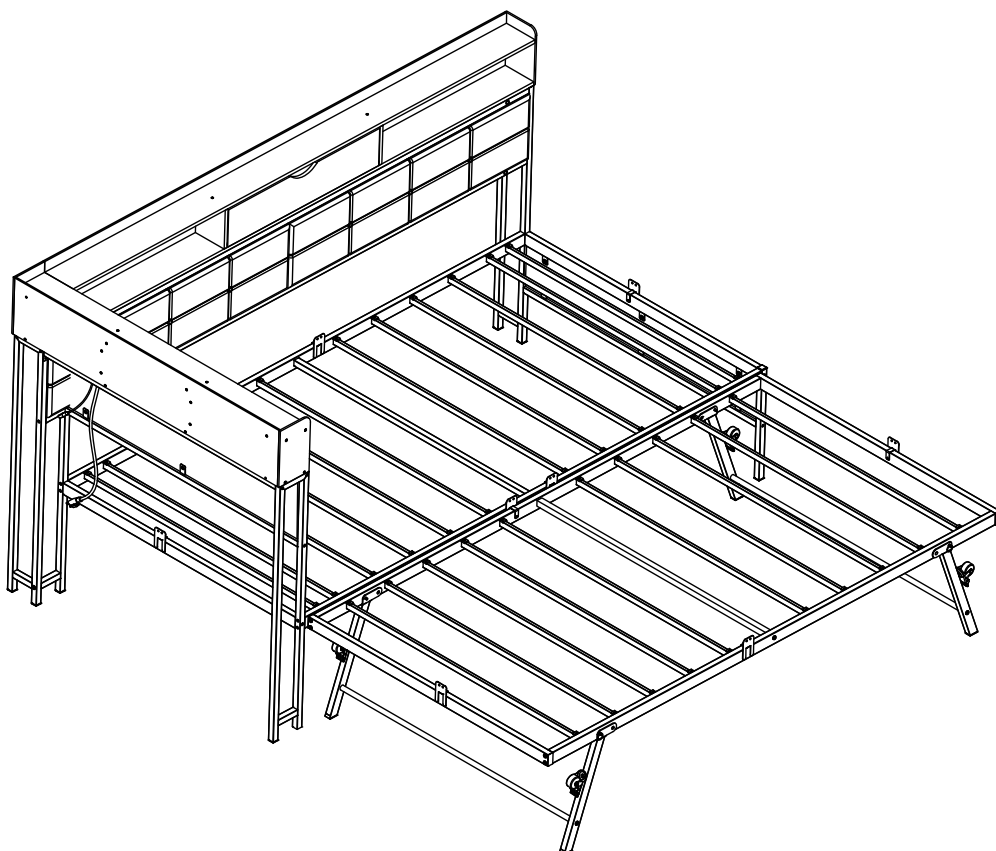


After the product assembly is completed,
check and tighten all screws


35

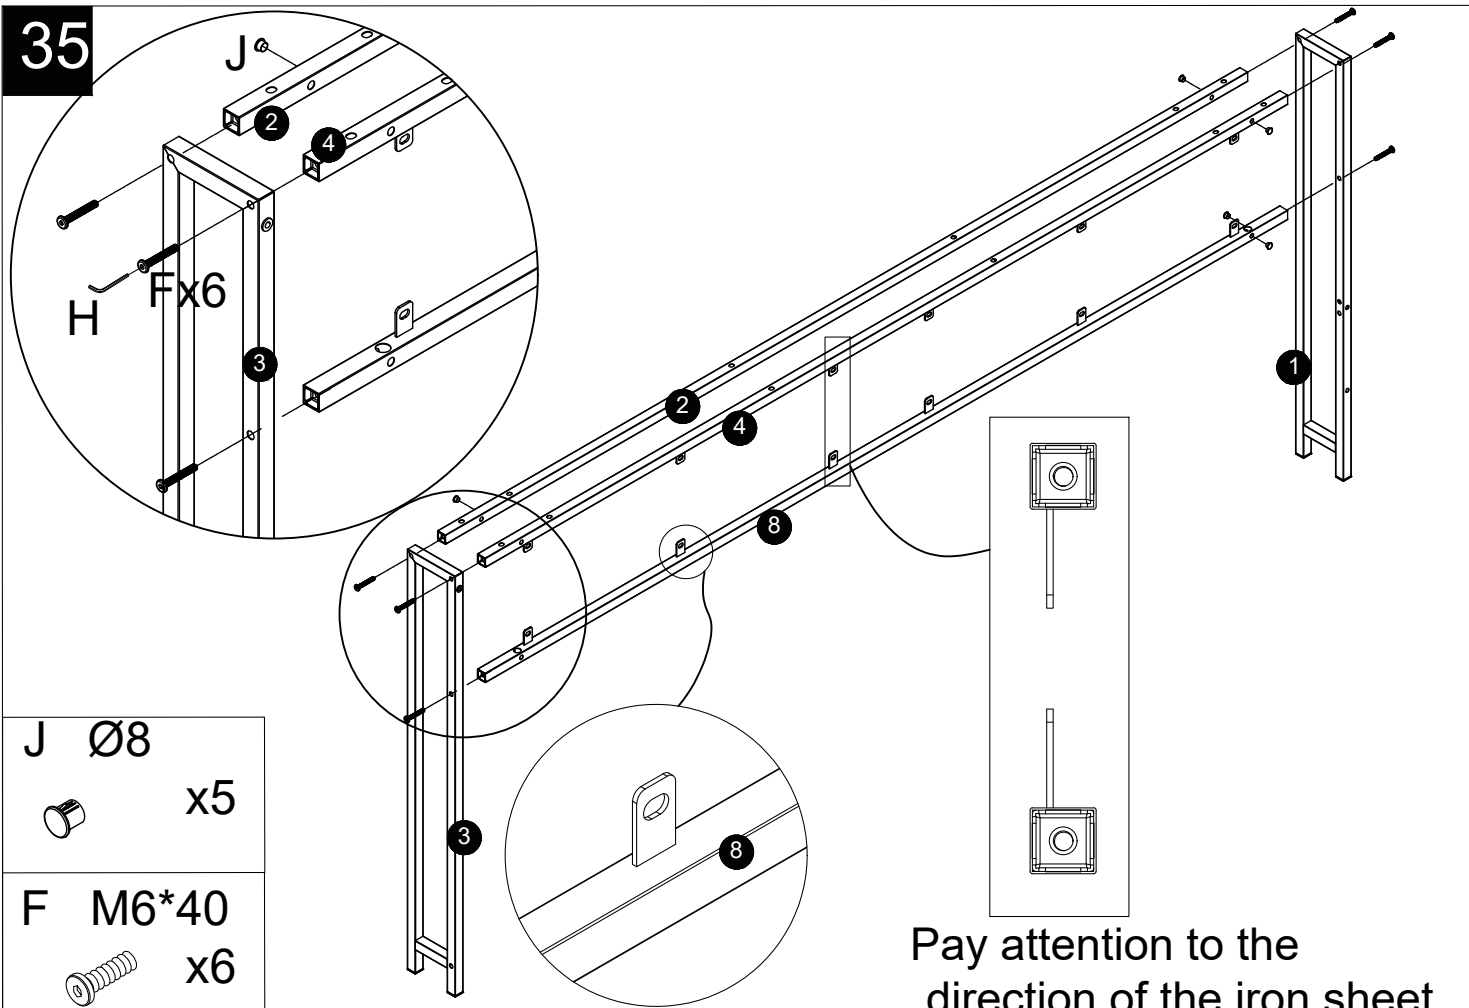


36

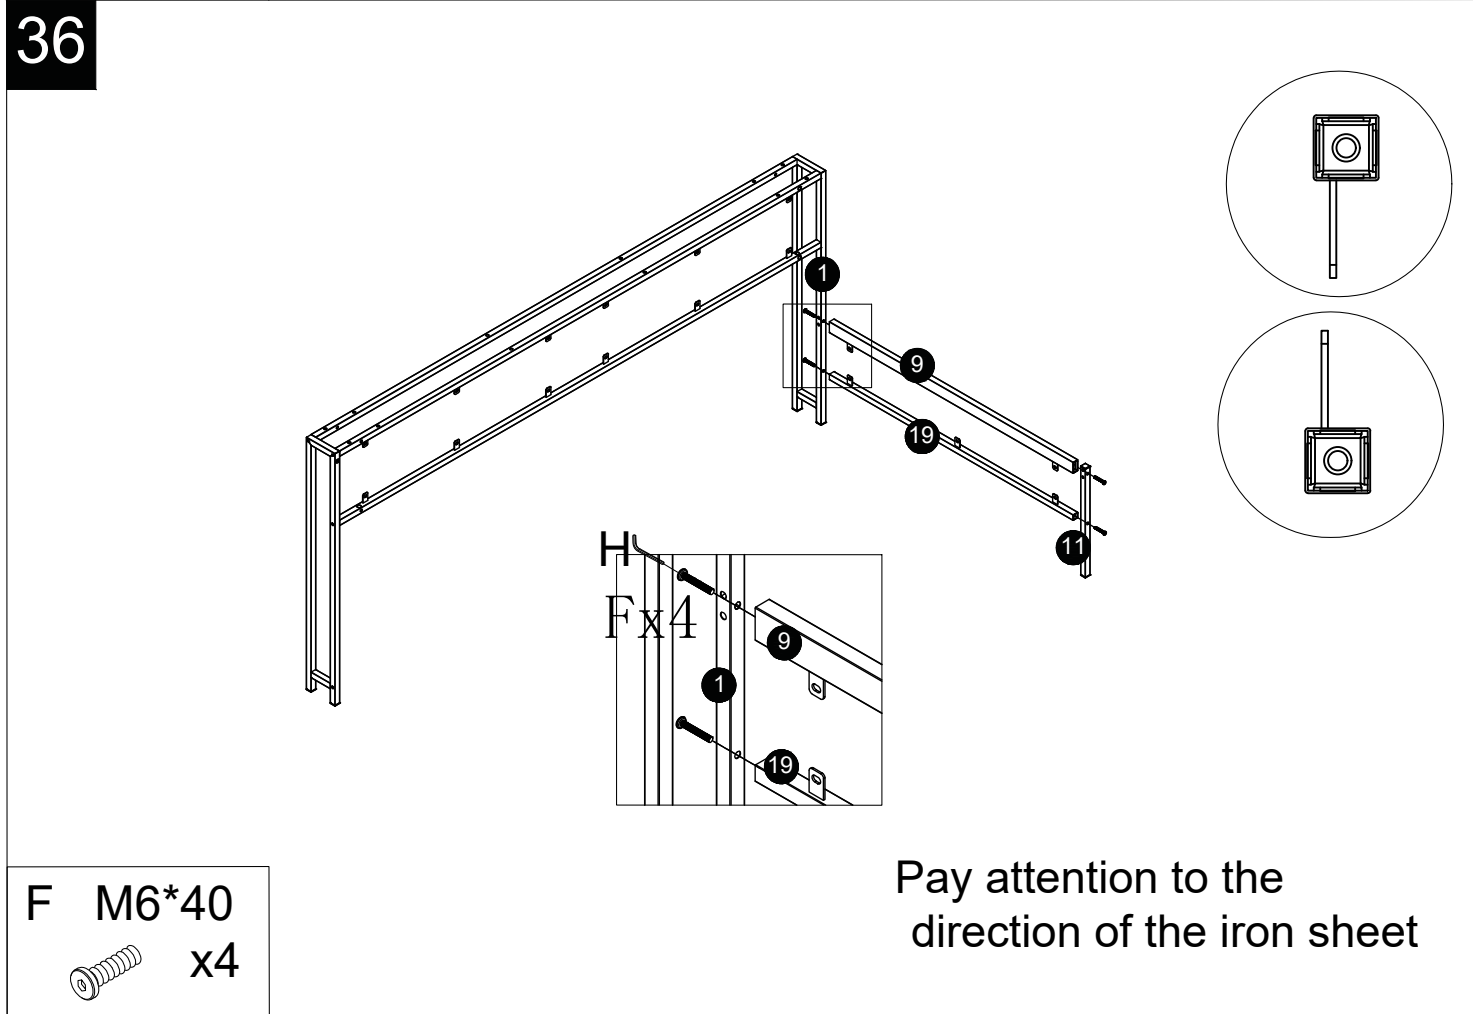


37

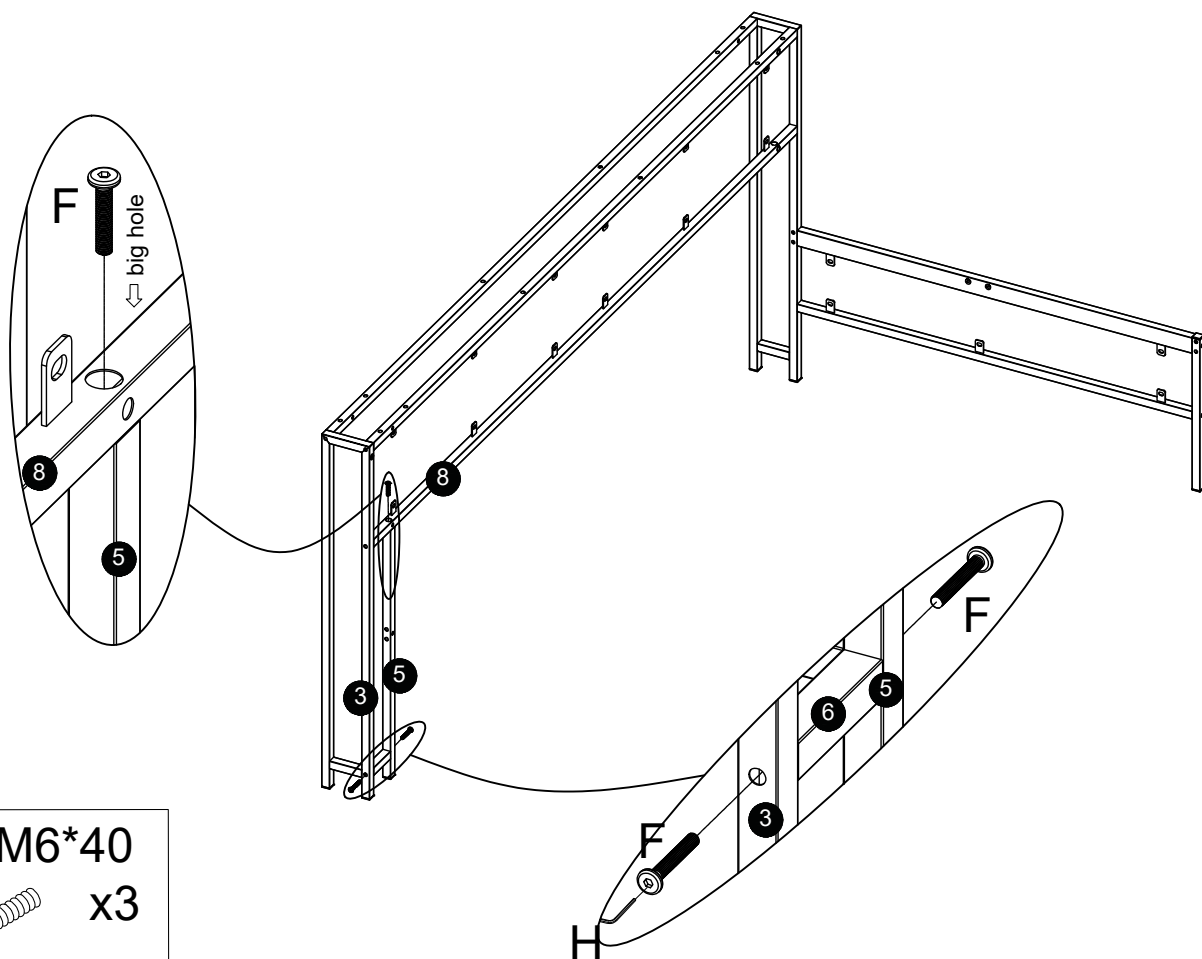

38

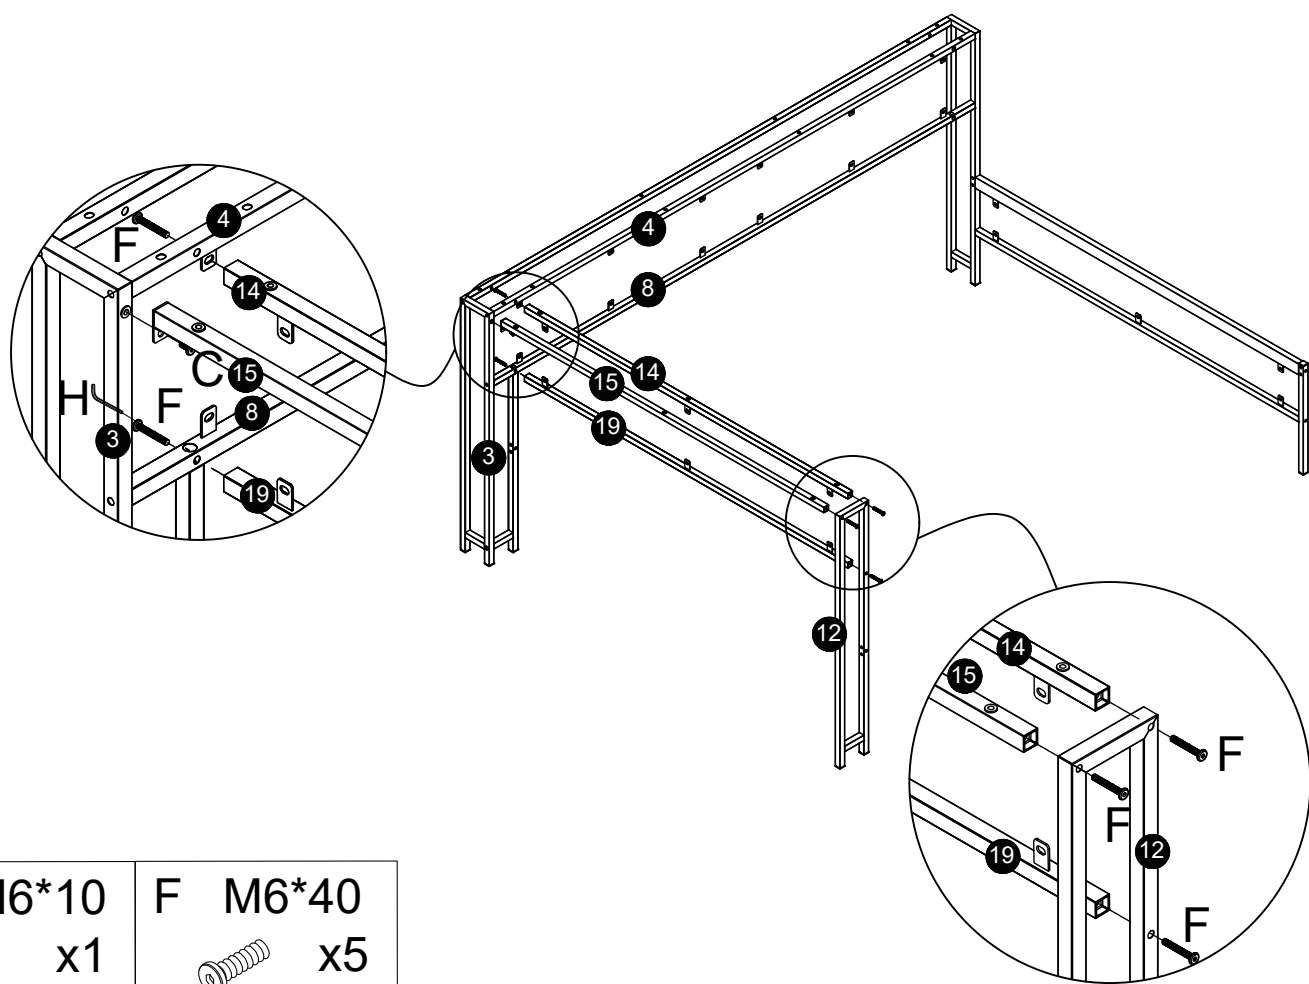


39

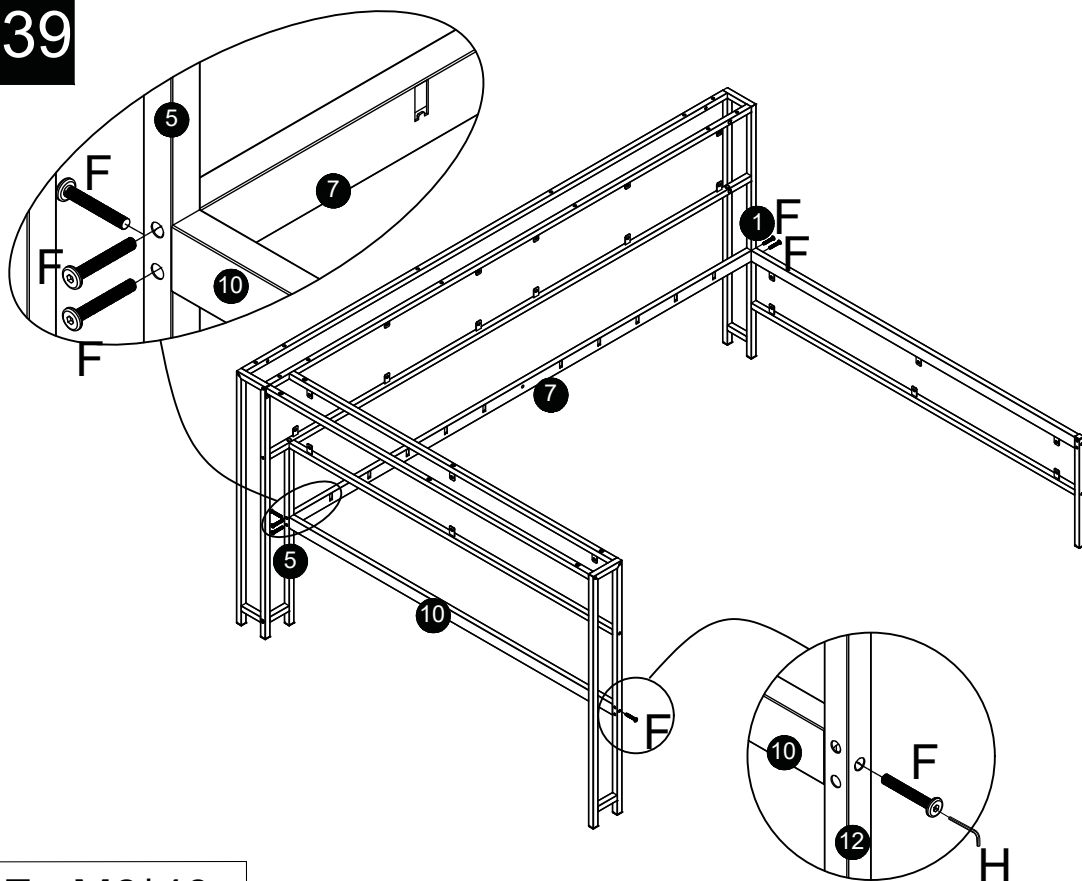

F M6*40
x6





40

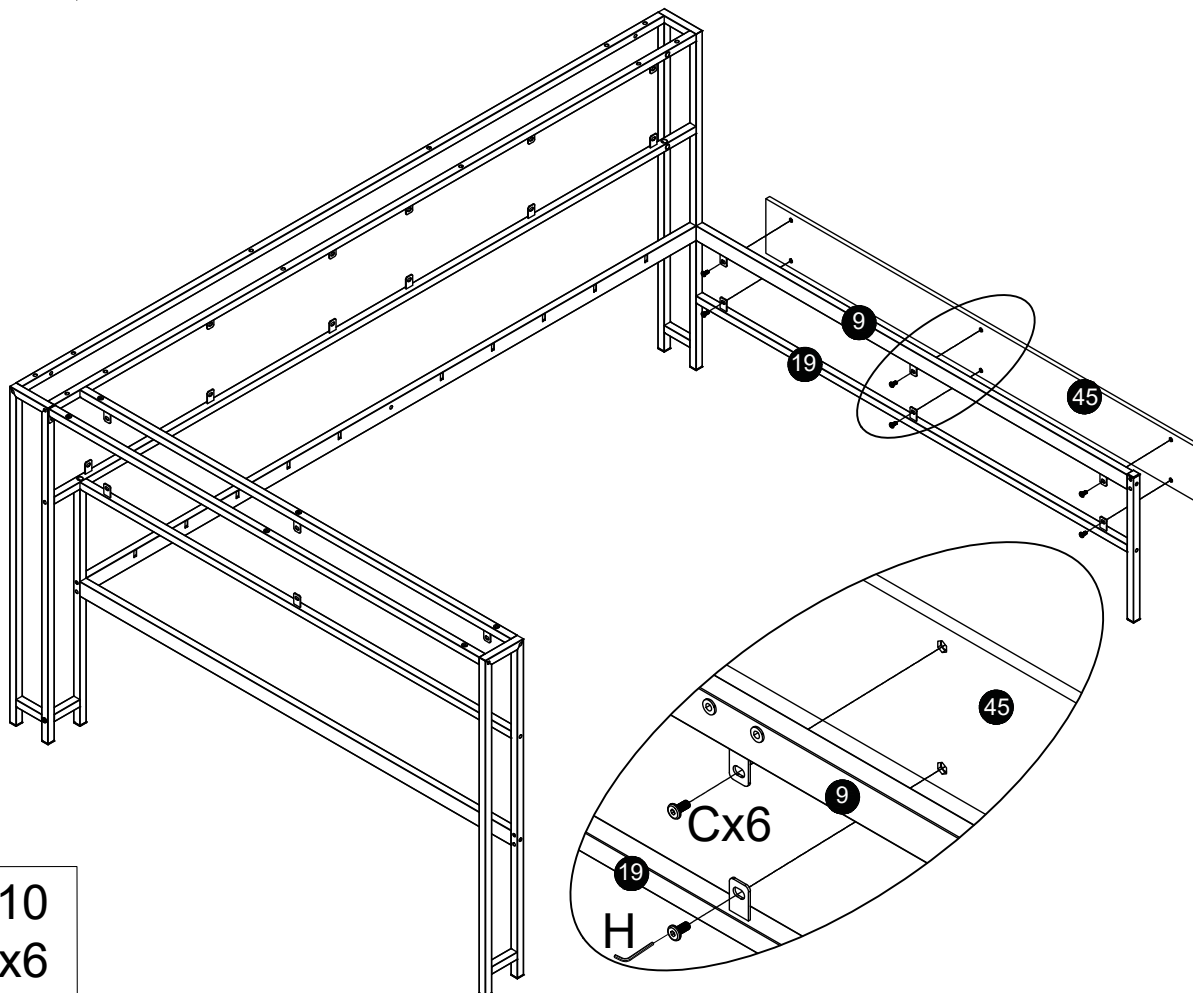


C M6*10
x6





41

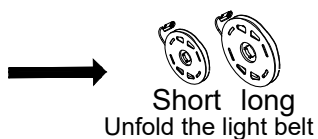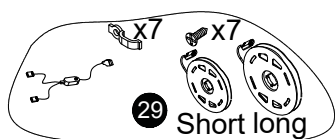

Tear off the end of the tape .Stick it in the position as shown

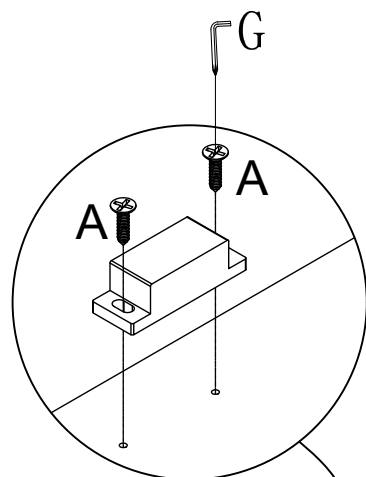


long light strip

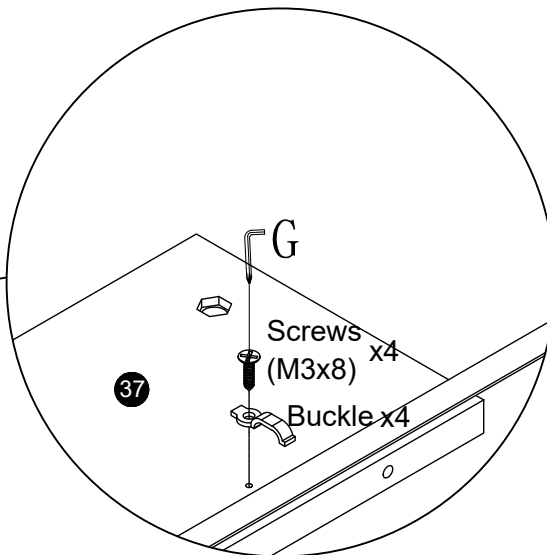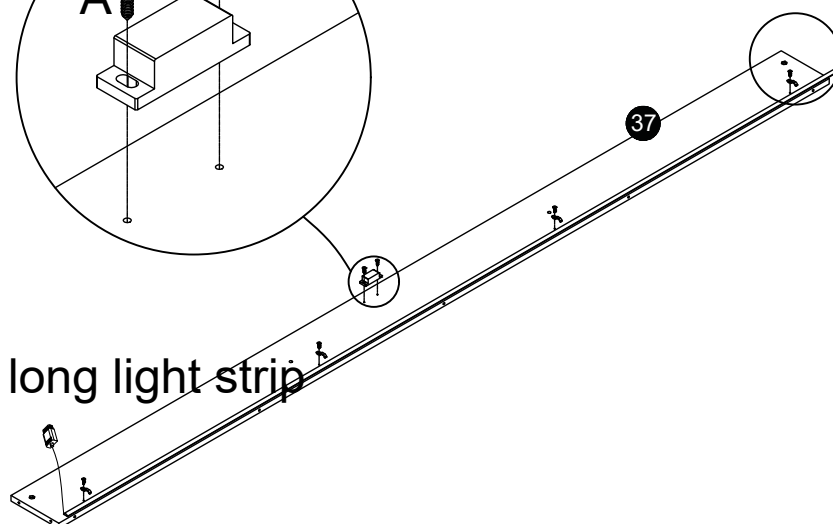

A M3*12
x2



42

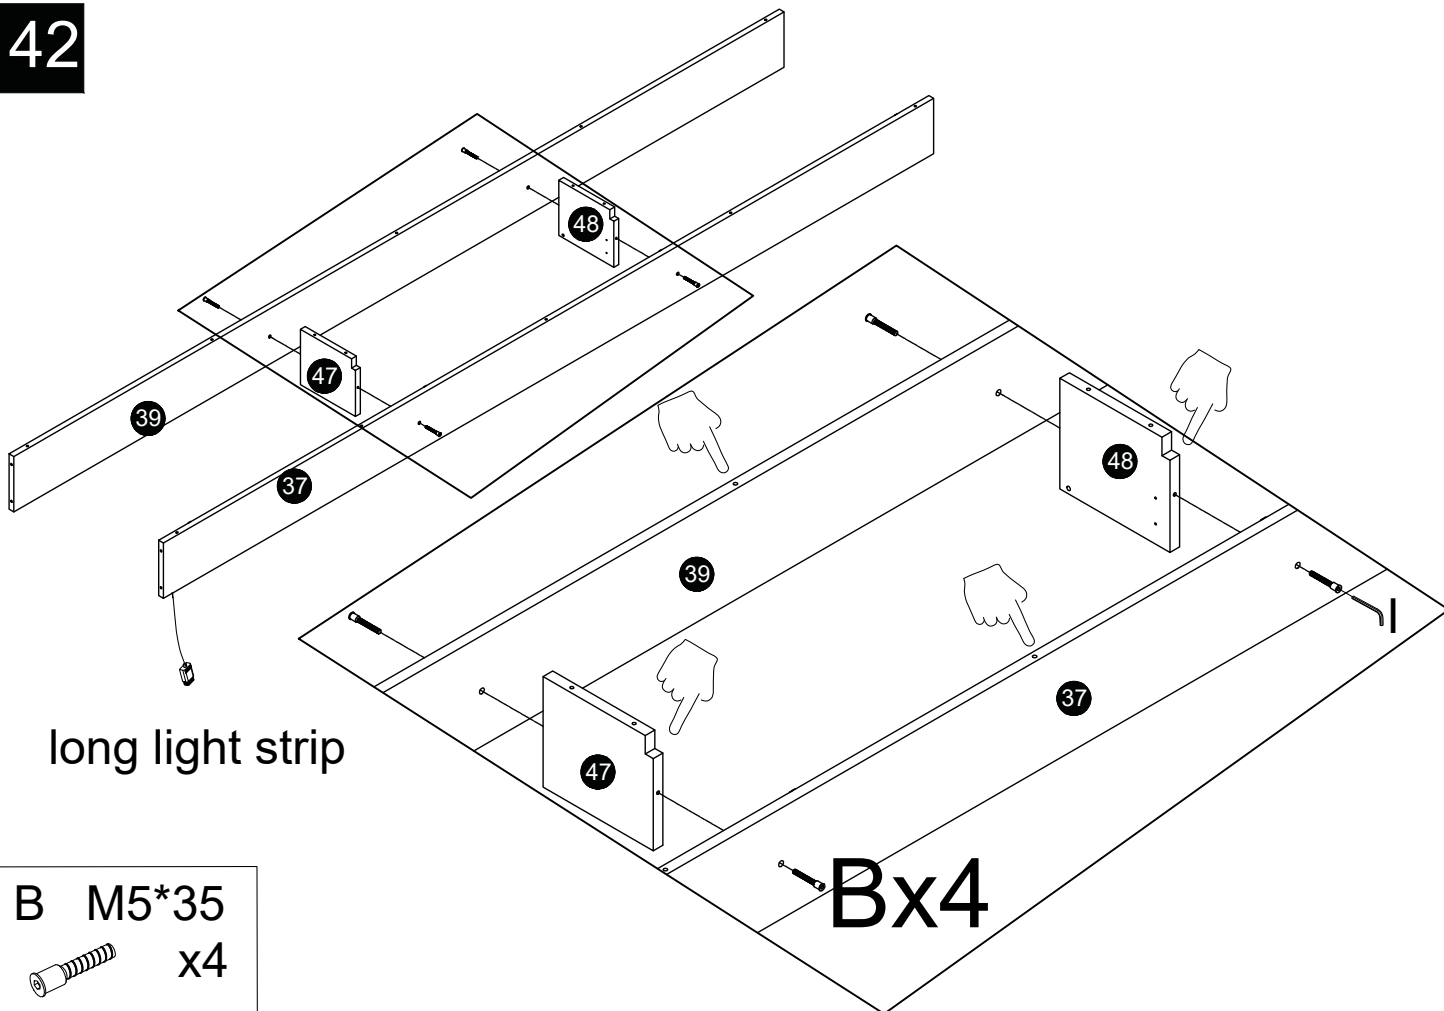


long light strip

B M5*35
x4




43

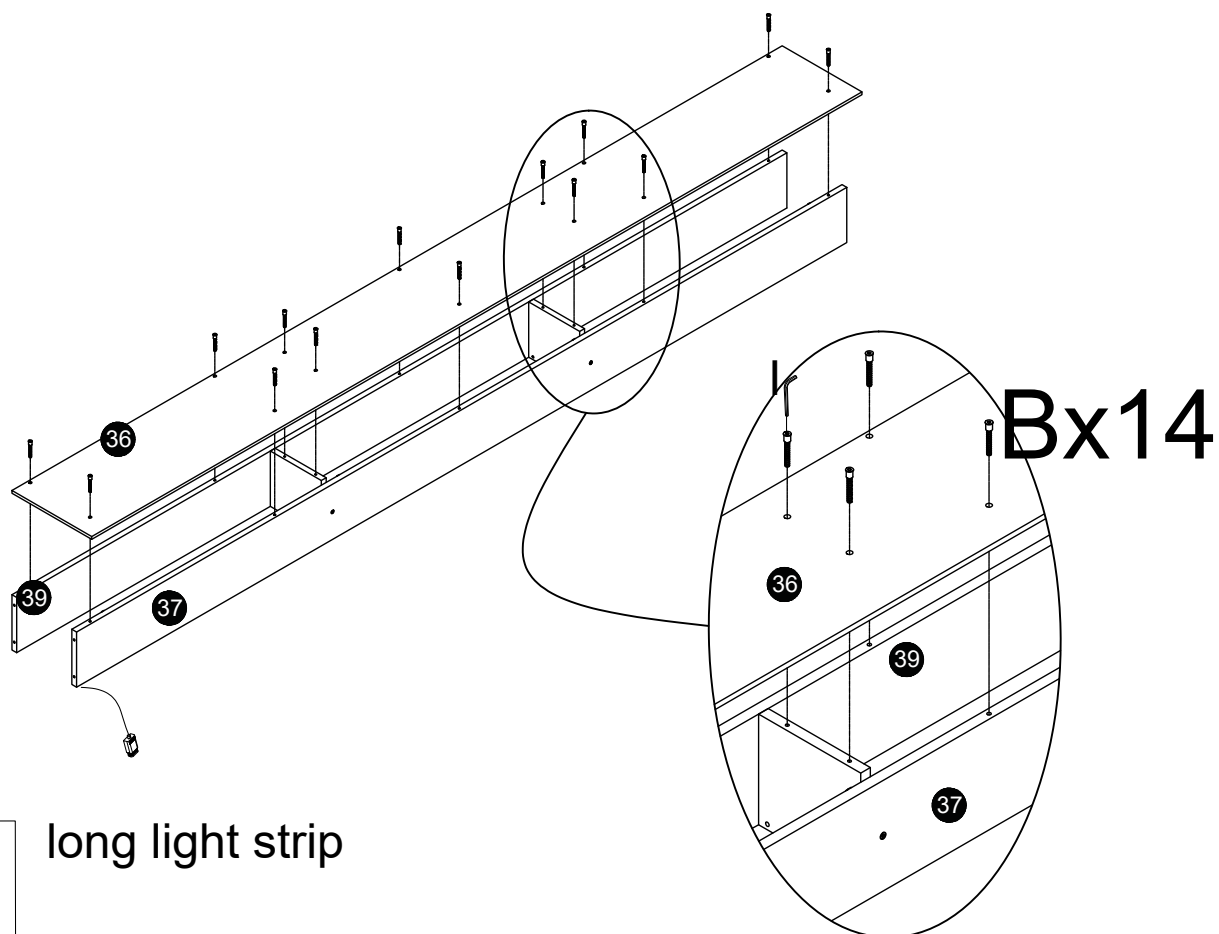

B M5*35
x14

long light strip


44

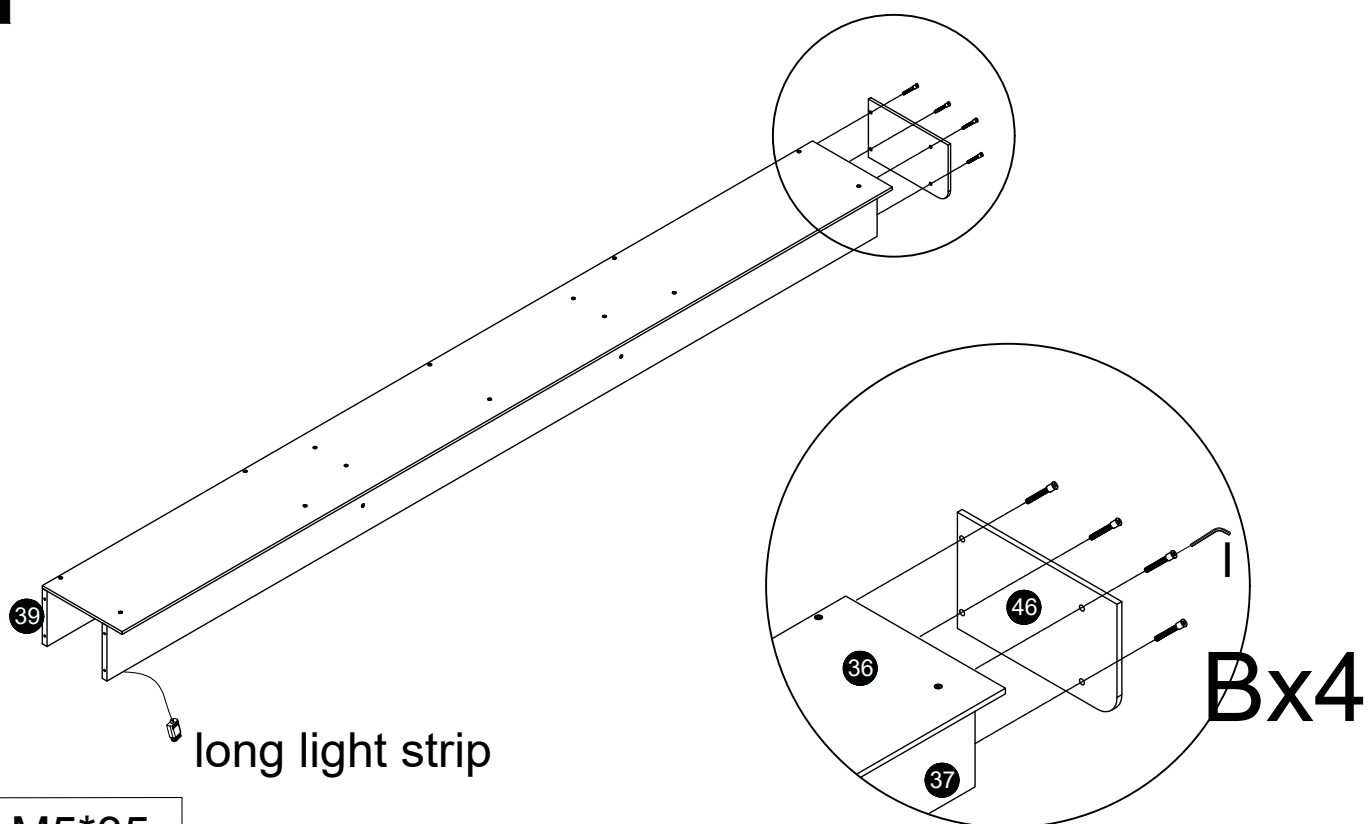

B M5*35
x4

long light strip


45

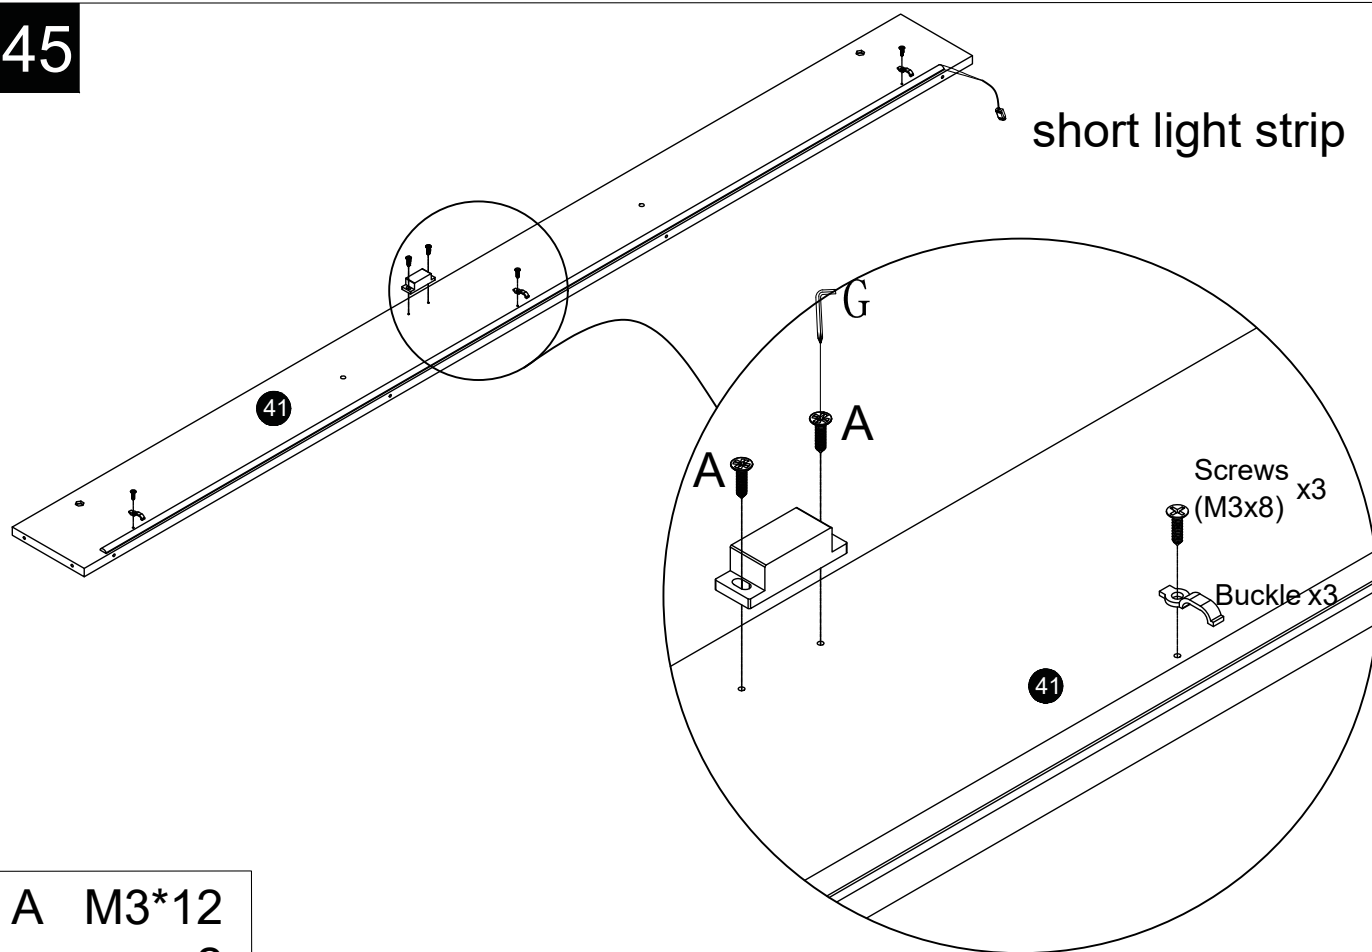

A M3*12
x2




46

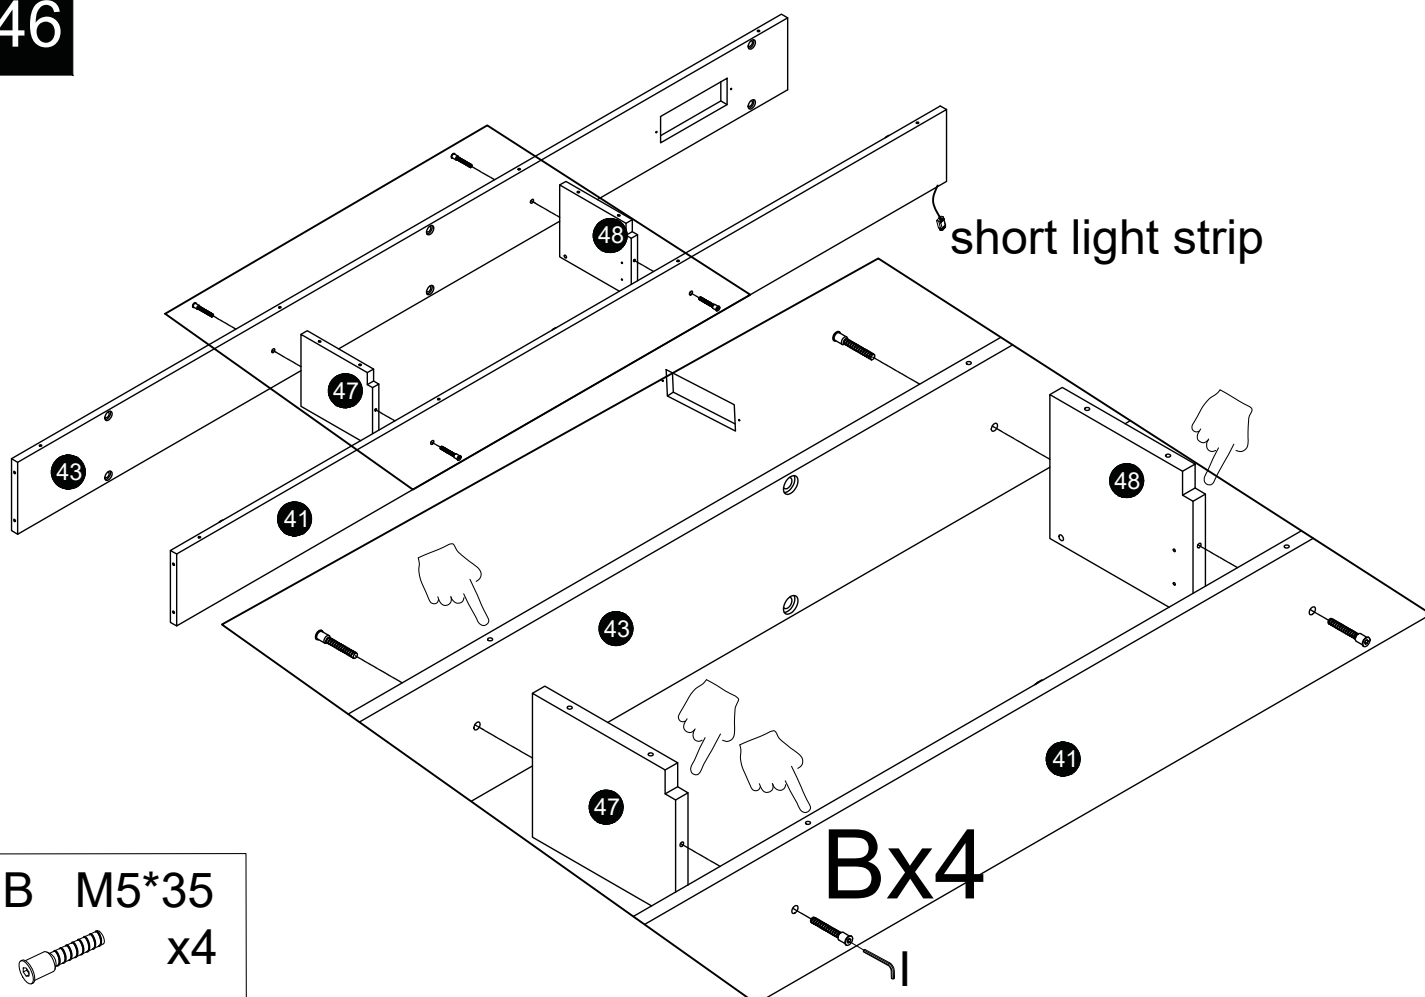

B M5*35
x4




47

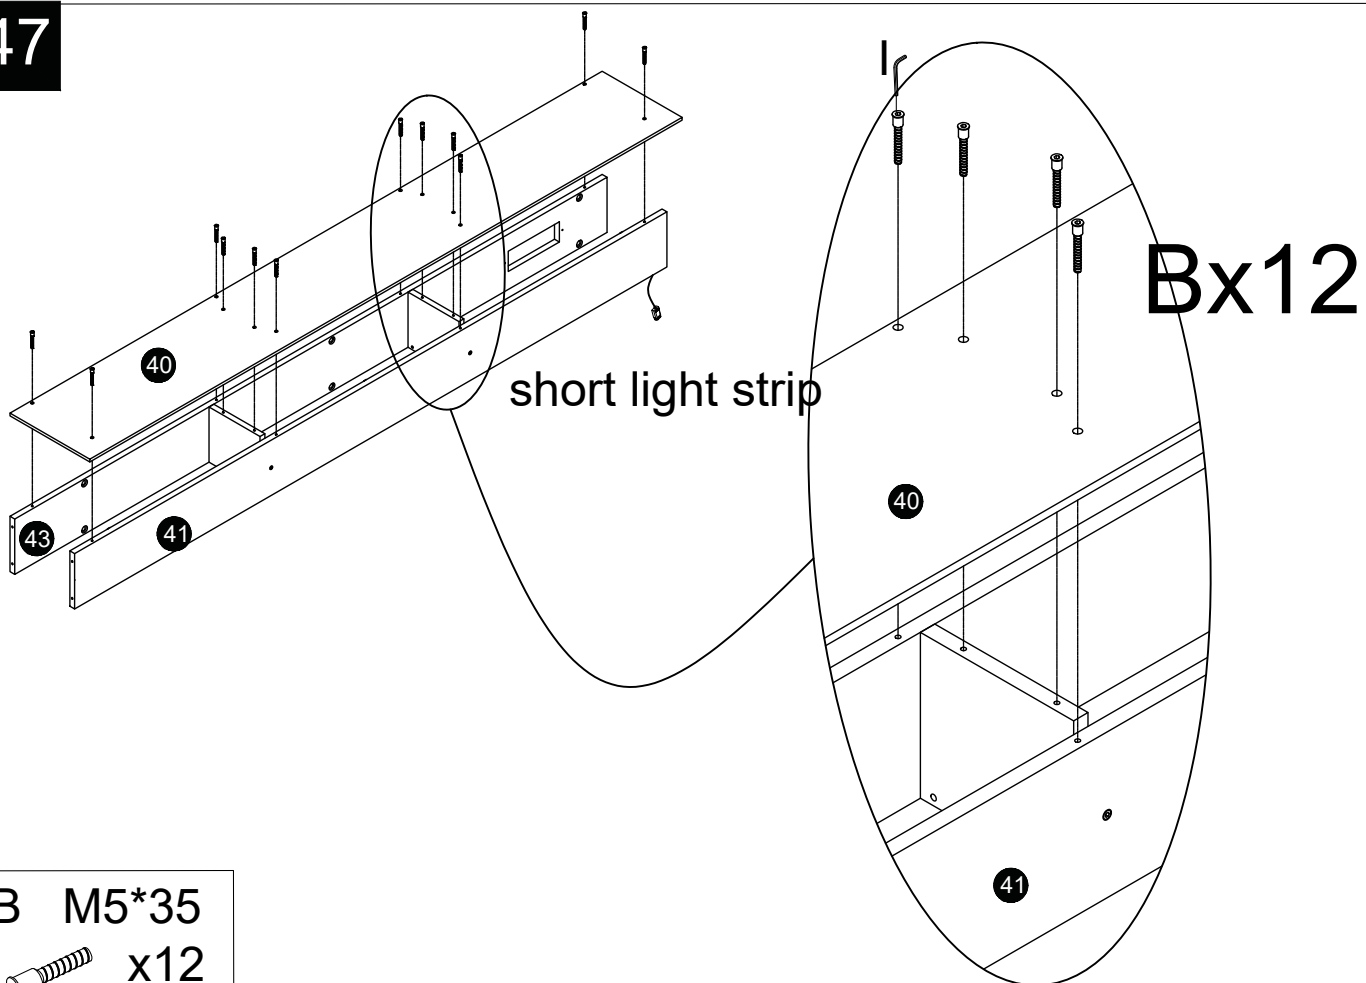


B M5*35
x12

48

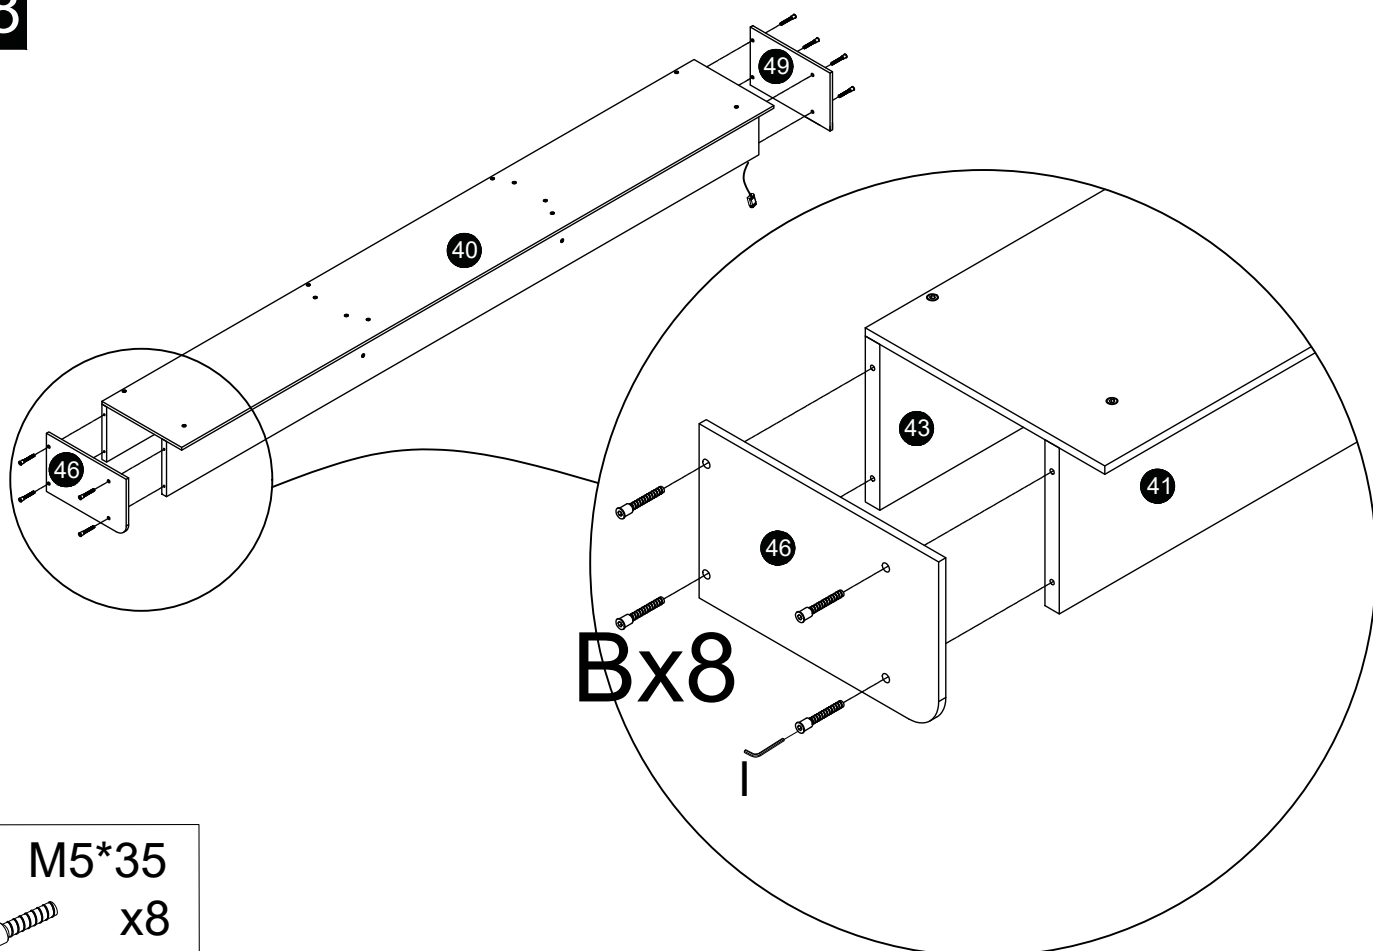

B M5*35
x8


49

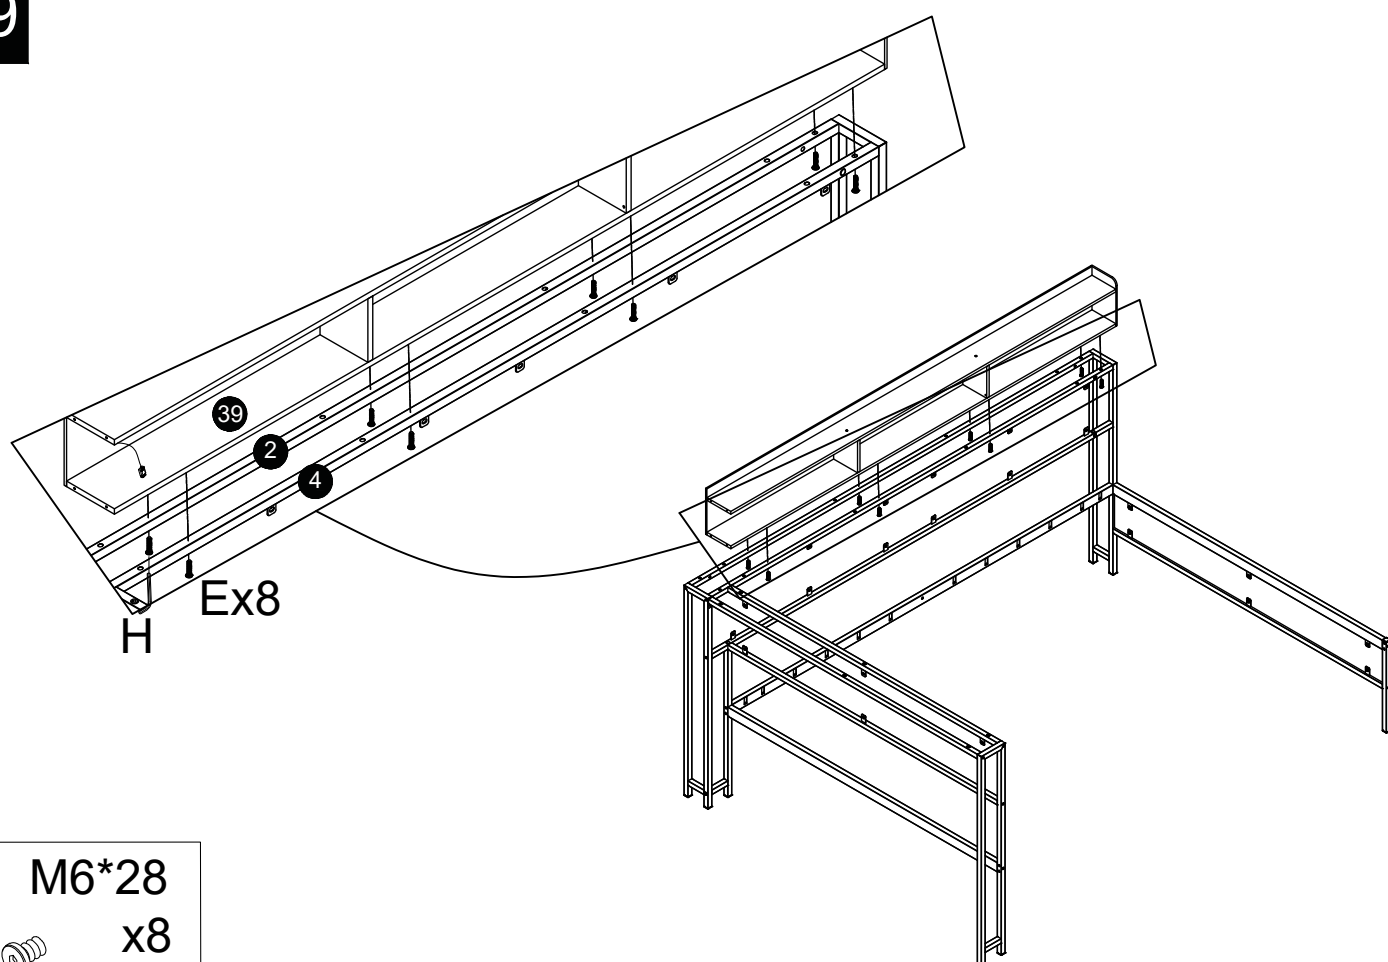

E M6*28
x8





50

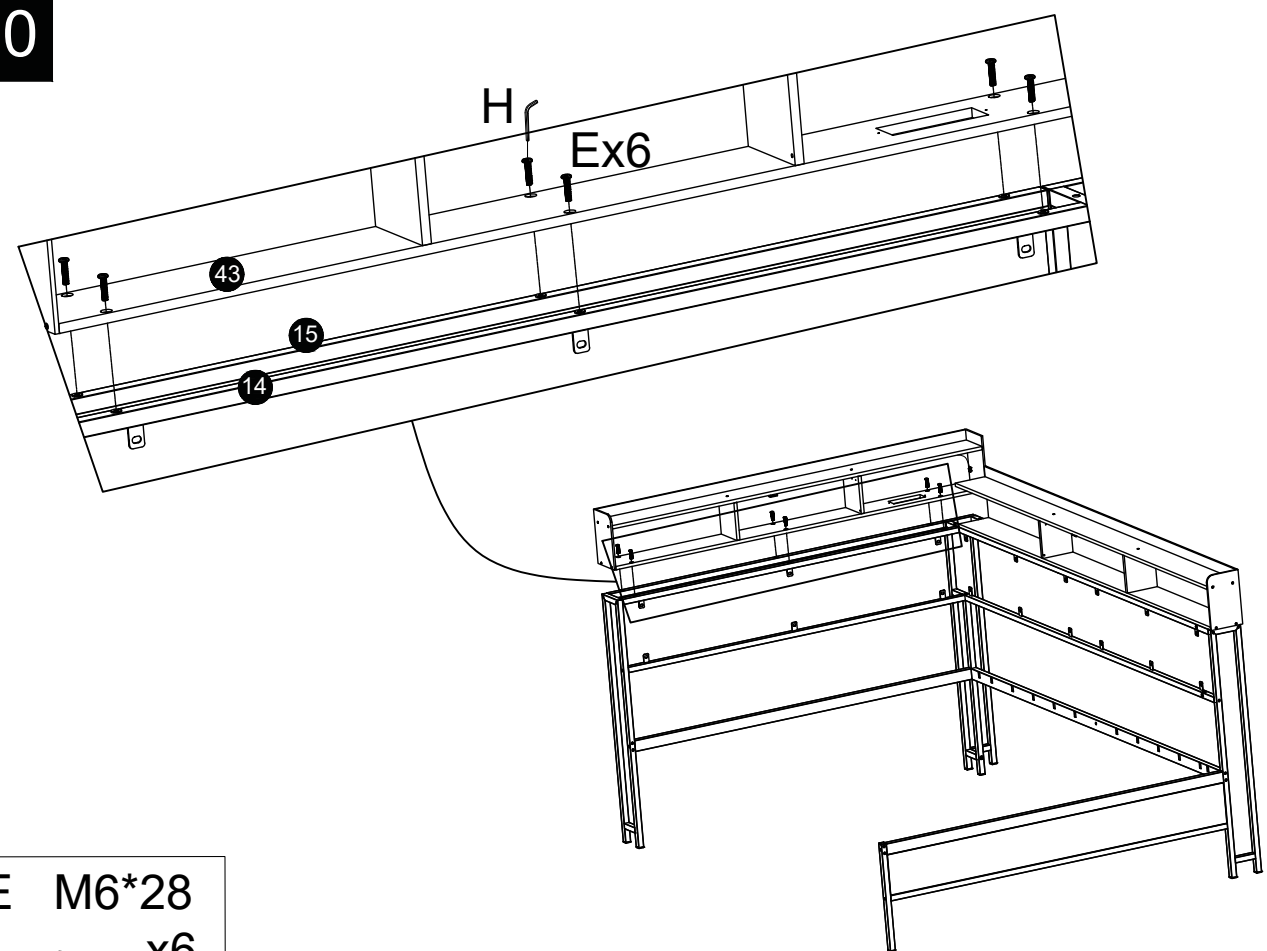

E M6*28
x6





51

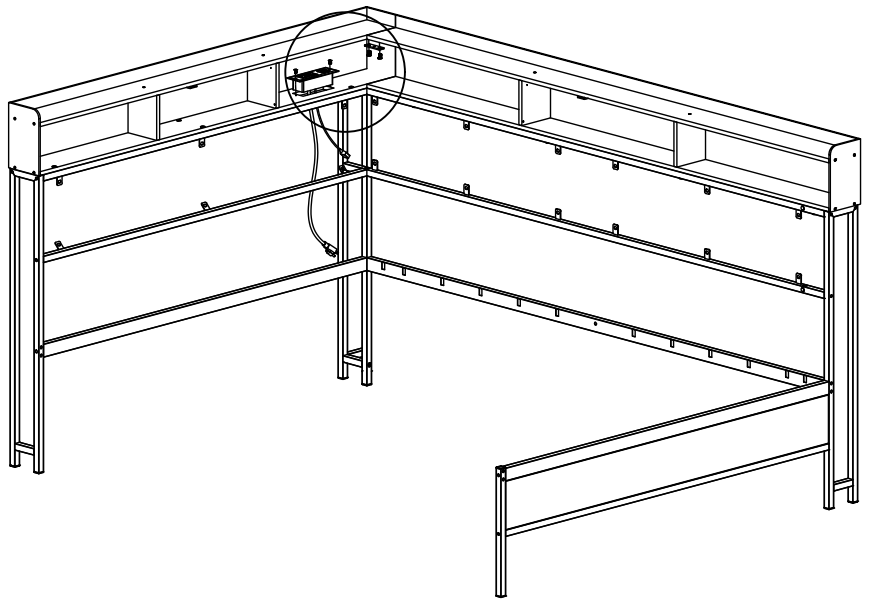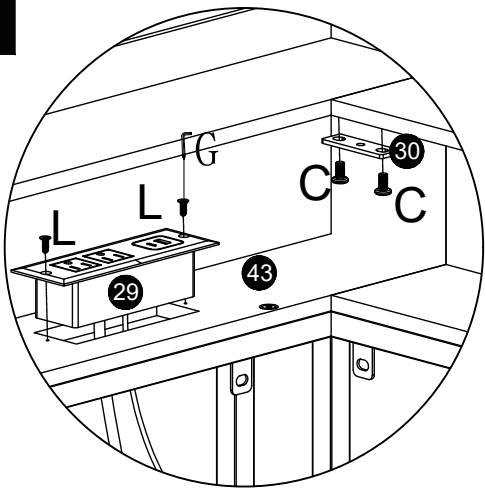

C M6*10
x2

L M4*12
x2


52

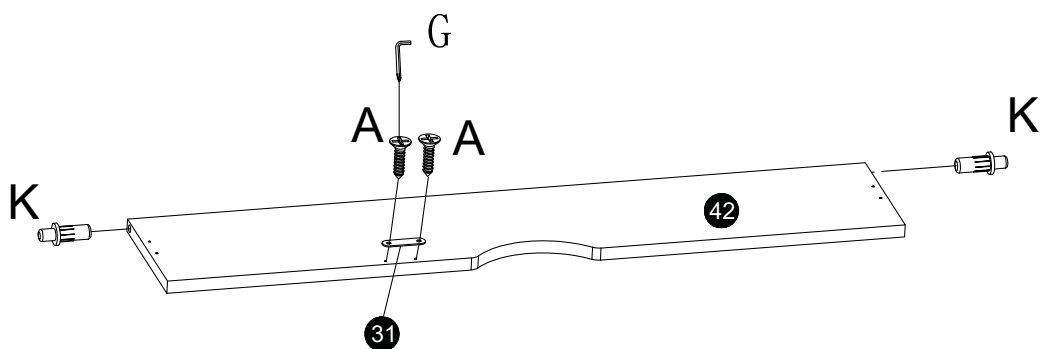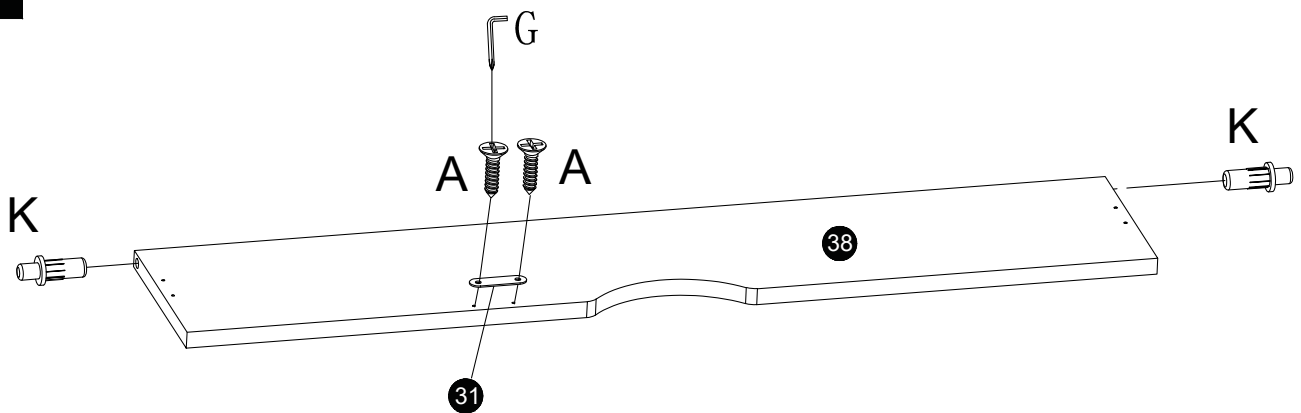

A M3*12
x4

K Ø7*23
x4


53

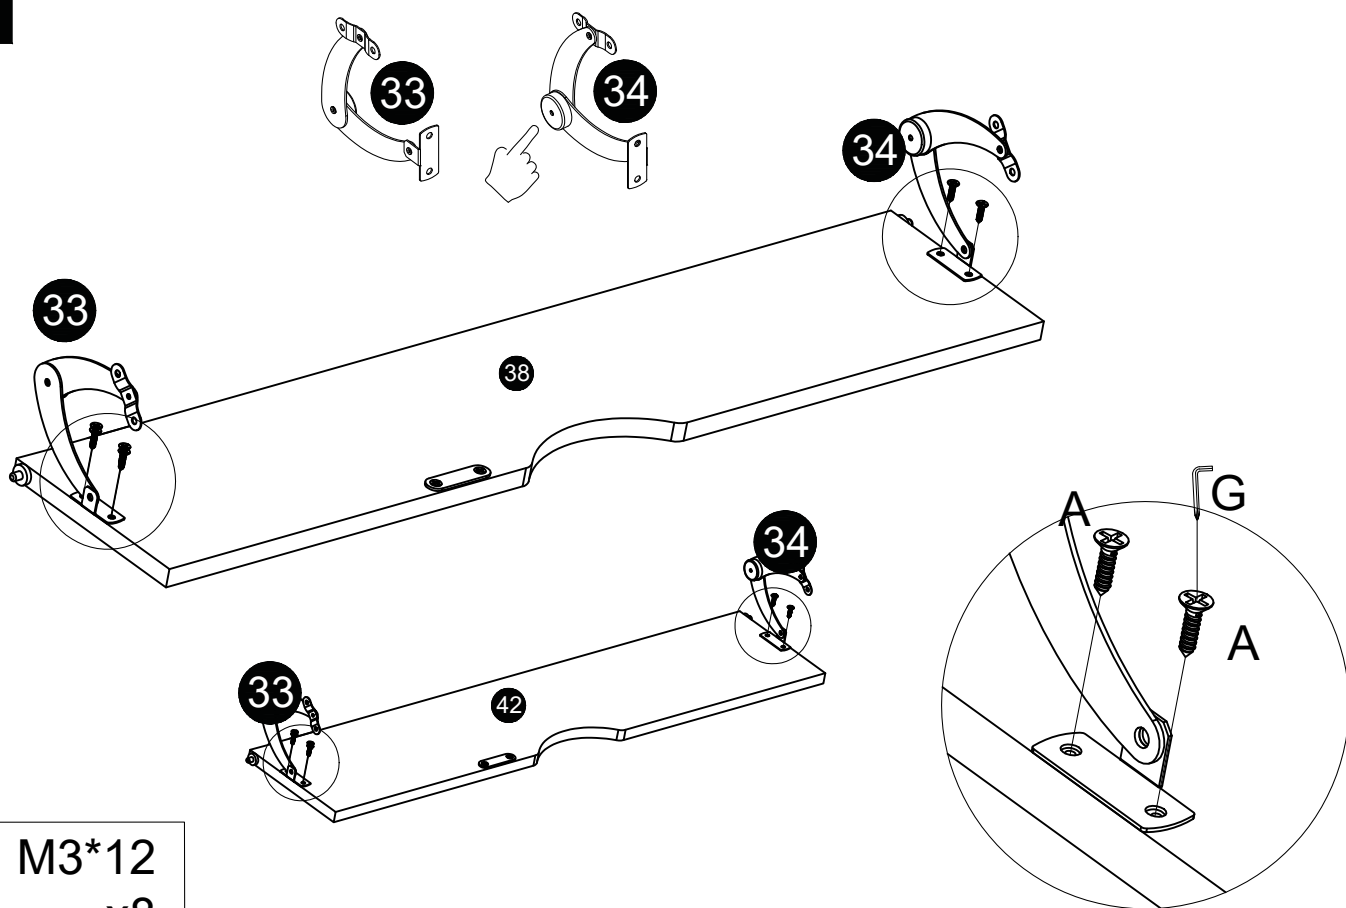

A M3*12
x8





54

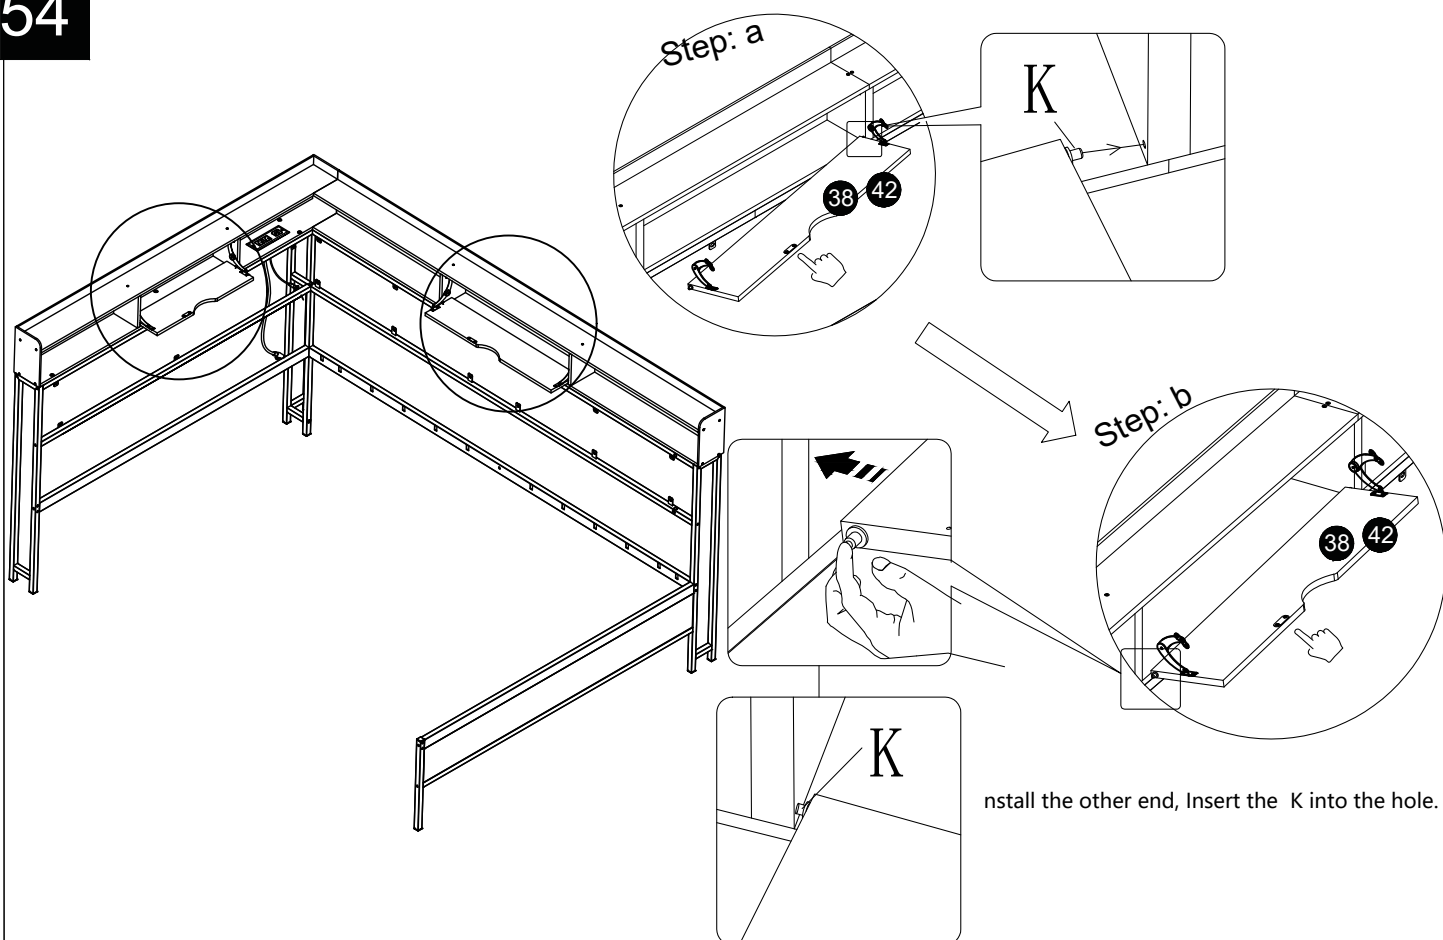

55


Pay attention to the installation direction of 33 34

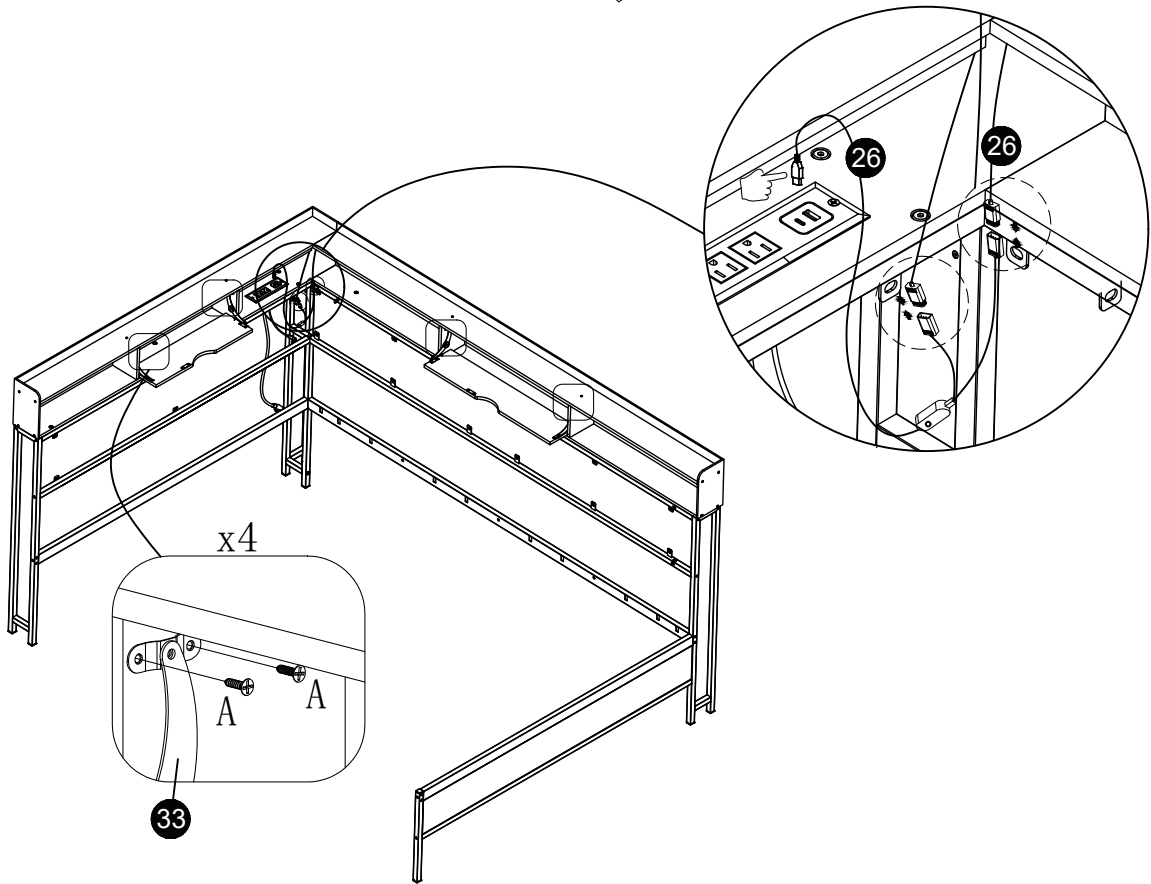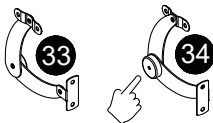

A M3*12
x8




56

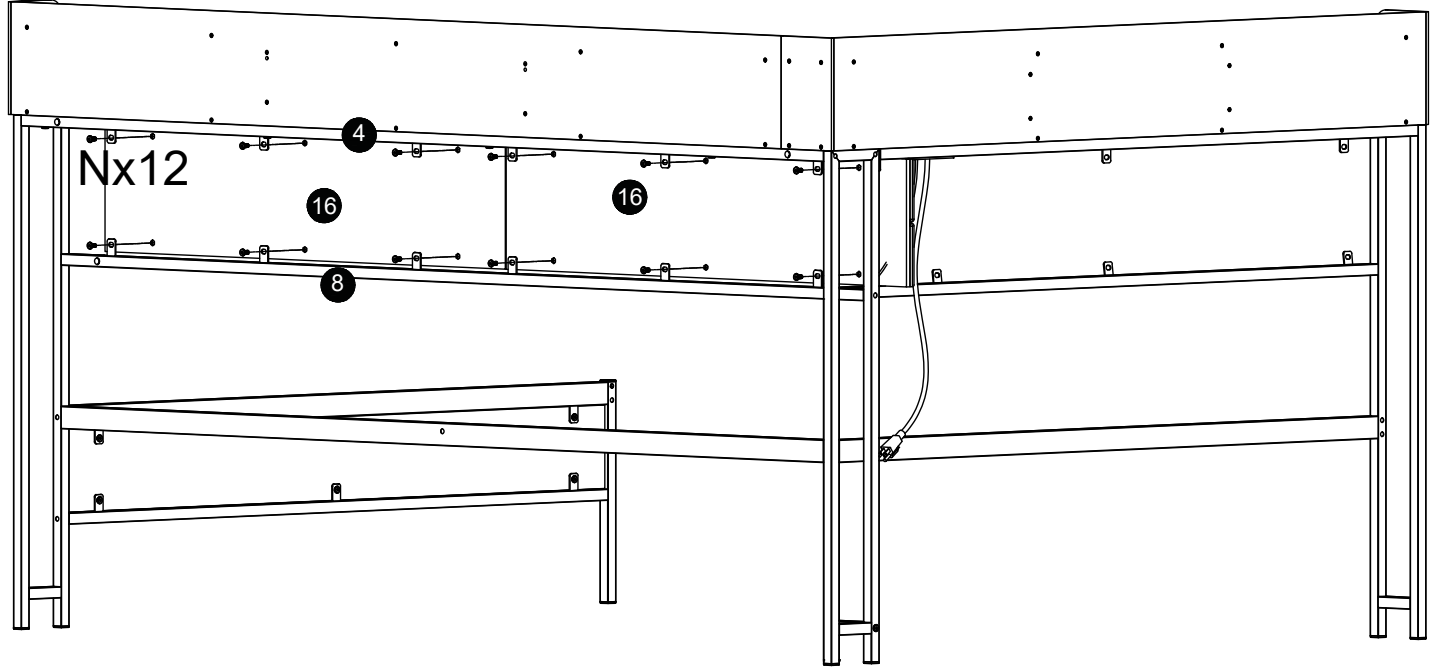

N M6*15
x12




57

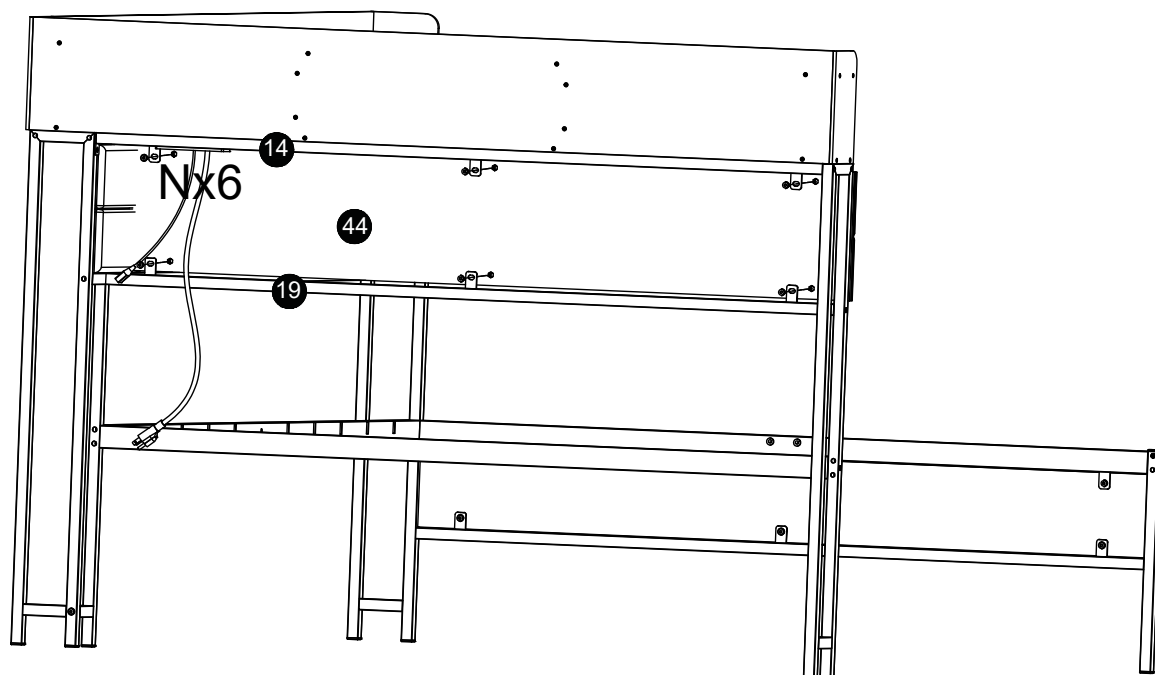

N M6*15
x6




58

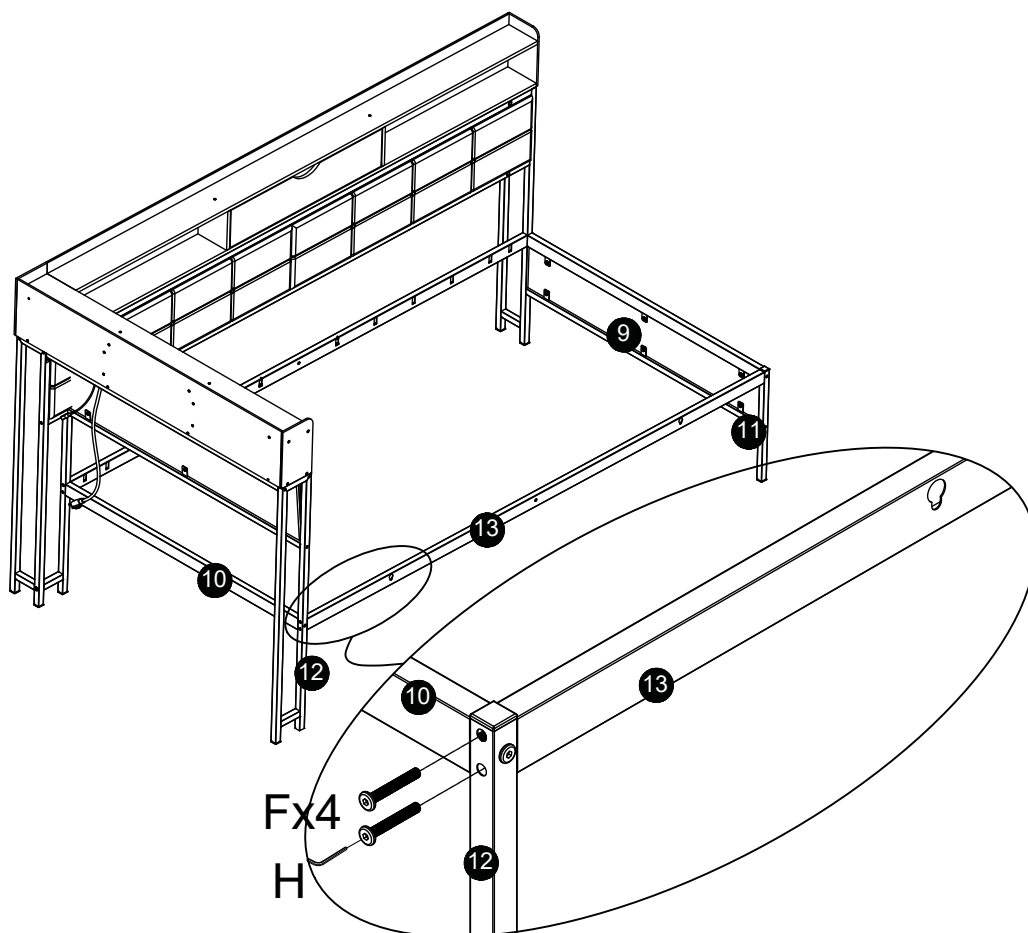

F M6*40
x4





59

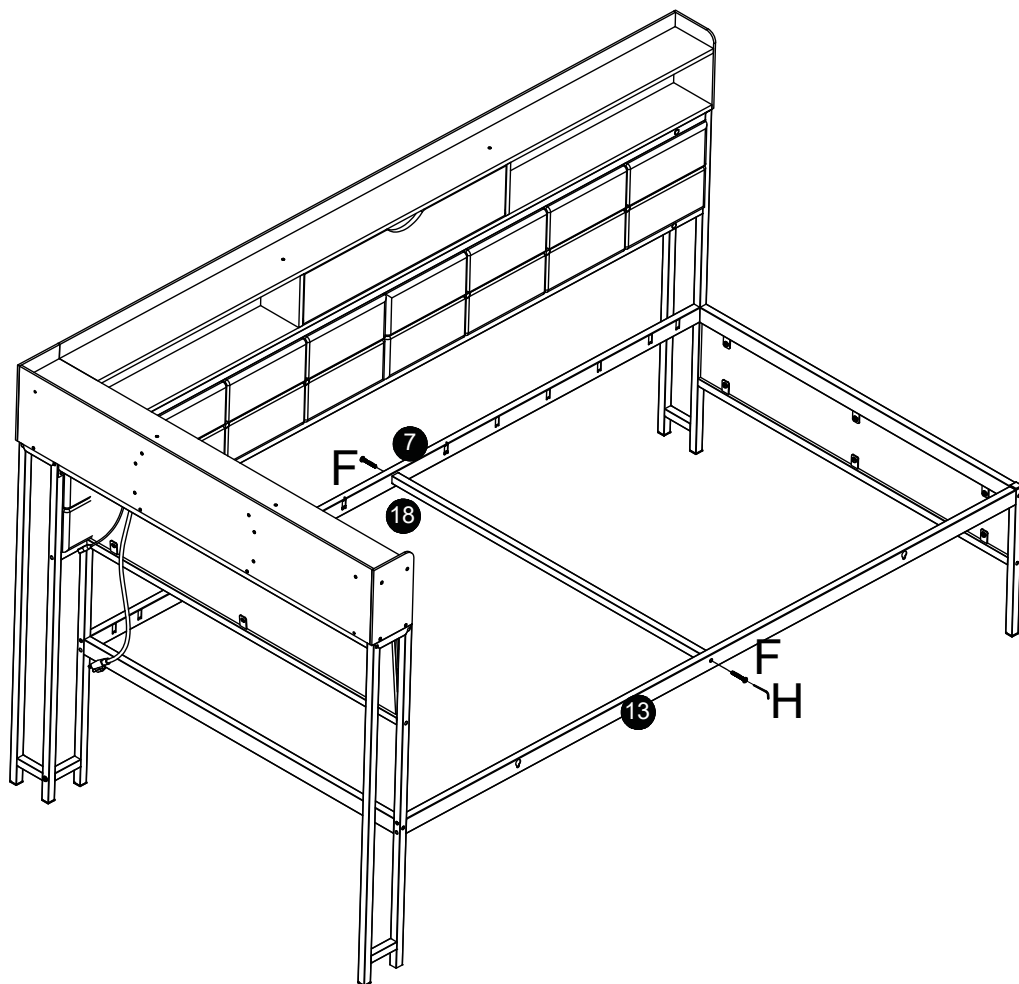


F M6*40
x2


60

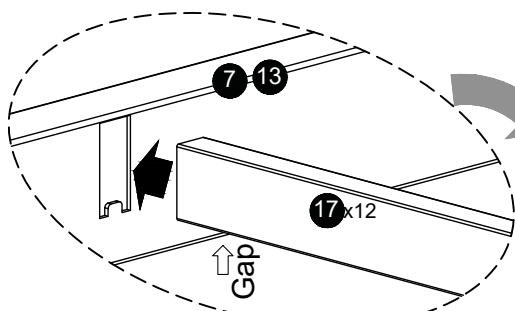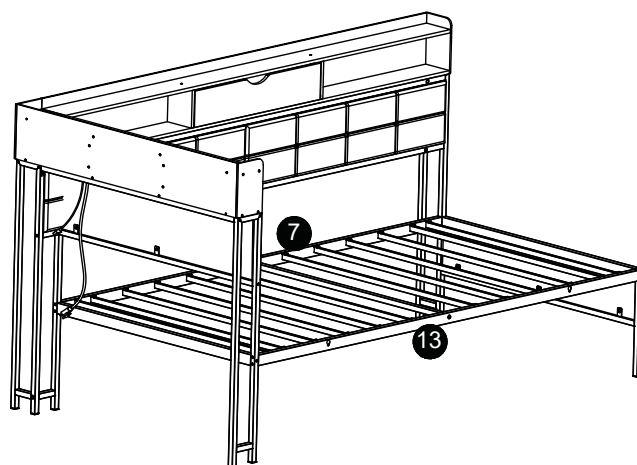


Insert into the snap position

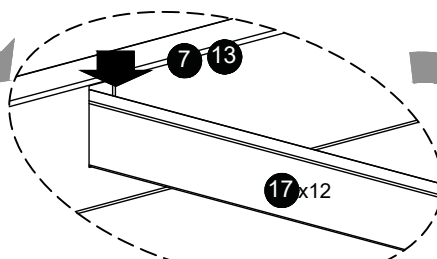


Press down on the
gap in the bed slat.

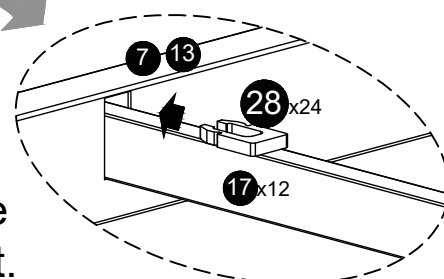

61

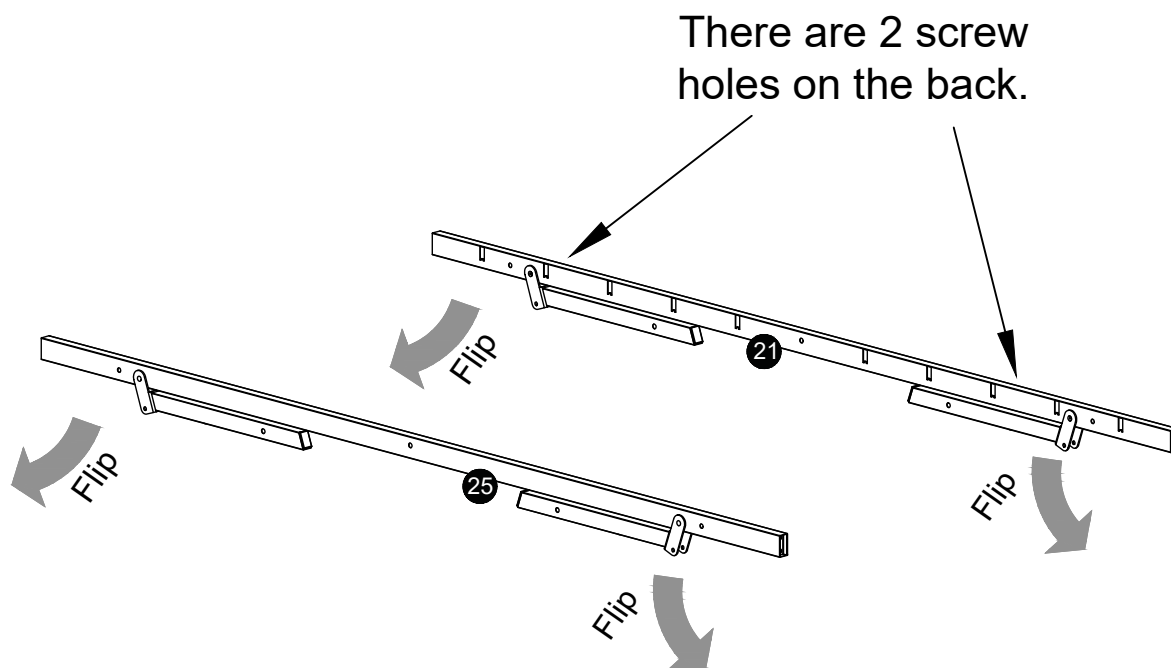


62

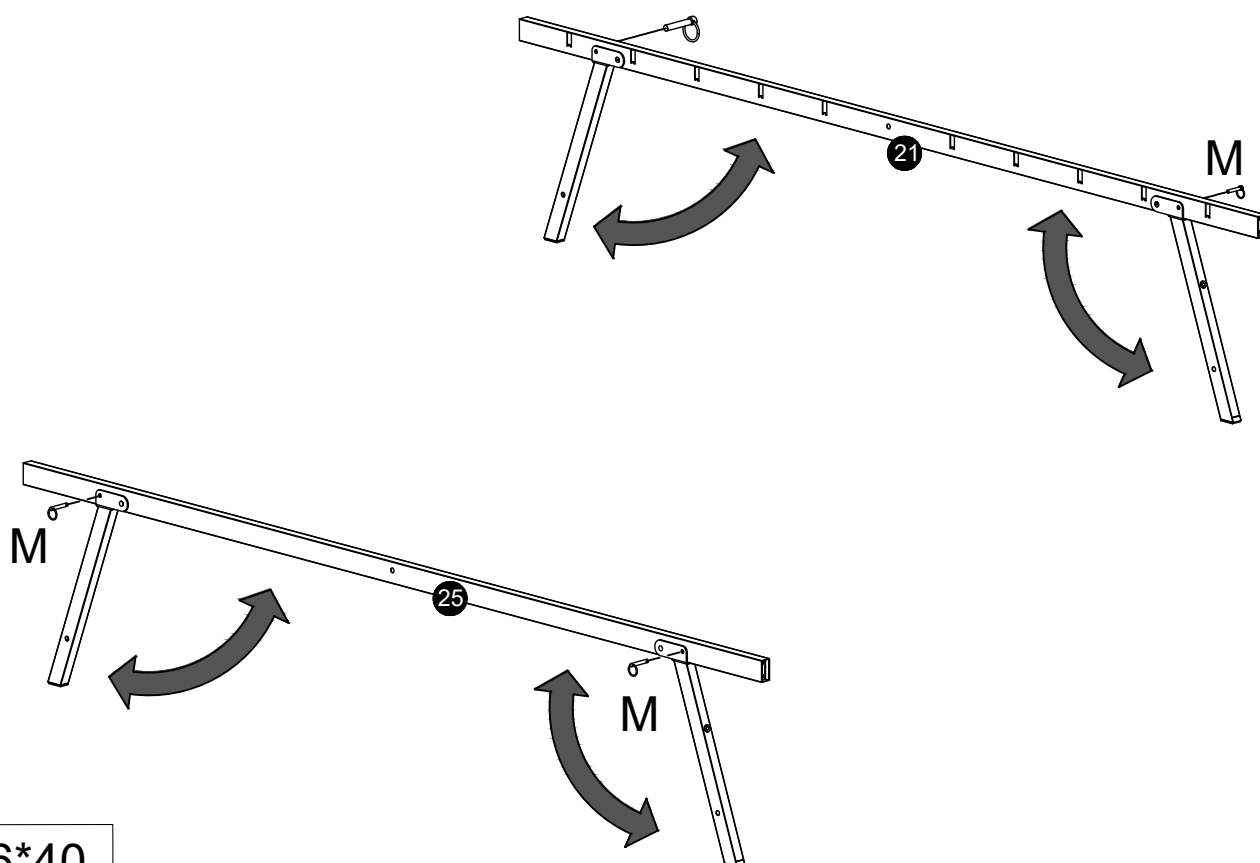

M Ø6*40
x4




63

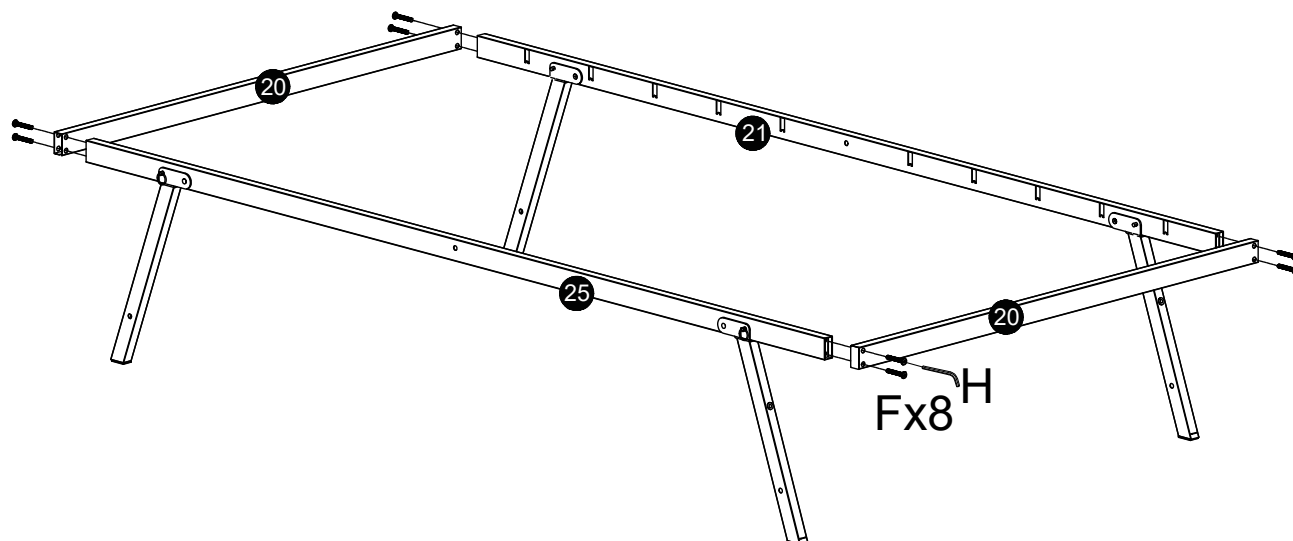


F M6*40
x8



64

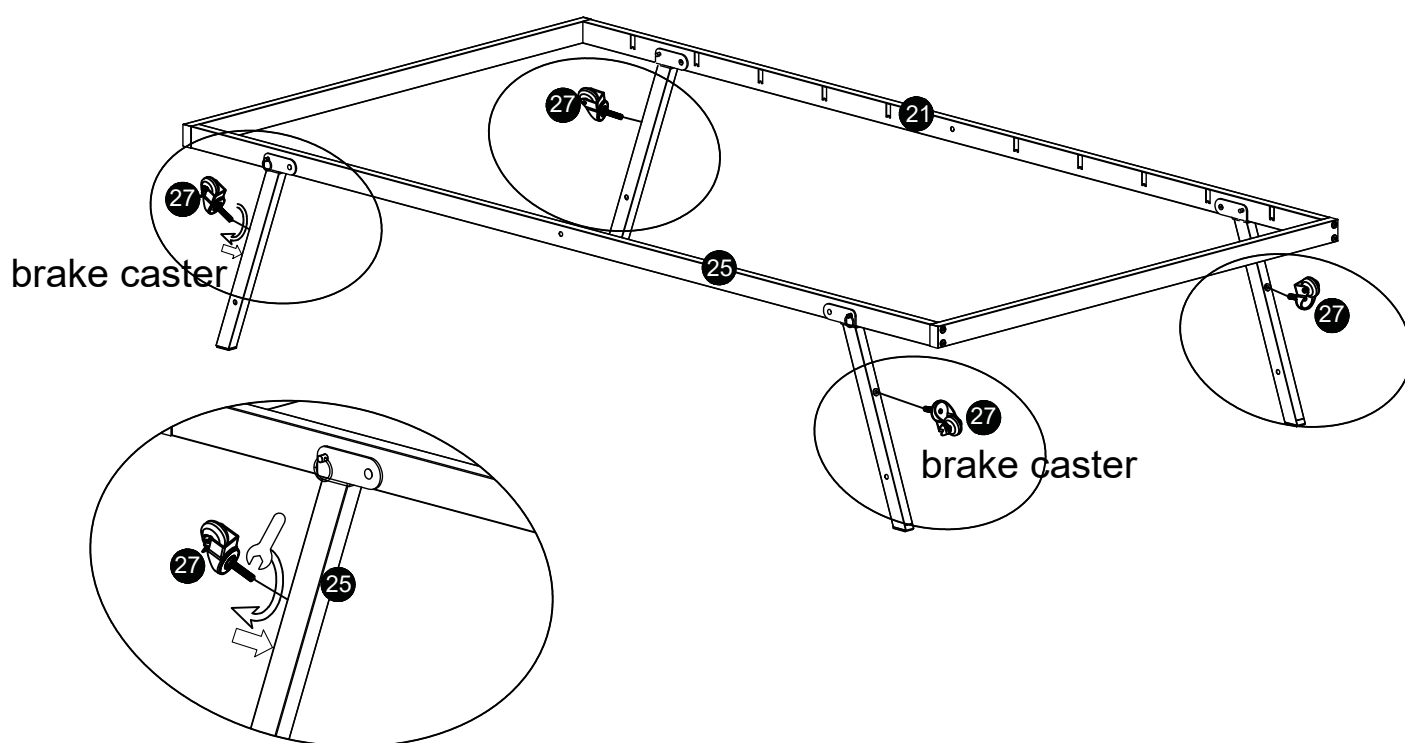



65

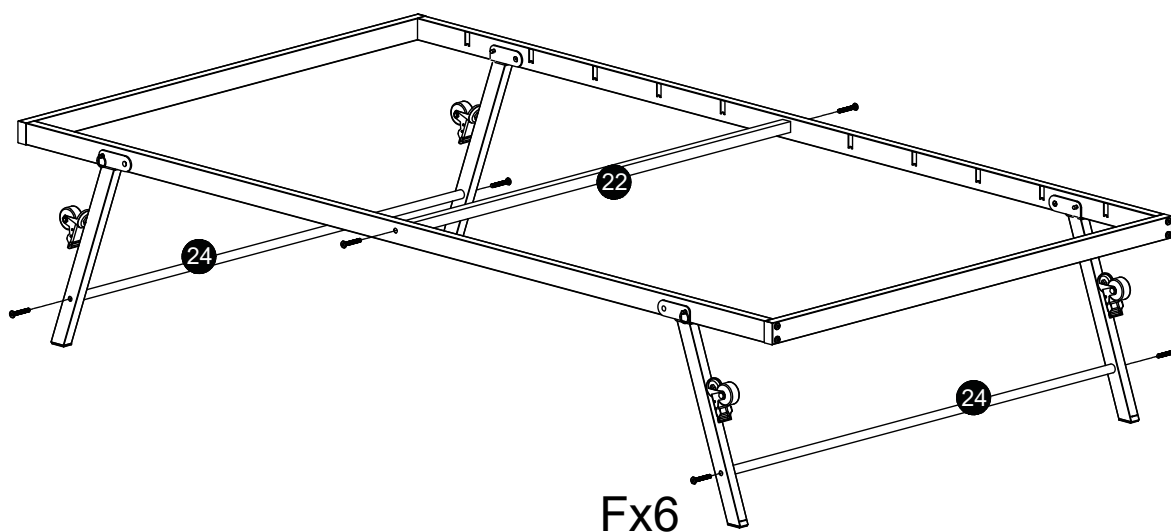


F M6*40
x6

66


D M6*15
x2

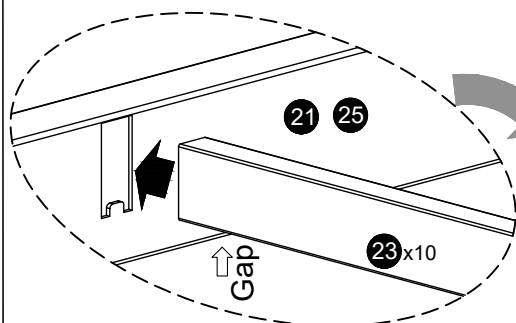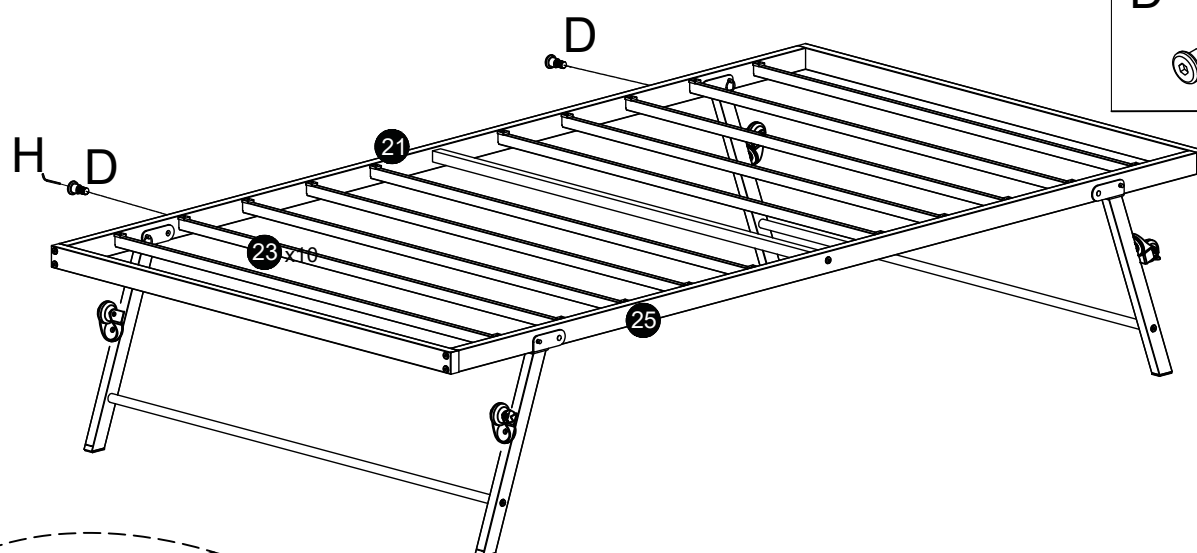


Insert into the snap position

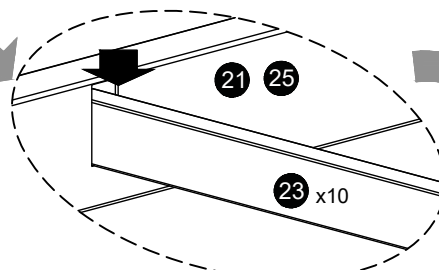

Press down on the
gap in the bed slat.

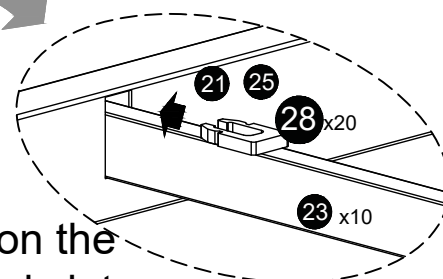

67

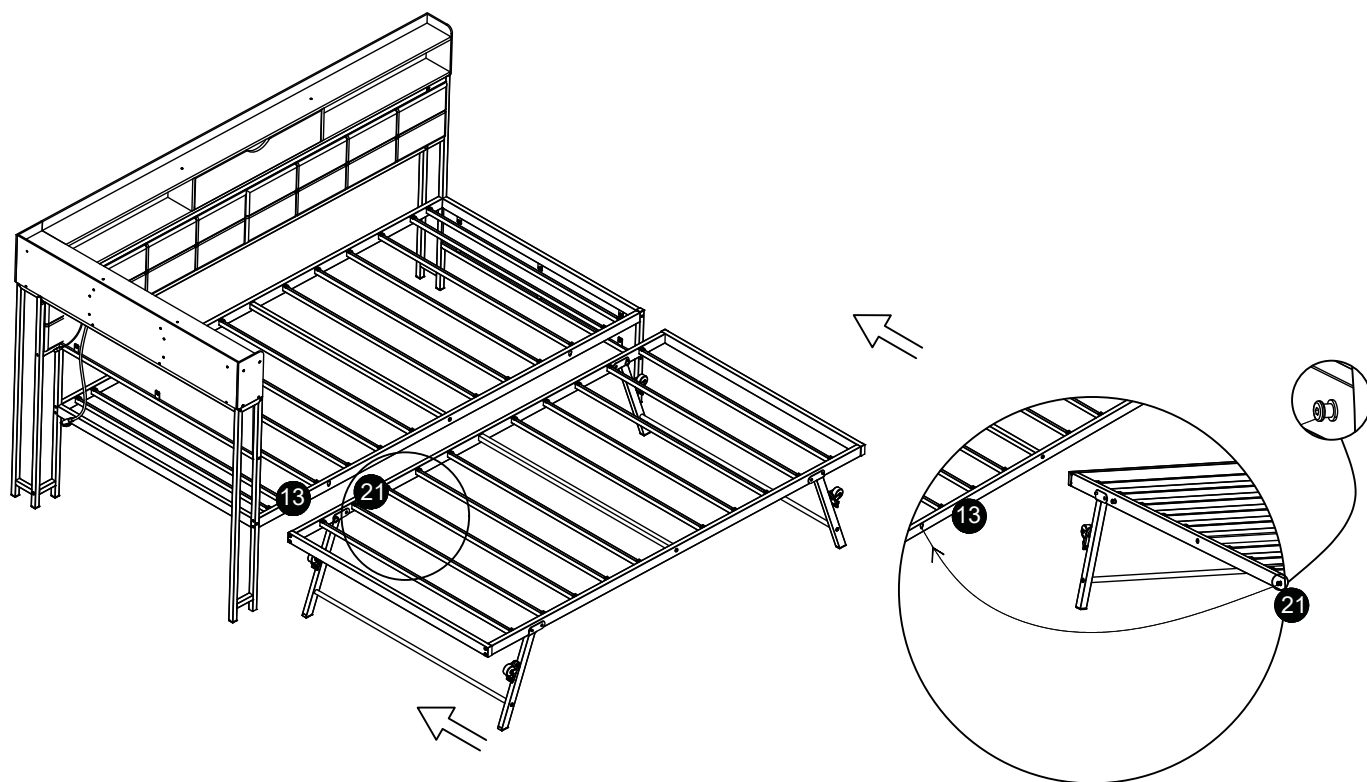

68

