





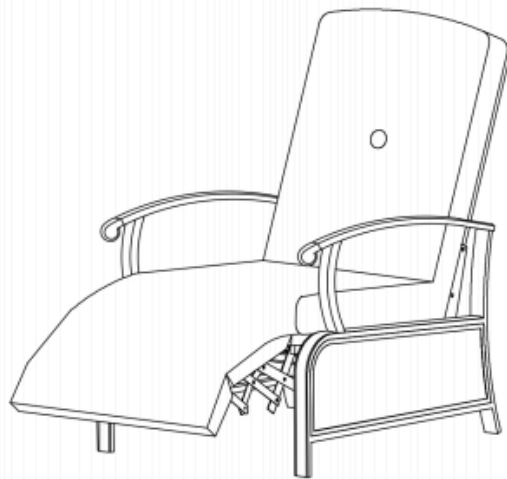

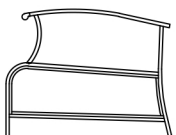

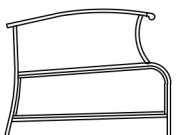


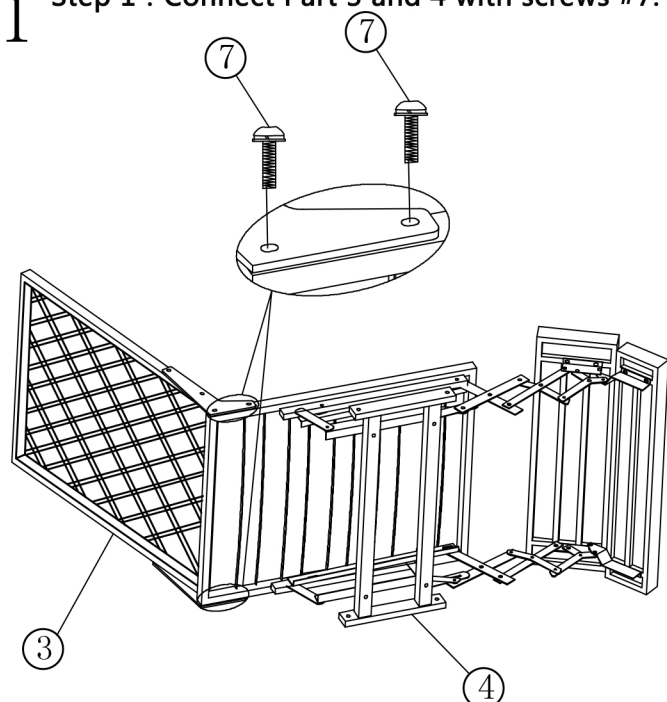
Metal Chair with Cushion Assembly Manual

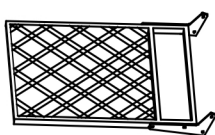

- Prior to assembly, please confirm all of the parts listed included.
- All bolts should be tightened before use. Maybe, you need allen wrench for assembly.


				
① 1 X	② 1 X	③ 1 X	④ 1 X	⑤ 1 X
	 M6X18	 M6X30		
⑥ 4 X	⑦ 8 X	⑧ 4 X	⑨ 1 X	⑩ 1 X

1 Step 1 : Connect Part 3 and 4 with screws #7.




⚠ (Please don't tighten the screws until the last step.)

2 Step2: Fix Part 5 to Part 3 with screws #7. Use screw #8 and gasket #6 to secure Parts 1 and 2 to the left and right sides of Part 4.

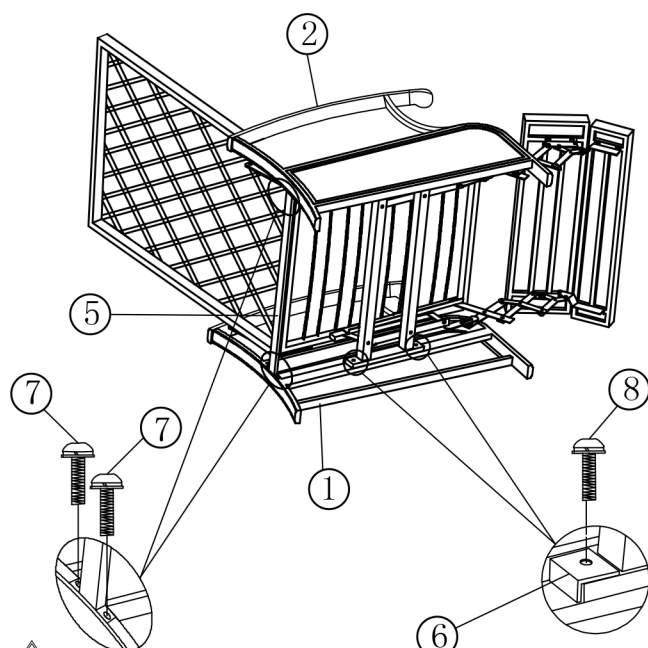

⚠ (Please don't tighten the screws until the last step.)

3 Step3: Install Part 9 on Part 4. Tighten all the screws.

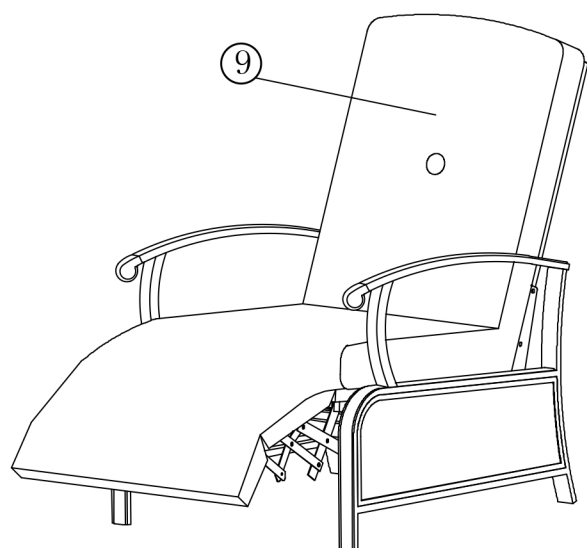

4 Step 4 : Check to make sure all screws are fixed tightly before use.

