


# Platform Bed Set-up Instruction

Size: Full/Queen/King/Cal King (03/04/05/06)

If you have any questions about the product, please don't hesitate to contact us.  
You can reach us through your order. Thanks for your support!

## Components-Parts



①×2PCS



②×1PCS



③×1PCS



④×2PCS



⑤×2PCS



⑥×20PCS




A×20PCS  
M8×32




C×4PCS  
M8

Spare: A×1、C×1





**NOTE:**The M8\*32 for the bolt indicates a diameter of 8 mm (0.315 in)  
and a length of 32 mm (1.26 in).


## Component Distribution - Easy Assembly in 7 Steps

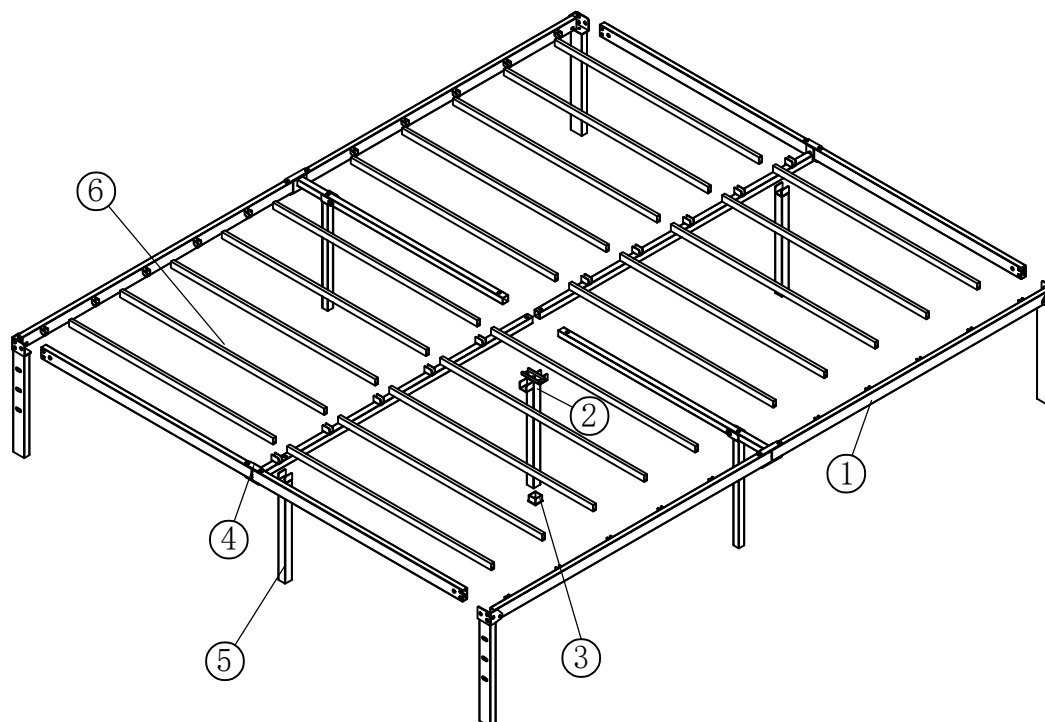


Step1:Take out parts ① & ② & ③

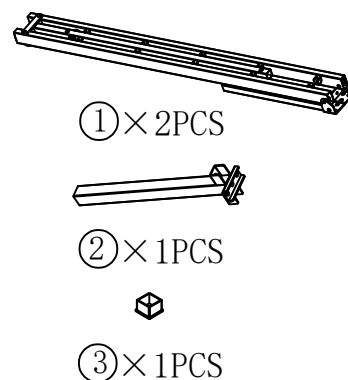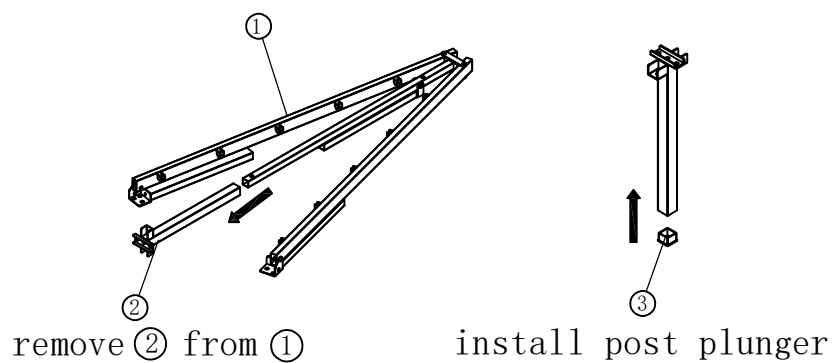

Step2:Spread part① and screw it as shown

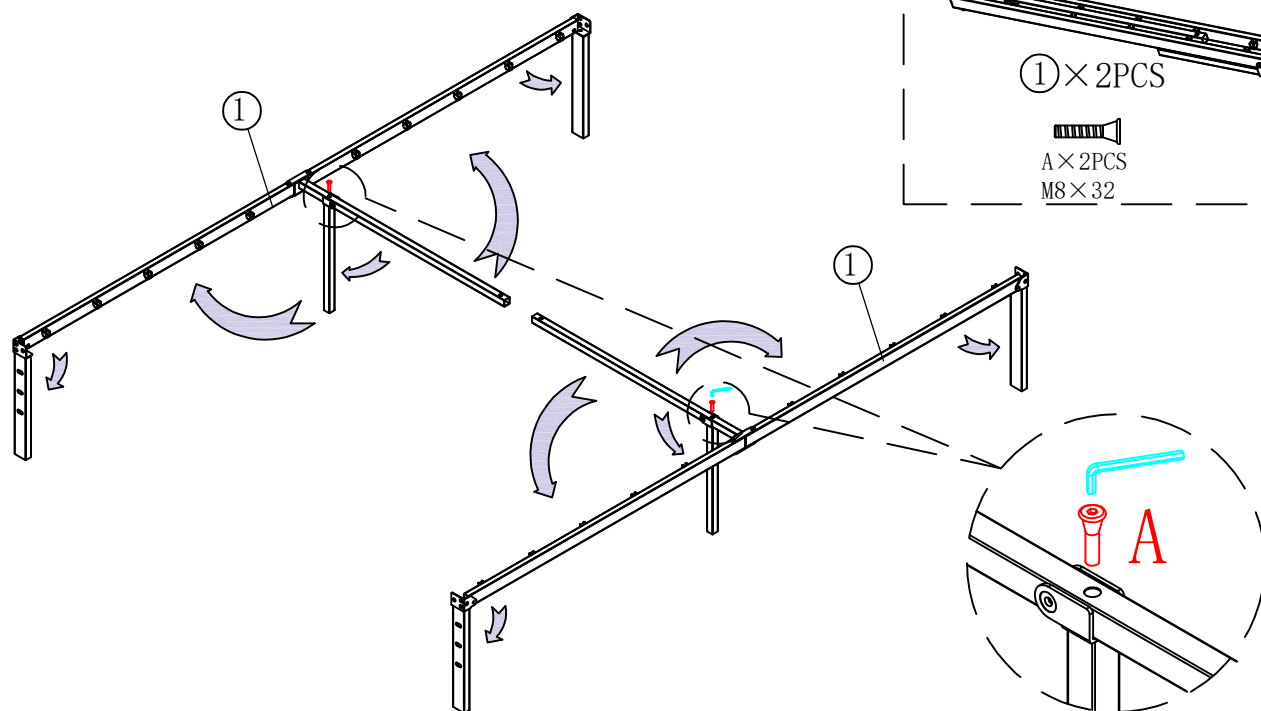

Step3:Joint parts ② with screws as shown


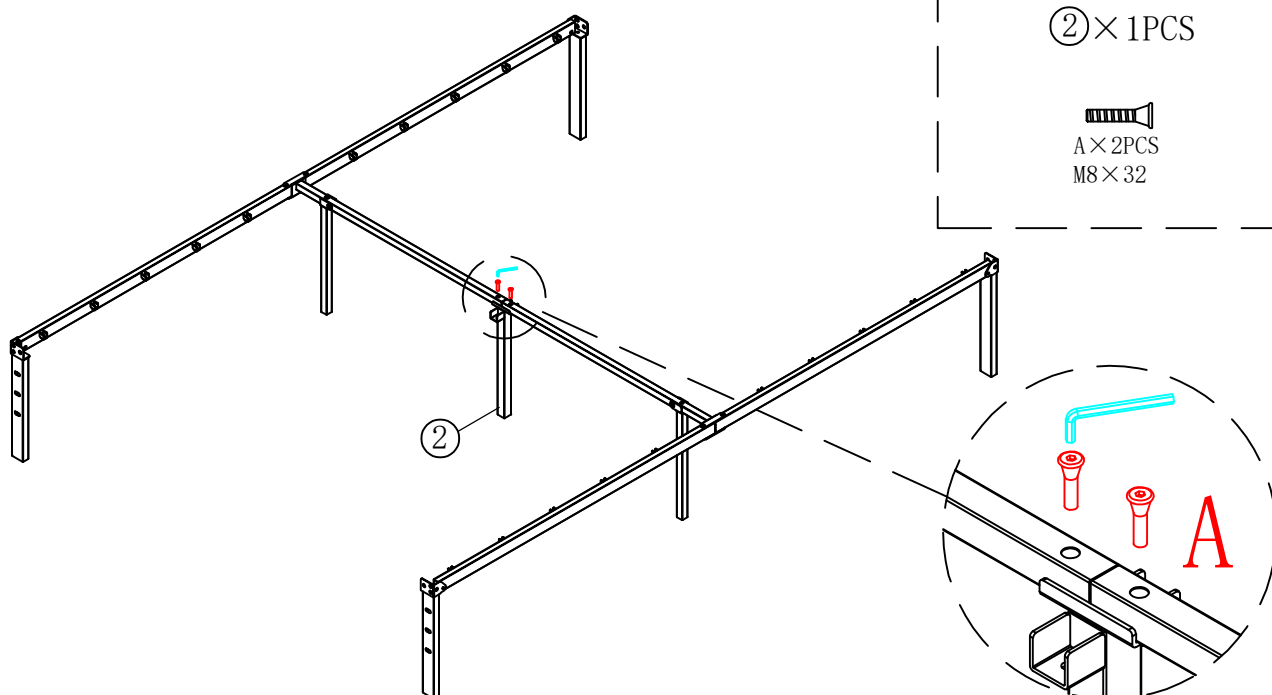


Step4:Joint parts ④ with screws as shown



④×2PCS



A×2PCS  
M8×32

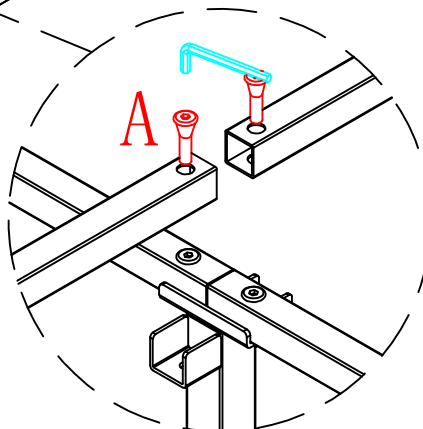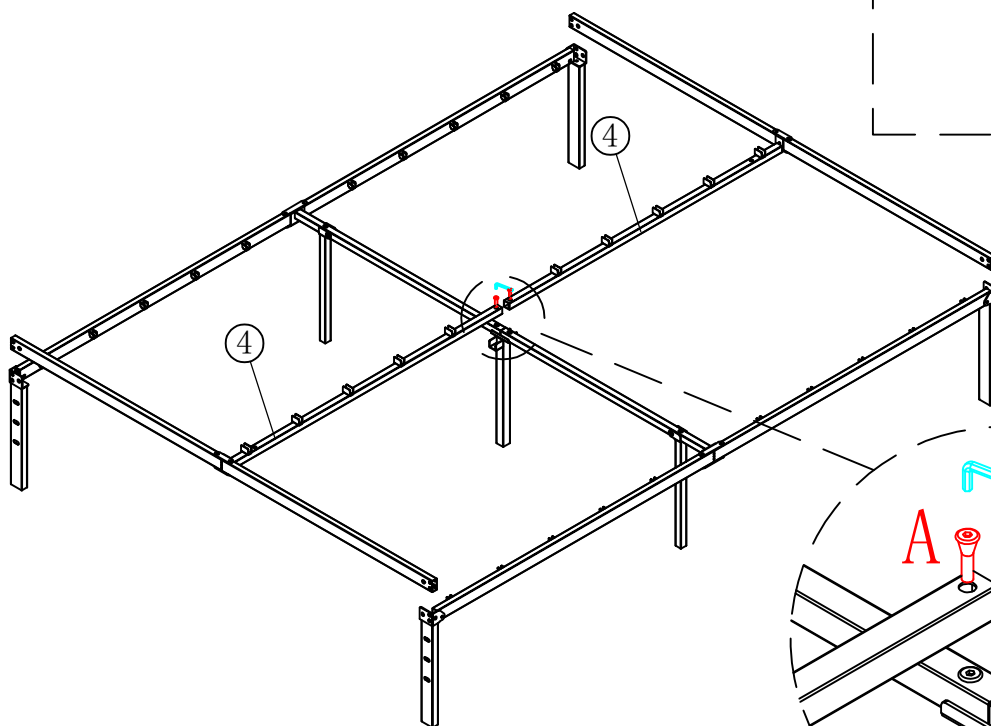


Step5:Screw parts ④ as shown

A×12PCS  
M8×32

C×4PCS  
M8

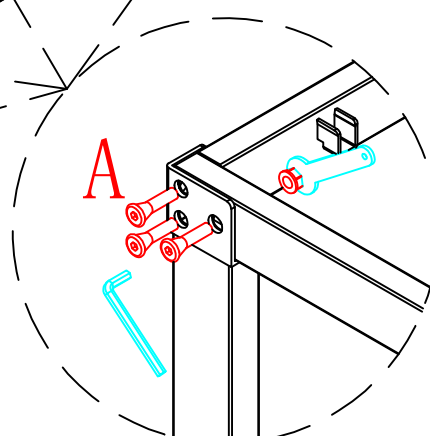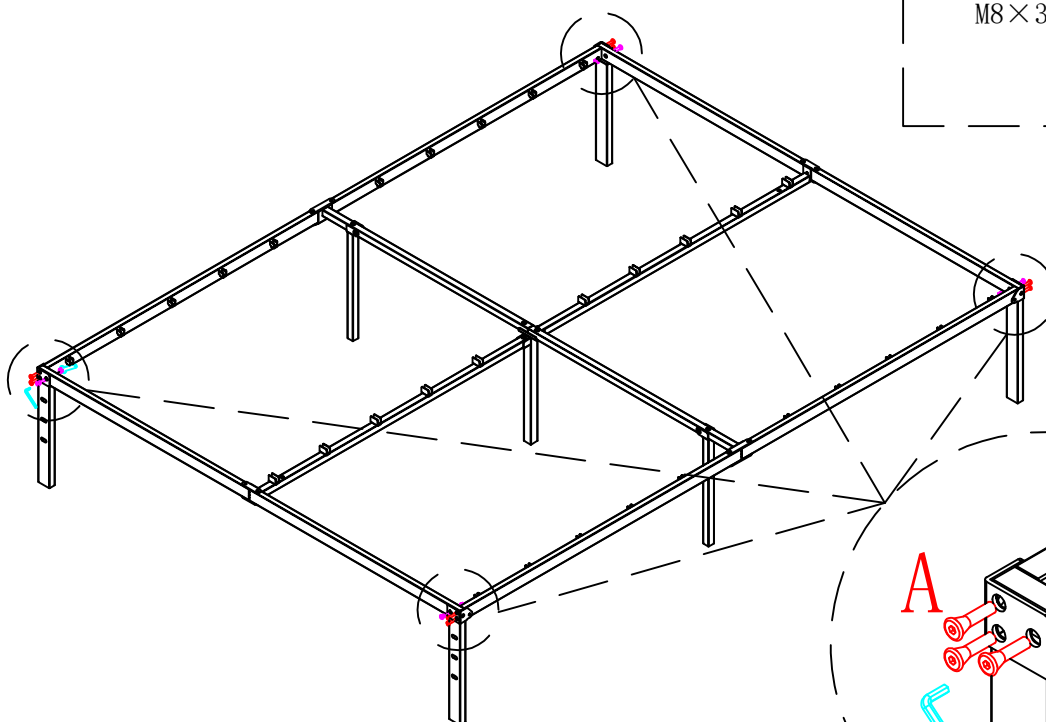


Step6:Joint parts ⑤ with screws as shown

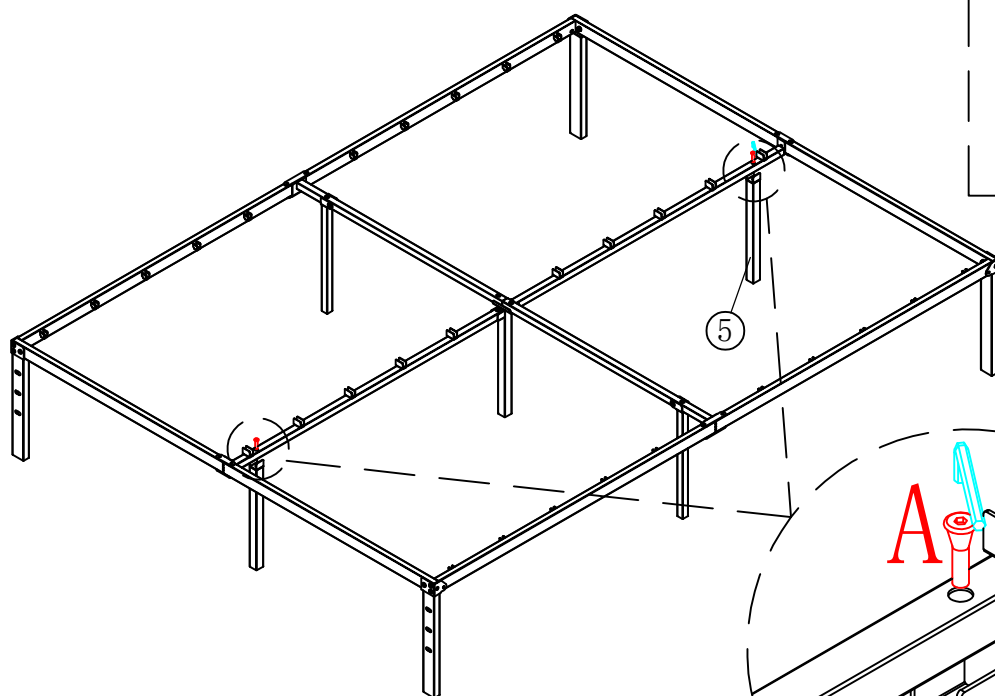


⑤×2PCS




A×2PCS  
M8×32

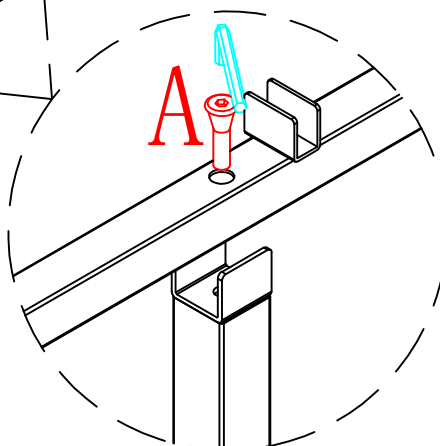


Step7:Insert slats

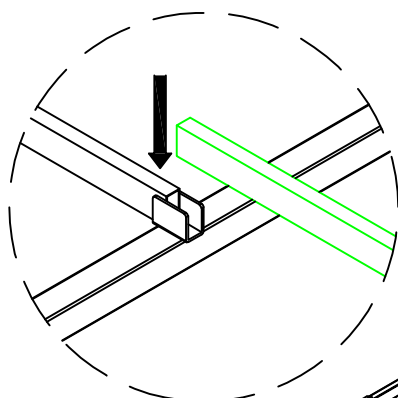

⑥

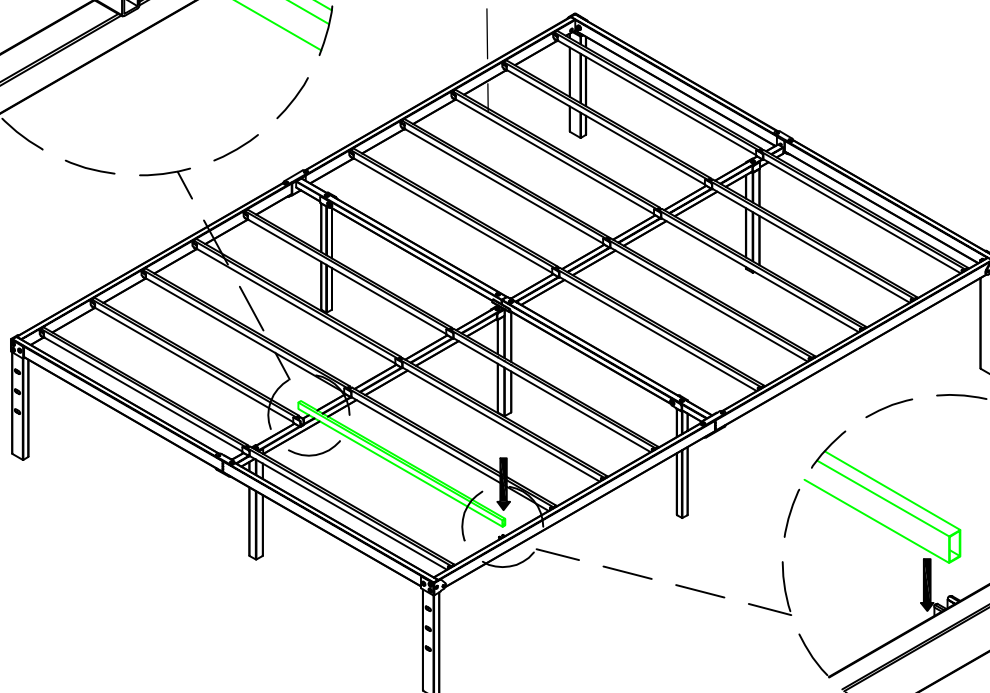

⑥×20PCS

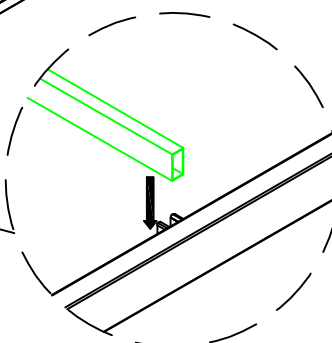

In the last step, please make sure all the screws are tightened.