
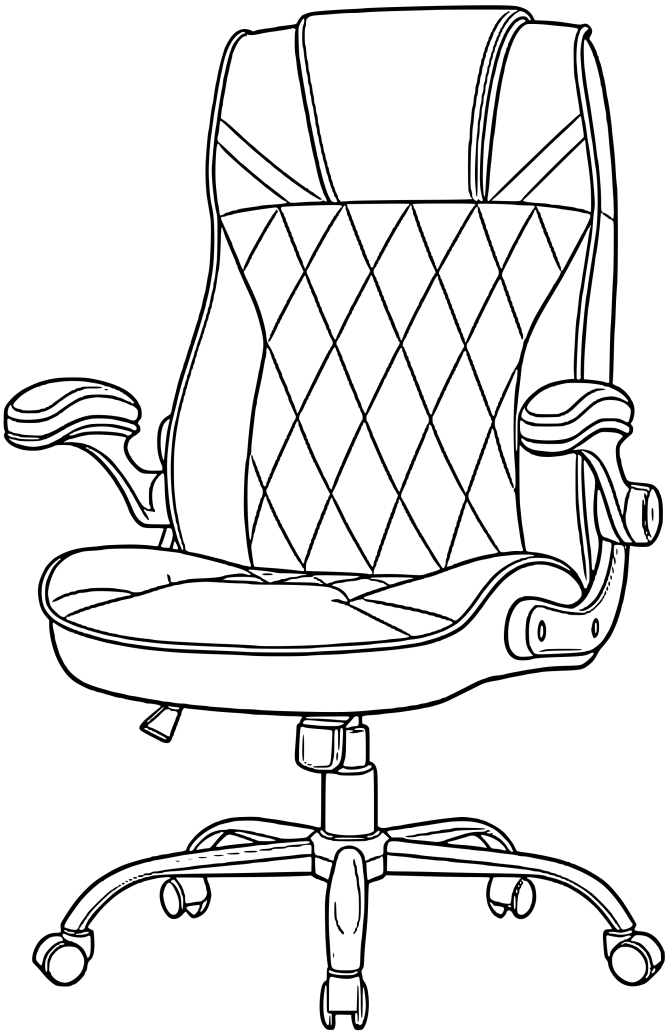


# O281 Executive Office Chair

# Parts & Hardware

**Ax5**



Casters (Wheels)

**Bx5**



Base Legs

**Cx1**



Base Center Hub

**Dx1**




Gas Lift Cover

**Ex1**




Gas Lift Cylinder

**Fx1**

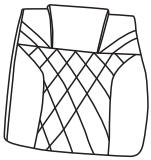


Backrest

**Gx1**



Seat Cushion

**Hx1**

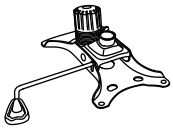

Mechanism

**Ix1**



Left Armrest

**Jx1**




Right Armrest

**Kx8**



Screw Hole Covers

**Lx8**



M8x25mm

**Mx4**



M6x20mm

**Nx5**




M6x12mm

**Ox1**



Allen Wrench


# Assembly Instructions

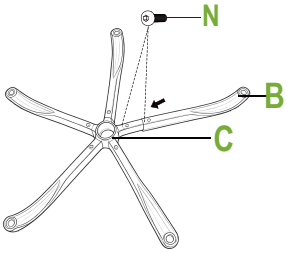


Step 1: Assemble the Star Base

• Insert the 5 Base Legs (B) into the slots of the Base Center Hub (C).

• Secure them tightly from underneath using 5 Bolts (N).

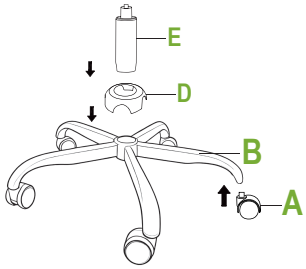



Step 2: Install Casters & Gas Lift

• Push the 5 Casters (A) firmly into the holes at the outer end of each Base Leg (B) until they click into place.

• Turn the assembled base upright on the floor.

• Slide the Gas Lift Cover (D) onto the Gas Lift Cylinder (E), then drop the cylinder into the center hole of the base.

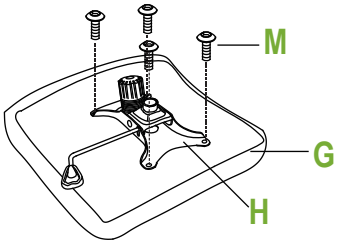



Step 3: Attach the Mechanism

• Place the Seat Cushion (G) upside down on a clean, scratch-free surface.

• Locate the "FRONT" arrow/marking stamped on the Mechanism (H) and ensure it points toward the front front edge of the Seat Cushion (G) (away from the backrest side).

• Align the mechanism with the pre-drilled holes and secure it using 4 Bolts (M), tightening them firmly in a cross-pattern.

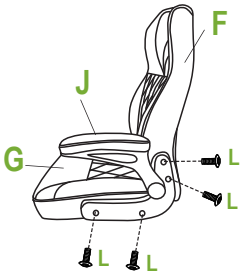


Step 4: Install Left Armrest & Backrest


• Position the Backrest (F) perpendicular to the Seat Cushion (G).

• Align the Left Armrest (I) with the side attachment holes of both the backrest and the seat.

• Loosely catch 4 Bolts (L) through the armrest into the holes.

• Do not fully tighten any bolts until Step 6.


# Assembly Instructions

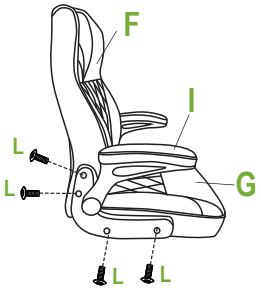


Step 5: Install Right Armrest

• Repeat the exact process on the opposite side: align the Right Armrest (J) with the right side of the Backrest (F) and Seat Cushion (G).

• Loosely catch the remaining 4 Bolts (L).

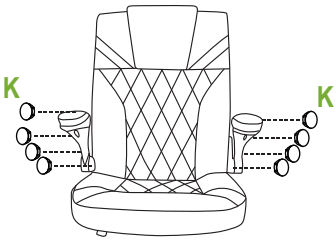



Step 6: Final Alignment & Screw Covers

• Press down on the backrest and seat to ensure the entire frame is squared up and well-aligned.

• Using the Allen Wrench (O), completely tighten all 8 Bolts (L) on both armrests.

• Press the 8 Plastic Caps (K) into the armrest screw holes to conceal the bolt heads for a clean finish.

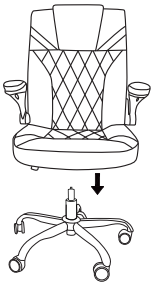


Step 7: Mount the Seat Body onto the Base

• Lift the assembled upper chair body and align the center hole of the Mechanism (H) with the top of the Gas Lift Cylinder (E).

• Lower the chair body straight down onto the gas lift.

• Sit firmly on the seat cushion to press-fit the parts together securely.

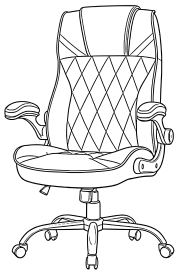

Step 8: Assembly Complete

• Your Executive office chair with space-saving flip-up armrests is now fully assembled and ready for use.

# Warranty & Safety Info.



A warranty claim is available for our chairs.
Should you encounter any inquiries regarding product-related matters or logistical concerns, kindly reach out to our customer service team. They shall promptly respond to provide you with timely assistance.

## Warranty

1. All chairs that have limited warranty. This guarantees that you are making the right choice and secures the purchase value.
2. If you are uncertain whether your chair is eligible for limited warranty support, please contact our customer service team for confirmation.
3. The warranty does not cover the situations related to the theft, disappear-ance or loss of the chair.
4. Performing any work on the chair, repairs especially, will void the warranty.

## Safety Info.

