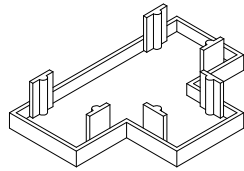
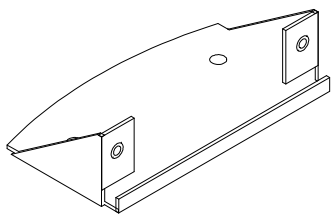
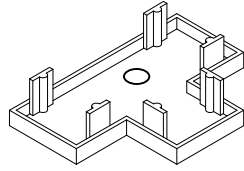
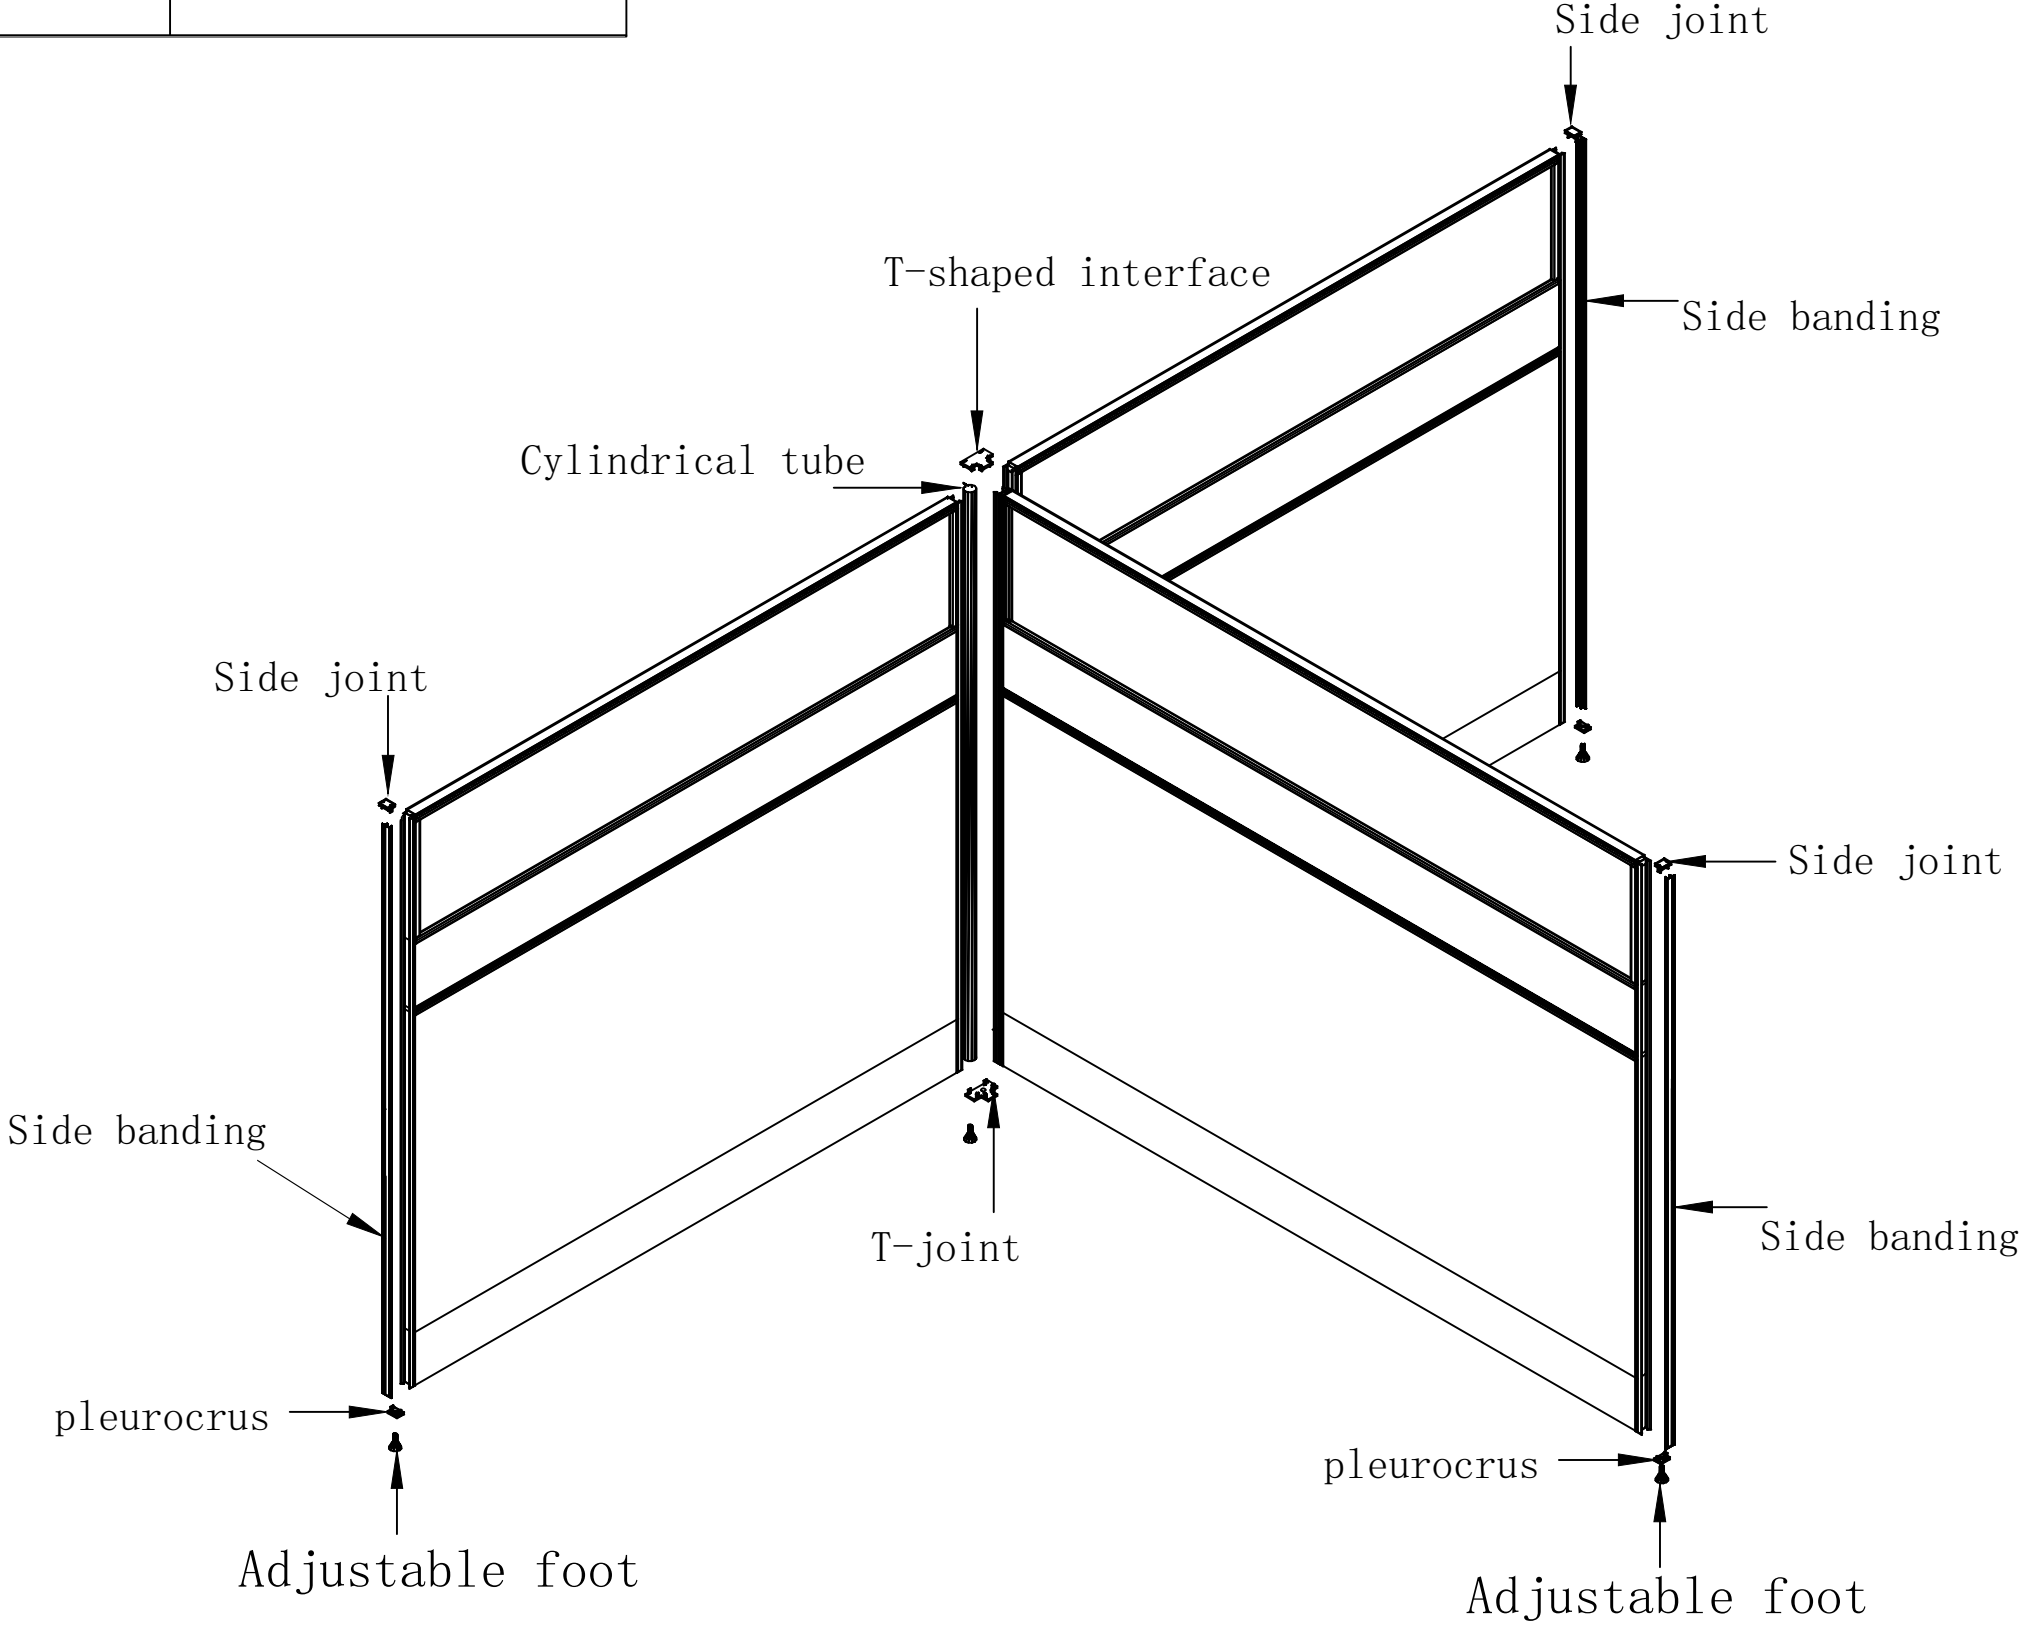
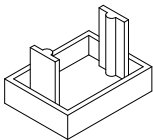
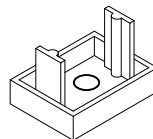
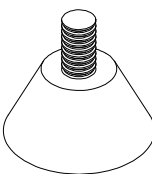


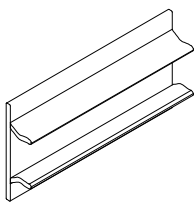
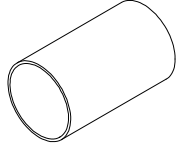


# Installation guide


T-shaped interface		corbel	
T-joint			
Side joint			
pleurocrus			
Adjustable foot			
Angle code			
Self-tapping yarn			
Side banding			
Cylindrical tube			

Step 1


# Step 2

1: Corner code fixing table feet on the screen plate.


2:



The bracket arm is adjusted and fixed on the screen plate with self-tapping.

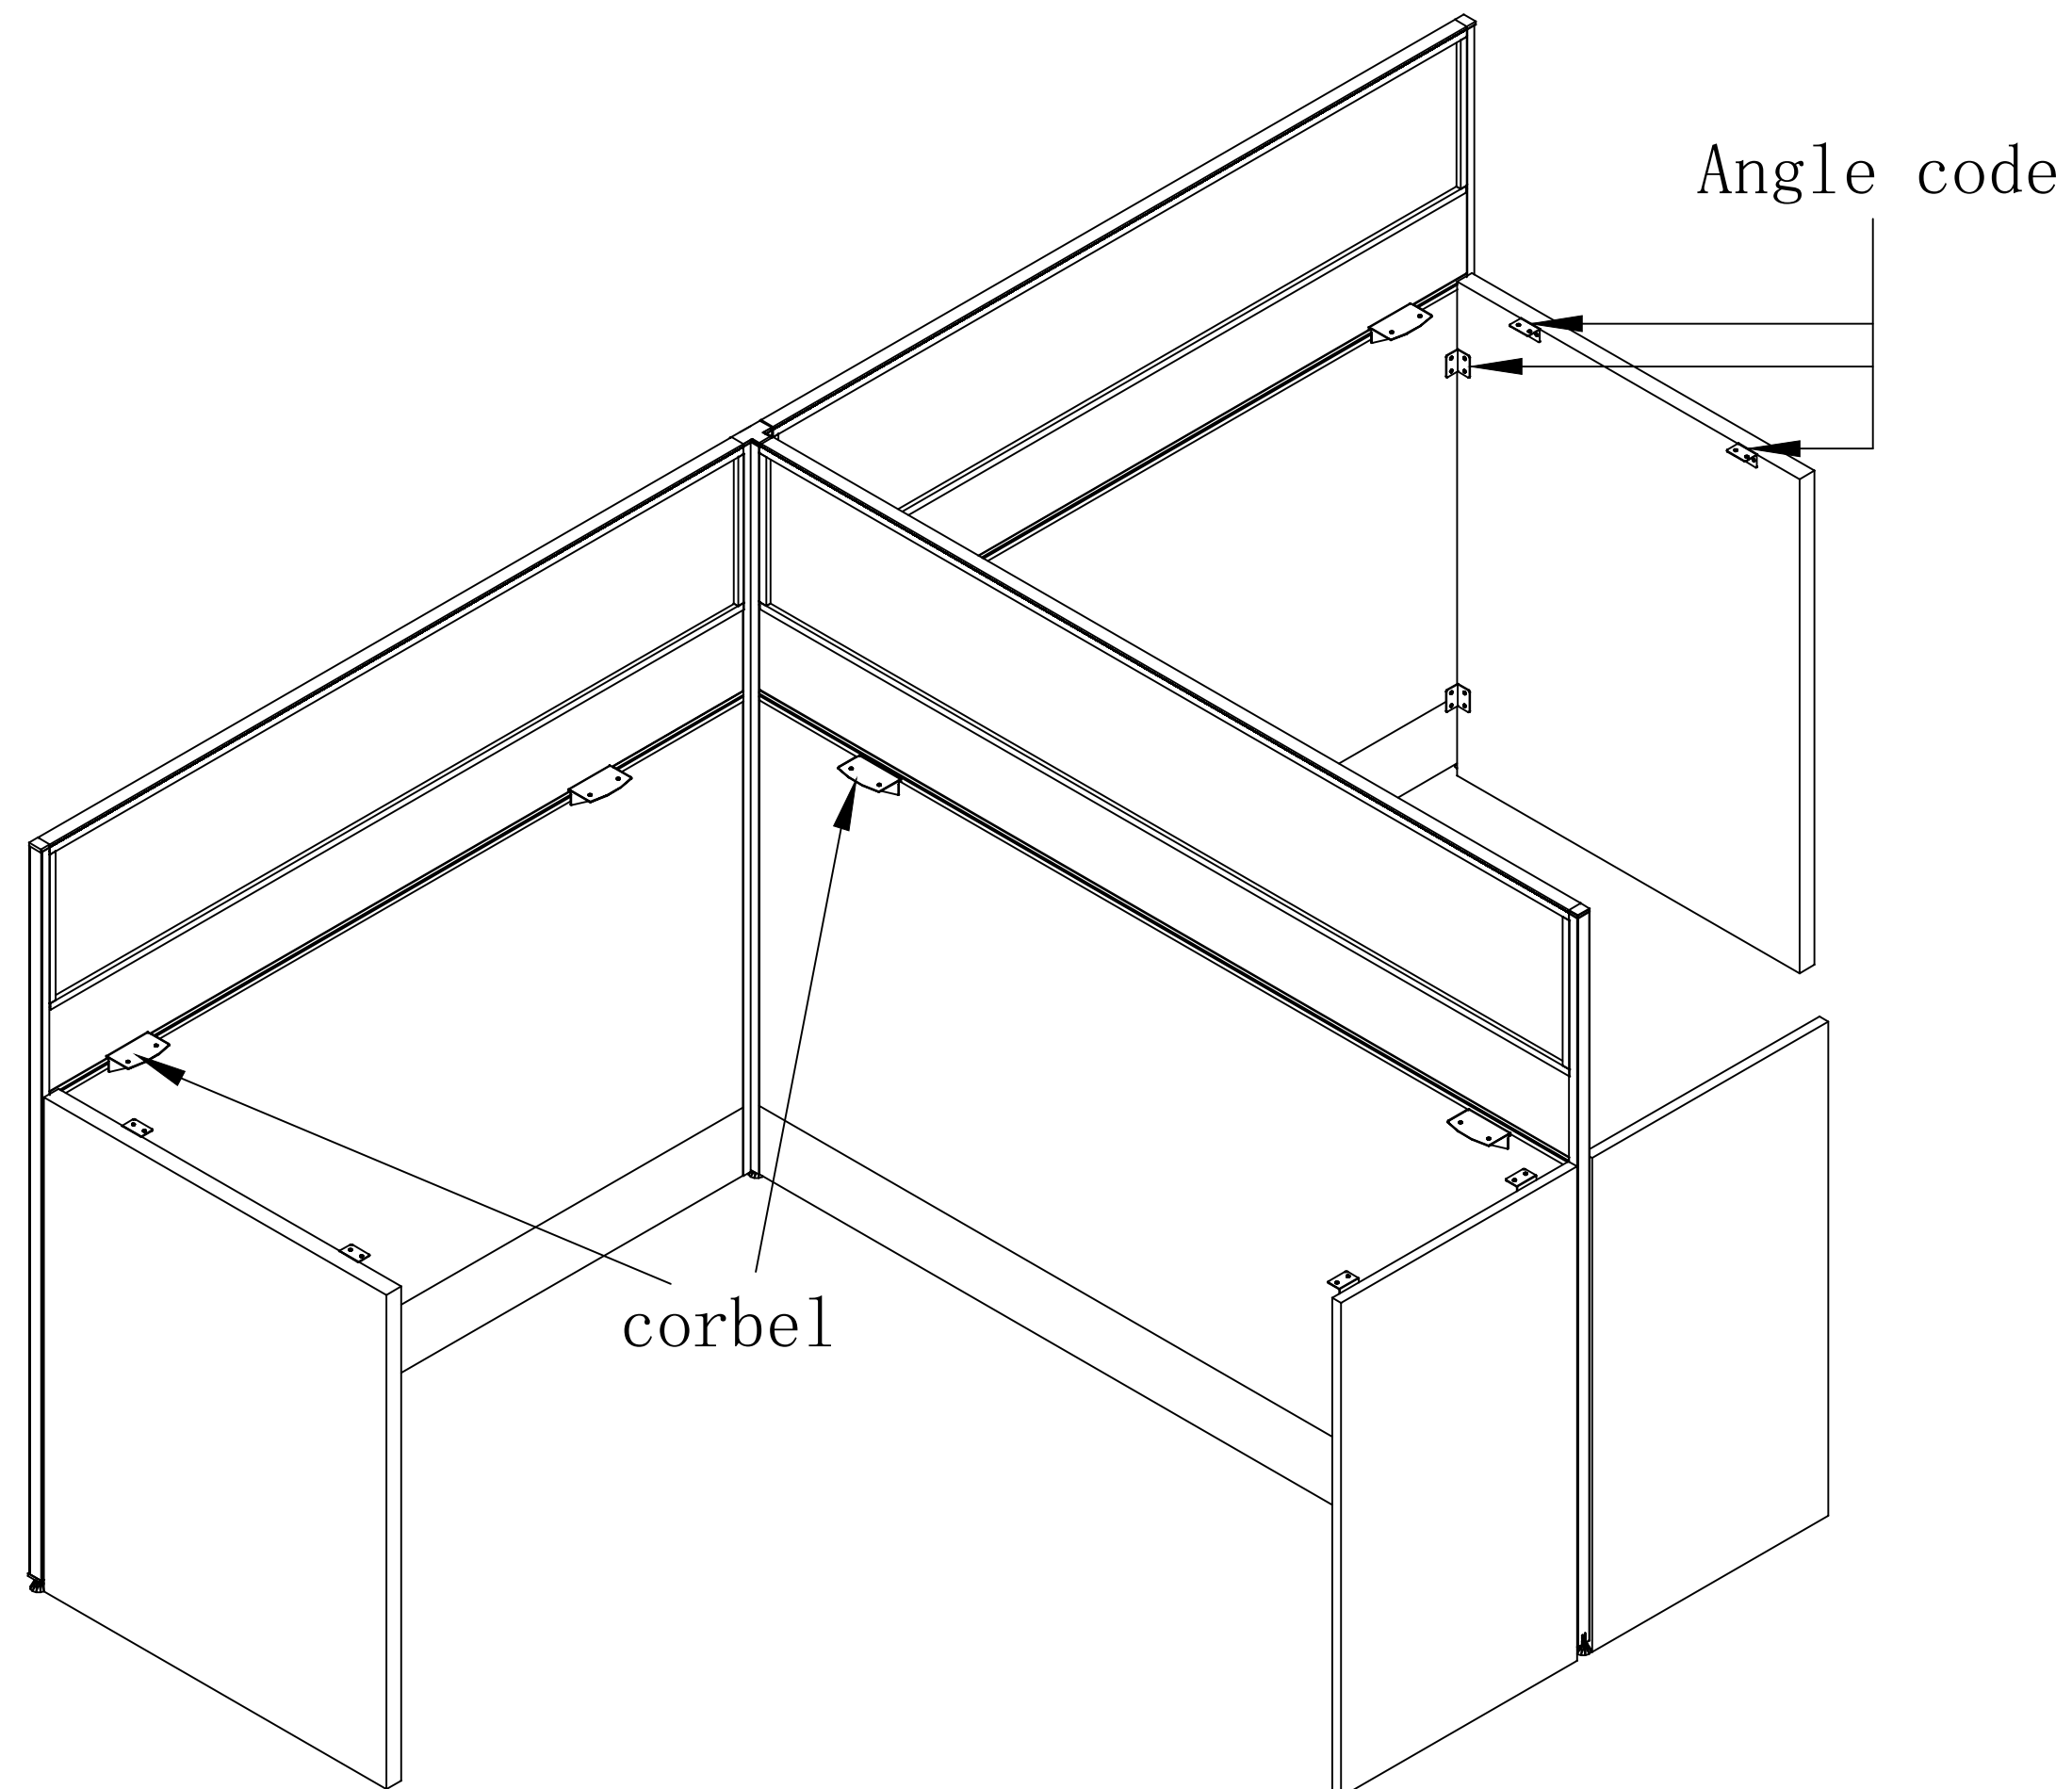

# Step 3

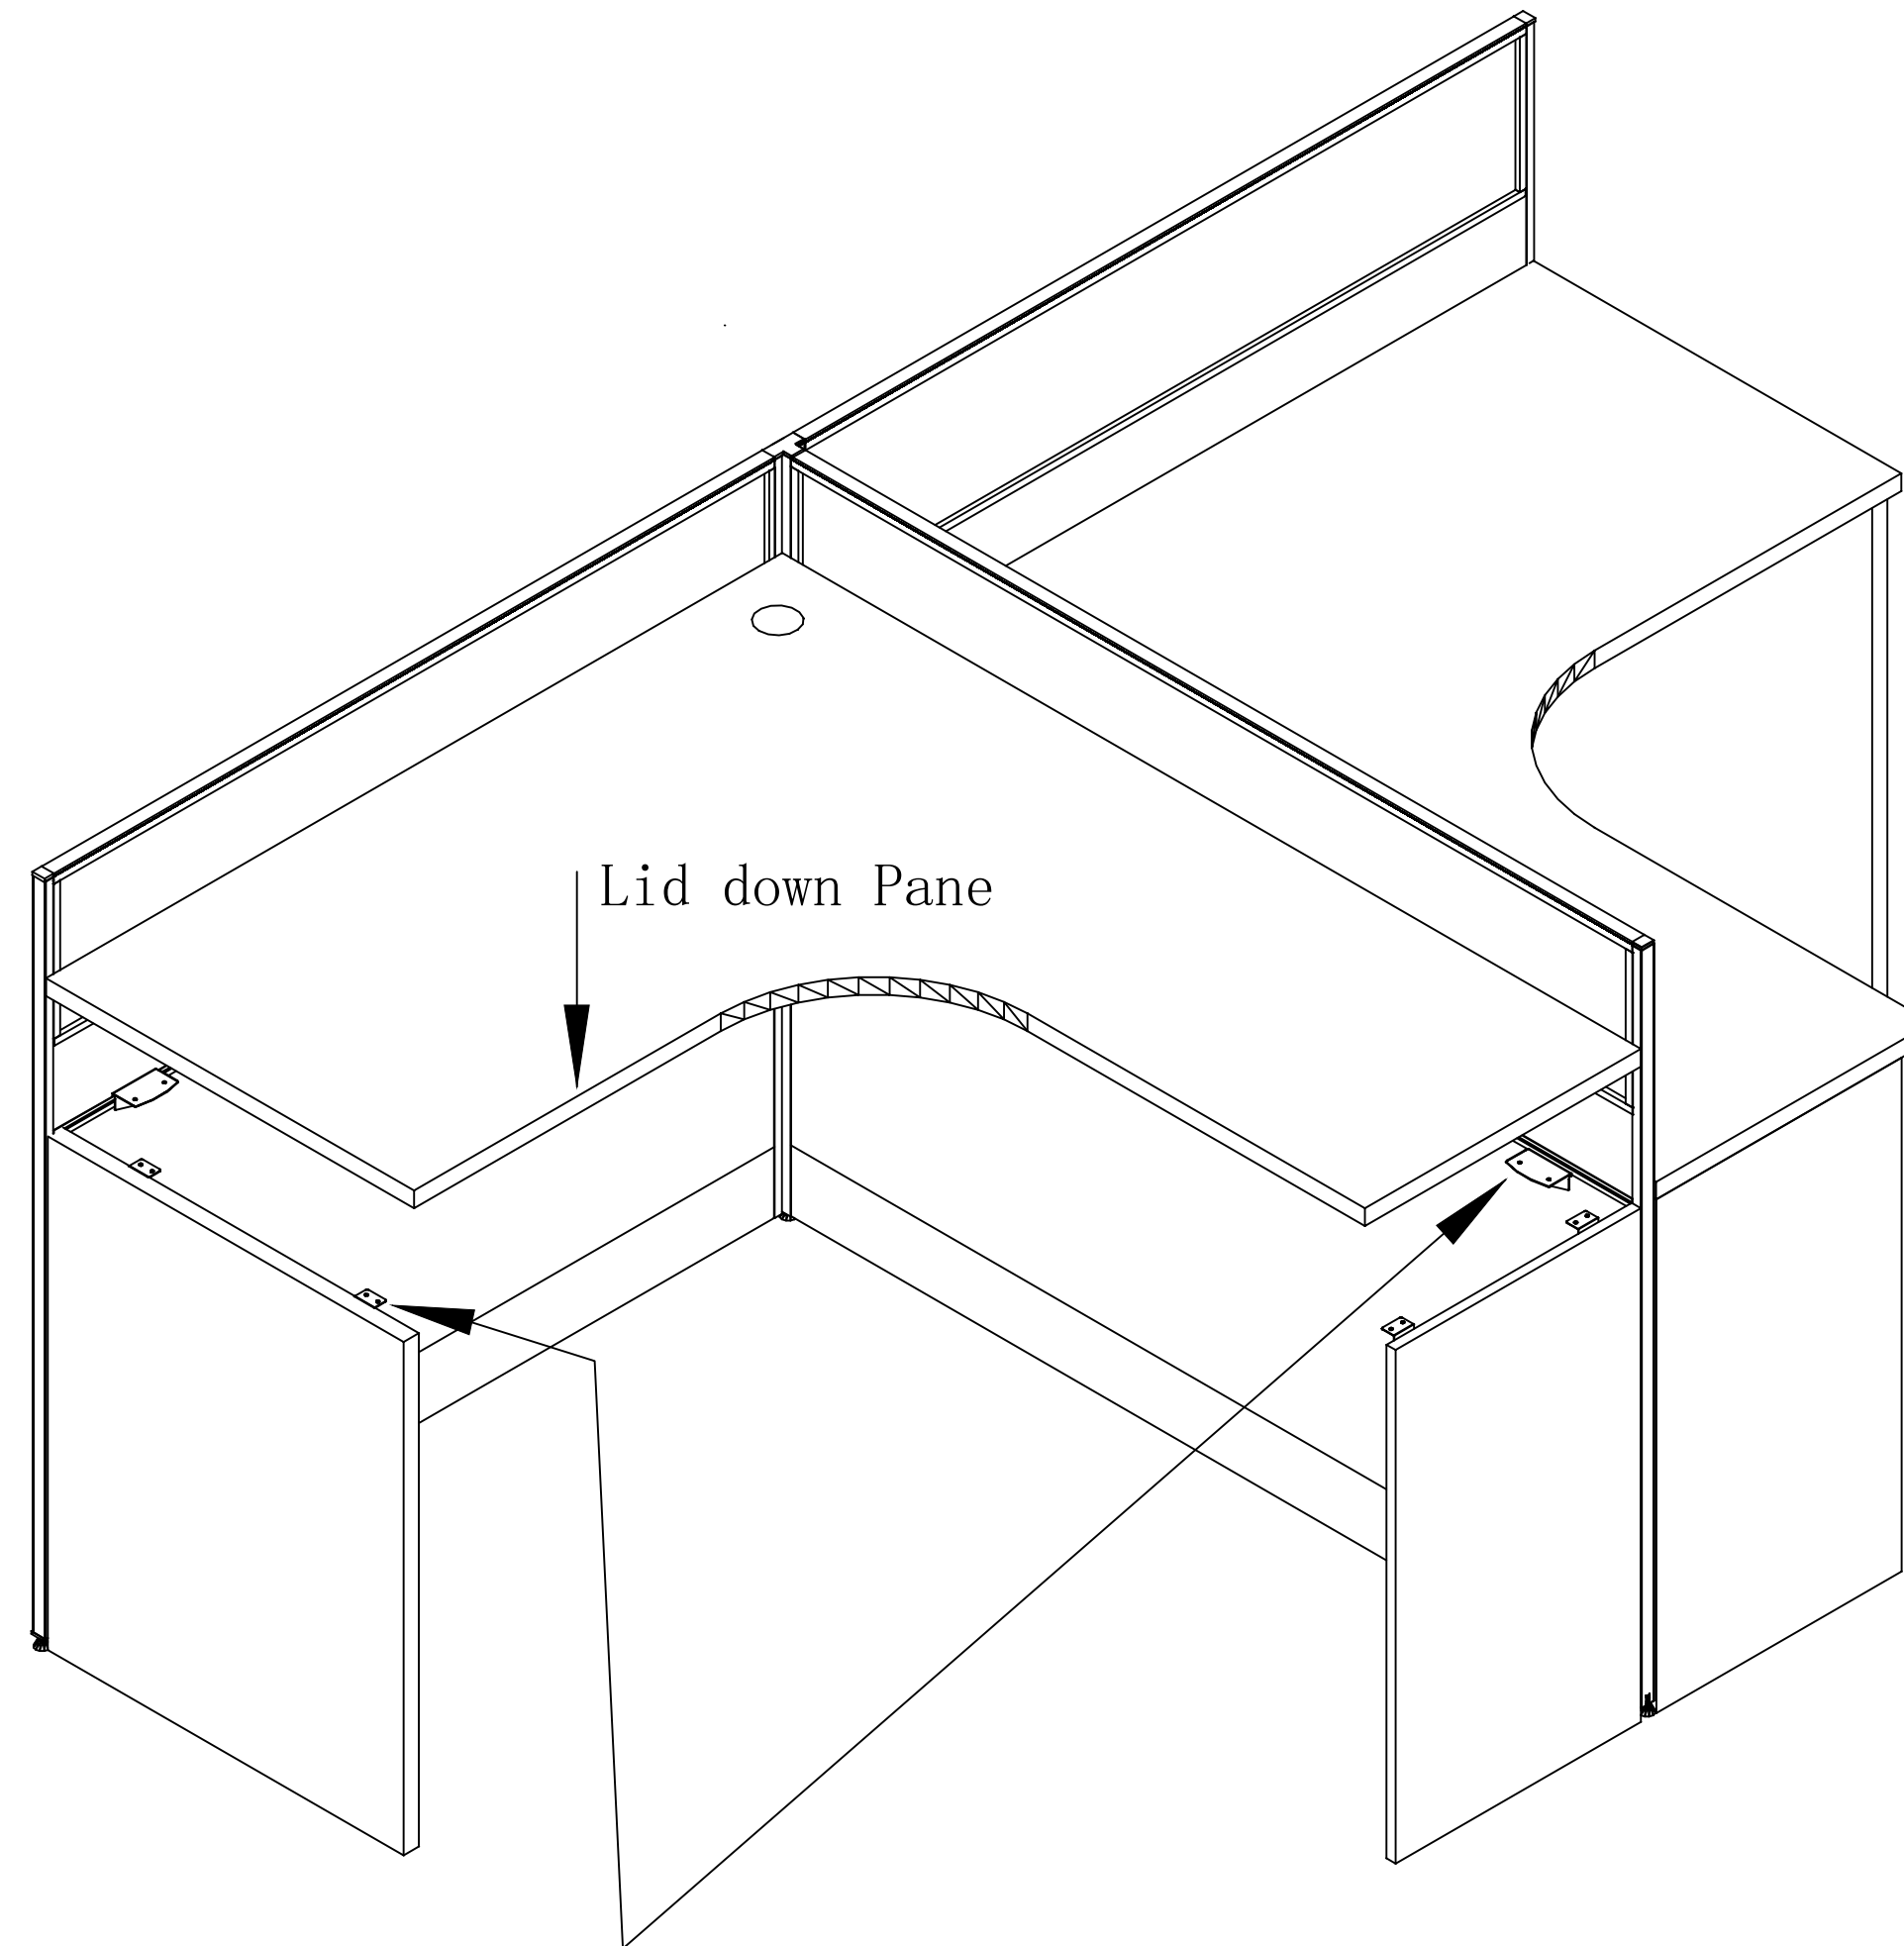

Then cover the table panel and self-tapping screws to lock the countertop.