



Installation Instruction

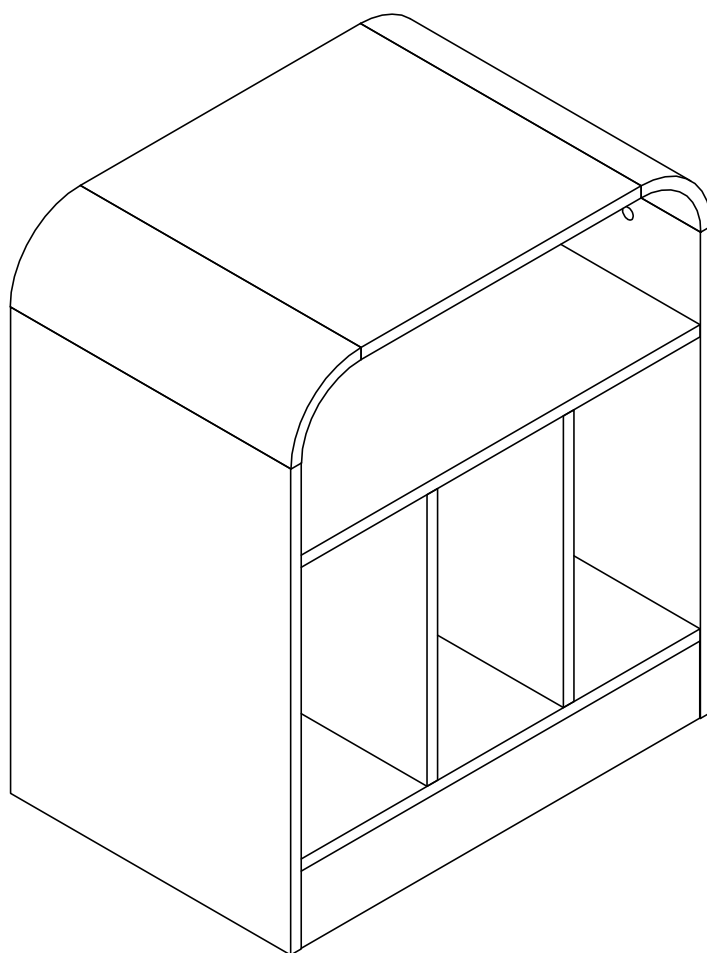


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

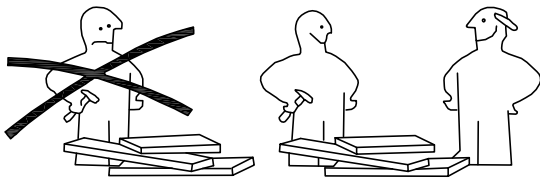


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	28
B	Cam Lock15X9MM	28
C	Wooden Dowel M8X30MM	36
D	Screw M4X40MM	6
E	Screw M3.5X14MM	2
F	Hole position sticker	28
G	The back button	8
H	Nylon Strap	2
I	Mats	4
J	Anchor	2
K	Screw M3.5X14MM	8

The Hardwares


Ⓐ




Ⓑ



Ⓒ



Ⓓ




Ⓔ




Ⓕ



Ⓖ



Ⓗ



Ⓘ



Ⓙ



Ⓚ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)

Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Curved Connecting Strip	2
3	Left Side Panel	1
4	Right Side Panel	1
5	Backboard	1
6	Backboard	1
7	Adjustable Shelf	1
8	Middle Vertical Partition	2
9	Bottom Panel	1
10	Bottom Rail	2


The Accessoriess

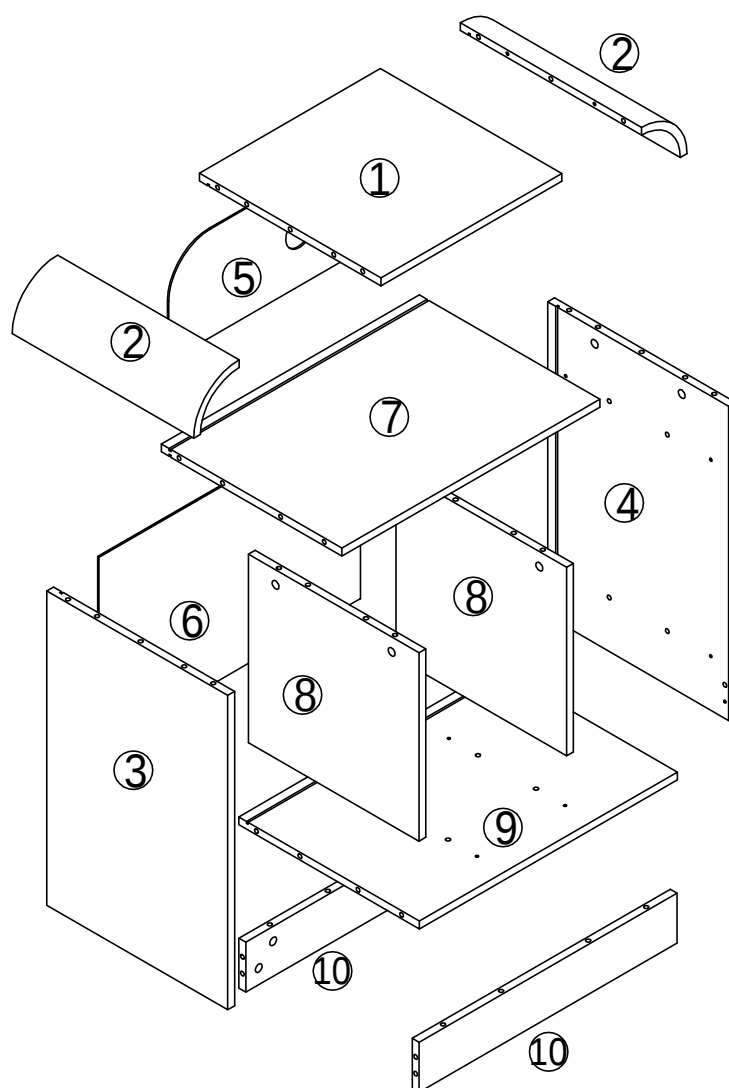

Step 1

A



×8




C

×8



Step 2

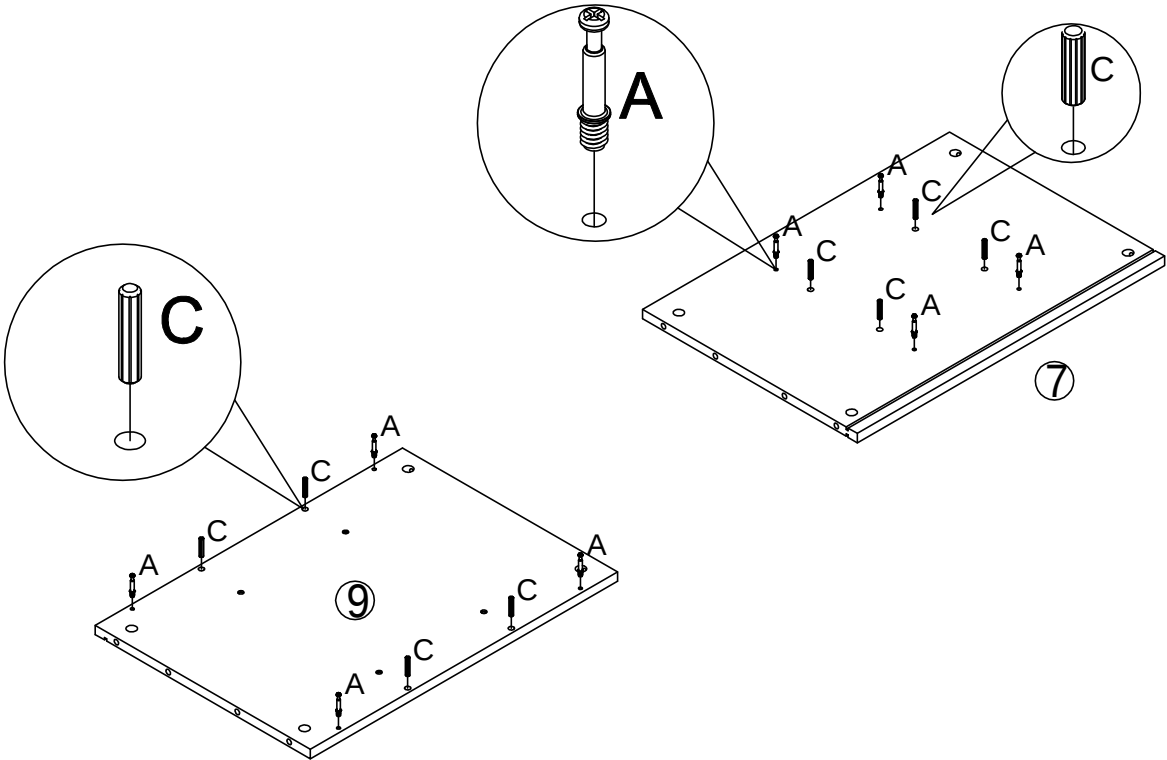B


×4



F


×4




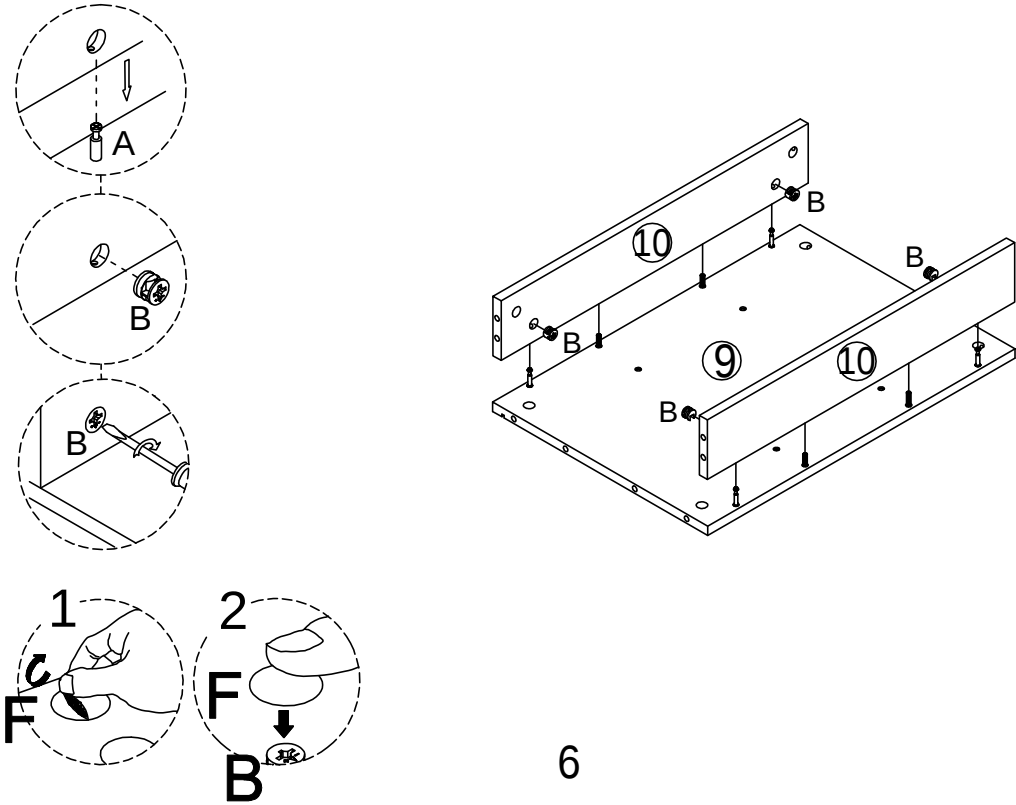




Step 3

B	×4	F	×4
			

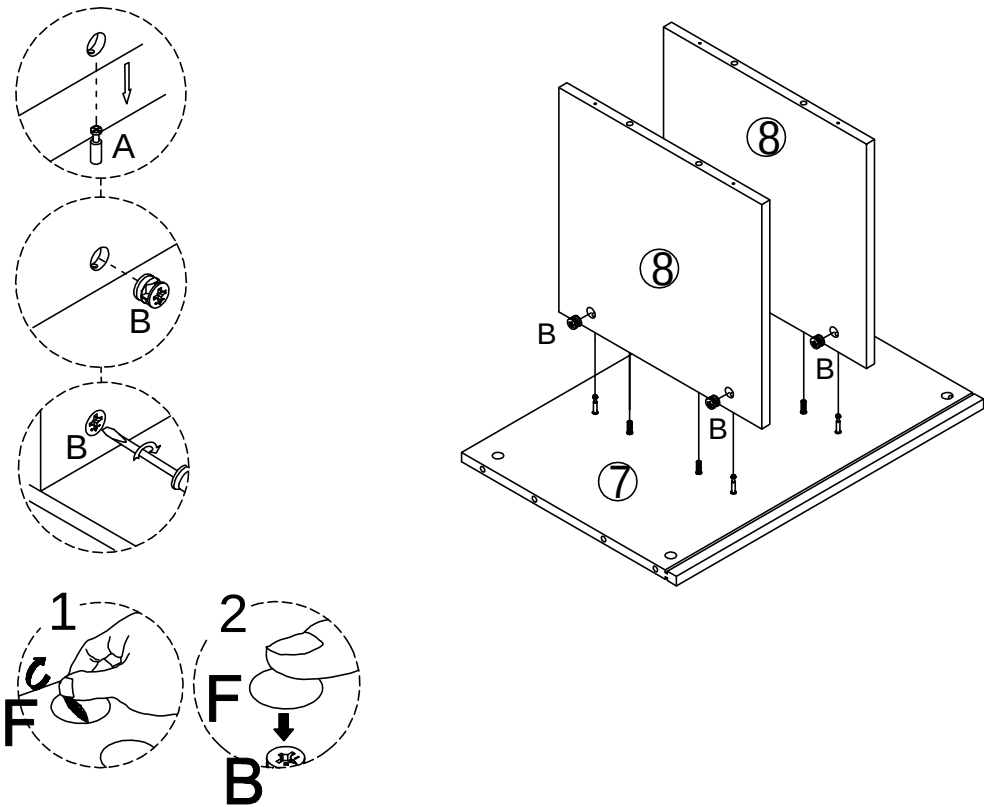


Step 4


D	×4	C	×4
			

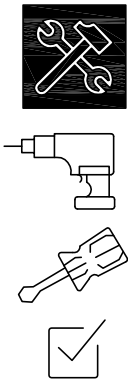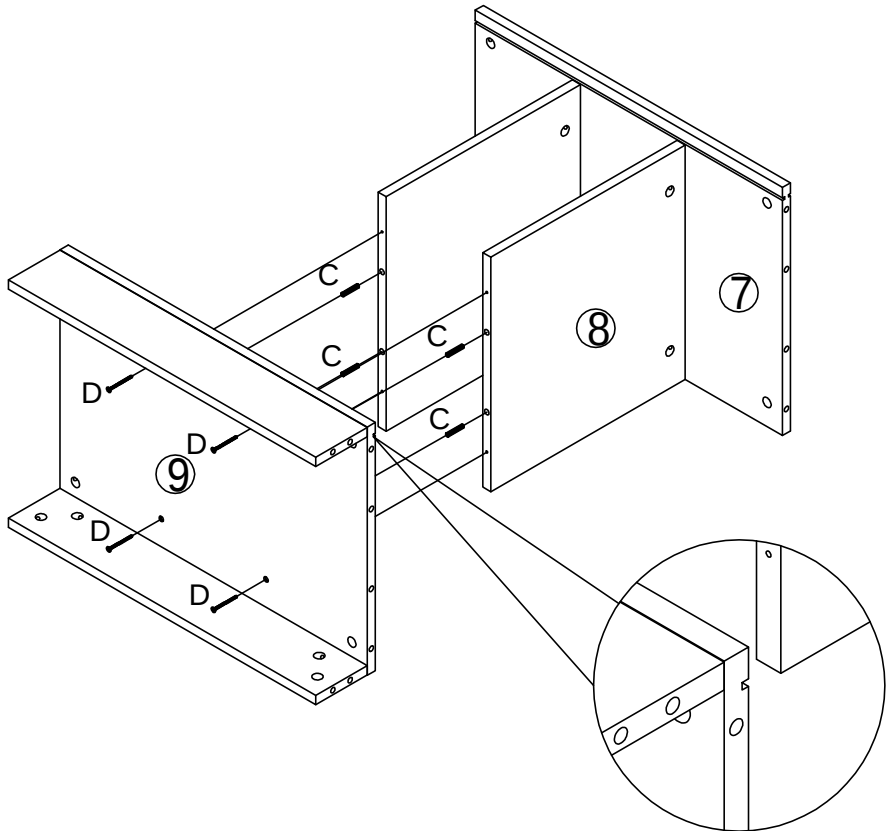



Step 5

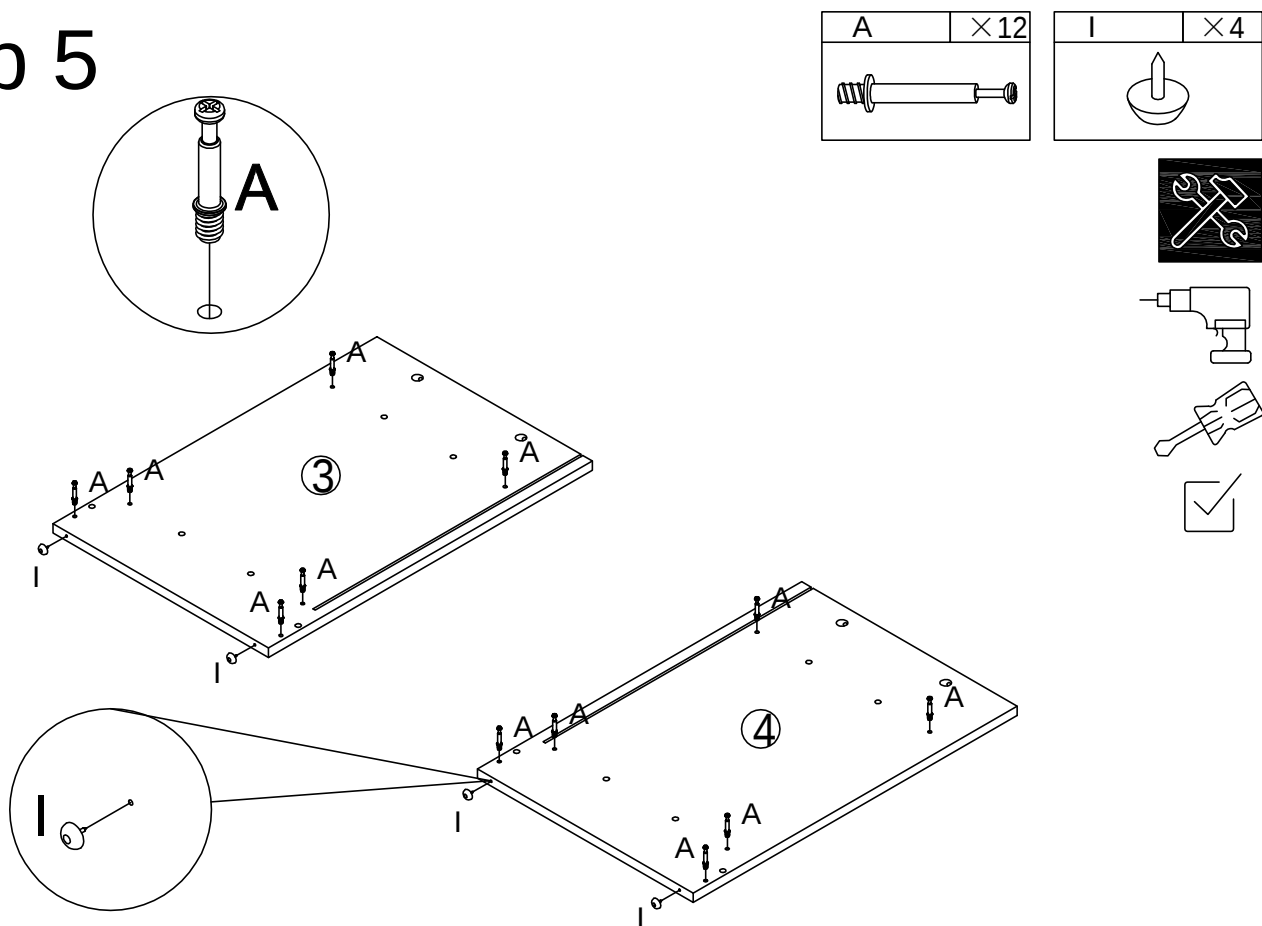





Step 6

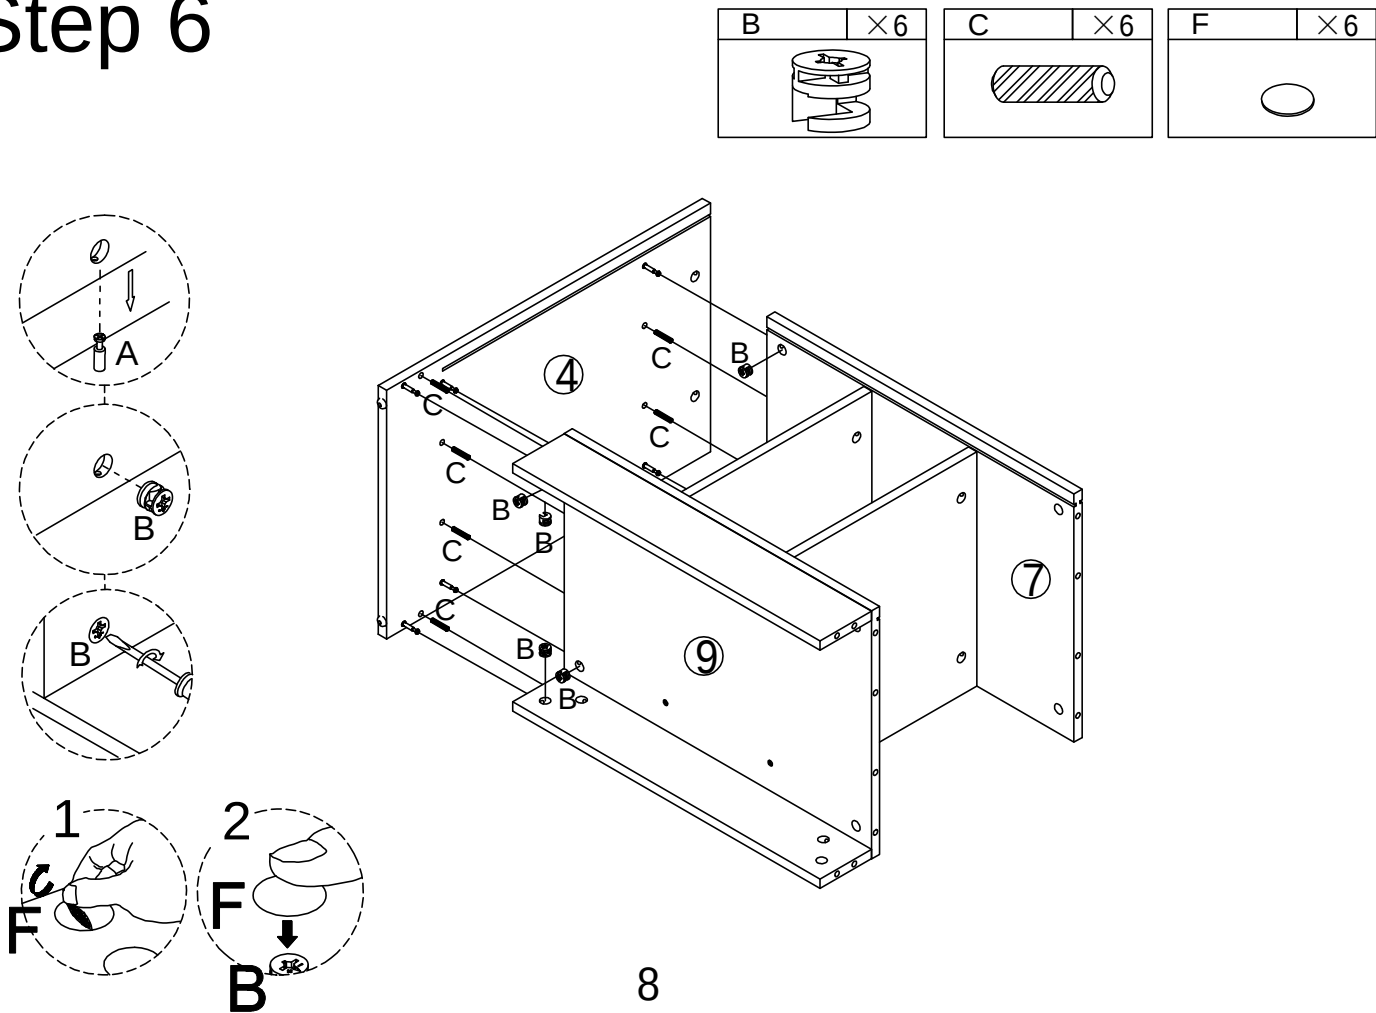



Step 7

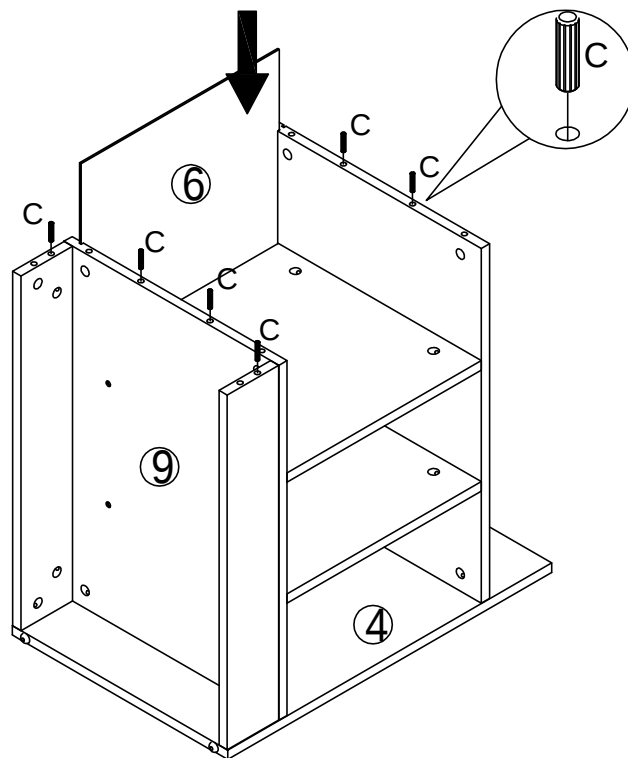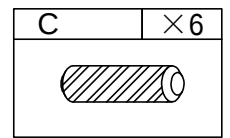









Step 8

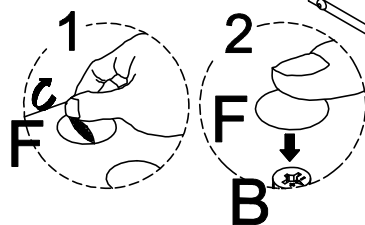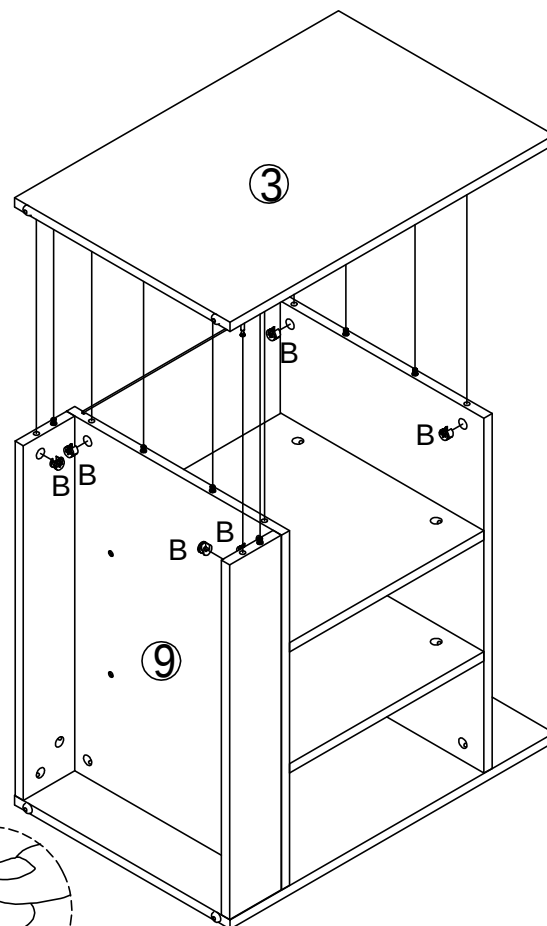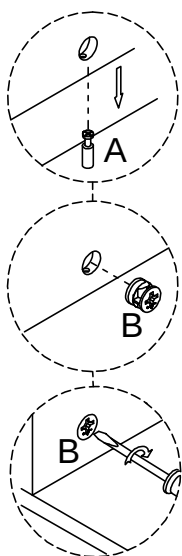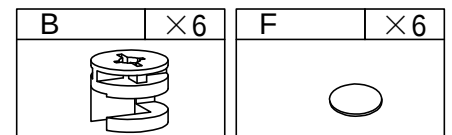


Step 9

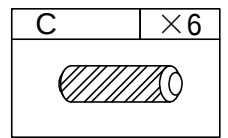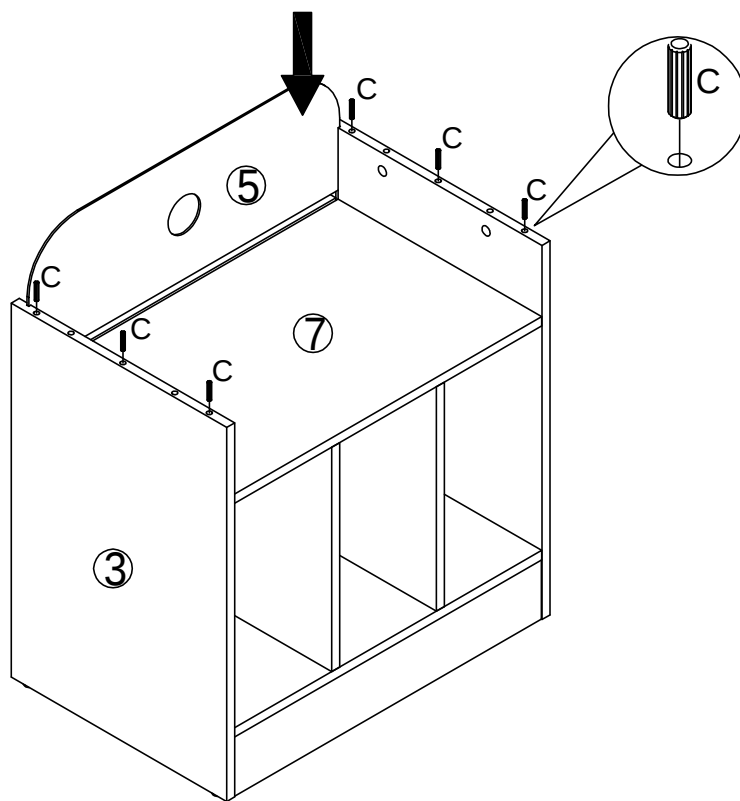

Step 10

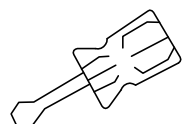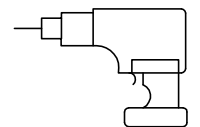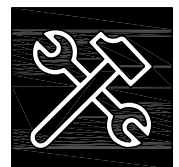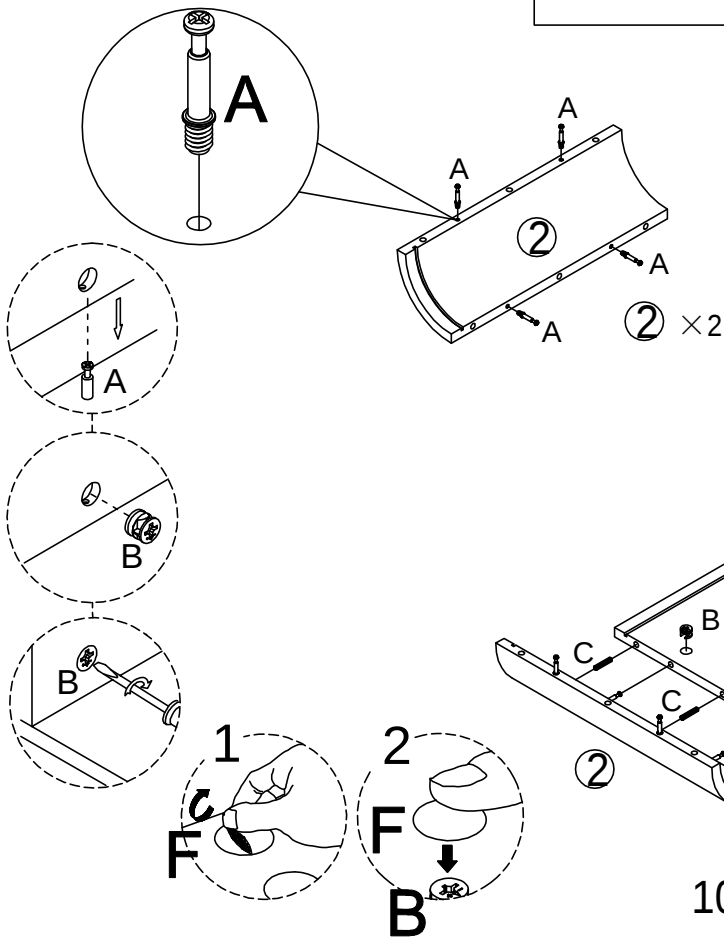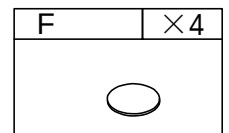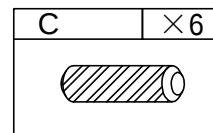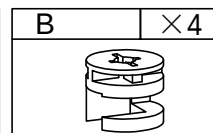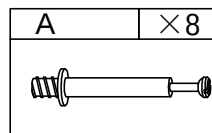


Step 11

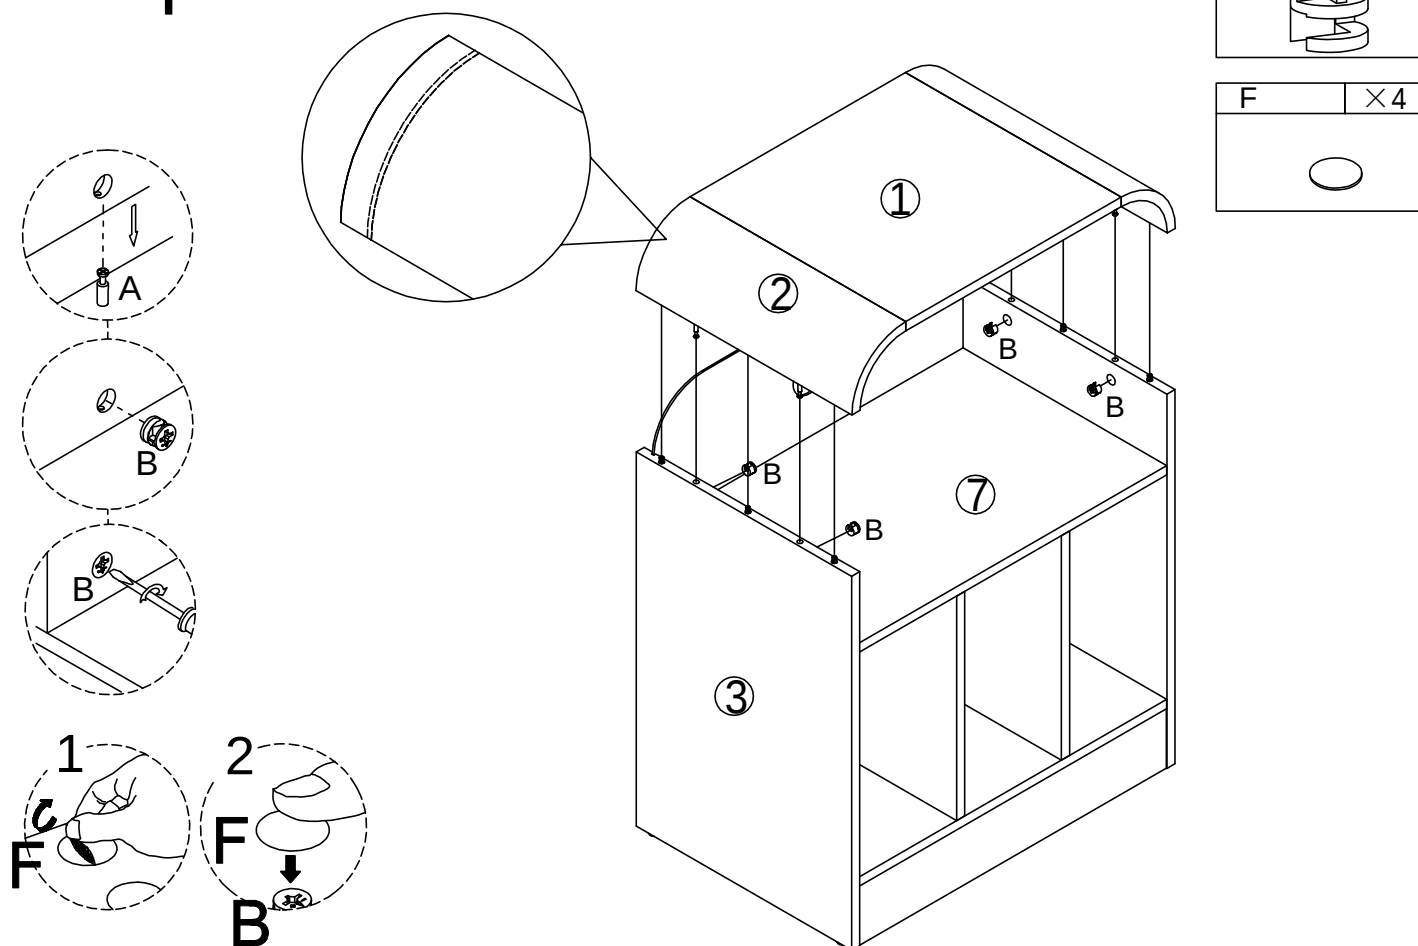





Step 12

To ensure the stability of the product, please make sure to install this accessory.

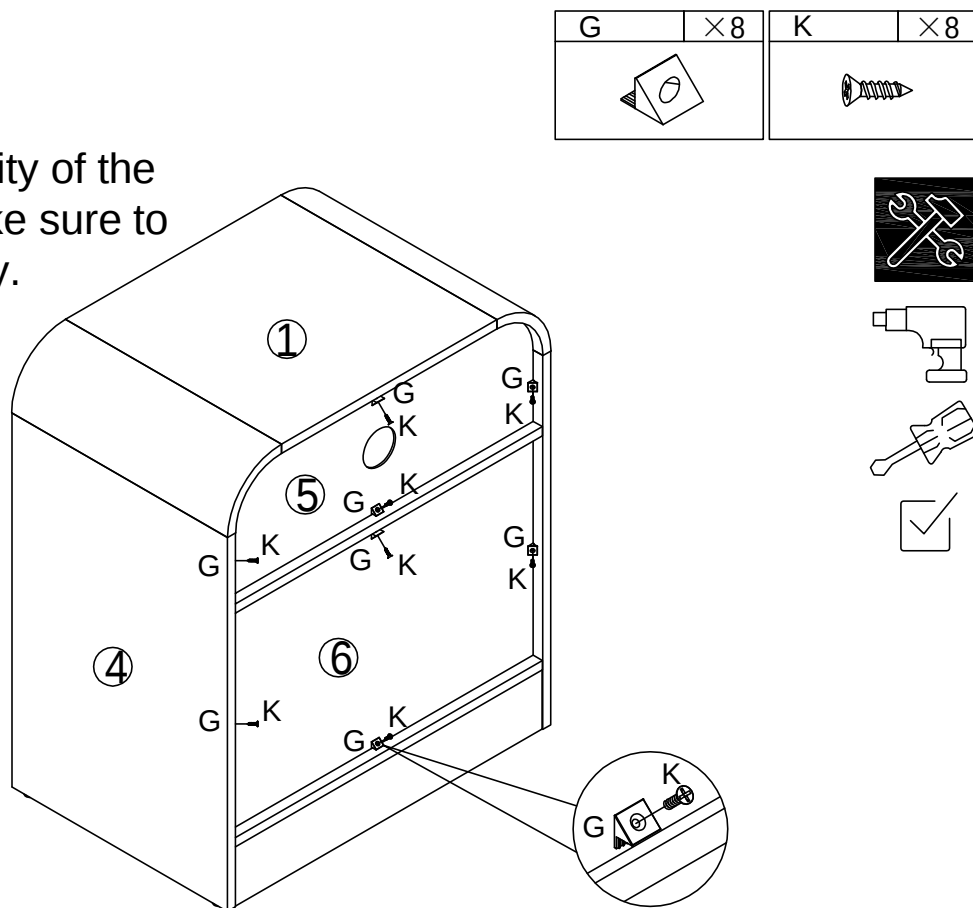

Step 13

E	×2	H	×2
			

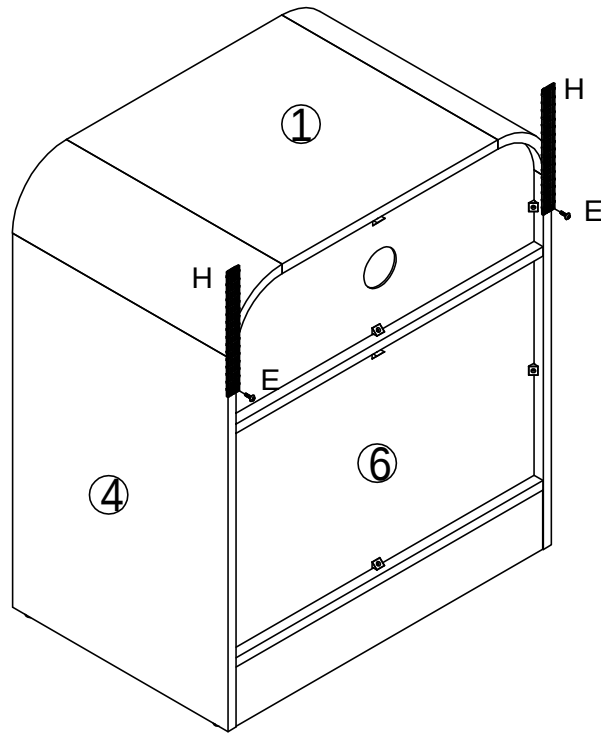

Step 14

D	×2	J	×2
